


CDD / MIMO

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5180 MHz

Vertical

130 dBuV/m

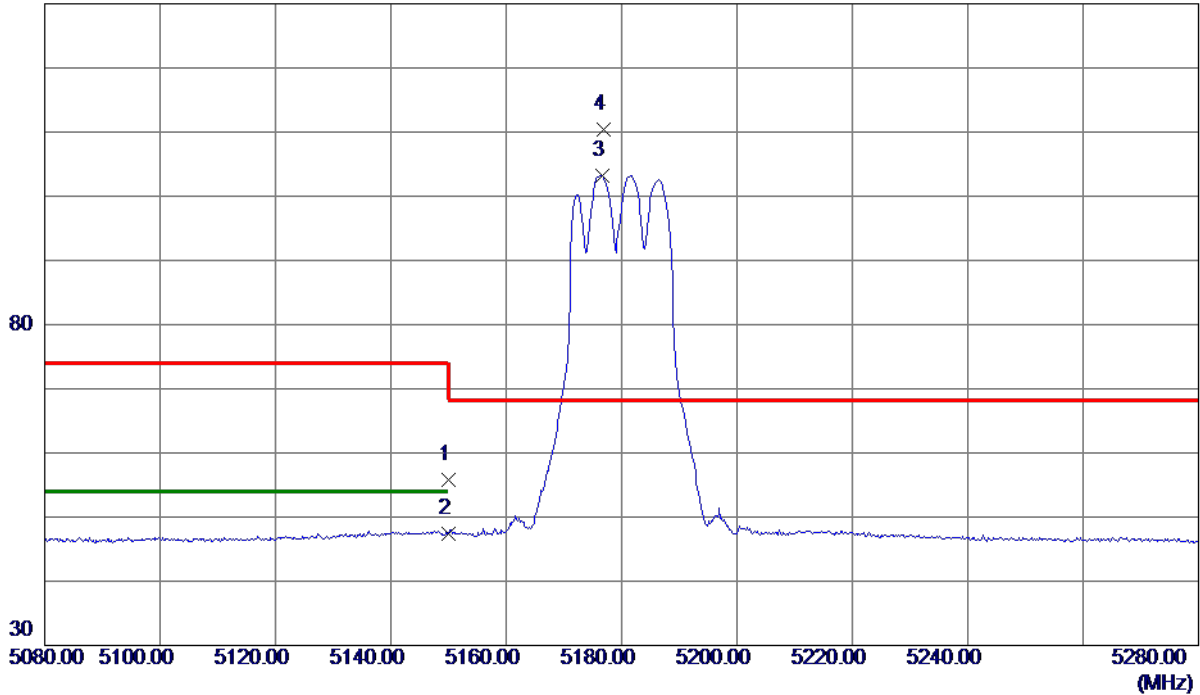

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	39.58	16.16	55.74	74.00	-18.26	Peak	
2	5150.0000	31.29	16.16	47.45	54.00	-6.55	AVG	
3	5176.6000	87.00	16.22	103.22	999.00	-895.78	AVG	No Limit
4 *	5176.8000	94.13	16.22	110.35	68.30	42.05	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5180 MHz

Horizontal

130 dBuV/m

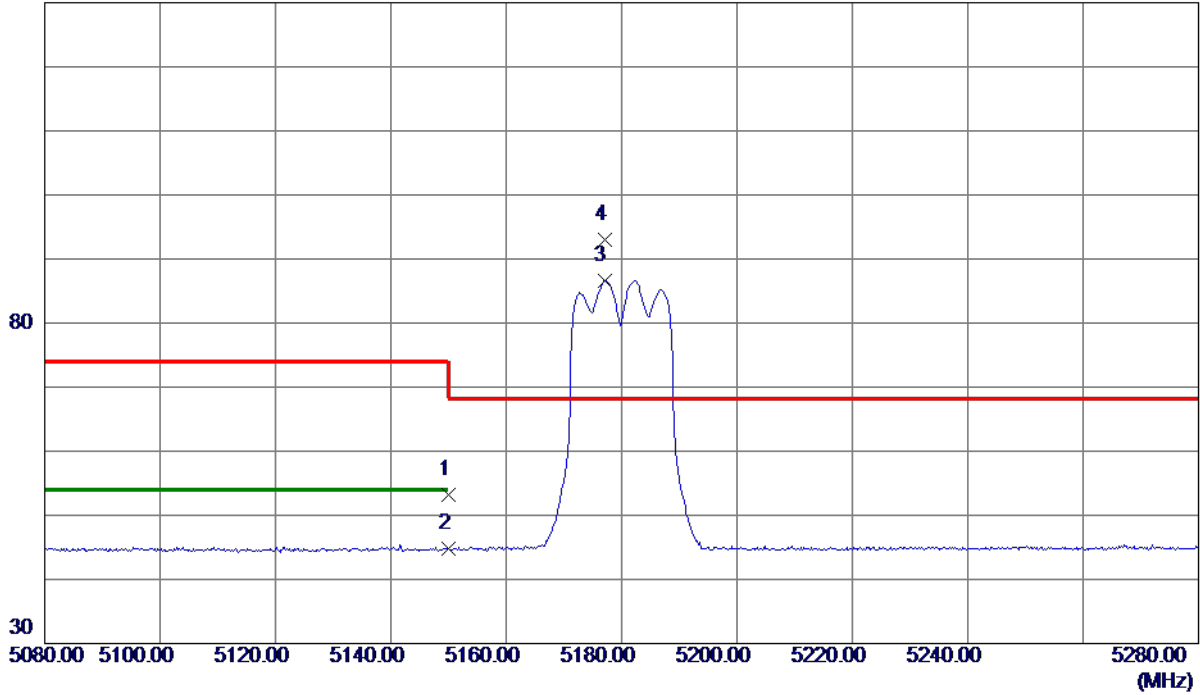

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	37.09	16.16	53.25	74.00	-20.75	Peak	
2	5150.0000	28.58	16.16	44.74	54.00	-9.26	AVG	
3	5177.0000	70.34	16.22	86.56	999.00	-912.44	AVG	No Limit
4 *	5177.2000	76.75	16.22	92.97	68.30	24.67	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5200 MHz

Vertical

130 dBuV/m

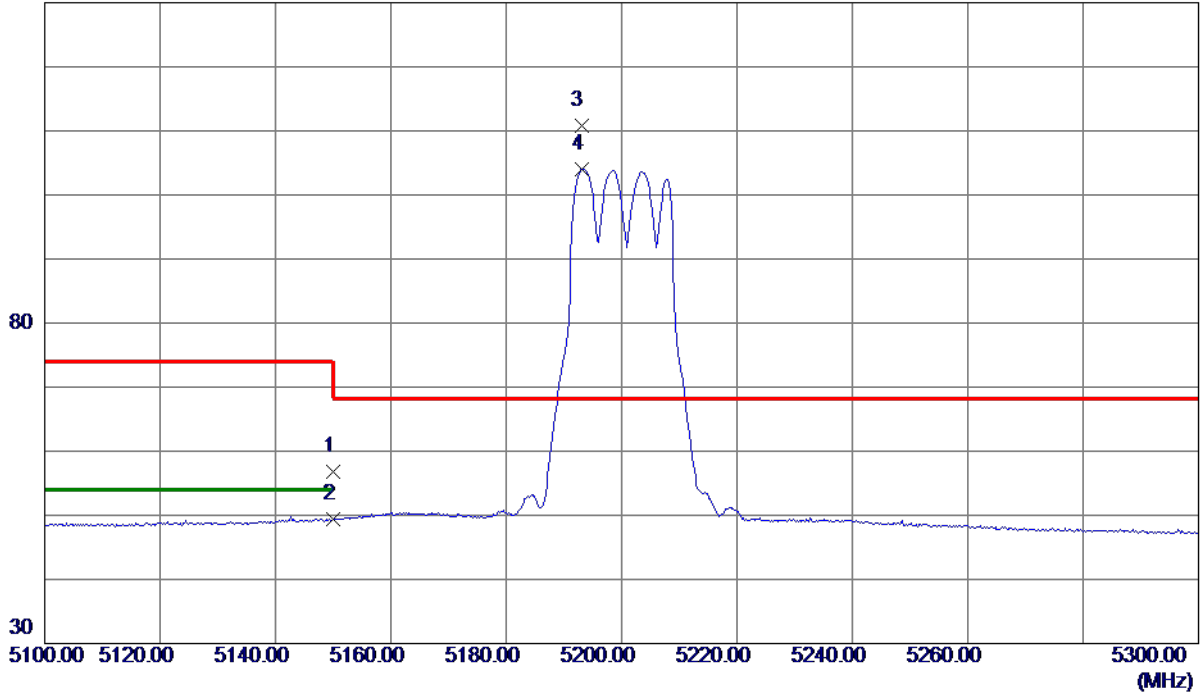

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	40.70	16.16	56.86	74.00	-17.14	Peak	
2	5150.0000	33.15	16.16	49.31	54.00	-4.69	AVG	
3 *	5193.0000	94.53	16.26	110.79	68.30	42.49	Peak	No Limit
4	5193.2000	87.83	16.26	104.09	999.00	-894.91	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5200 MHz

Horizontal

130 dBuV/m

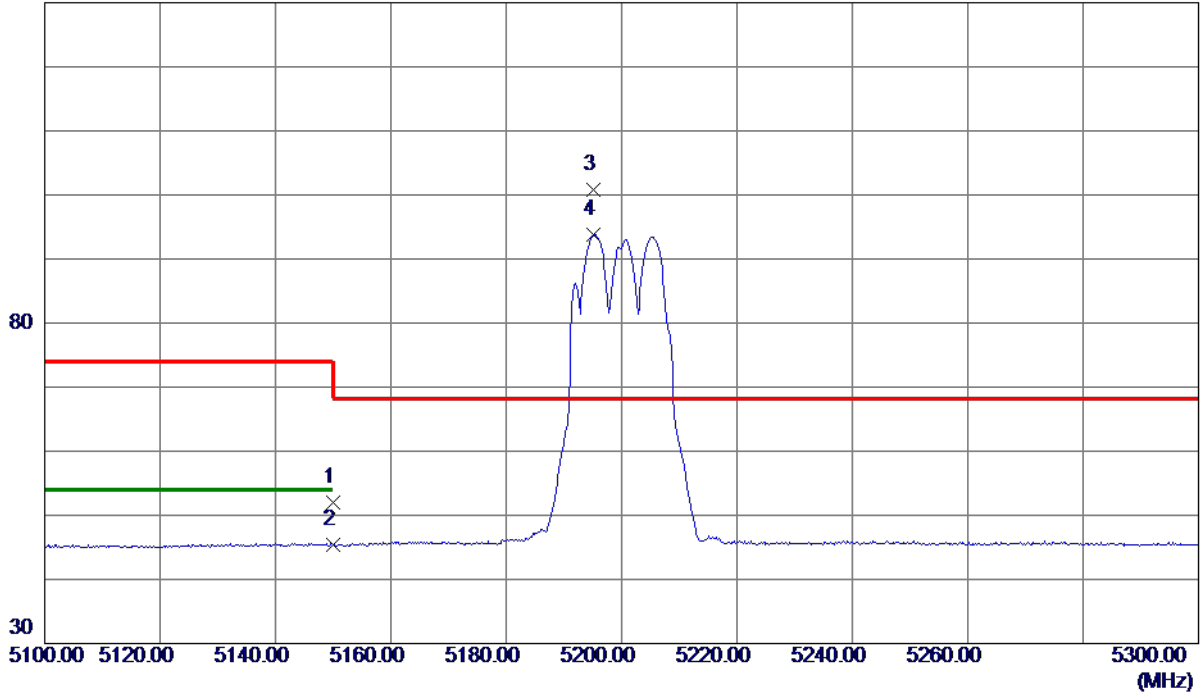


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	35.79	16.16	51.95	74.00	-22.05	Peak	
2	5150.0000	29.18	16.16	45.34	54.00	-8.66	AVG	
3 *	5195.2000	84.50	16.26	100.76	68.30	32.46	Peak	No Limit
4	5195.2000	77.57	16.26	93.83	999.00	-905.17	AVG	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5220 MHz

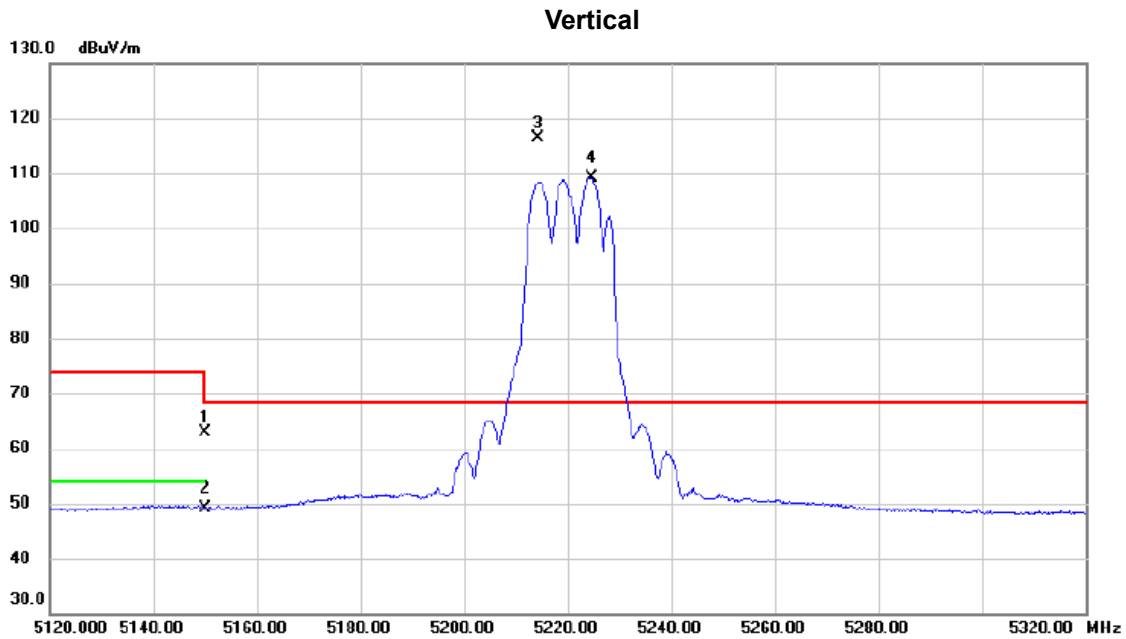


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	46.64	16.15	62.79	74.00	-11.21	peak	
2		5150.000	33.00	16.15	49.15	54.00	-4.85	AVG	
3	*	5214.400	100.01	16.31	116.32	68.30	48.02	peak	No Limit
4	X	5224.600	92.81	16.33	109.14	68.30	40.84	AVG	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5220 MHz

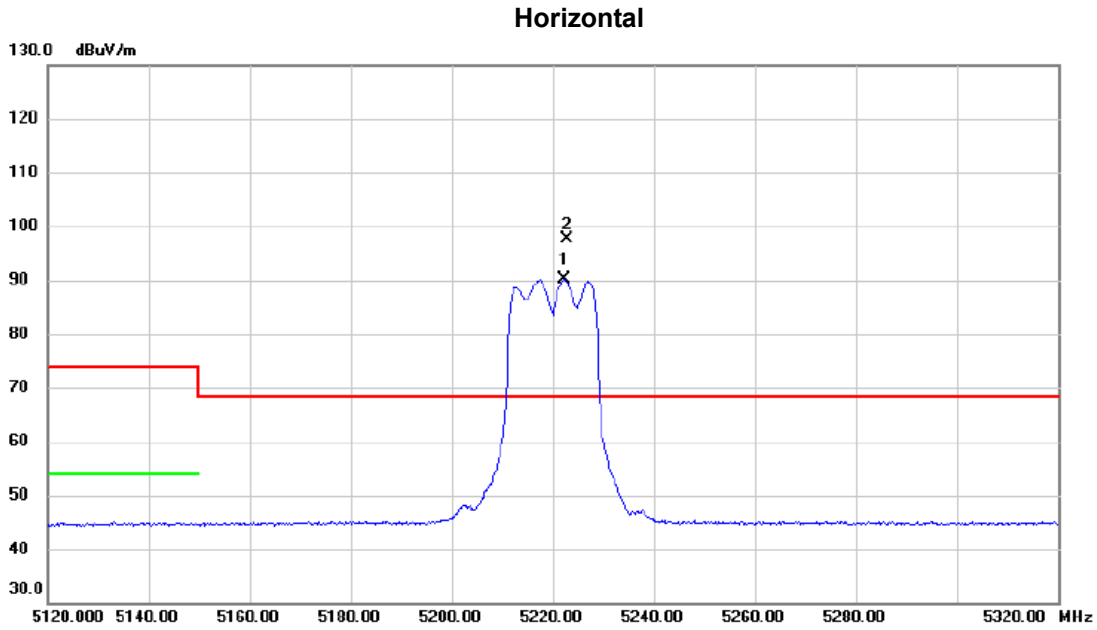

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	X	5222.400	73.76	16.33	90.09	68.30	21.79	AVG	No Limit
2	*	5222.800	81.34	16.33	97.67	68.30	29.37	peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5240 MHz

Vertical

130 dBuV/m

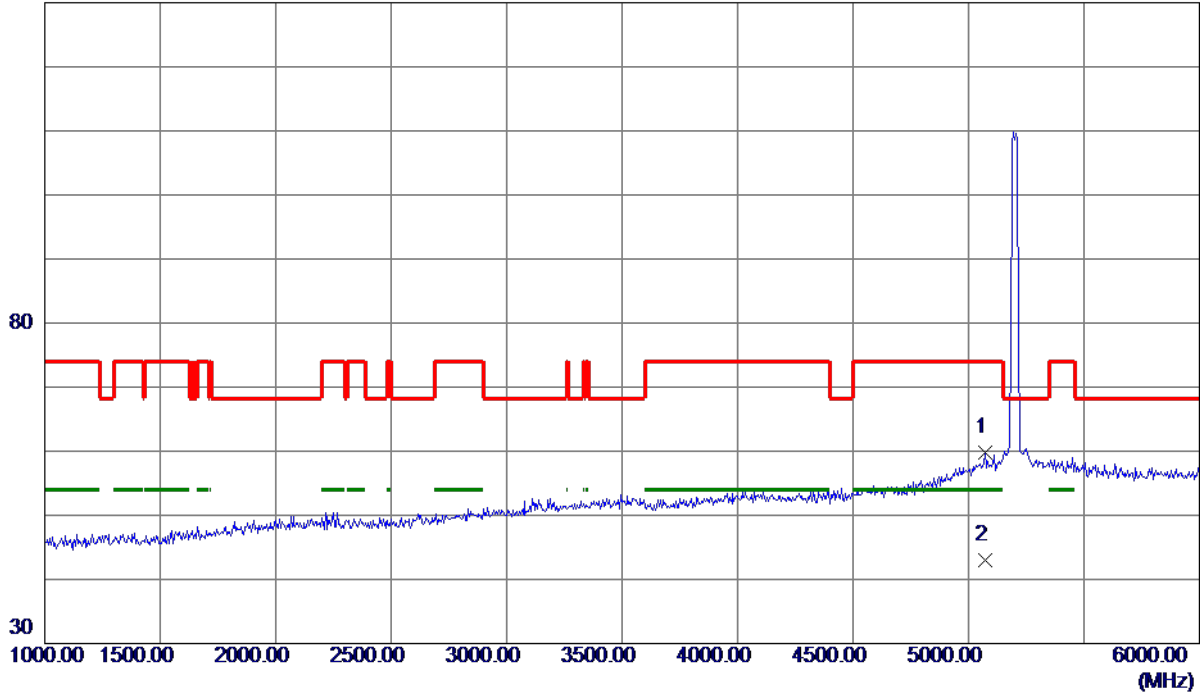

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5070.0000	43.86	15.97	59.83	74.00	-14.17	Peak	
2 *	5070.0000	26.94	15.97	42.91	54.00	-11.09	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5240 MHz

Vertical

130 dBuV/m



No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17832.0000	38.05	22.20	60.25	74.00	-13.75	Peak	
2 *	17832.0000	21.36	22.20	43.56	54.00	-10.44	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5240 MHz

Vertical

130 dBuV/m

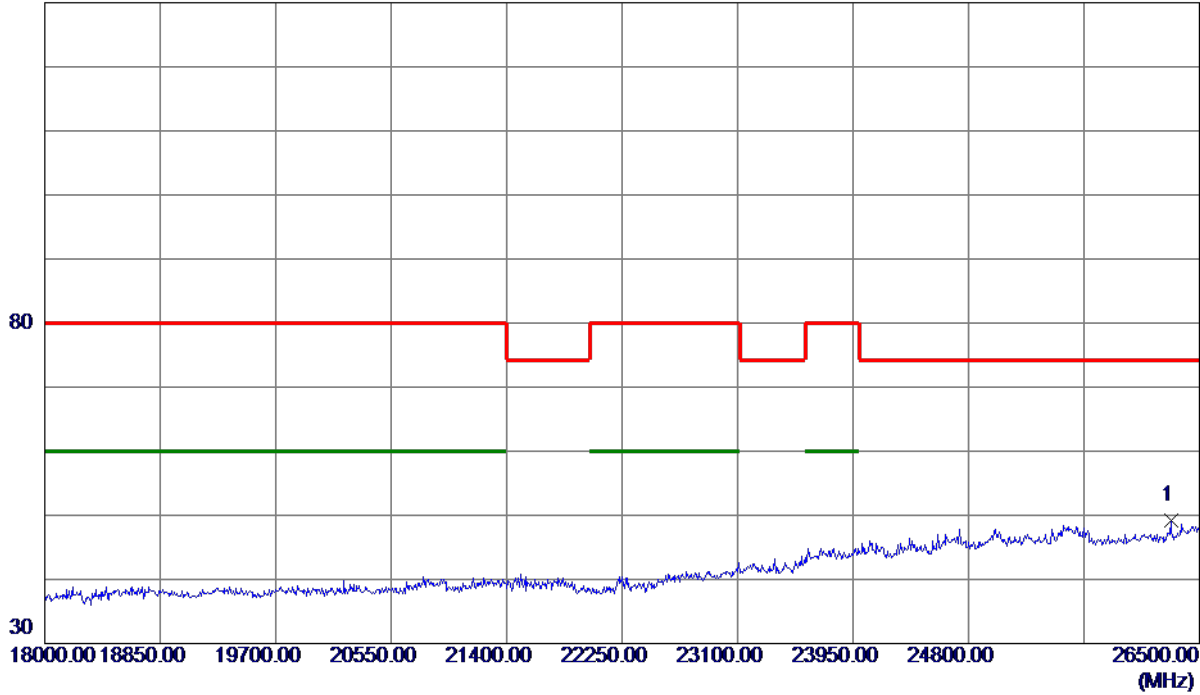


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	26291.7500	28.85	20.32	49.17	74.30	-25.13	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5240 MHz

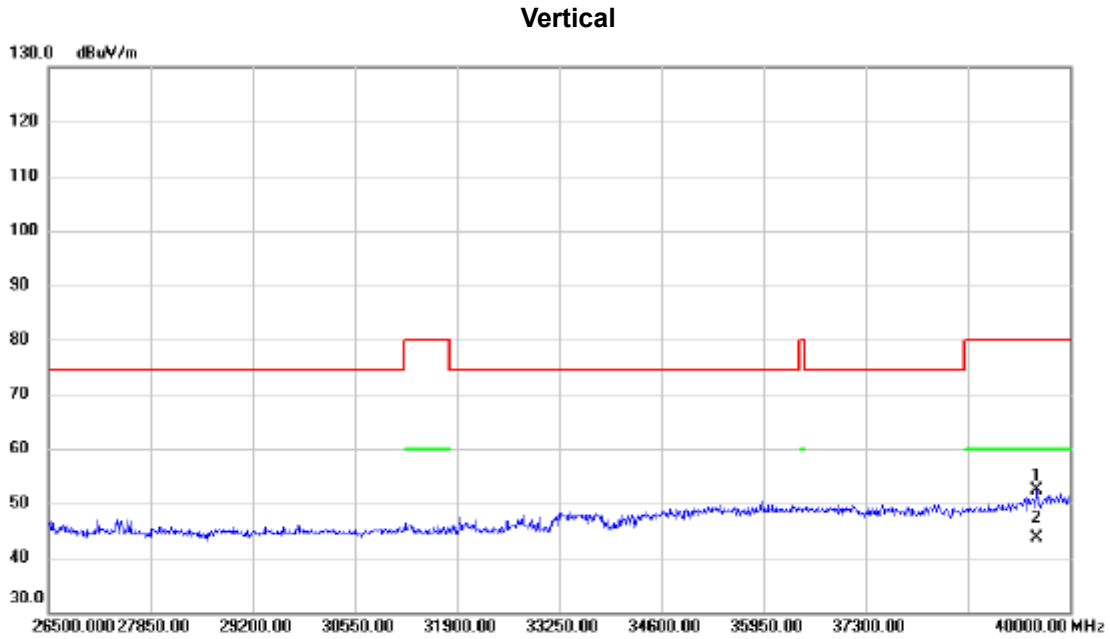

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39561.250	36.98	15.34	52.32	80.00	-27.68	peak	
2	*	39561.250	28.31	15.34	43.65	60.00	-16.35	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5240 MHz

Horizontal

130 dBuV/m

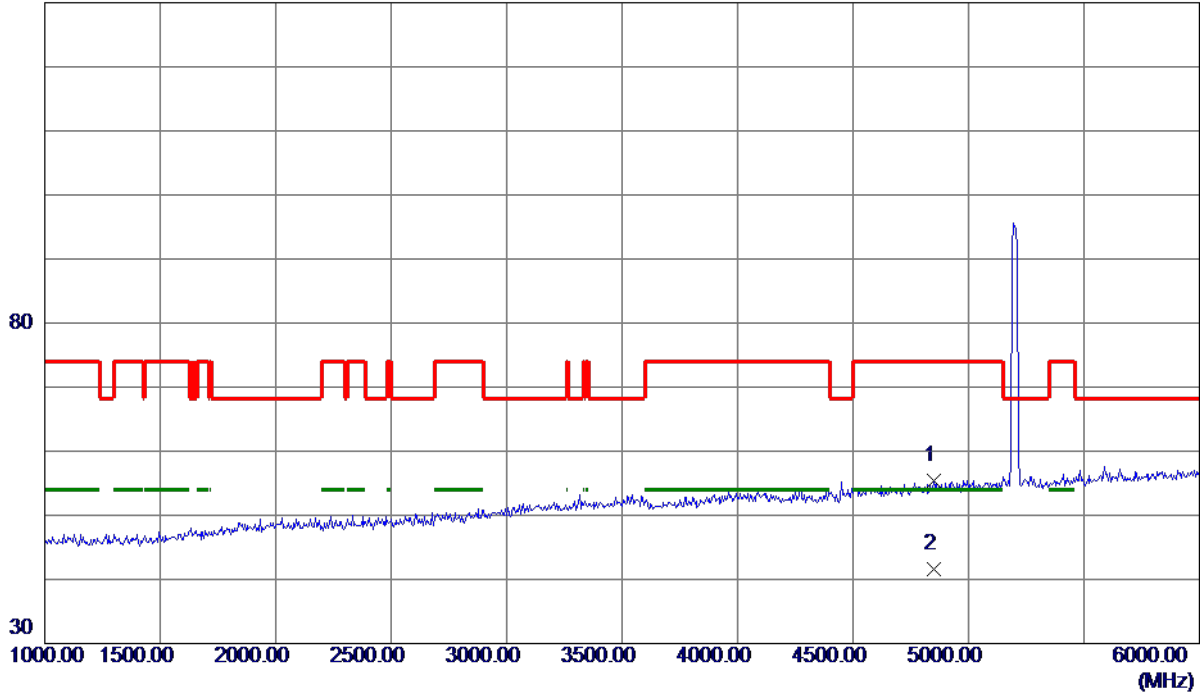

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	4850.0000	40.02	15.39	55.41	74.00	-18.59	Peak	
2 *	4850.0000	26.24	15.39	41.63	54.00	-12.37	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5240 MHz

Horizontal

130 dBuV/m

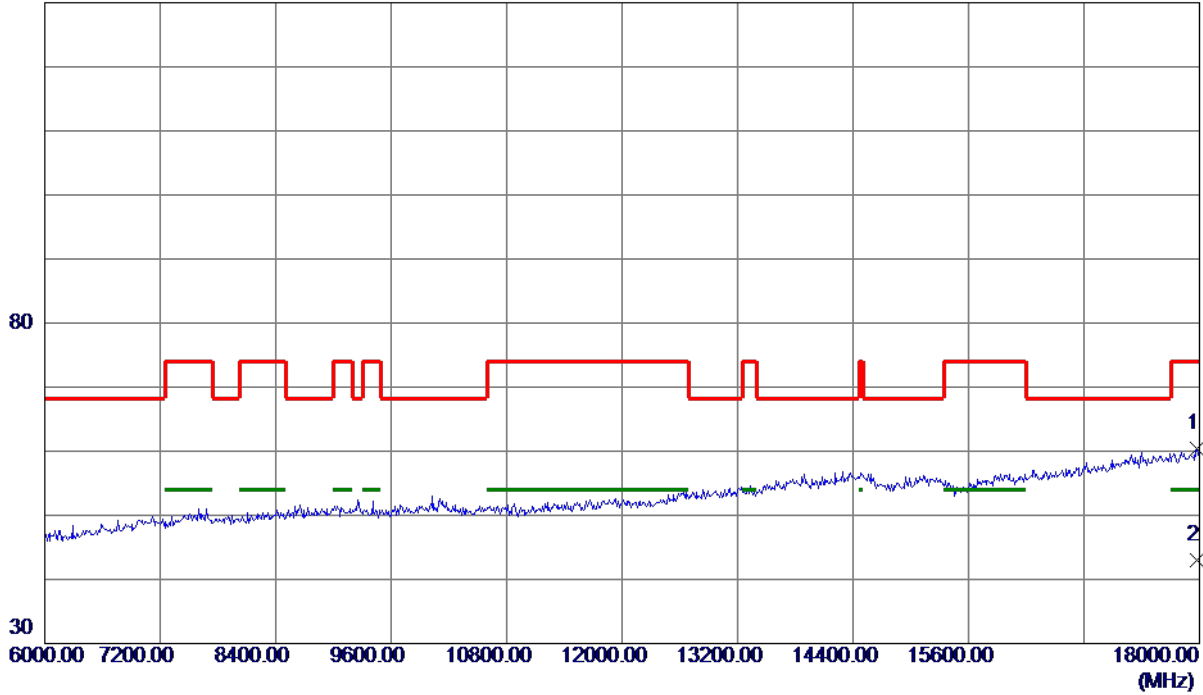

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17976.0000	38.06	22.29	60.35	74.00	-13.65	Peak	
2 *	17976.0000	20.80	22.29	43.09	54.00	-10.91	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5240 MHz

Horizontal

130 dBuV/m

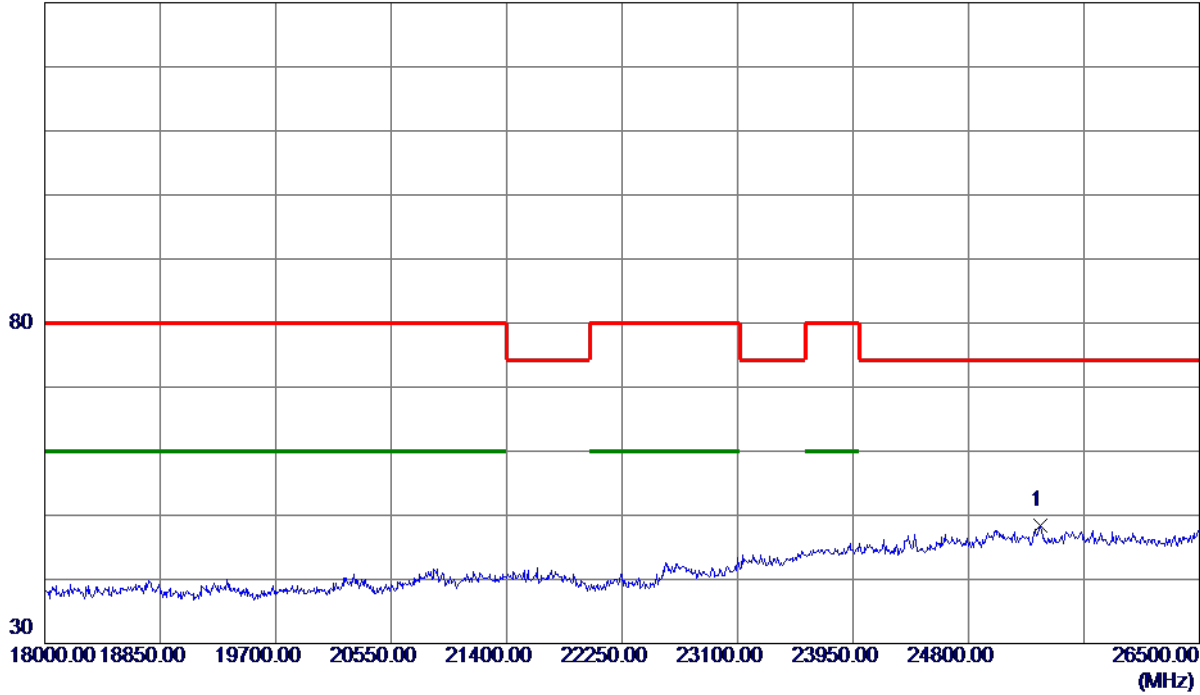


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25327.0000	28.43	20.03	48.46	74.30	-25.84	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5240 MHz

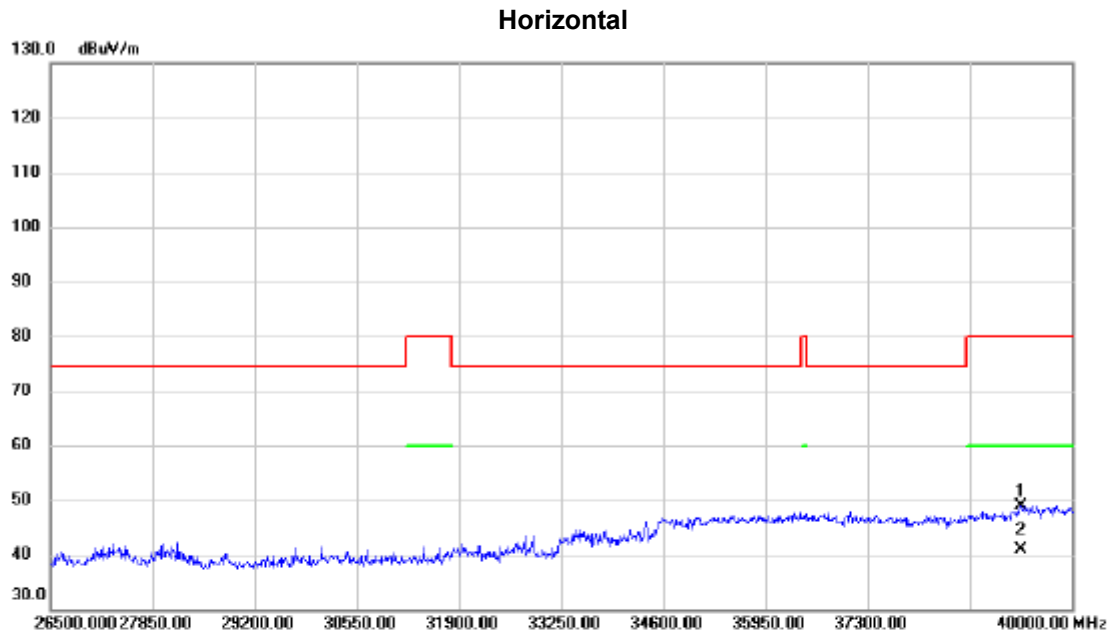

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39331.750	34.39	14.60	48.99	80.00	-31.01	peak	
2	*	39331.750	26.35	14.60	40.95	60.00	-19.05	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5180 MHz

Vertical

130 dBuV/m

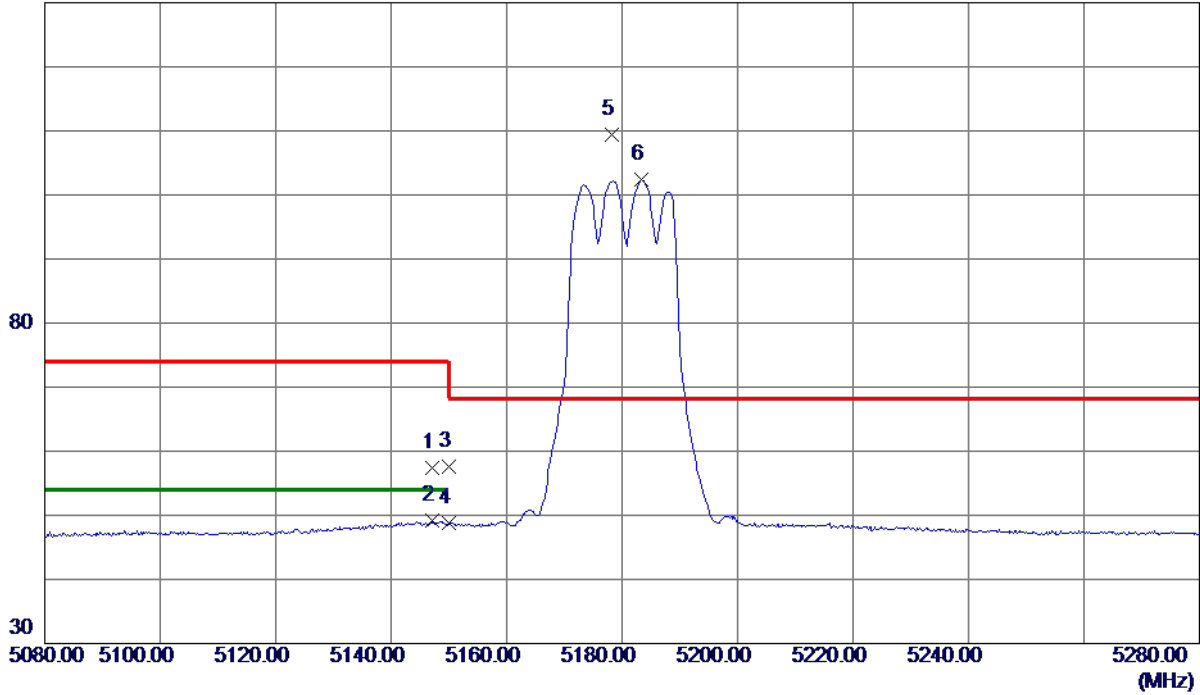

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5147.2000	41.34	16.15	57.49	74.00	-16.51	Peak	
2	5147.2000	32.99	16.15	49.14	54.00	-4.86	AVG	
3	5150.0000	41.45	16.16	57.61	74.00	-16.39	Peak	
4	5150.0000	32.61	16.16	48.77	54.00	-5.23	AVG	
5 *	5178.2000	93.15	16.22	109.37	68.30	41.07	Peak	No Limit
6	5183.4000	86.11	16.23	102.34	999.00	-896.66	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5180 MHz

Horizontal

130 dBuV/m

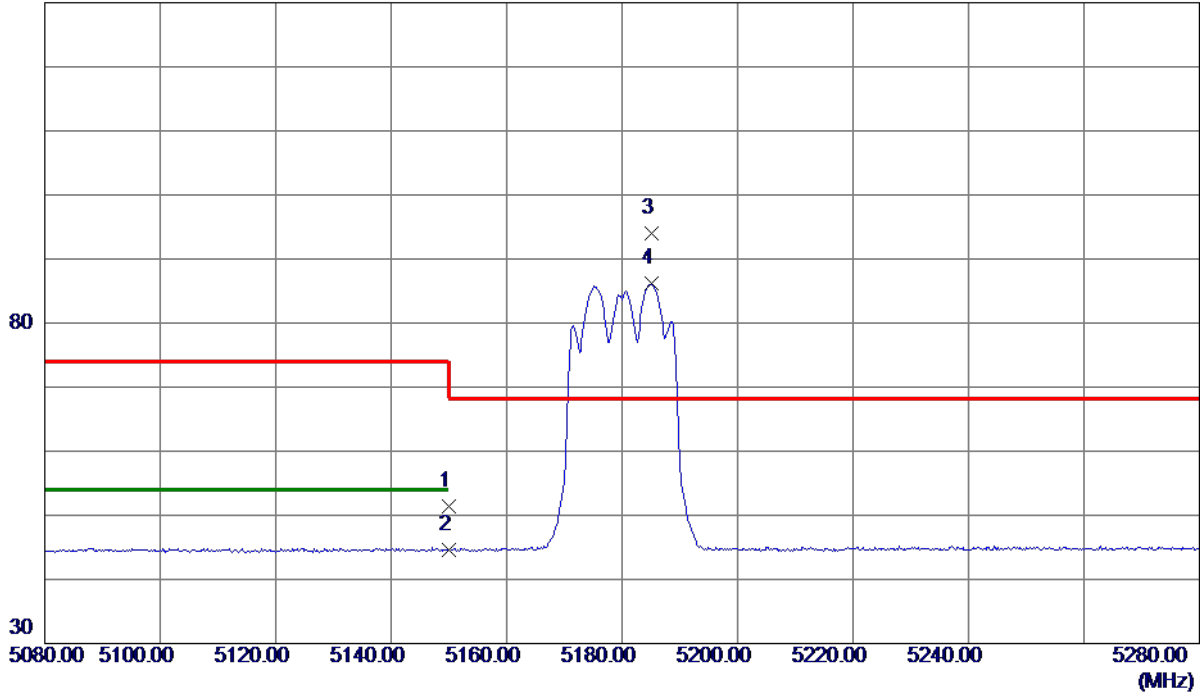

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	35.21	16.16	51.37	74.00	-22.63	Peak	
2	5150.0000	28.40	16.16	44.56	54.00	-9.44	AVG	
3 *	5185.2000	77.68	16.24	93.92	68.30	25.62	Peak	No Limit
4	5185.2000	69.90	16.24	86.14	999.00	-912.86	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5200 MHz

Vertical

130 dBuV/m

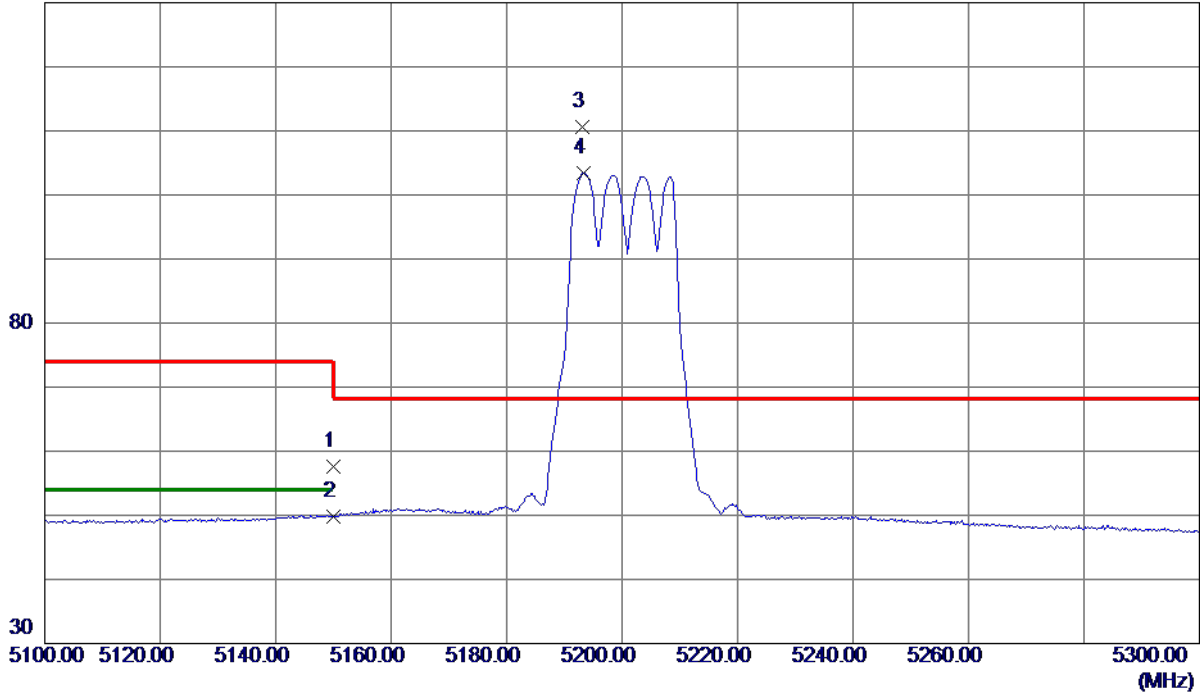

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	41.36	16.16	57.52	74.00	-16.48	Peak	
2	5150.0000	33.71	16.16	49.87	54.00	-4.13	AVG	
3 *	5193.2000	94.35	16.26	110.61	68.30	42.31	Peak	No Limit
4	5193.4000	87.18	16.26	103.44	999.00	-895.56	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5200 MHz

Horizontal

130 dBuV/m

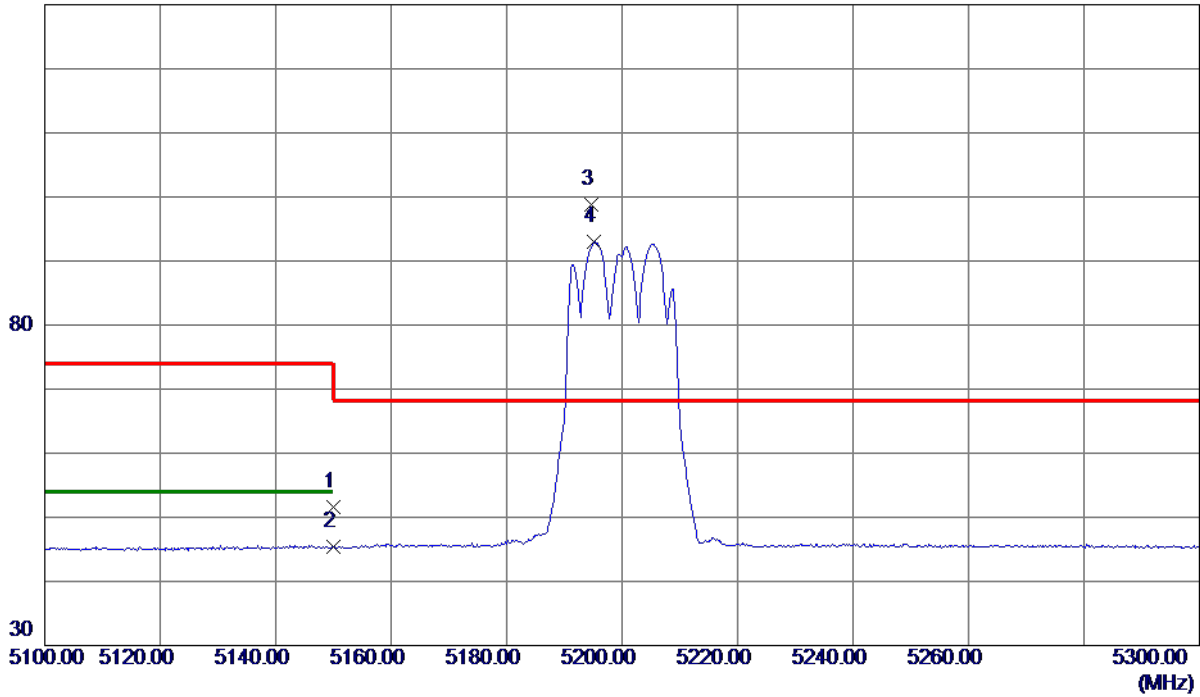


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	35.36	16.16	51.52	74.00	-22.48	Peak	
2	5150.0000	29.22	16.16	45.38	54.00	-8.62	AVG	
3 *	5194.6000	82.61	16.26	98.87	68.30	30.57	Peak	No Limit
4	5195.2000	76.73	16.26	92.99	999.00	-906.01	AVG	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5220 MHz

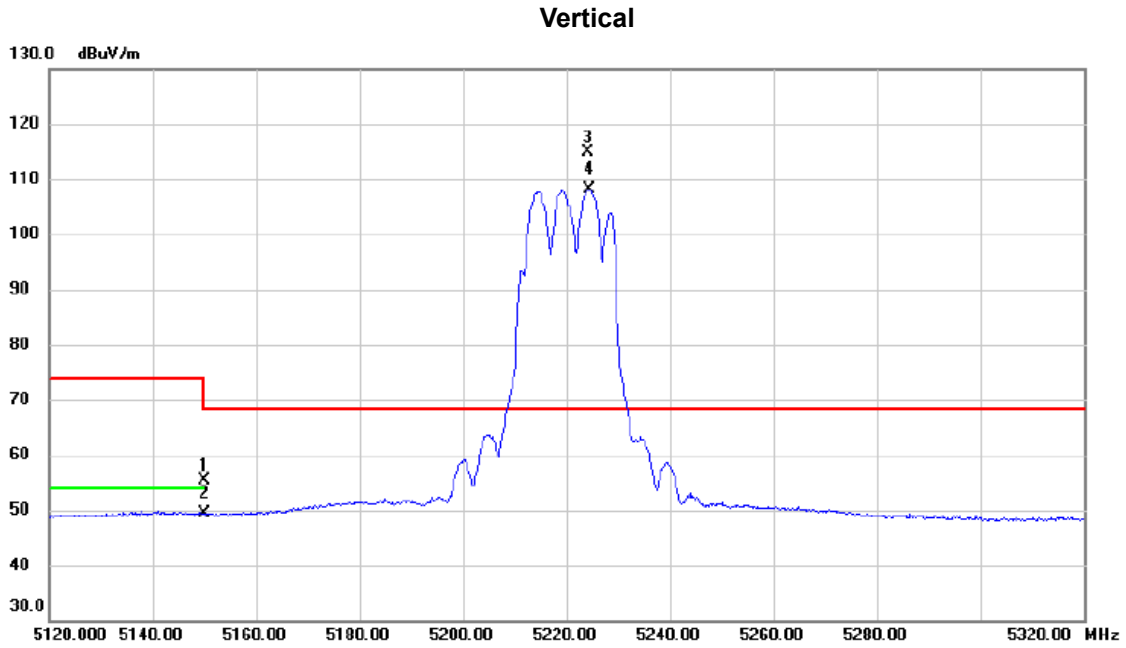


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	39.30	16.15	55.45	74.00	-18.55	peak	
2		5150.000	33.12	16.15	49.27	54.00	-4.73	AVG	
3	*	5224.200	98.44	16.33	114.77	68.30	46.47	peak	No Limit
4	X	5224.400	91.86	16.33	108.19	68.30	39.89	AVG	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5220 MHz

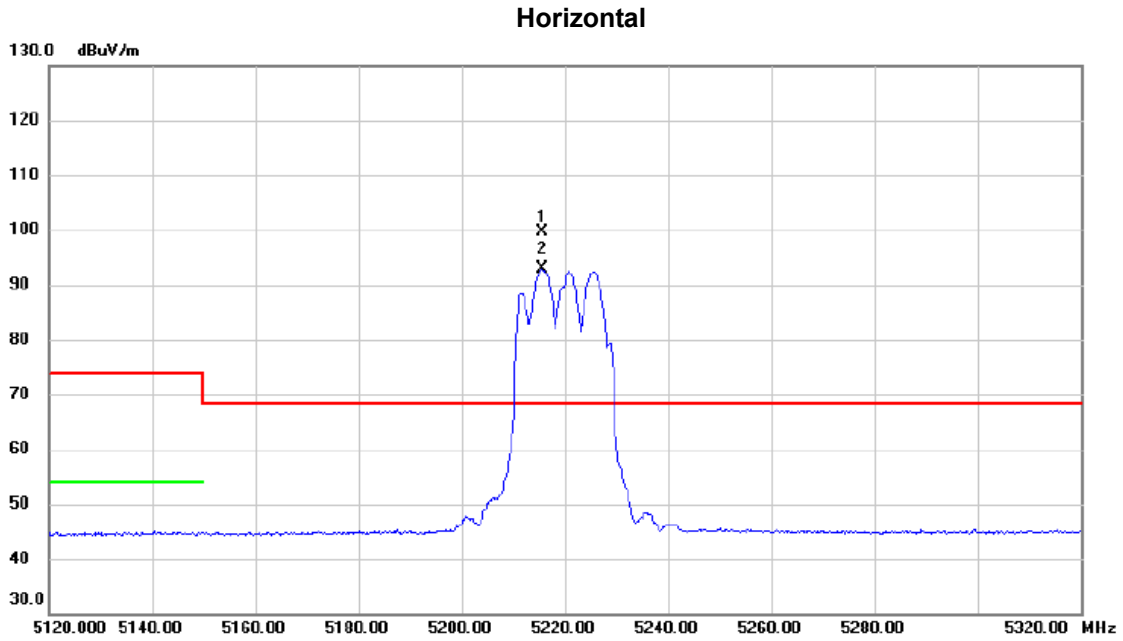

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5215.600	83.40	16.31	99.71	68.30	31.41	peak	No Limit
2	X	5215.600	76.49	16.31	92.80	68.30	24.50	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5240 MHz

Vertical

130 dBuV/m

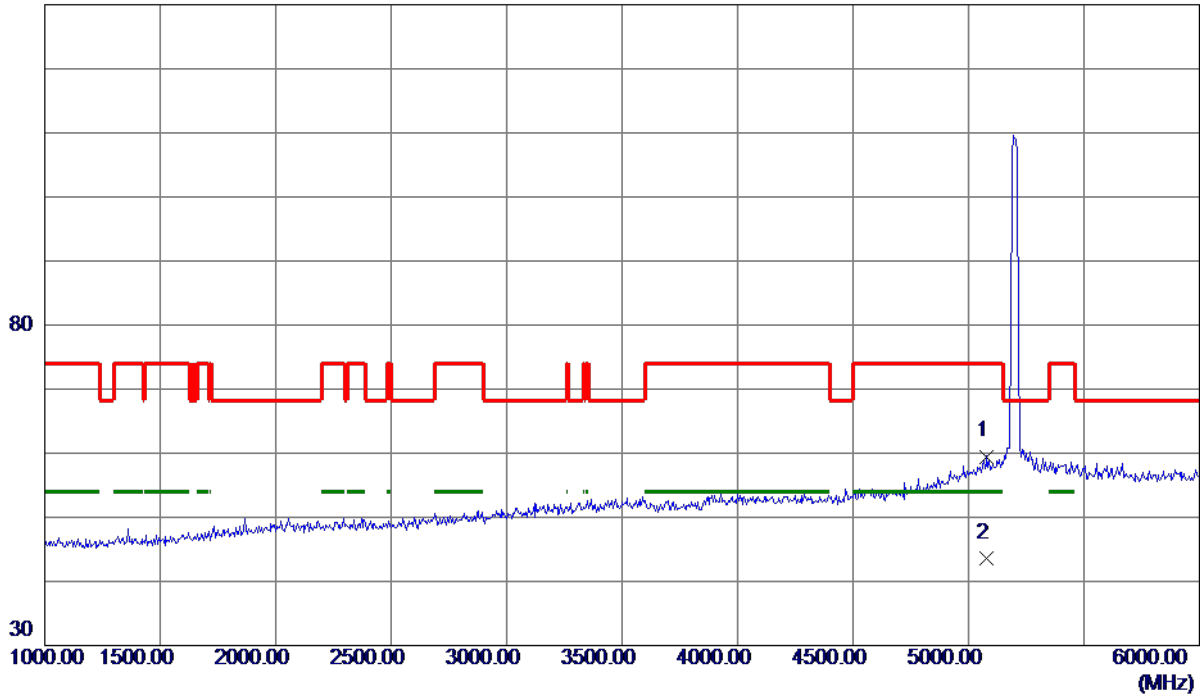

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5080.0000	43.51	15.99	59.50	74.00	-14.50	Peak	
2 *	5080.0000	27.69	15.99	43.68	54.00	-10.32	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5240 MHz

Vertical

130 dBuV/m



No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17820.0000	39.31	22.19	61.50	74.00	-12.50	Peak	
2 *	17820.0000	21.65	22.19	43.84	54.00	-10.16	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5240 MHz

Vertical

130 dBuV/m

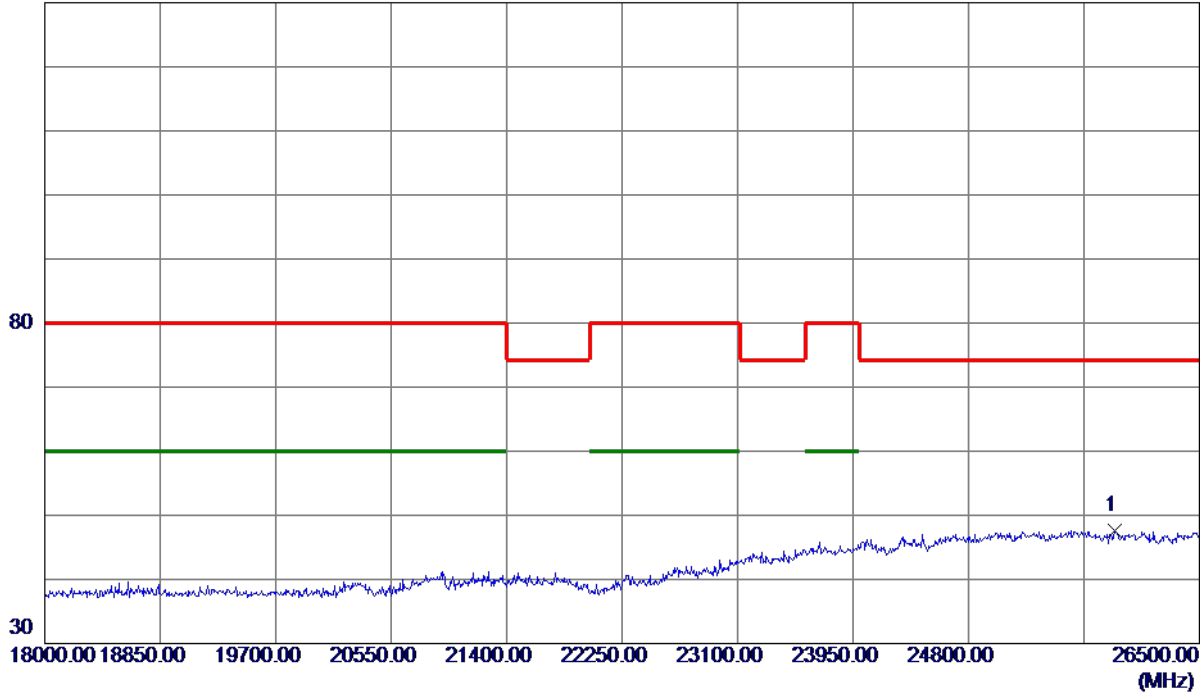


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25879.5000	27.59	20.01	47.60	74.30	-26.70	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5240 MHz

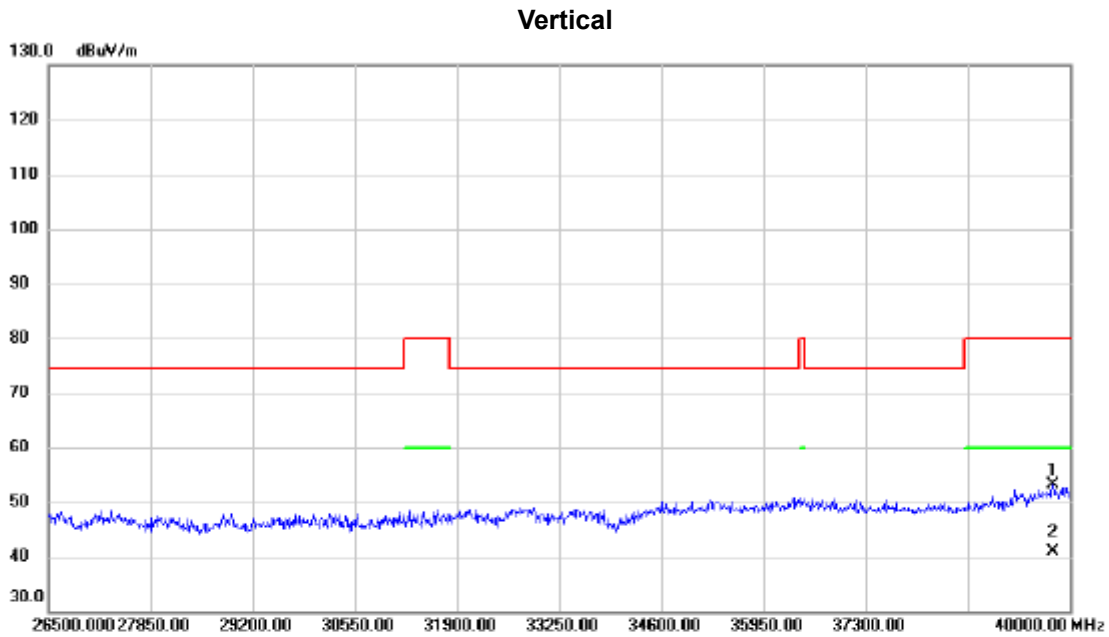

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39770.500	37.58	15.48	53.06	80.00	-26.94	peak	
2	*	39770.500	25.46	15.48	40.94	60.00	-19.06	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5240 MHz

Horizontal

130 dBuV/m

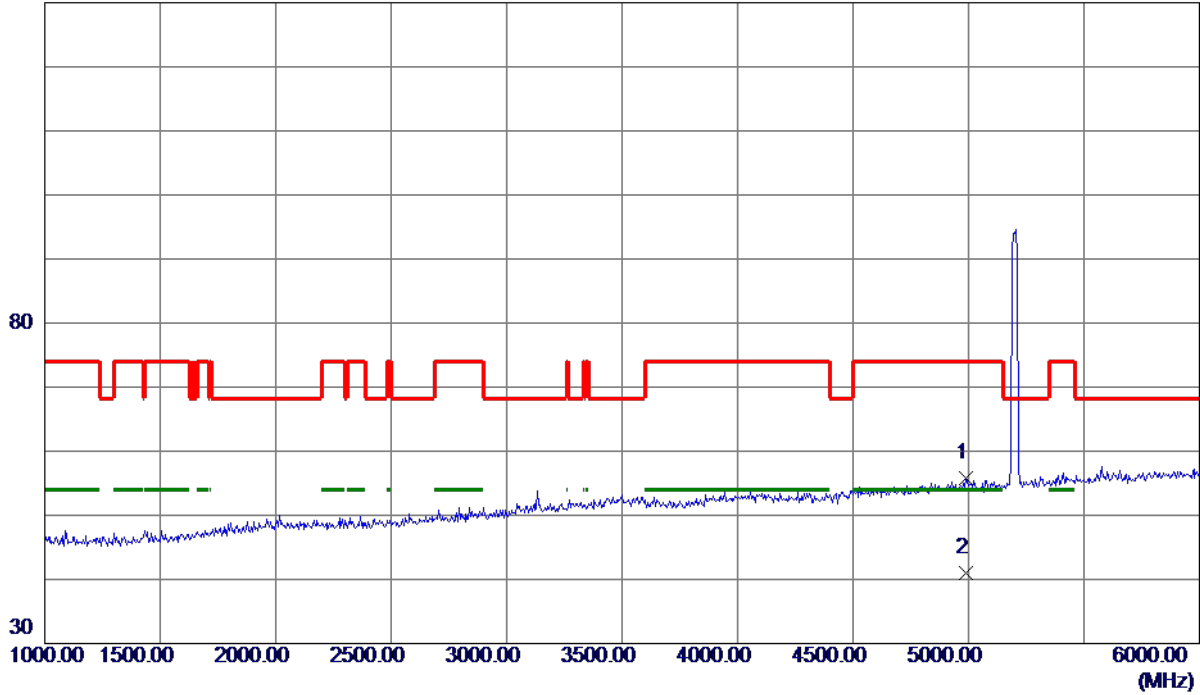

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	4990.0000	40.03	15.77	55.80	74.00	-18.20	Peak	
2 *	4990.0000	25.14	15.77	40.91	54.00	-13.09	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5240 MHz

Horizontal

130 dBuV/m

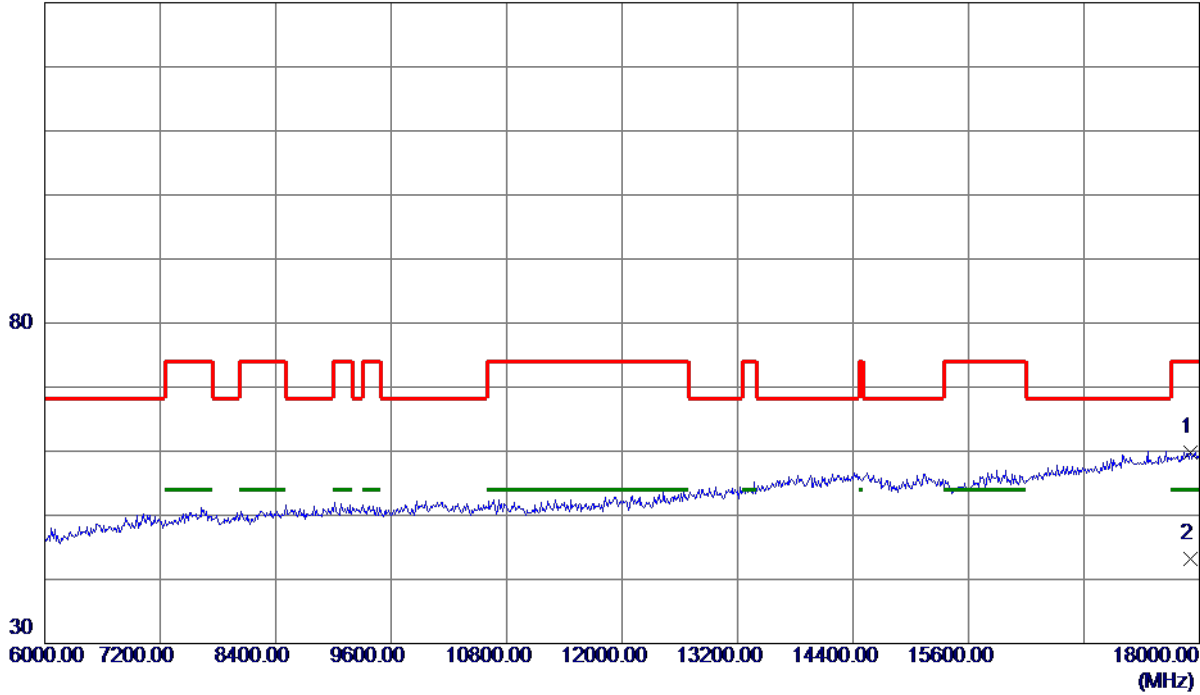

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17904.0000	37.64	22.24	59.88	74.00	-14.12	Peak	
2 *	17904.0000	20.88	22.24	43.12	54.00	-10.88	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5240 MHz

Horizontal

130 dBuV/m

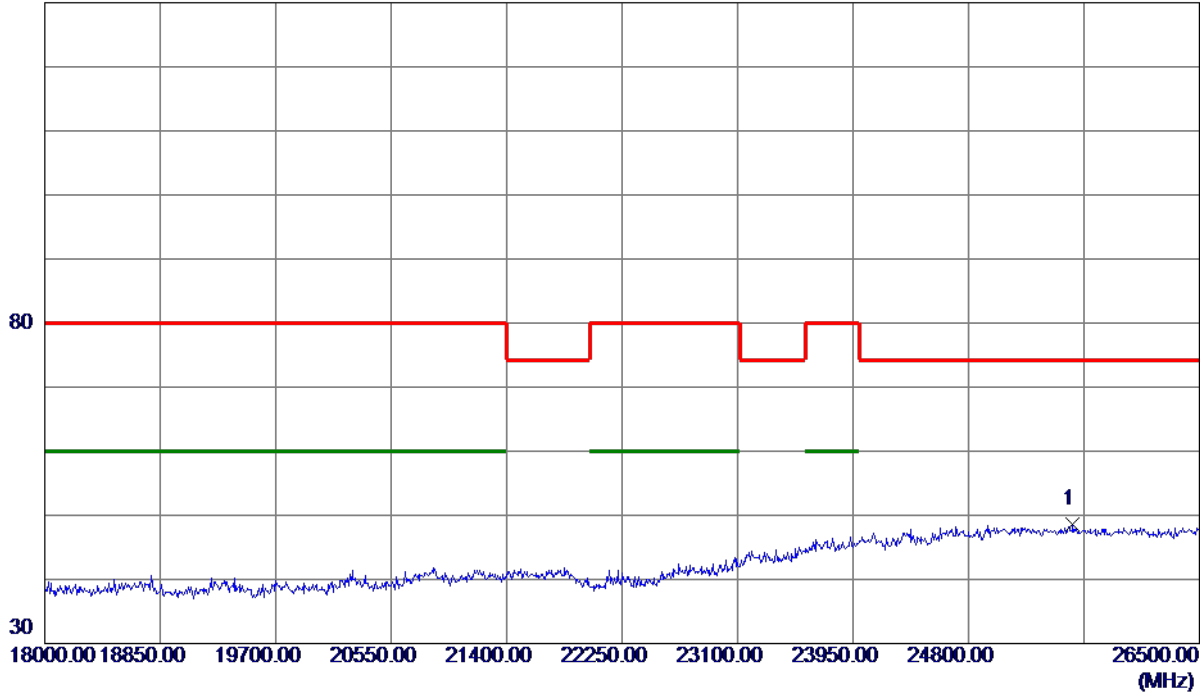


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25565.0000	28.50	20.02	48.52	74.30	-25.78	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5240 MHz

Horizontal

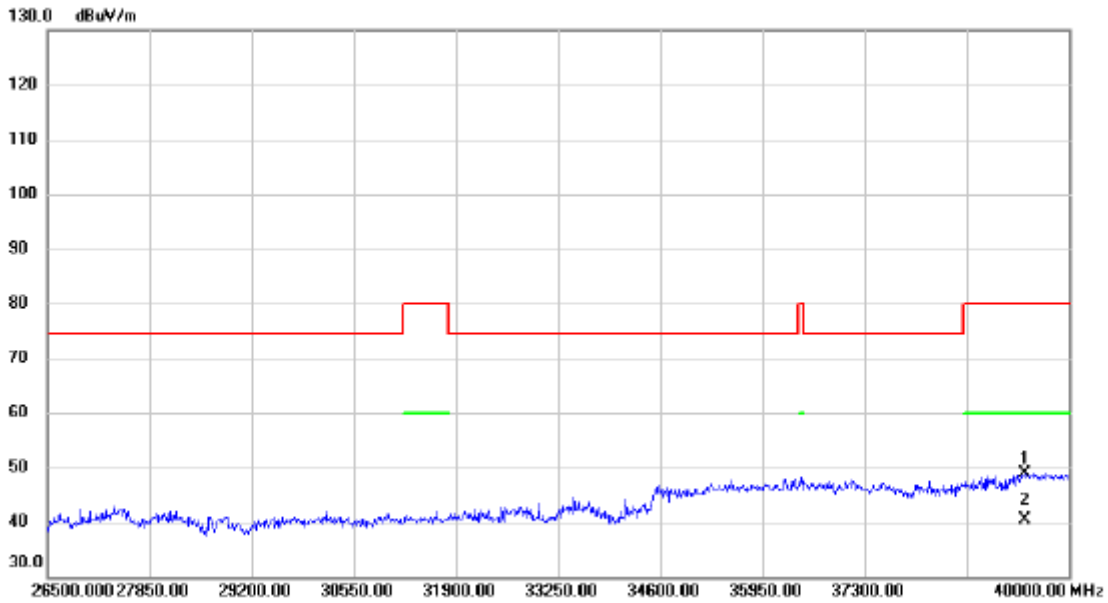

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39406.000	33.95	14.91	48.86	80.00	-31.14	peak	
2	*	39406.000	25.46	14.91	40.37	60.00	-19.63	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5190 MHz

Vertical

130 dBuV/m

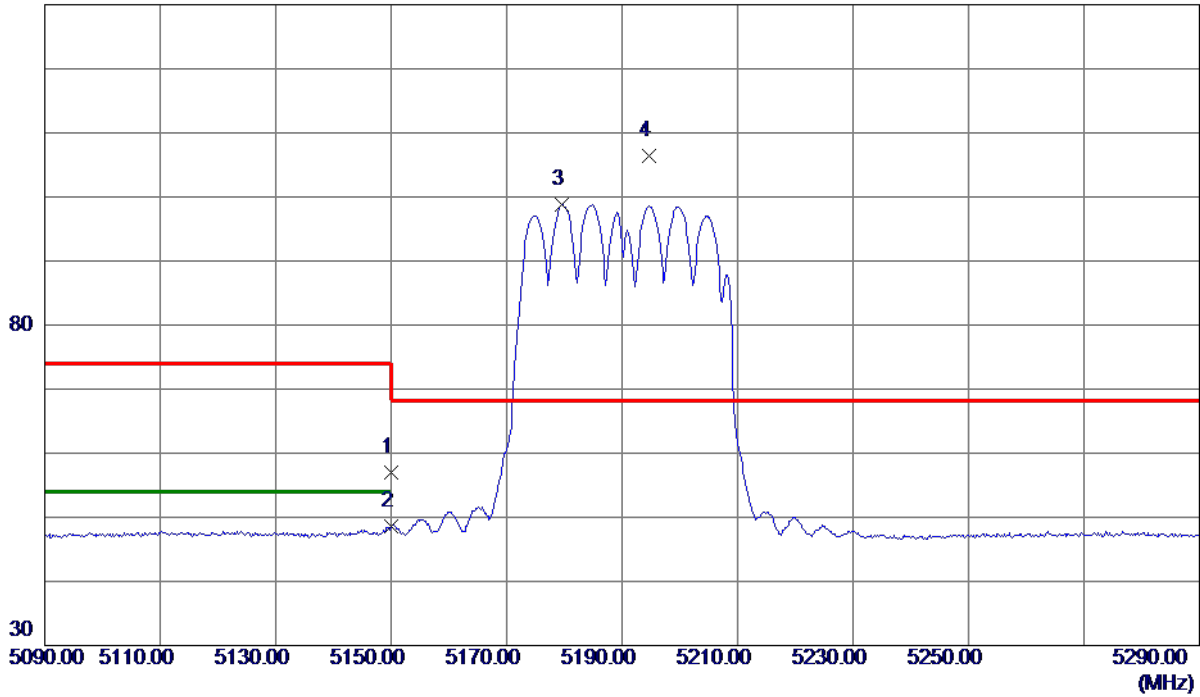

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	40.75	16.16	56.91	74.00	-17.09	Peak	
2	5150.0000	32.41	16.16	48.57	54.00	-5.43	AVG	
3	5179.6000	82.54	16.23	98.77	999.00	-900.23	AVG	No Limit
4 *	5194.6000	90.16	16.26	106.42	68.30	38.12	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5190 MHz

Horizontal

130 dBuV/m

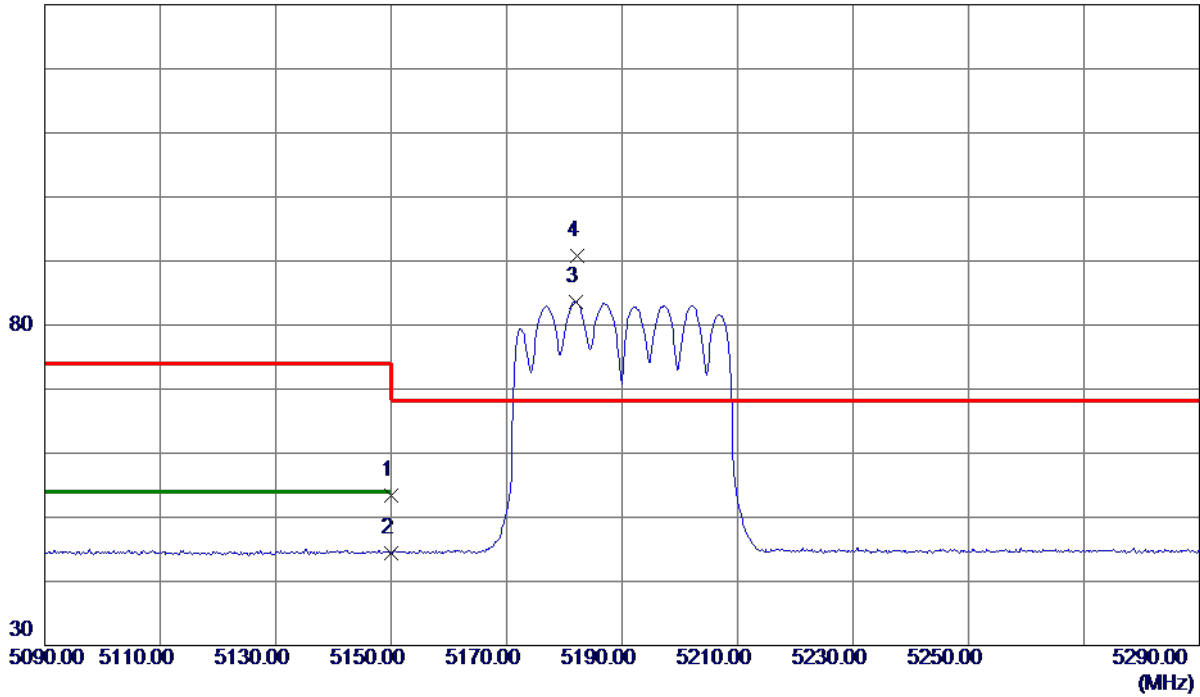

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	37.22	16.16	53.38	74.00	-20.62	Peak	
2	5150.0000	28.30	16.16	44.46	54.00	-9.54	AVG	
3	5182.0000	67.37	16.23	83.60	999.00	-915.40	AVG	No Limit
4 *	5182.2000	74.53	16.23	90.76	68.30	22.46	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz

Vertical

130 dBuV/m

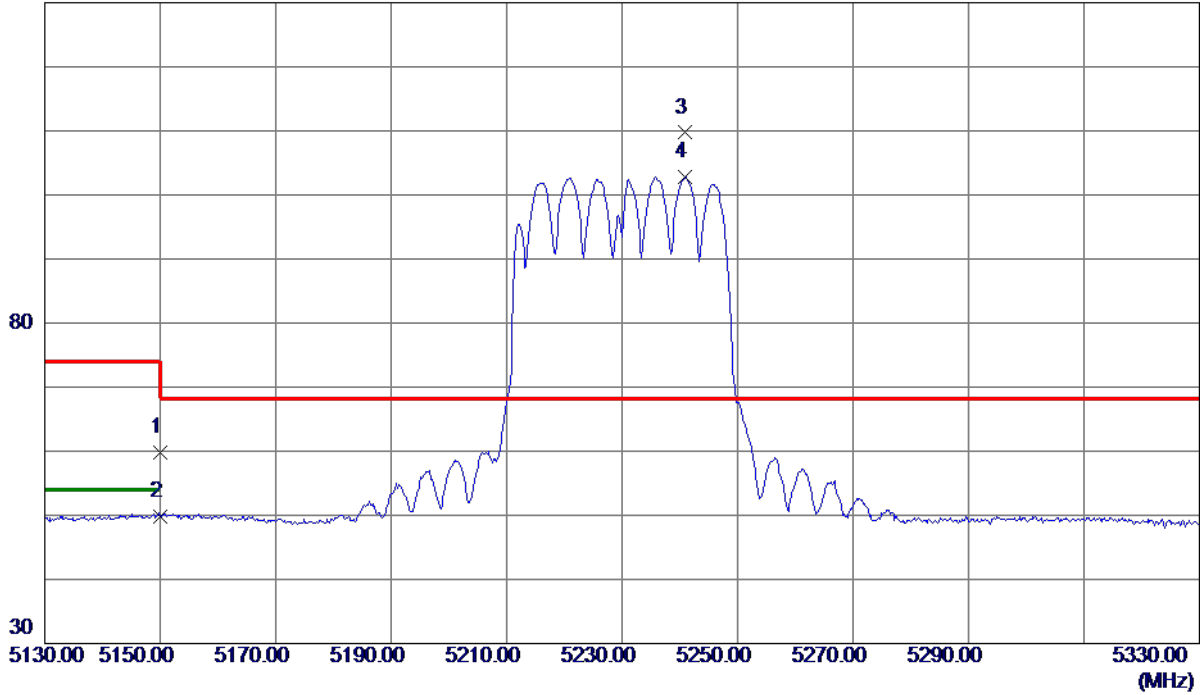

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	43.62	16.16	59.78	74.00	-14.22	Peak	
2	5150.0000	33.62	16.16	49.78	54.00	-4.22	AVG	
3 *	5240.8000	93.33	16.37	109.70	68.30	41.40	Peak	No Limit
4	5240.8000	86.36	16.37	102.73	999.00	-896.27	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz

Vertical

130 dBuV/m

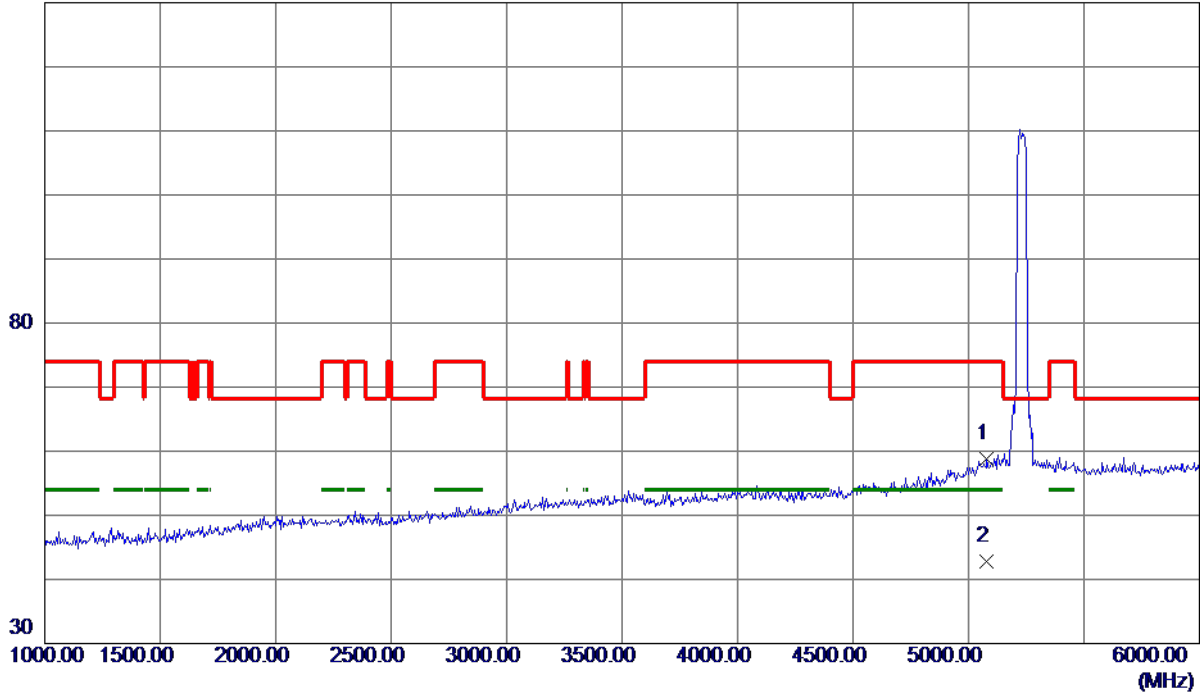

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5080.0000	42.78	15.99	58.77	74.00	-15.23	Peak	
2 *	5080.0000	26.89	15.99	42.88	54.00	-11.12	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz

Vertical

130 dBuV/m

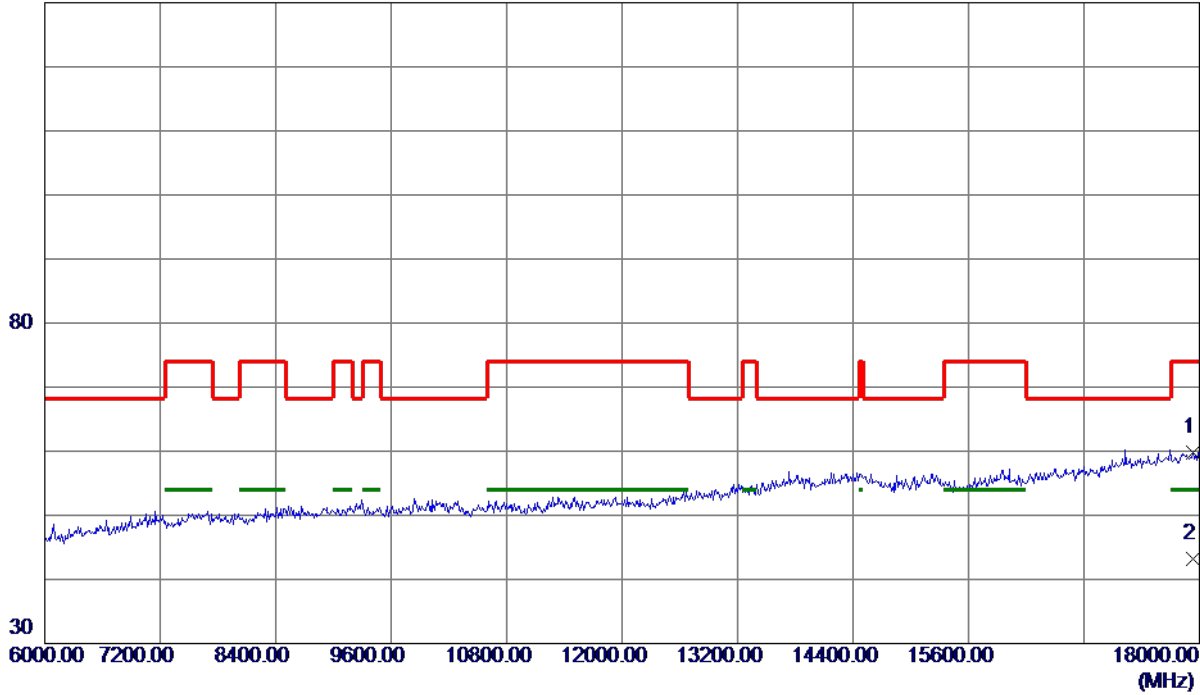

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17928.0000	37.63	22.26	59.89	74.00	-14.11	Peak	
2 *	17928.0000	20.90	22.26	43.16	54.00	-10.84	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz

Vertical

130 dBuV/m

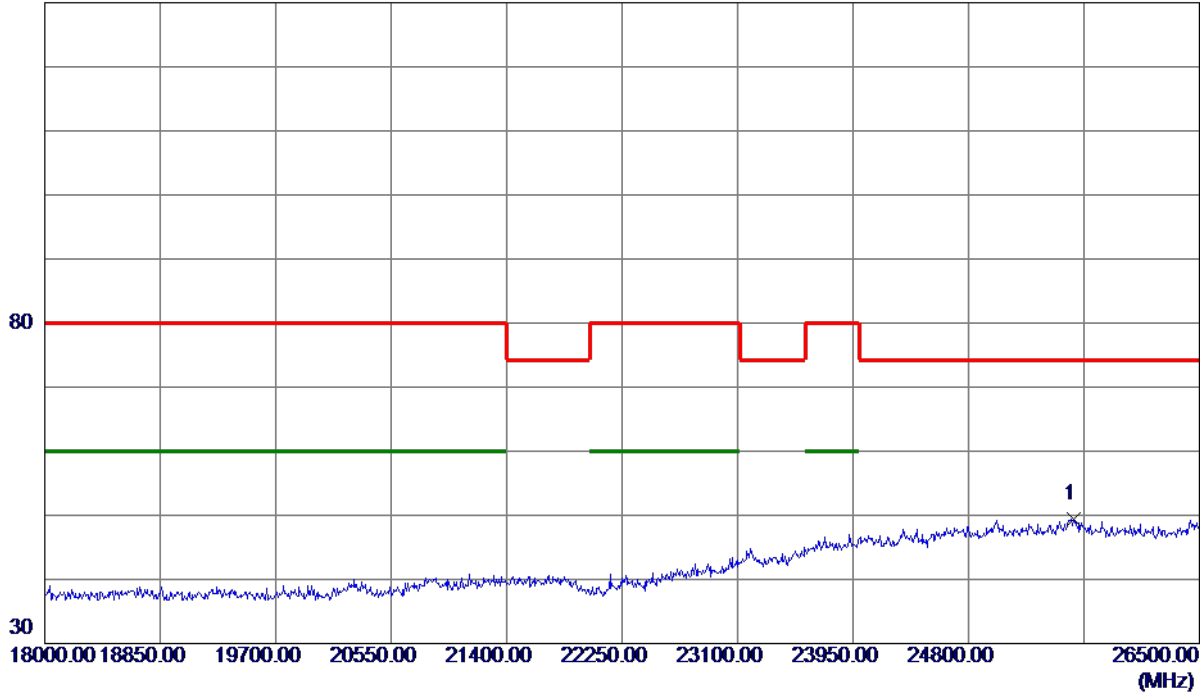


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25577.7500	29.37	20.02	49.39	74.30	-24.91	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz

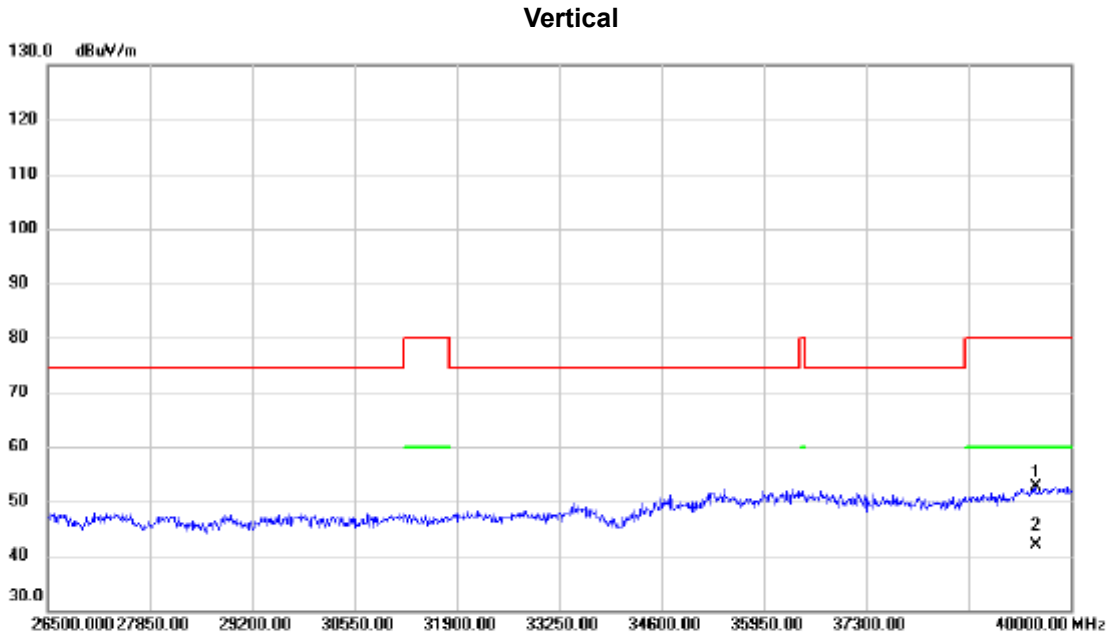

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39534.250	37.36	15.33	52.69	80.00	-27.31	peak	
2	*	39534.250	26.45	15.33	41.78	60.00	-18.22	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz

Horizontal

130 dBuV/m

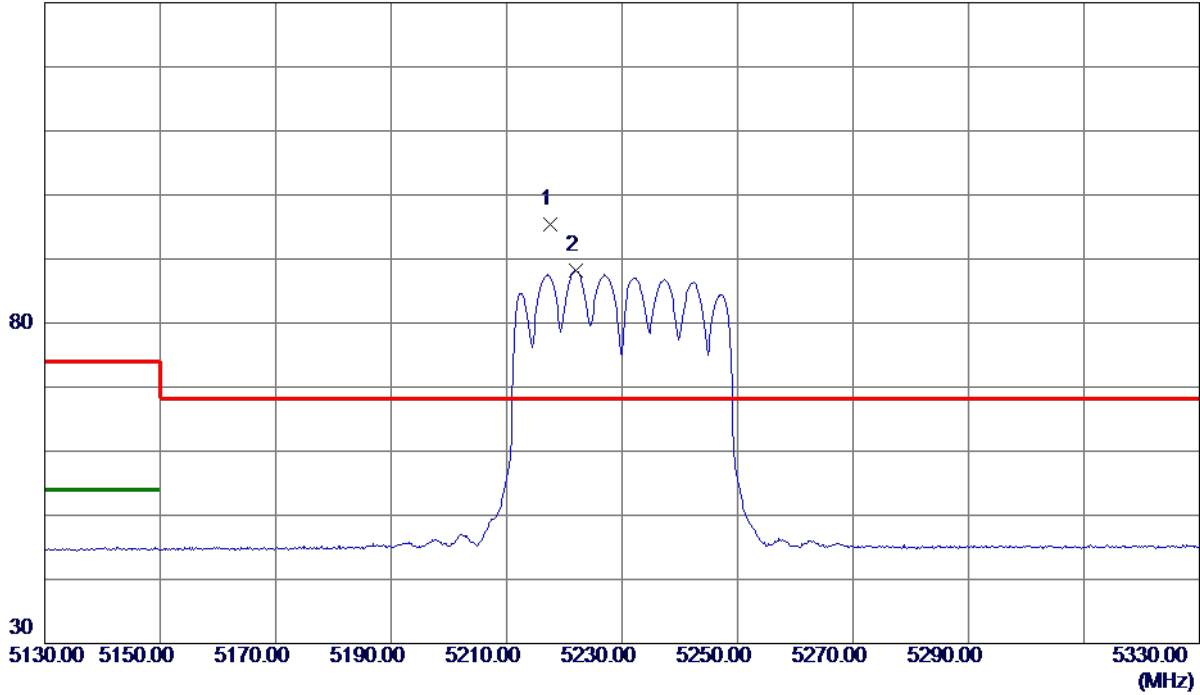

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5217.6000	79.13	16.32	95.45	68.30	27.15	Peak	No Limit
2	5222.0000	71.80	16.33	88.13	999.00	-910.87	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz

Horizontal

130 dBuV/m

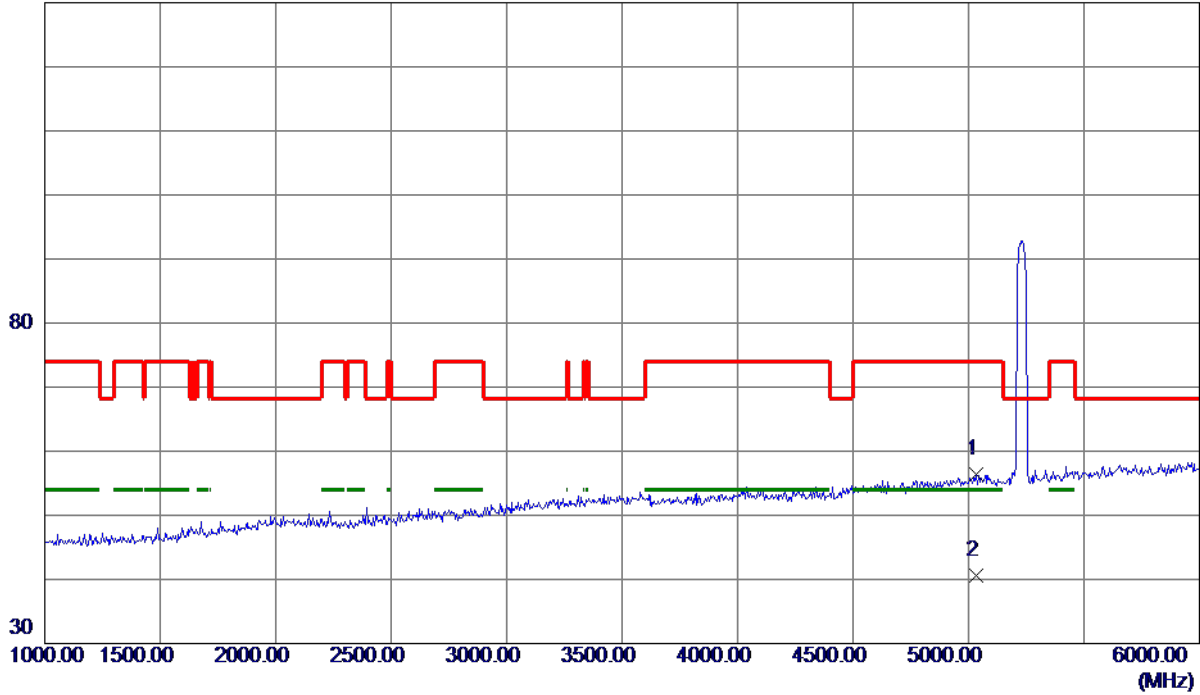

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5035.0000	40.52	15.88	56.40	74.00	-17.60	Peak	
2 *	5035.0000	24.80	15.88	40.68	54.00	-13.32	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz

Horizontal

130 dBuV/m



No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17772.0000	37.47	22.16	59.63	74.00	-14.37	Peak	
2 *	17772.0000	20.58	22.16	42.74	54.00	-11.26	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz

Horizontal

130 dBuV/m

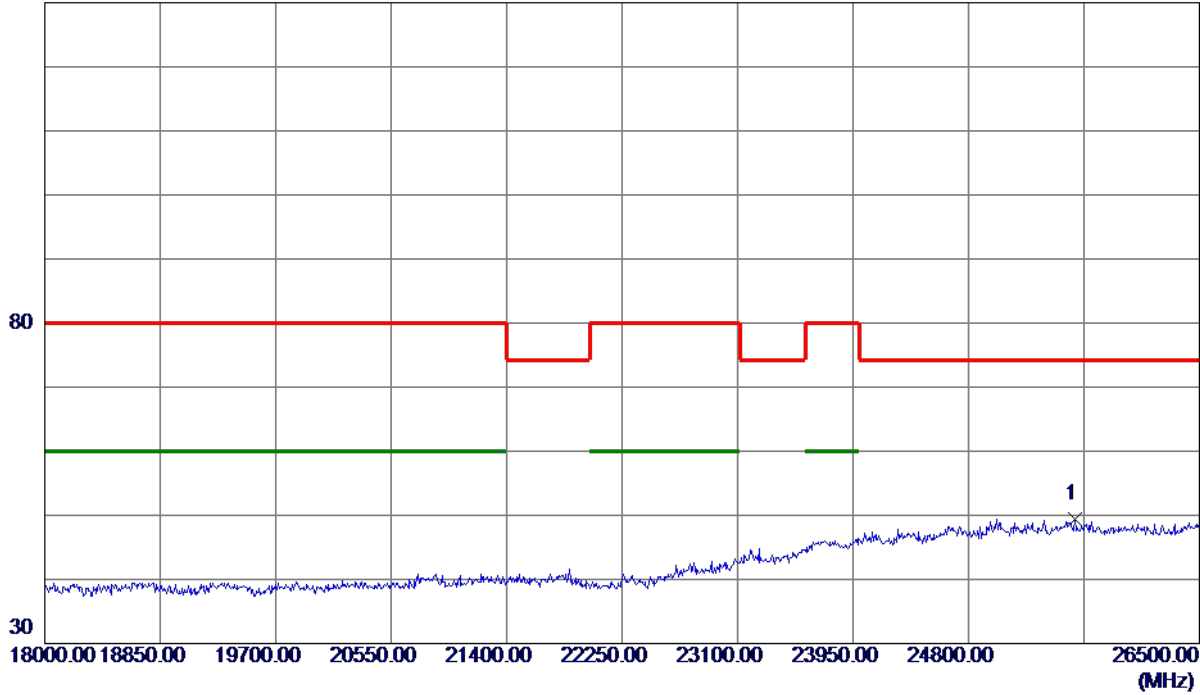


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25582.0000	29.46	20.02	49.48	74.30	-24.82	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz

Horizontal

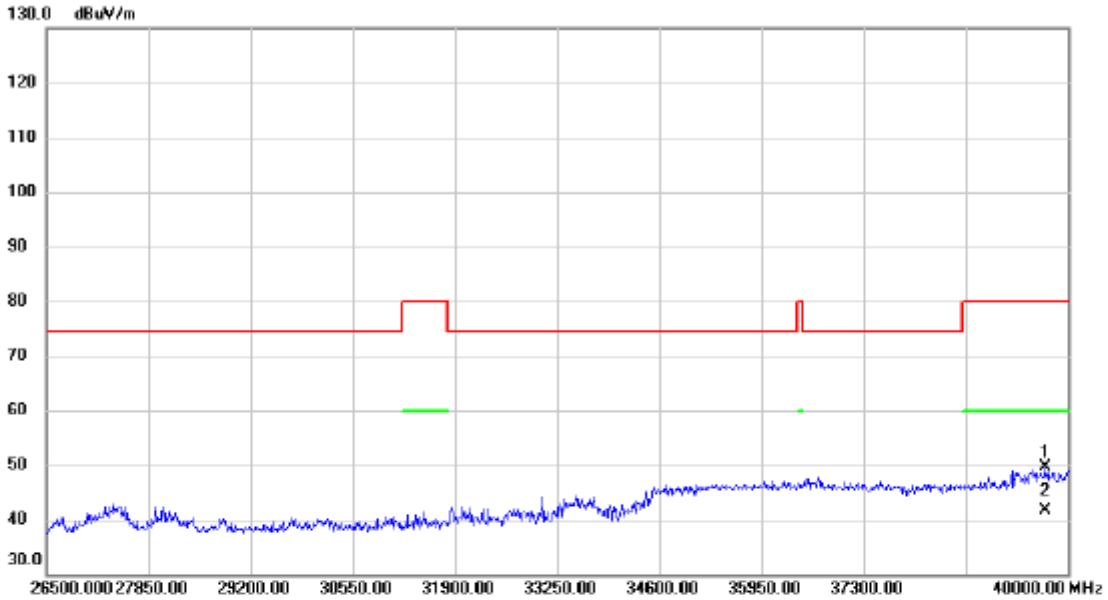

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39696.250	34.22	15.43	49.65	80.00	-30.35	peak	
2	*	39696.250	26.14	15.43	41.57	60.00	-18.43	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5745 MHz

Vertical

130 dBuV/m

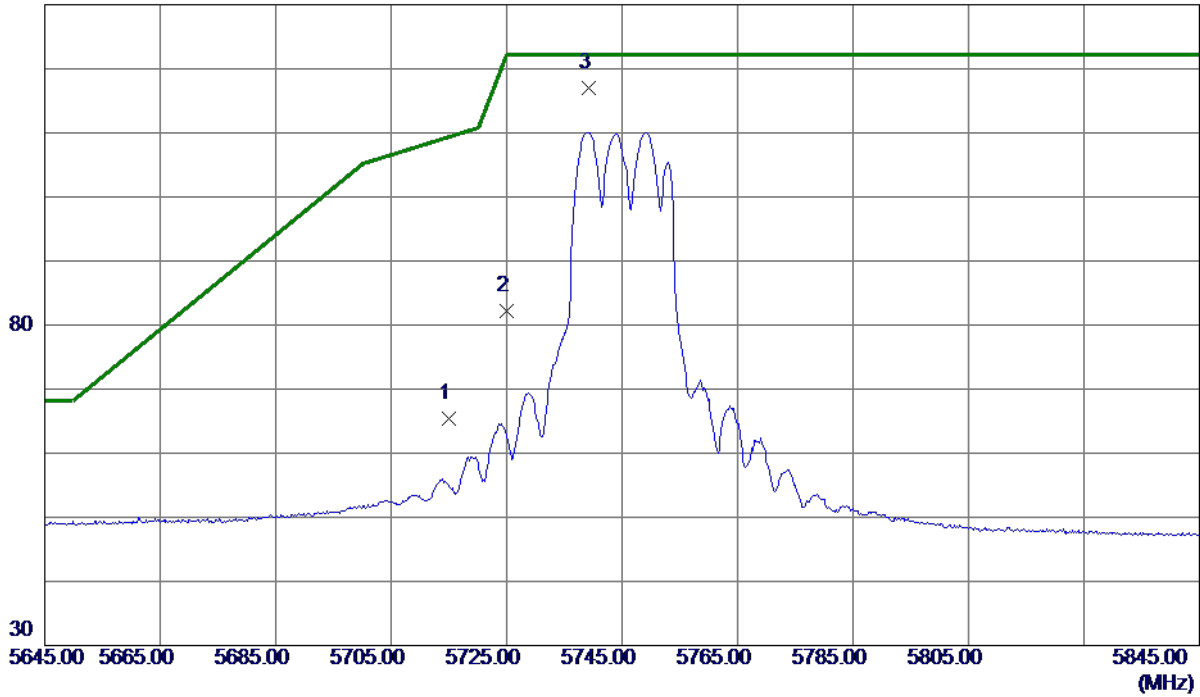

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	47.72	17.62	65.34	109.40	-44.06	Peak	
2	5725.0000	64.48	17.65	82.13	122.20	-40.07	Peak	
3 *	5739.2000	99.21	17.70	116.91	122.20	-5.29	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5745 MHz

Horizontal

130 dBuV/m

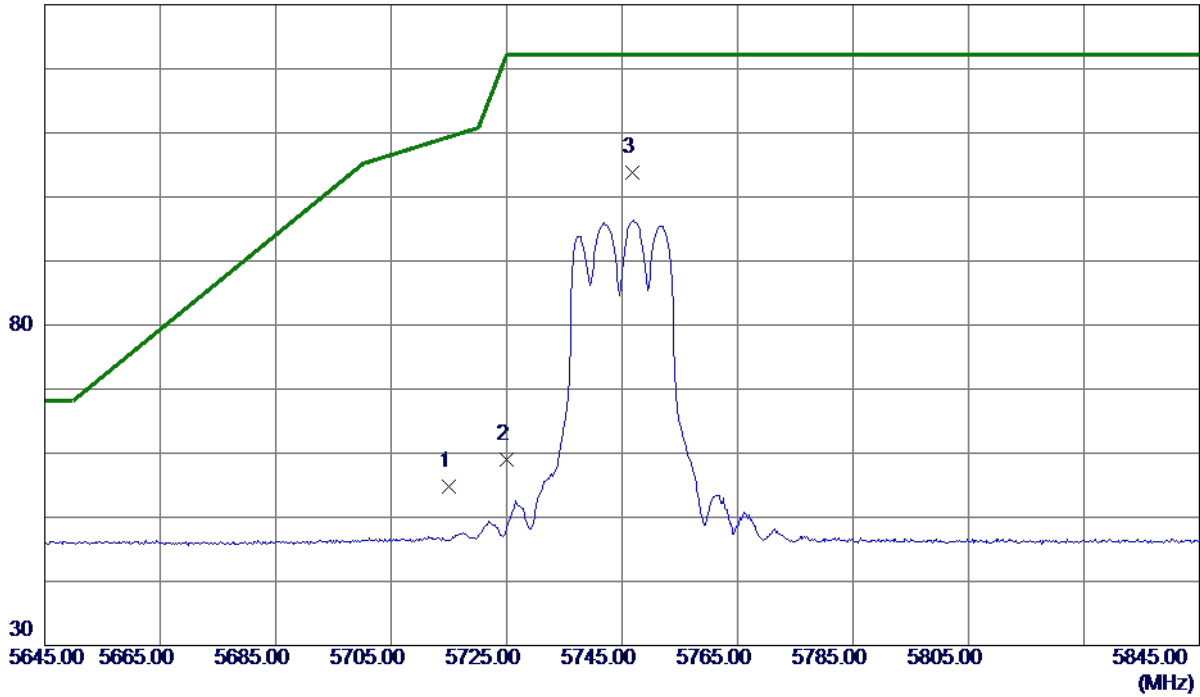

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	37.27	17.62	54.89	109.40	-54.51	Peak	
2	5725.0000	41.41	17.65	59.06	122.20	-63.14	Peak	
3 *	5746.8000	86.16	17.72	103.88	122.20	-18.32	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5785 MHz

Vertical

130 dBuV/m

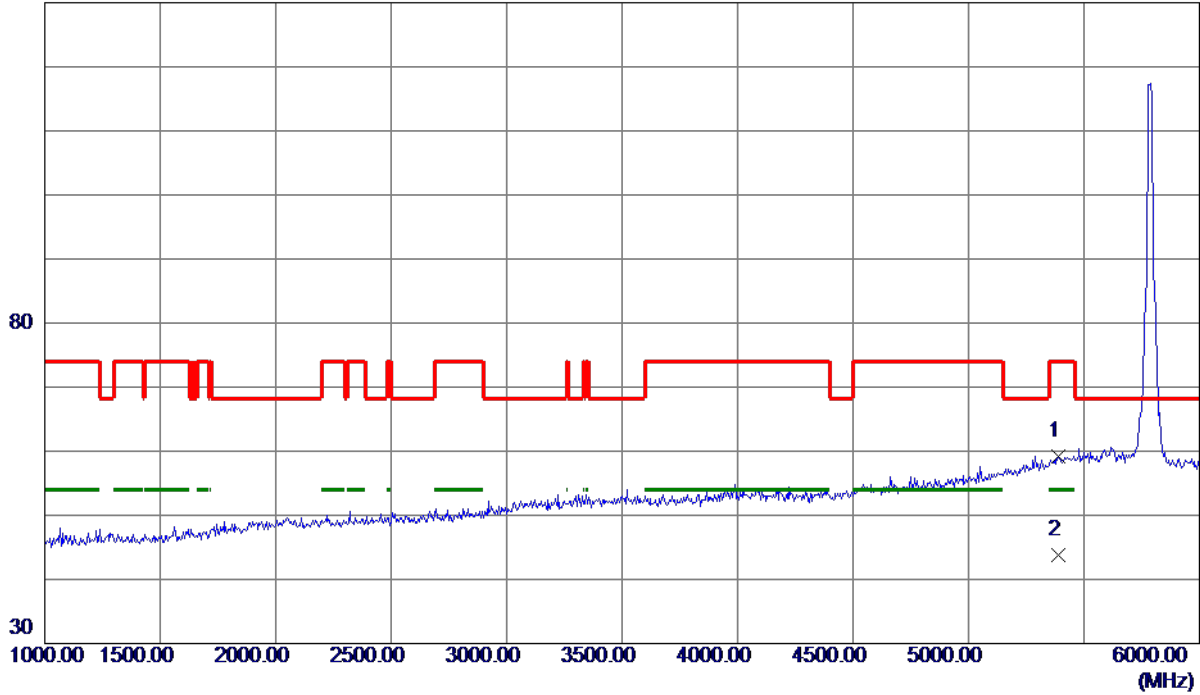

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5390.0000	42.42	16.72	59.14	74.00	-14.86	Peak	
2 *	5390.0000	27.04	16.72	43.76	54.00	-10.24	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5785 MHz

Vertical

130 dBuV/m

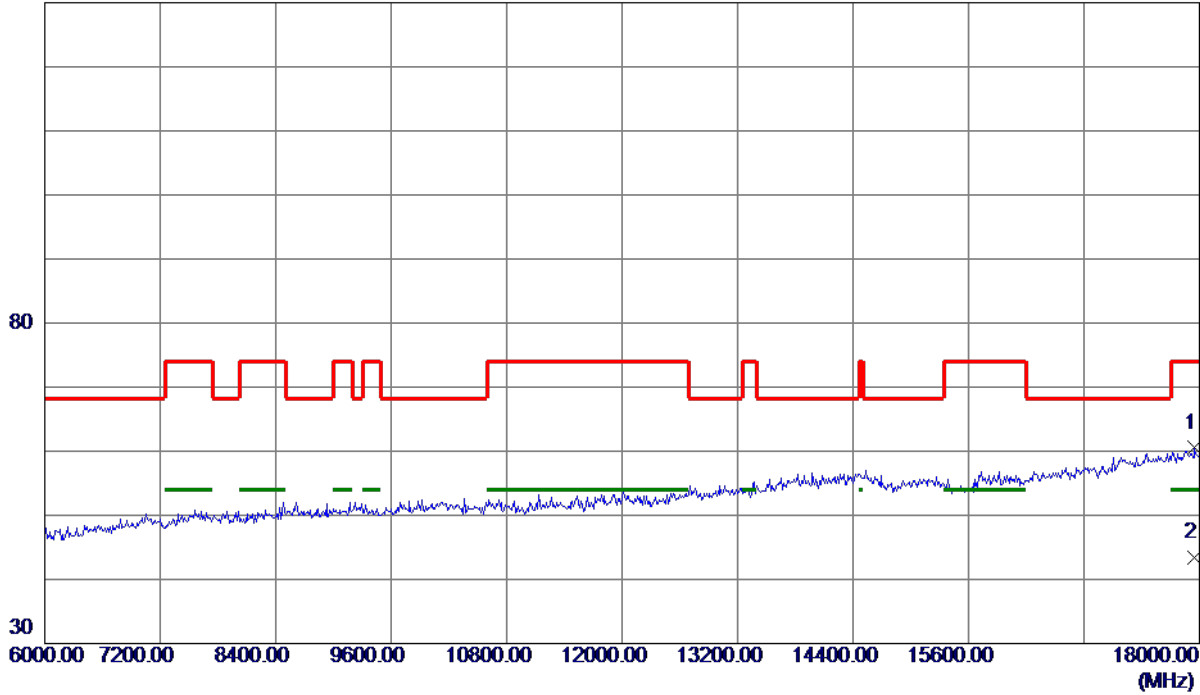

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17952.0000	38.23	22.27	60.50	74.00	-13.50	Peak	
2 *	17952.0000	21.10	22.27	43.37	54.00	-10.63	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5785 MHz

Vertical

130 dBuV/m

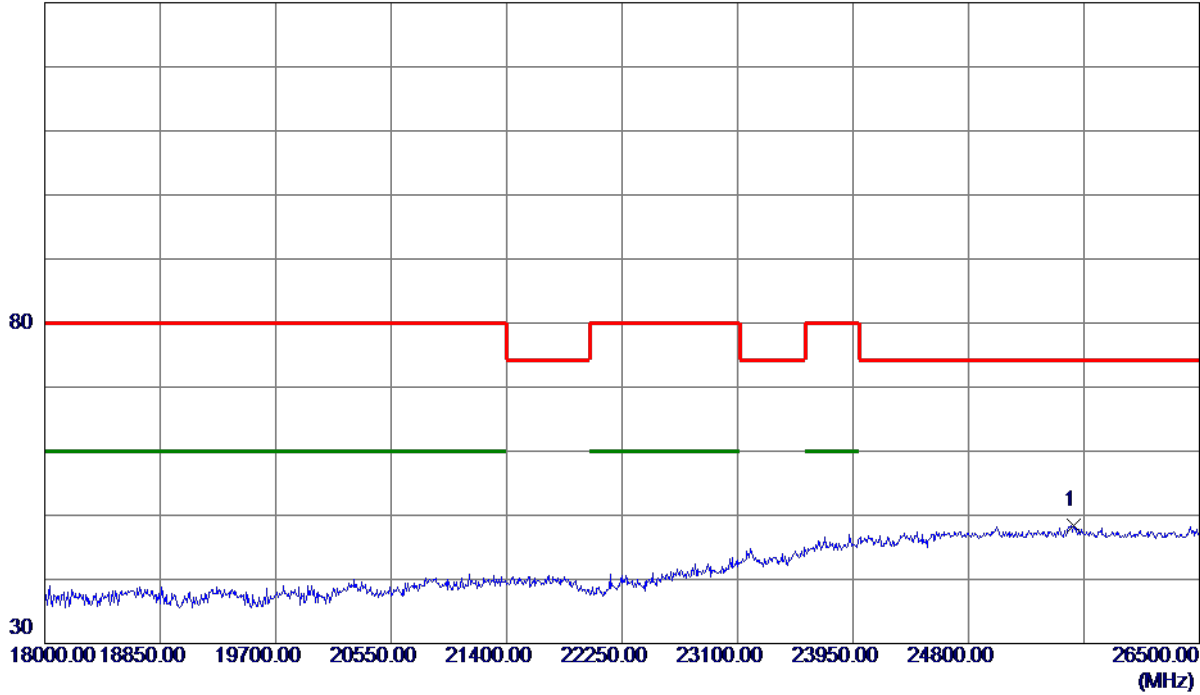


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25577.7500	28.37	20.02	48.39	74.30	-25.91	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5785 MHz

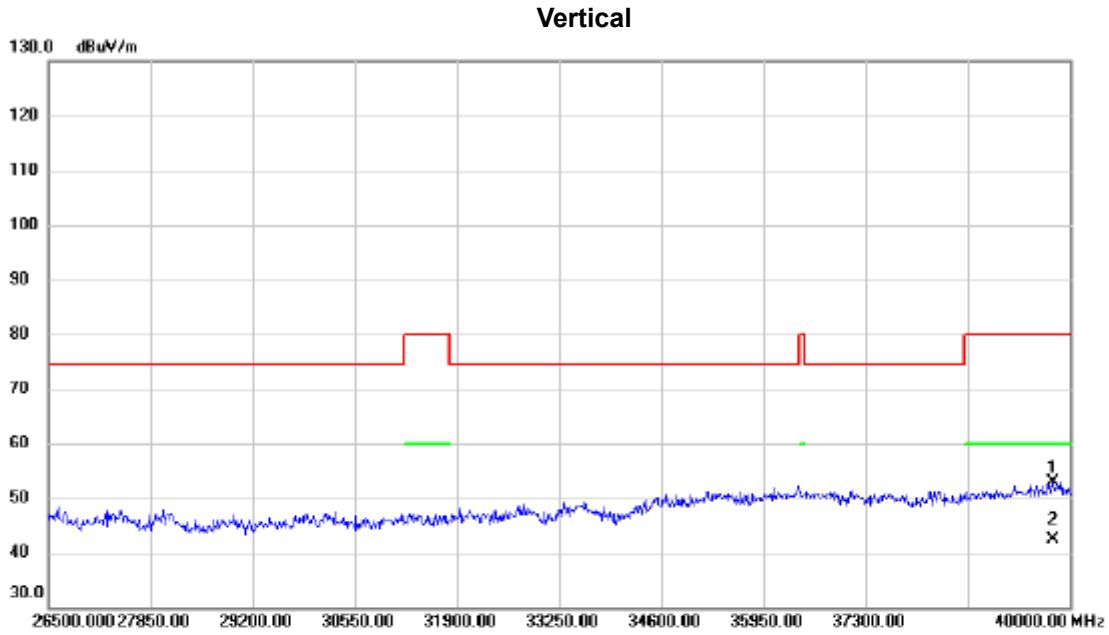

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39777.250	37.28	15.48	52.76	80.00	-27.24	peak	
2	*	39777.250	26.85	15.48	42.33	60.00	-17.67	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5785 MHz

Horizontal

130 dBuV/m

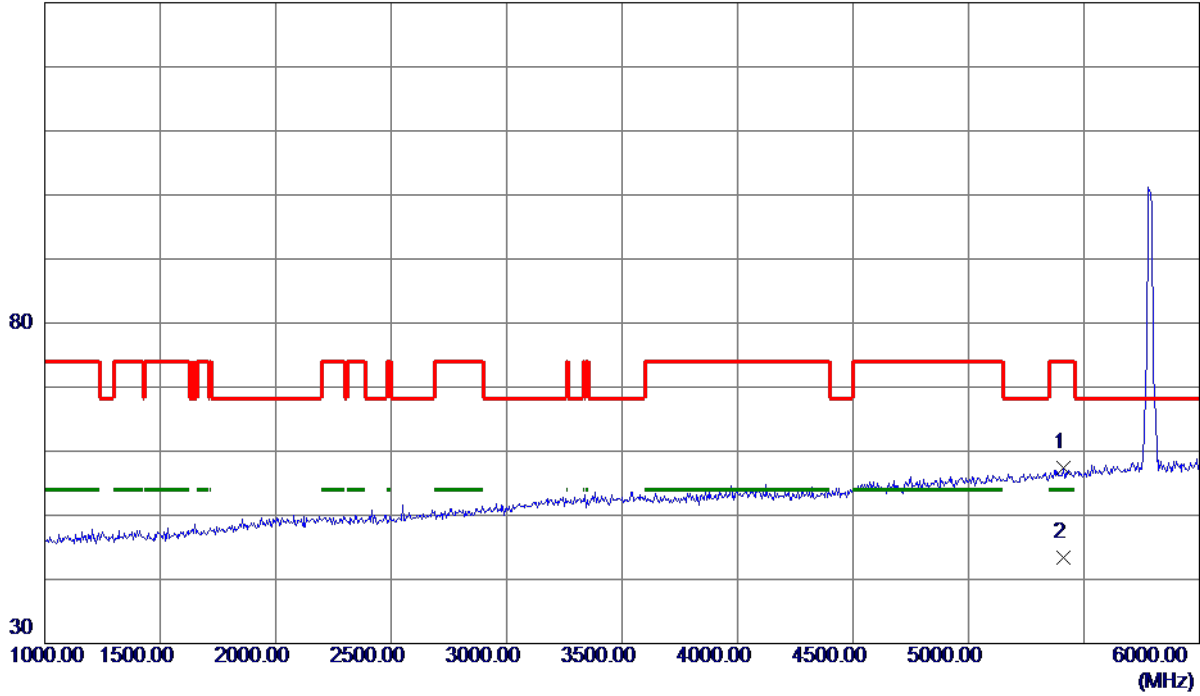


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5410.0000	40.71	16.77	57.48	74.00	-16.52	Peak	
2 *	5410.0000	26.64	16.77	43.41	54.00	-10.59	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5785 MHz

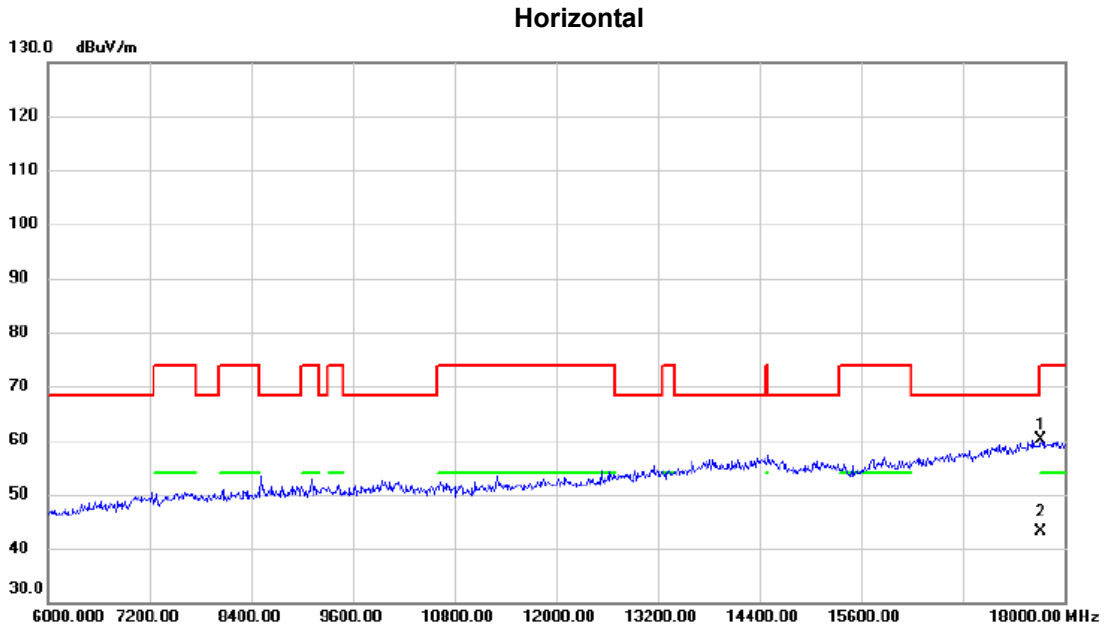

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		17712.000	38.13	22.12	60.25	74.00	-13.75	peak	
2	*	17712.000	21.08	22.12	43.20	54.00	-10.80	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5785 MHz

Horizontal

130 dBuV/m

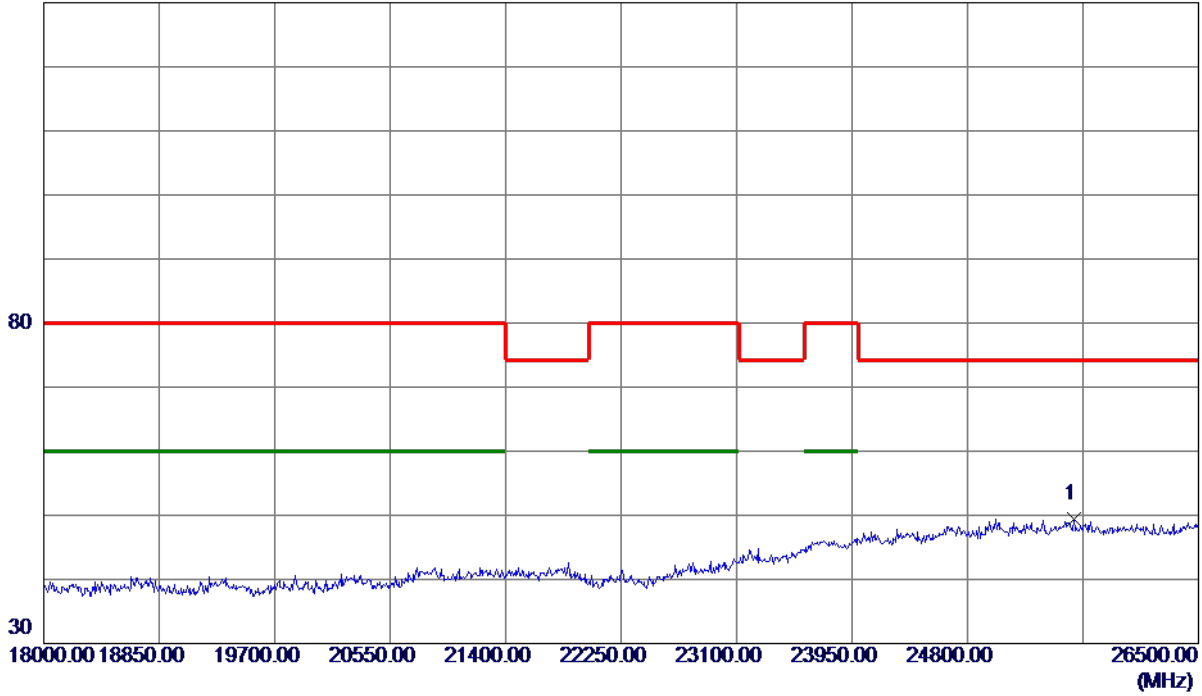


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25582.0000	29.46	20.02	49.48	74.30	-24.82	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5785 MHz

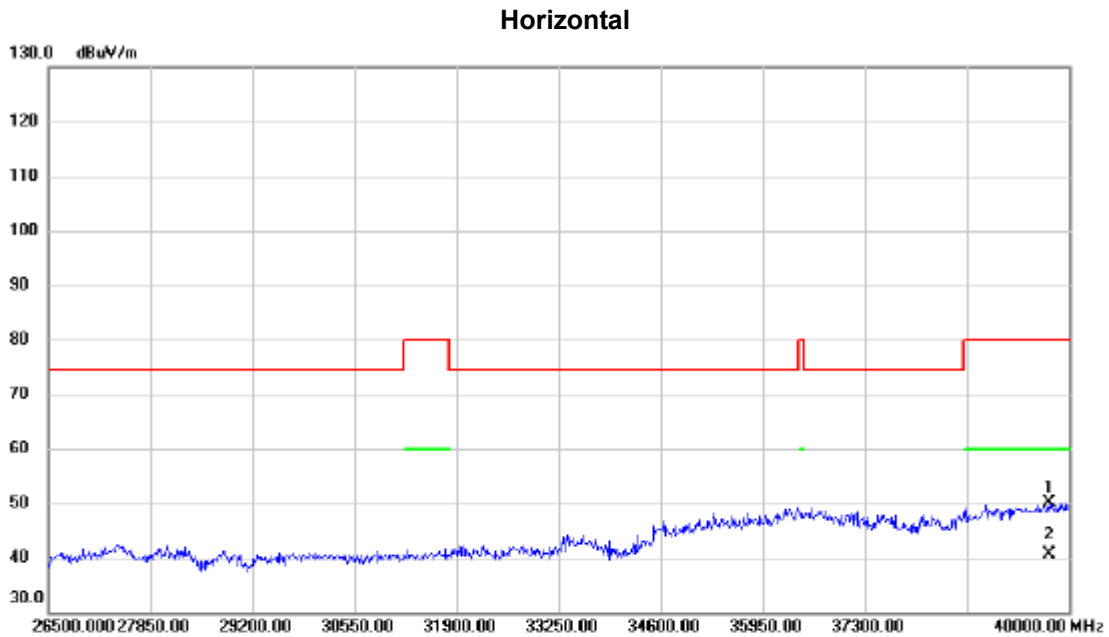

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39730.000	34.60	15.45	50.05	80.00	-29.95	peak	
2	*	39730.000	25.28	15.45	40.73	60.00	-19.27	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5825 MHz

Vertical

130 dBuV/m

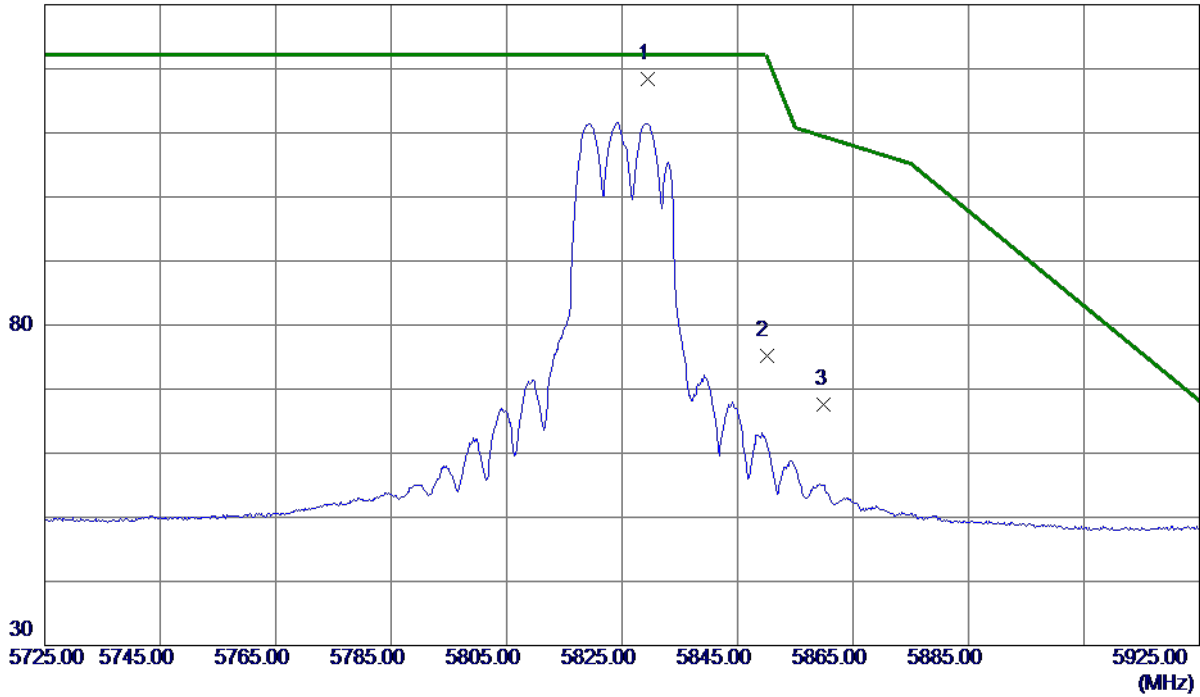

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5829.4000	100.42	17.96	118.38	122.20	-3.82	Peak	No Limit
2	5850.0000	57.17	18.02	75.19	122.20	-47.01	Peak	
3	5860.0000	49.50	18.05	67.55	109.40	-41.85	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX A Mode 5825 MHz

Horizontal

130 dBuV/m

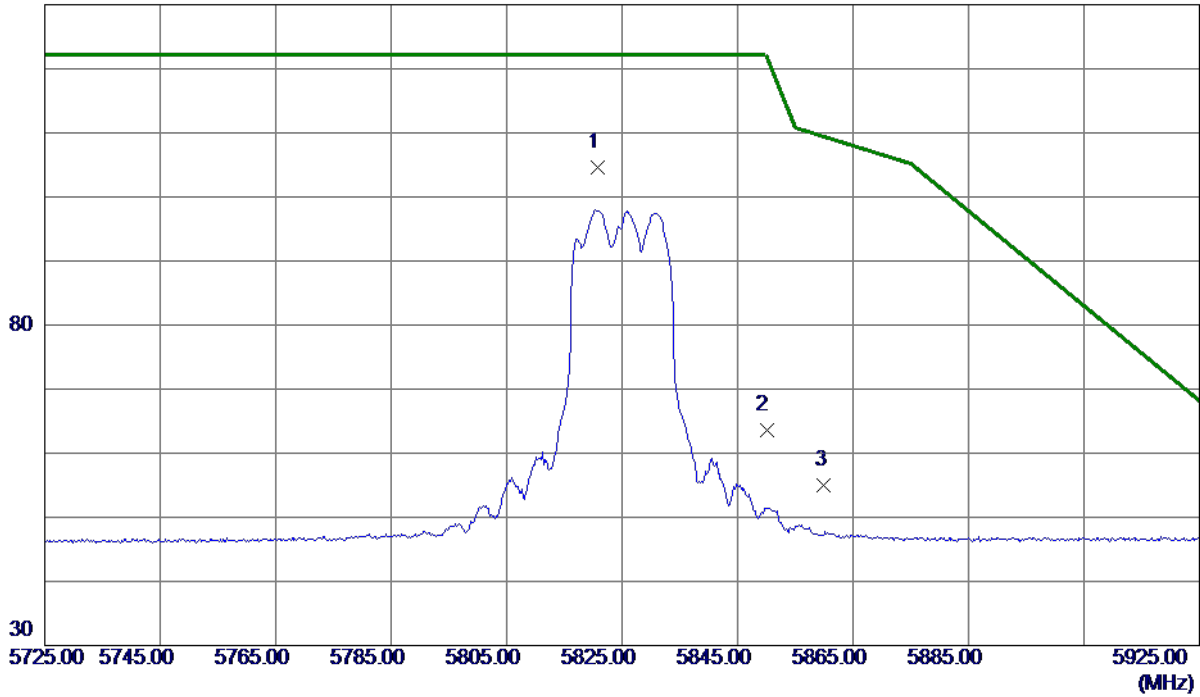

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5820.8000	86.63	17.94	104.57	122.20	-17.63	Peak	No Limit
2	5850.0000	45.51	18.02	63.53	122.20	-58.67	Peak	
3	5860.0000	36.97	18.05	55.02	109.40	-54.38	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5745 MHz

Vertical

130 dBuV/m

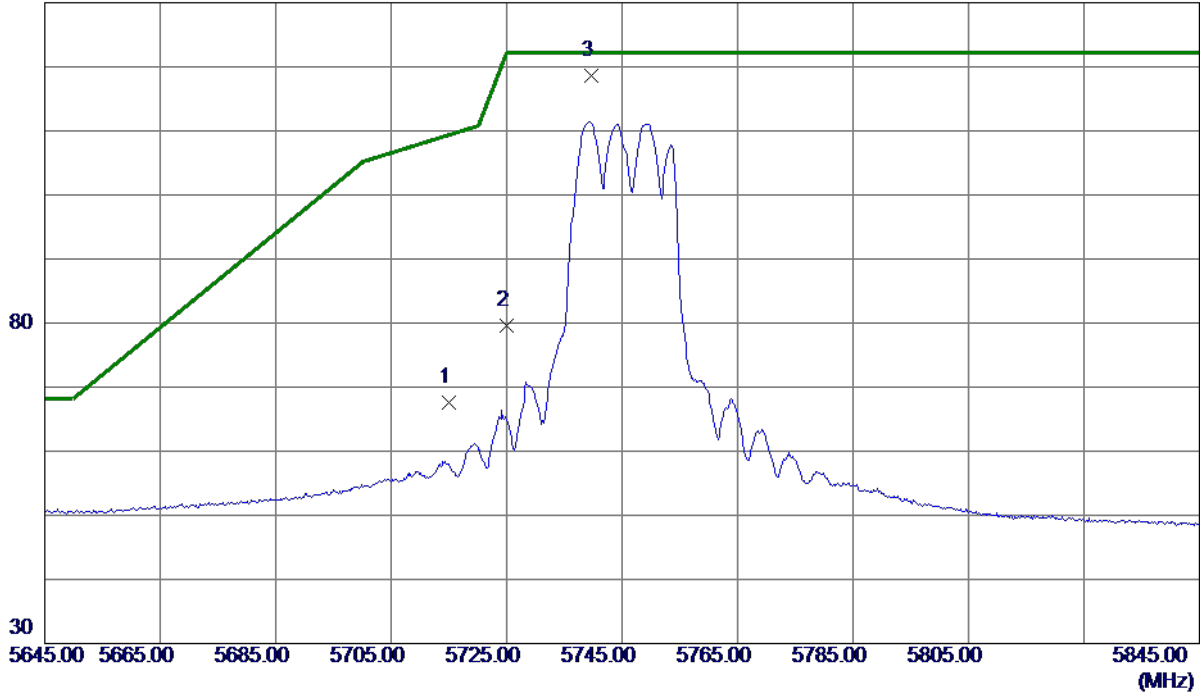

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	49.94	17.62	67.56	109.40	-41.84	Peak	
2	5725.0000	61.94	17.65	79.59	122.20	-42.61	Peak	
3 *	5739.6000	100.96	17.70	118.66	122.20	-3.54	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5745 MHz

Horizontal

130 dBuV/m

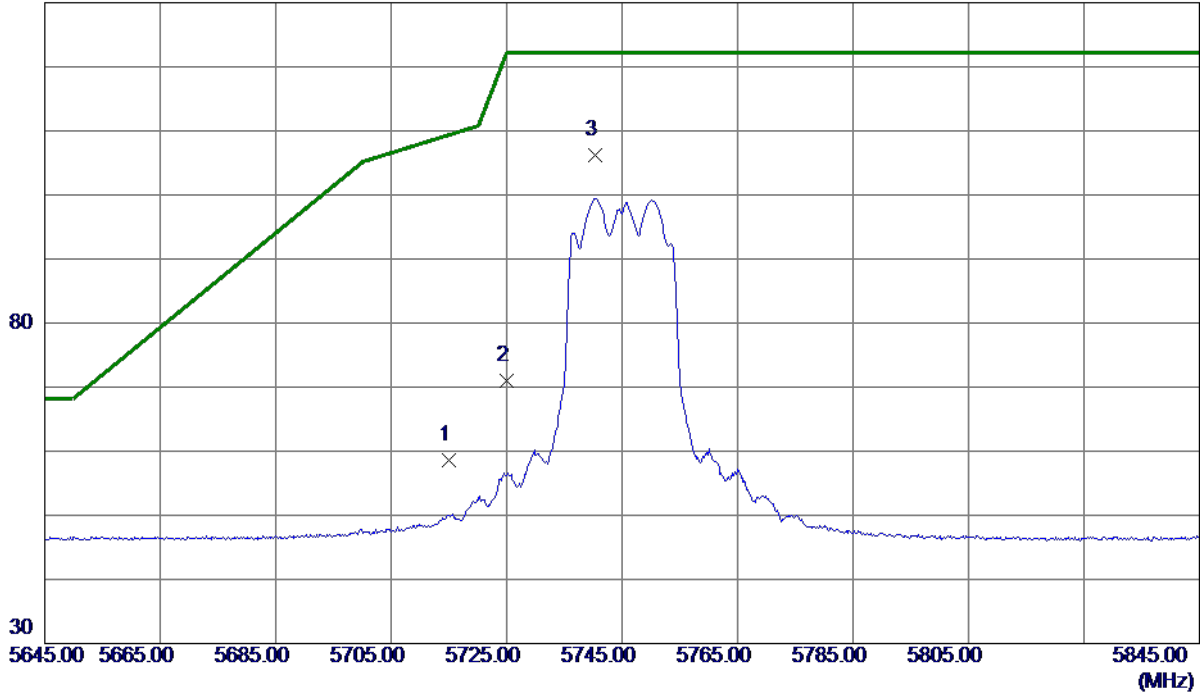

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	41.00	17.62	58.62	109.40	-50.78	Peak	
2	5725.0000	53.27	17.65	70.92	122.20	-51.28	Peak	
3 *	5740.4000	88.44	17.70	106.14	122.20	-16.06	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5785 MHz

Vertical

130 dBuV/m

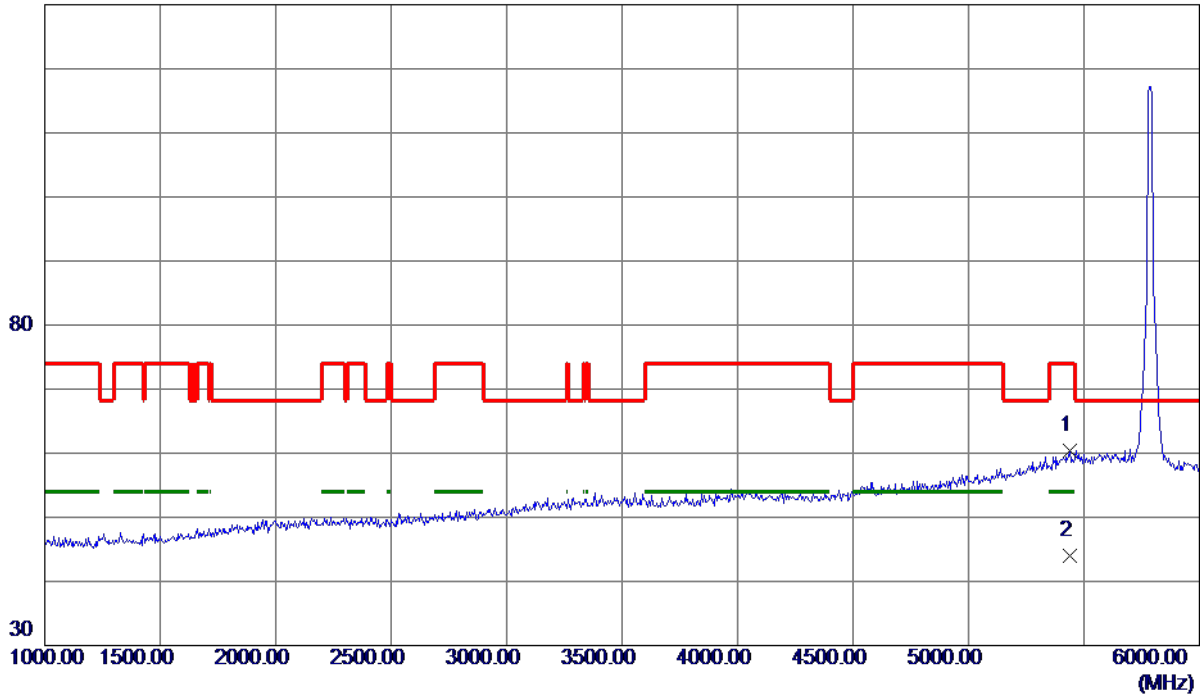

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5440.0000	43.48	16.84	60.32	74.00	-13.68	Peak	
2 *	5440.0000	27.11	16.84	43.95	54.00	-10.05	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5785 MHz

Vertical

130 dBuV/m

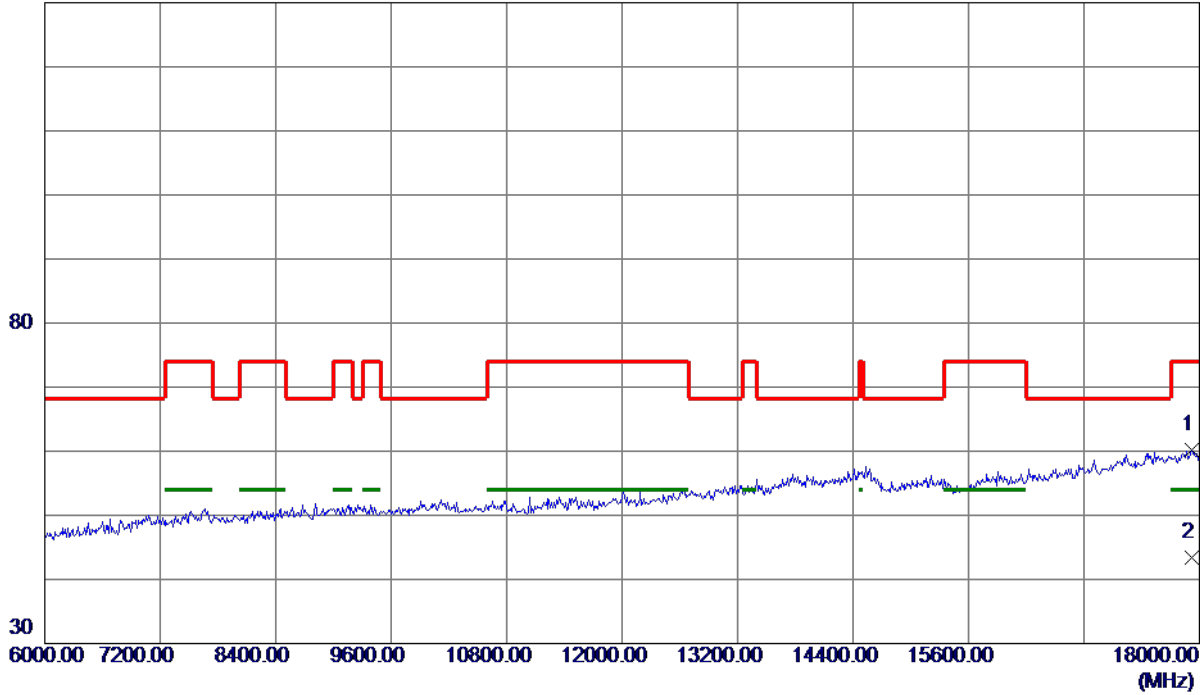

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17916.0000	37.95	22.25	60.20	74.00	-13.80	Peak	
2 *	17916.0000	21.09	22.25	43.34	54.00	-10.66	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5785 MHz

Vertical

130 dBuV/m

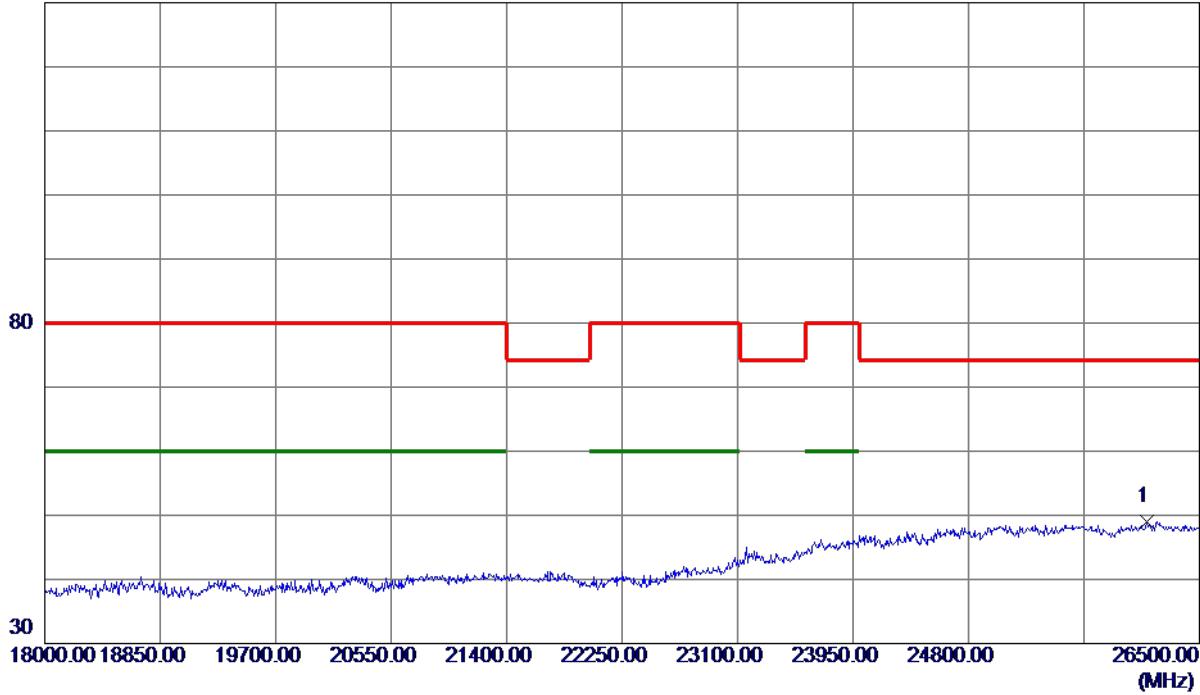


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	26109.0000	28.89	20.12	49.01	74.30	-25.29	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5785 MHz

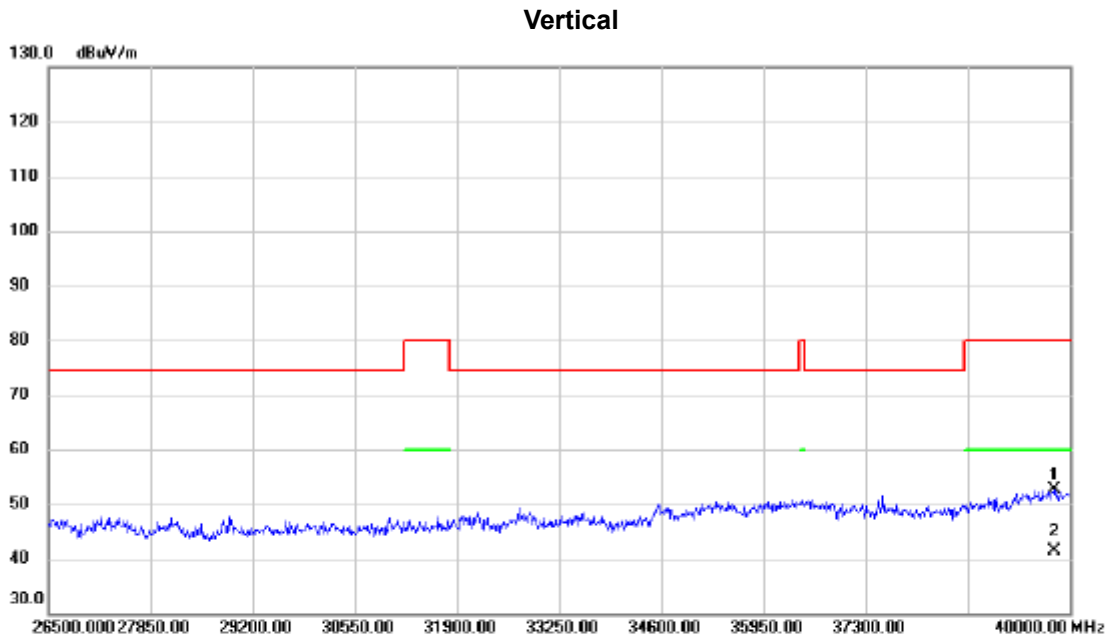

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39797.500	37.24	15.49	52.73	80.00	-27.27	peak	
2	*	39797.500	25.87	15.49	41.36	60.00	-18.64	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5785 MHz

Horizontal

130 dBuV/m

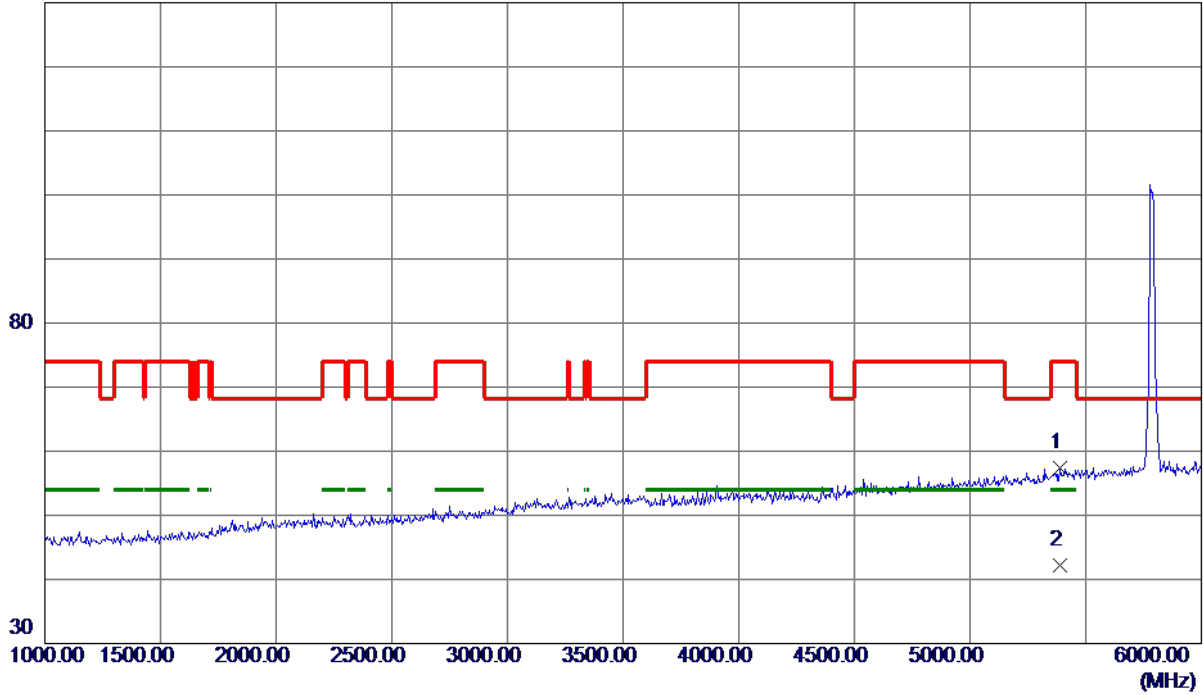

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5390.0000	40.59	16.72	57.31	74.00	-16.69	Peak	
2 *	5390.0000	25.42	16.72	42.14	54.00	-11.86	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5785 MHz

Horizontal

130 dBuV/m



No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17952.0000	38.47	22.27	60.74	74.00	-13.26	Peak	
2 *	17952.0000	21.53	22.27	43.80	54.00	-10.20	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5785 MHz

Horizontal

130 dBuV/m

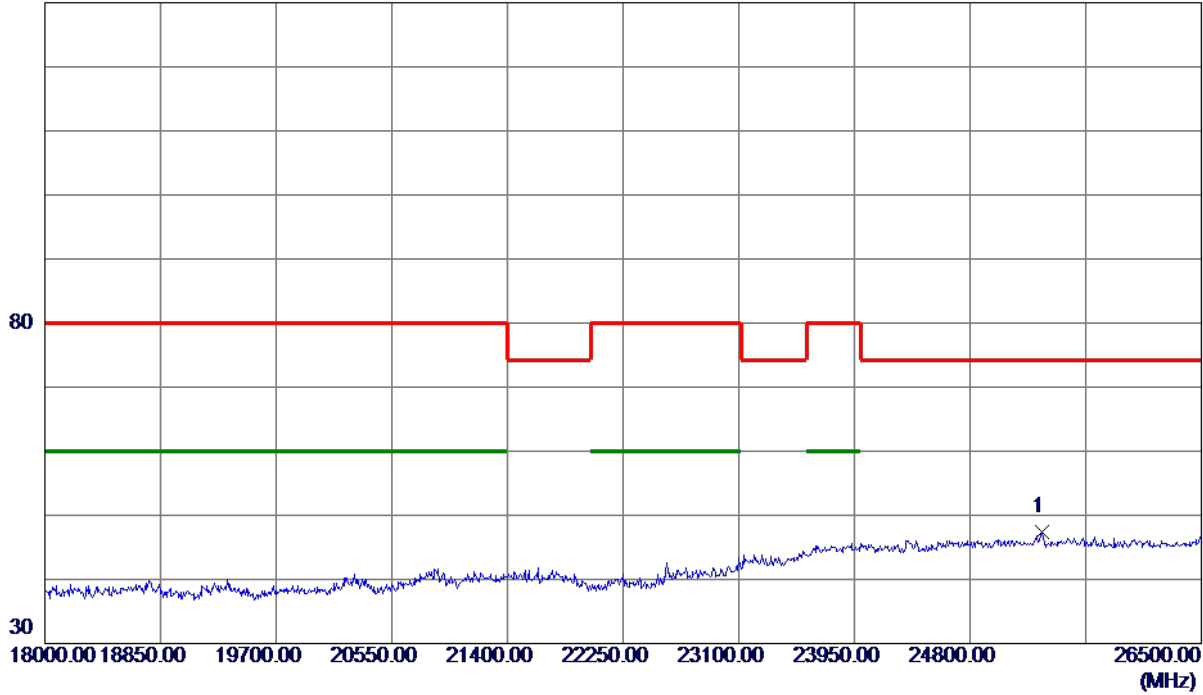


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25327.0000	27.43	20.03	47.46	74.30	-26.84	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5785 MHz

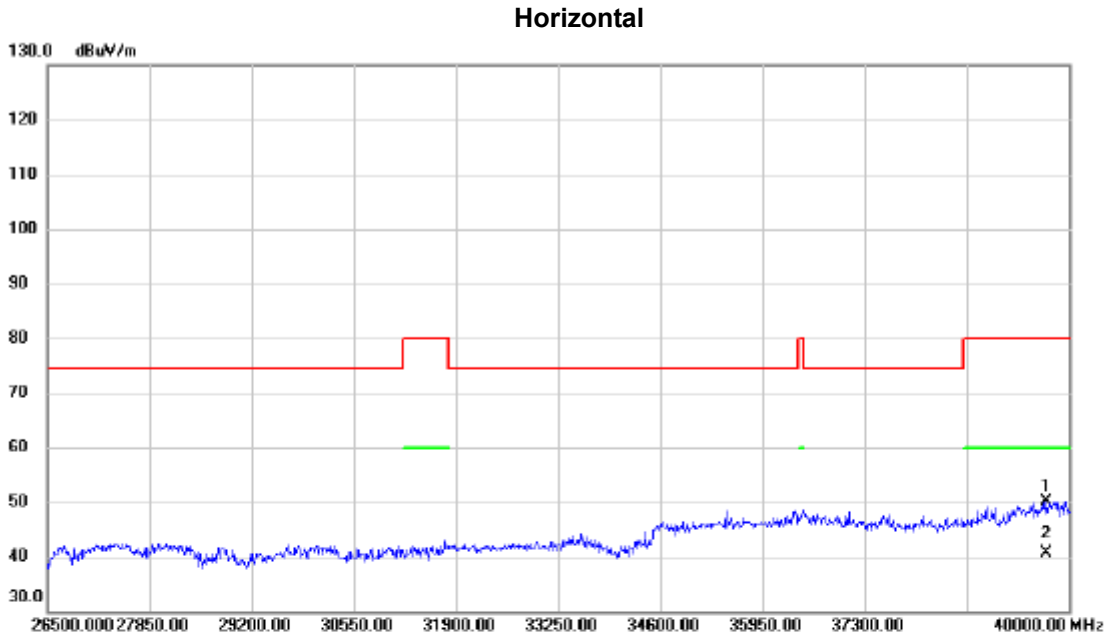


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39696.250	34.81	15.43	50.24	80.00	-29.76	peak	
2	*	39696.250	25.13	15.43	40.56	60.00	-19.44	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5825 MHz

Vertical

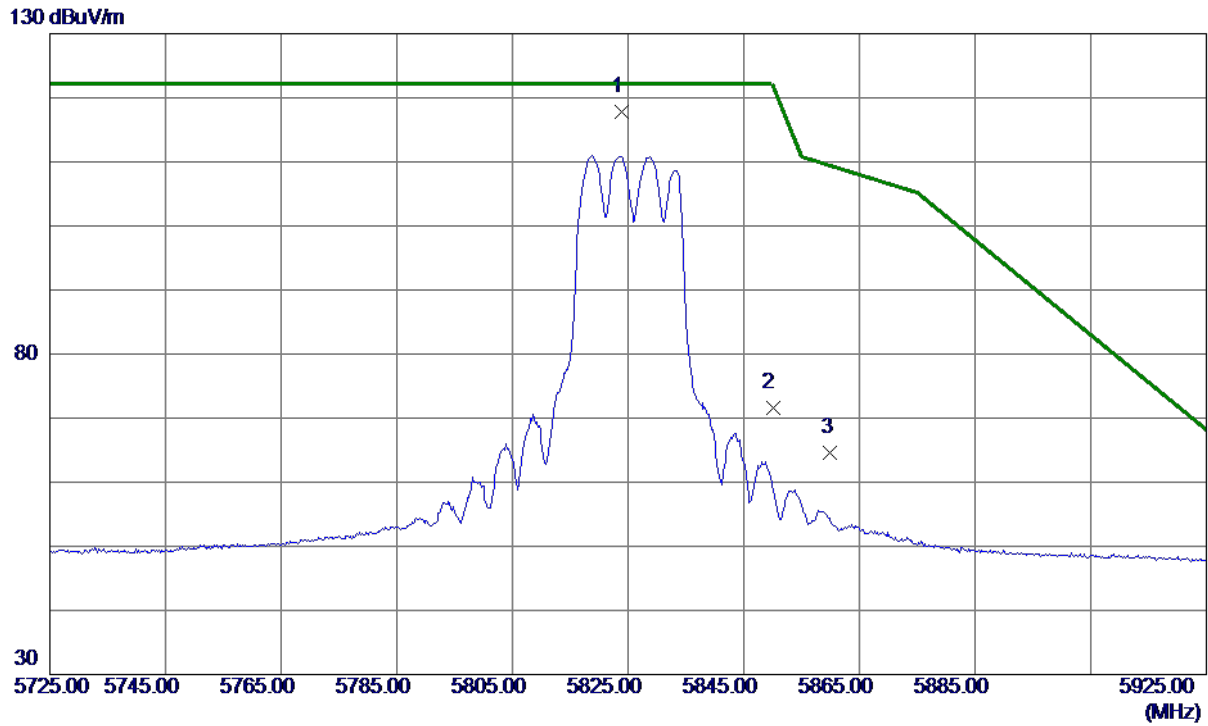

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5823.8000	99.75	17.95	117.70	122.20	-4.50	Peak	No Limit
2	5850.0000	53.53	18.02	71.55	122.20	-50.65	Peak	
3	5860.0000	46.47	18.05	64.52	109.40	-44.88	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT20) Mode 5825 MHz

Horizontal

130 dBuV/m

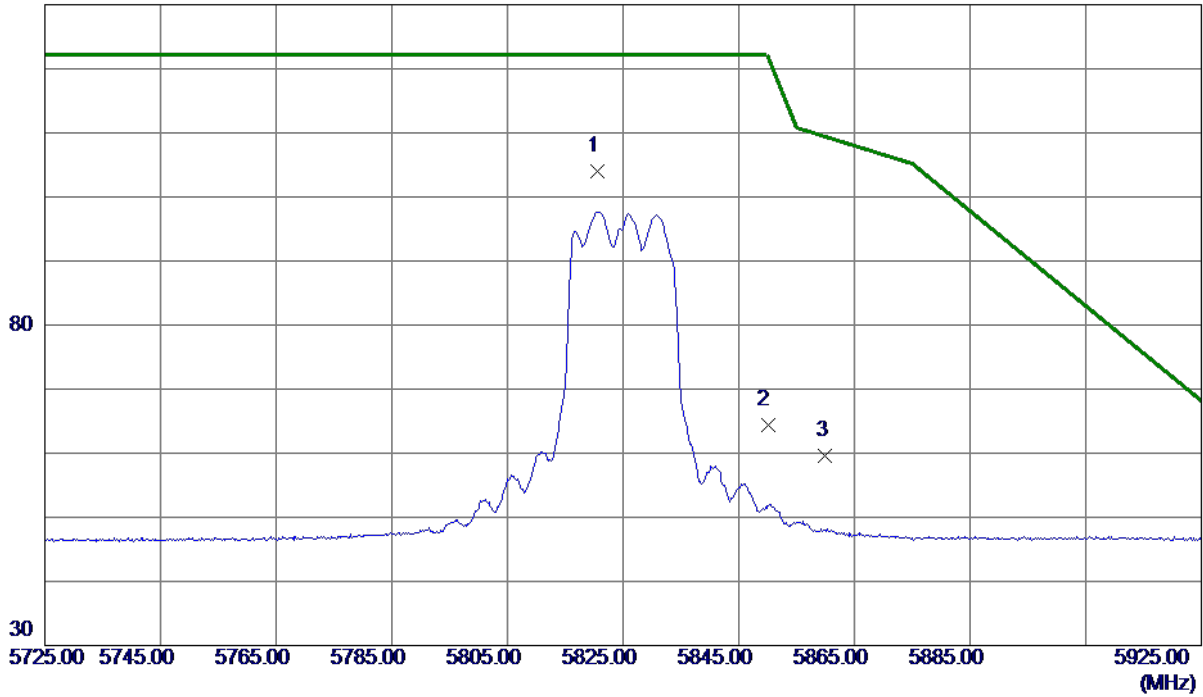


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5820.6000	86.15	17.94	104.09	122.20	-18.11	Peak	No Limit
2	5850.0000	46.38	18.02	64.40	122.20	-57.80	Peak	
3	5860.0000	41.64	18.05	59.69	109.40	-49.71	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5755 MHz

Vertical

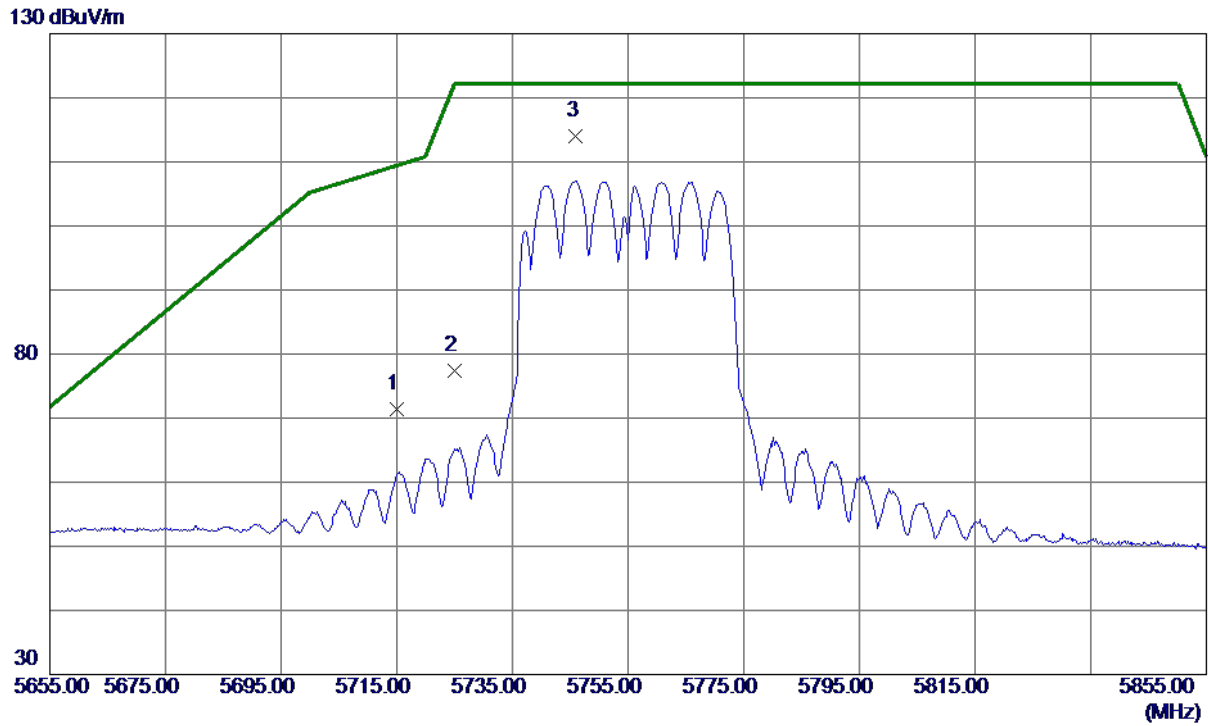


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	53.80	17.62	71.42	109.40	-37.98	Peak	
2	5725.0000	59.67	17.65	77.32	122.20	-44.88	Peak	
3 *	5746.0000	96.31	17.72	114.03	122.20	-8.17	Peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5755 MHz

Horizontal

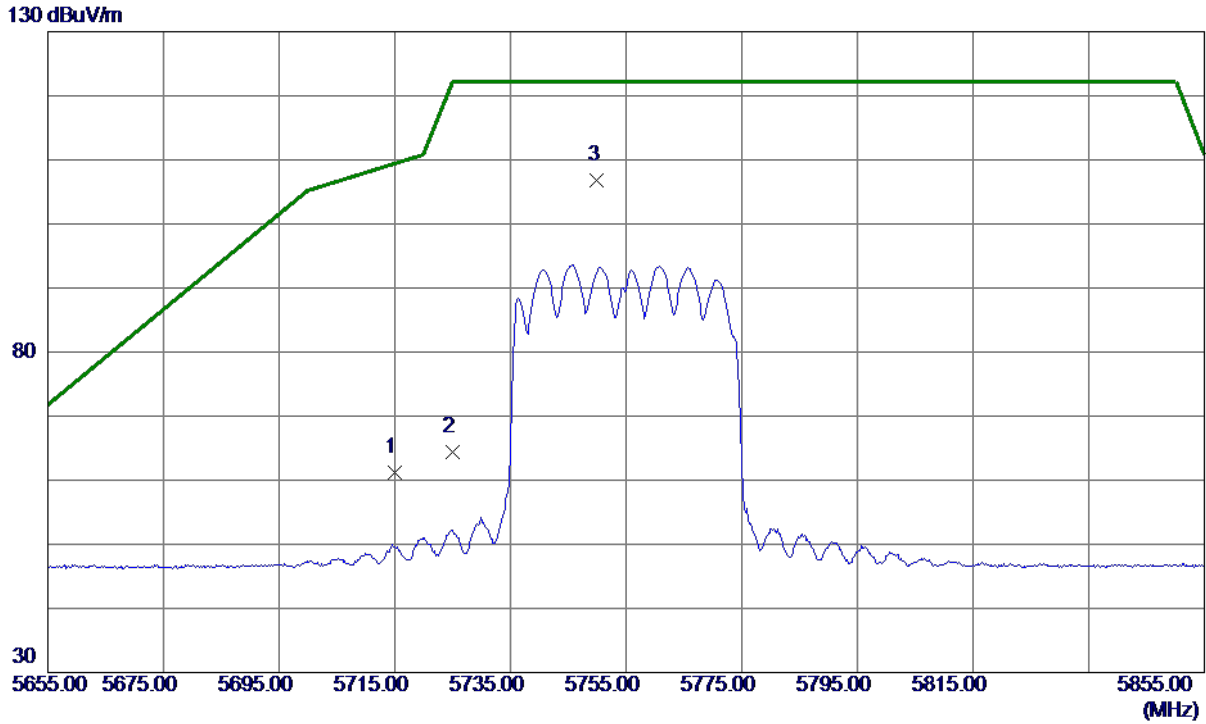

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	43.49	17.62	61.11	109.40	-48.29	Peak	
2	5725.0000	46.83	17.65	64.48	122.20	-57.72	Peak	
3 *	5750.0000	89.12	17.73	106.85	122.20	-15.35	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5795 MHz

Vertical

130 dBuV/m

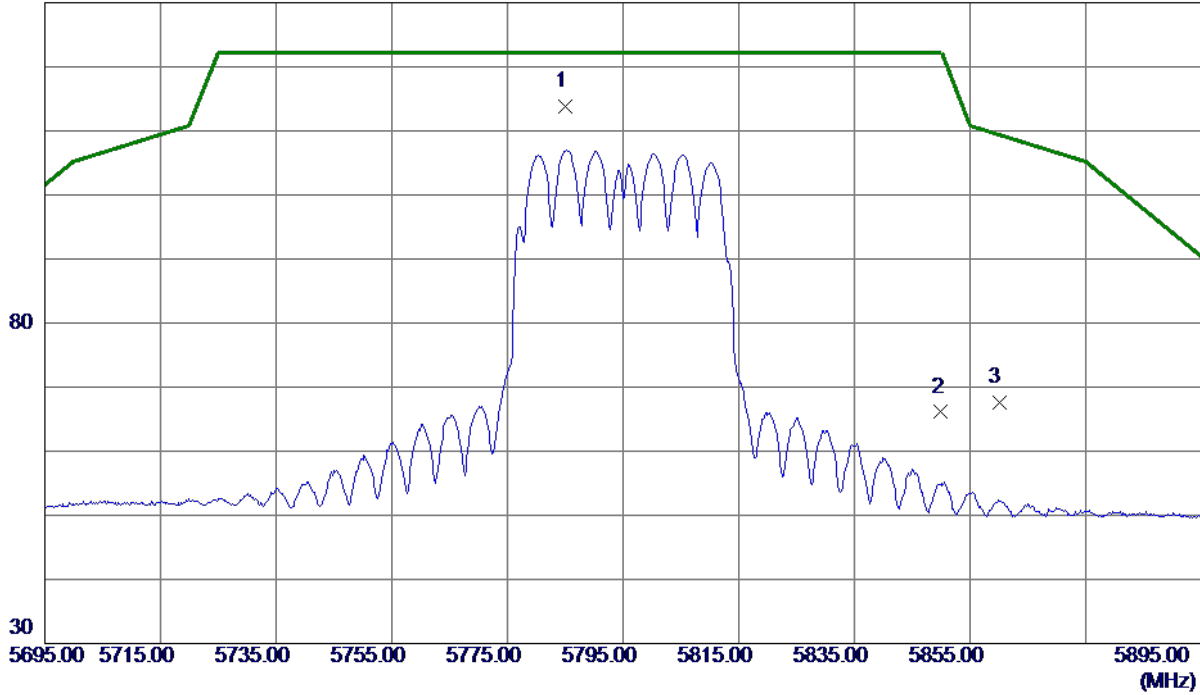

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5785.0000	95.93	17.83	113.76	122.20	-8.44	Peak	No Limit
2	5850.0000	48.08	18.02	66.10	122.20	-56.10	Peak	
3	5860.0000	49.48	18.05	67.53	109.40	-41.87	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5795 MHz

Vertical

130 dBuV/m

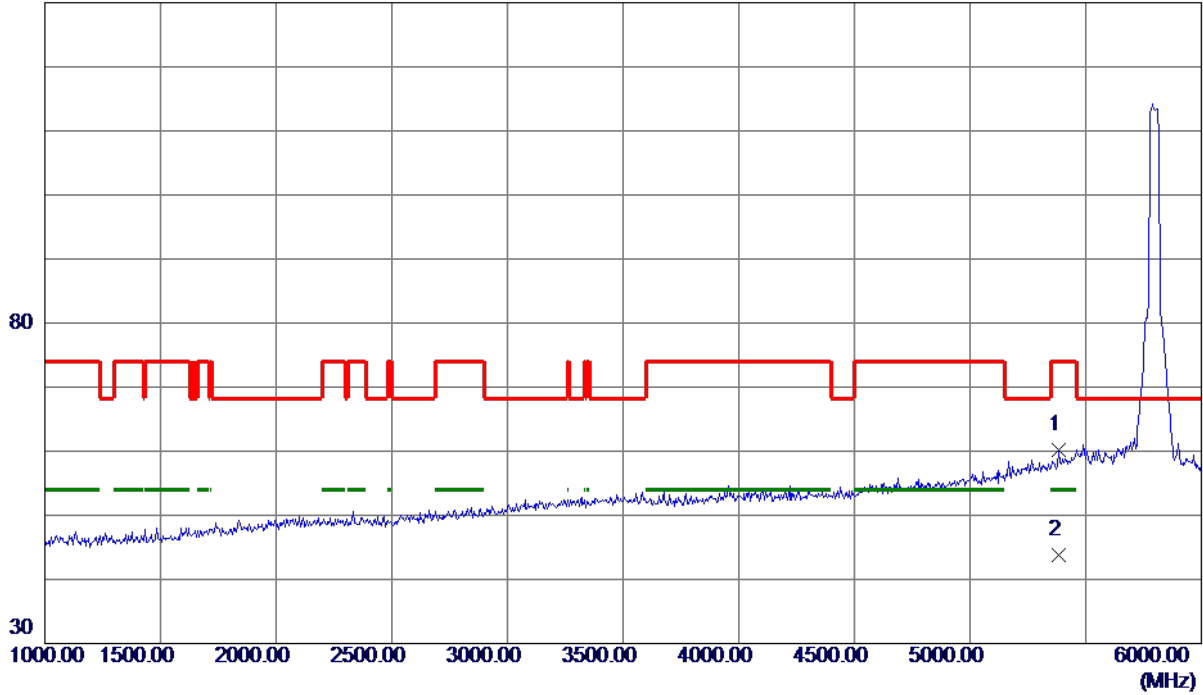

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5385.0000	43.55	16.71	60.26	74.00	-13.74	Peak	
2 *	5385.0000	27.03	16.71	43.74	54.00	-10.26	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5795 MHz

Vertical

130 dBuV/m

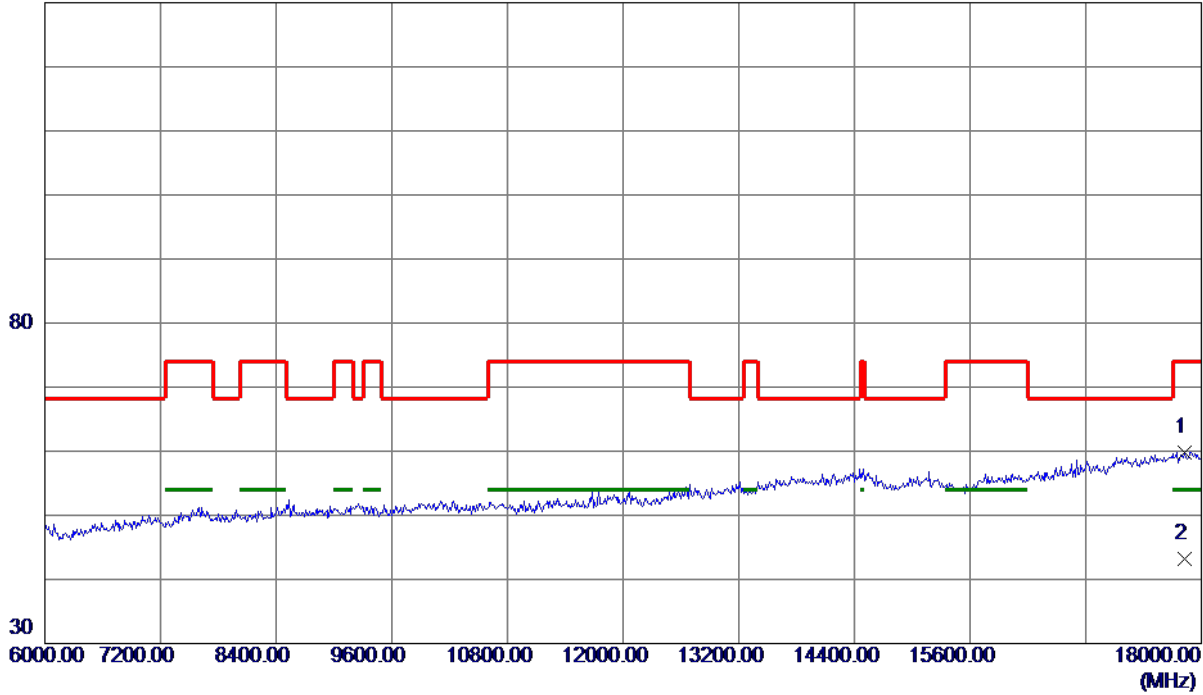

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17832.0000	37.69	22.20	59.89	74.00	-14.11	Peak	
2 *	17832.0000	21.03	22.20	43.23	54.00	-10.77	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5795 MHz

Vertical

130 dBuV/m

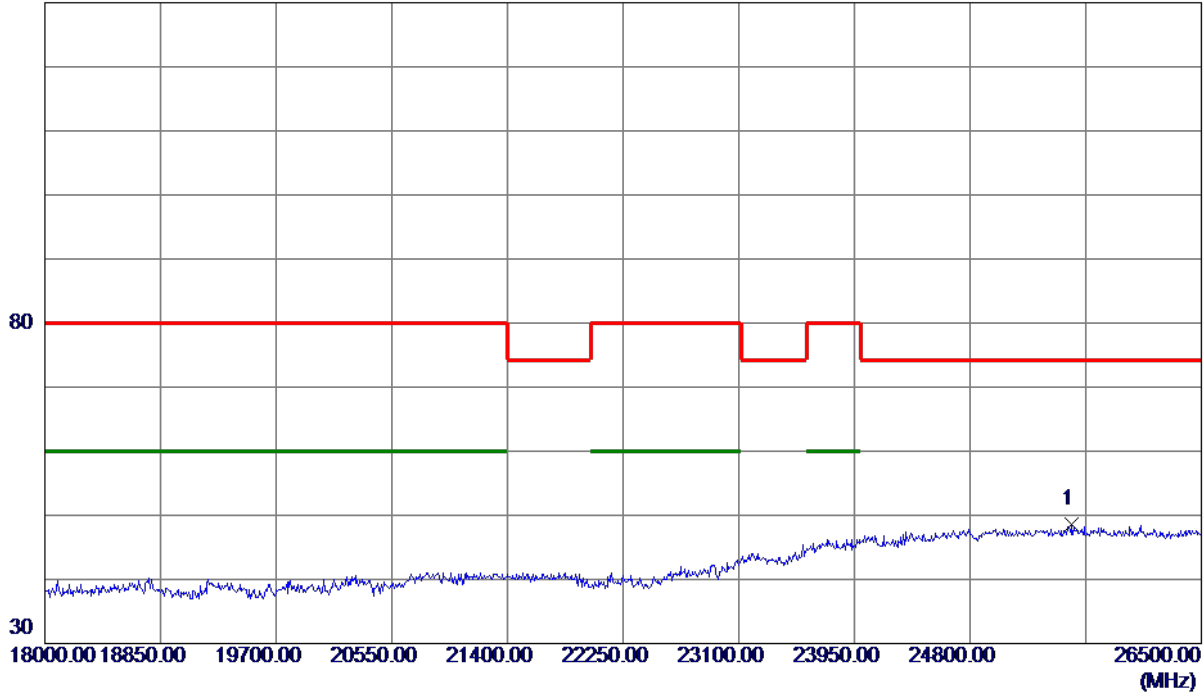


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25548.0000	28.62	20.02	48.64	74.30	-25.66	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5795 MHz

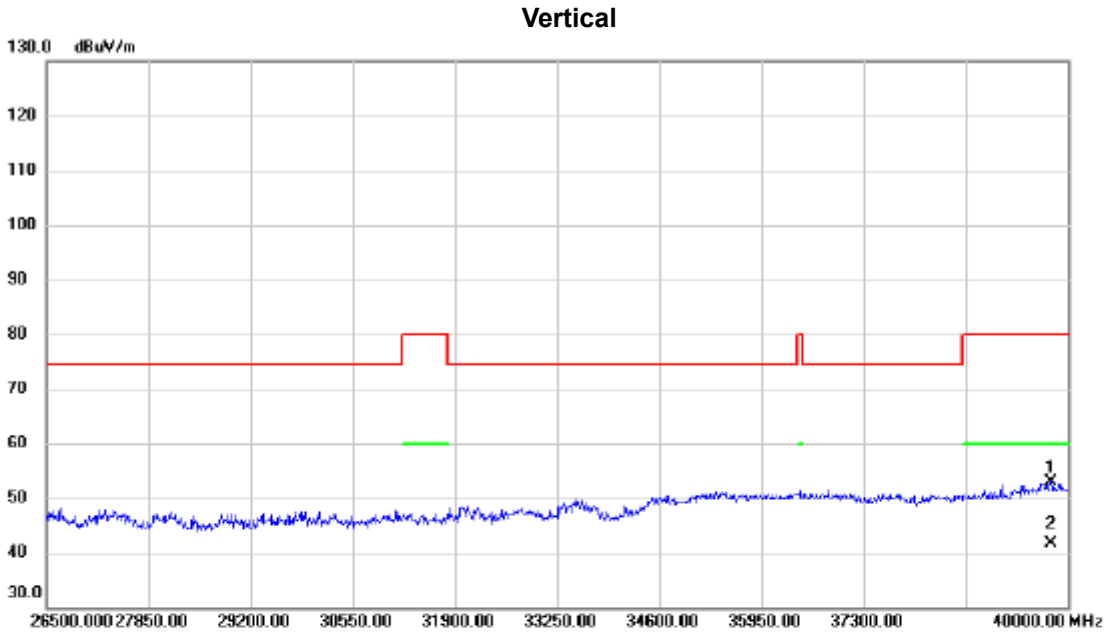

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39770.500	37.52	15.48	53.00	80.00	-27.00	peak	
2	*	39770.500	26.14	15.48	41.62	60.00	-18.38	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5795 MHz

Horizontal

130 dBuV/m

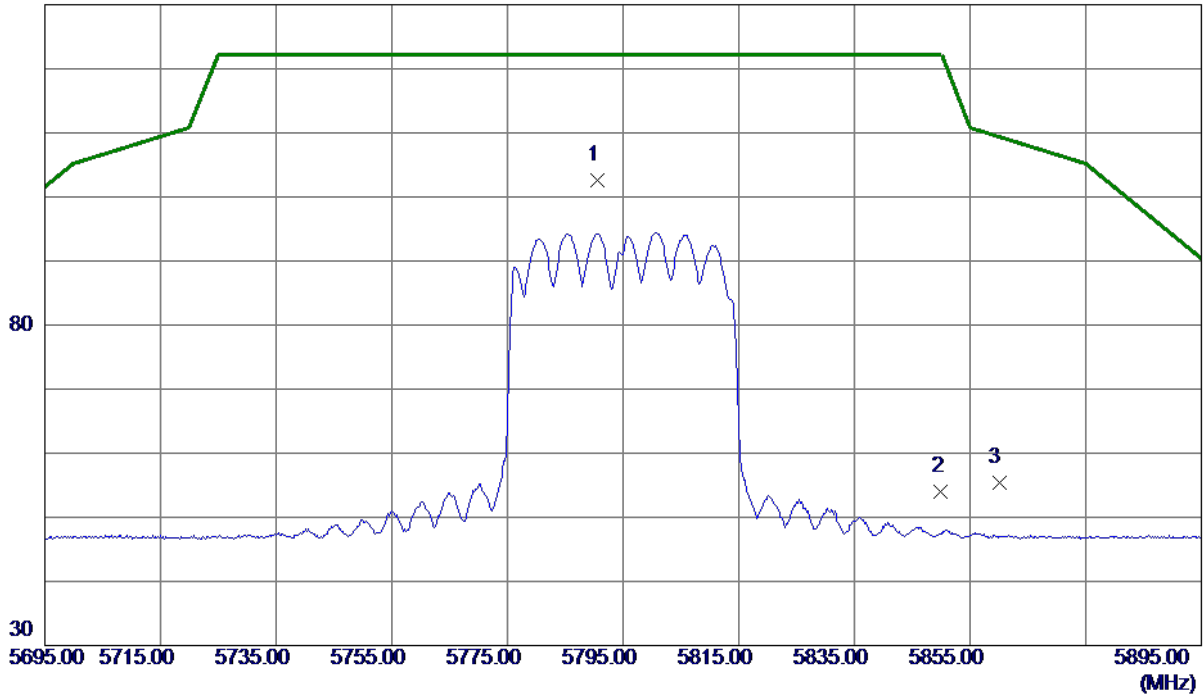

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5790.6000	84.74	17.85	102.59	122.20	-19.61	Peak	No Limit
2	5850.0000	35.93	18.02	53.95	122.20	-68.25	Peak	
3	5860.0000	37.32	18.05	55.37	109.40	-54.03	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5795 MHz

Horizontal

130 dBuV/m

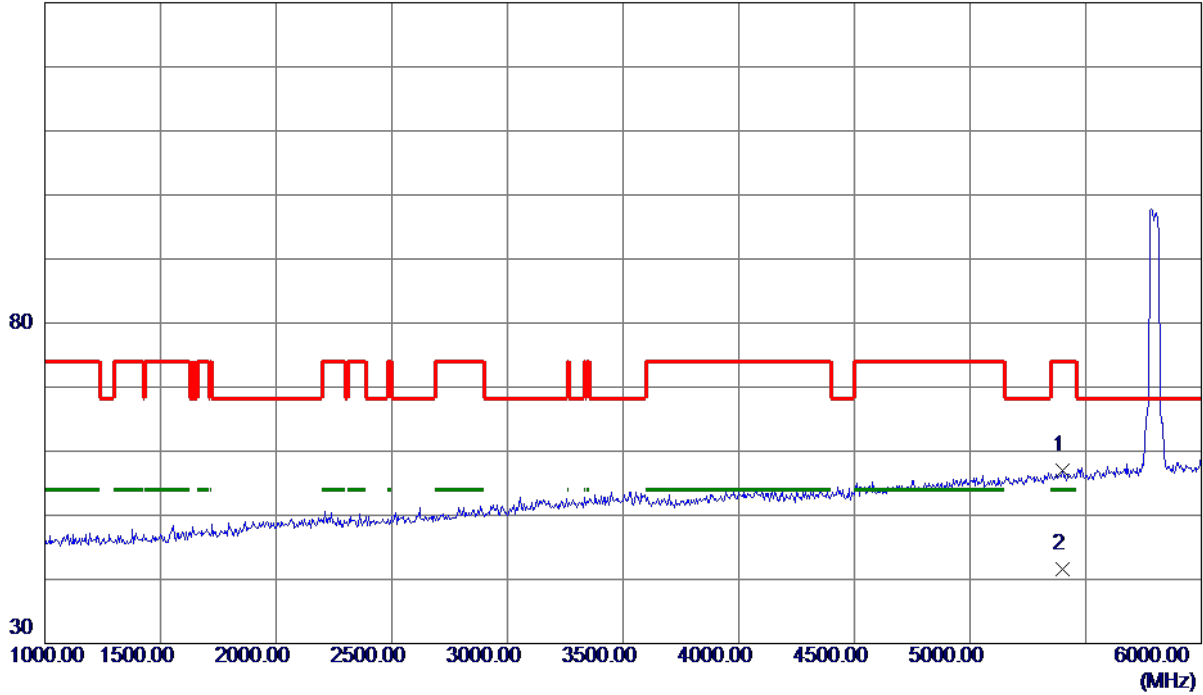

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5400.0000	40.21	16.75	56.96	74.00	-17.04	Peak	
2 *	5400.0000	24.89	16.75	41.64	54.00	-12.36	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5795 MHz

Horizontal

130 dBuV/m

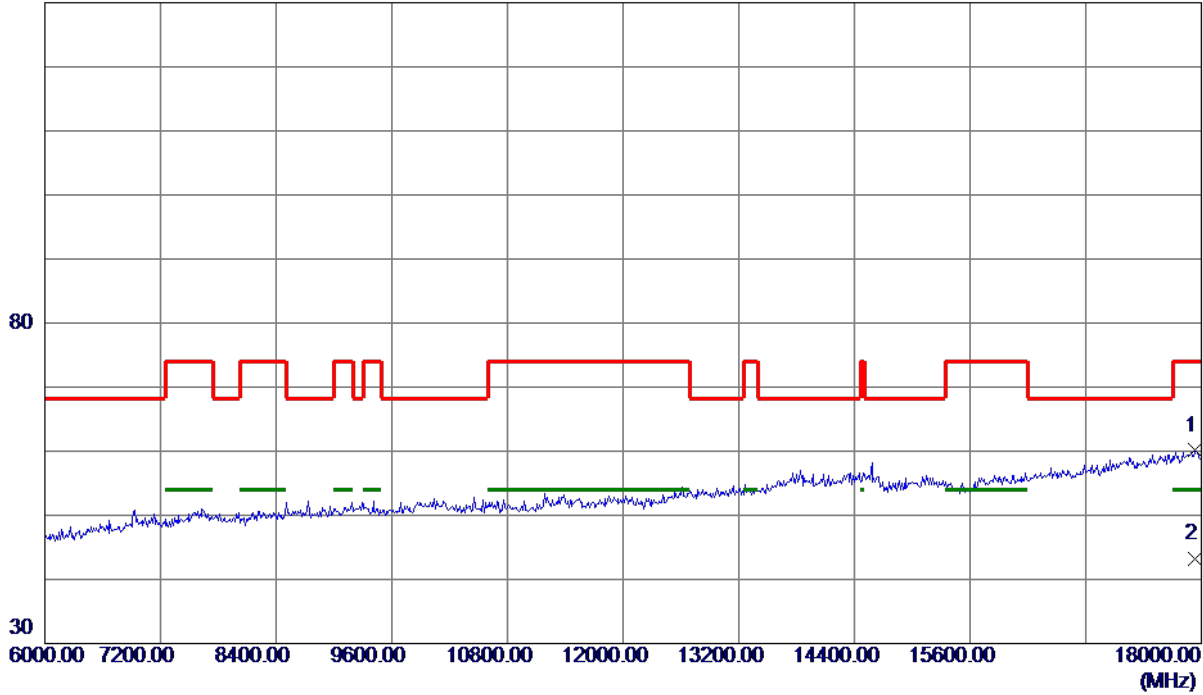

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17928.0000	37.84	22.26	60.10	74.00	-13.90	Peak	
2 *	17928.0000	20.97	22.26	43.23	54.00	-10.77	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5795 MHz

Horizontal

130 dBuV/m

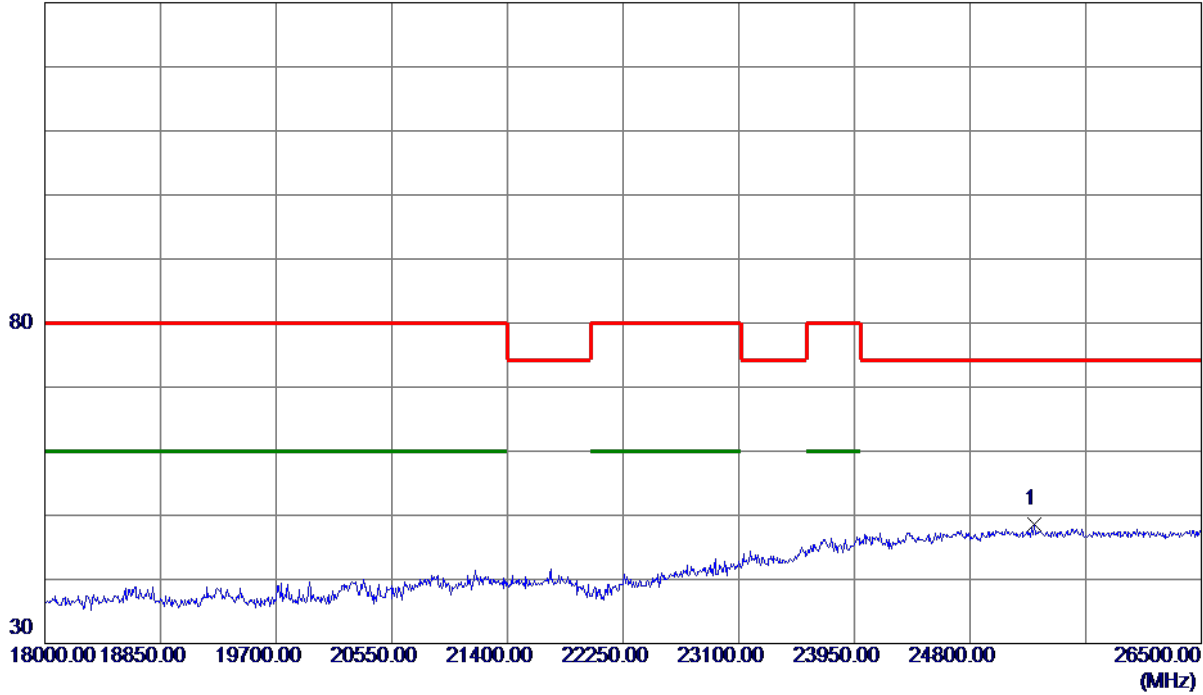


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25271.7500	28.54	20.04	48.58	74.30	-25.72	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX N (HT40) Mode 5795 MHz

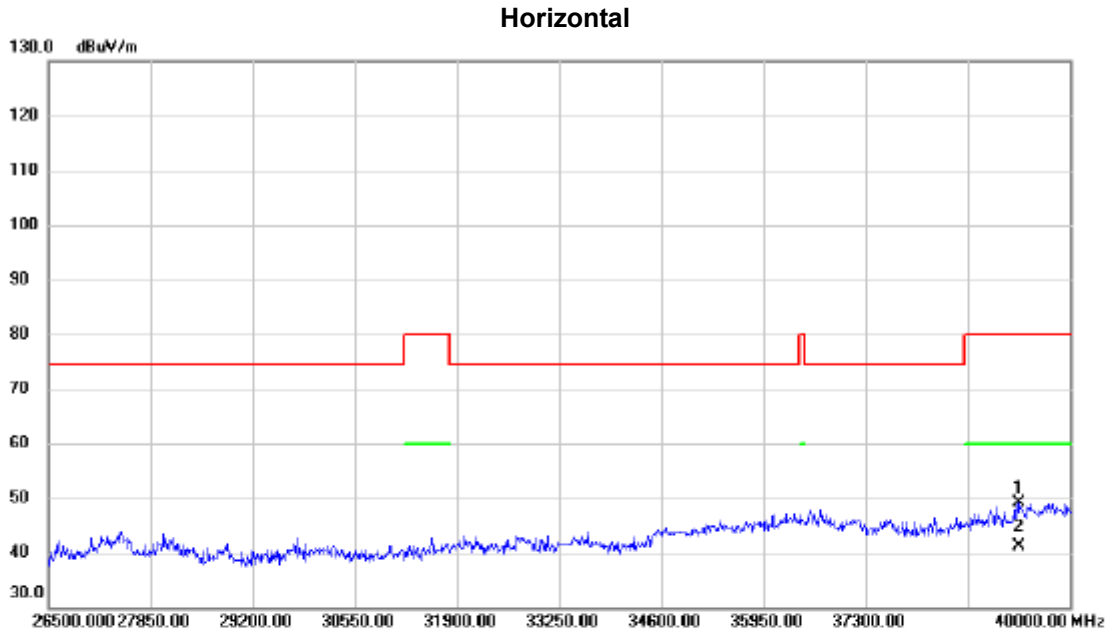

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39318.250	34.65	14.54	49.19	80.00	-30.81	peak	
2	*	39318.250	26.58	14.54	41.12	60.00	-18.88	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5180 MHz

Vertical

130 dBuV/m

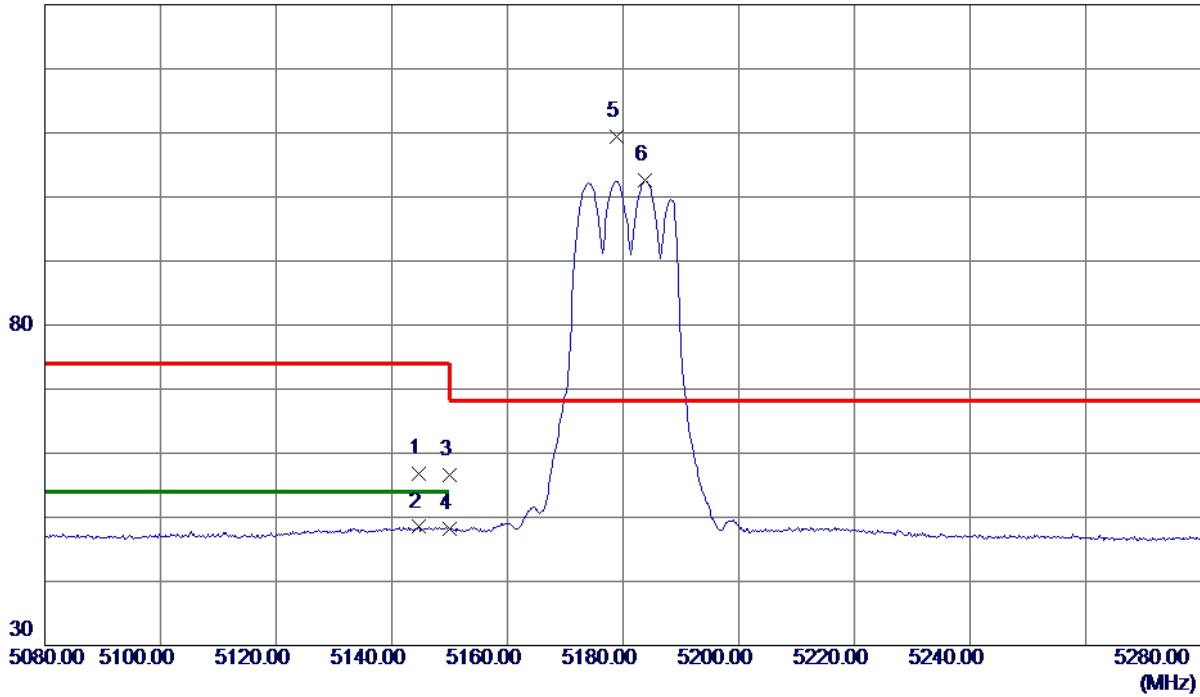

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5144.6000	40.73	16.14	56.87	74.00	-17.13	Peak	
2	5144.6000	32.36	16.14	48.50	54.00	-5.50	AVG	
3	5150.0000	40.50	16.16	56.66	74.00	-17.34	Peak	
4	5150.0000	32.10	16.16	48.26	54.00	-5.74	AVG	
5 *	5178.8000	93.17	16.22	109.39	68.30	41.09	Peak	No Limit
6	5183.8000	86.40	16.24	102.64	999.00	-896.36	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5180 MHz

Horizontal

130 dBuV/m

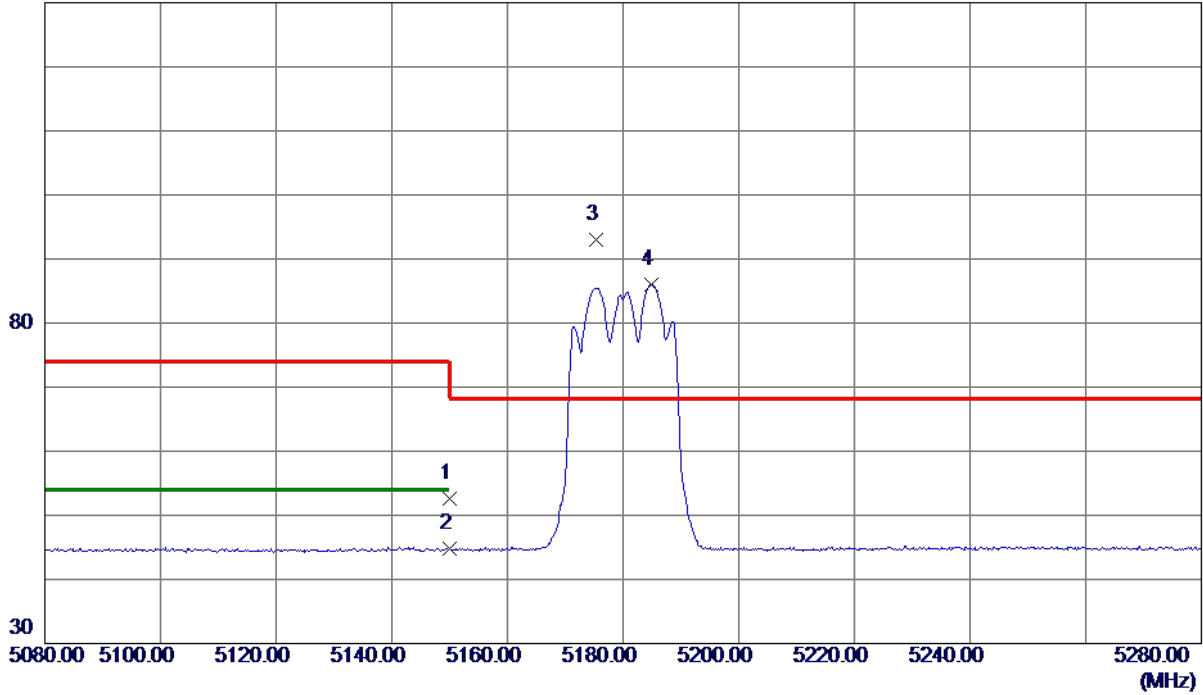

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	36.37	16.16	52.53	74.00	-21.47	Peak	
2	5150.0000	28.56	16.16	44.72	54.00	-9.28	AVG	
3 *	5175.4000	76.70	16.22	92.92	68.30	24.62	Peak	No Limit
4	5184.8000	69.83	16.24	86.07	999.00	-912.93	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5200 MHz

Vertical

130 dBuV/m

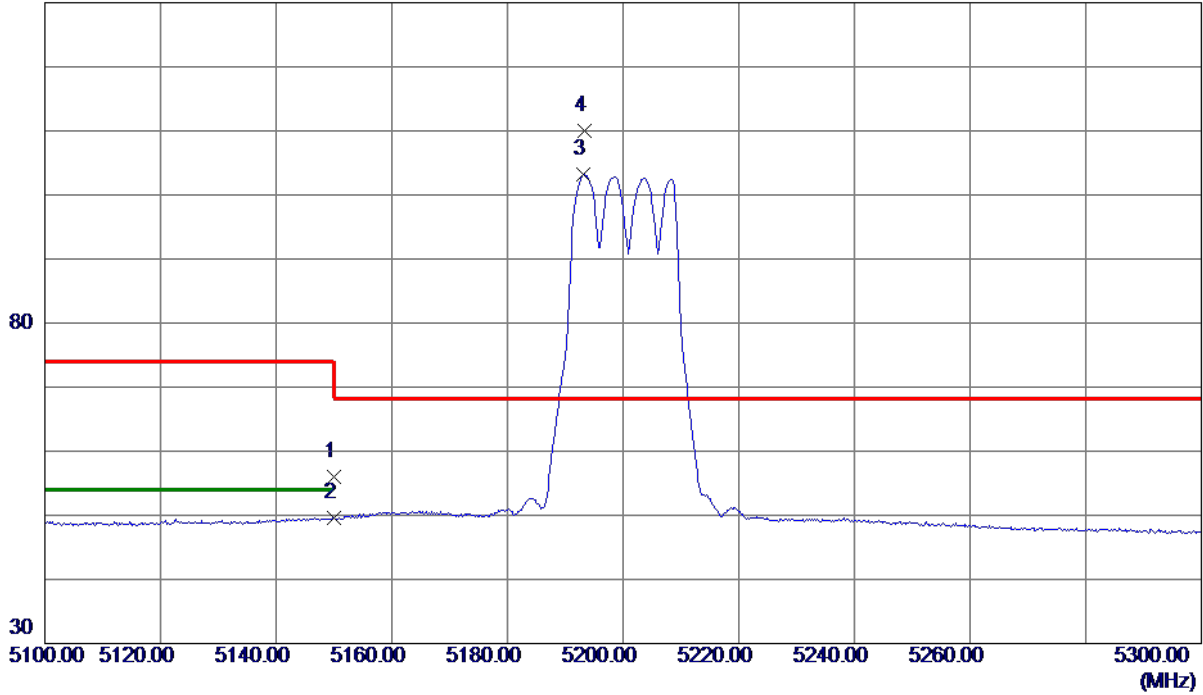

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	39.93	16.16	56.09	74.00	-17.91	Peak	
2	5150.0000	33.44	16.16	49.60	54.00	-4.40	AVG	
3	5193.2000	86.91	16.26	103.17	999.00	-895.83	AVG	No Limit
4 *	5193.4000	93.69	16.26	109.95	68.30	41.65	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5200 MHz

Horizontal

130 dBuV/m

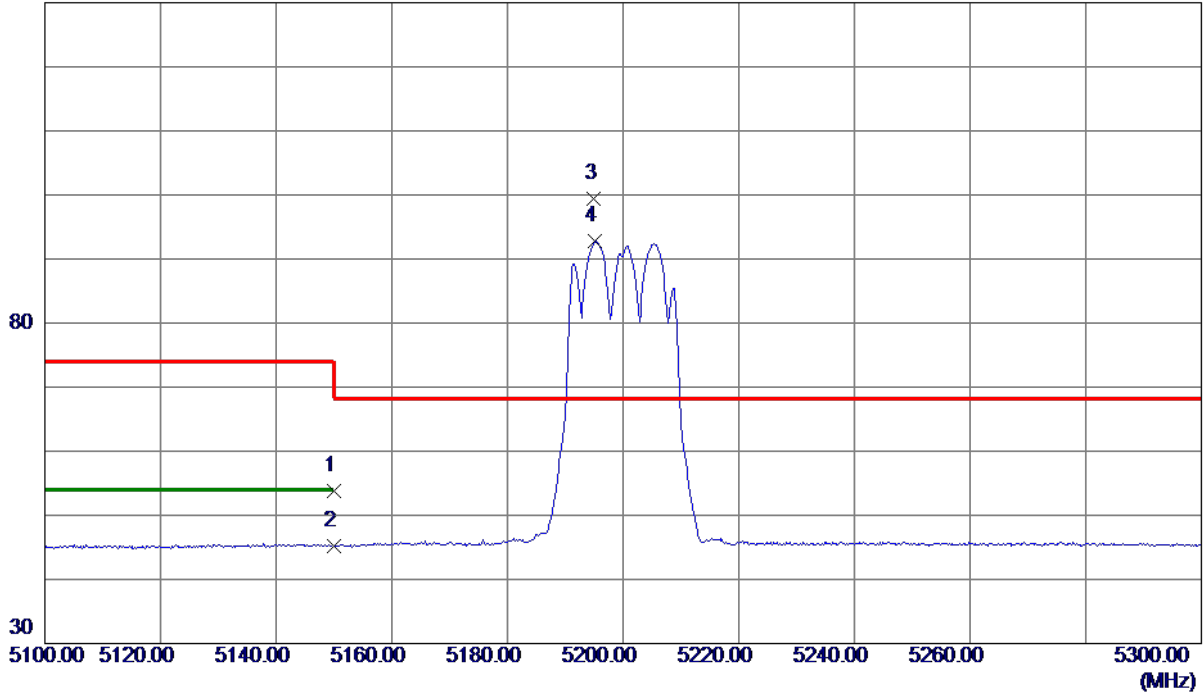


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	37.58	16.16	53.74	74.00	-20.26	Peak	
2	5150.0000	29.01	16.16	45.17	54.00	-8.83	AVG	
3 *	5195.0000	83.07	16.26	99.33	68.30	31.03	Peak	No Limit
4	5195.2000	76.48	16.26	92.74	999.00	-906.26	AVG	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5220 MHz

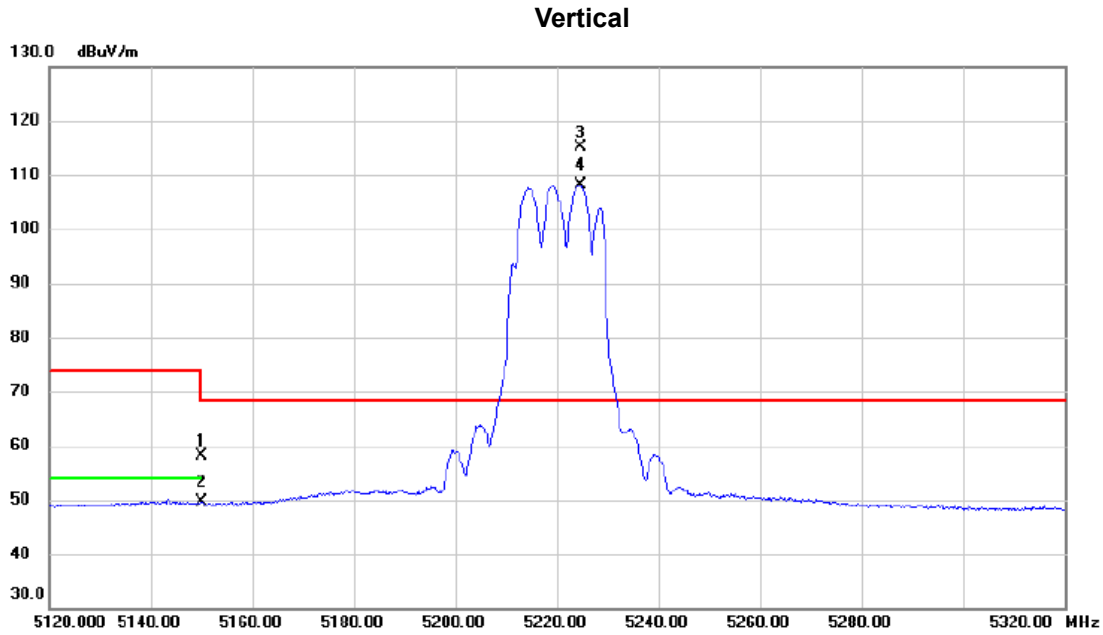


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	42.06	16.15	58.21	74.00	-15.79	peak	
2		5150.000	33.52	16.15	49.67	54.00	-4.33	AVG	
3	*	5224.600	98.90	16.33	115.23	68.30	46.93	peak	No Limit
4	X	5224.600	91.91	16.33	108.24	68.30	39.94	AVG	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5220 MHz

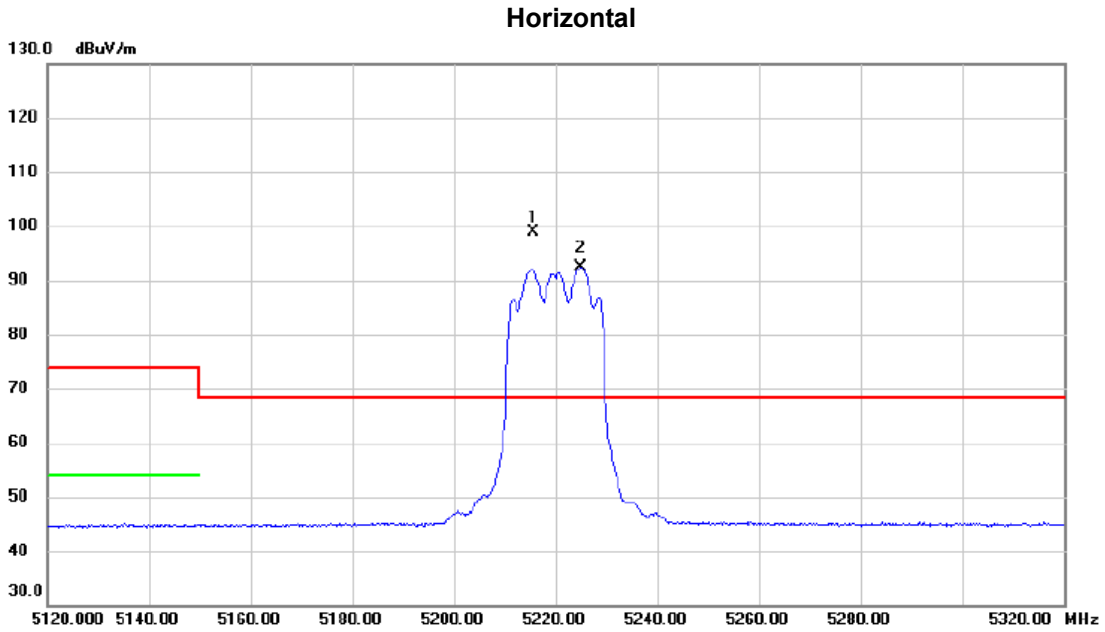

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5215.600	82.66	16.31	98.97	68.30	30.67	peak	No Limit
2	X	5224.800	76.05	16.33	92.38	68.30	24.08	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz

Vertical

130 dBuV/m

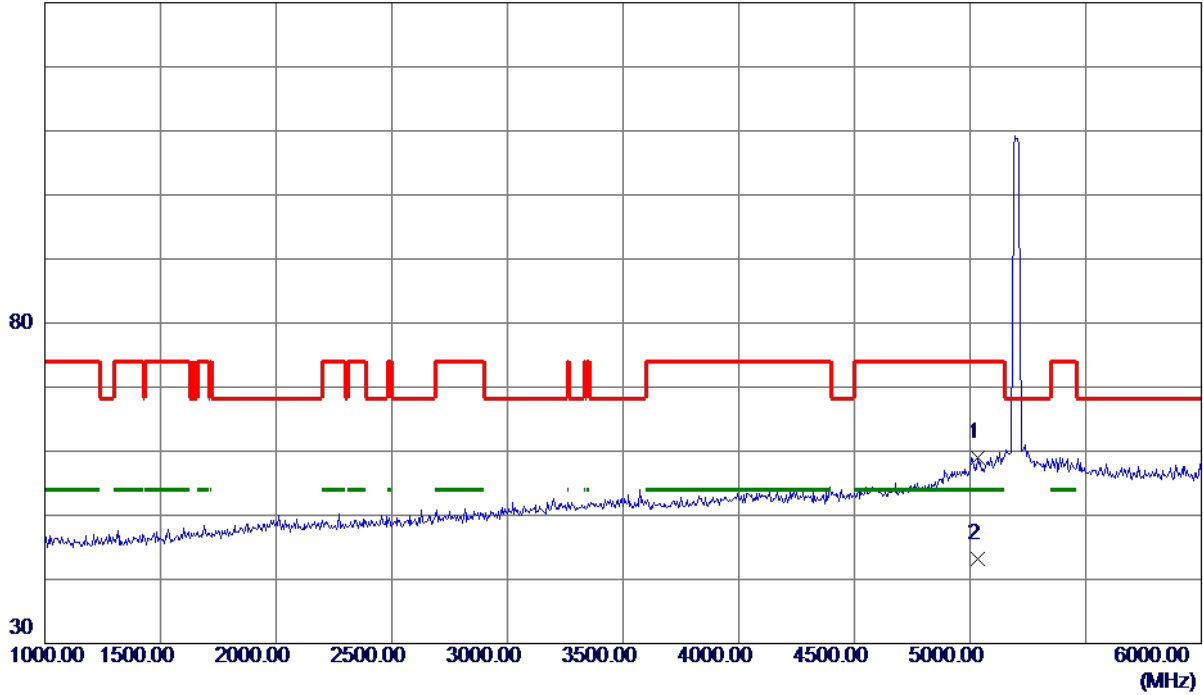

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5035.0000	43.20	15.88	59.08	74.00	-14.92	Peak	
2 *	5035.0000	27.35	15.88	43.23	54.00	-10.77	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz

Vertical

130 dBuV/m

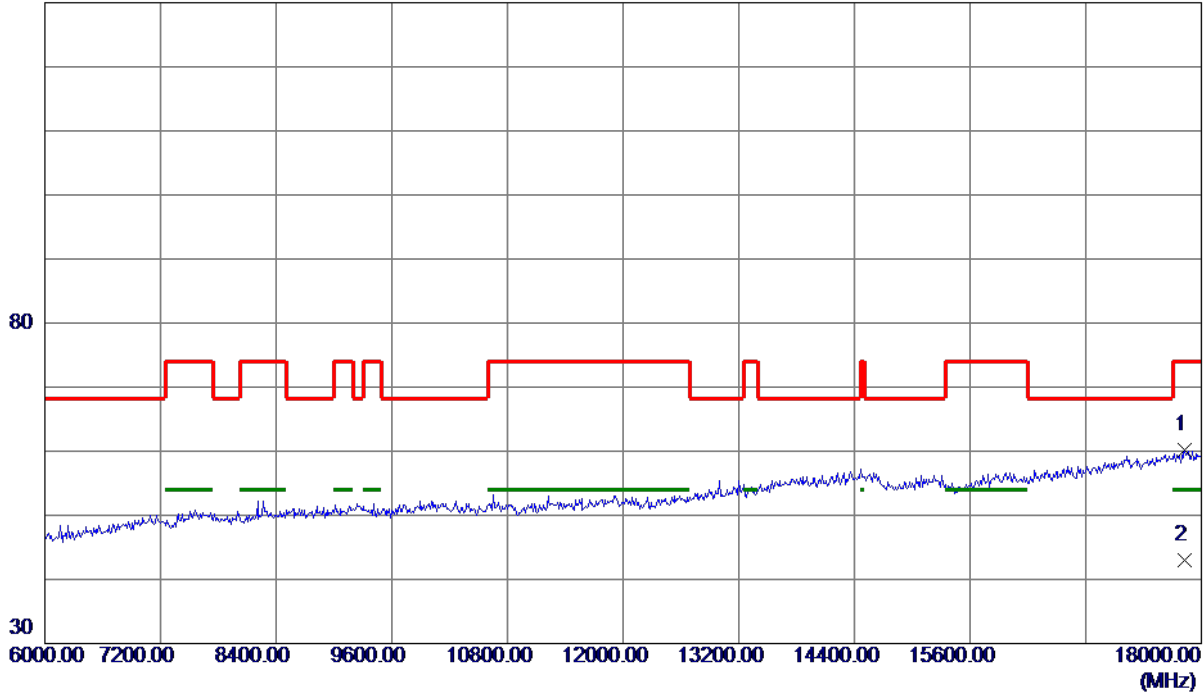

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17832.0000	38.00	22.20	60.20	74.00	-13.80	Peak	
2 *	17832.0000	20.81	22.20	43.01	54.00	-10.99	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz

Vertical

130 dBuV/m

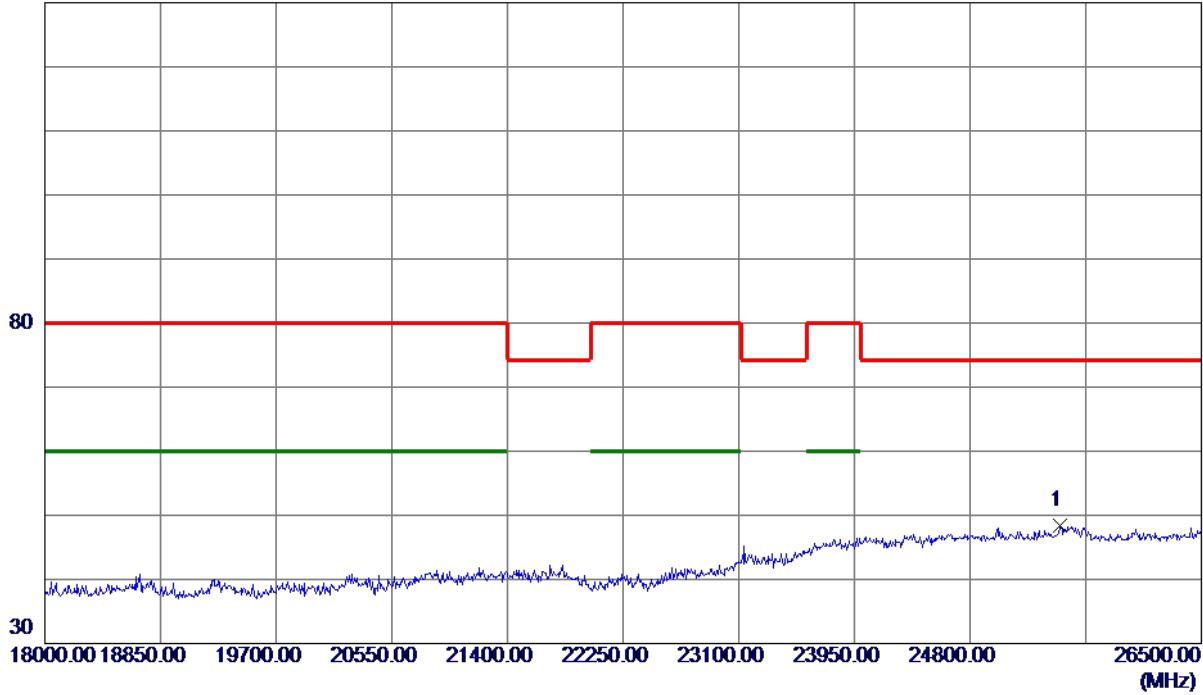


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25463.0000	28.43	20.03	48.46	74.30	-25.84	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz

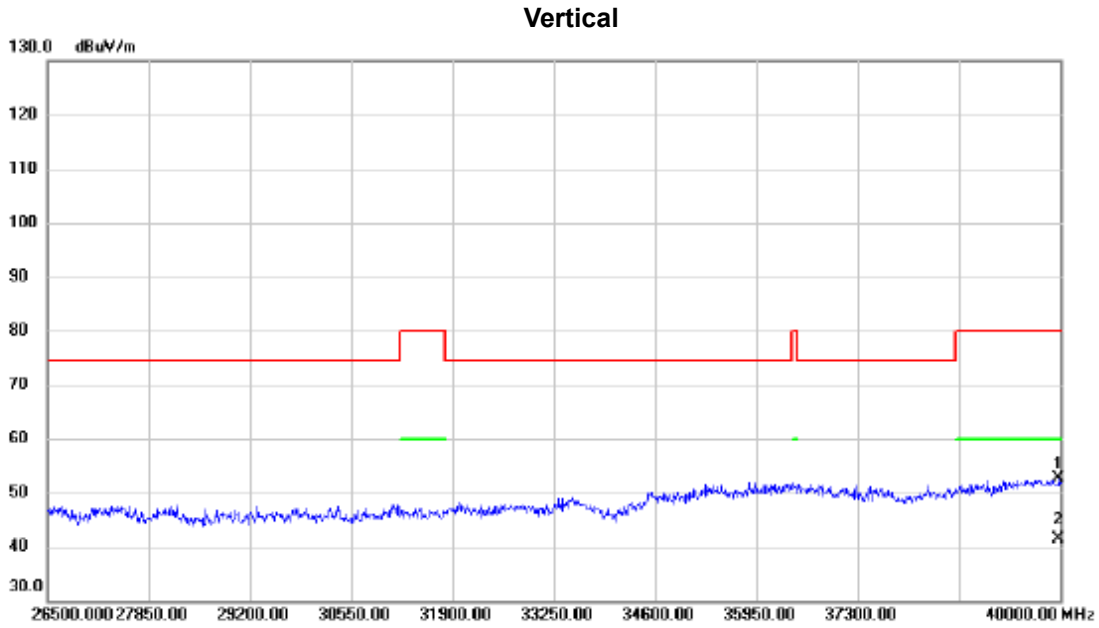

No. Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measurement dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	39979.750	37.02	15.60	52.62	80.00	-27.38	peak	
2 *	39979.750	25.79	15.60	41.39	60.00	-18.61	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz

Horizontal

130 dBuV/m

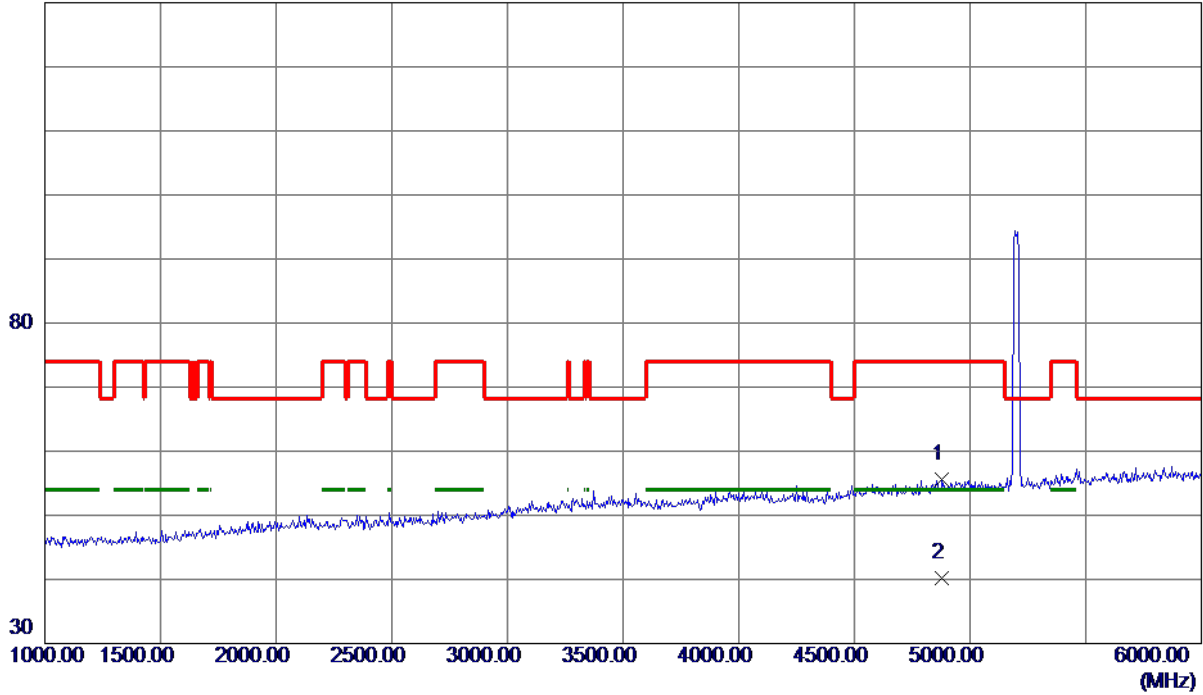

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	4880.0000	40.12	15.47	55.59	74.00	-18.41	Peak	
2 *	4880.0000	24.75	15.47	40.22	54.00	-13.78	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz

Horizontal

130 dBuV/m

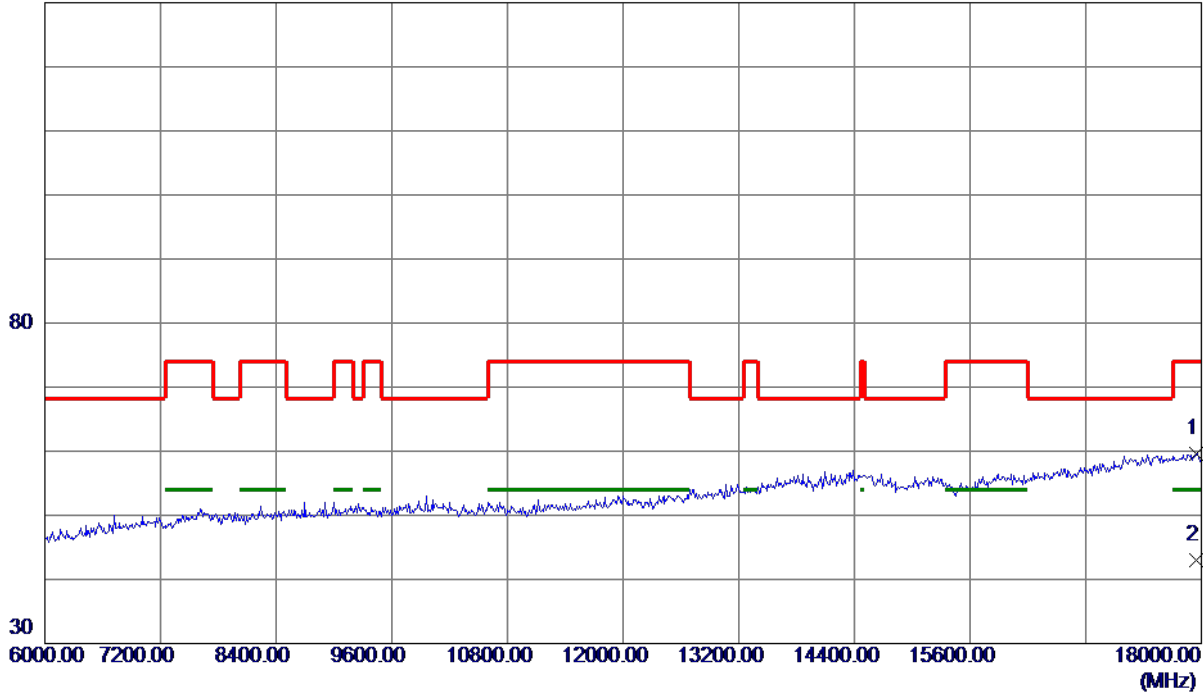

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17952.0000	37.41	22.27	59.68	74.00	-14.32	Peak	
2 *	17952.0000	20.76	22.27	43.03	54.00	-10.97	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz

Horizontal

130 dBuV/m

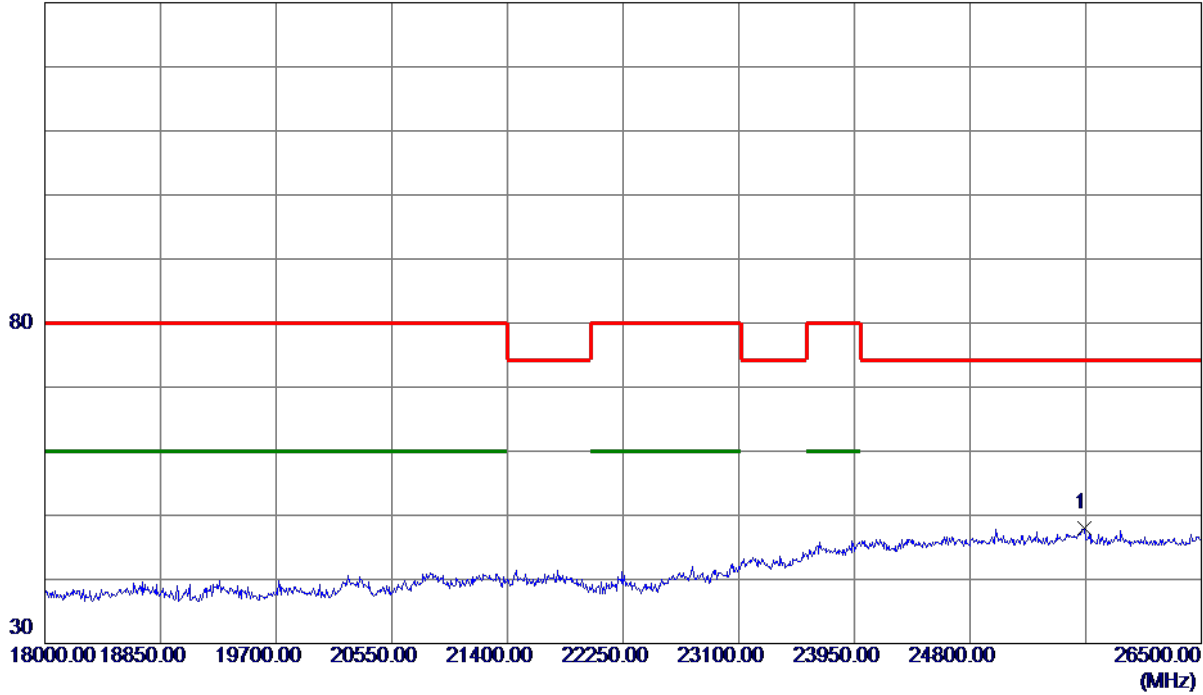


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25637.2500	27.91	20.02	47.93	74.30	-26.37	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz

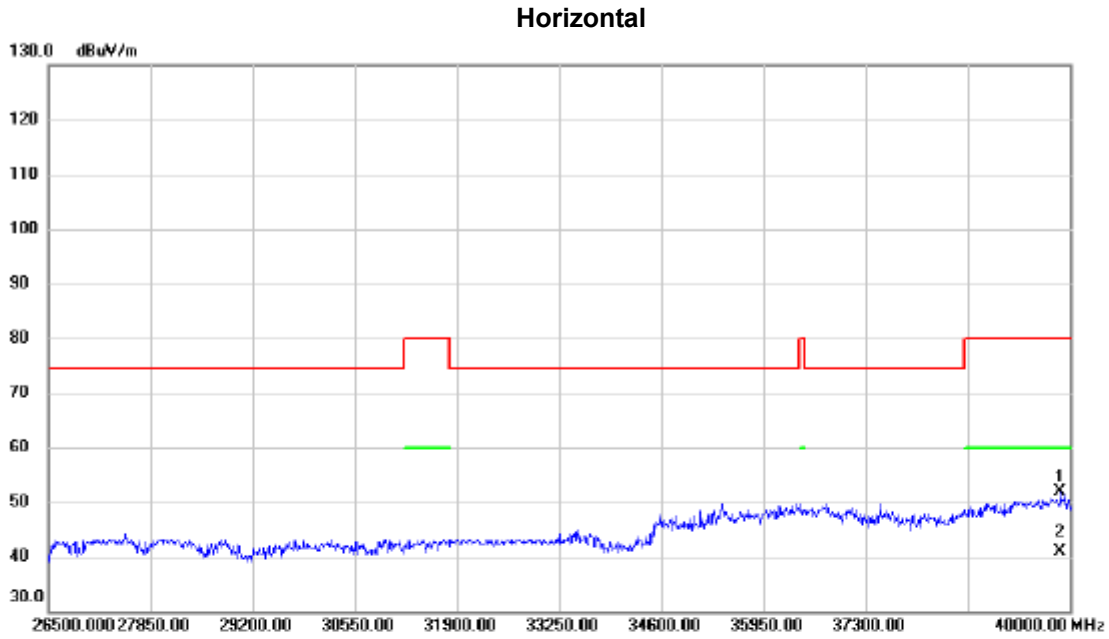

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39865.000	36.26	15.54	51.80	80.00	-28.20	peak	
2	*	39865.000	25.46	15.54	41.00	60.00	-19.00	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5190 MHz

Vertical

130 dBuV/m

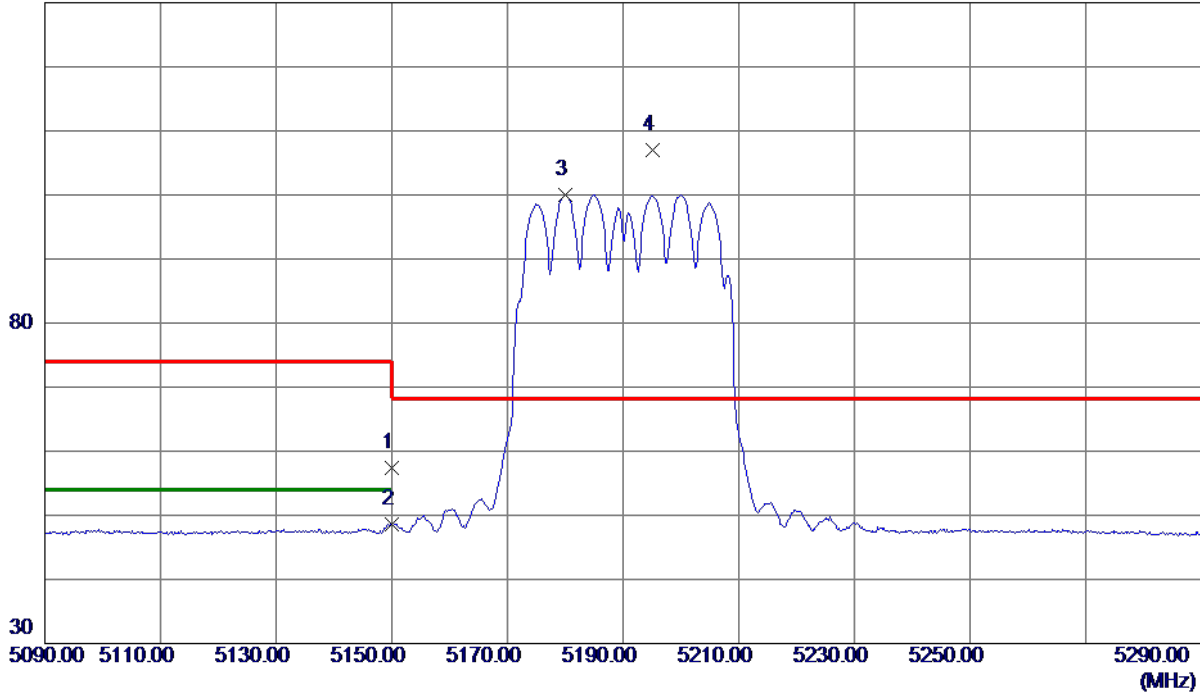

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	41.17	16.16	57.33	74.00	-16.67	Peak	
2	5150.0000	32.45	16.16	48.61	54.00	-5.39	AVG	
3	5180.0000	83.81	16.23	100.04	999.00	-898.96	AVG	No Limit
4 *	5195.2000	90.68	16.26	106.94	68.30	38.64	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5190 MHz

Horizontal

130 dBuV/m

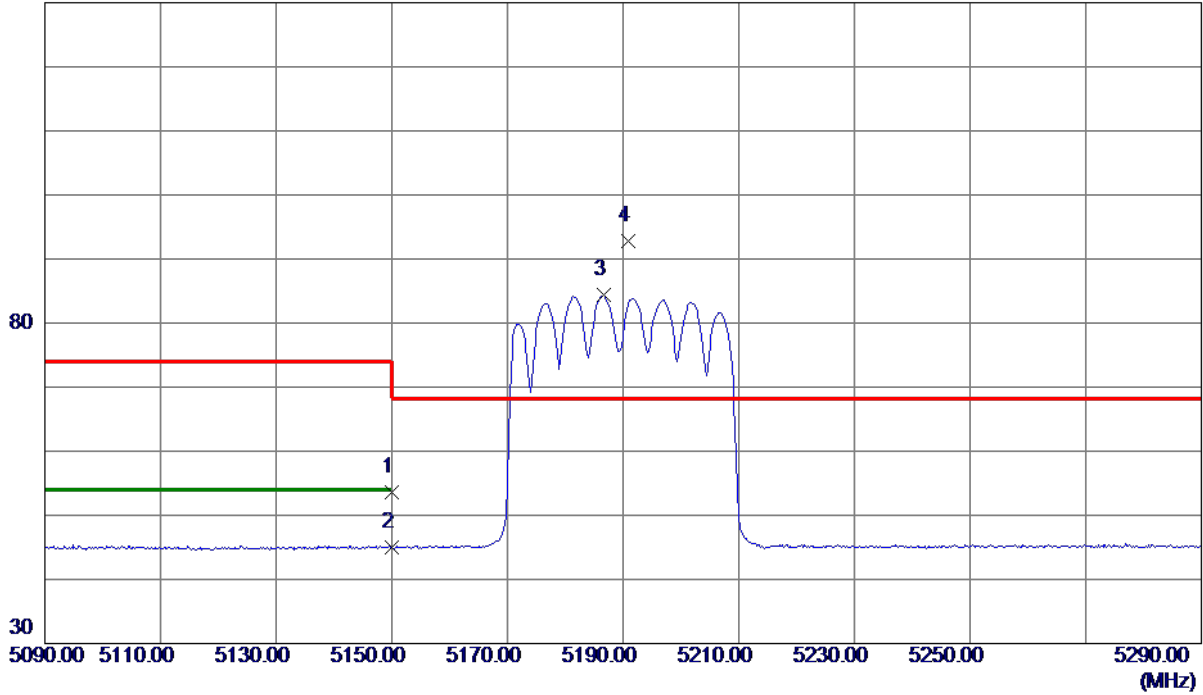

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	37.36	16.16	53.52	74.00	-20.48	Peak	
2	5150.0000	28.75	16.16	44.91	54.00	-9.09	AVG	
3	5186.6000	68.07	16.24	84.31	999.00	-914.69	AVG	No Limit
4 *	5190.8000	76.47	16.25	92.72	68.30	24.42	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

Vertical

130 dBuV/m

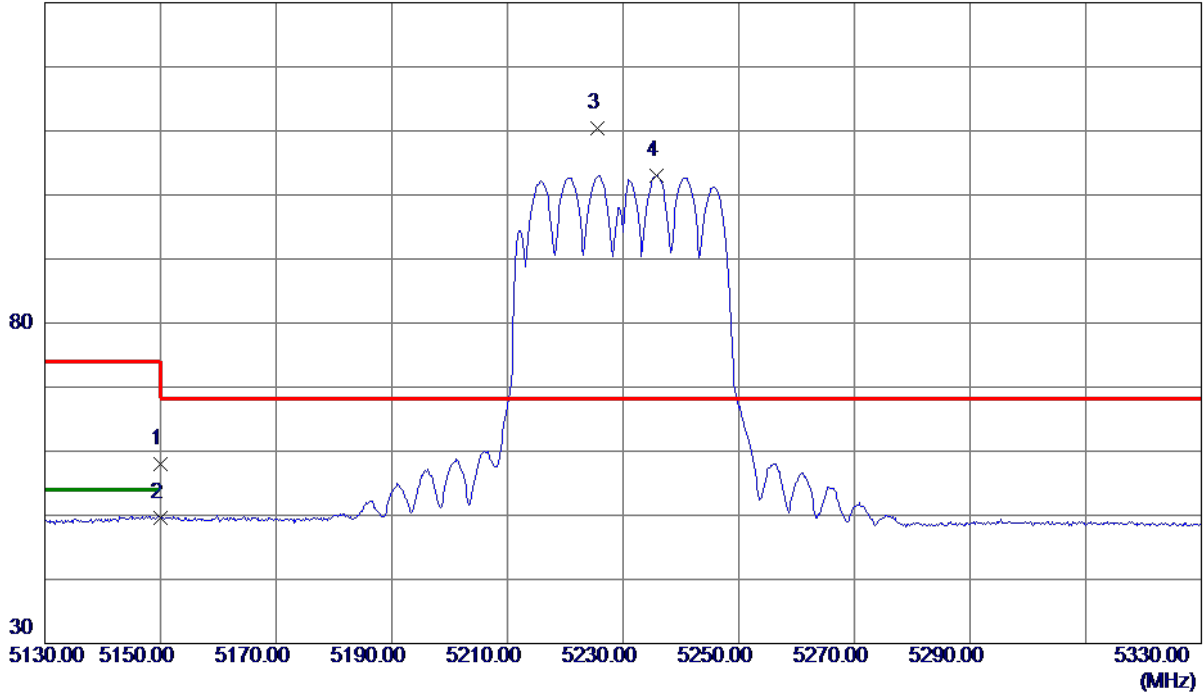

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	41.87	16.16	58.03	74.00	-15.97	Peak	
2	5150.0000	33.43	16.16	49.59	54.00	-4.41	AVG	
3 *	5225.6000	94.15	16.33	110.48	68.30	42.18	Peak	No Limit
4	5235.8000	86.56	16.36	102.92	999.00	-896.08	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

Vertical

130 dBuV/m

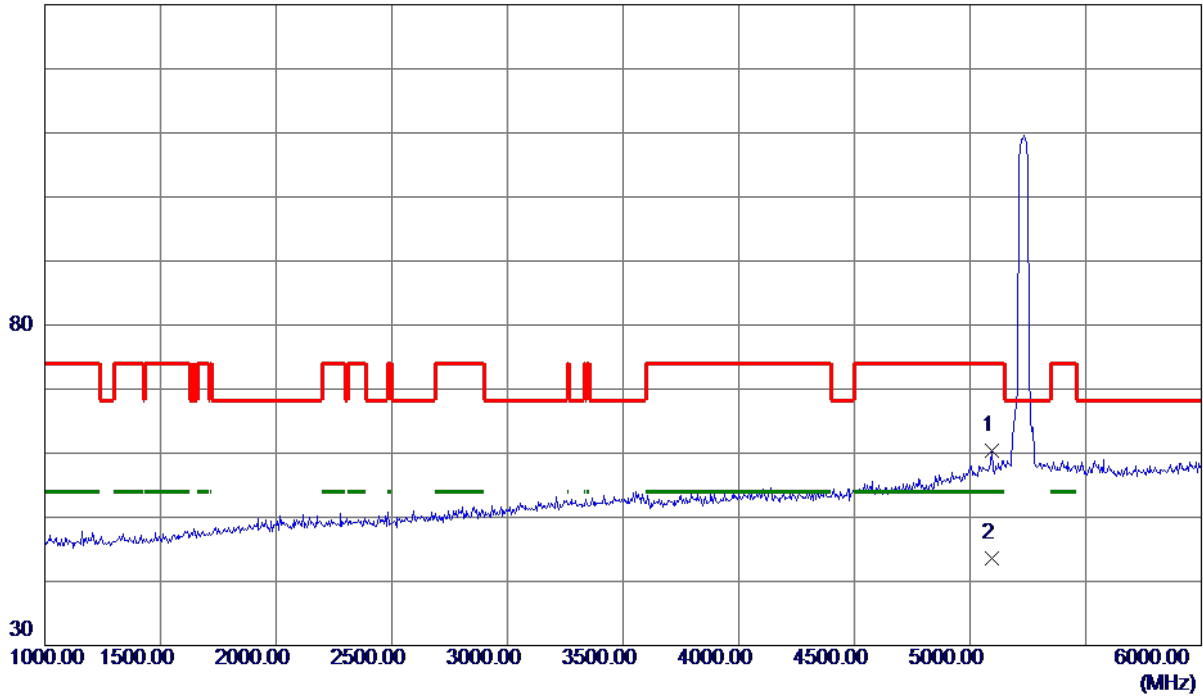

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5095.0000	44.39	16.03	60.42	74.00	-13.58	Peak	
2 *	5095.0000	27.59	16.03	43.62	54.00	-10.38	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

Vertical

130 dBuV/m

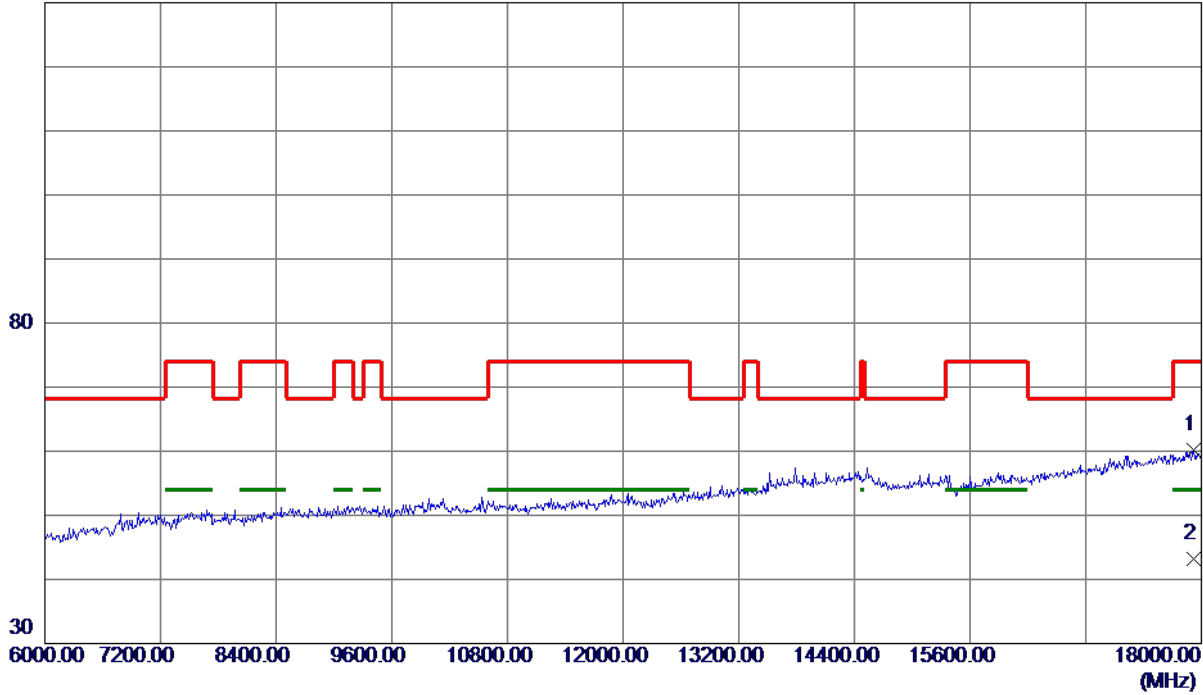

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17916.0000	38.01	22.25	60.26	74.00	-13.74	Peak	
2 *	17916.0000	20.96	22.25	43.21	54.00	-10.79	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

Vertical

130 dBuV/m

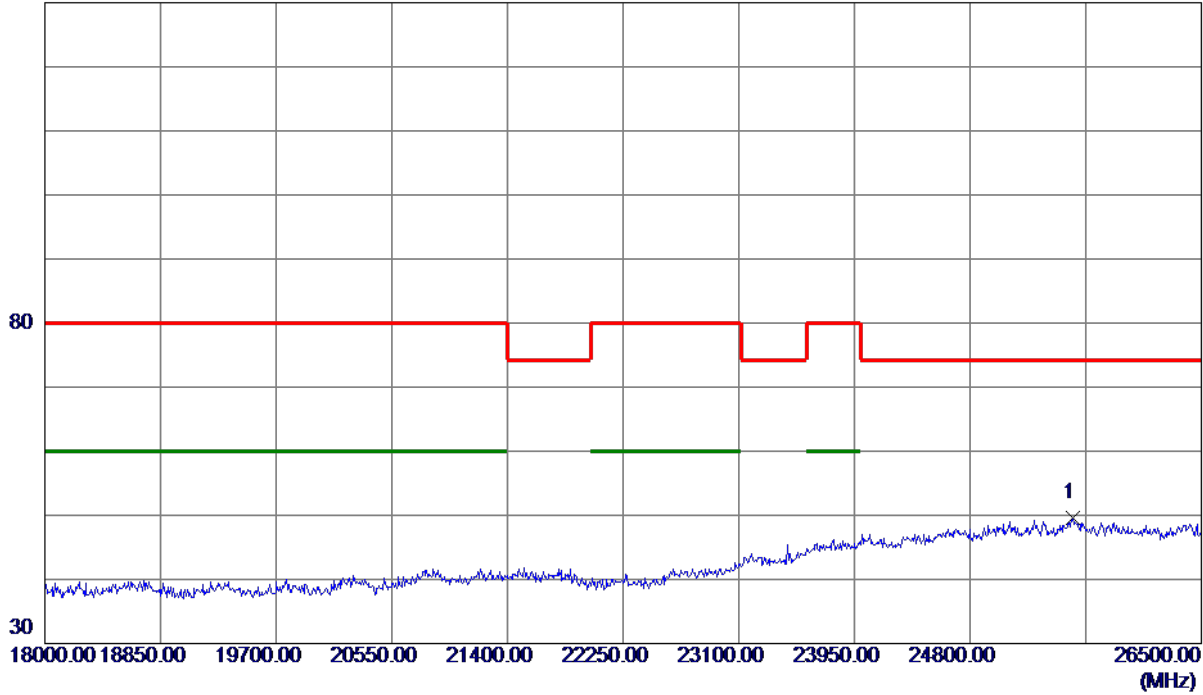


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25556.5000	29.51	20.02	49.53	74.30	-24.77	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

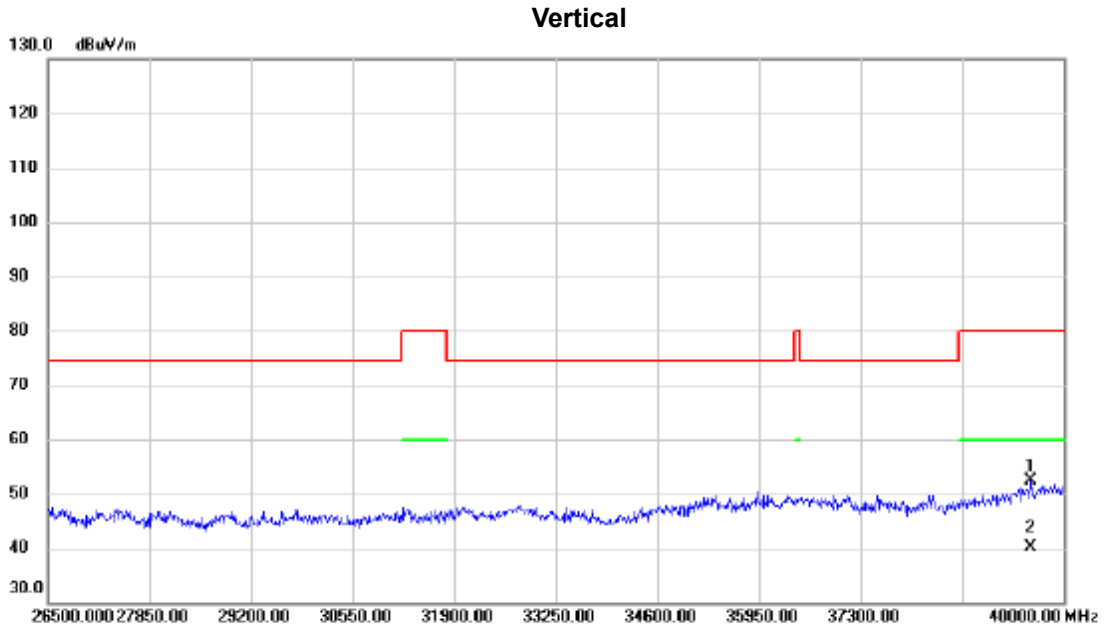

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39561.250	36.98	15.34	52.32	80.00	-27.68	peak	
2	*	39561.250	24.68	15.34	40.02	60.00	-19.98	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

Horizontal

130 dBuV/m

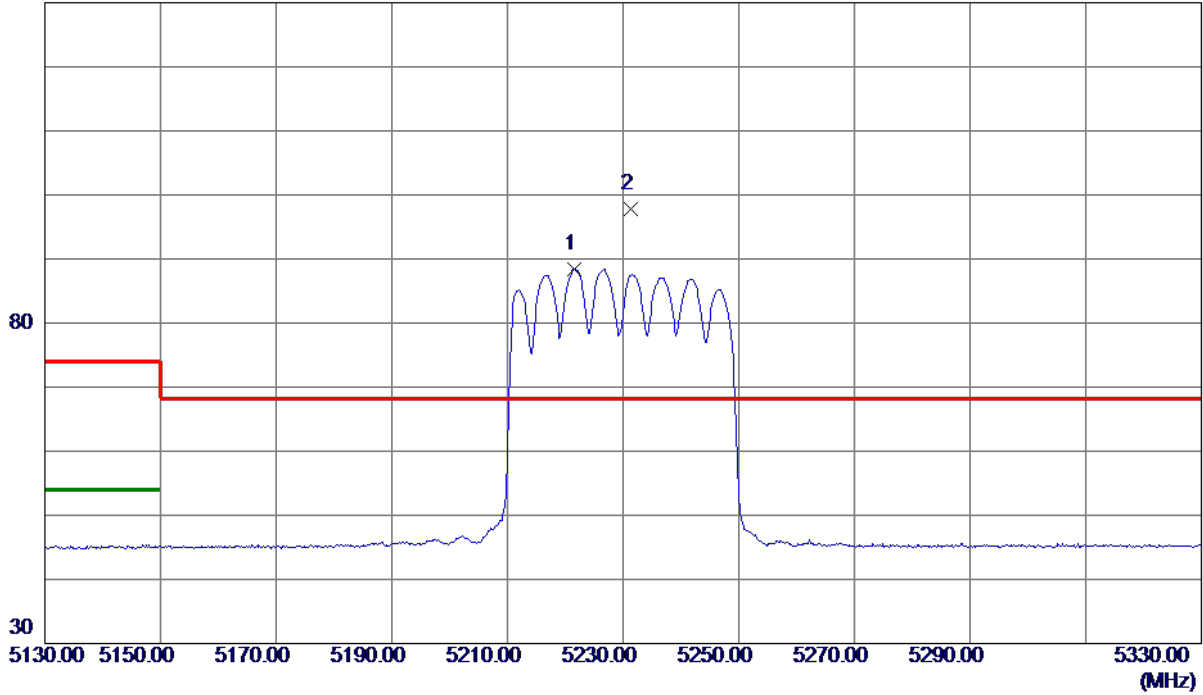

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5221.6000	72.13	16.33	88.46	999.00	-910.54	AVG	No Limit
2 *	5231.4000	81.43	16.35	97.78	68.30	29.48	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

Horizontal

130 dBuV/m

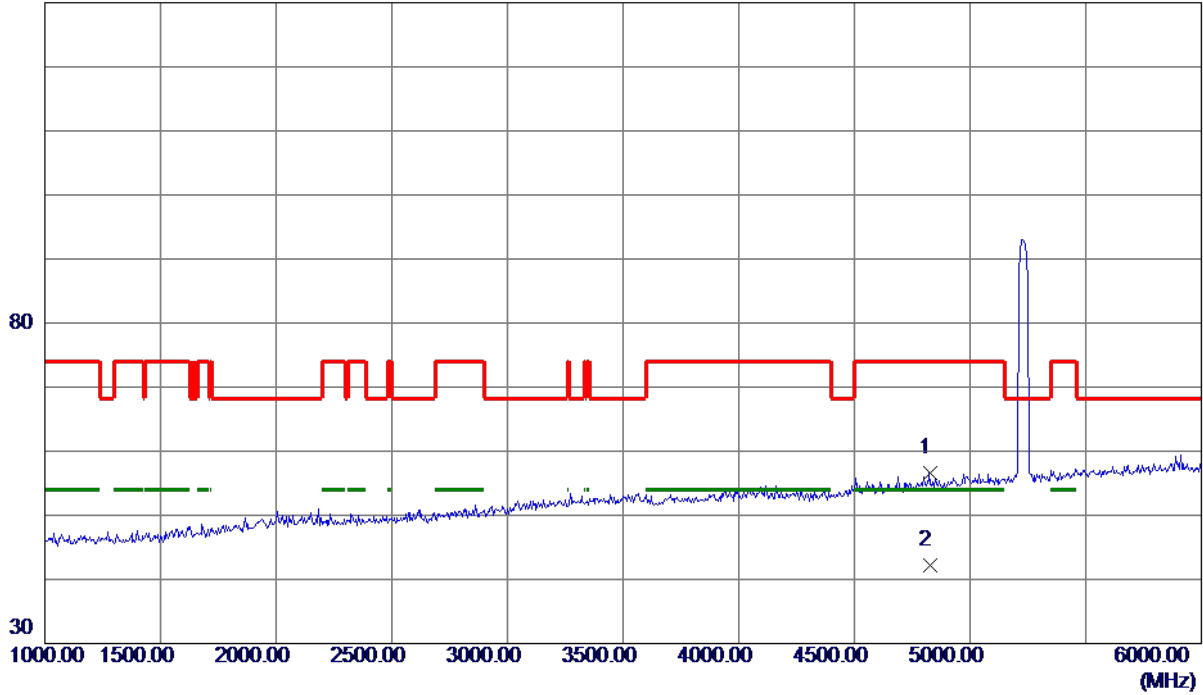

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	4825.0000	41.26	15.33	56.59	74.00	-17.41	Peak	
2 *	4825.0000	26.82	15.33	42.15	54.00	-11.85	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

Horizontal

130 dBuV/m

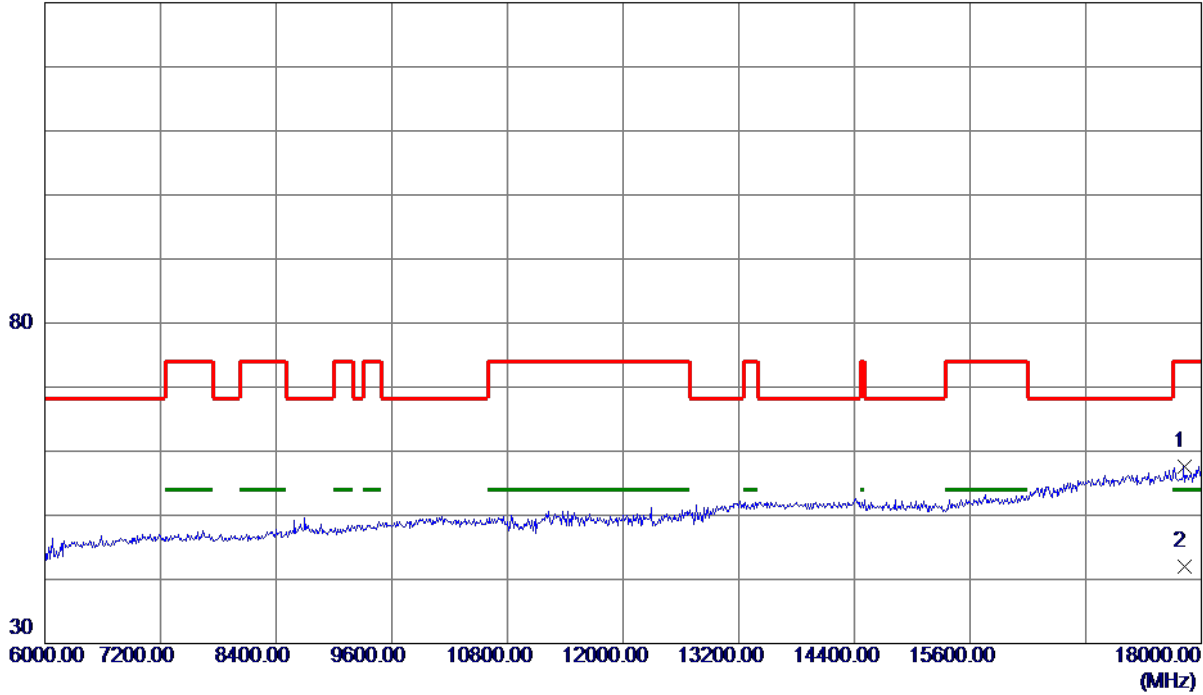

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17820.0000	35.44	22.19	57.63	74.00	-16.37	Peak	
2 *	17820.0000	19.82	22.19	42.01	54.00	-11.99	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

Horizontal

130 dBuV/m

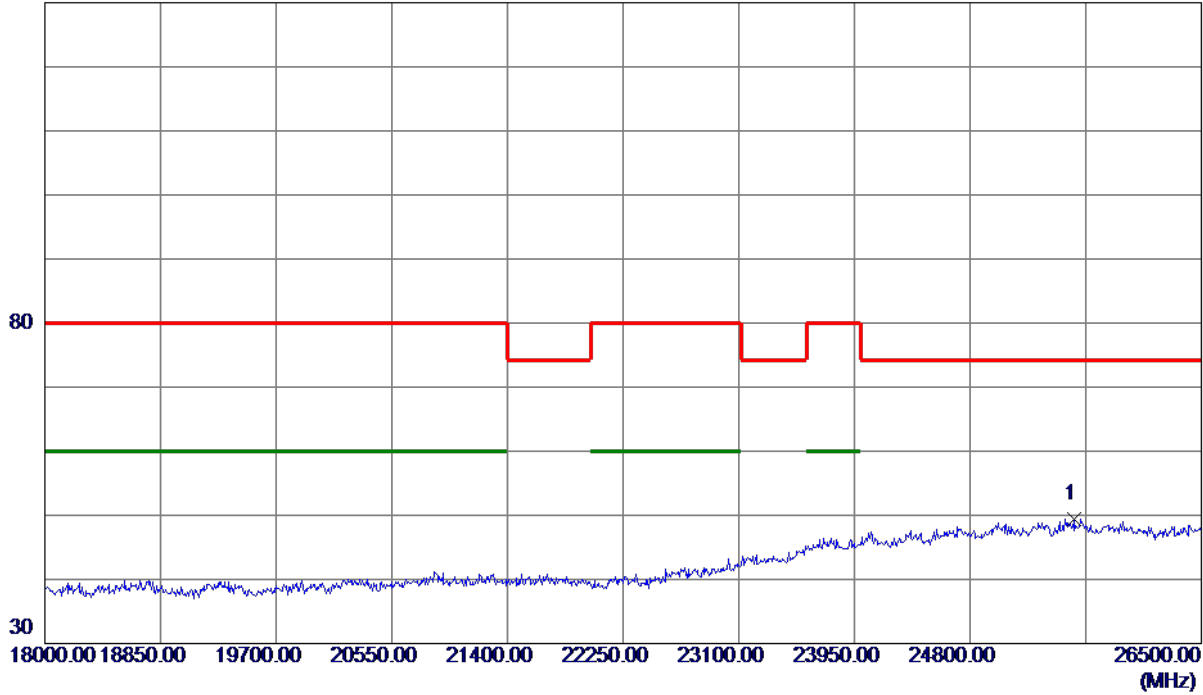


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25560.7500	29.43	20.02	49.45	74.30	-24.85	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

Horizontal

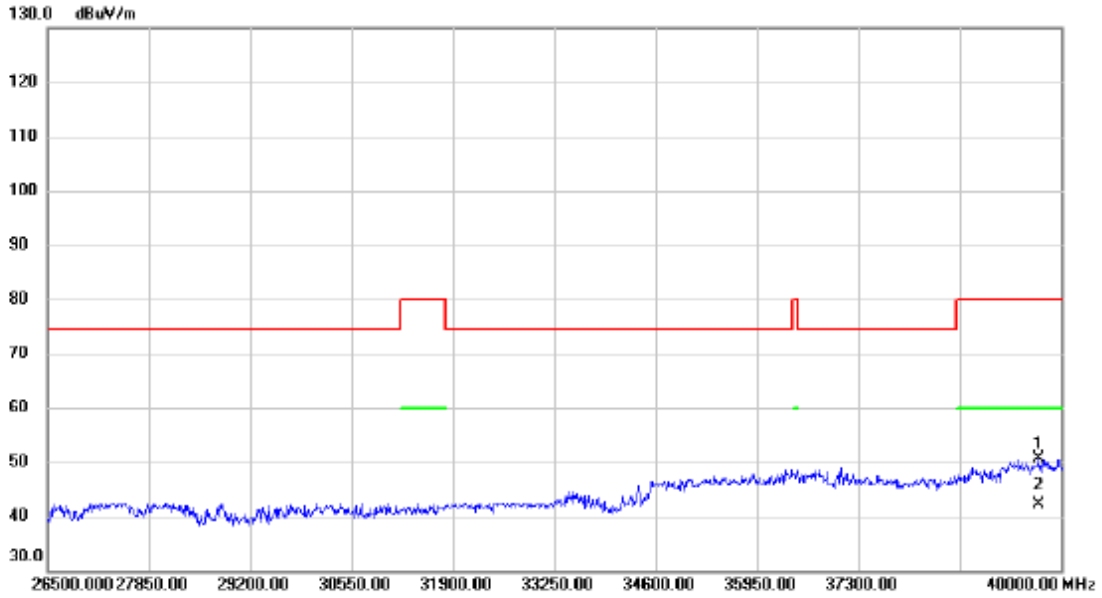

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39709.750	35.28	15.43	50.71	80.00	-29.29	peak	
2	*	39709.750	26.58	15.43	42.01	60.00	-17.99	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

Vertical

130 dBuV/m

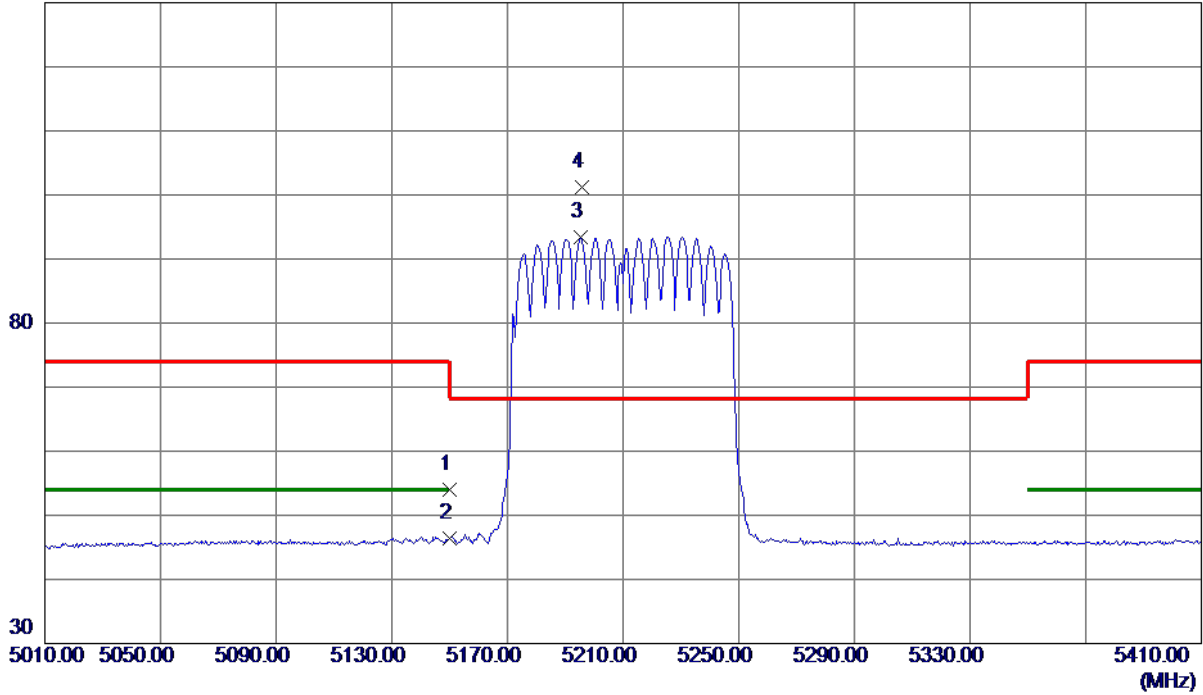

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	37.89	16.16	54.05	74.00	-19.95	Peak	
2	5150.0000	30.24	16.16	46.40	54.00	-7.60	AVG	
3	5195.2000	77.16	16.26	93.42	999.00	-905.58	AVG	No Limit
4 *	5195.6000	84.85	16.26	101.11	68.30	32.81	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

Vertical

130 dBuV/m

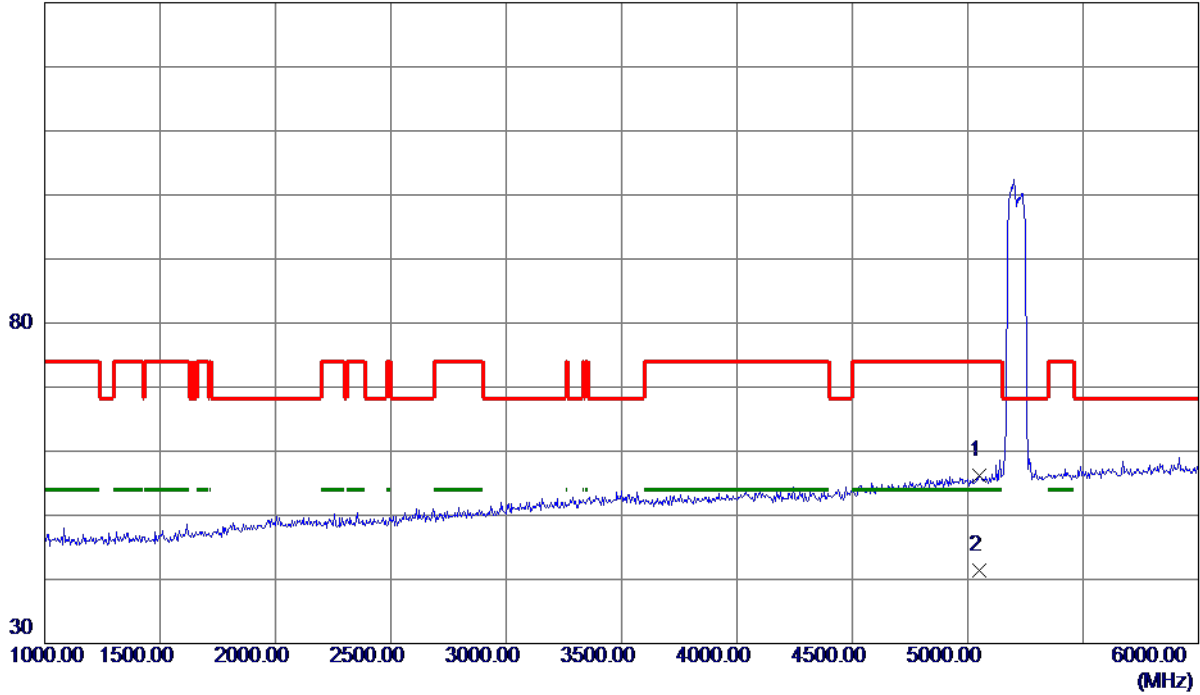

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5050.0000	40.28	15.92	56.20	74.00	-17.80	Peak	
2 *	5050.0000	25.44	15.92	41.36	54.00	-12.64	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

Vertical

130 dBuV/m

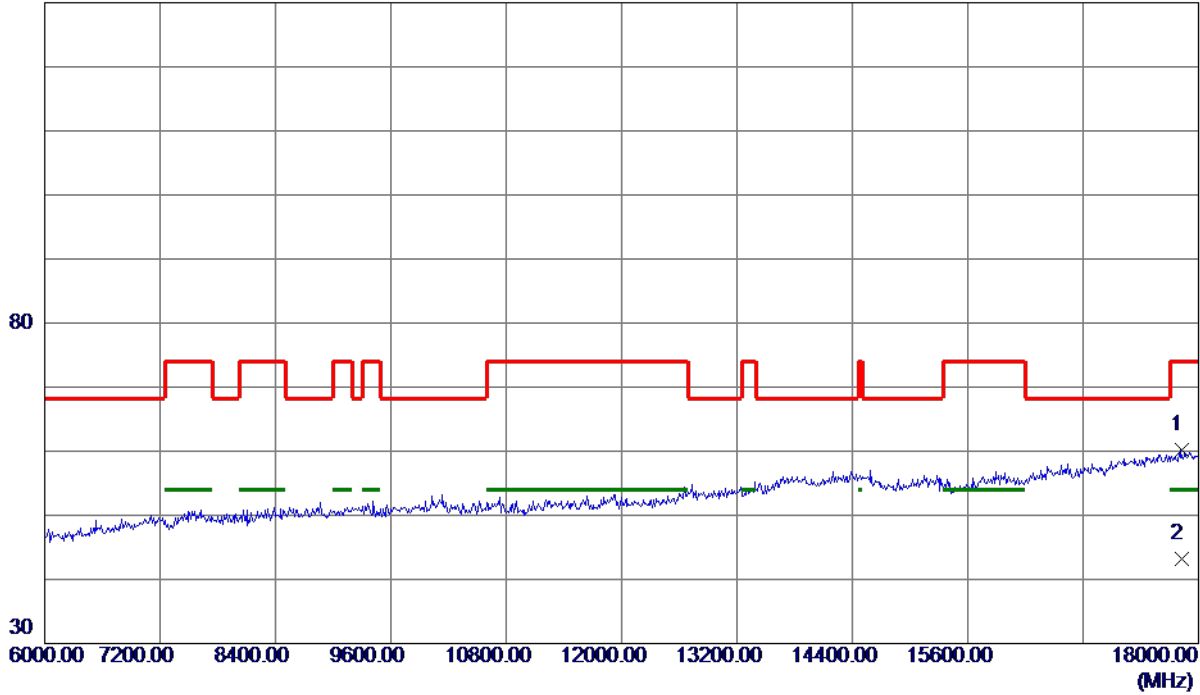

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17820.0000	38.01	22.19	60.20	74.00	-13.80	Peak	
2 *	17820.0000	21.07	22.19	43.26	54.00	-10.74	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

Vertical

130 dBuV/m

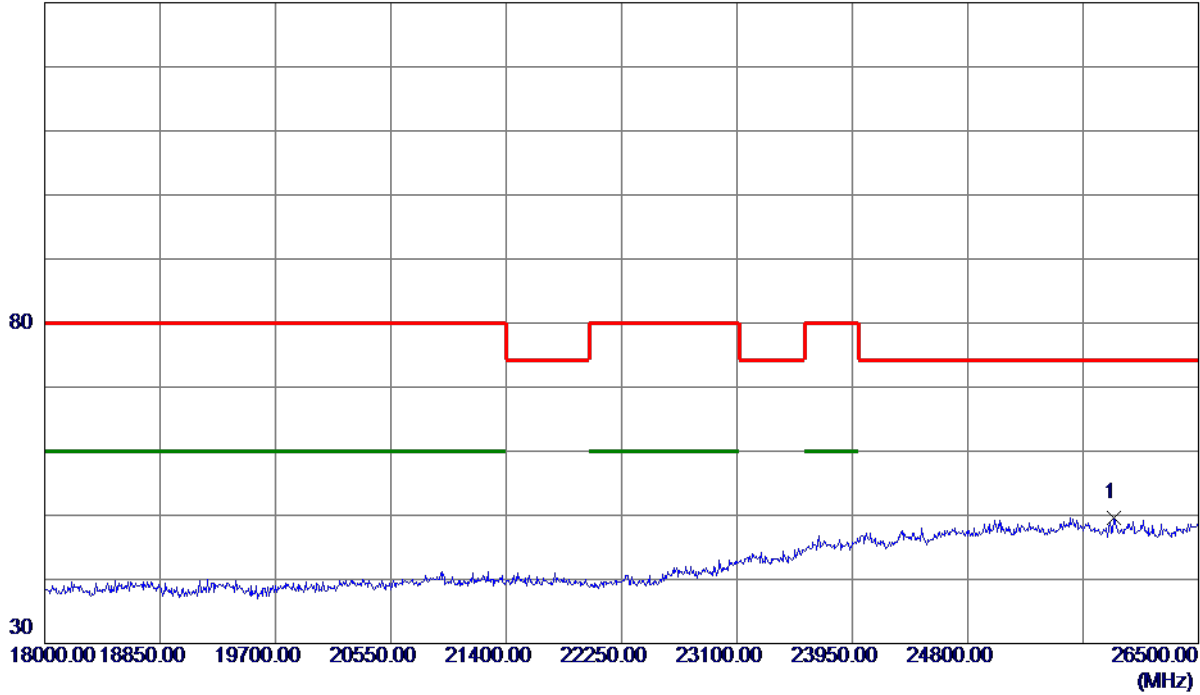


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25879.5000	29.59	20.01	49.60	74.30	-24.70	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

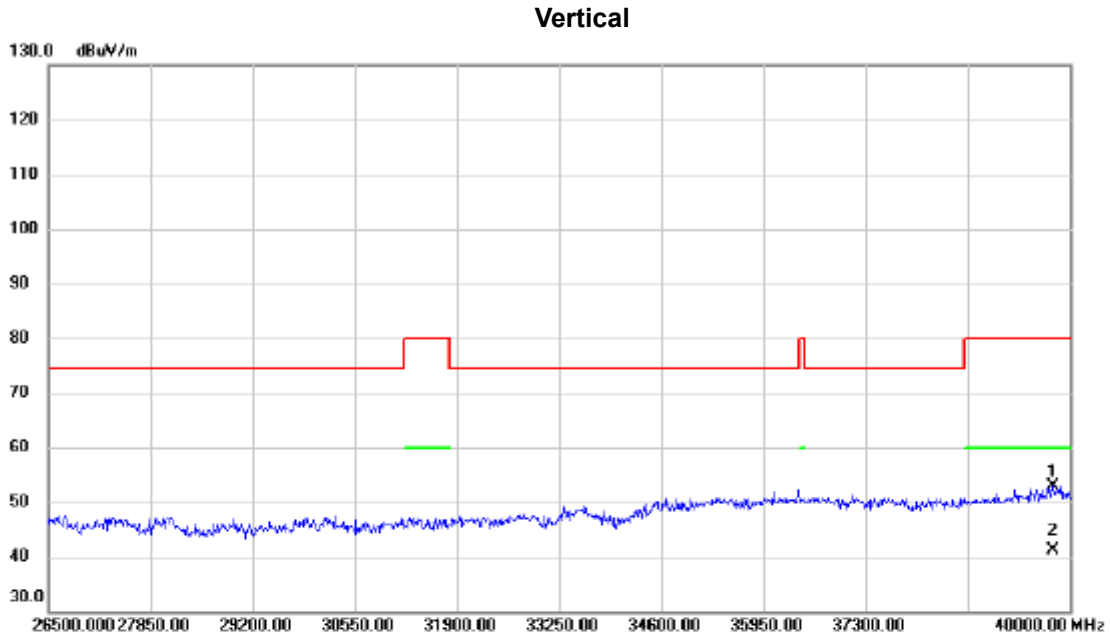

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39777.250	37.28	15.48	52.76	80.00	-27.24	peak	
2	*	39777.250	25.68	15.48	41.16	60.00	-18.84	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

Horizontal

130 dBuV/m

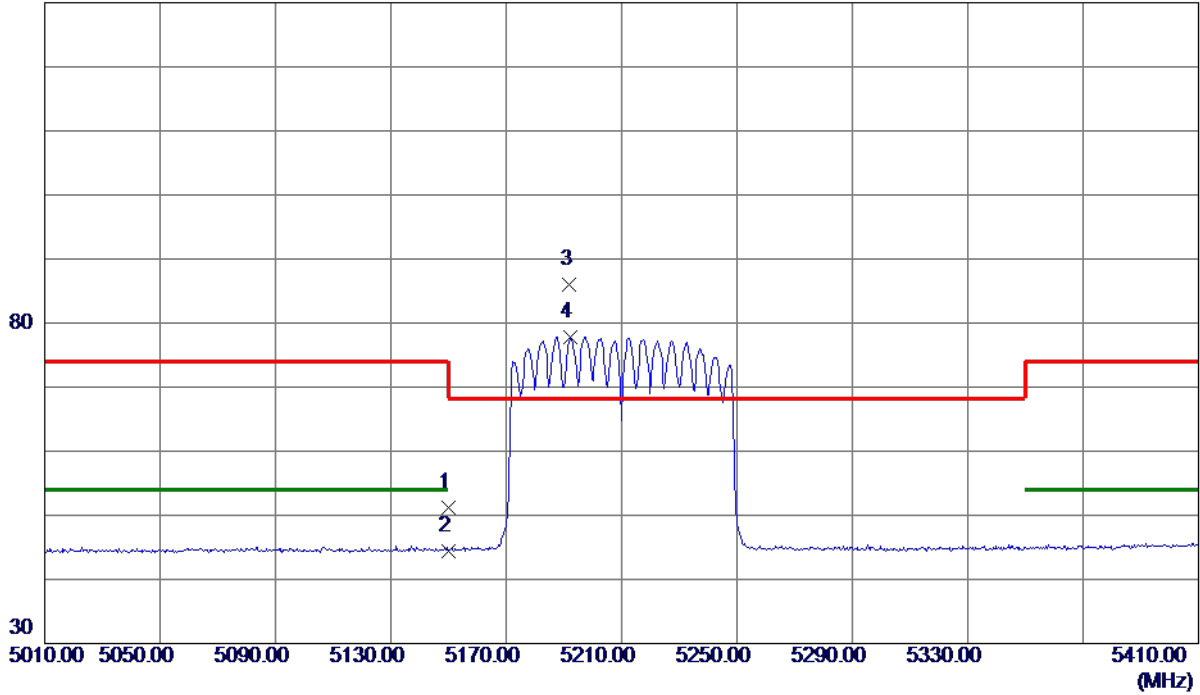

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	35.00	16.16	51.16	74.00	-22.84	Peak	
2	5150.0000	28.29	16.16	44.45	54.00	-9.55	AVG	
3 *	5192.0000	69.76	16.26	86.02	68.30	17.72	Peak	No Limit
4	5192.4000	61.63	16.26	77.89	999.00	-921.11	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

Horizontal

130 dBuV/m

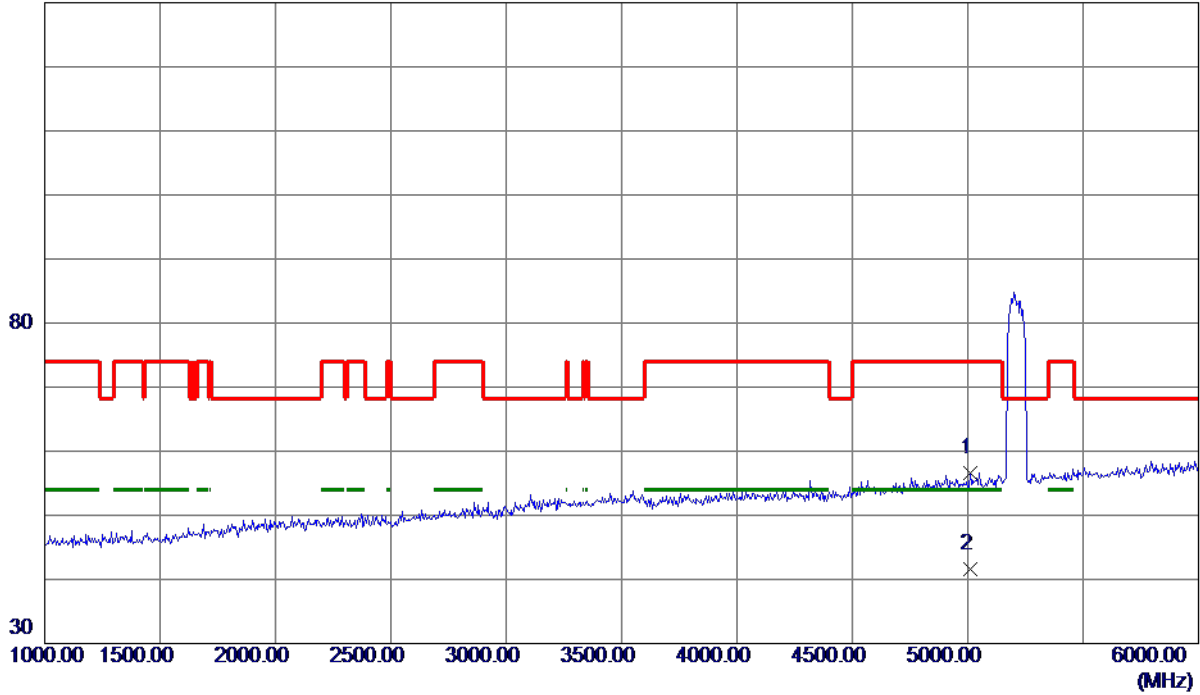

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5010.0000	40.84	15.82	56.66	74.00	-17.34	Peak	
2 *	5010.0000	25.70	15.82	41.52	54.00	-12.48	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

Horizontal

130 dBuV/m

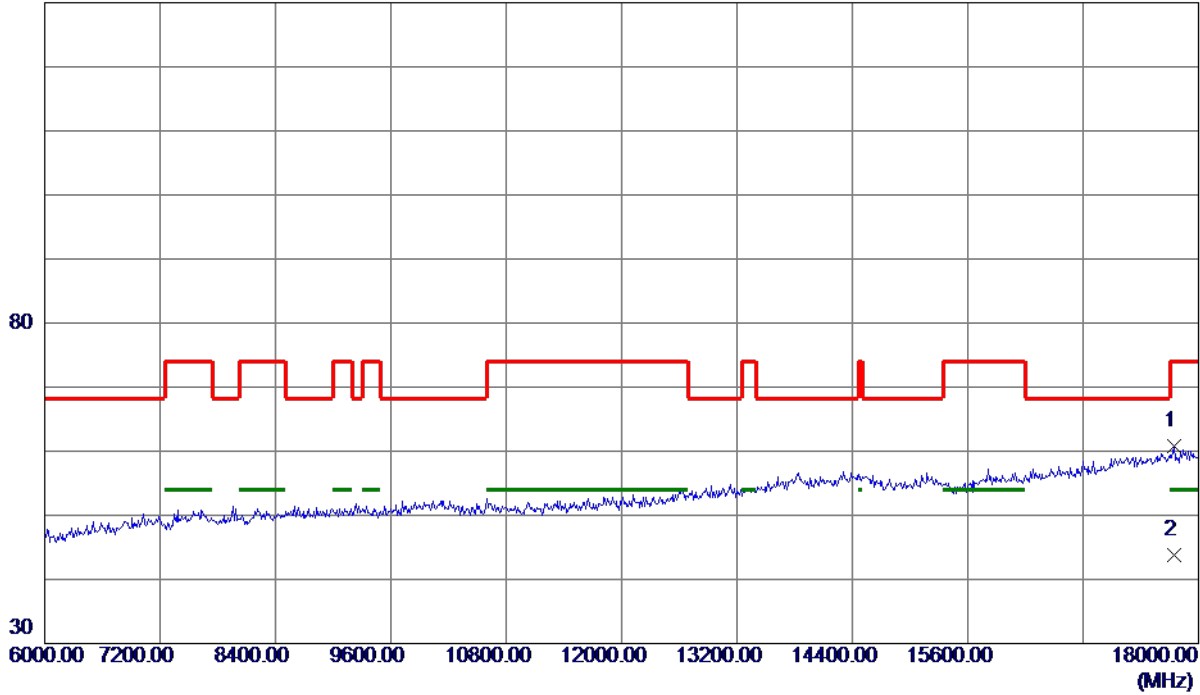

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17748.0000	38.74	22.15	60.89	74.00	-13.11	Peak	
2 *	17748.0000	21.67	22.15	43.82	54.00	-10.18	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

Horizontal

130 dBuV/m

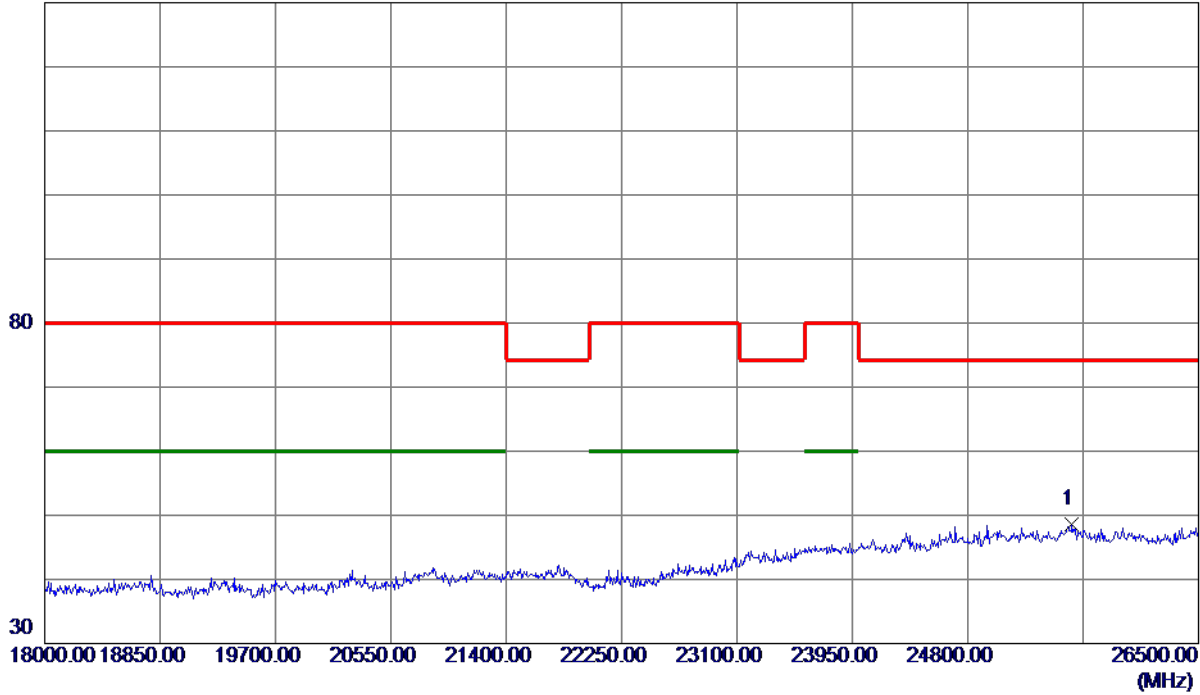


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25565.0000	28.50	20.02	48.52	74.30	-25.78	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

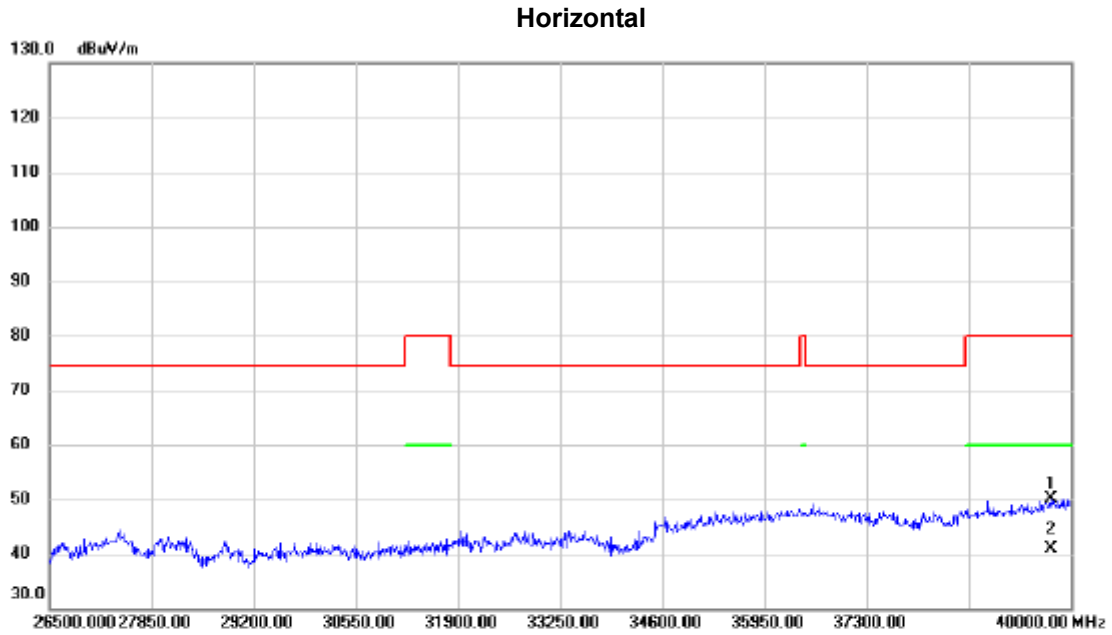

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39730.000	34.60	15.45	50.05	80.00	-29.95	peak	
2	*	39730.000	25.34	15.45	40.79	60.00	-19.21	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5745 MHz

Vertical

130 dBuV/m

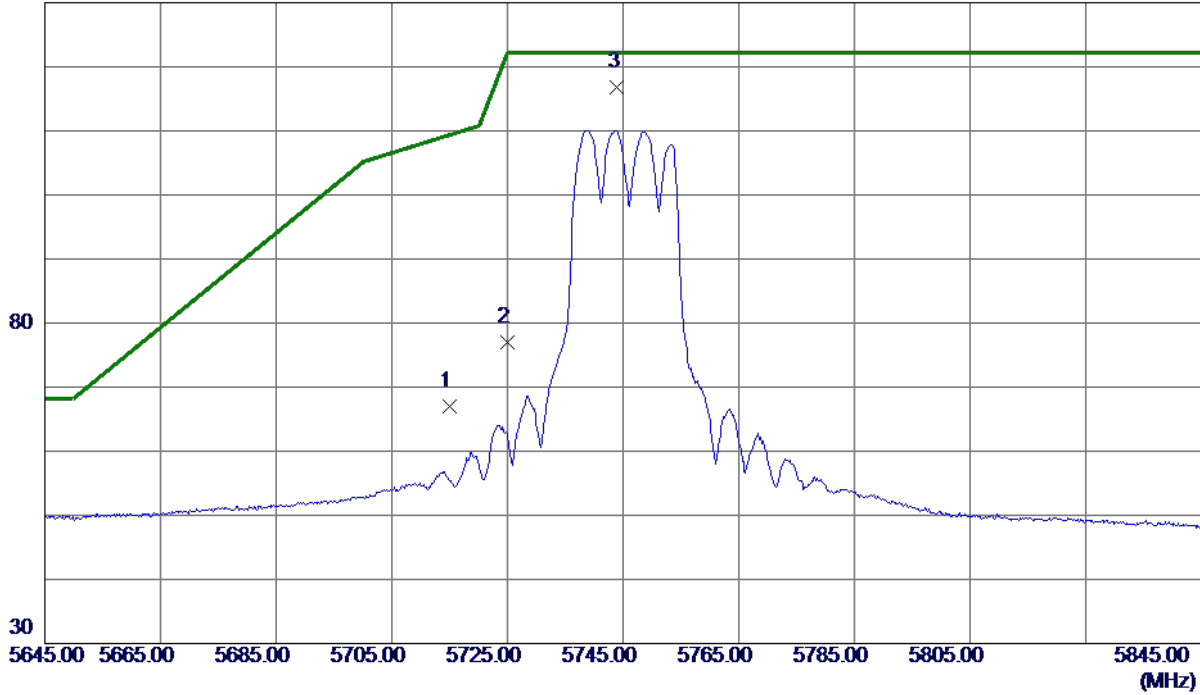

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	49.29	17.62	66.91	109.40	-42.49	Peak	
2	5725.0000	59.31	17.65	76.96	122.20	-45.24	Peak	
3 *	5744.0000	99.17	17.71	116.88	122.20	-5.32	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5745 MHz

Horizontal

130 dBuV/m

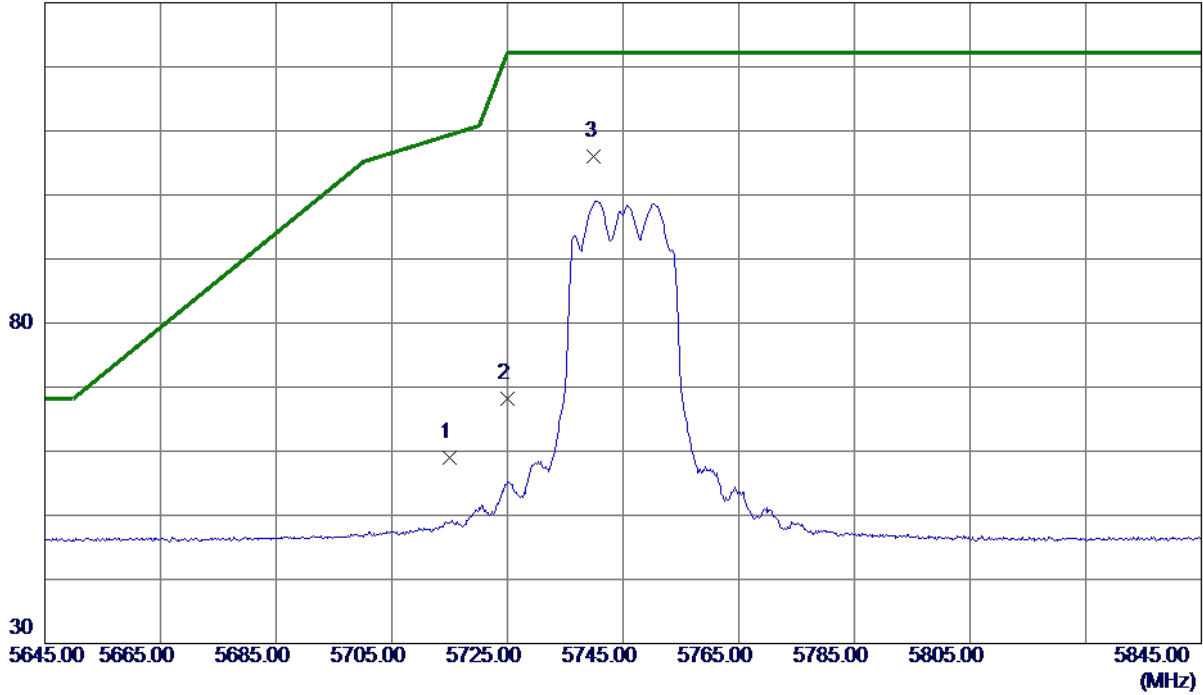

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	41.47	17.62	59.09	109.40	-50.31	Peak	
2	5725.0000	50.49	17.65	68.14	122.20	-54.06	Peak	
3 *	5740.0000	88.22	17.70	105.92	122.20	-16.28	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5785 MHz

Vertical

130 dBuV/m

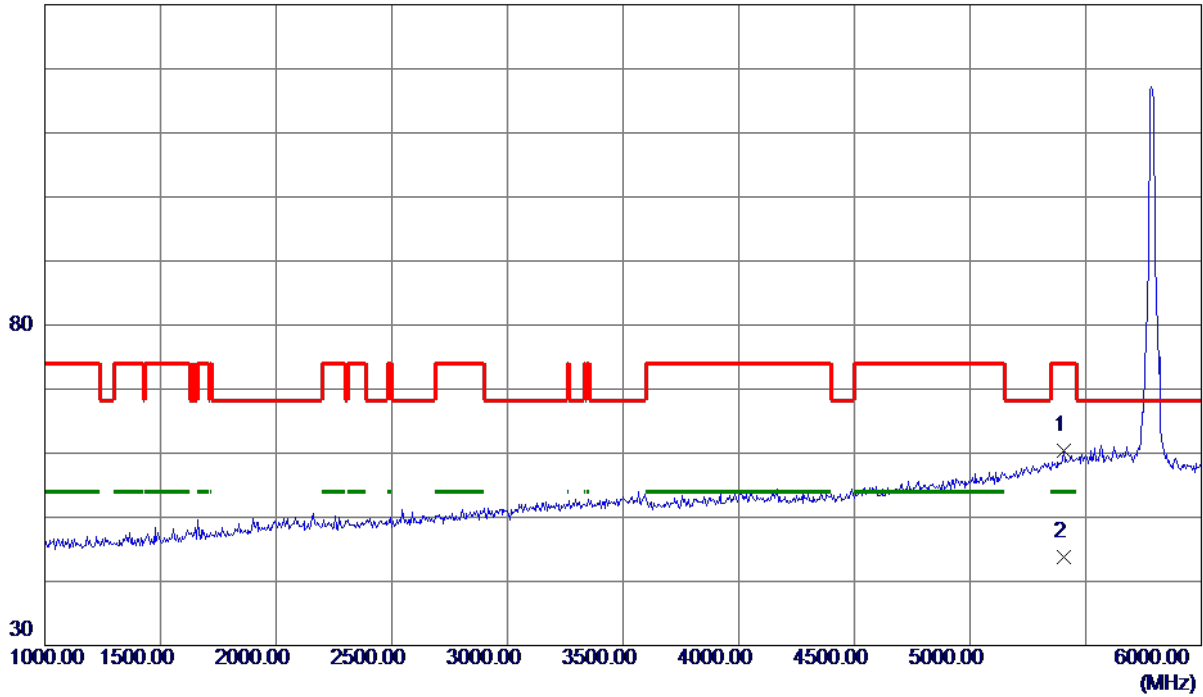

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5405.0000	43.56	16.76	60.32	74.00	-13.68	Peak	
2 *	5405.0000	27.13	16.76	43.89	54.00	-10.11	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5785 MHz

Vertical

130 dBuV/m

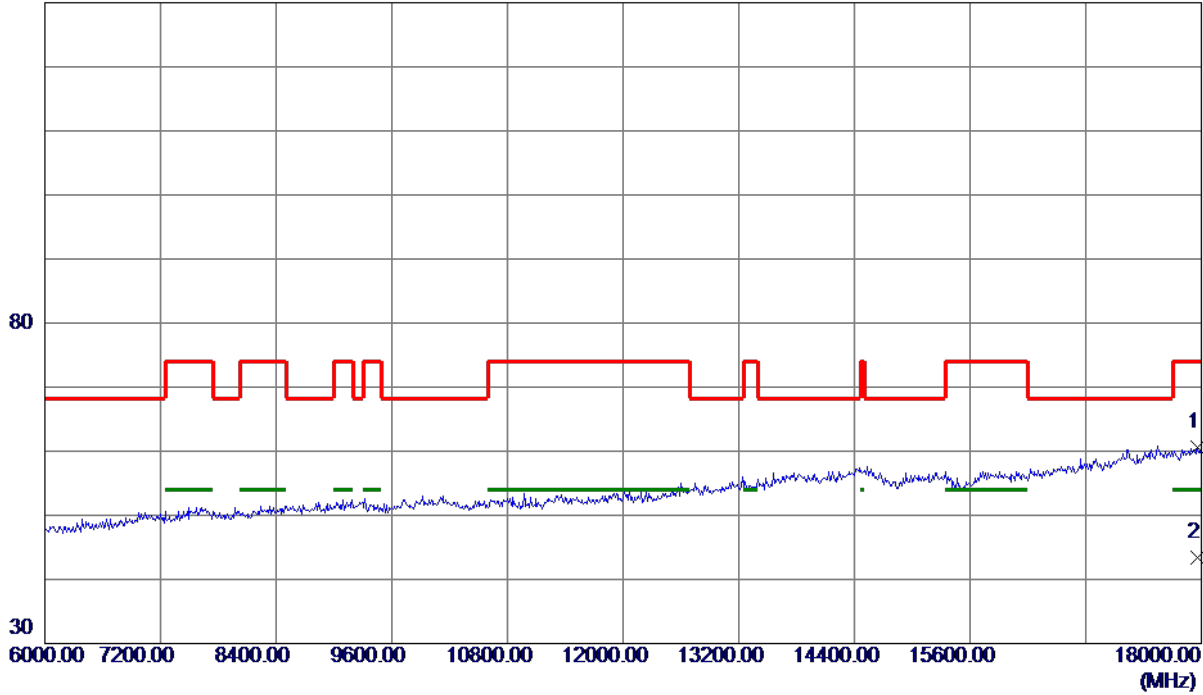

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17964.0000	38.27	22.28	60.55	74.00	-13.45	Peak	
2 *	17964.0000	21.09	22.28	43.37	54.00	-10.63	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5785 MHz

Vertical

130 dBuV/m

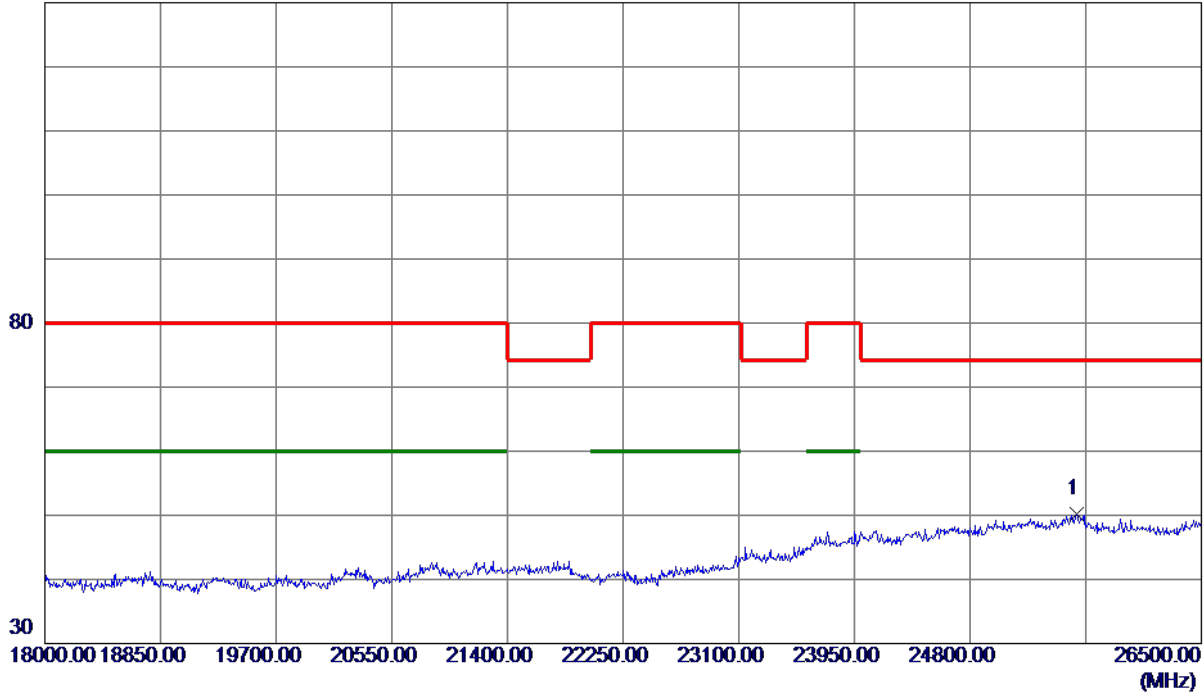


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25586.2500	30.20	20.02	50.22	74.30	-24.08	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5785 MHz

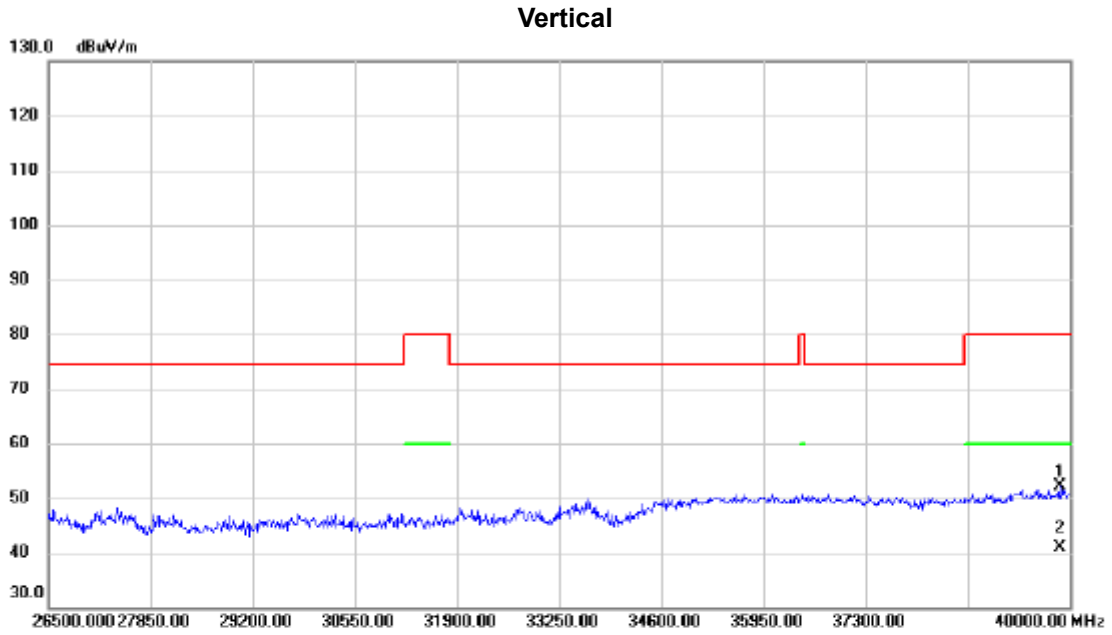

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39858.250	36.65	15.53	52.18	80.00	-27.82	peak	
2	*	39858.250	25.47	15.53	41.00	60.00	-19.00	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5785 MHz

Horizontal

130 dBuV/m

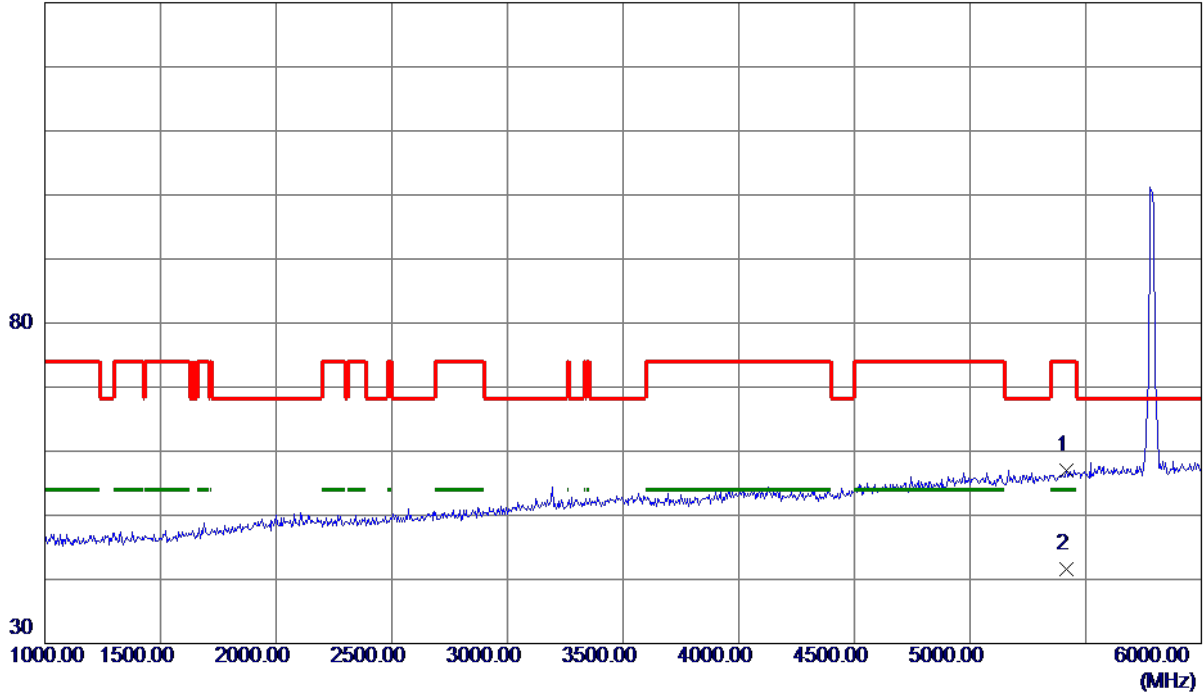

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5415.0000	40.20	16.78	56.98	74.00	-17.02	Peak	
2 *	5415.0000	24.81	16.78	41.59	54.00	-12.41	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5785 MHz

Horizontal

130 dBuV/m

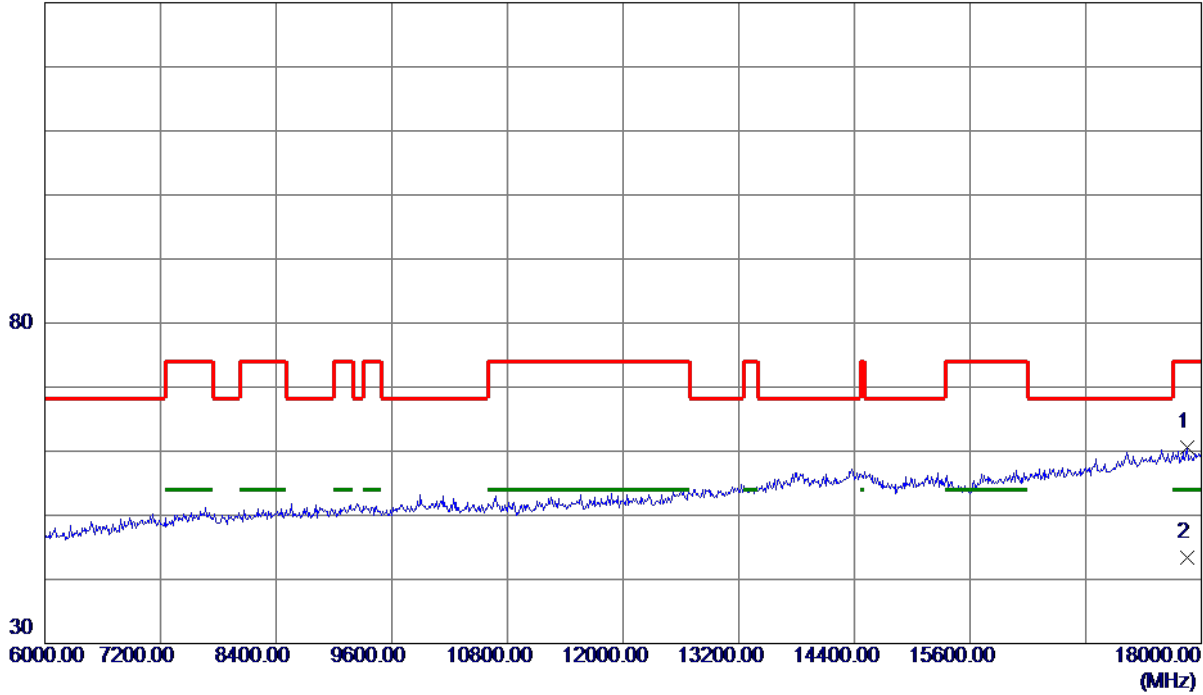

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17856.0000	38.31	22.21	60.52	74.00	-13.48	Peak	
2 *	17856.0000	21.25	22.21	43.46	54.00	-10.54	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5785 MHz

Horizontal

130 dBuV/m

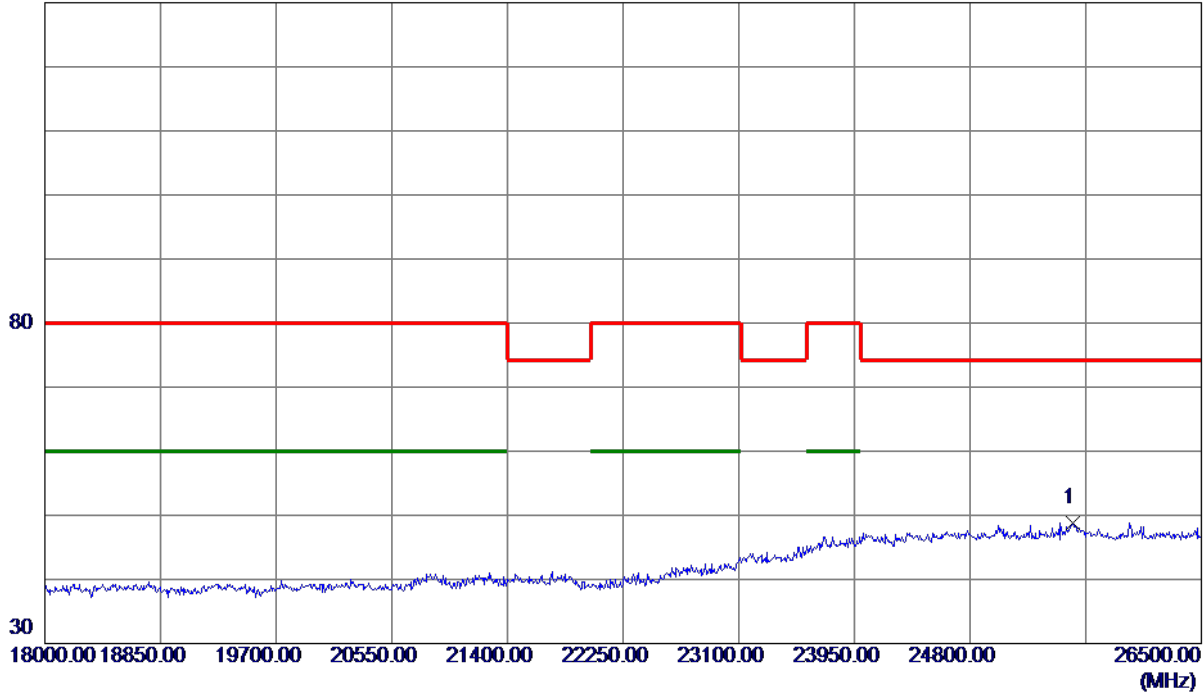


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25552.2500	28.87	20.02	48.89	74.30	-25.41	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5785 MHz

Horizontal

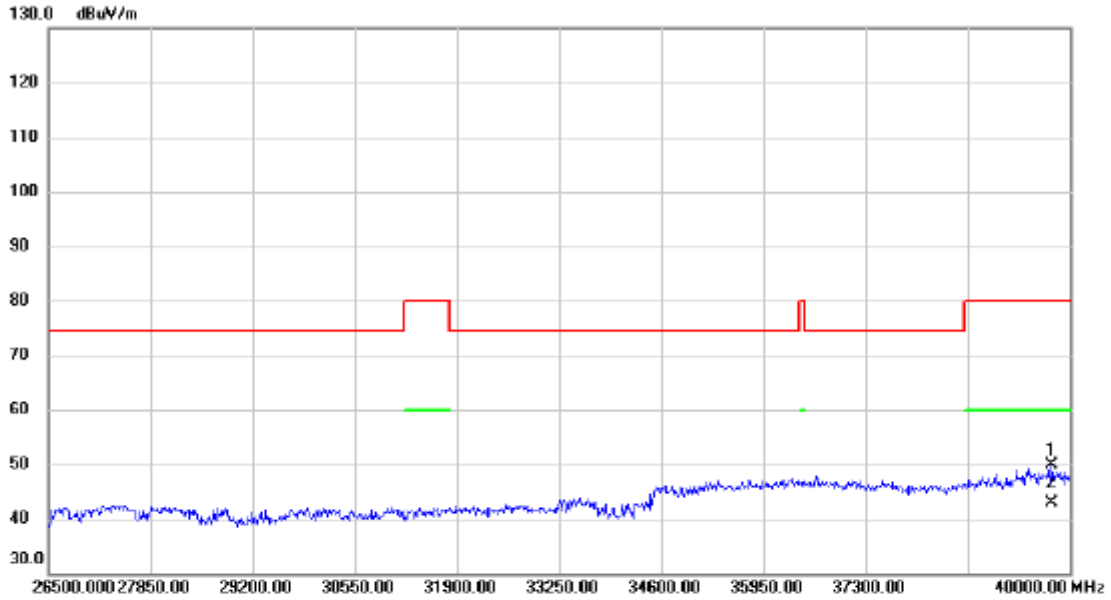


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39763.750	34.52	15.48	50.00	80.00	-30.00	peak	
2	*	39763.750	27.46	15.48	42.94	60.00	-17.06	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5825 MHz

Vertical

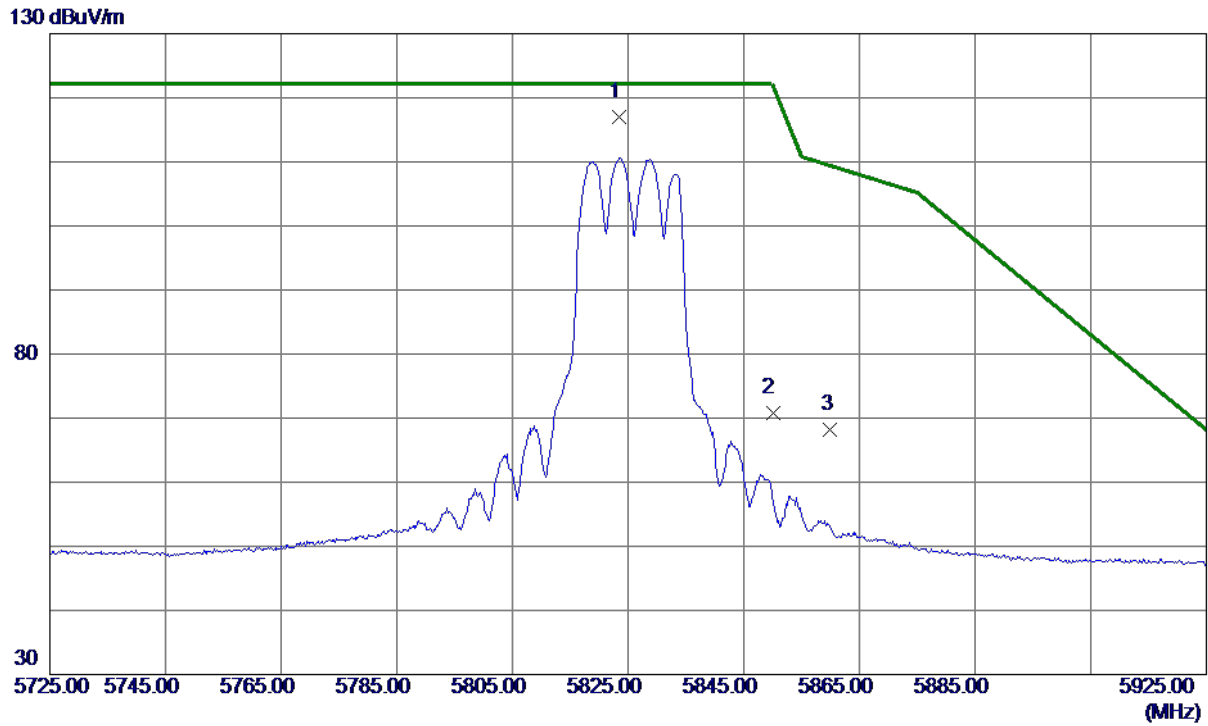

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5823.4000	99.10	17.95	117.05	122.20	-5.15	Peak	No Limit
2	5850.0000	52.71	18.02	70.73	122.20	-51.47	Peak	
3	5860.0000	50.23	18.05	68.28	109.40	-41.12	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5825 MHz

Horizontal

130 dBuV/m

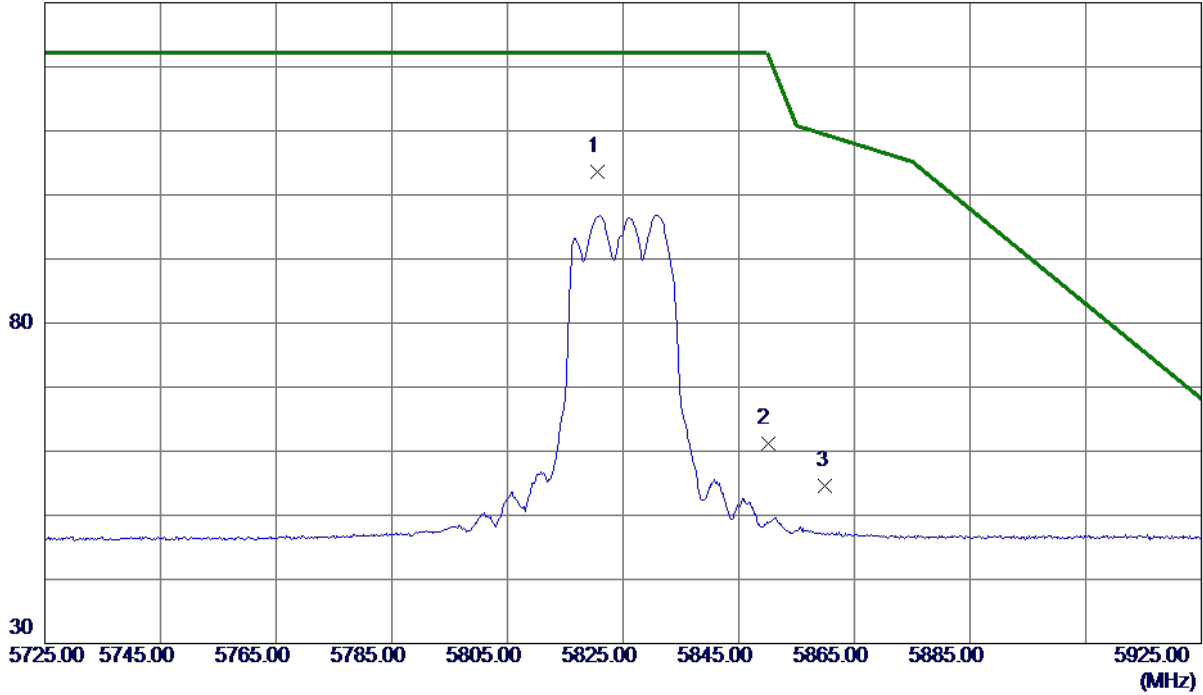

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5820.6000	85.63	17.94	103.57	122.20	-18.63	Peak	No Limit
2	5850.0000	43.22	18.02	61.24	122.20	-60.96	Peak	
3	5860.0000	36.62	18.05	54.67	109.40	-54.73	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5755 MHz

Vertical

130 dBuV/m

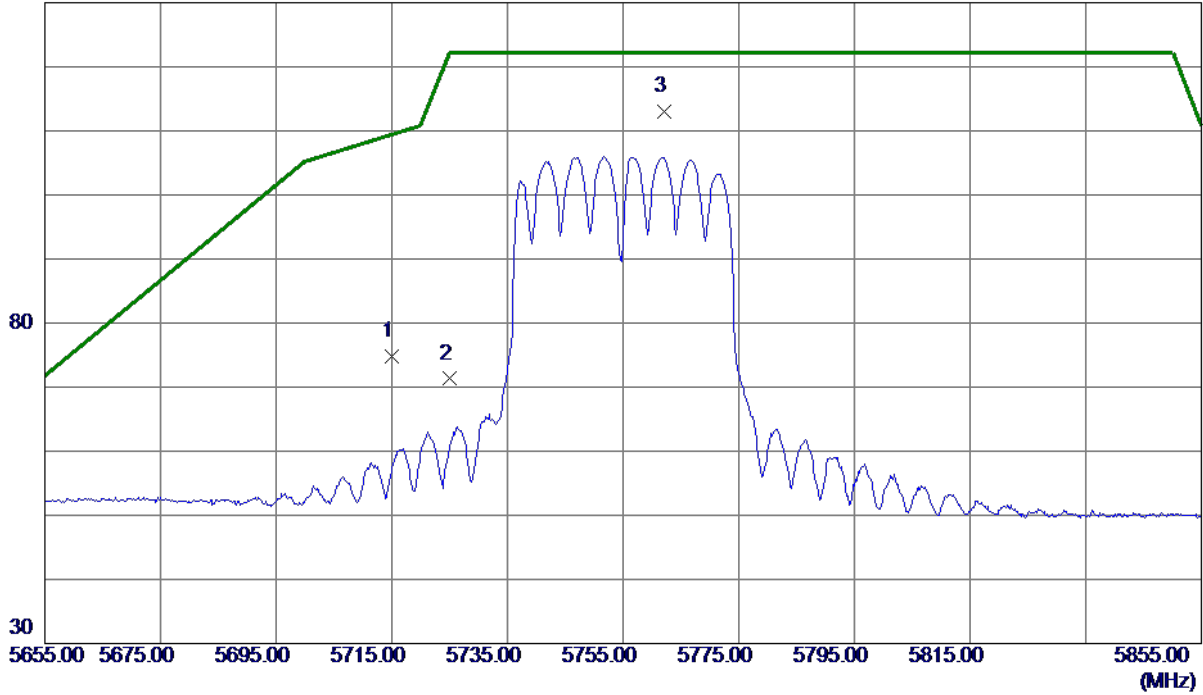


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	57.16	17.62	74.78	109.40	-34.62	Peak	
2	5725.0000	53.65	17.65	71.30	122.20	-50.90	Peak	
3 *	5762.2000	95.28	17.76	113.04	122.20	-9.16	Peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5755 MHz

Horizontal

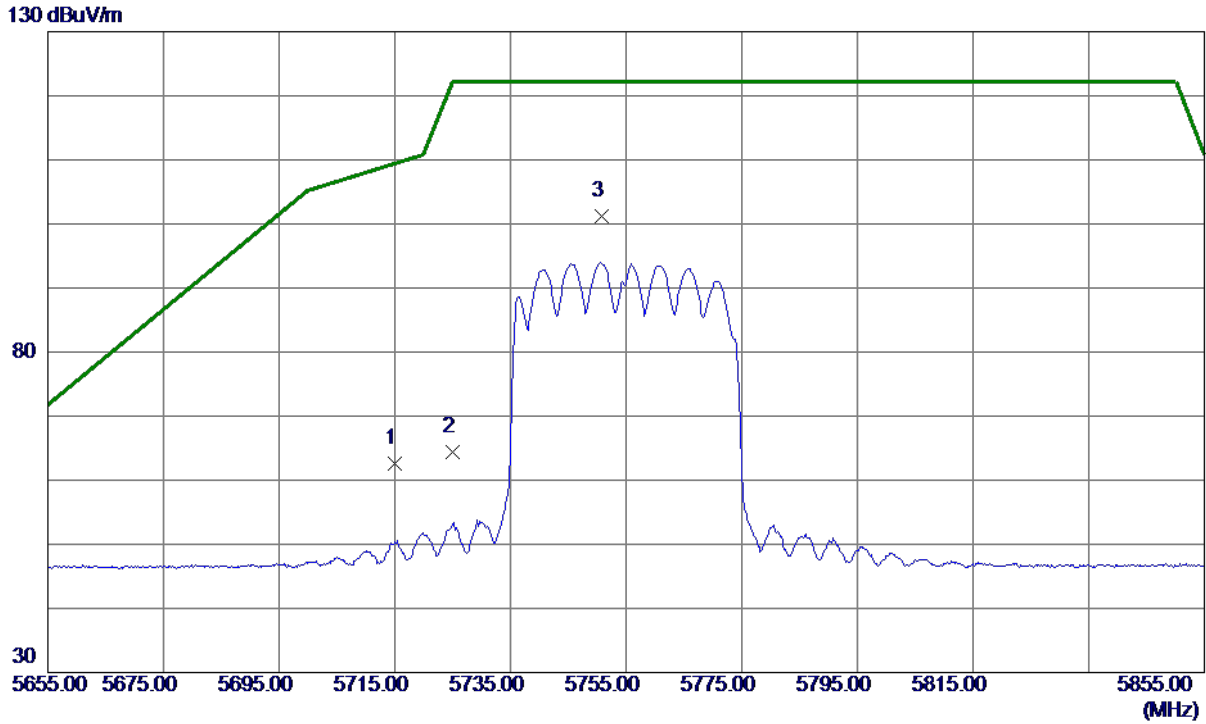

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	44.93	17.62	62.55	109.40	-46.85	Peak	
2	5725.0000	46.79	17.65	64.44	122.20	-57.76	Peak	
3 *	5750.8000	83.53	17.73	101.26	122.20	-20.94	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

Vertical

130 dBuV/m

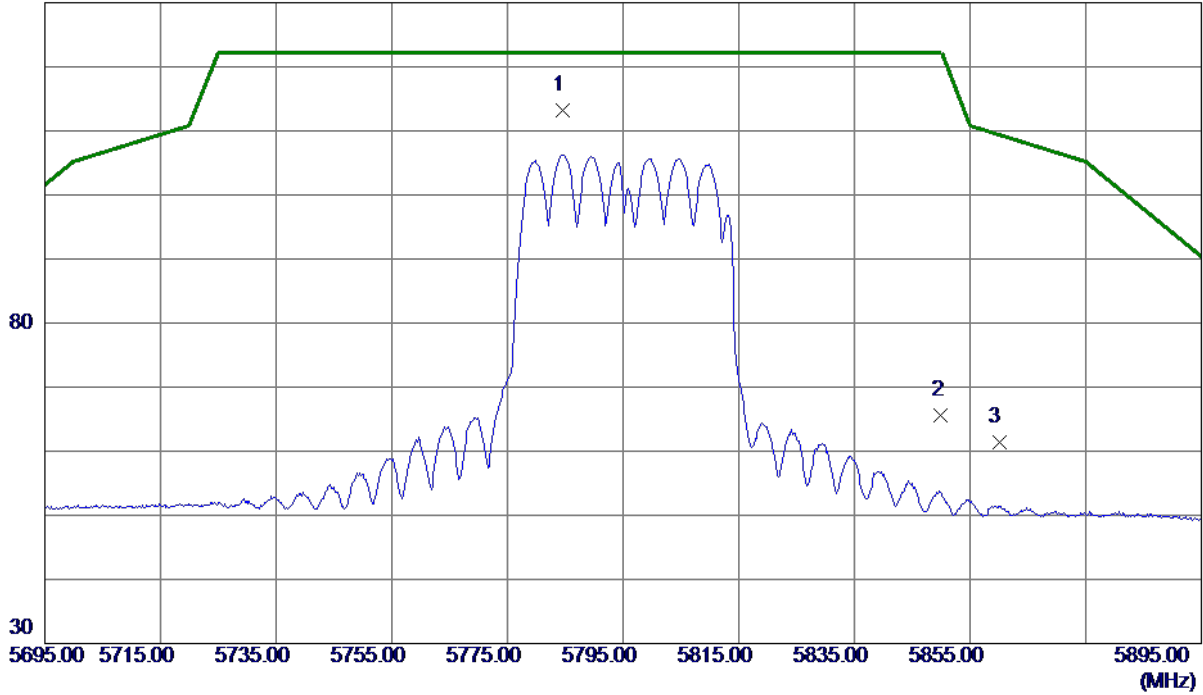

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5784.6000	95.42	17.83	113.25	122.20	-8.95	Peak	No Limit
2	5850.0000	47.51	18.02	65.53	122.20	-56.67	Peak	
3	5860.0000	43.29	18.05	61.34	109.40	-48.06	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

Vertical

130 dBuV/m

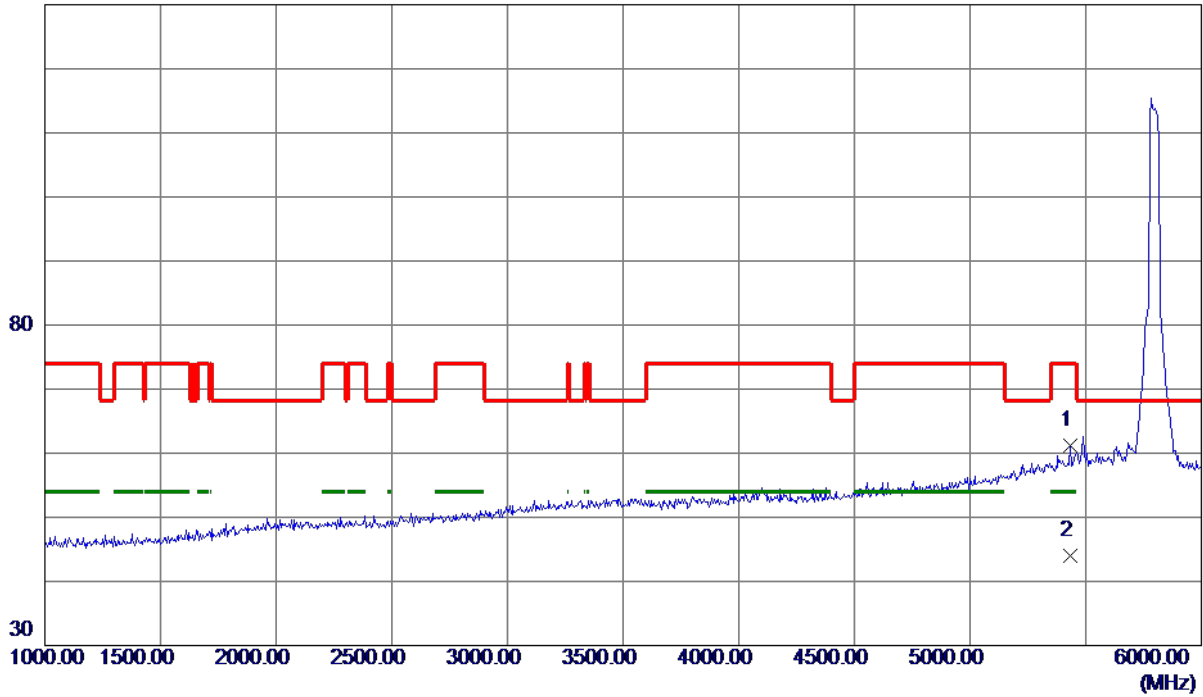

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5435.0000	44.41	16.83	61.24	74.00	-12.76	Peak	
2 *	5435.0000	27.10	16.83	43.93	54.00	-10.07	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

Vertical

130 dBuV/m



No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17736.0000	38.23	22.14	60.37	74.00	-13.63	Peak	
2 *	17736.0000	21.00	22.14	43.14	54.00	-10.86	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

Vertical

130 dBuV/m

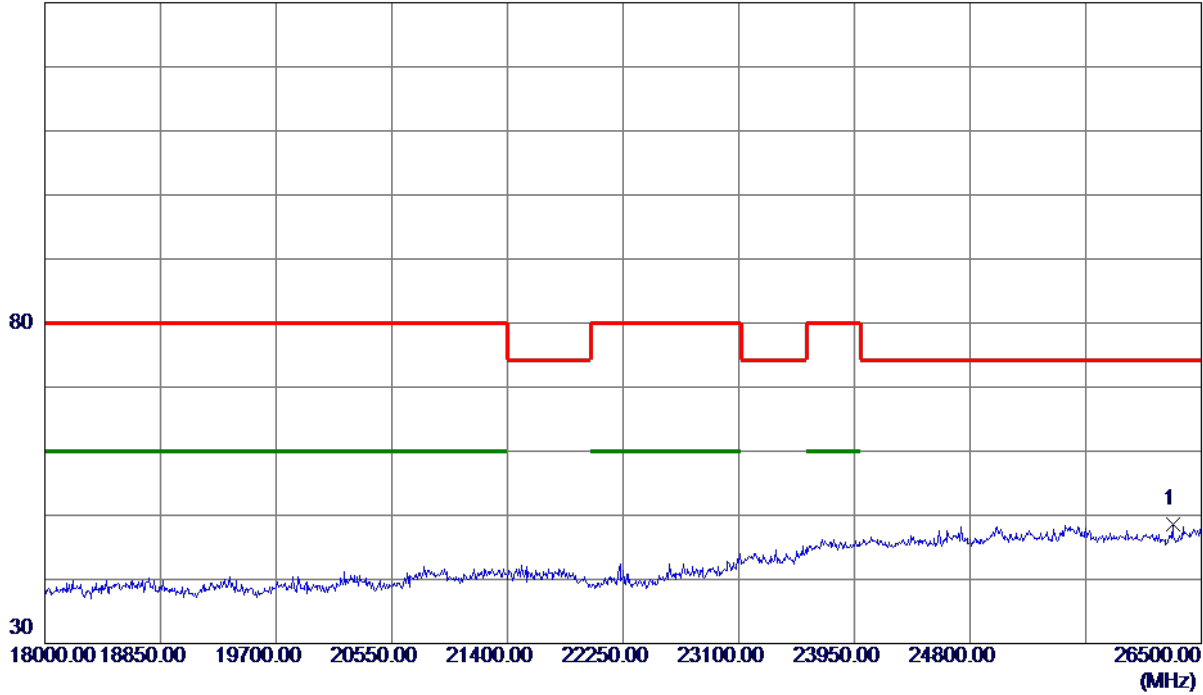


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	26291.7500	28.35	20.32	48.67	74.30	-25.63	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

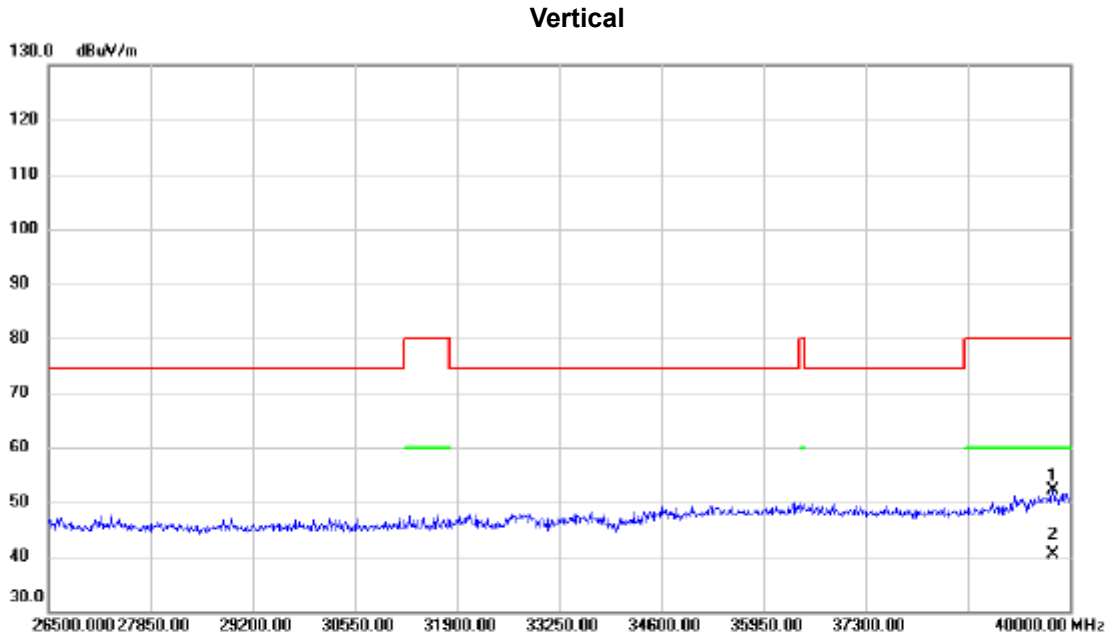

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39770.500	36.58	15.48	52.06	80.00	-27.94	peak	
2	*	39770.500	24.87	15.48	40.35	60.00	-19.65	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

Horizontal

130 dBuV/m

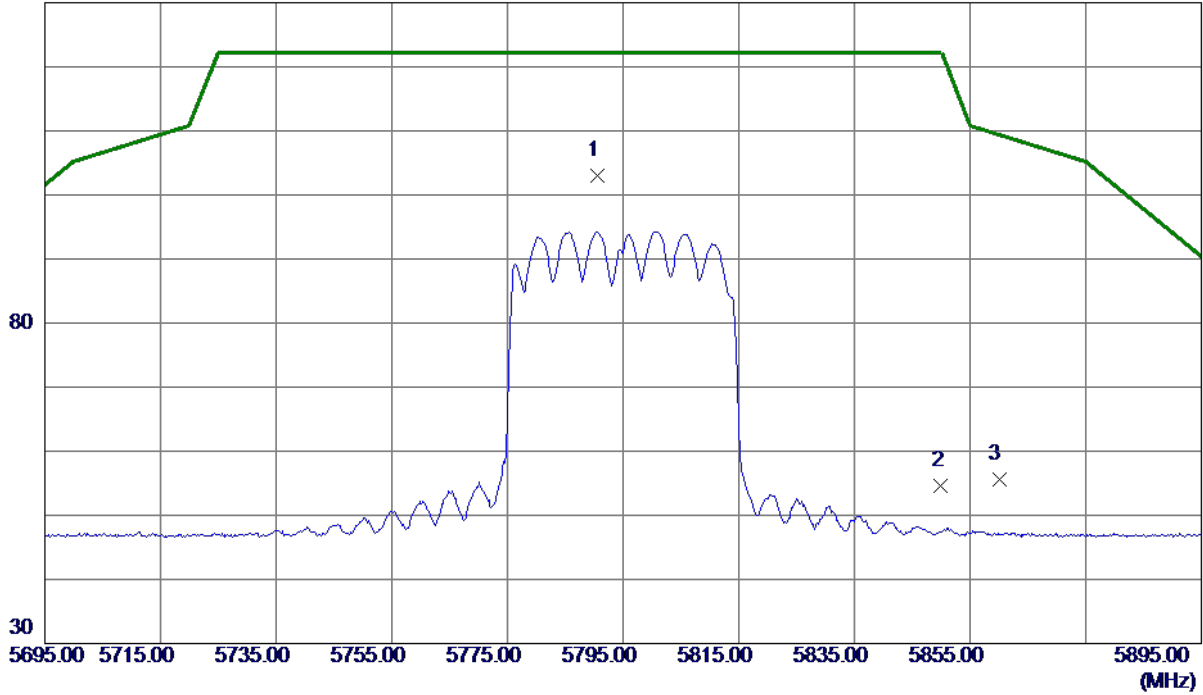

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5790.6000	85.06	17.85	102.91	122.20	-19.29	Peak	No Limit
2	5850.0000	36.50	18.02	54.52	122.20	-67.68	Peak	
3	5860.0000	37.62	18.05	55.67	109.40	-53.73	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

Horizontal

130 dBuV/m

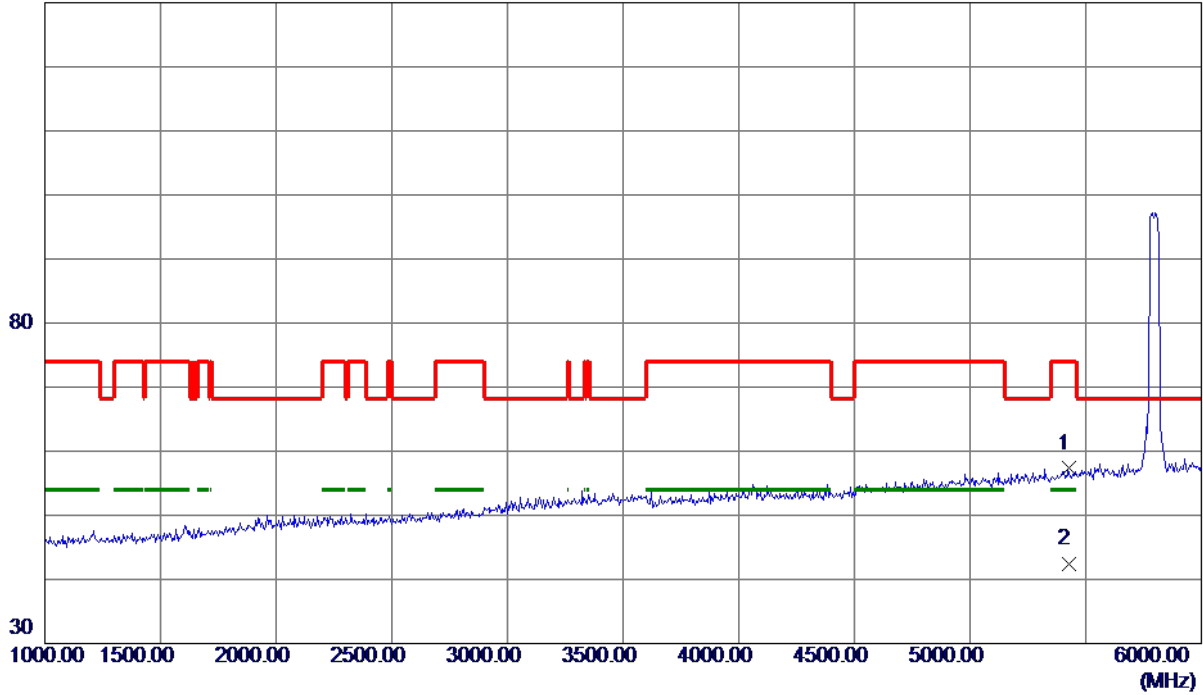

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5425.0000	40.49	16.81	57.30	74.00	-16.70	Peak	
2 *	5425.0000	25.65	16.81	42.46	54.00	-11.54	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

Horizontal

130 dBuV/m

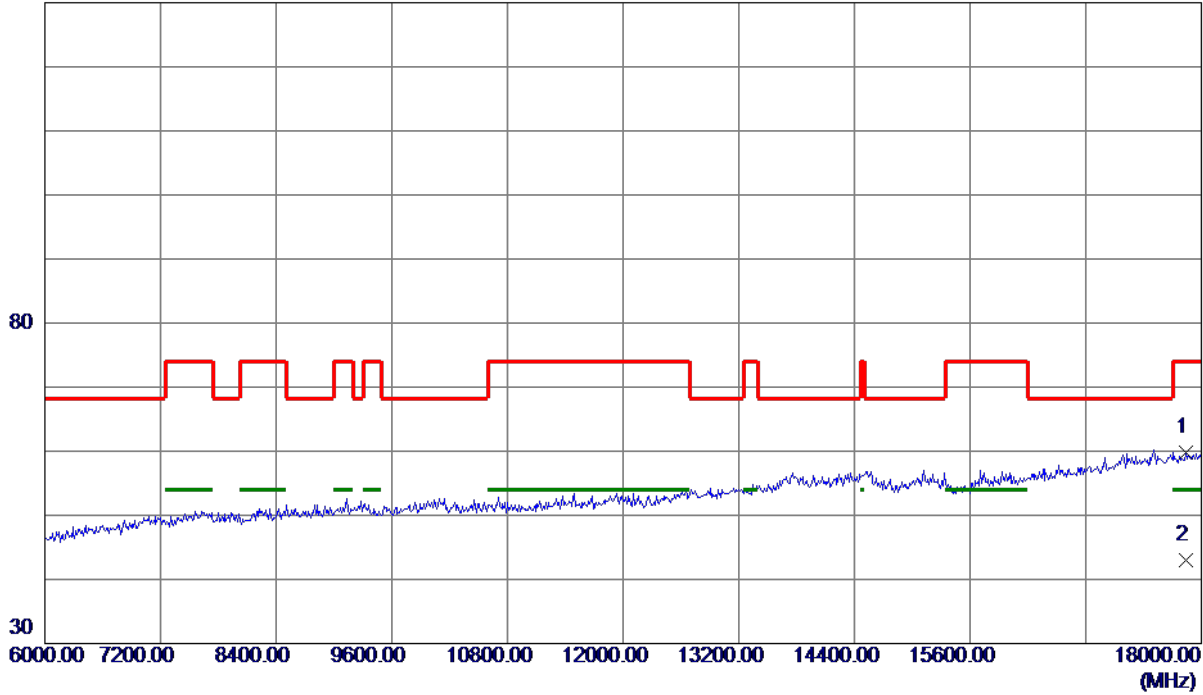

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17844.0000	37.67	22.21	59.88	74.00	-14.12	Peak	
2 *	17844.0000	20.72	22.21	42.93	54.00	-11.07	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

Horizontal

130 dBuV/m

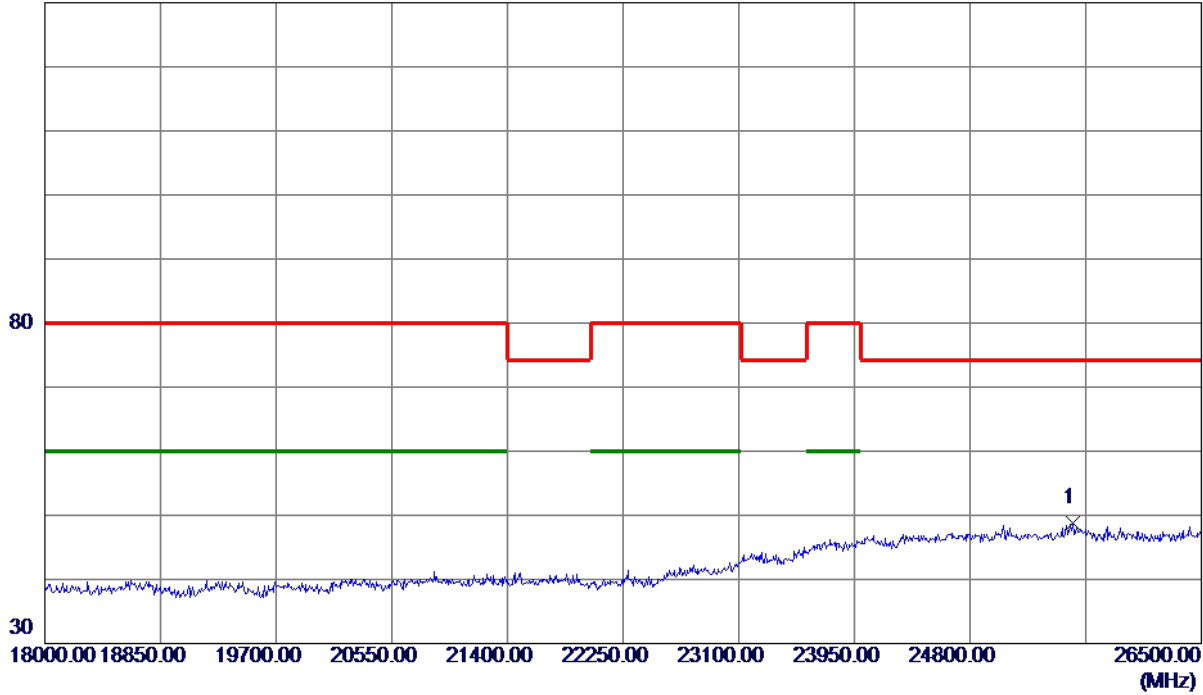


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25556.5000	28.69	20.02	48.71	74.30	-25.59	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

Horizontal

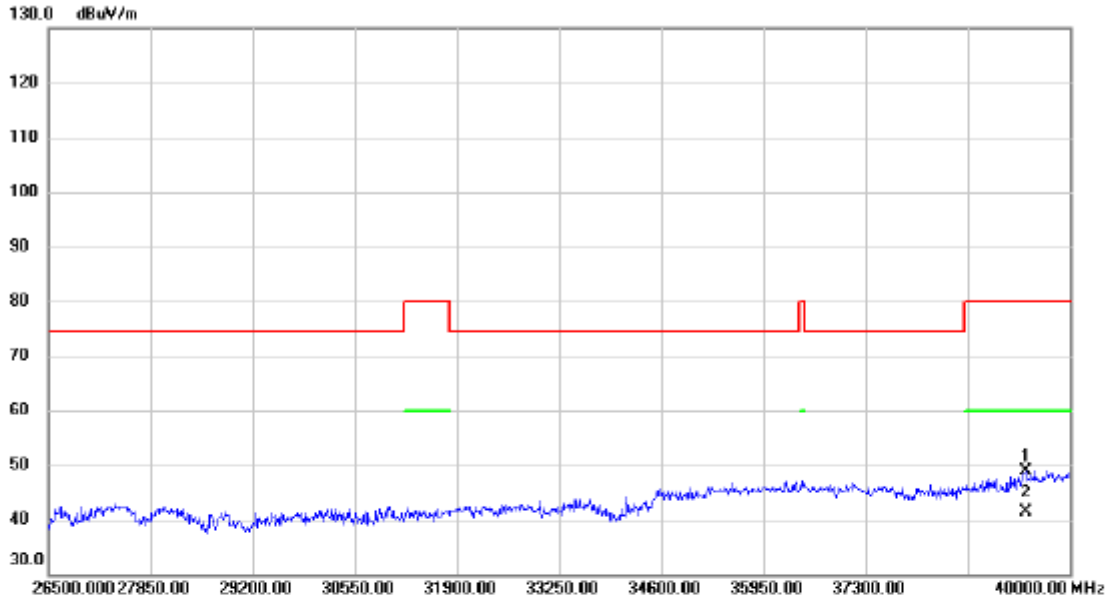

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39406.000	33.95	14.91	48.86	80.00	-31.14	peak	
2	*	39406.000	26.58	14.91	41.49	60.00	-18.51	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

Vertical

130 dBuV/m

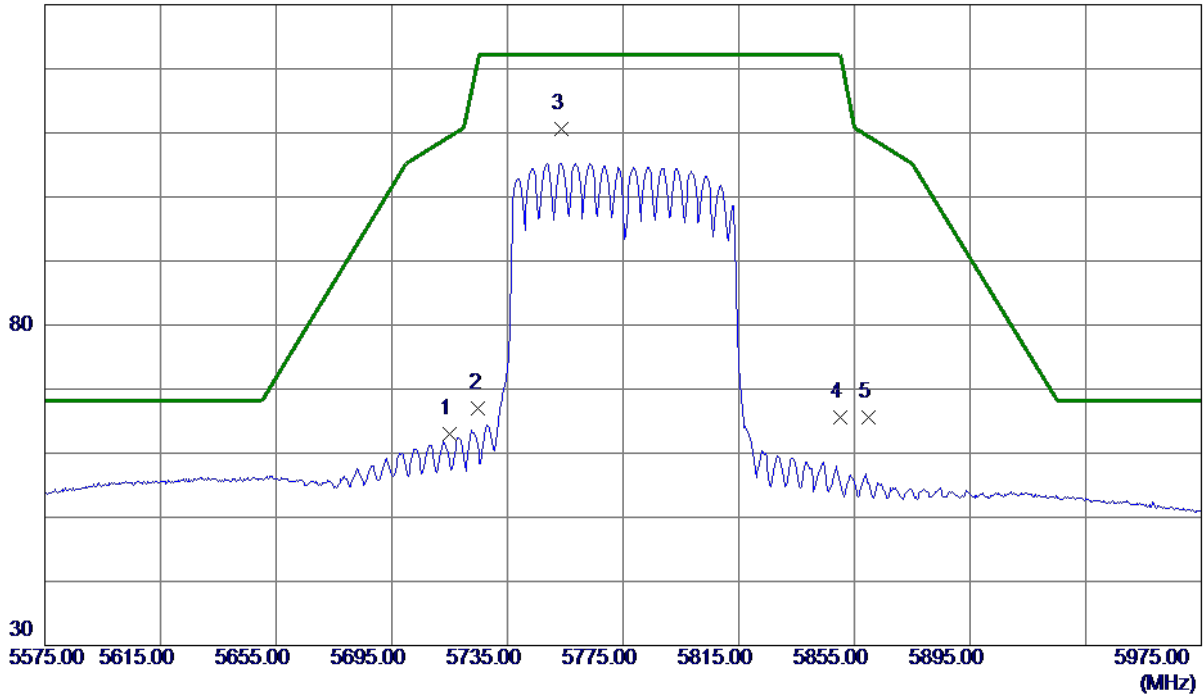

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	45.36	17.62	62.98	109.40	-46.42	Peak	
2	5725.0000	49.39	17.65	67.04	122.20	-55.16	Peak	
3 *	5753.8000	92.84	17.74	110.58	122.20	-11.62	Peak	No Limit
4	5850.0000	47.57	18.02	65.59	122.20	-56.61	Peak	
5	5860.0000	47.60	18.05	65.65	109.40	-43.75	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

Vertical

130 dBuV/m

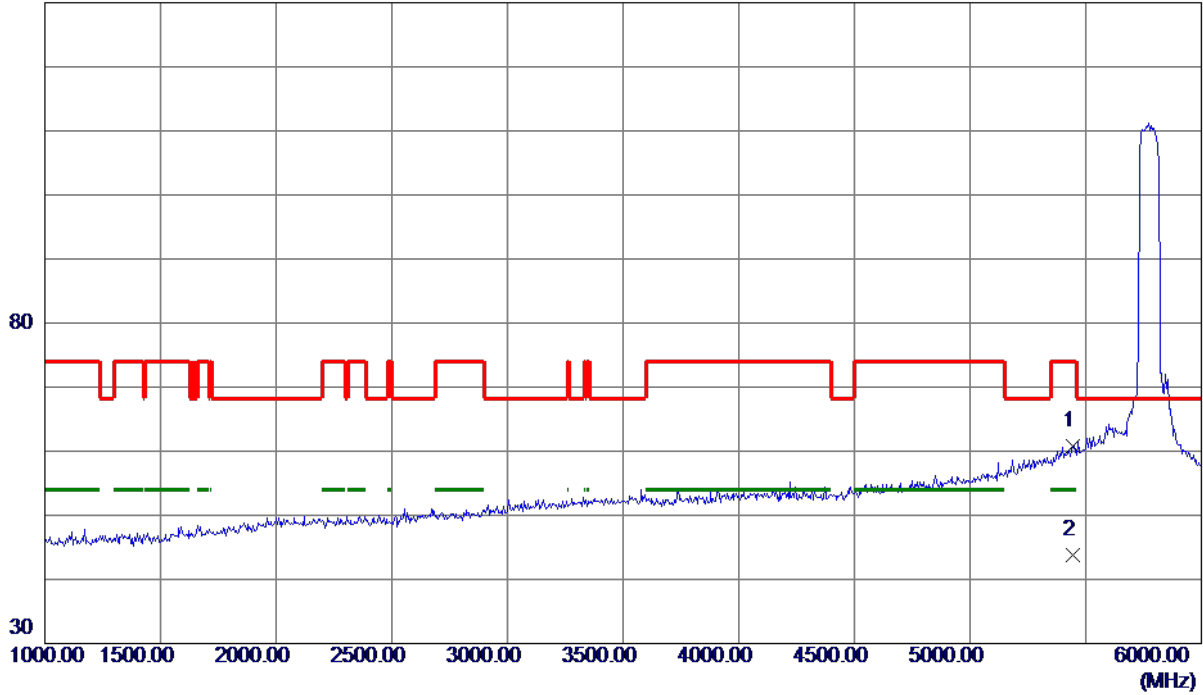

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5445.0000	43.95	16.85	60.80	74.00	-13.20	Peak	
2 *	5445.0000	27.02	16.85	43.87	54.00	-10.13	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

Vertical

130 dBuV/m

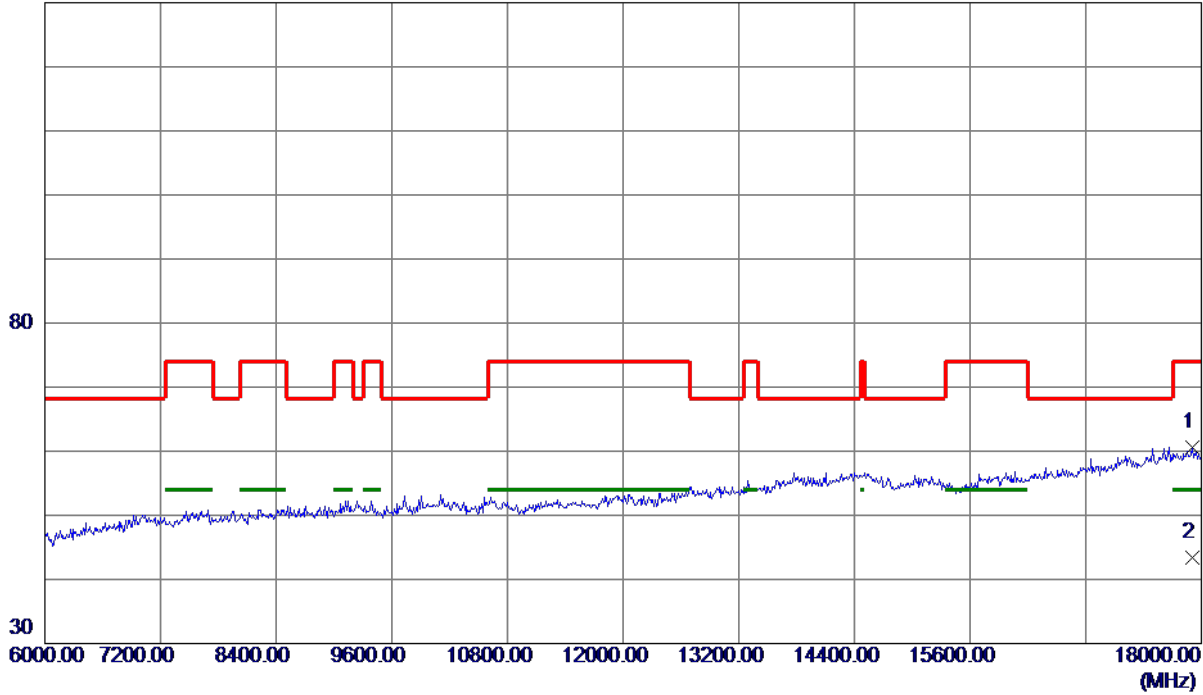

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17904.0000	38.28	22.24	60.52	74.00	-13.48	Peak	
2 *	17904.0000	21.11	22.24	43.35	54.00	-10.65	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

Vertical

130 dBuV/m

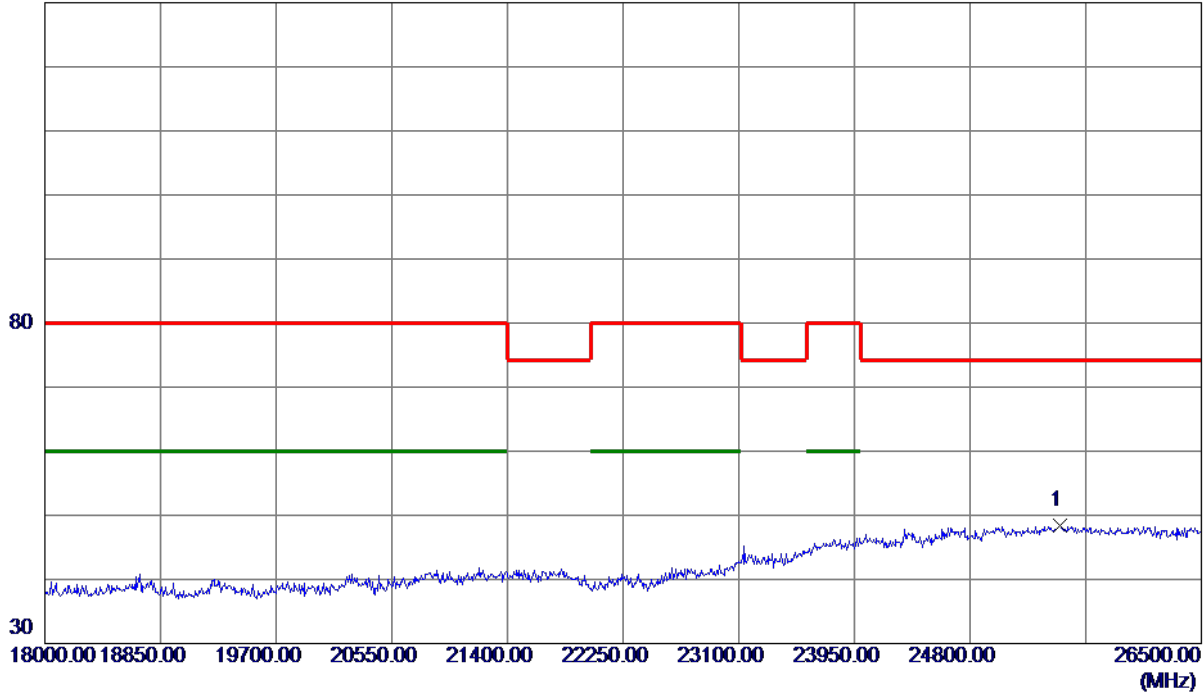


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25463.0000	28.43	20.03	48.46	74.30	-25.84	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

Vertical

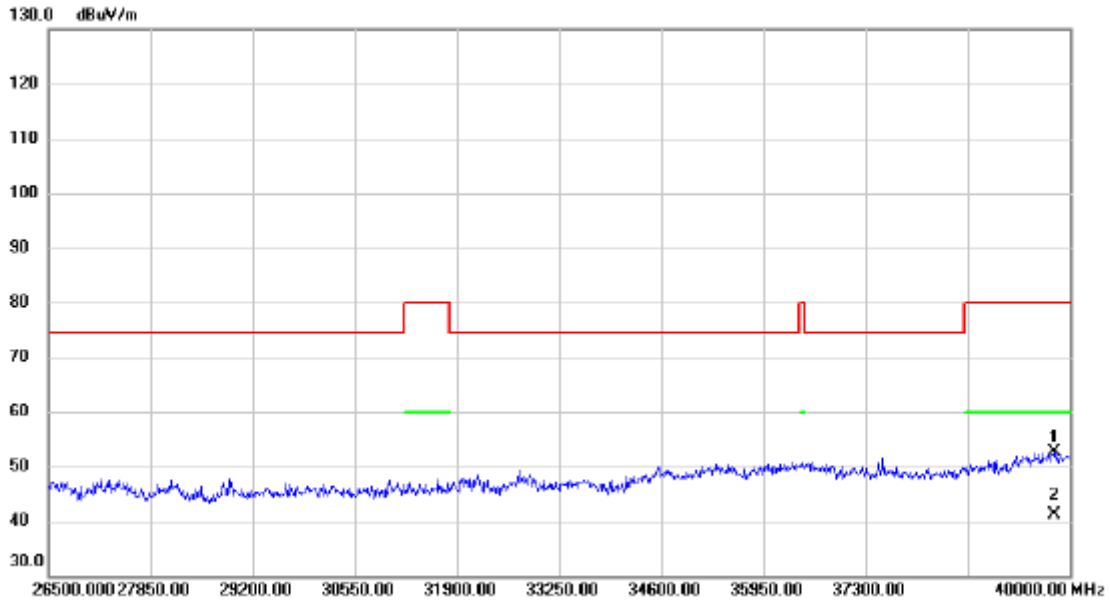

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39797.500	37.24	15.49	52.73	80.00	-27.27	peak	
2	*	39797.500	25.69	15.49	41.18	60.00	-18.82	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

Horizontal

130 dBuV/m

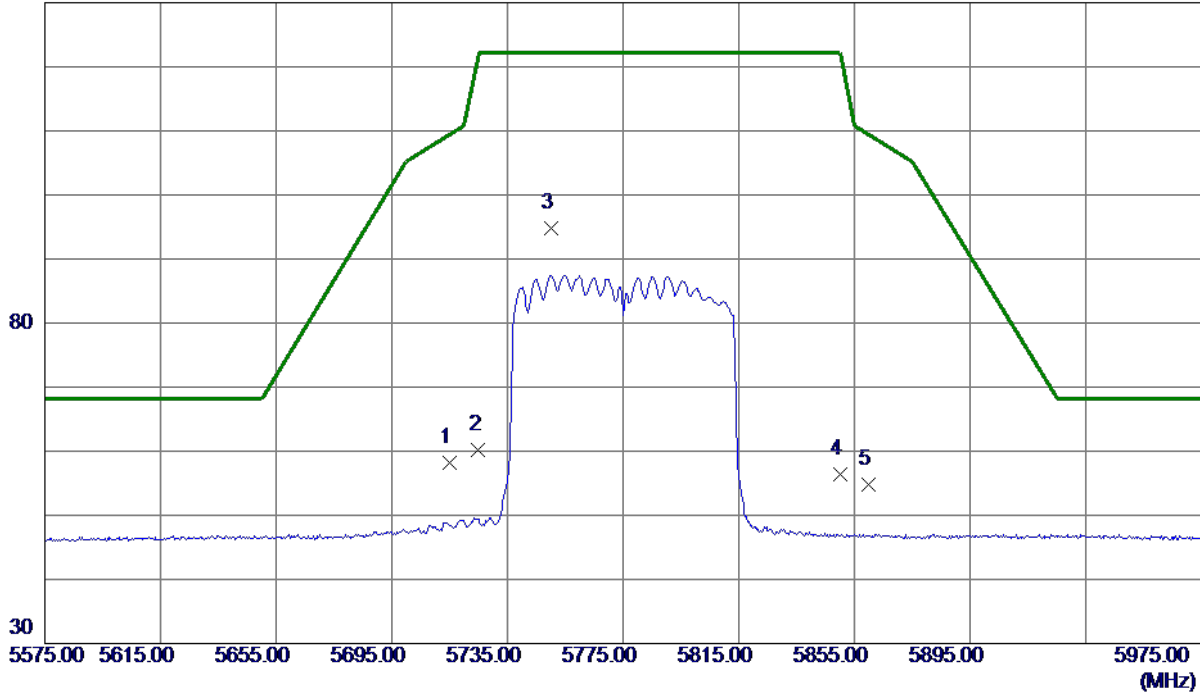

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	40.59	17.62	58.21	109.40	-51.19	Peak	
2	5725.0000	42.58	17.65	60.23	122.20	-61.97	Peak	
3 *	5750.2000	77.01	17.73	94.74	122.20	-27.46	Peak	No Limit
4	5850.0000	38.35	18.02	56.37	122.20	-65.83	Peak	
5	5860.0000	36.78	18.05	54.83	109.40	-54.57	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

Horizontal

130 dBuV/m

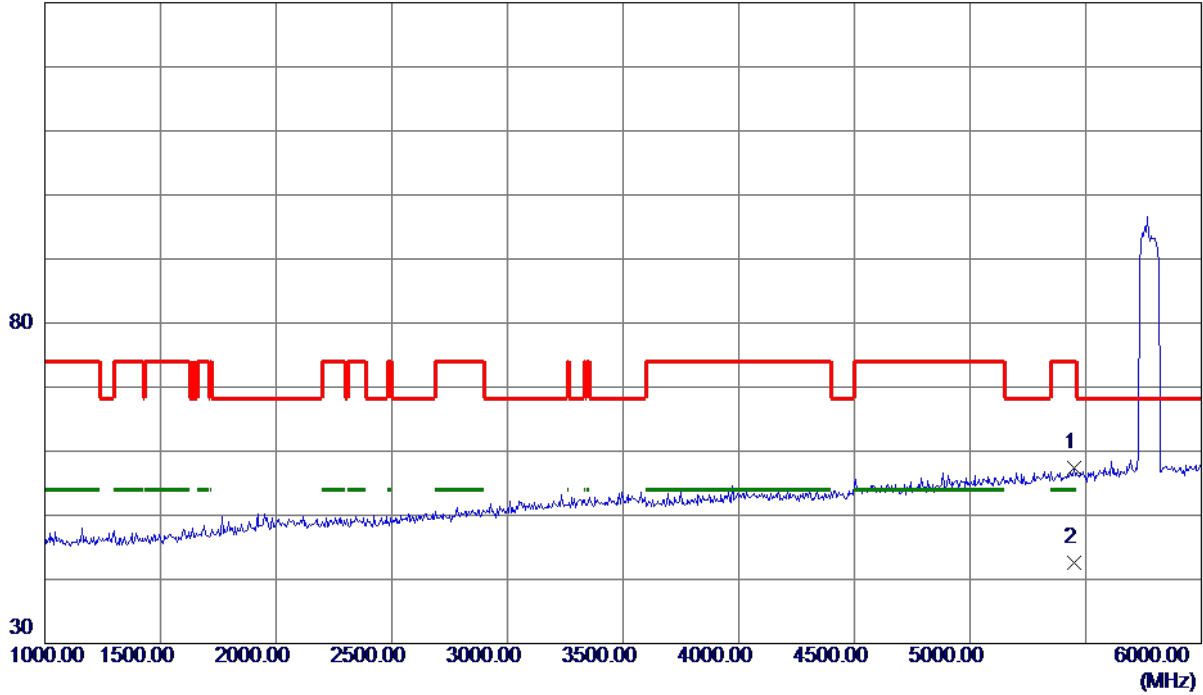

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5450.0000	40.57	16.87	57.44	74.00	-16.56	Peak	
2 *	5450.0000	25.71	16.87	42.58	54.00	-11.42	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

Horizontal

130 dBuV/m

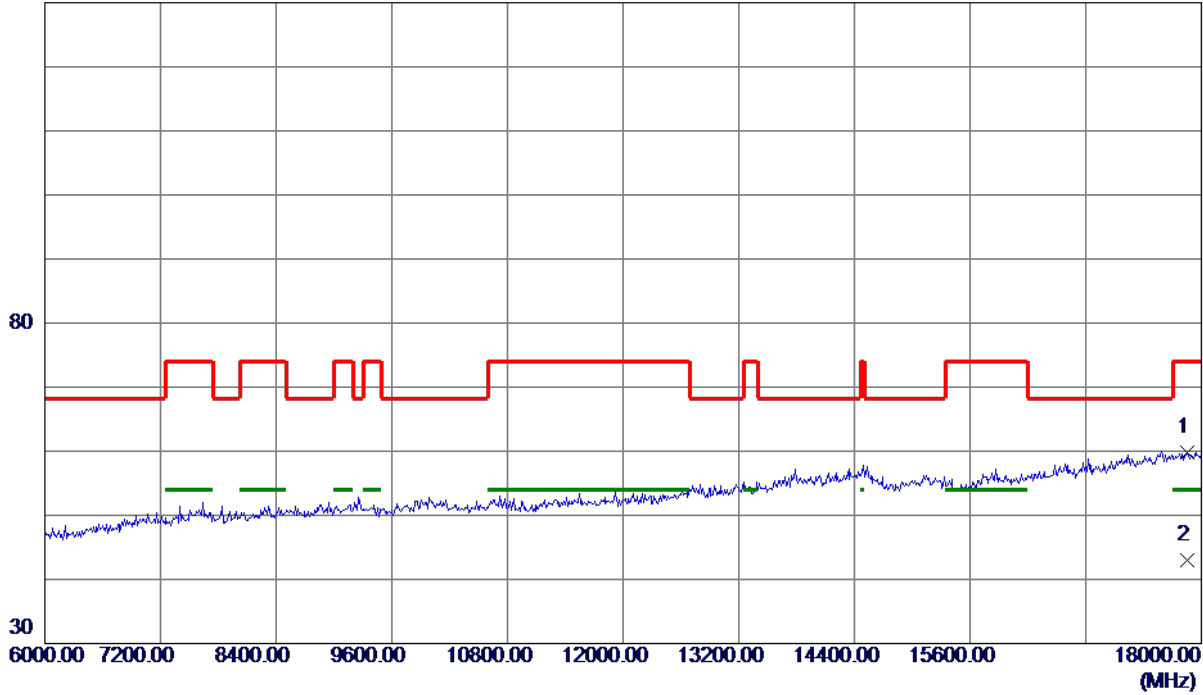

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17856.0000	37.53	22.21	59.74	74.00	-14.26	Peak	
2 *	17856.0000	20.70	22.21	42.91	54.00	-11.09	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

Horizontal

130 dBuV/m

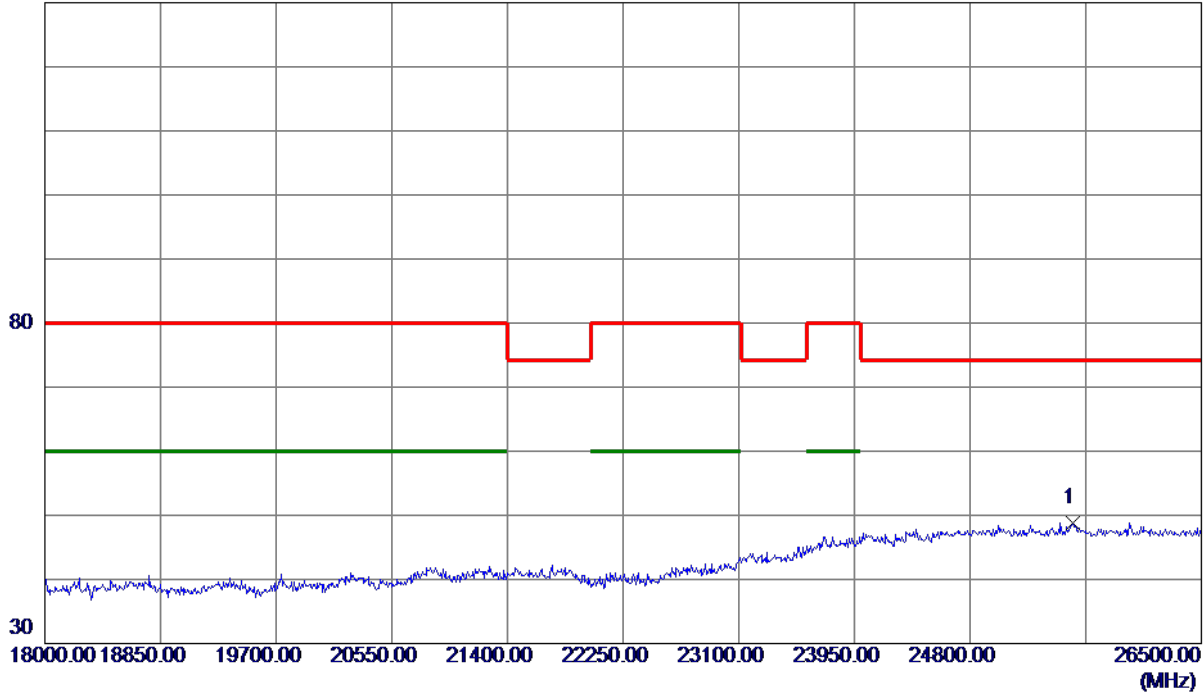


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25552.2500	28.87	20.02	48.89	74.30	-25.41	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

Horizontal

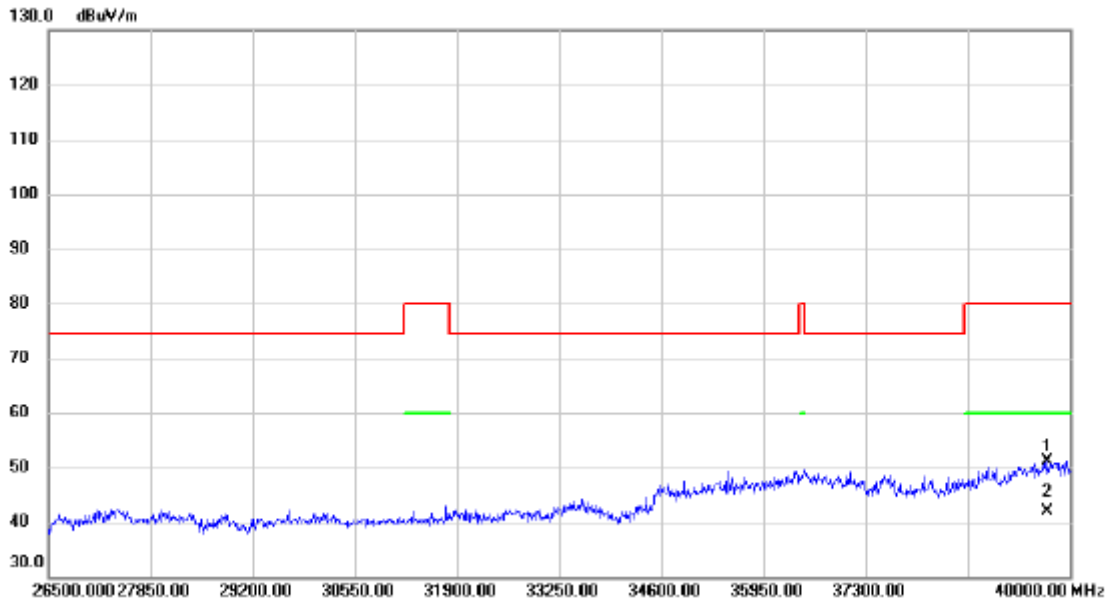

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39696.250	35.81	15.43	51.24	80.00	-28.76	peak	
2	*	39696.250	26.34	15.43	41.77	60.00	-18.23	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5180 MHz_242 Tone

Vertical

130 dBuV/m

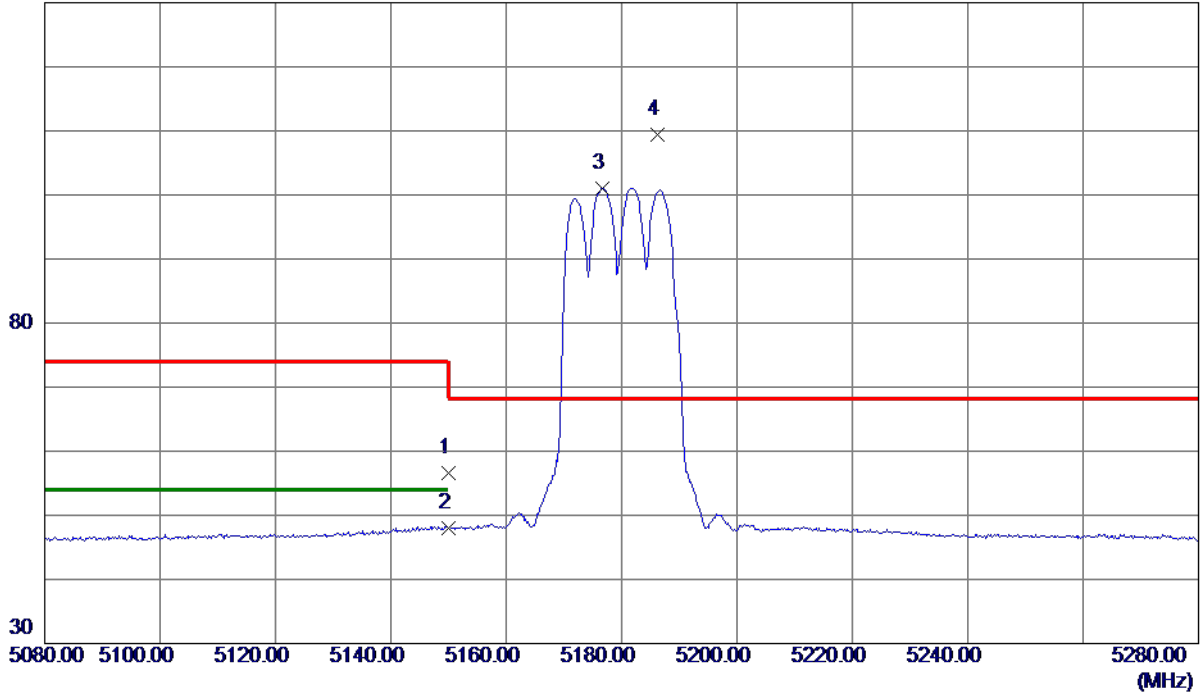

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	40.41	16.16	56.57	74.00	-17.43	Peak	
2	5150.0000	31.86	16.16	48.02	54.00	-5.98	AVG	
3	5176.6000	84.84	16.22	101.06	999.00	-897.94	AVG	No Limit
4 *	5186.2000	93.21	16.24	109.45	68.30	41.15	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5180 MHz_242 Tone

Horizontal

130 dBuV/m

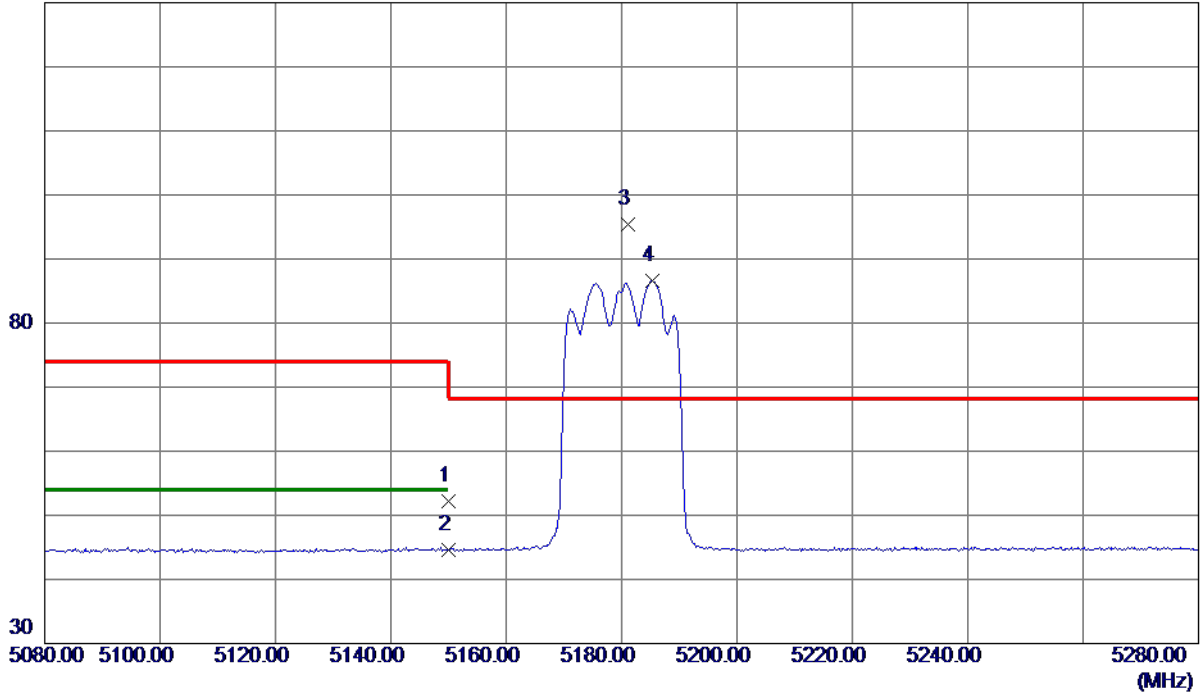

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	36.08	16.16	52.24	74.00	-21.76	Peak	
2	5150.0000	28.47	16.16	44.63	54.00	-9.37	AVG	
3 *	5181.2000	79.11	16.23	95.34	68.30	27.04	Peak	No Limit
4	5185.4000	70.32	16.24	86.56	999.00	-912.44	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5200 MHz_242 Tone

Vertical

130 dBuV/m

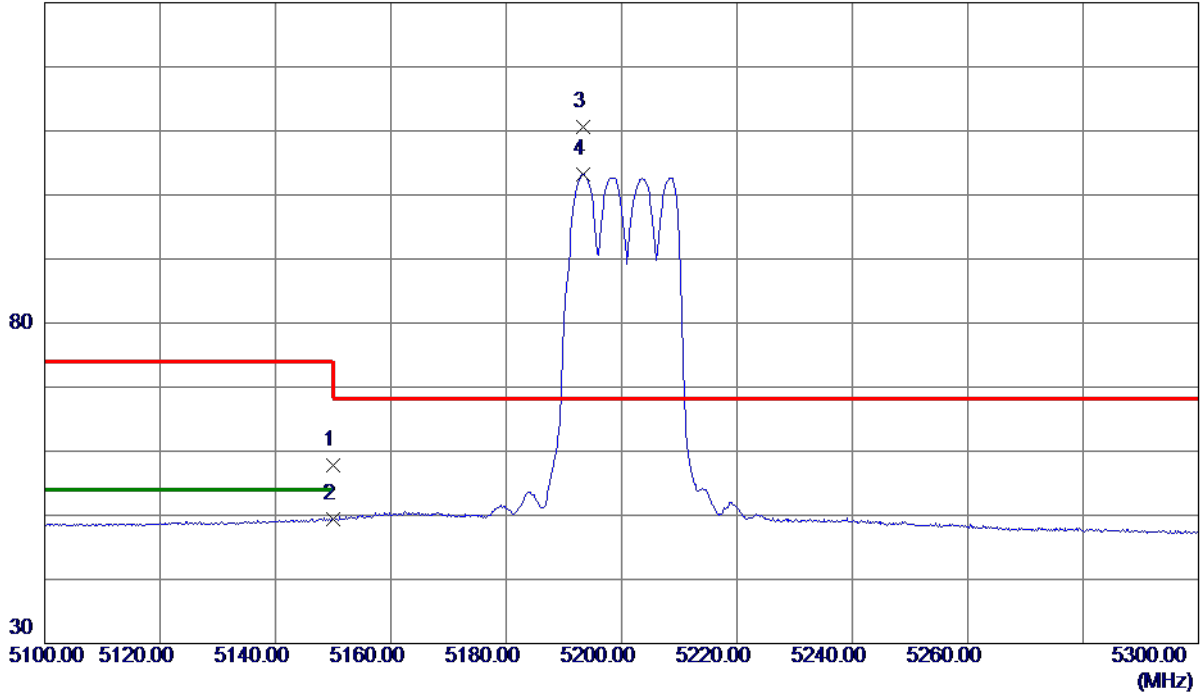

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	41.62	16.16	57.78	74.00	-16.22	Peak	
2	5150.0000	33.17	16.16	49.33	54.00	-4.67	AVG	
3 *	5193.4000	94.30	16.26	110.56	68.30	42.26	Peak	No Limit
4	5193.4000	86.94	16.26	103.20	999.00	-895.80	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5200 MHz_242 Tone

Horizontal

130 dBuV/m

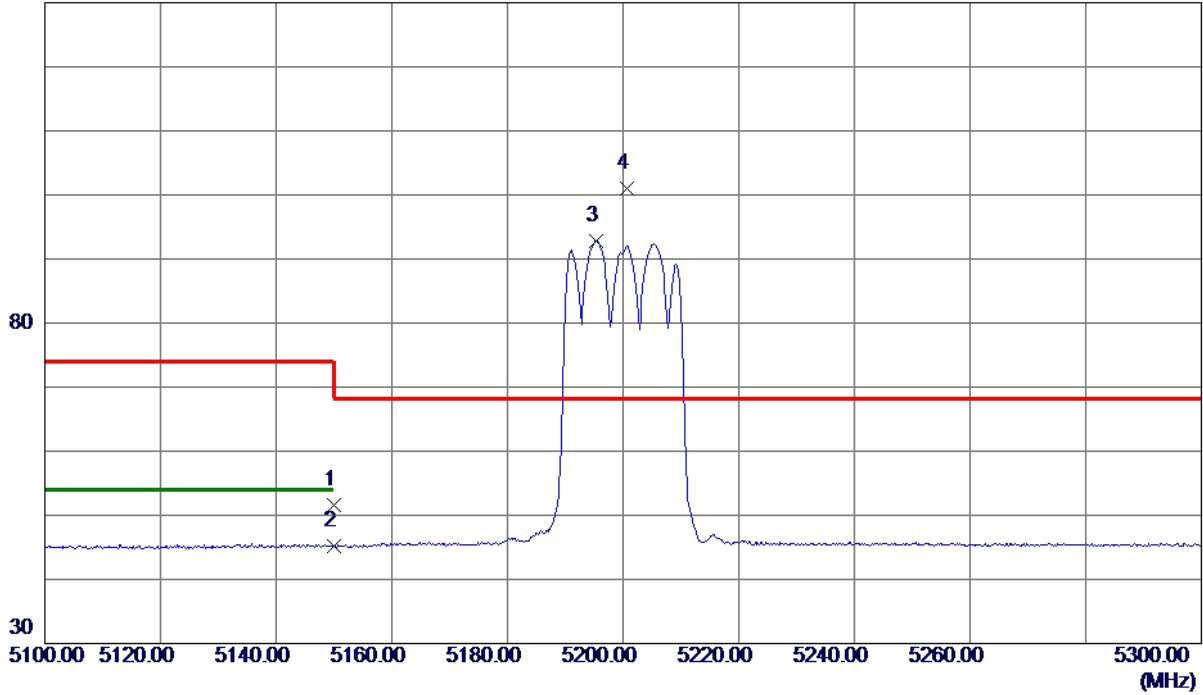


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	35.37	16.16	51.53	74.00	-22.47	Peak	
2	5150.0000	29.07	16.16	45.23	54.00	-8.77	AVG	
3	5195.4000	76.56	16.26	92.82	999.00	-906.18	AVG	No Limit
4 *	5200.6000	84.66	16.28	100.94	68.30	32.64	Peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5220 MHz_242 Tone

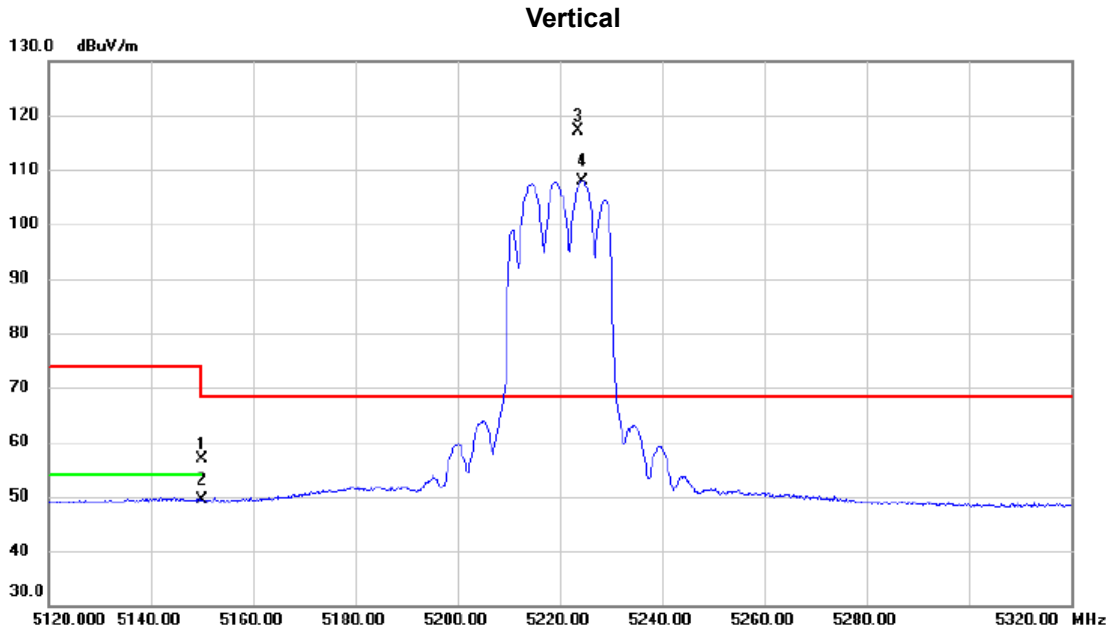


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	40.75	16.15	56.90	74.00	-17.10	peak	
2		5150.000	33.28	16.15	49.43	54.00	-4.57	AVG	
3	*	5223.600	100.92	16.33	117.25	68.30	48.95	peak	No Limit
4	X	5224.400	91.67	16.33	108.00	68.30	39.70	AVG	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5220 MHz_242 Tone

Horizontal

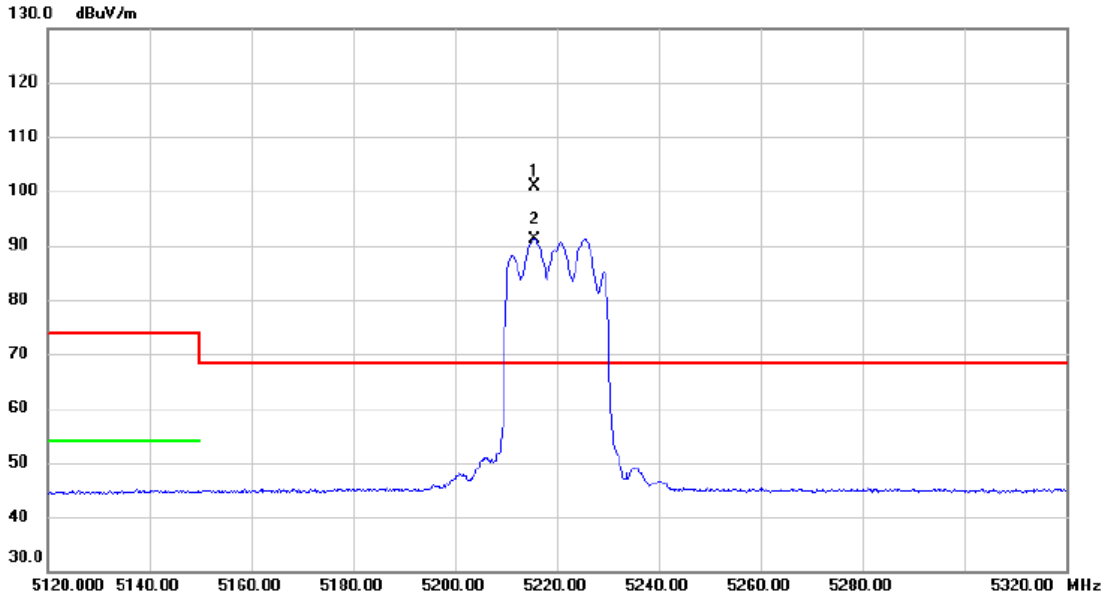

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1	*	5215.600	84.45	16.31	100.76	68.30	32.46	peak	No Limit
2	X	5215.600	74.89	16.31	91.20	68.30	22.90	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5240 MHz_242 Tone

Vertical

130 dBuV/m

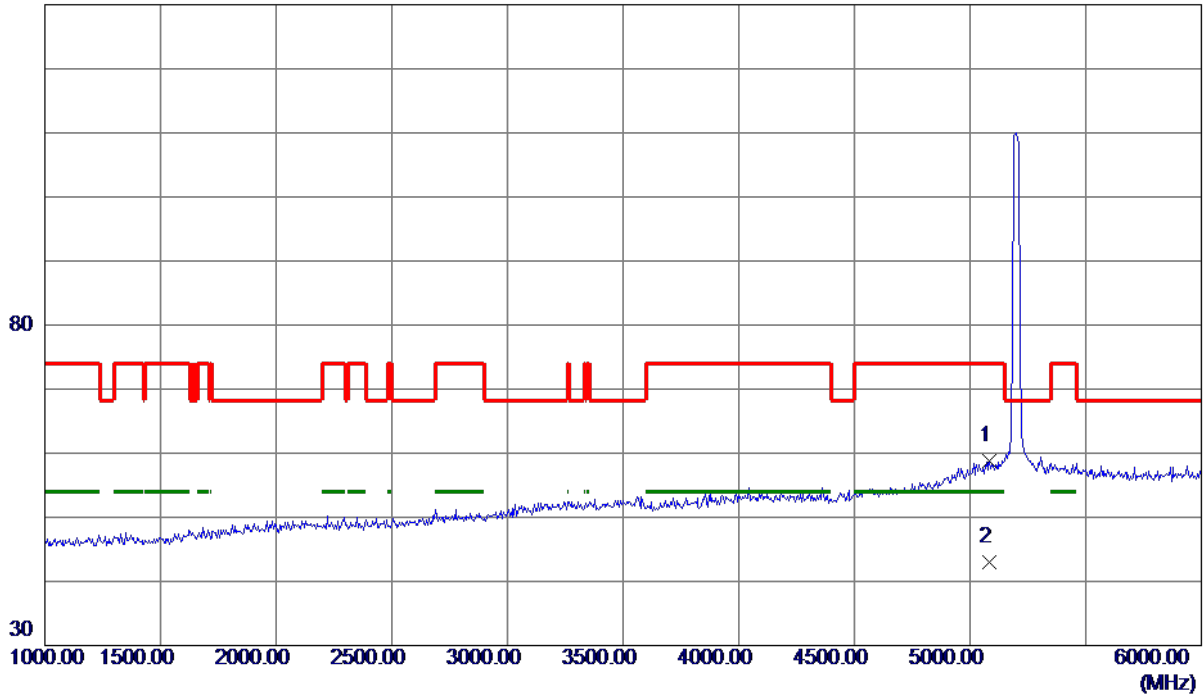

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5085.0000	42.75	16.00	58.75	74.00	-15.25	Peak	
2 *	5085.0000	26.98	16.00	42.98	54.00	-11.02	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5240 MHz_242 Tone

Vertical

130 dBuV/m

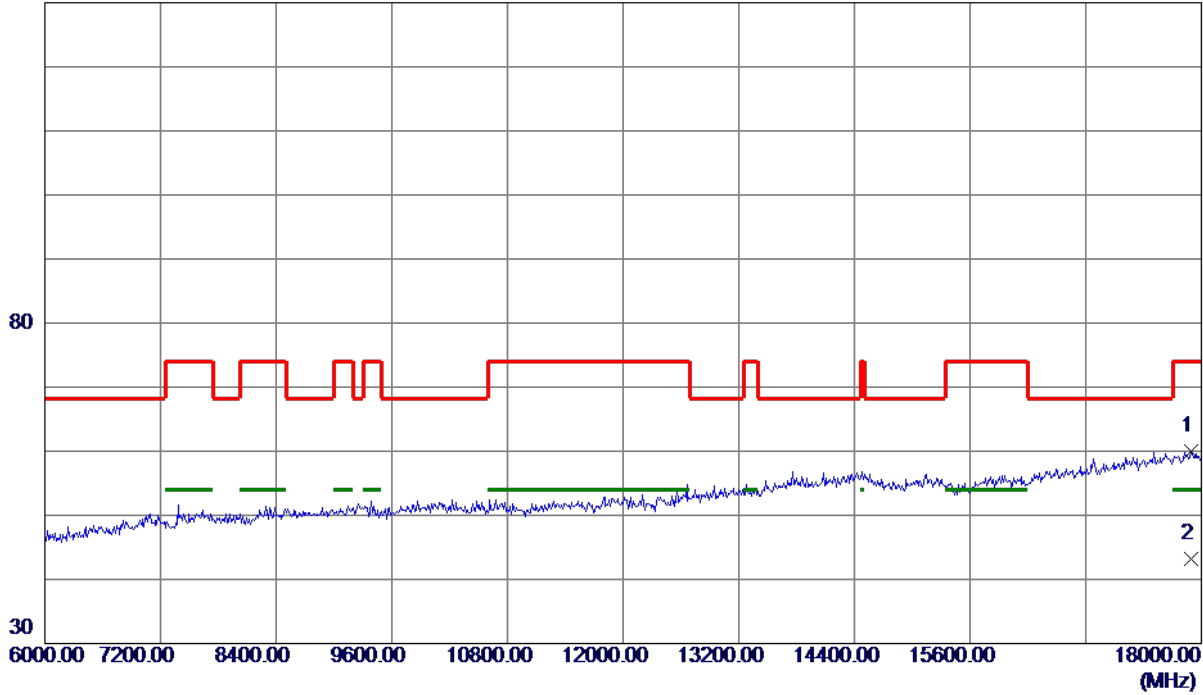

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17892.0000	37.72	22.24	59.96	74.00	-14.04	Peak	
2 *	17892.0000	20.91	22.24	43.15	54.00	-10.85	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5240 MHz_242 Tone

Vertical

130 dBuV/m

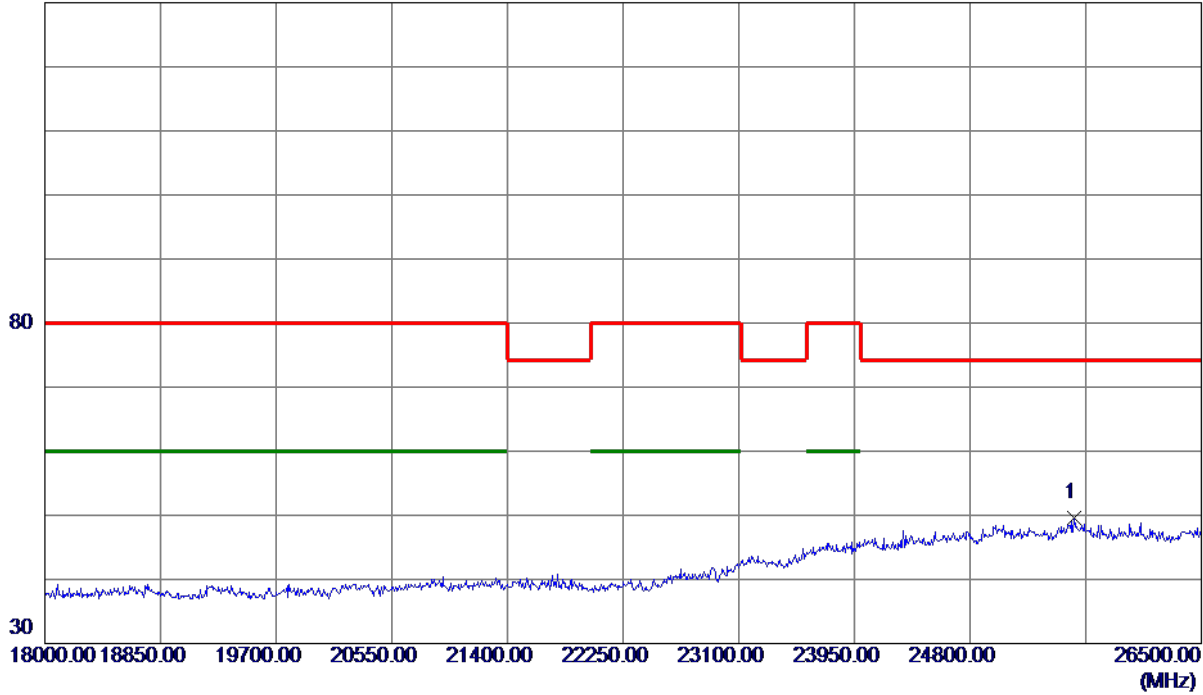


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25569.2500	29.50	20.02	49.52	74.30	-24.78	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5240 MHz_242 Tone

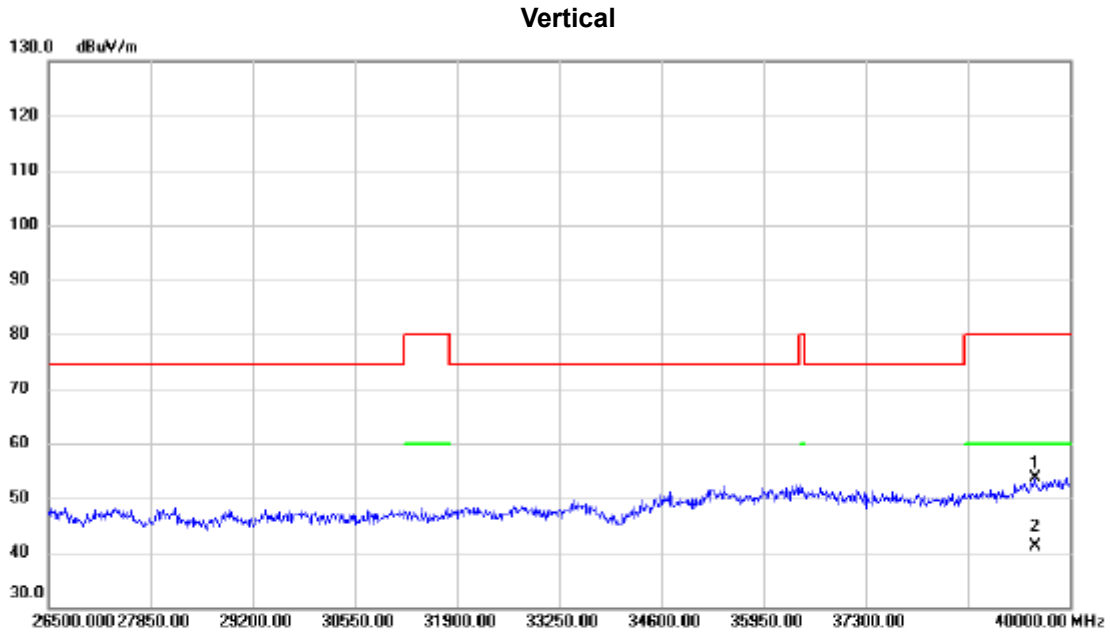

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39534.250	38.36	15.33	53.69	80.00	-26.31	peak	
2	*	39534.250	25.78	15.33	41.11	60.00	-18.89	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5240 MHz_242 Tone

Horizontal

130 dBuV/m

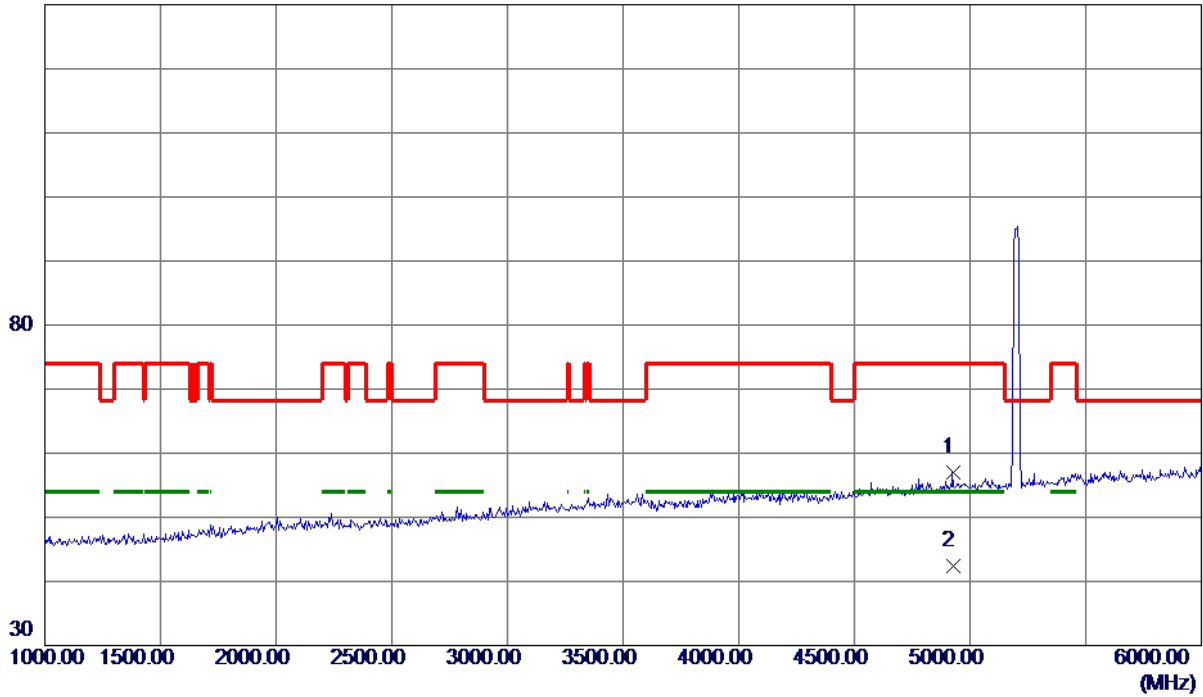

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	4925.0000	41.41	15.60	57.01	74.00	-16.99	Peak	
2 *	4925.0000	26.73	15.60	42.33	54.00	-11.67	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5240 MHz_242 Tone

Horizontal

130 dBuV/m

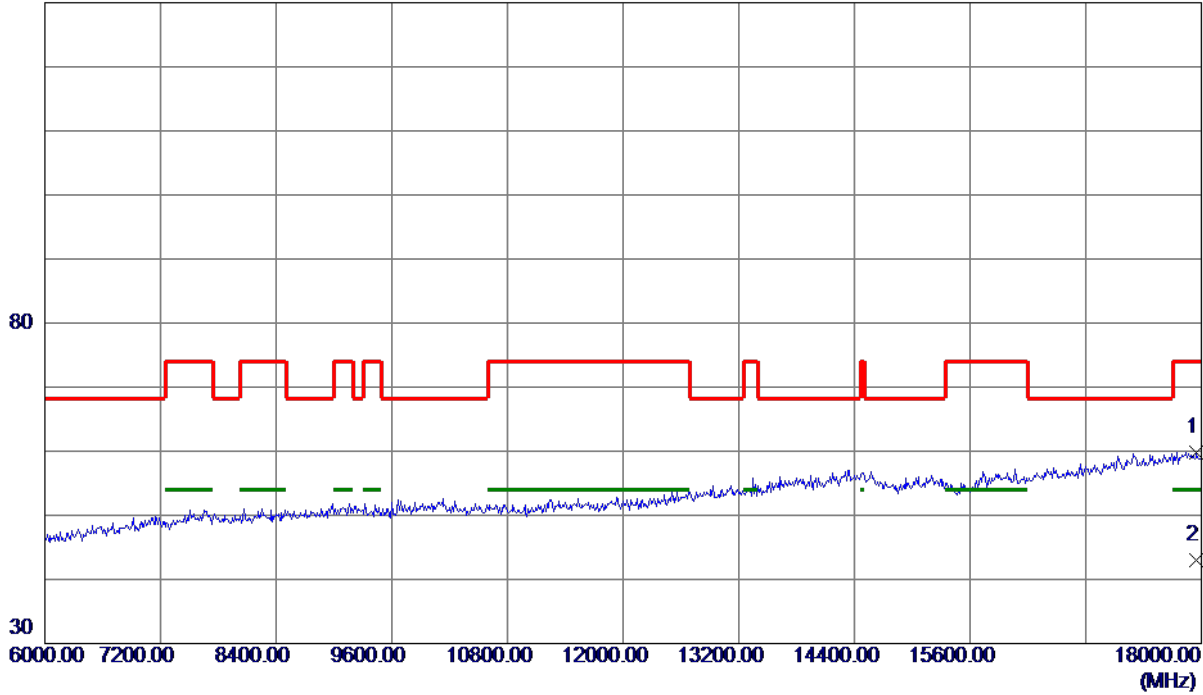

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17952.0000	37.57	22.27	59.84	74.00	-14.16	Peak	
2 *	17952.0000	20.67	22.27	42.94	54.00	-11.06	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5240 MHz_242 Tone

Horizontal

130 dBuV/m

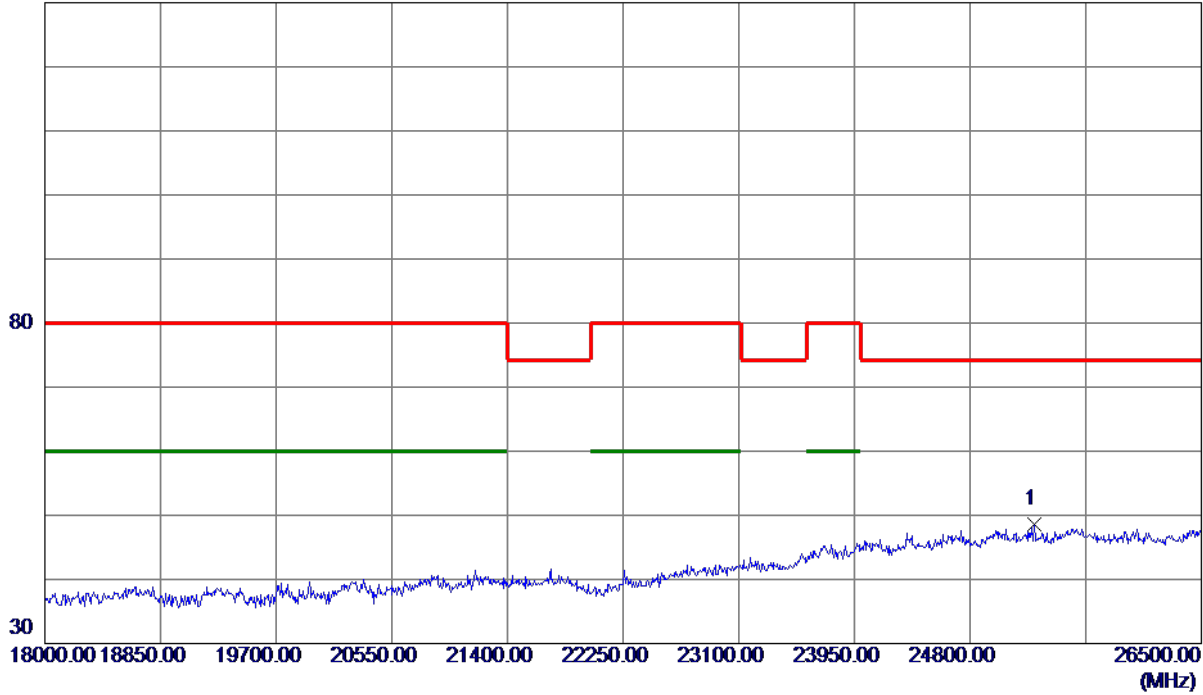


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25271.7500	28.54	20.04	48.58	74.30	-25.72	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW20) Mode 5240 MHz_242 Tone

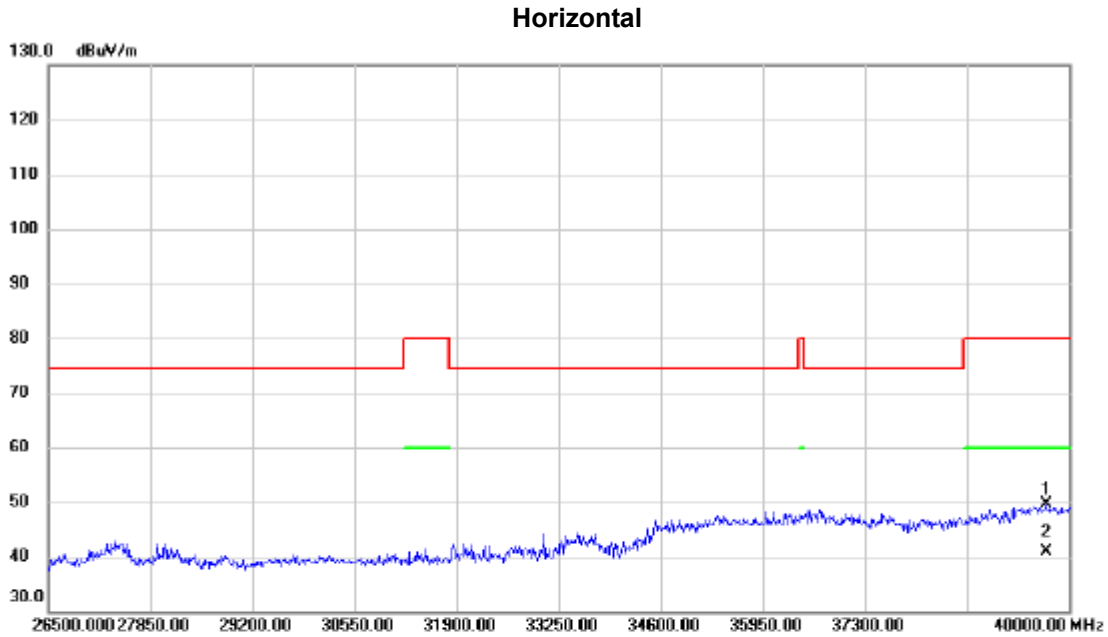

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39696.250	34.22	15.43	49.65	80.00	-30.35	peak	
2	*	39696.250	25.48	15.43	40.91	60.00	-19.09	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5190 MHz_484 Tone

Vertical

130 dBuV/m

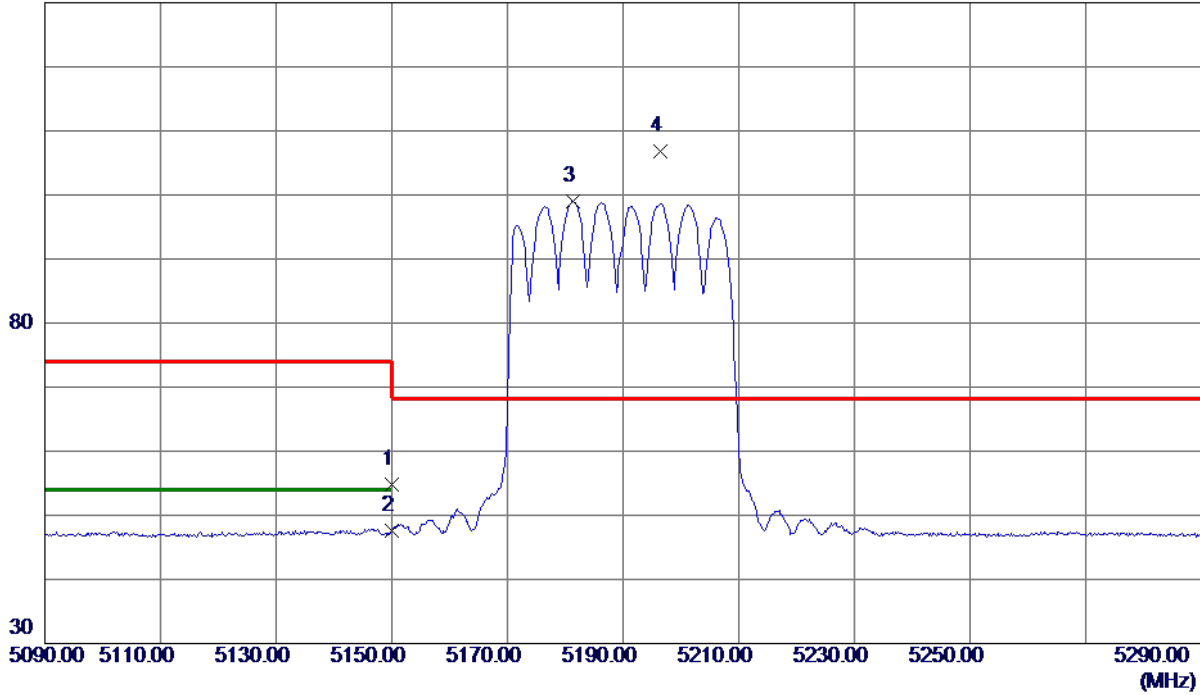

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	38.66	16.16	54.82	74.00	-19.18	Peak	
2	5150.0000	31.39	16.16	47.55	54.00	-6.45	AVG	
3	5181.4000	82.75	16.23	98.98	999.00	-900.02	AVG	No Limit
4 *	5196.4000	90.62	16.27	106.89	68.30	38.59	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5190 MHz_484 Tone

Horizontal

130 dBuV/m

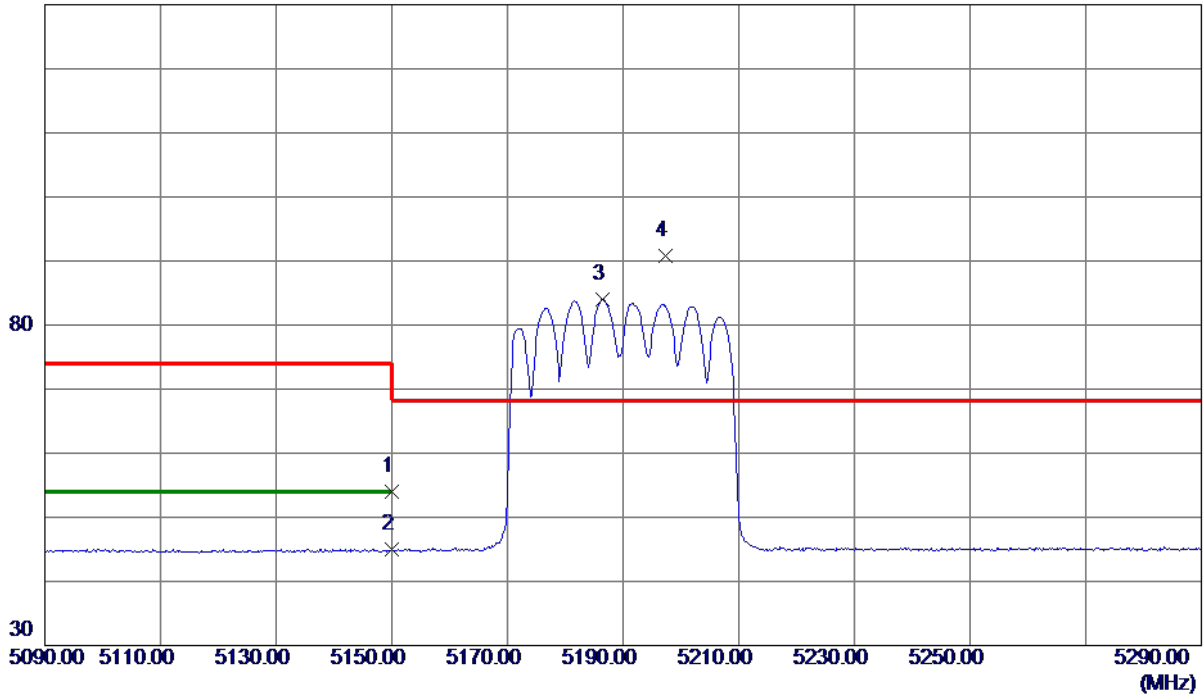

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	37.80	16.16	53.96	74.00	-20.04	Peak	
2	5150.0000	28.88	16.16	45.04	54.00	-8.96	AVG	
3	5186.4000	67.83	16.24	84.07	999.00	-914.93	AVG	No Limit
4 *	5197.4000	74.57	16.27	90.84	68.30	22.54	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5230 MHz_484 Tone

Vertical

130 dBuV/m

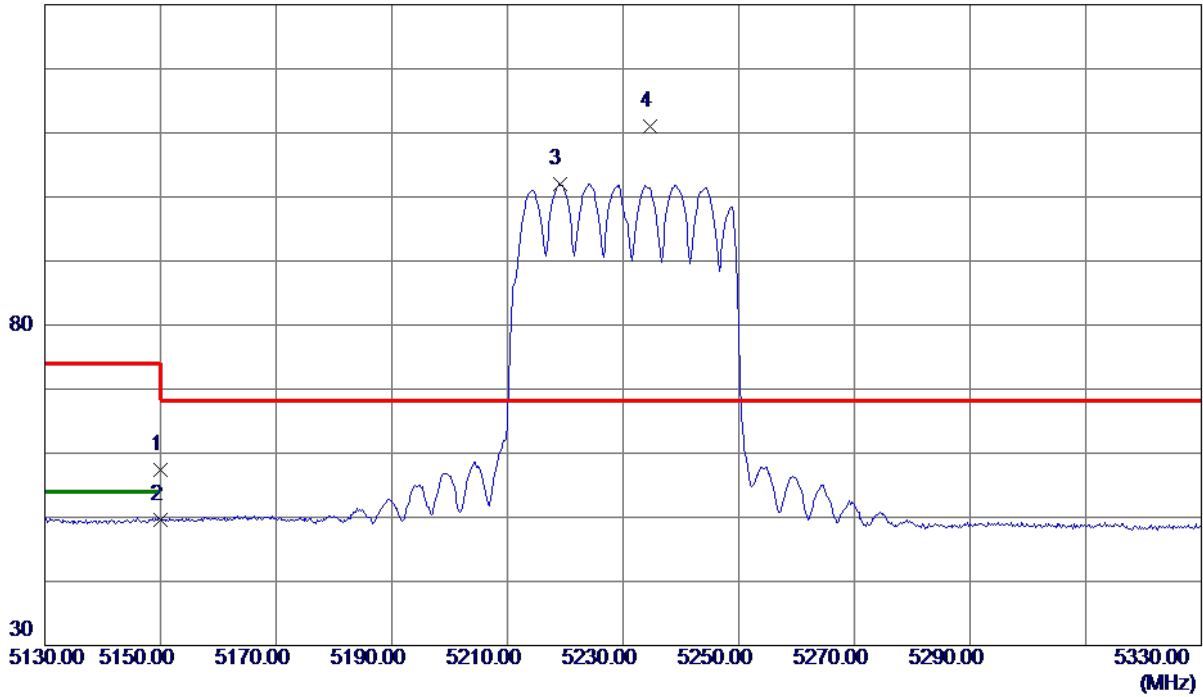

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	41.28	16.16	57.44	74.00	-16.56	Peak	
2	5150.0000	33.49	16.16	49.65	54.00	-4.35	AVG	
3	5219.0000	85.70	16.32	102.02	999.00	-896.98	AVG	No Limit
4 *	5234.6000	94.62	16.36	110.98	68.30	42.68	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5230 MHz_484 Tone

Vertical

130 dBuV/m

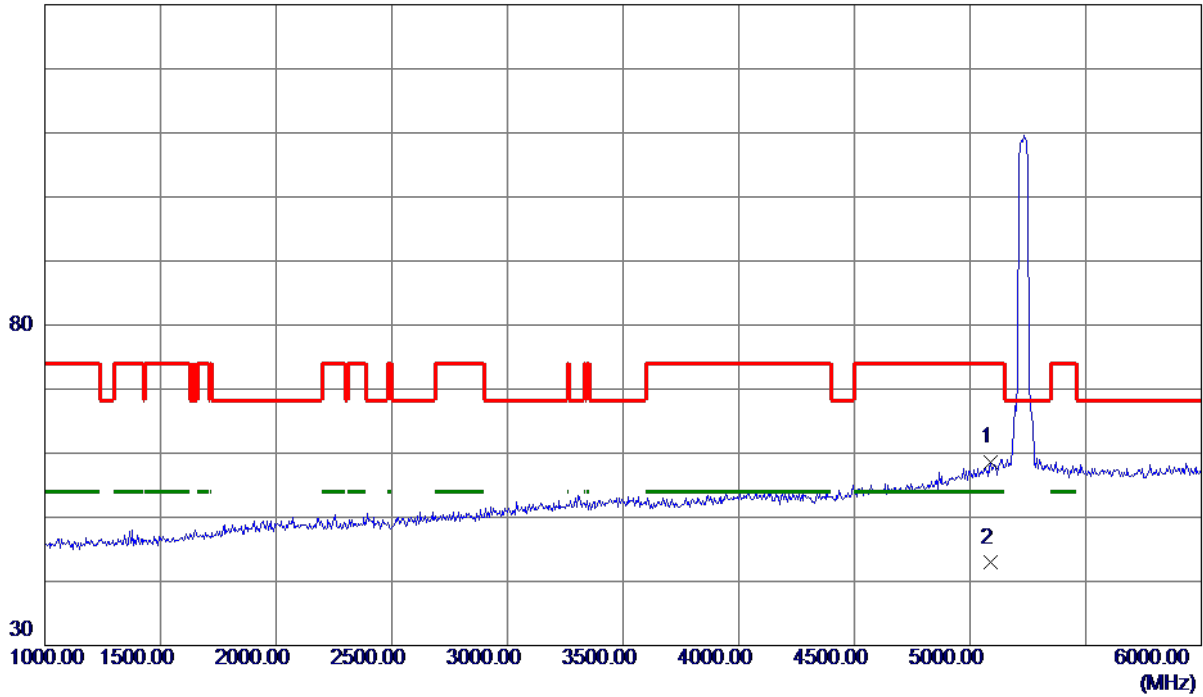

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5090.0000	42.59	16.01	58.60	74.00	-15.40	Peak	
2 *	5090.0000	26.89	16.01	42.90	54.00	-11.10	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5230 MHz_484 Tone

Vertical

130 dBuV/m

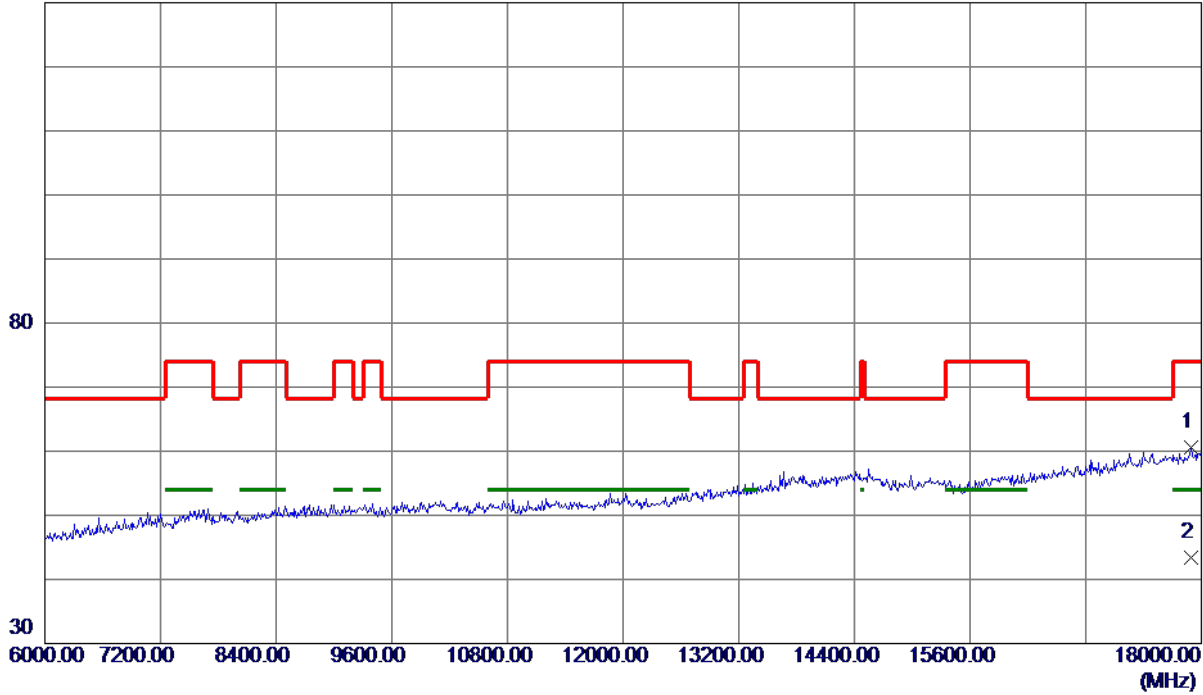

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17892.0000	38.33	22.24	60.57	74.00	-13.43	Peak	
2 *	17892.0000	21.20	22.24	43.44	54.00	-10.56	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5230 MHz_484 Tone

Vertical

130 dBuV/m

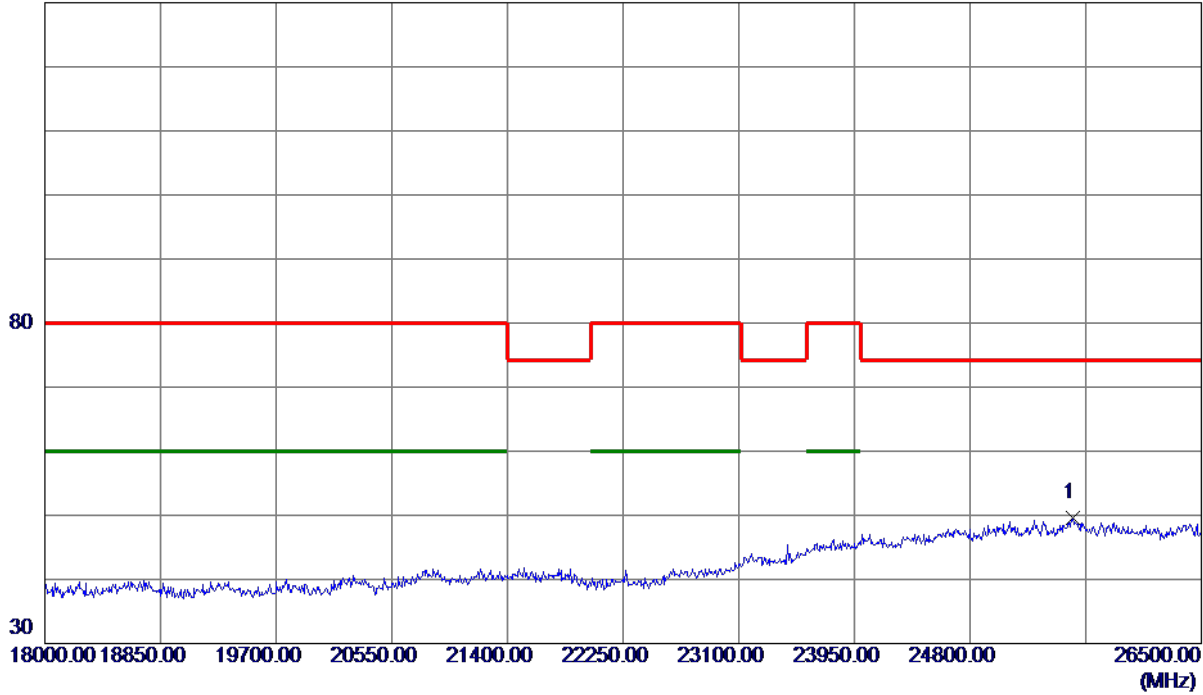


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25556.5000	29.51	20.02	49.53	74.30	-24.77	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5230 MHz_484 Tone

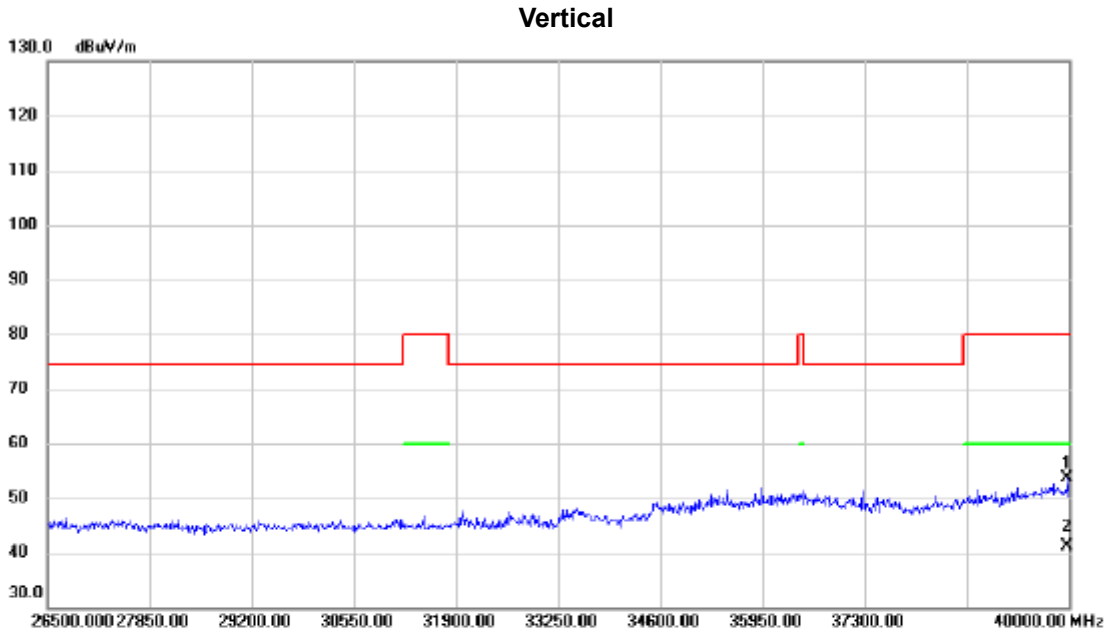

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39979.750	38.02	15.60	53.62	80.00	-26.38	peak	
2	*	39979.750	25.47	15.60	41.07	60.00	-18.93	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5230 MHz_484 Tone

Horizontal

130 dBuV/m

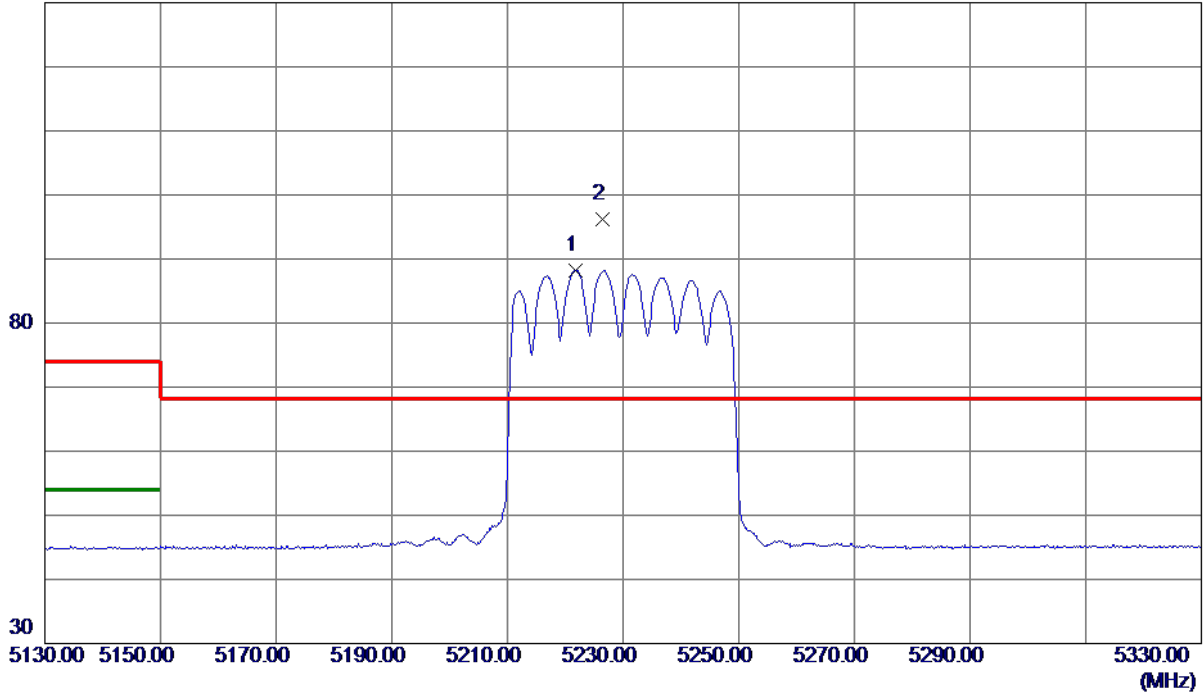

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5221.8000	71.92	16.33	88.25	999.00	-910.75	AVG	No Limit
2 *	5226.4000	79.92	16.34	96.26	68.30	27.96	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5230 MHz_484 Tone

Horizontal

130 dBuV/m

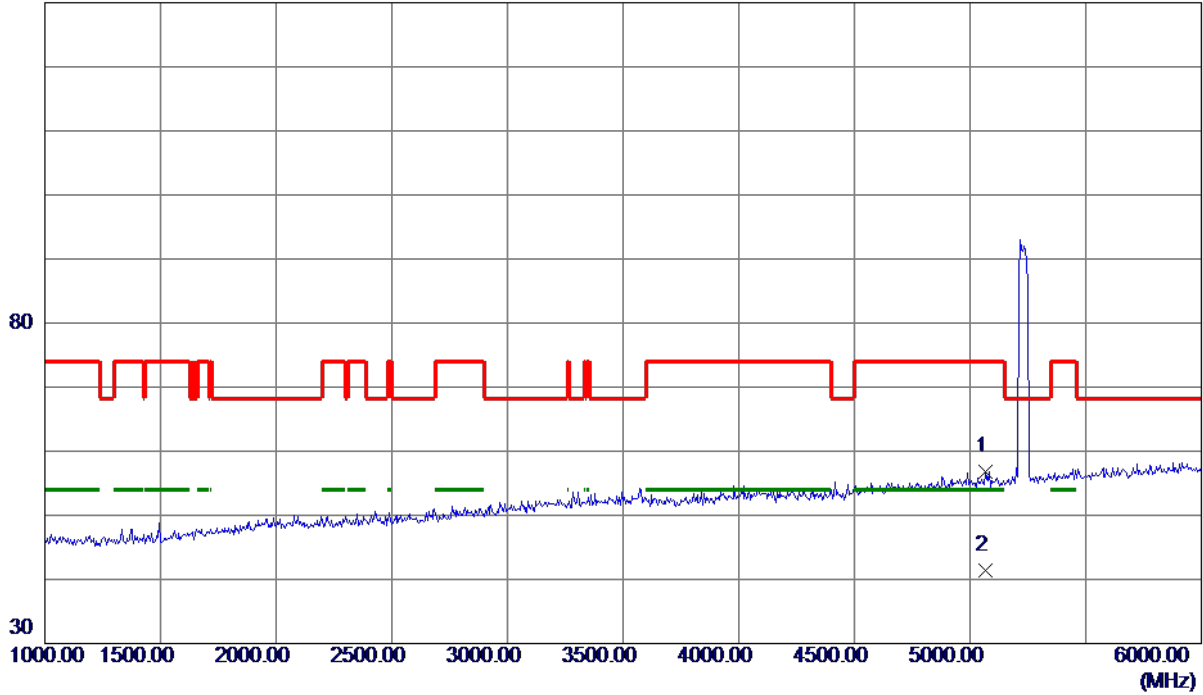

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5065.0000	40.85	15.95	56.80	74.00	-17.20	Peak	
2 *	5065.0000	25.36	15.95	41.31	54.00	-12.69	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5230 MHz_484 Tone

Horizontal

130 dBuV/m

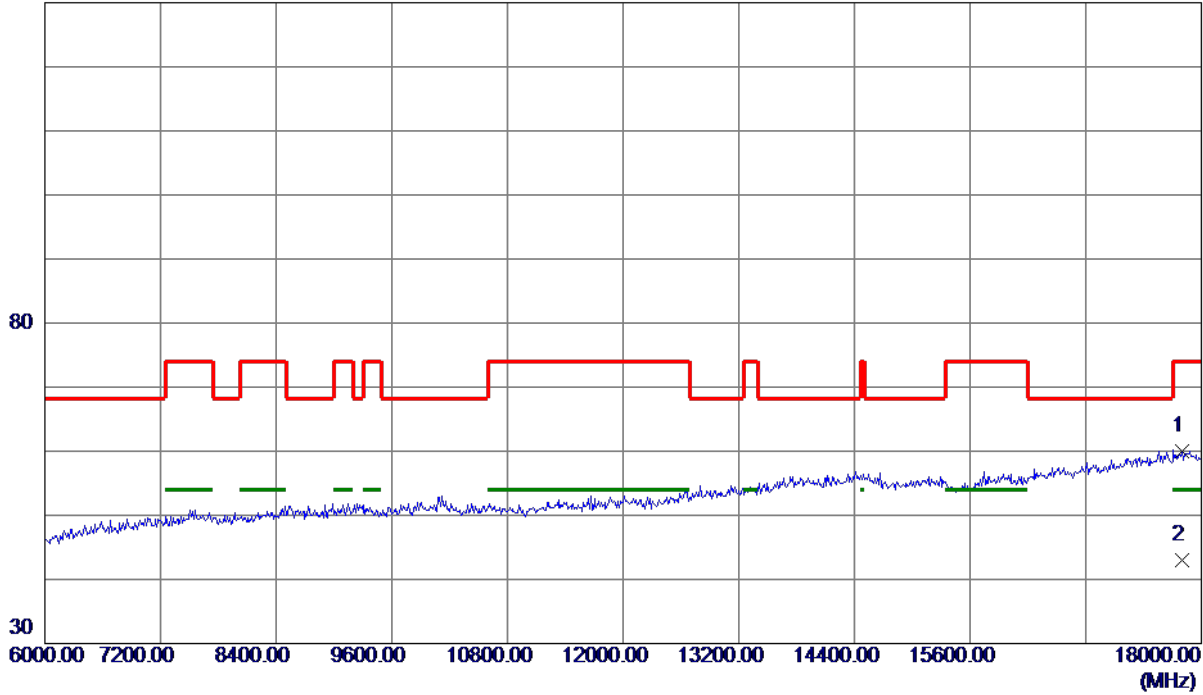

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17796.0000	37.90	22.18	60.08	74.00	-13.92	Peak	
2 *	17796.0000	20.85	22.18	43.03	54.00	-10.97	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5230 MHz_484 Tone

Horizontal

130 dBuV/m

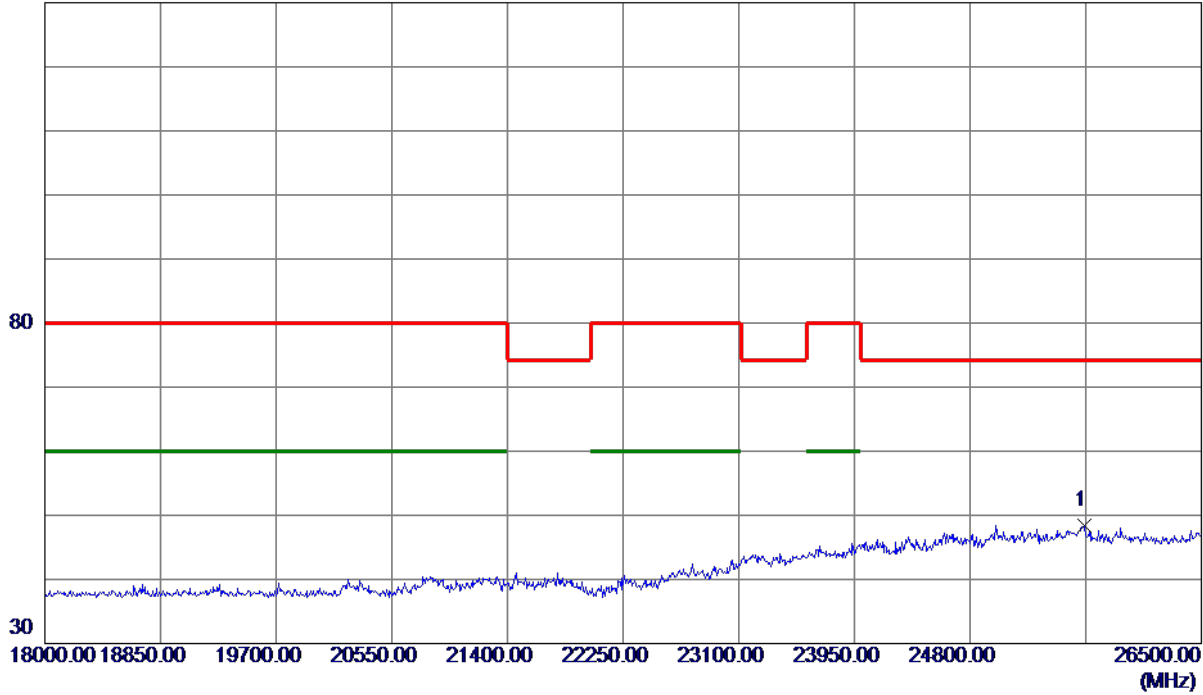


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25637.2500	28.41	20.02	48.43	74.30	-25.87	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5230 MHz_484 Tone

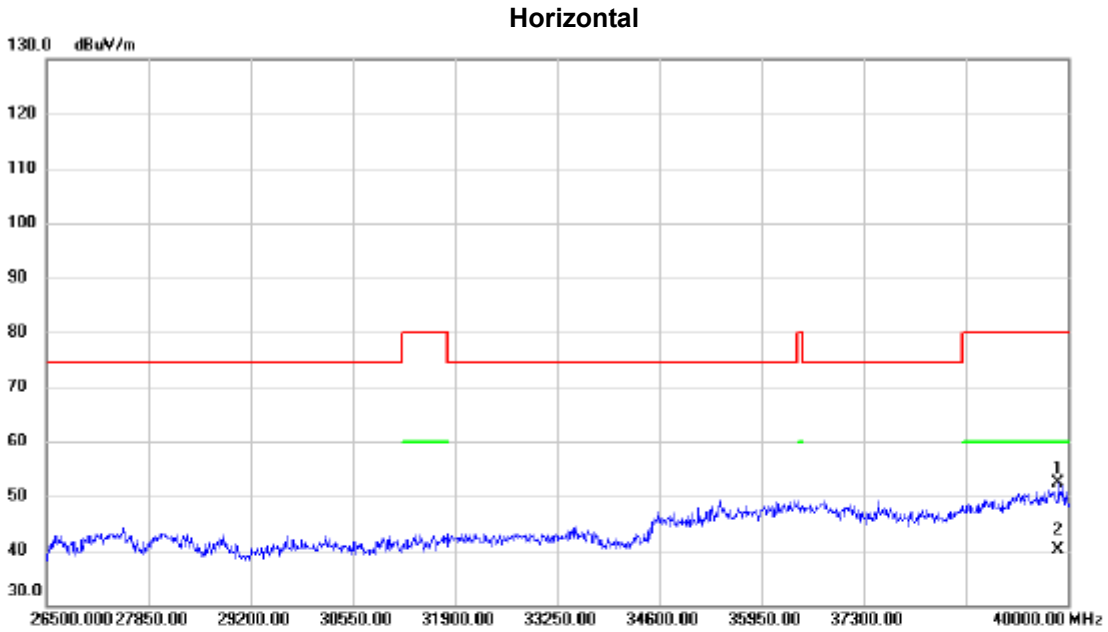

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39865.000	36.76	15.54	52.30	80.00	-27.70	peak	
2	*	39865.000	24.58	15.54	40.12	60.00	-19.88	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW80) Mode 5210 MHz_996 Tone

Vertical

130 dBuV/m

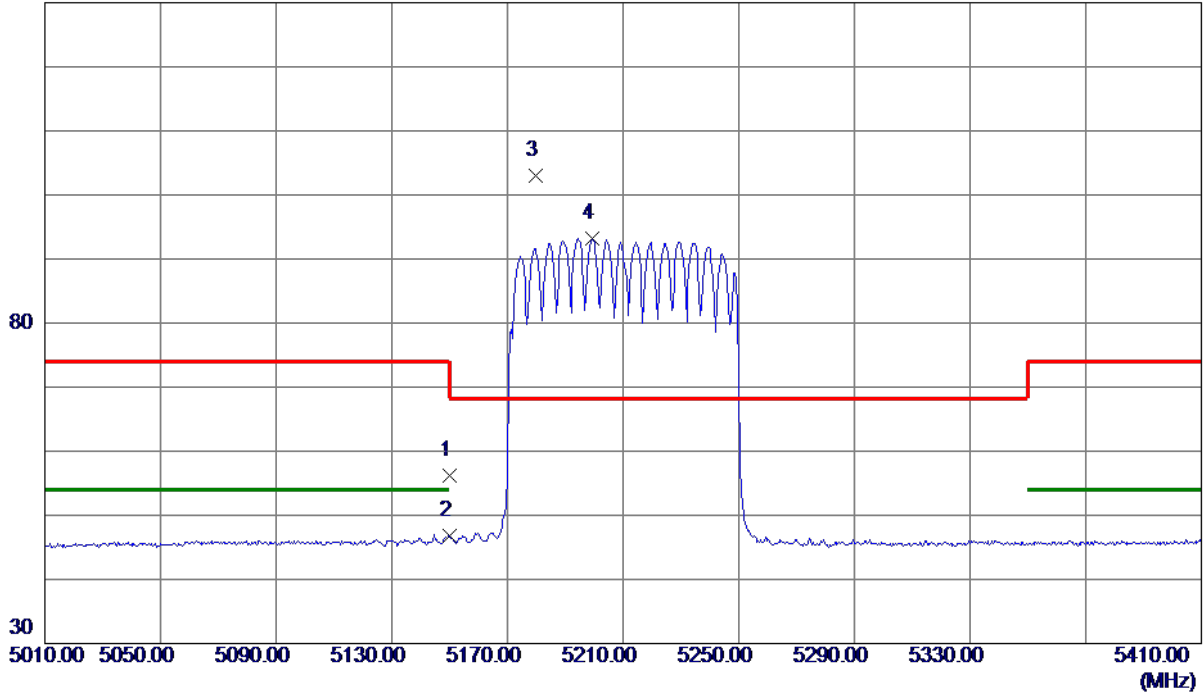

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	40.13	16.16	56.29	74.00	-17.71	Peak	
2	5150.0000	30.61	16.16	46.77	54.00	-7.23	AVG	
3 *	5179.6000	86.73	16.23	102.96	68.30	34.66	Peak	No Limit
4	5199.2000	76.95	16.27	93.22	999.00	-905.78	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW80) Mode 5210 MHz_996 Tone

Vertical

130 dBuV/m

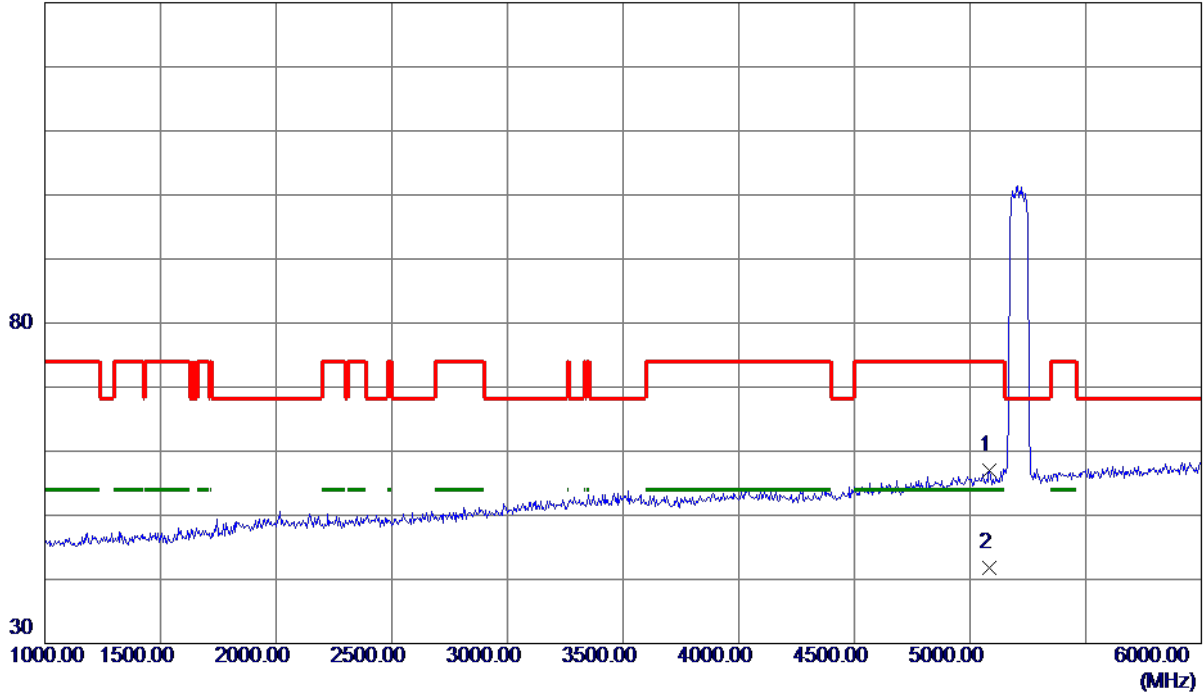

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5085.0000	41.06	16.00	57.06	74.00	-16.94	Peak	
2 *	5085.0000	25.83	16.00	41.83	54.00	-12.17	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW80) Mode 5210 MHz_996 Tone

Vertical

130 dBuV/m

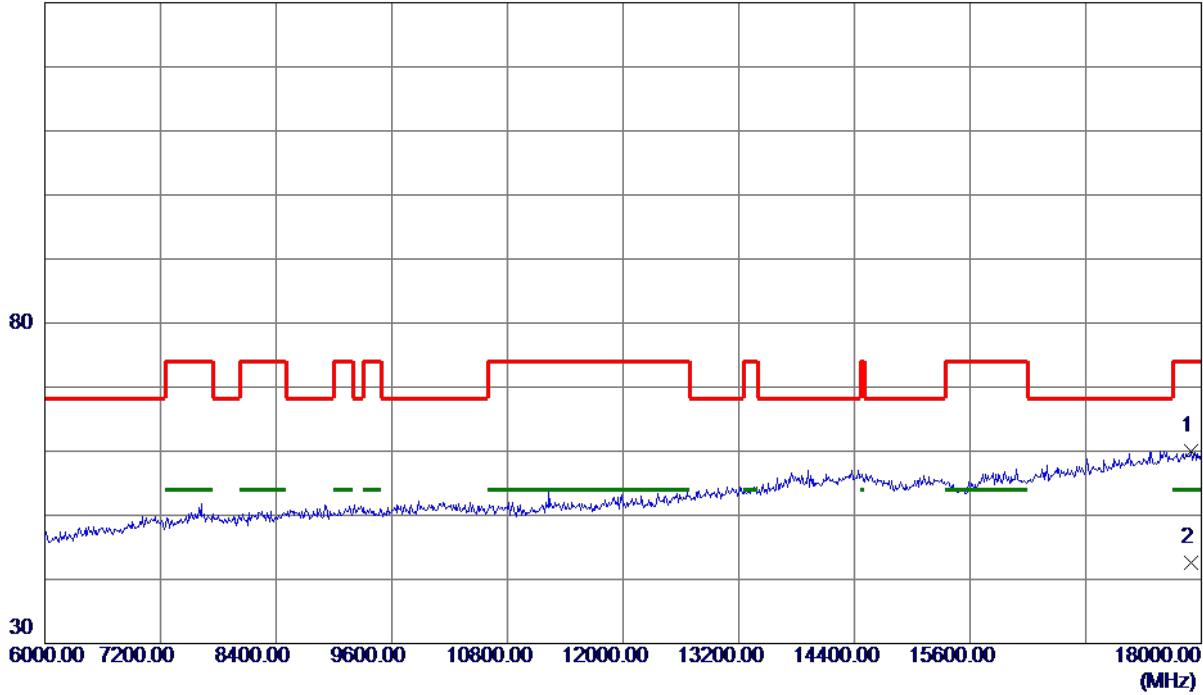

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17892.0000	37.80	22.24	60.04	74.00	-13.96	Peak	
2 *	17892.0000	20.45	22.24	42.69	54.00	-11.31	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW80) Mode 5210 MHz_996 Tone

Vertical

130 dBuV/m

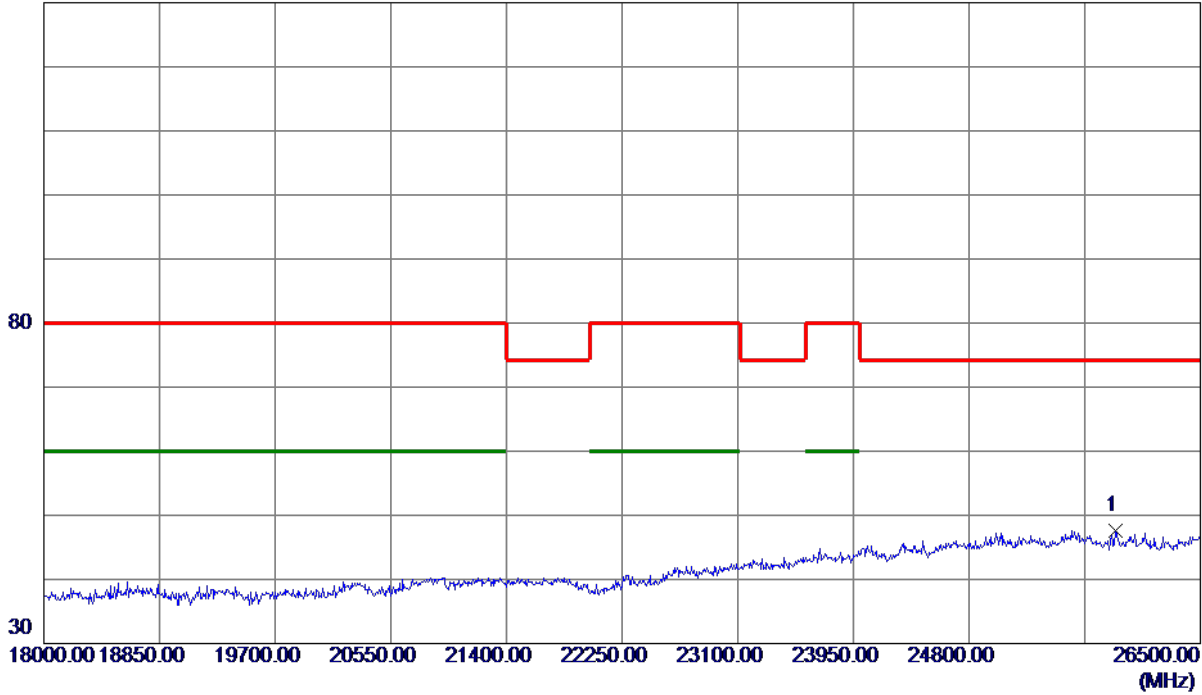


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25879.5000	27.59	20.01	47.60	74.30	-26.70	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW80) Mode 5210 MHz_996 Tone

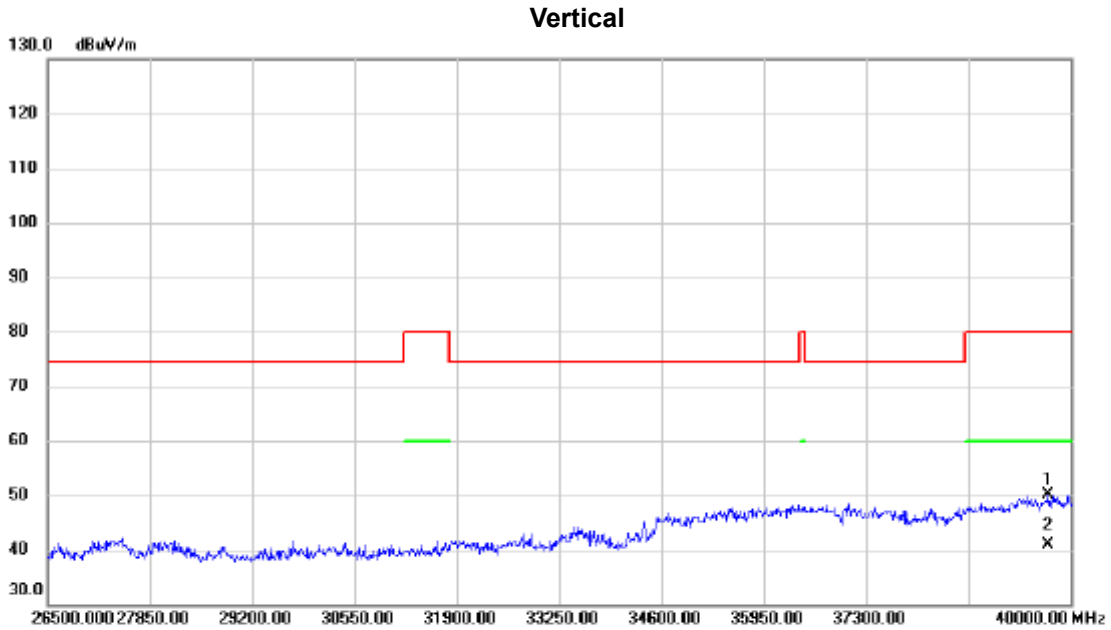

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39709.750	34.78	15.43	50.21	80.00	-29.79	peak	
2	*	39709.750	25.43	15.43	40.86	60.00	-19.14	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW80) Mode 5210 MHz_996 Tone

Horizontal

130 dBuV/m

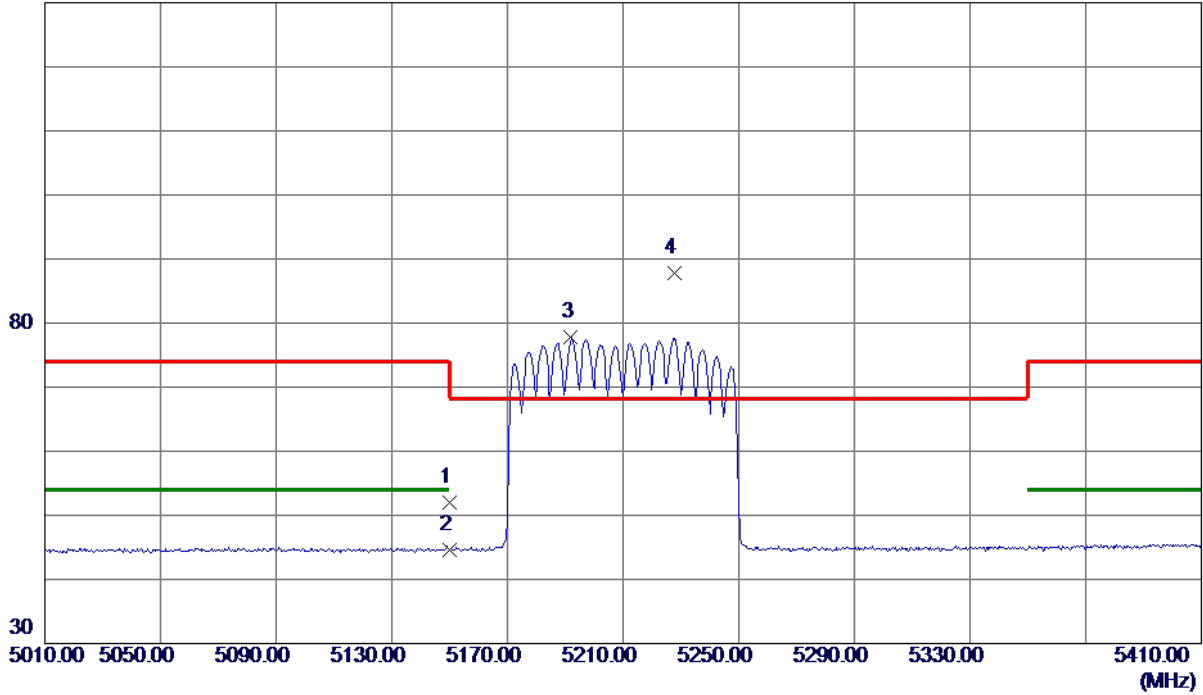

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	35.90	16.16	52.06	74.00	-21.94	Peak	
2	5150.0000	28.38	16.16	44.54	54.00	-9.46	AVG	
3	5192.0000	61.45	16.26	77.71	999.00	-921.29	AVG	No Limit
4 *	5227.6000	71.47	16.34	87.81	68.30	19.51	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW80) Mode 5210 MHz_996 Tone

Horizontal

130 dBuV/m

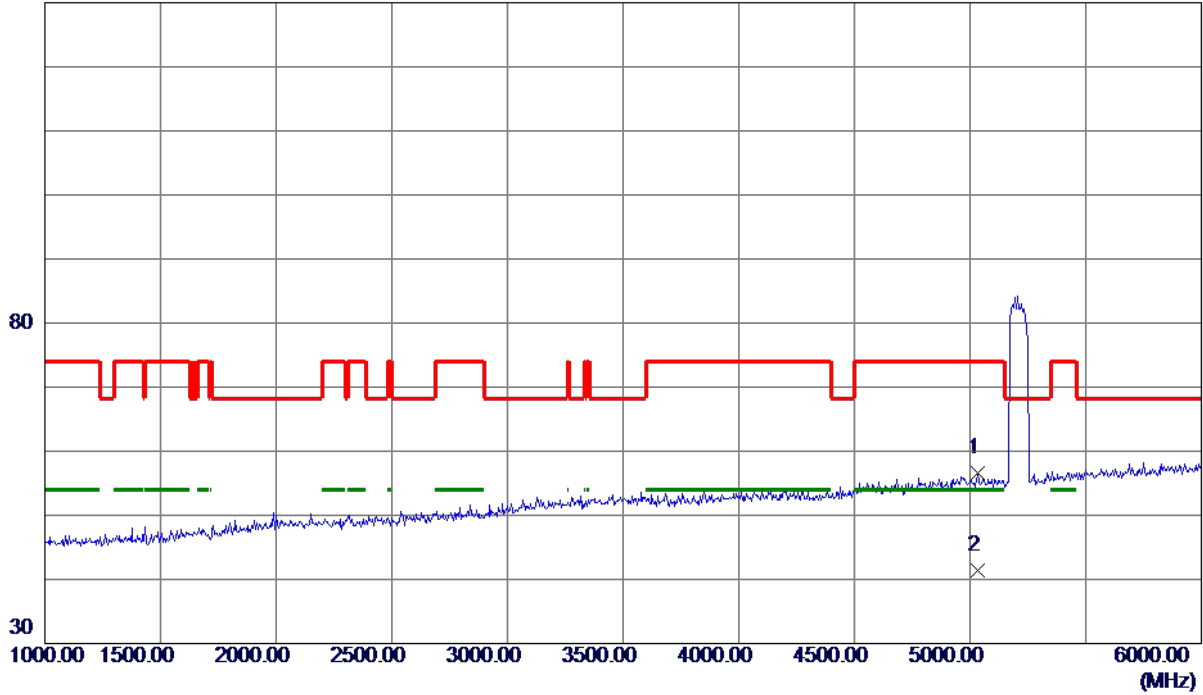

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5035.0000	40.76	15.88	56.64	74.00	-17.36	Peak	
2 *	5035.0000	25.61	15.88	41.49	54.00	-12.51	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW80) Mode 5210 MHz_996 Tone

Horizontal

130 dBuV/m

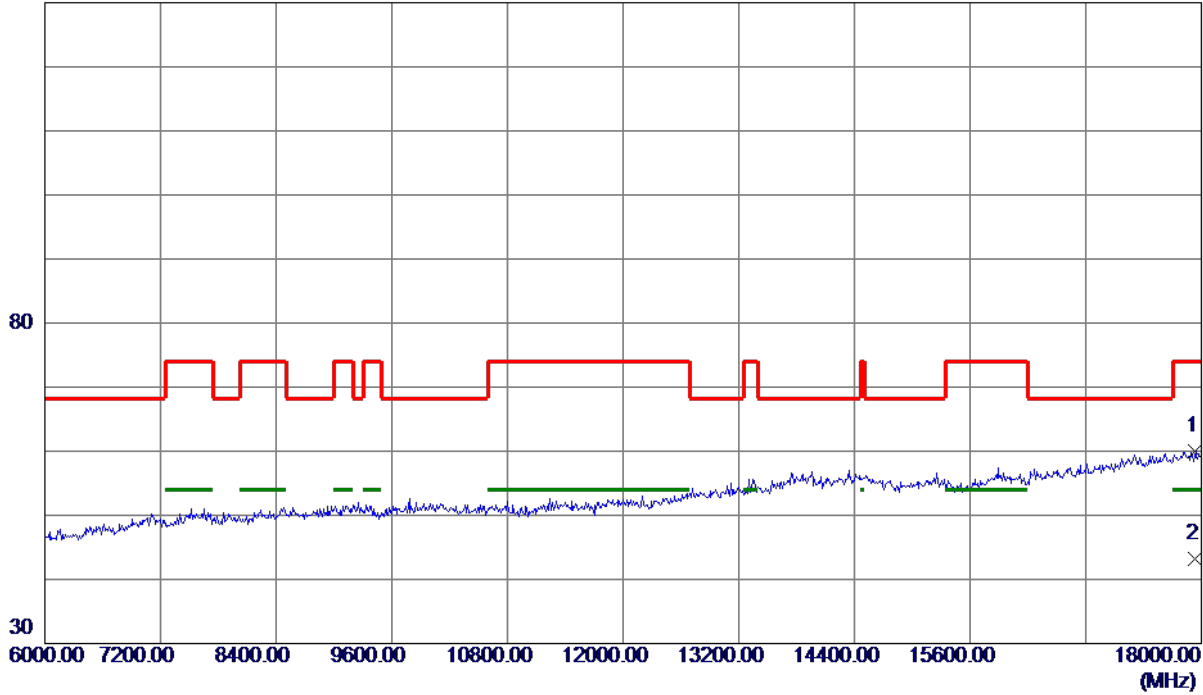

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17940.0000	37.67	22.26	59.93	74.00	-14.07	Peak	
2 *	17940.0000	21.03	22.26	43.29	54.00	-10.71	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW80) Mode 5210 MHz_996 Tone

Horizontal

130 dBuV/m

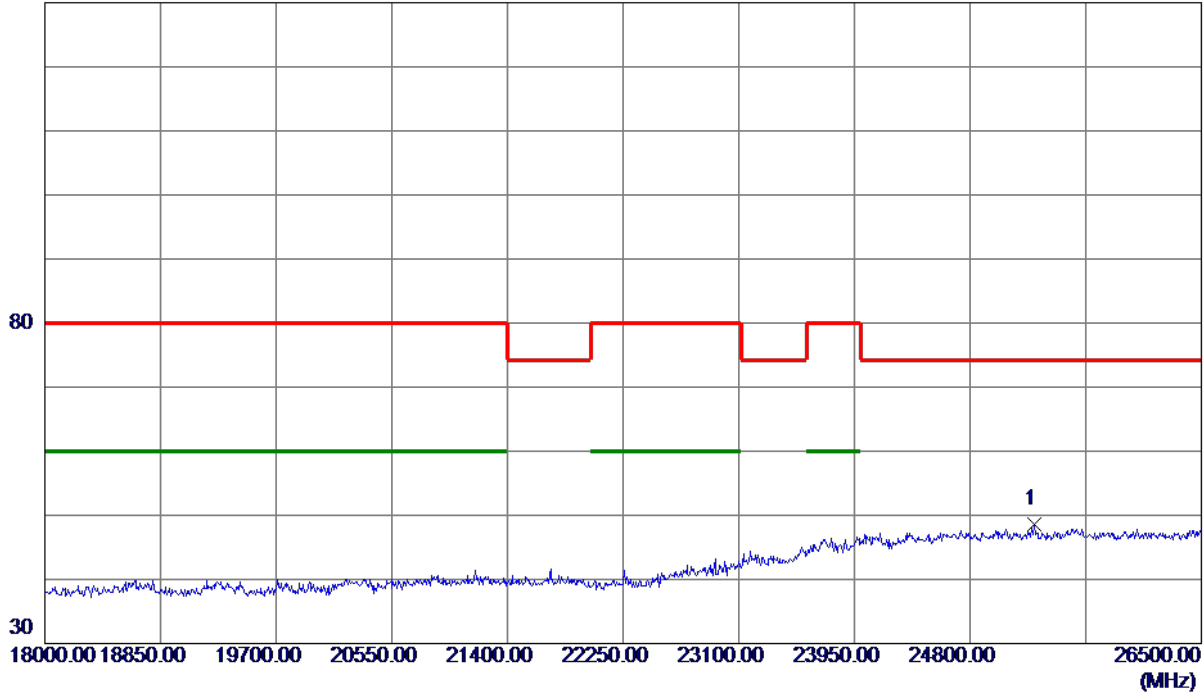


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25271.7500	28.54	20.04	48.58	74.30	-25.72	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW80) Mode 5210 MHz_996 Tone

Horizontal

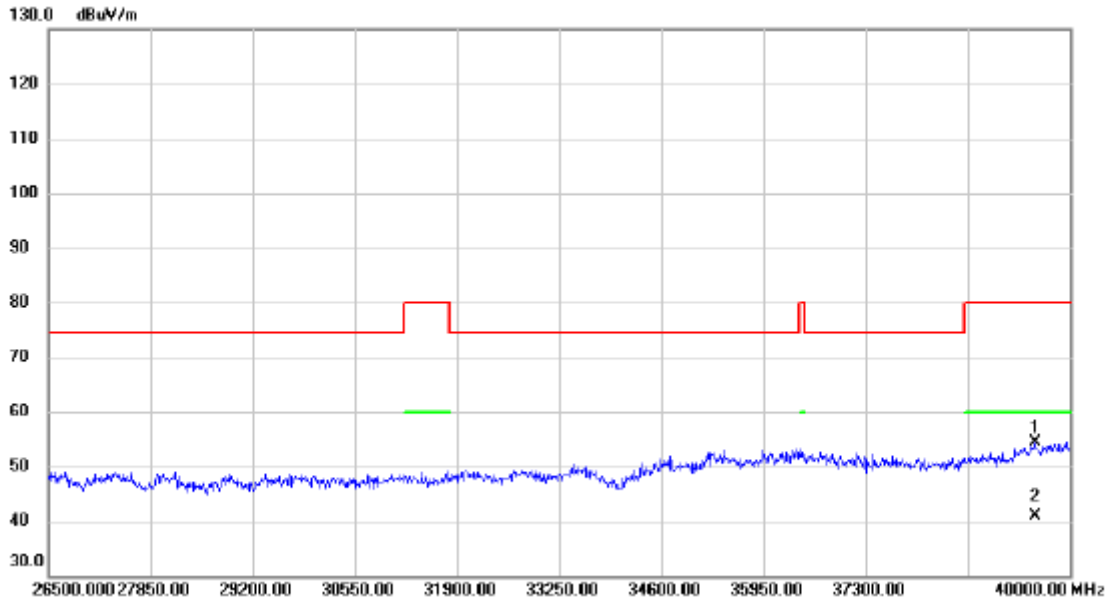

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39534.250	39.16	15.33	54.49	80.00	-25.51	peak	
2	*	39534.250	25.67	15.33	41.00	60.00	-19.00	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5745 MHz_242 Tone

Vertical

130 dBuV/m

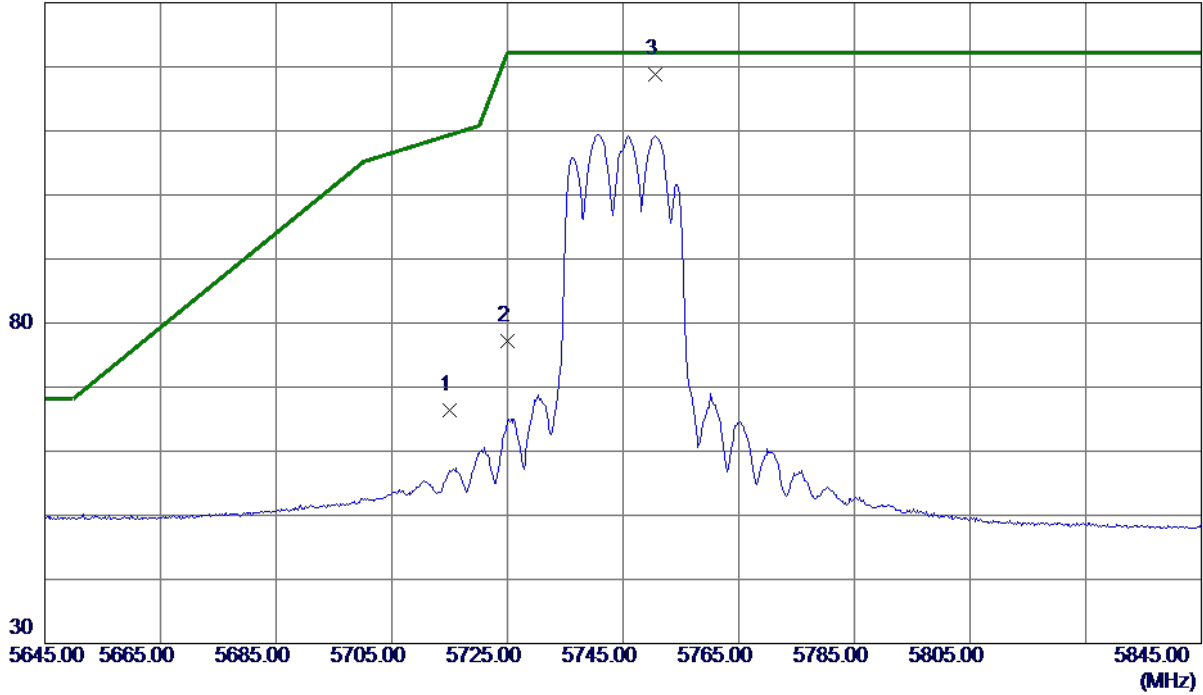

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	48.73	17.62	66.35	109.40	-43.05	Peak	
2	5725.0000	59.46	17.65	77.11	122.20	-45.09	Peak	
3 *	5750.6000	101.12	17.73	118.85	122.20	-3.35	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5745 MHz_242 Tone

Horizontal

130 dBuV/m

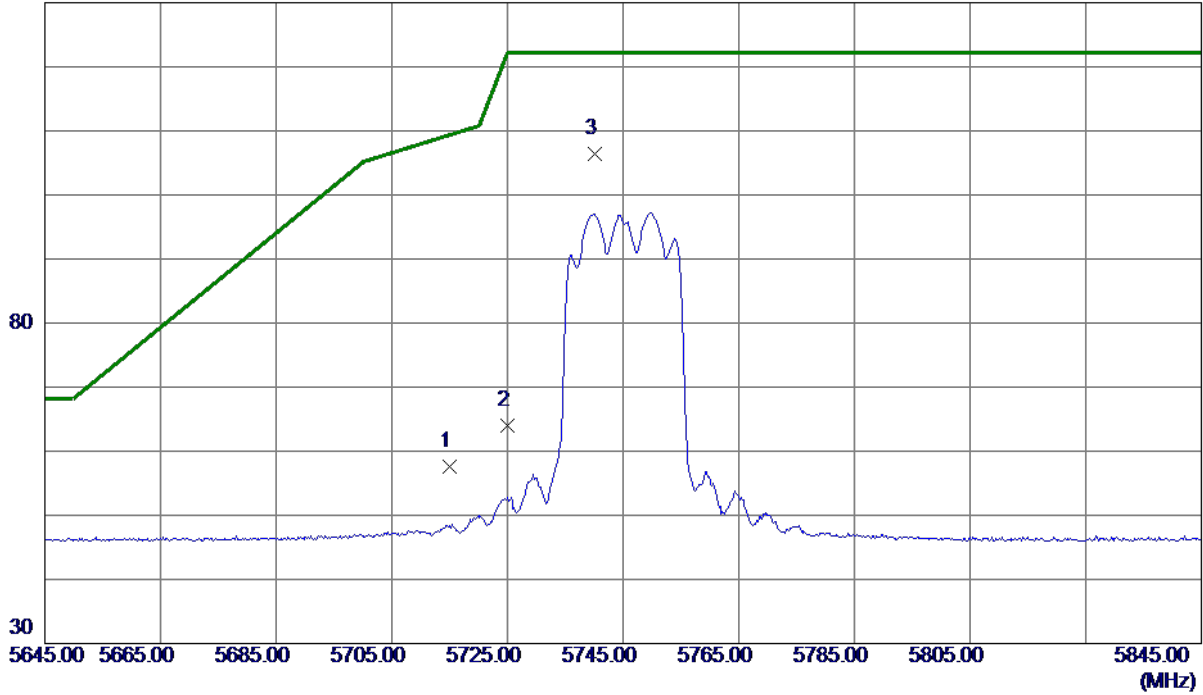

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	39.96	17.62	57.58	109.40	-51.82	Peak	
2	5725.0000	46.38	17.65	64.03	122.20	-58.17	Peak	
3 *	5740.2000	88.79	17.70	106.49	122.20	-15.71	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5785 MHz_242 Tone

Vertical

130 dBuV/m

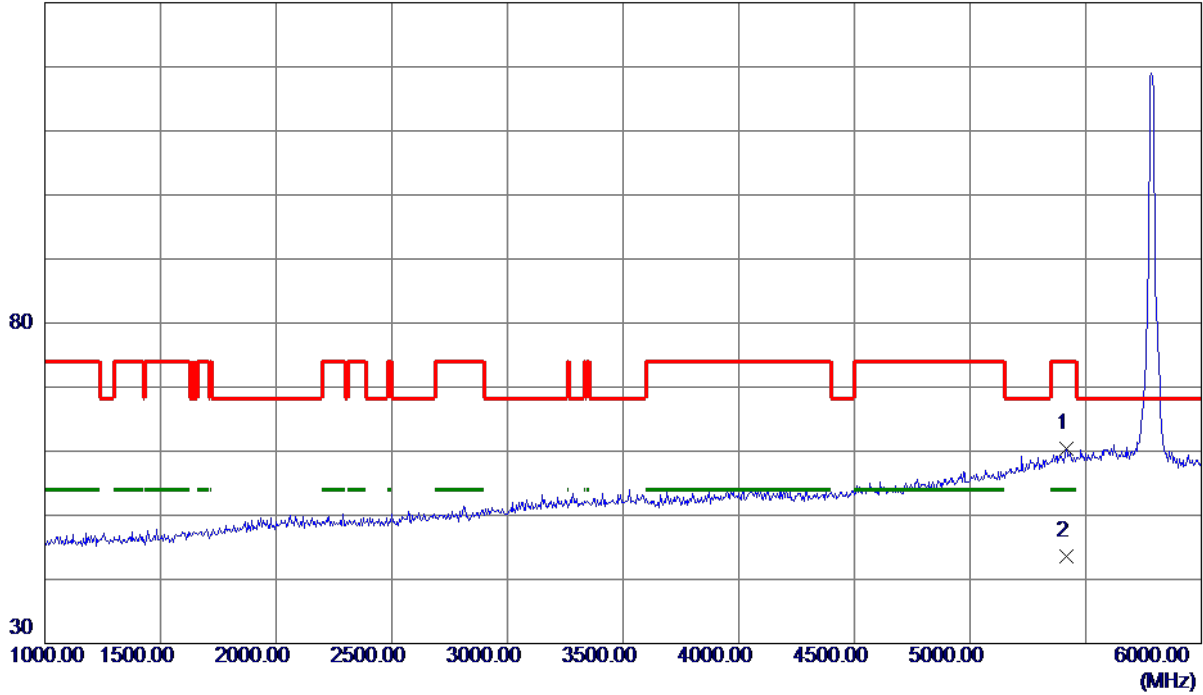

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5415.0000	43.68	16.78	60.46	74.00	-13.54	Peak	
2 *	5415.0000	26.90	16.78	43.68	54.00	-10.32	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5785 MHz_242 Tone

Vertical

130 dBuV/m

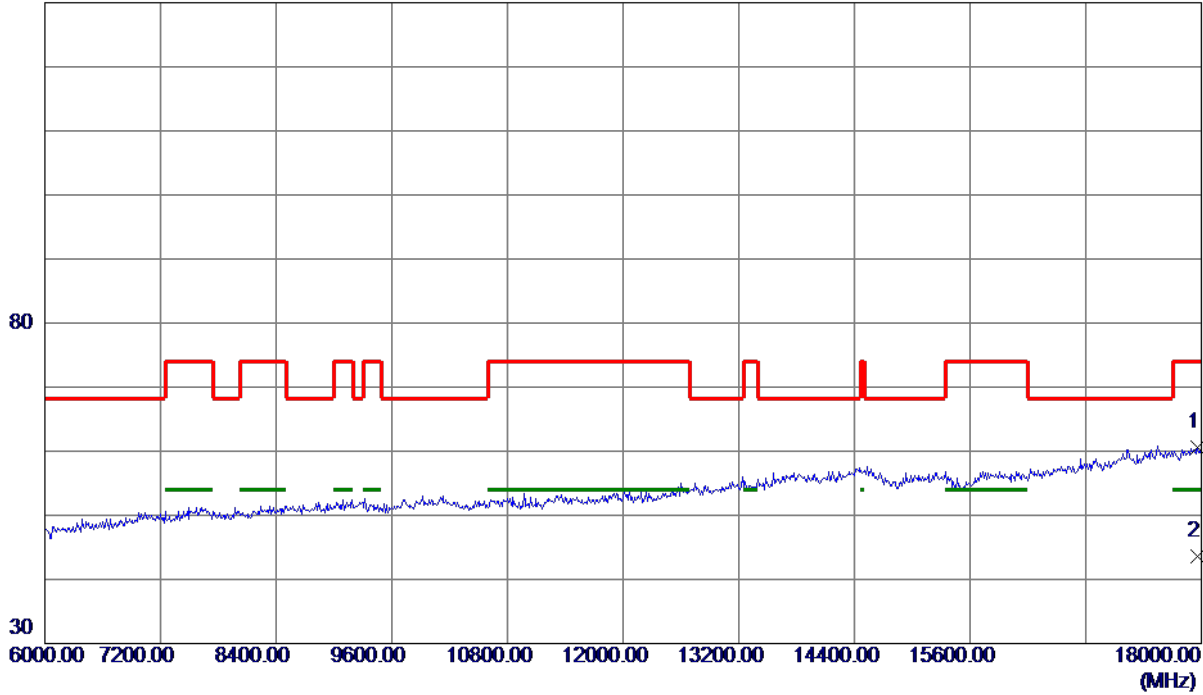

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17964.0000	38.27	22.28	60.55	74.00	-13.45	Peak	
2 *	17964.0000	21.41	22.28	43.69	54.00	-10.31	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5785 MHz_242 Tone

Vertical

130 dBuV/m

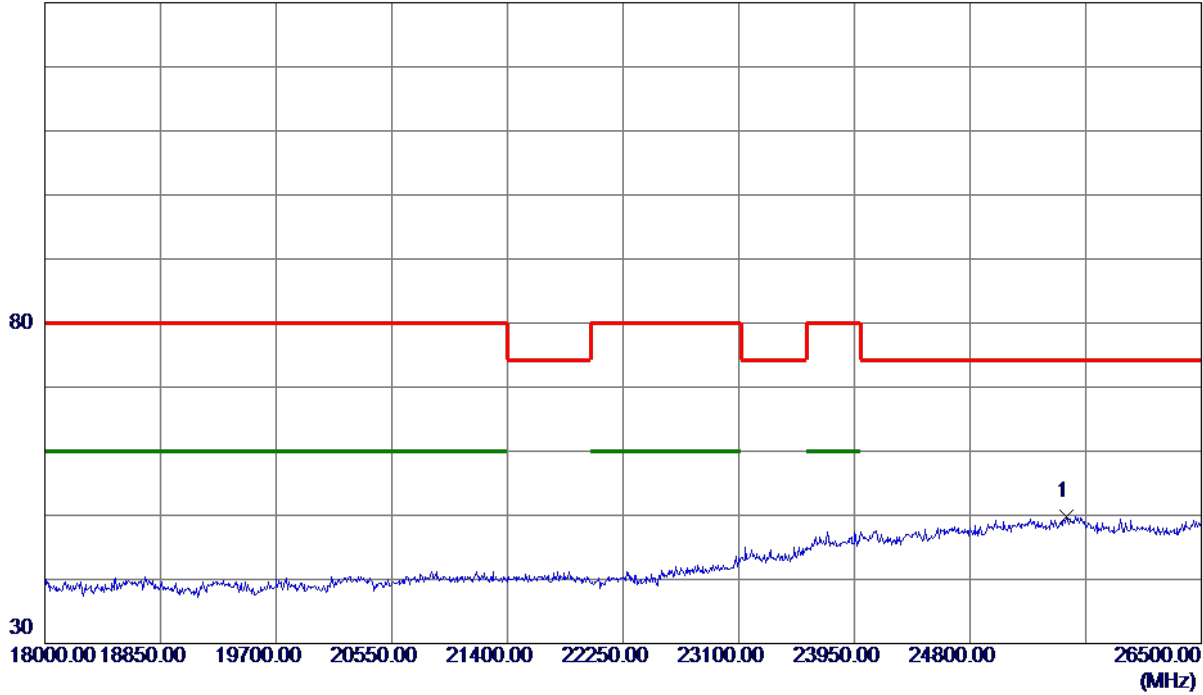


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25509.7500	29.72	20.02	49.74	74.30	-24.56	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5785 MHz_242 Tone

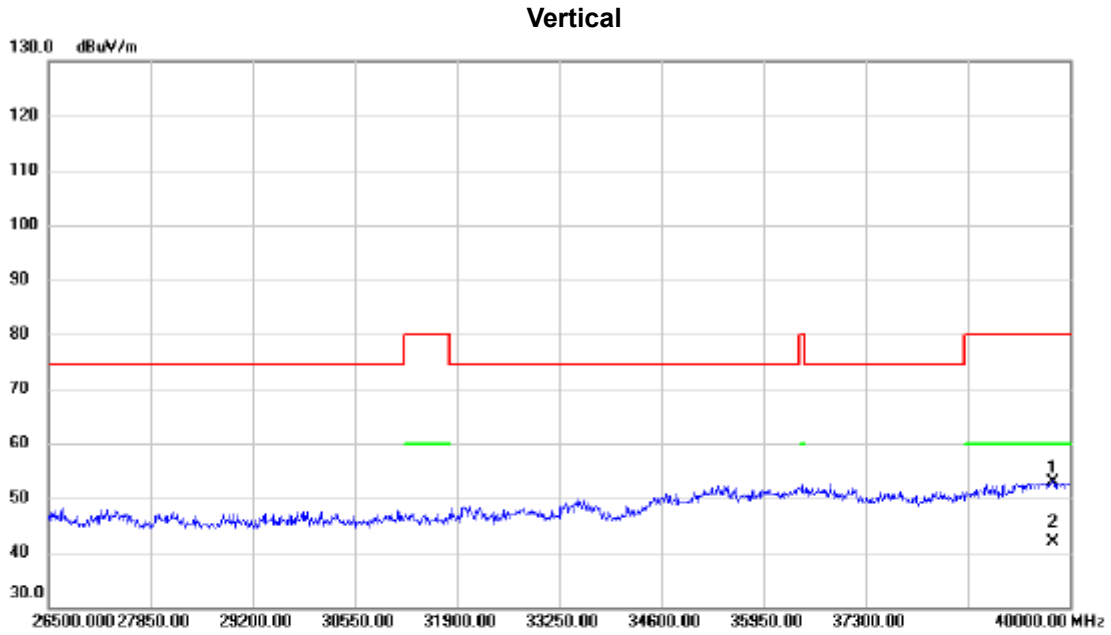

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39770.500	37.52	15.48	53.00	80.00	-27.00	peak	
2	*	39770.500	26.43	15.48	41.91	60.00	-18.09	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5785 MHz_242 Tone

Horizontal

130 dBuV/m

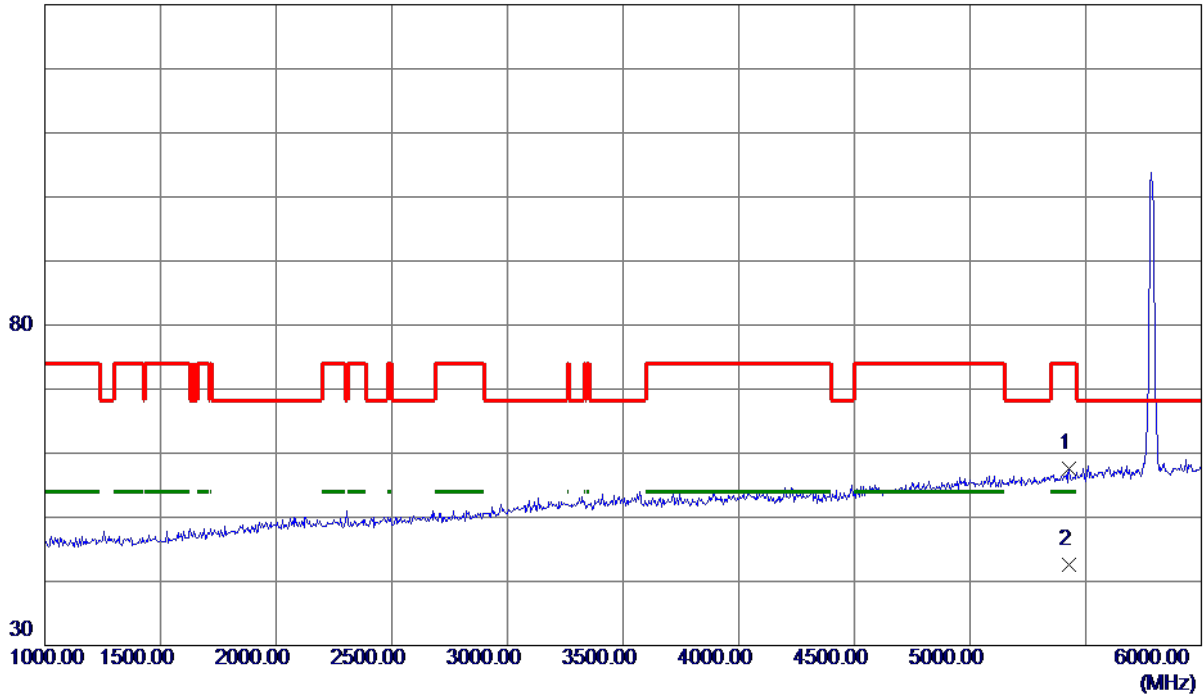

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5430.0000	40.70	16.82	57.52	74.00	-16.48	Peak	
2 *	5430.0000	25.75	16.82	42.57	54.00	-11.43	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5785 MHz_242 Tone

Horizontal

130 dBuV/m

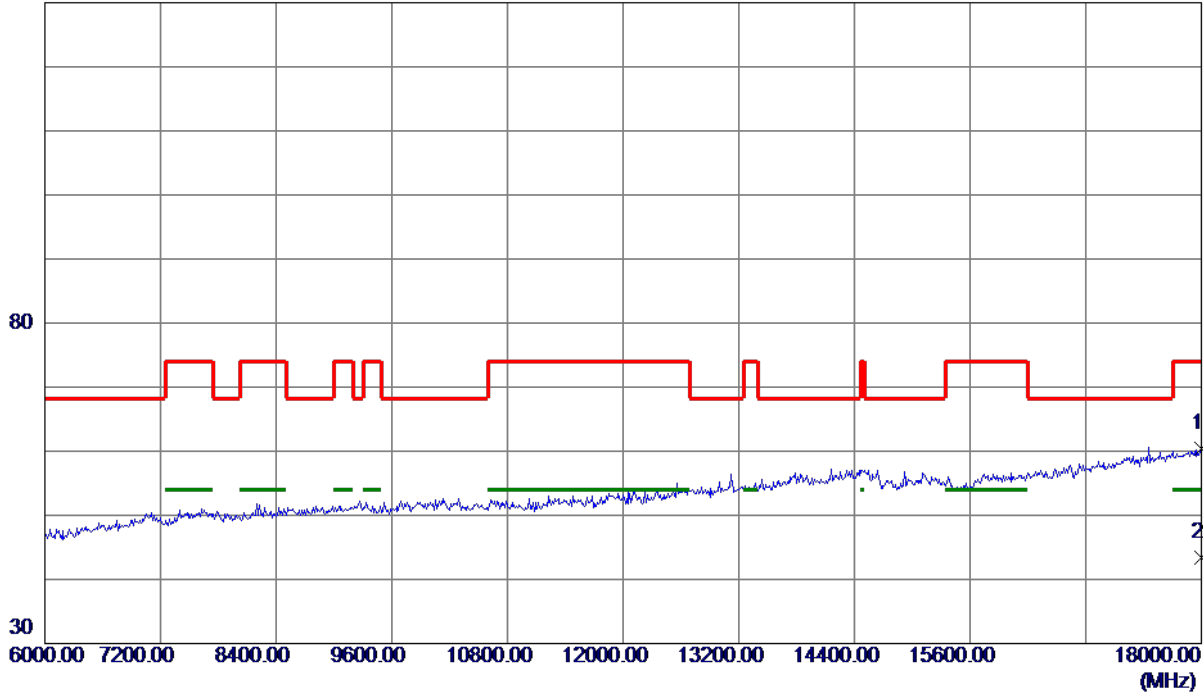

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	18000.0000	38.01	22.30	60.31	74.00	-13.69	Peak	
2 *	18000.0000	21.16	22.30	43.46	54.00	-10.54	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5785 MHz_242 Tone

Horizontal

130 dBuV/m

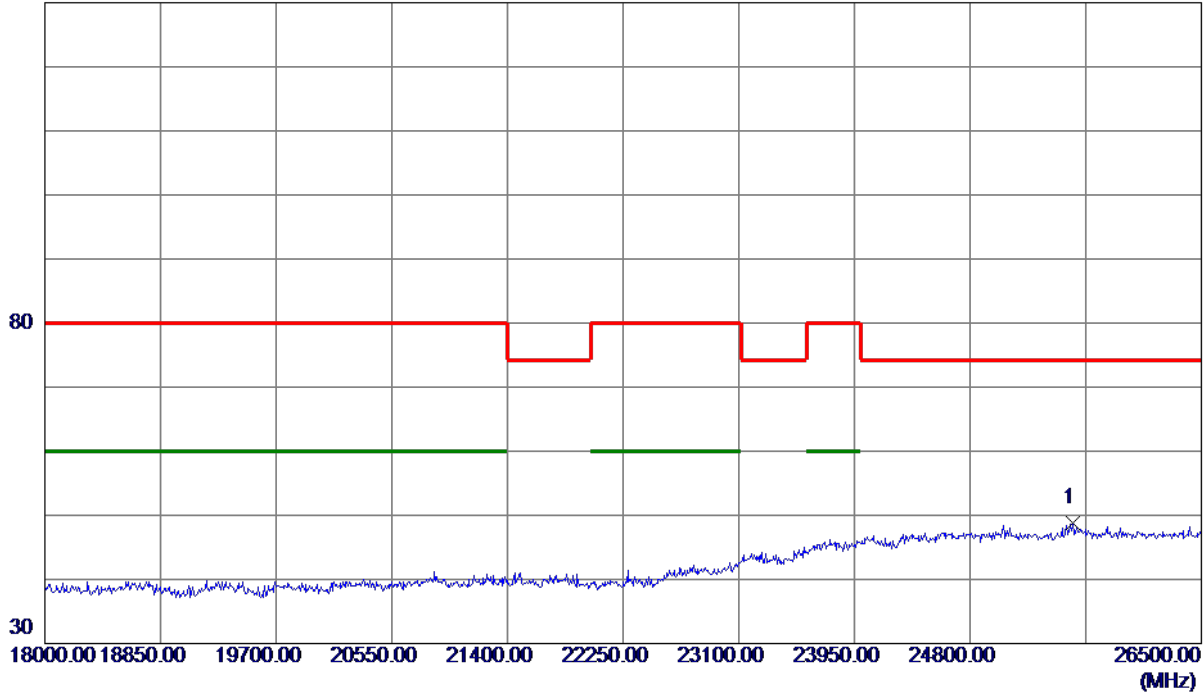


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25556.5000	28.69	20.02	48.71	74.30	-25.59	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5785 MHz_242 Tone

Horizontal

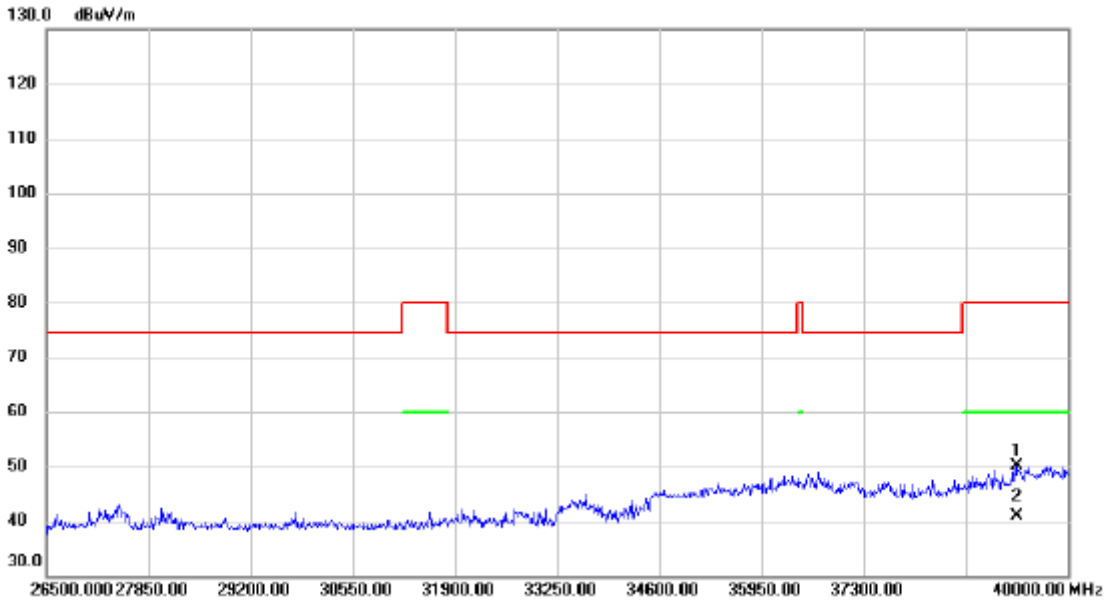

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39318.250	35.65	14.54	50.19	80.00	-29.81	peak	
2	*	39318.250	26.35	14.54	40.89	60.00	-19.11	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5825 MHz_242 Tone

Vertical

130 dBuV/m

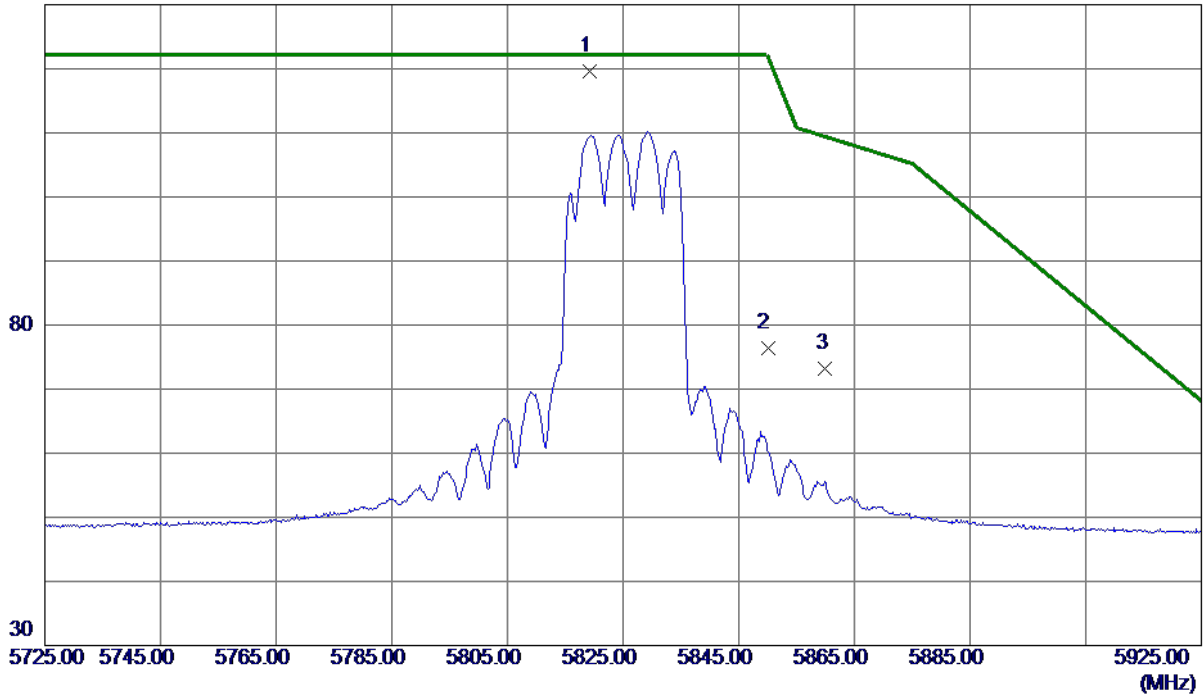


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5819.2000	101.63	17.93	119.56	122.20	-2.64	Peak	No Limit
2	5850.0000	58.33	18.02	76.35	122.20	-45.85	Peak	
3	5860.0000	55.08	18.05	73.13	109.40	-36.27	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW20) Mode 5825 MHz_242 Tone

Horizontal

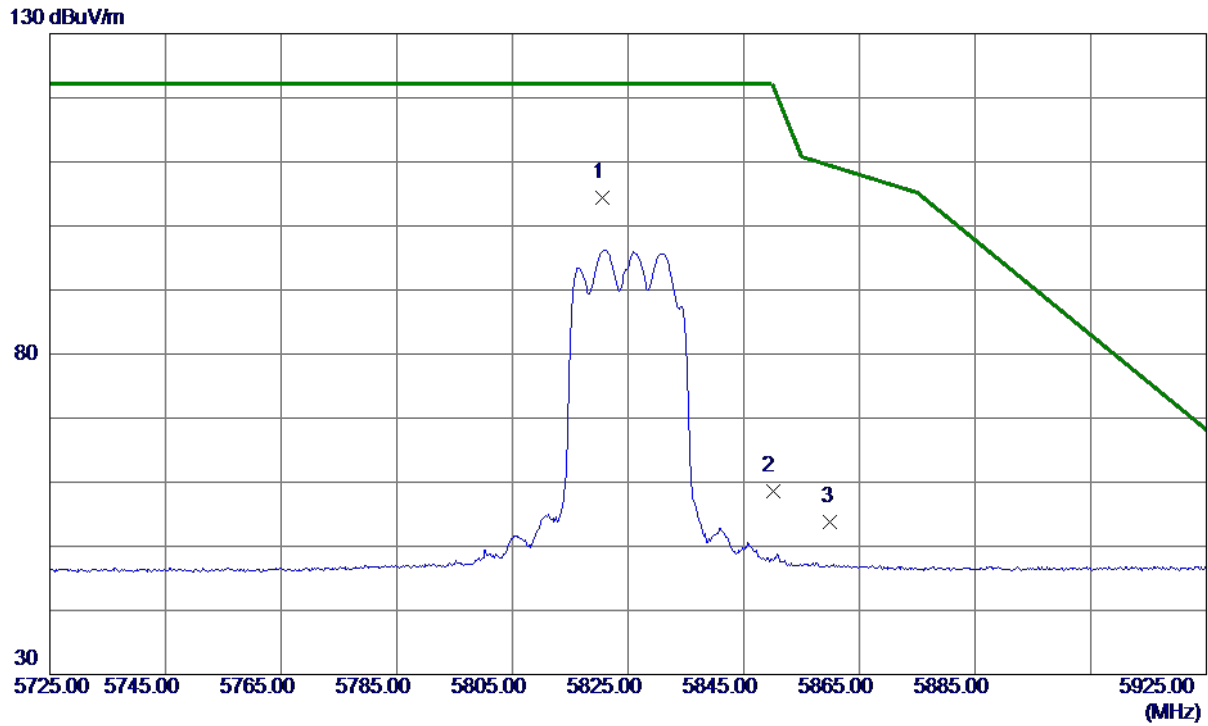


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5820.6000	86.51	17.94	104.45	122.20	-17.75	Peak	No Limit
2	5850.0000	40.57	18.02	58.59	122.20	-63.61	Peak	
3	5860.0000	35.66	18.05	53.71	109.40	-55.69	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5755 MHz_484 Tone

Vertical

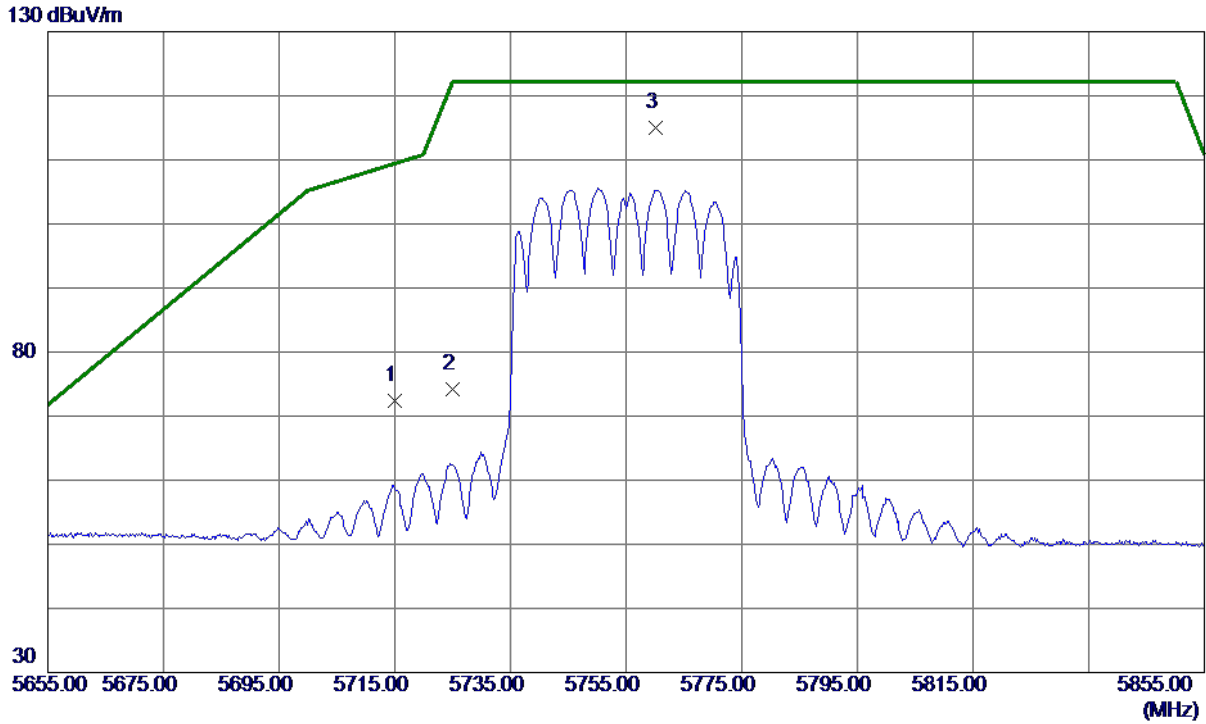

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	54.77	17.62	72.39	109.40	-37.01	Peak	
2	5725.0000	56.62	17.65	74.27	122.20	-47.93	Peak	
3 *	5760.2000	97.34	17.76	115.10	122.20	-7.10	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5755 MHz_484 Tone

Horizontal

130 dBuV/m

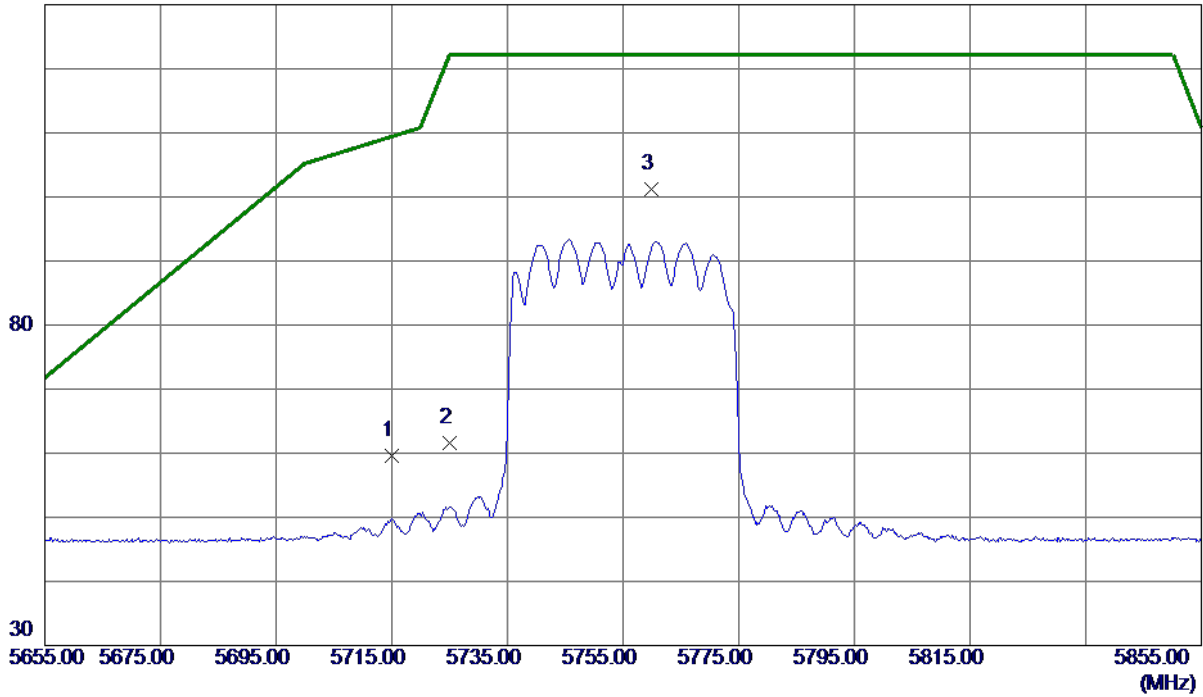

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	41.94	17.62	59.56	109.40	-49.84	Peak	
2	5725.0000	43.89	17.65	61.54	122.20	-60.66	Peak	
3 *	5759.8000	83.46	17.76	101.22	122.20	-20.98	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5795 MHz_484 Tone

Vertical

130 dBuV/m

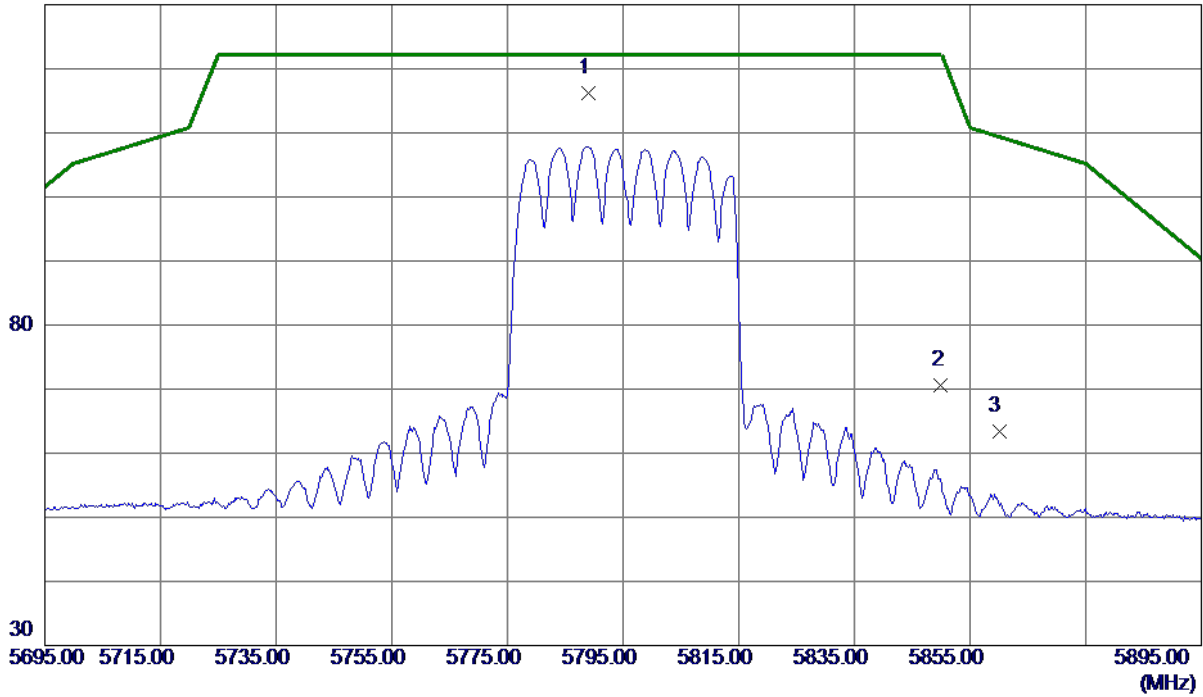

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5789.0000	98.41	17.84	116.25	122.20	-5.95	Peak	No Limit
2	5850.0000	52.60	18.02	70.62	122.20	-51.58	Peak	
3	5860.0000	45.26	18.05	63.31	109.40	-46.09	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5795 MHz_484 Tone

Vertical

130 dBuV/m

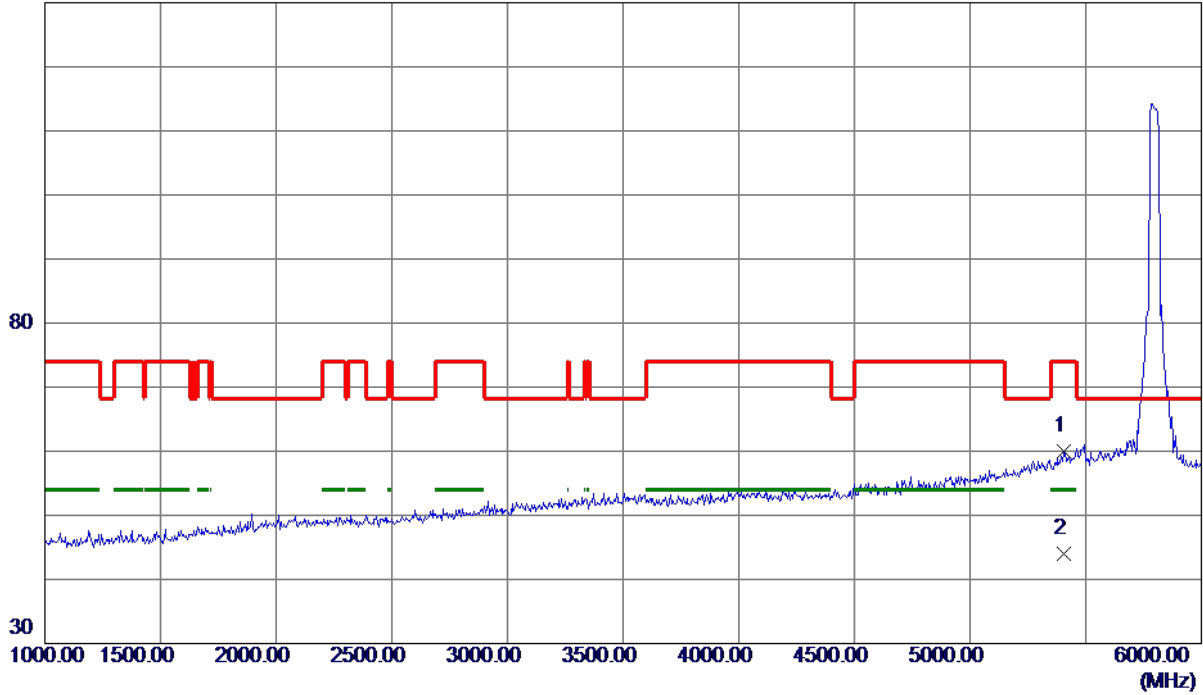

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5405.0000	43.31	16.76	60.07	74.00	-13.93	Peak	
2 *	5405.0000	27.21	16.76	43.97	54.00	-10.03	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5795 MHz_484 Tone

Vertical

130 dBuV/m

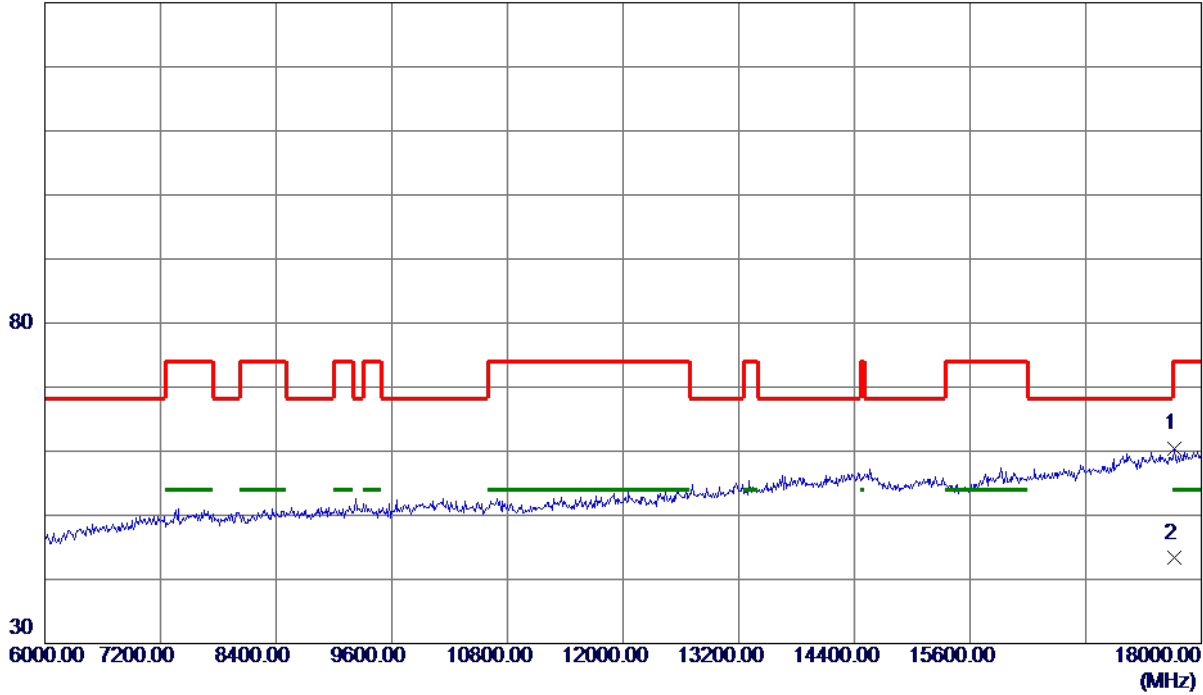

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17724.0000	38.27	22.13	60.40	74.00	-13.60	Peak	
2 *	17724.0000	21.17	22.13	43.30	54.00	-10.70	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5795 MHz_484 Tone

Vertical

130 dBuV/m

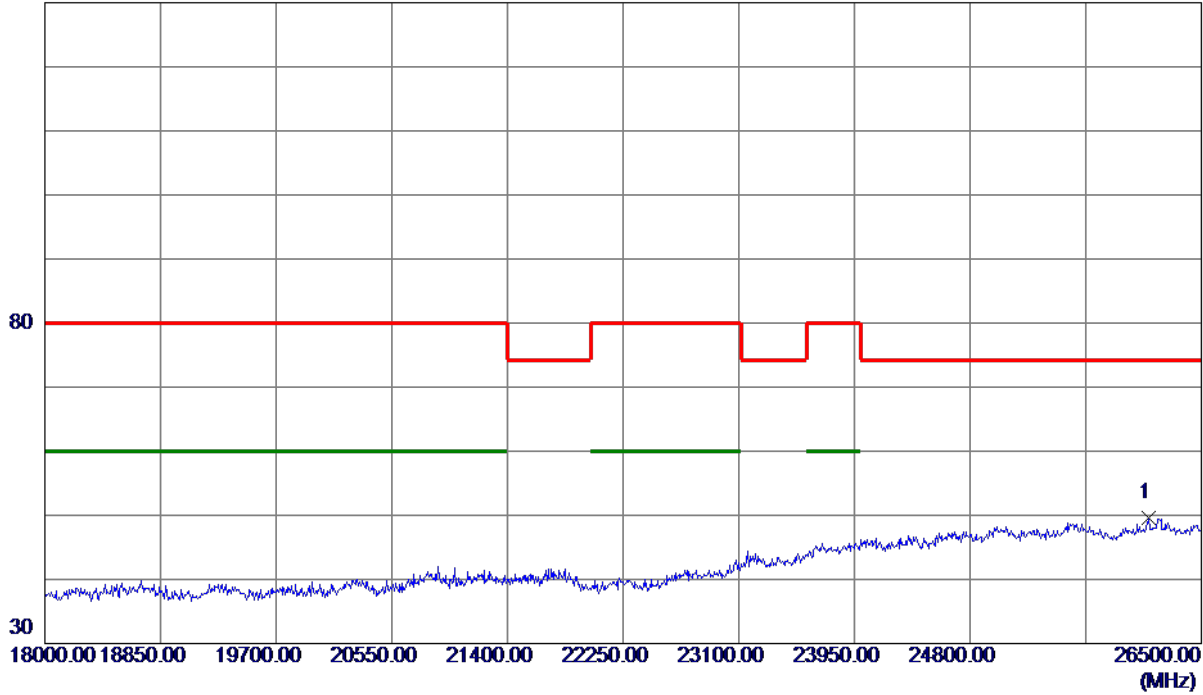


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	26109.0000	29.39	20.12	49.51	74.30	-24.79	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5795 MHz_484 Tone

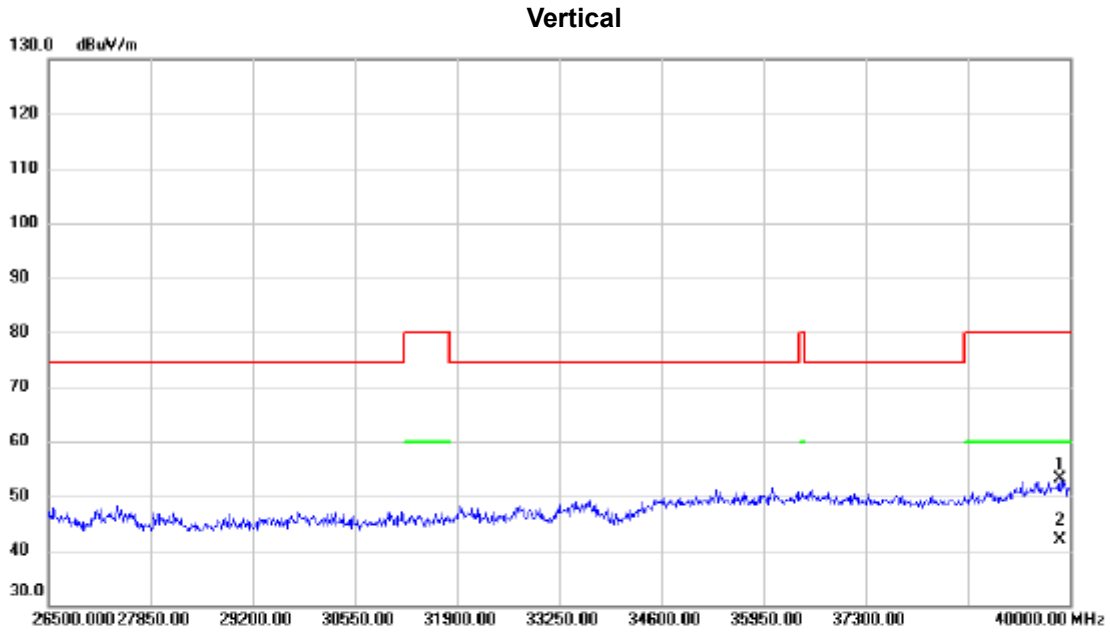

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39858.250	37.65	15.53	53.18	80.00	-26.82	peak	
2	*	39858.250	26.34	15.53	41.87	60.00	-18.13	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5795 MHz_484 Tone

Horizontal

130 dBuV/m

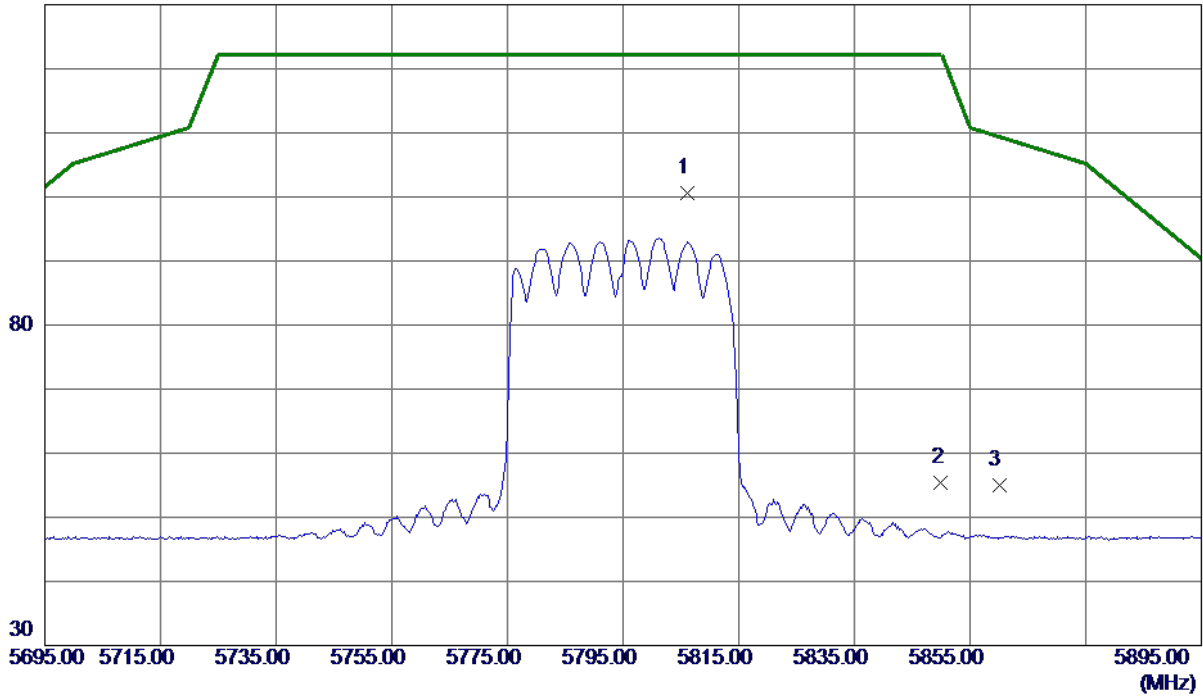

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5806.2000	82.73	17.89	100.62	122.20	-21.58	Peak	No Limit
2	5850.0000	37.46	18.02	55.48	122.20	-66.72	Peak	
3	5860.0000	36.95	18.05	55.00	109.40	-54.40	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HEW40) Mode 5795 MHz_484 Tone

Horizontal

130 dBuV/m

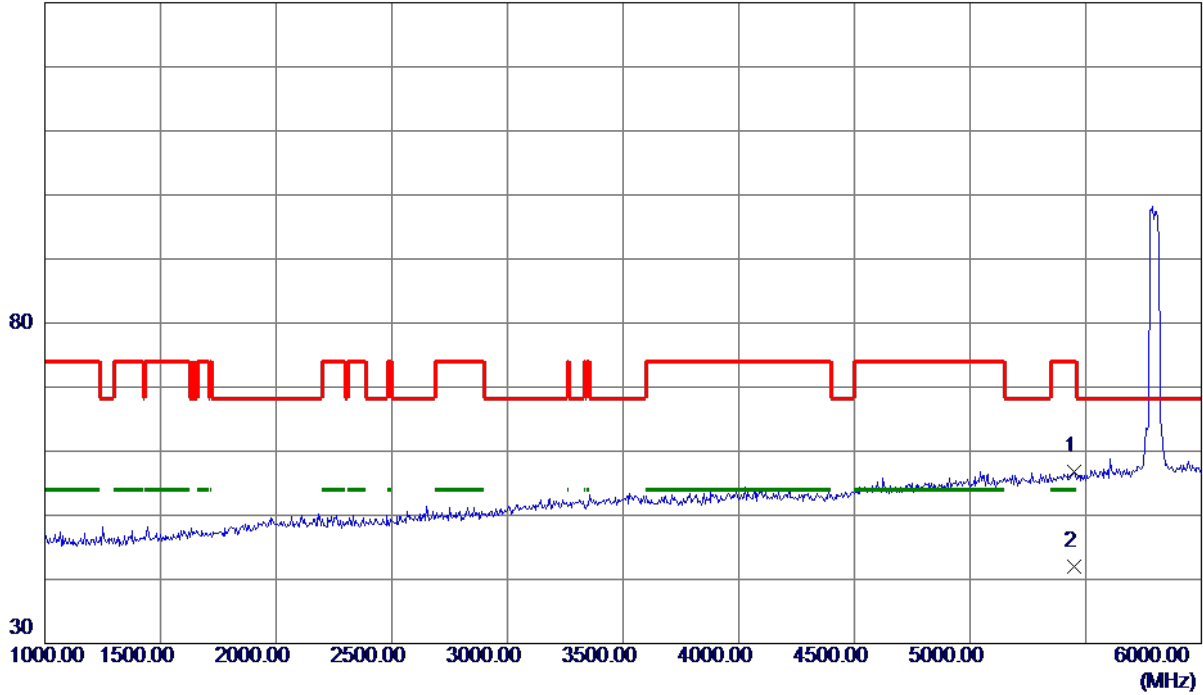

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5450.0000	40.00	16.87	56.87	74.00	-17.13	Peak	
2 *	5450.0000	25.16	16.87	42.03	54.00	-11.97	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5795 MHz_484 Tone

Horizontal

130 dBuV/m

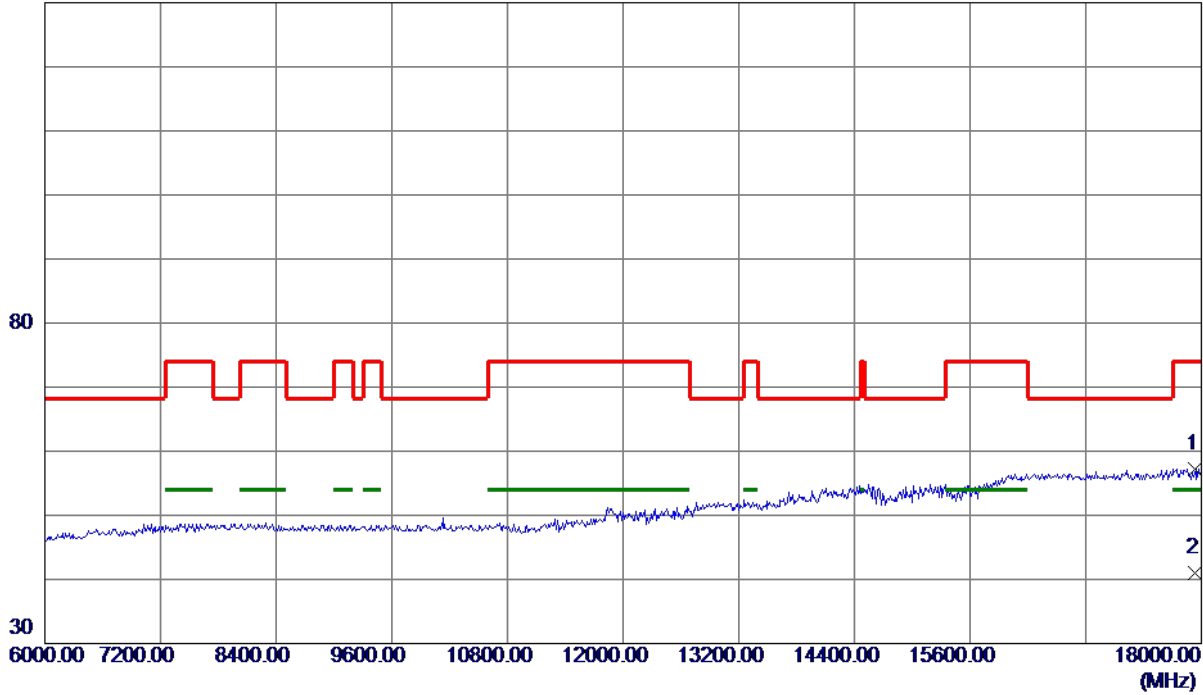

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17940.0000	34.97	22.26	57.23	74.00	-16.77	Peak	
2 *	17940.0000	18.77	22.26	41.03	54.00	-12.97	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5795 MHz_484 Tone

Horizontal

130 dBuV/m

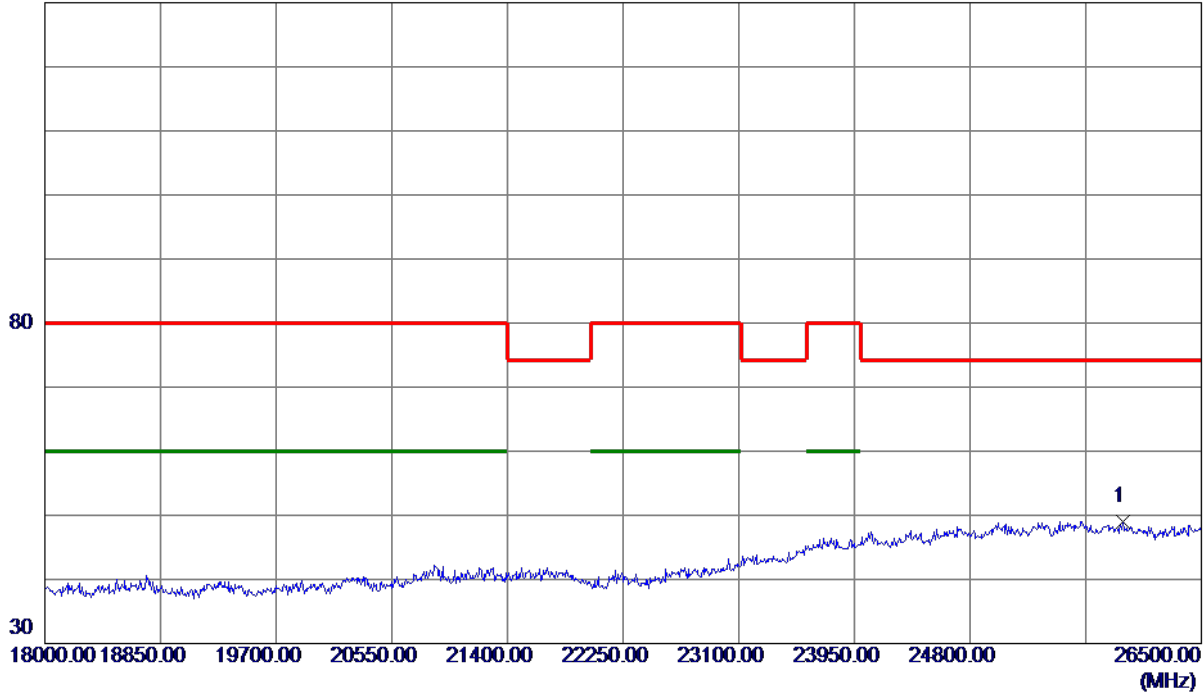


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25922.0000	29.00	20.00	49.00	74.30	-25.30	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW40) Mode 5795 MHz_484 Tone

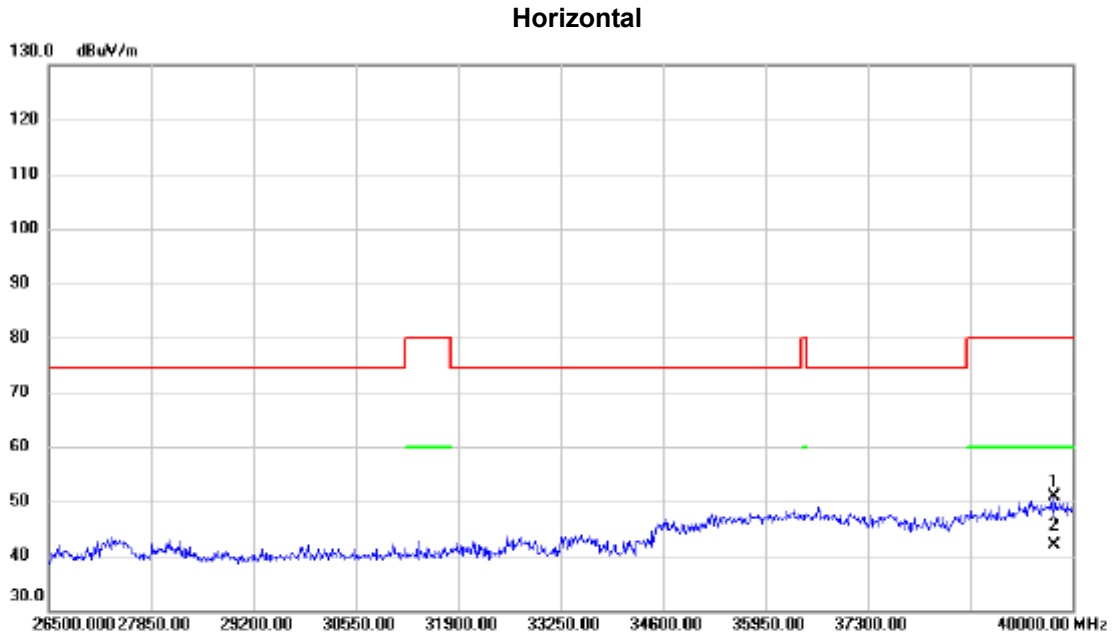

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1		39763.750	35.52	15.48	51.00	80.00	-29.00	peak	
2	*	39763.750	26.47	15.48	41.95	60.00	-18.05	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW80) Mode 5775 MHz_996 Tone

Vertical

130 dBuV/m

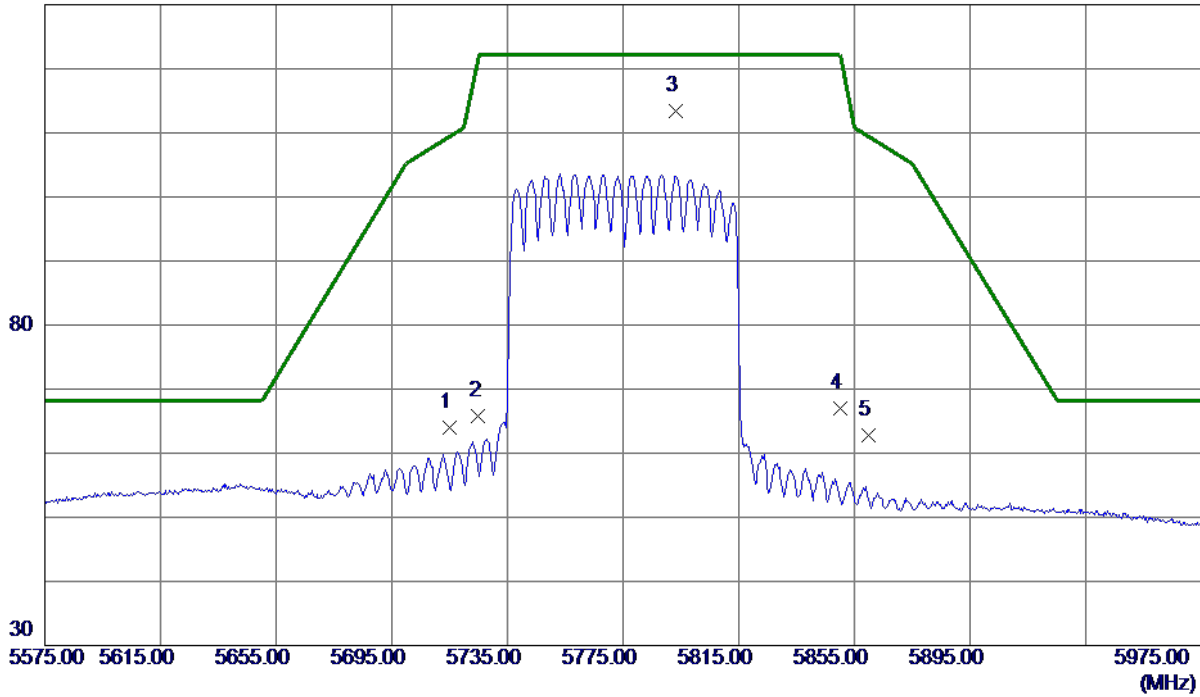

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	46.38	17.62	64.00	109.40	-45.40	Peak	
2	5725.0000	48.16	17.65	65.81	122.20	-56.39	Peak	
3 *	5793.4000	95.52	17.86	113.38	122.20	-8.82	Peak	No Limit
4	5850.0000	49.04	18.02	67.06	122.20	-55.14	Peak	
5	5860.0000	44.74	18.05	62.79	109.40	-46.61	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW80) Mode 5775 MHz_996 Tone

Vertical

130 dBuV/m

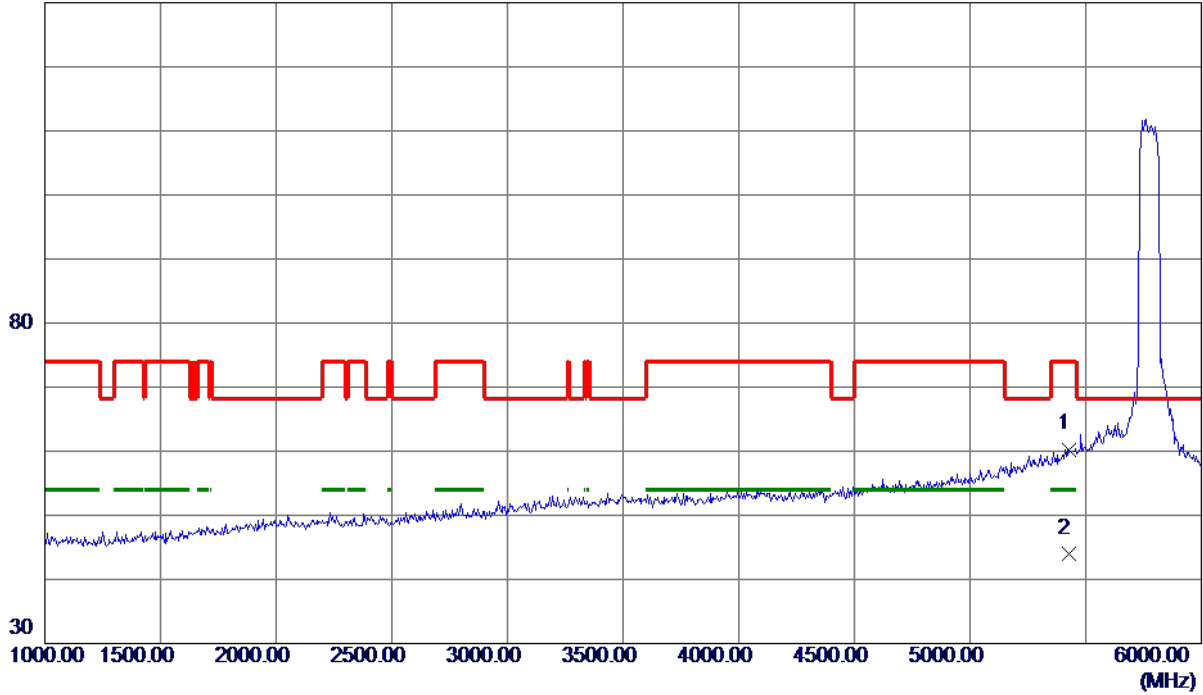

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5425.0000	43.49	16.81	60.30	74.00	-13.70	Peak	
2 *	5425.0000	27.16	16.81	43.97	54.00	-10.03	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW80) Mode 5775 MHz_996 Tone

Vertical

130 dBuV/m

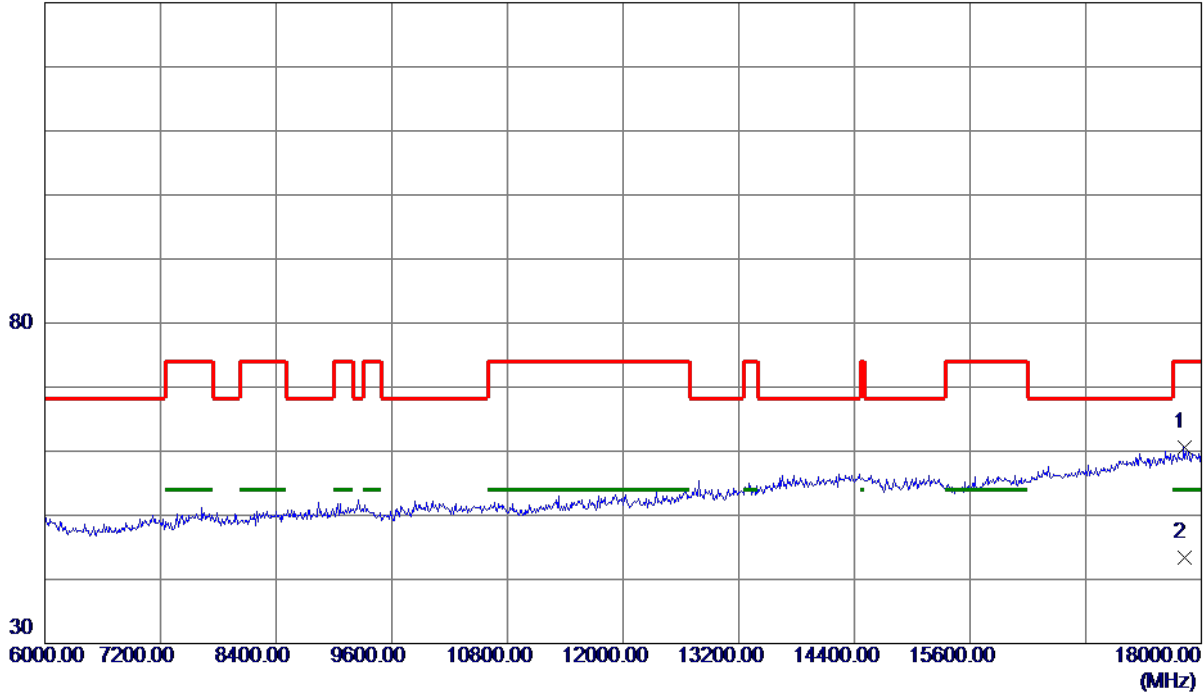

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17820.0000	38.44	22.19	60.63	74.00	-13.37	Peak	
2 *	17820.0000	21.16	22.19	43.35	54.00	-10.65	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW80) Mode 5775 MHz_996 Tone

Vertical

130 dBuV/m

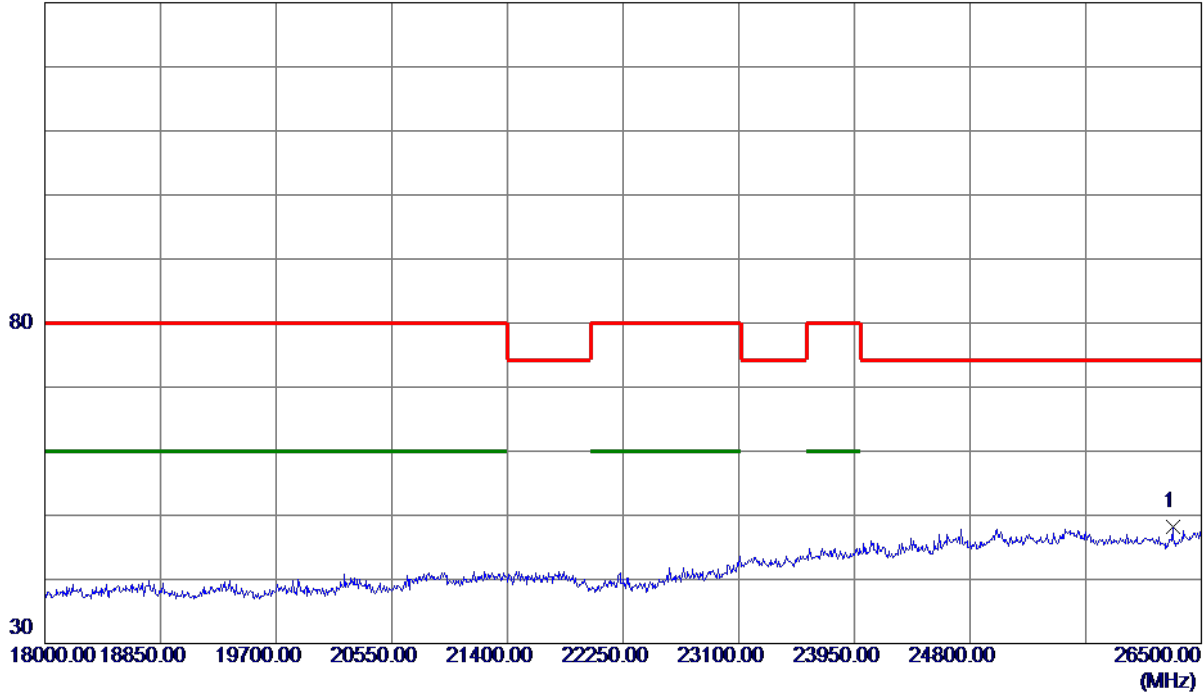


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	26291.7500	27.85	20.32	48.17	74.30	-26.13	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW80) Mode 5775 MHz_996 Tone

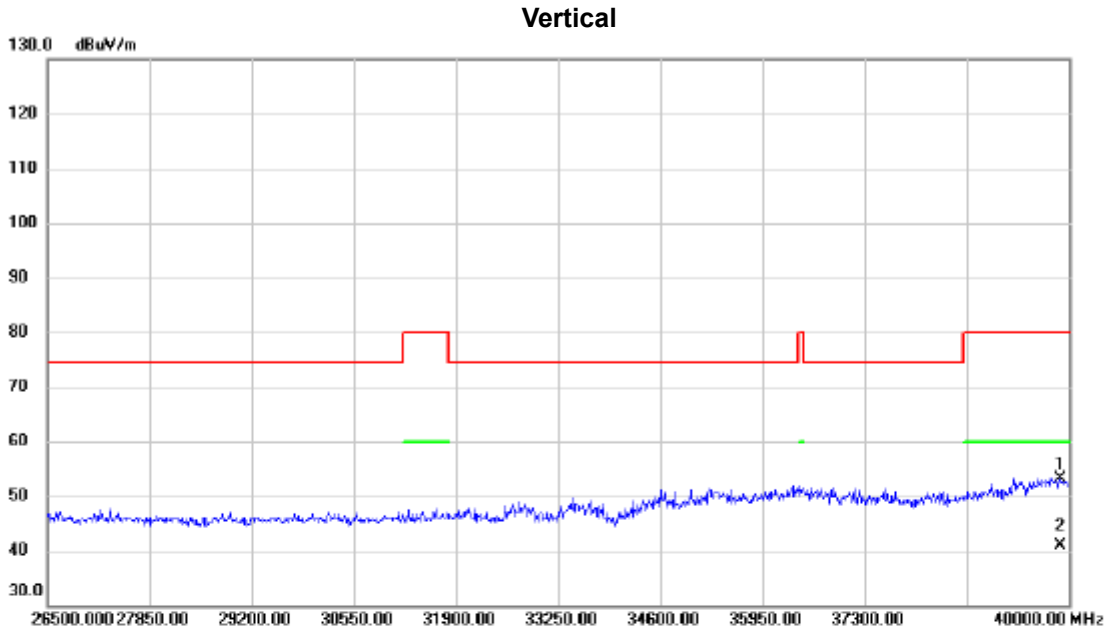

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39885.250	37.59	15.55	53.14	80.00	-26.86	peak	
2	*	39885.250	25.34	15.55	40.89	60.00	-19.11	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW80) Mode 5775 MHz_996 Tone

Horizontal

130 dBuV/m

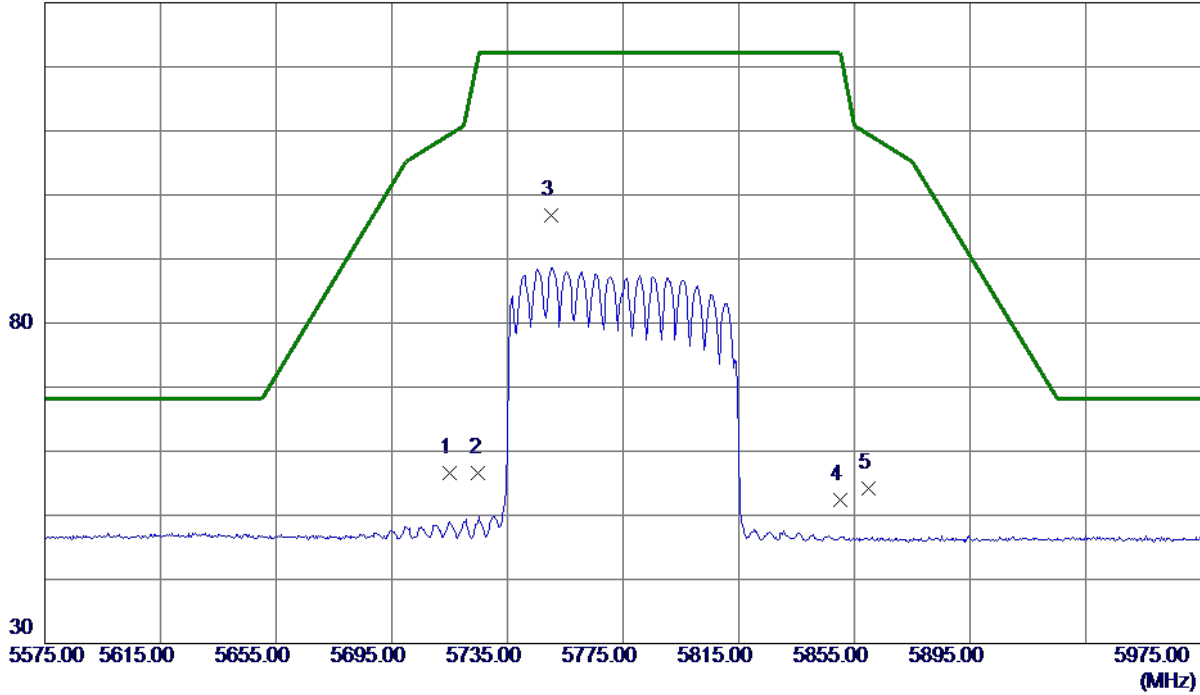

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.0000	39.05	17.62	56.67	109.40	-52.73	Peak	
2	5725.0000	38.94	17.65	56.59	122.20	-65.61	Peak	
3 *	5750.2000	79.13	17.73	96.86	122.20	-25.34	Peak	No Limit
4	5850.0000	34.46	18.02	52.48	122.20	-69.72	Peak	
5	5860.0000	36.07	18.05	54.12	109.40	-55.28	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW80) Mode 5775 MHz_996 Tone

Horizontal

130 dBuV/m

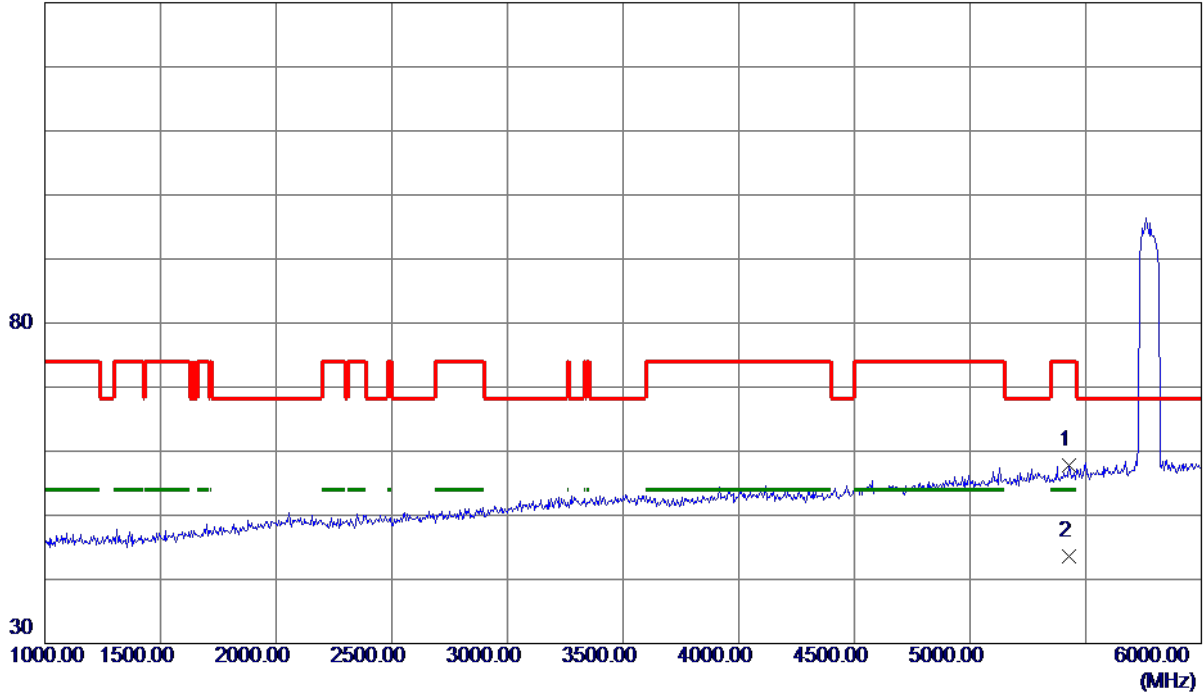

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5430.0000	40.99	16.82	57.81	74.00	-16.19	Peak	
2 *	5430.0000	26.70	16.82	43.52	54.00	-10.48	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW80) Mode 5775 MHz_996 Tone

Horizontal

130 dBuV/m

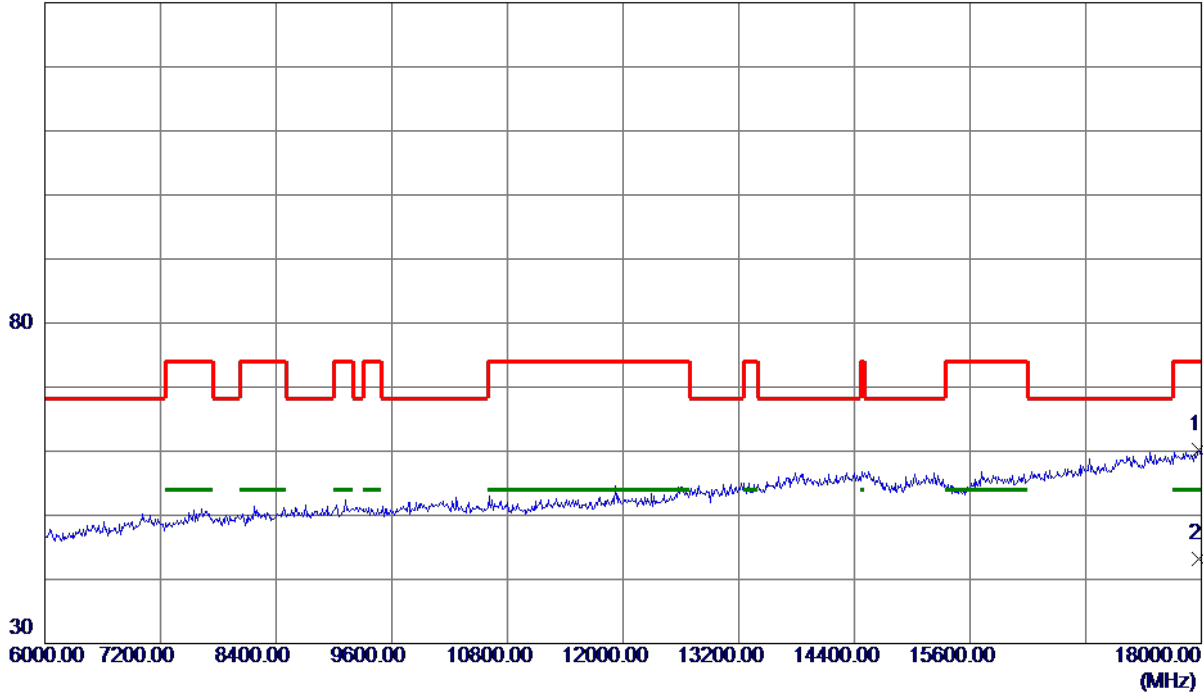

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	17976.0000	37.95	22.29	60.24	74.00	-13.76	Peak	
2 *	17976.0000	20.88	22.29	43.17	54.00	-10.83	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW80) Mode 5775 MHz_996 Tone

Horizontal

130 dBuV/m

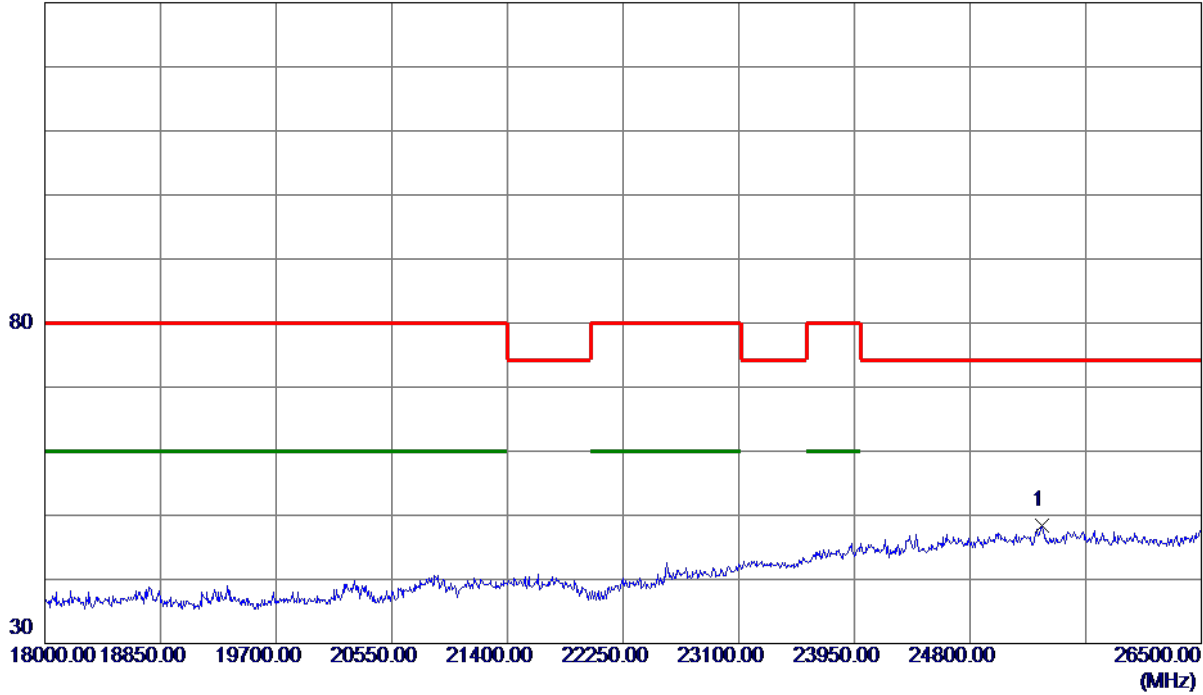


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	25327.0000	28.43	20.03	48.46	74.30	-25.84	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HEW80) Mode 5775 MHz_996 Tone

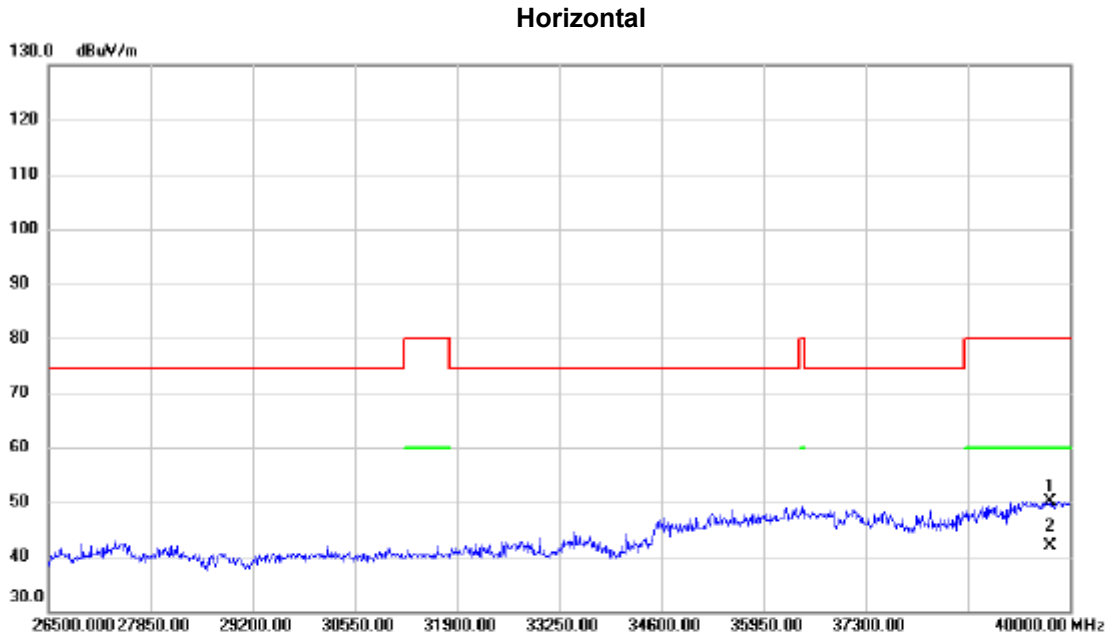

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		39743.500	34.75	15.46	50.21	80.00	-29.79	peak	
2	*	39743.500	26.37	15.46	41.83	60.00	-18.17	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.