

Y.U.H.O


YOUTH UNIQUE HOT ORIGINAL

轻奢智能眼镜
LIGHT LUXURY SMART GLASSES

SMART EYEWEAR II

快速指南 Quick Strat Guide

Power On & Power Off | 开机 & 关机

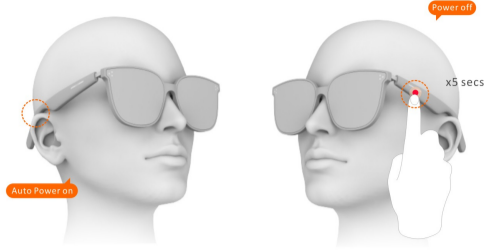

CN 内置的人体感应传感器通过检测皮肤接触，实现眼镜佩戴自动开机。轻击控制在整个镜脚位置都可以被有效识别感应；触摸和滑动控制需在标示区域内操作获得有效识别感应。

| 状态 | 控制/操作 | 语音提示/指示灯 |
|----|---|--------------|
| 开机 | 戴上后自动开机 | 开机 |
| 关机 | 连续触摸相应标识区域5秒就可关机；在新开连接后3分钟也可自动关机 | 关机 |
| 待机 | 如果连续15秒没有进行任何操作，则眼镜默认进入待机模式；取下眼镜后在任何操作情况下，3分钟自动进入待机模式 | 白色led灯每7秒闪一次 |
| 唤醒 | 轻敲击镜脚唤醒眼镜 | |

故障检测：

如果眼镜无法正常开机，请进行以下问题排查：
1) 确认眼镜是否有电；
2) 检查是否因为眼镜宽松而导致皮肤接触无法被识别感应，可尝试手动触摸靠近耳部的镜脚接触区域触发开机。


EN The eyewear automatically powers up with built-in body induction sensor that detects skin contact upon wearing. Tap controls are detectable through the entire temple. Touch or Slide controls are detectable only in marked area.

| Status | Control/Operation | Voice Prompt/ Led Indication |
|-----------|---|------------------------------|
| Power on | Automatically powers on upon wearing | Power on |
| Power off | Touch on Marked Area for 5 secs; Or Automatically powers off 3 mins after disconnection | Power off |
| Standby | Enters standby mode 15 secs without any operation; Or Enters standby mode 3 mins after taking off without any operation | White led flash every 7 secs |
| Wake up | Tap on the temple to wake up from Standby mode | |

Troubleshoot:

If the eyewear does not power on normally, please check the following:
1) Make sure there is electricity in eyewear;
2) Check if the eyewear is too loose to detect skin contact. In this case please try manually touch on the contact area of the temple near your ear position.

Phone Call Controls | 通话控制

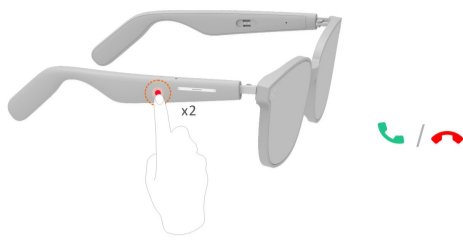


CN 轻击控制在整个镜脚位置都可以被有效识别感应。

| 事项 | 控制及操作方法 |
|------------------|---------------------|
| 接挂电话 | 选择任意一侧镜脚位置轻触2下 |
| 拒接 | 选择任意一侧镜脚位置轻触3下 |
| 将通话音频信号由眼镜转接到手机上 | 选择右镜脚位置轻触3下（在通话状态下） |

EN Tap controls are detectable through the entire temple.

| Item | Control |
|--|---|
| Pick up or hang up | Tap 2 times on either temple |
| Decline | Tap 3 times on either temple |
| Switch audio from eyewear to the phone | Tap 3 times on right temple (in talk state) |

Playback Controls | 音乐播放控制操作

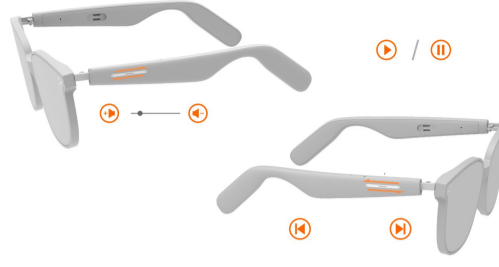


CN 轻击控制在整个镜脚位置都可以被有效识别感应。触摸和滑动控制需在标示区域内操作获得有效识别感应。

| 事项 | 控制及操作方法 |
|-------------|----------------|
| 播放音乐或暂停音乐播放 | 选择任意一侧镜脚位置轻触2下 |
| 切换到上一曲目 | 在右侧镜脚标识区域内向后滑动 |
| 切换到下一曲目 | 在右侧镜脚标识区域内向前滑动 |
| 增加音量 | 在左侧镜脚标识区域内向前滑动 |
| 降低音量 | 在左侧镜脚标识区域内向后滑动 |

EN Tap controls are detectable through the entire temple. Touch or Slide controls are detectable only in Marked Area.

| Item | Control |
|-------------------------|---|
| Play or pause music | Tap 2 times on either temple |
| Switch to previous song | Slide BACKWARD on Marked Area of the RIGHT temple |
| Switch to next song | Slide FORWARD on Marked Area of the RIGHT temple |
| Volume up | Slide FORWARD on Marked Area of the LEFT temple |
| Volume down | Slide BACKWARD on Marked Area of the LEFT temple |

Voice Assistant Controls | 语音辅助控制

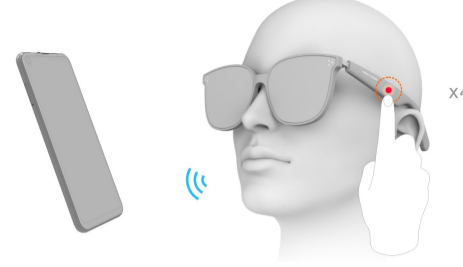


CN 轻击控制在整个镜脚位置都可以被有效识别感应。

| 事项 | 控制及操作方法 |
|----------|--|
| 激活语音辅助功能 | 选择任意一侧镜脚位置轻触4下即可激活 |
| 关闭语音辅助功能 | 选择任意一侧镜脚位置轻触2下即可关闭 注:此功能仅适用于iOS或安卓(Android)10及以上系统。 |

EN Tap controls are detectable through the entire temple.

| Item | Control |
|--------------------------|--|
| Activate Voice assistant | Tap 4 times on either temple to activate. |
| Turn off Voice assistant | Tap 2 times on either temple to turn off. Note: This feature only works with iOS or Android 10 & above systems. |

Game Mode Control | 游戏模式控制

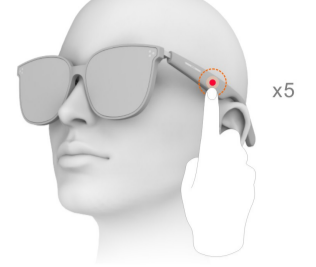

CN 轻击控制在整个镜脚位置都可以被有效识别感应。

| 事项 | 控制及操作方法 |
|-----------|-----------------------|
| 进入或退出游戏模式 | 选择任意一侧镜脚位置轻触5下即可激活或退出 |

EN Tap controls are detectable through the entire temple.

| Item | Control |
|-------------------------|--|
| Enter or exit Game Mode | Tap 5 times on either temple to activate or exit |

Pairing | 配对




CN 首次使用时，需要通过手动操作将眼镜与您的手机进行配对；首次配对成功后，再次开机时将自动连接同一设备。

| 状态 | 控制/操作 | 语音提示/Led指示灯 |
|------|--|-------------|
| 连接电源 | 佩戴后自动开机 | 开机 |
| 蓝牙开启 | 打开手机蓝牙 | |
| 配对 | 选择“Y.U.H.O EYEWEAR II”进行配对 注：眼镜在待机模式下保持连接状态 | 已连接 |
| 断开连接 | 当设备信号丢失时，设备可能会断开连接 | 连接已断开 |

EN The eyewear requires manual pairing with your phone for first time use. Automatic connection with the same device when powered on is enabled after successful pairing for the first time.

| Status | Control/Operation | Voice Prompt/ Led Indication |
|---------------|--|------------------------------|
| Power up | Automatically powers on upon wearing | Power on |
| Bluetooth on | Turn on Bluetooth on your phone | |
| Pair up | Select "Y.U.H.O EYEWEAR II" to pair up Note: Eyewear will stay in connection in Standby | Connected |
| Disconnection | Device may be disconnected upon loss of device signal | Disconnected |

Charging | 充电

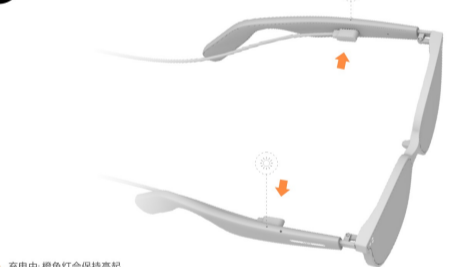

充电中: 橙色灯会保持亮起
Charging: Orange steady light on
充电已完成: 白色灯亮起, 5分钟后熄灭
Charged: White steady light on for 5 mins and then off


CN 此款眼镜单次充电标准时长为2小时
(重要提示: 请使用5伏直流充电器充电)

| 状态 | 控制/操作 | 备注 |
|------|--------------------------------|--------------------------|
| 充电中 | 将充电线连接到5伏直流充电器上，并将每个磁性端口连接到镜脚上 | 自动关机 |
| 停止充电 | 断开充电线与镜脚的连接 | 自动开机 |
| 电量显示 | 配对成功后，即可在手机上查看眼镜电量 | 哪侧镜脚先连接到手机上就会显示该侧镜脚位置的电量 |

EN This eyewear may take 2 hours for a full charge.
(IMPORTANT: Please use 5V DC charger for charging)

| Status | Control/Operation | Remarks |
|---------------------|--|---|
| Charging | Connect the charging cable to a 5V DC charger and attach each magnetic port to the temples | Auto power off |
| Stop charging | Disconnect the charging cable from the temple(s) | Auto power on |
| Power level display | Check power level of the eyewear on your phone upon successful pairing | Power level of either temple that 1st connects to the phone will be displayed |

Switch Glasses Frames | 更换眼镜框

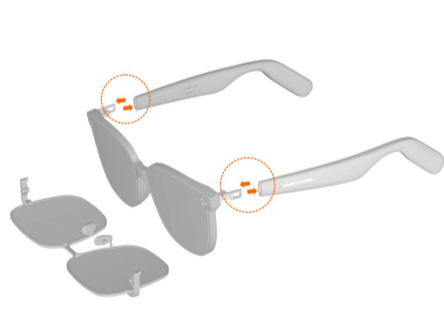



CN 独特的磁性快装设计，使得不同风格的眼镜框架更换便利化，此款眼镜配备的真无线立体声音频镜架臂可以与多种镜架相匹配。

将镜脚对准插入，将其与您选择佩戴的镜架进行连接组装，将镜脚拔出，即可使其与镜架脱离。

EN Unique magnetic quick-release design allows easy switch between different styles of glasses frames. One pair of TWS audio frame arms can work with multiple kinds of frames.

Align and push in the temple to pair with the glasses frame you choose to wear. Pull out the temple to remove from the glasses frame.

Cautions | 注意事项

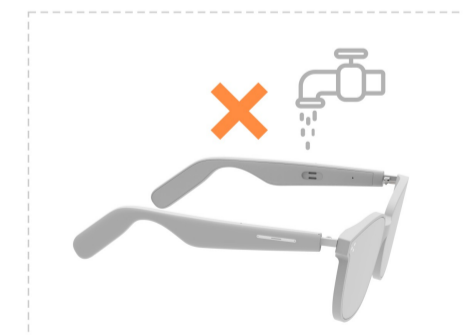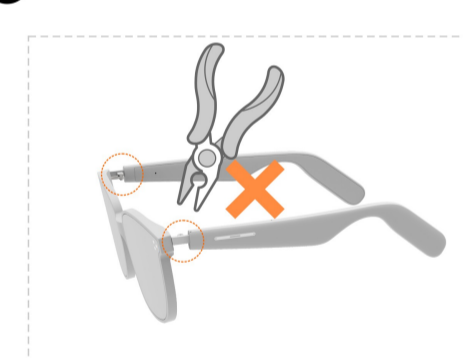

CN 本产品为非专业防水眼镜，请勿直接冲洗镜脚。所有的接口都必须保持干燥，本产品符合国际防溅防尘保护标准。由于日常佩戴及使用产生的磨损，本产品的防护功能可能会逐渐减弱，且无法保证永久有效。接口潮湿时请勿充电。由于液体侵入而造成的损坏将不再包括在保修范围内。

EN This product is non-professional waterproof glasses. Please do not rinse the temples directly. All interfaces need to be kept dry. This product only supports IP67 splash and dust resistance. Protection may be reduced due to daily wear and tear, and is not permanently effective. Do not charge when the interface is wet. Damage caused by liquid intrusion is no longer covered by the warranty.

Warranty | 保修单

CN 1. 客户在收到产品后7天以内如发现任何产品质量问题，(非人为损坏)我们将按照“三包”有关规定提供一年保修服务。
2. 在有效保修期内，即自交货之日起12个月以内，如因产品材料或工艺上存在缺陷而导致产品在消费者正常使用期间出现故障的，经证实，客户均有权从 Y.U.H.O 获得免费维修服务。
3. 如果您所在的国家或地区存在不允许针对默示保修设置具体期限的情况，则上述保修条款可能无法对您适用。

EN 1. Customers are entitled to replacement or free repair service in case of quality defects and non-human damage found in the product within 30 days upon receipt of the product.
2. Customers are entitled to free repair service from Y.U.H.O for any product proven defective in material or workmanship that results in product failure during normal consumer usage and conditions within the valid warranty period, which is 12 months counting from the date of delivery.
3. Some states or countries do not allow limitations on how long an implied warranty lasts, so the above warranty term may not apply to you.

如果您的产品在购买后出现故障或其它任何问题，请通过电子邮箱或官网与我们的客服进行联系。
邮箱: uct@uctcom.cn, 官网: <https://www.yuhostyle.com>

If failure or any problem occurs to your product after purchase, please contact our customer service through email uct@uctcom.cn, or website at <https://www.yuhostyle.com>.



请扫描二维码获取更多功能与信息

Please scan the qr code for more features and information

本资料仅供参考，不构成任何形式的承诺。
This document is for reference only and shall not constitute a commitment or guarantee of any kind.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.