

尺寸：85*95mm

骑马钉

材质：封面128克铜版纸，内页80g书纸

 **TAOTRONICS**
www.taotronics.com


E-mail:
support@taotronics.com

MANUFACTURER
Manufacturer: Shenzhen NearbyExpress Technology Development Co.,Ltd.
Address: Floor 7, Building E, Galaxy World Phase II, Shenzhen, China

Learn more about the EU Declaration of Conformity:
<https://www.taotronics.com/pages/user-manual>
FCC ID:2AVUH1T-BH097



TT-BH097_V1.1_EN-JP

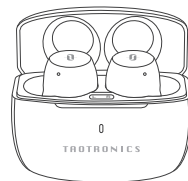

Model: TT-BH097
TaoTronics SoundLiberty 97
True Wireless Stereo Earbuds
User Guide

CONTENTS


English 01-19

日本語 21-37


Package Contents



①



②



③



④



⑤




EN

- ① TaoTronics True Wireless Stereo Earbuds (TT-BH097)
- ② 8 x Ear Tips (two are equipped on the earbuds)
- ③ 1 x USB-C Charging Cable
- ④ 1 x User Guide
- ⑤ 1 x Quick Start Guide

JP

- ① TaoTronics完全ワイヤレスステレオイヤホン (TT-BH097)
- ② 8 x イヤーチップ (2つは設置済み)
- ③ 1 x USB-C 充電ケーブル
- ④ 1 x 取扱説明書
- ⑤ 1 x クイックスタートガイド

Product Diagram

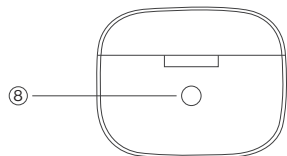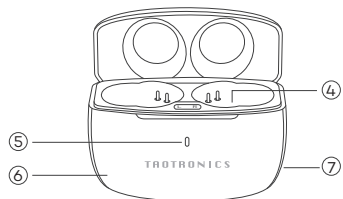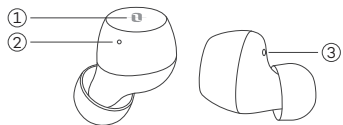

EN

- ① Multifunction Touch Control
- ② LED Indicator
- ③ Charging Contacts
- ④ Charging Slot
- ⑤ Charging Indicator
- ⑥ Charging Case
- ⑦ USB-C Charging Port
- ⑧ Reset Button

JP

- ① 多機能タッチコントロール
- ② LEDインジケータ
- ③ 充電接続部
- ④ 充電スロット
- ⑤ 充電インジケータ
- ⑥ 充電ケース
- ⑦ USB-C充電ポート
- ⑧ リセットボタン

Important Safety Instructions

Please read the instructions thoroughly before using this product and retain it for future reference.

Hearing Safety

- Do not wear earbuds with high volume for a long time to avoid damaging your hearing.
- Set the earbuds to low volume before you put them on, then increase the volume gradually as per your preference.
- Do not set volume too high to stay aware of your surroundings.
- Please refer to local laws and regulations if you want to answer phone calls via this device during driving.
- For your safety, avoid distraction from music or phone calls when you are driving or doing other activities with potential dangers.

Warning: Please set the volume to proper level to avoid hearing damages.

Caution

- Do not expose this product to high temperatures.
- Do not immerse the earbuds into water or expose them to humidity for a long time.
- Do not clean the product with detergent containing alcohol, ammonia, benzene or abrasives.
- Avoid dropping.
- Place the earbuds back into the charging case when not in use and keep it away from children and pets to avoid choking hazard.
- Unauthorized disassembly of any parts of this product is forbidden, which may cause fire hazard, warranty voidance, and/or property loss.
- Close attention is needed when using near children.
- Keep the charging case away from water, rain or any other liquid.




This product contains lithium battery. Never expose it to excessive heat such as direct sunlight or fire to avoid explosion.

Choose the Right Tips

Ear tips with different sizes are included in the package, try all sizes and choose the ones fitting you best.

Wear the Earbuds

Please wear the earbuds as shown below.

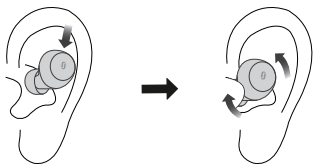

Pictures only for reference.

Bluetooth Caution


- When the device is connected wirelessly to another device, place the two devices close to each other to achieve their normal functionalities and avoid possible signal interference.
- The maximum effective Bluetooth range may vary with the environmental circumstances.
- When using a wireless connection, make sure there are no obstacles between the two devices. Obstacles including walls and fences may shorten the effective range.

Using Your Earbuds

Charging

Charging the Earbuds

1. Put the earbuds into the charging case as per the L (left) and R (right) marks.
2. Cover the lid and charging will start automatically.

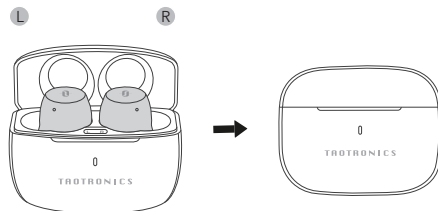


Note:

- Please fully charge the earbuds when using them for the first time.
- When battery is low, a "Battery low" voice prompt will be heard (if you are wearing the earbuds). Please charge in time or the earbuds will turn off automatically around 10 minutes later.
- Charge the earbuds at least once every 3 months when not using for a long time.

Charging the Charging Case

1. Connect the charging port with any USB charging adapter or active computer USB port.
2. The charging indicator will stay solid white, and turn off once fully charged.

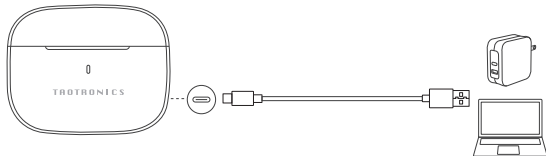


Note:

- Unplug the charging cable (timely) when fully charged.


Power On

Uncover the lid and they will power on automatically.

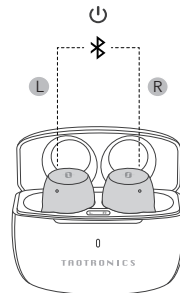

Power Off

Put the earbuds into the charging case and close the lid, they will turn off automatically.

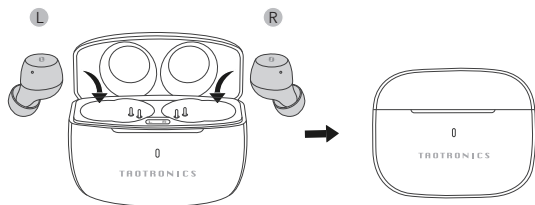

Pairing

- You can use one earbud or both earbuds as per your preference. Please refer to the corresponding pairing instructions.
- Before pairing, please turn off other Bluetooth devices and place the device to be connected close to the earbuds.
- When the earbuds are disconnected from your device for more than 10 minutes, they will turn off automatically.

Couple Earbuds Mode

1. Uncover the lid to turn on the earbuds, they will connect with each other automatically. The LED indicators on the earbuds will flash blue and white alternately indicating the earbuds are in pairing mode now.
2. Turn on the Bluetooth function on your device and search for nearby devices. Find "TAOTRONICS SoundLiberty 97" in the searching results, tap on the name to connect.
3. Once connected, the LED indicators on the earbuds will flash blue slowly.

Note

- The earbuds can remember the devices paired previously, and will attempt to pair with the last connected device for the first 20 seconds. If re-pairing failed in 20 seconds, the earbuds will enter pairing mode.
- It is not recommended to wear the two earbuds on different people. If necessary, please keep the two earbuds close to each other in couple earbuds mode.

Single Earbud Mode

Pair both earbuds with your device in Couple Earbuds Mode before using in Single Earbud Mode.

Use Primary (Left) Earbud Only

1. Take out the primary (left) earbud from the charging case, and make sure the secondary (right) earbud is placed in the charging case and the lid is covered.
2. It will try to pair with the last connected device for the first 20 seconds. If re-pairing failed in 20 seconds, the earbud will enter pairing mode with LED indicator flashing blue and white alternately.
3. Turn on the Bluetooth function on your device and search for the nearby devices. Find "TAOTRONICS SoundLiberty 97" in the searching results, tap on the name to connect.

Use Secondary (Right) Earbud Only

1. Take out the secondary (right) earbud from the charging case, and make sure the primary (left) earbud is placed in the charging case and the lid is covered.
2. The secondary earbud will enter pairing mode with LED indicator flashing blue and white alternately.
3. Turn on the Bluetooth function on your device and search for the nearby devices. Find "TAOTRONICS SoundLiberty 97 R" in the searching results, tap on the name to connect.

Note:

If you want to change to couple mode, simply take out the other earbud from the charging case, they will pair with each other automatically.

Manually Pairing

1. Place both earbuds back in the charging case with the lid uncovered.
2. Press and hold the Reset Button for 3 seconds to disconnect the currently paired device.
3. The earbuds will enter pairing mode with the LED indicator on the earbud flashing blue and white alternately.
4. Pair with your new Bluetooth® device as instructed in "Pairing" section.

Note:

The pairing history will not be cleared under this operation.

Clear Pairing List

If you failed to pair your device with the earbuds, please clear the pairing history as instructed below:

1. Place both earbuds back in the charging case with the lid uncovered.
2. Press and hold the Reset Button on the back of the charging case for 8 seconds until the LED indicators on the earbuds flash blue and white alternately.
3. If you have paired your device with the earbuds before, remove "TAOTRONICS SoundLiberty 97" from the Bluetooth device list and pair again.
4. Re-pair with your Bluetooth® device as instructed in "Pairing" section.

Note:

If you want to pair the earbuds with another device when you have already paired them with a device, deactivate the Bluetooth function on the paired device or clear "TAOTRONICS SoundLiberty 97" from its Bluetooth list. Restore the earbuds to factory settings as instructed above if pairing failed.

Operation and Functions

Function	Operation	Voice Prompt
Play / Pause	Tap the Touch Control on either of the earbuds twice under music	/
Volume +	Tap the Touch Control on the right earbud once	Toots when highest setting is reached
Volume -	Tap the Touch Control on the left earbud once	/
Next Track	Tap the Touch Control on the right earbud three times	/
Previous Track	Tap the Touch Control on the left earbud three times	/
Answer Phone Call	<ul style="list-style-type: none">• Answer via earbuds: Tap the Touch Control on either of the earbuds once• Answer via mobile phone: Tap Answer on the mobile phone	/
Hang Up Phone Call	Tap and hold the Touch Control on either of the earbuds for 2 seconds	/
Decline an Incoming Call	Tap and hold the Touch Control on either of the earbuds for 2 seconds	Call rejected

Function	Operation	Voice Prompt
Turn On / Off Voice Control	Tap and hold the Touch Control on either of the earbuds for 2 seconds until a beep is heard	Toot
Clear Pairing List	Refer to the "Clear Pairing List" section	/
Go into Pairing Mode	Refer to the "Pairing" section	Pairing
Successfully paired with your device	/	Connected
Bluetooth out of Range / Failed to pair with your device	/	Disconnected

Note:

The Multifunction Touch Control is available only when you are wearing the earbuds.

Cleaning and Maintenance

1. Clean the earbuds and the charging case on a regular basis.
2. Use dry and soft cotton cloth to wipe the unit.
3. Keep away from sharp objects to avoid scratches.
4. Put the unit in a dry and shady place if it is to be idle for a long time.
5. Do not clean the product with detergent or chemicals.

Note: Do not insert anything into the product.

Product Name , Model and ,The trademark TAOTRONICS,MIC ID and logo on the product itself, thus we locate them on user manual and Bluetooth headset charging box

Troubleshooting

No.	Problem	Solution
1	Failed to turn on the earbuds	Earbuds low battery, please charge them
2	Failed to charge the earbuds	<ul style="list-style-type: none"> Place the earbuds into the charging case properly Make sure the charging case is fully charged
3	Can't charge the charging case	Make sure the charging cable is intact and plugged in properly
4	Can't find "TAOTRONICS SoundLiberty 97" in the Bluetooth device list	<p>The earbuds reconnected with previously paired device automatically:</p> <ul style="list-style-type: none"> Deactivate the Bluetooth function of previously paired device or clear "TAOTRONICS SoundLiberty 97" from its Bluetooth device list, and then search again Put the device to be connected close to the earbuds
5	Failed to pair the earbuds with your device	<ul style="list-style-type: none"> Turn on the device and activate its Bluetooth function before pairing Bring the earbuds into pairing mode as instructed in the "Pairing" section

6	No sound in one of the earbuds in couple earbuds mode	Place both earbuds back to the charging case then take them out, they will pair with each other automatically. If pairing failed, restore them back to the factory settings as instructed in the "Clear Pairing List" section
7	Poor sound quality	<ul style="list-style-type: none"> Wear the earbuds properly and keep them close to each other. Place the connected device close to the earbuds or remove the obstacles between them Clear the debris on the earbuds
8	Unstable connection	<ul style="list-style-type: none"> Keep the earbuds close to your Bluetooth device The effective distance may shorten with obstacles in the way Turn off other Bluetooth devices to decrease the interference
9	Can't hear the other party during a phone call	Set the volume to higher level
10	The other party can't hear your voice during a phone call	Free the built-in microphone of any covers
11	Multifunction Touch control of the earbuds is unresponsive	Place the two earbuds into the charging case and cover the lid, disconnect the Bluetooth connection. Uncover the lid to turn on the earbuds and pair again.

Warranty and Service

If any problems occur, please contact the TaoTronics Customer Care Centre via the contact information listed in this User Guide.

安全上のご注意

この取扱説明書では、本製品の使用方法や安全にお取扱いいただくための注意事項を記載しております。ご使用前によくご覧ください。読み終わったあともこの取扱説明書は大切に保管してください。

ご注意

- ・大音量で長時間イヤフォンをご利用にならないください。聴覚に支障をきたすことがあります。
- ・イヤフォンを装着する際に音量を小さくして、装着後に徐々に音量の調整を行ってください。
- ・周囲の音が聞こえなくなる程の音量でご利用になることは避けてください。
- ・本製品を運転中の通話でご利用になる場合は、当該地の法律や規定を確認の上ご利用ください。
- ・運転や他の危険が伴う行為を行う際に、音楽を聴いたり、通話をしたりすることで気を散らすことは、お避けください。

警告: 聴覚を損ねないよう、適切な音量でご利用ください。

警告

- ・高温に晒さないでください。
- ・イヤフォンを水に浸したり、長い間湿度の高い環境に置いたりしないでください。
- ・本製品にアルコール、アンモニア、ベンゼン、研磨剤を含む洗浄剤を使用しないでください。
- ・使用していない場合は、イヤフォンを充電ケースに入れ、子供の手の届かないところで保管してください。小さなお子様が口に入ると、窒息の恐れがあります。
- ・本製品の分解や改造は、火災の恐れや保証の取り消しまたは製品破損の可能性があるためお止めください。
- ・お子様がご利用の際は、近くで監視が必要です。
- ・充電ケースは、水・雨などの液体には近づけないでください。
- ・雷雨の際のご利用は避けてください。製品の故障や電気ショックの可能性があります。
- ・修理は、必ず専門家または有資格者へご相談ください。



この製品にはリチウム電池が含まれています。絶対に直射日光や火気のあるところで保管しないでください。爆発の可能性があります。


装着方法

右のチップを選ぶ

サイズの異なるイヤークリップが含まれています。サイズの合うものをお選びください。

イヤフォンを装着する

図示のように、イヤフォンを装着します。

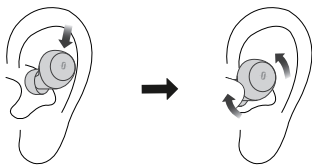

Bluetoothについての注意事項


- イヤフォンが他のデバイスと接続する際に、2つの機器を近くに置いてください。距離が遠い場合は、シグナル妨害が起こることがあります。
- Bluetoothの最大有効範囲は、環境状況によって異なる場合があります。
- ワイヤレス接続を利用する場合、2つのデバイスの間に障害物がないことを確認してください。壁やフェンスは有効範囲を狭める可能性があります。

使い方

充電

イヤフォンの充電

1. イヤフォンを(L)左、(R)右のマークに従ってそれぞれ充電ケースに入れます。
2. 蓋を閉めると自動的に充電が始まります。

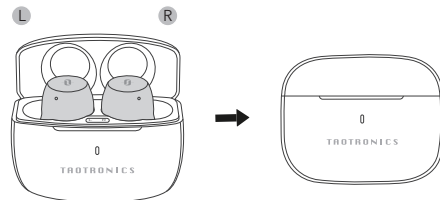


注意:

- イヤフォンを初めてご利用になる場合は、フル充電にしてからご利用ください。
- バッテリー残量が低くなると、「Low battery」という音声案内が聞こえます(イヤフォンを装着している場合)。その後、10分以内に充電をしないとイヤフォンは自動的に電源が切れます。
- 長期間イヤフォンを利用しない場合は、最低でも3ヶ月おきに充電してください。

ケースの充電


1. 充電ポートをUSB充電アダプターまたは電源の入ったコンピューターのUSBポートに接続します。
2. 充電インジケータは白く点灯し、充電が完了すると消えます。

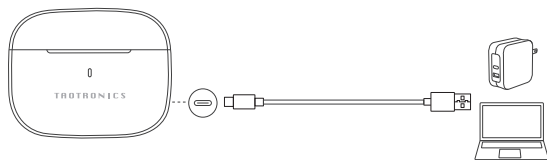

注意:充電が完了したら充電ケーブルを外してください。


電源オン

蓋を開くと自動的に電源が入ります。

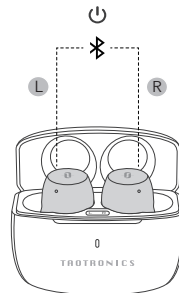

電源オフ

イヤフォンを充電ケースに入れ、蓋を閉めます。自動的に電源がオフになります。

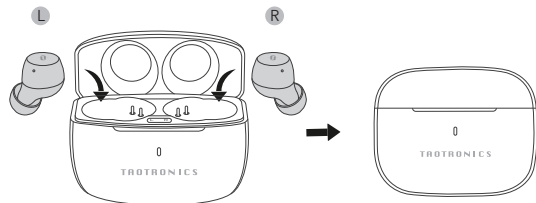

ペアリング

- お好みに合わせて、イヤフォンは2つまたは1つでもご利用いただけます。それぞれのペアリング設定をご参照ください。
- ペアリングをする前に、他のBluetoothデバイスの電源を切り、イヤフォンと接続したいデバイスを近くに置いてください。
- イヤホンは10分以上対象デバイスと未接続されると、自動的にオフになります。

両耳モード

1. フタをあけるとイヤフォンがオンになり、自動的にお互いが接続され、ペアリングモードになります。
2. ご利用の機器のBluetooth機能をオンにし、近くの機器を検索します。検索結果から“TAOTRONICS SoundLiberty 97”を探し、名前をタップして接続します。

注意:

- イヤフォンは以前にペアリングされたデバイスを記憶し、最初の20秒以内に最後に接続されたデバイスとのペアリングを試みます。20秒以内に再ペアリングが失敗すると、イヤフォンはペアリングモードになります。
- 2つのイヤフォンを別々の人が1つずつ装着することは推奨しません。必要であれば、カップレイヤフォンモードでは、2つのイヤフォンは近くに置いてください。

片耳モード

シングルイヤホンモードで使用する前に、カップルイヤホンモードで、ご利用の機器と両方のイヤホンをペアリングします。

プライマリー (左) イヤホンのみ使用する

1. プライマリー (左) イヤホンを充電ケースから取り出し、セカンダリー (右) イヤホンは充電ケースに入れたまま、ケースの蓋を閉めます。
2. 初めの20秒間、最後に接続した機器との接続を試みます。再接続に失敗すると、イヤホンはペアリングモードに入り、LEDインジケータが青と白に交互に点滅します。
3. 機器のBluetooth機能を有効にし、近くの機器を検索します。検索結果の"TAOTRONICS SoundLiberty 97"をタップして接続します。

セカンダリー (右) イヤホンのみ使用する

1. セカンダリー (右) イヤホンを充電ケースから取り出し、プライマリー (左) イヤホンは充電ケースに入っていることを確認し、ケースの蓋を閉めます。
2. セカンダリーイヤホンはペアリングモードに入り、LEDインジケータが青と白に交互に点滅します。
3. 機器のBluetooth機能を有効にし、近くの機器を検索します。検索結果の"TAOTRONICS SoundLiberty 97 R" をタップして接続します。

注意:

両耳モードに変更したい場合は、充電ケースからもう1つのイヤホンを取り出すと、自動でペアリングを行います。

手動ペアリング

1. 両方のイヤホンを充電ケースに入れ、蓋を閉めます。
2. リセットボタンを3秒間長押しすると、現状ペアリングされている機器との接続を切断されます。
3. イヤホンがペアリングモードに入り、イヤホンのLEDインジケータが青と白で交互に点滅します。
4. 新しいBluetooth 機器とペアリングを、「ペアリング」セクションの手順の通り行います。

注意:

この操作で、ペアリング履歴は消去されません。

ペアリング履歴の消去

イヤホンをご利用の機器のペアリングがうまく行えなかった場合、以下の手順でペアリング履歴を削除してください。

1. 両方のイヤホンを充電ケースに戻し、蓋を閉めます。
2. 充電ケースの裏側のリセットボタンをLEDインジケーターが青と白で交互に点滅するまで、8秒間長押しします。
3. 以前イヤホンをその機器と接続していたら、Bluetooth 機器リストから"TAOTRONICS SoundLiberty 97"を削除し、ペアリングを行います。
4. 「ペアリング」の項目の指示に従い、ご利用のBluetooth機器を再ペアリングしてください。

ご注意

すでに機器とペアリングしたイヤホンを他の機器とペアリングしたい場合、ペアリングした機器のBluetooth機能を無効にするか、そのリストから"TAOTRONICS SoundLiberty 97"を削除してください。ペアリングが行えない場合は、上記の「工場出荷状態に戻す」の手順に従って初期状態に戻してください。

操作と機能

機能	操作	音声ガイド
再生 / 一時停止	どちらかのイヤホンのタッチコントロールを2度タップ	/
音量 +	右耳のタッチコントロールを1回タップしてください	音量が最大に達するとビープ音がします。
音量 -	左耳のタッチコントロールを1回タップしてください	/
進む	右耳のタッチコントロールを3回タップしてください	/
戻る	左耳のタッチコントロールを3回タップしてください	/
通話応答	<ul style="list-style-type: none">•イヤホン経由で応答: イヤホンのどちらかのタッチコントロールを1度タップします•携帯電話経由で応答: 携帯電話の「応答」をタップします	/
電話を切る	左/右耳のタッチコントロールを2秒間長押ししてください	/
通話拒否	左/右耳のタッチコントロールを2秒間長押ししてください	拒否された通話

機能	操作	音声ガイド
音声コントロールのオン/オフ	どちらかのイヤフォンのタッチコントロールをピープ音が聞こえるまで2秒間長押し	ピープ音
ペアリング履歴の削除	「ペアリング履歴の消去」をご参照ください	/
ペアリングモード開始	「ペアリング」をご参照ください	ペアリング
機器とのペアリング完了	/	接続しました
Bluetooth範囲外/機器とのペアリングに失敗	/	切断されました

注意:

多機能タッチコントロールは、イヤフォンを装着している際のみ、利用可能です。

クリーニング&メンテナンス

1. イヤフォンと充電ケースは定期的にクリーニングしてください。
2. 本体を掃除する際には、乾いた柔らかい布で拭き取ってください。
3. 傷を避けるために、尖ったものを近づけないでください。
4. 利用せず長時間置いておく場合は、湿度の低い日陰で保管してください。
5. クリーニングに、洗剤や化学薬品は使用しないでください。

注意: 製品に何かを挿入することはしないでください。

故障排除

No.	問題	解決策
1	イヤフォンの電源が入らない	イヤフォンの電池残量が低くなっています
2	イヤフォンが充電できない	充電してください <ul style="list-style-type: none"> 充電ケースにイヤフォンを正しく設置してください 充電ケースがフル充電であることを確認してください
3	充電ケースの充電ができない	充電ケースに損傷がないか、きちんと繋がれているか確認してください
4	Bluetooth機器のリストに「TAOTRONICS SoundLiberty 97」が見つからない。	イヤフォンは、前回ペアリングされた機器と自動的に再接続されます <ul style="list-style-type: none"> 前回ペアリングされた機器のBluetooth機能を無効にするか、リストから「TAOTRONICS SoundLiberty 97」を削除してから、再度検索してください イヤフォンの近くに機器を置いてください
5	対象デバイスとイヤフォンのペアリングができない	<ul style="list-style-type: none"> ペアリングする前に接続したい機器の電源を入れ、Bluetooth機能を有効にしてください 「ペアリング」の章にある手順に従って、イヤフォンをペアリングモードにしてください

No.	問題	解決策
6	両耳モードで片方のイヤフォンから音が聞こえない	両方のイヤフォンを一度充電ケースに戻し、再度取り出すと自動的にペアリングが行われます。ペアリングができない場合、「工場出荷時状態に戻す」の章にある手順に従い、元の状態に戻してください
7	音質が悪い	<ul style="list-style-type: none"> イヤフォンを正しく装着し、両イヤフォンの距離を近くに保ってください 接続した機器をイヤフォンの近くに置き、障害物を取り除いてください イヤフォンのゴミを取り除いてください
8	接続が不安定	<ul style="list-style-type: none"> 障害物があると、作動距離が縮まる可能性があります 障害物があると、作動距離が縮まる可能性があります 信号の妨げを減少するために、他のBluetooth機器の電源をお切りください
9	通話の際、相手の声が聞こえない	音量を上げてください
10	通の際、自分の声が相手に聞こえない	内蔵マイクに被さっているものを取り除いてください
11	イヤフォンのタッチコントロールが機能しない	両方のイヤフォンを充電ケースに戻して蓋をし、Bluetooth接続を切断します。蓋を開け、イヤフォンをオンにしてペアリングを再度行います

保証とサービス

何か問題が起こった場合は、ユーザーガイドに掲載されているのTaoTronics カスタマーセンターへご連絡ください。



EN The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sunvalleytek International Inc. is under license. Other trademarks and trade names are those of their respective owners.

JP Bluetooth®のワードマークおよびロゴはBluetooth SIG, Inc.が所有する登録商標であり、Sunvalleytek International Inc.はこれらのマークおよびロゴをライセンスに基づいて使用しています。その他の商標およびトレードネームは、それぞれの所有者に帰属します。

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



WEEE Compliance

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)
(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

