




Restrict Band NVNT n40 5510MHz Ant1 Peak




Restrict Band NVNT n40 5510MHz Ant1 Average

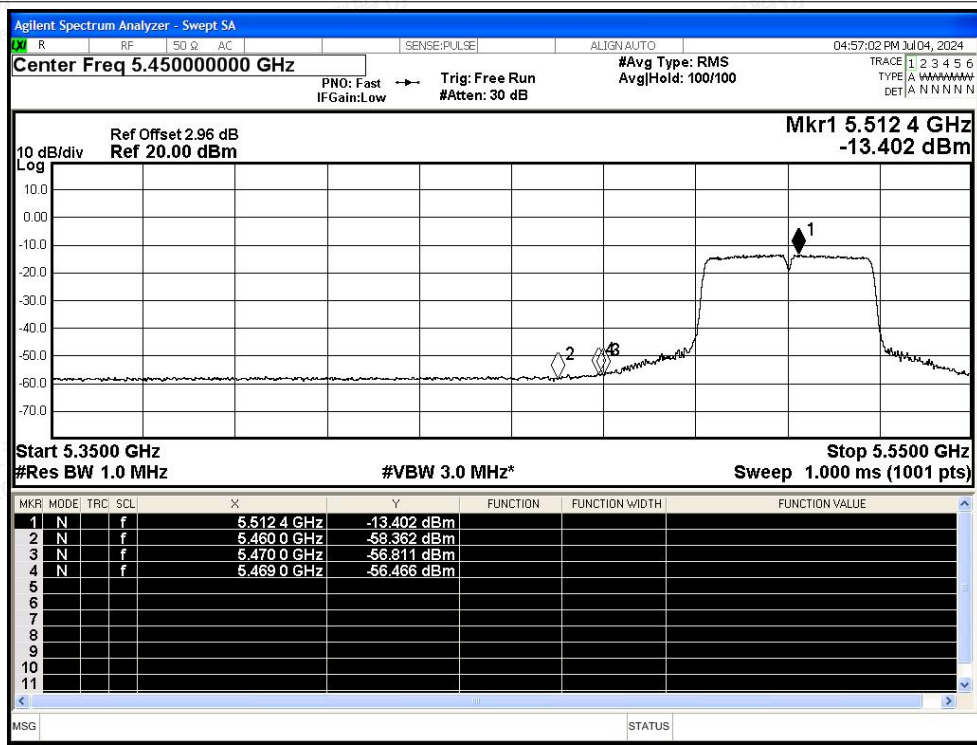




Restrict Band NVNT n40 5670MHz Ant1 Peak

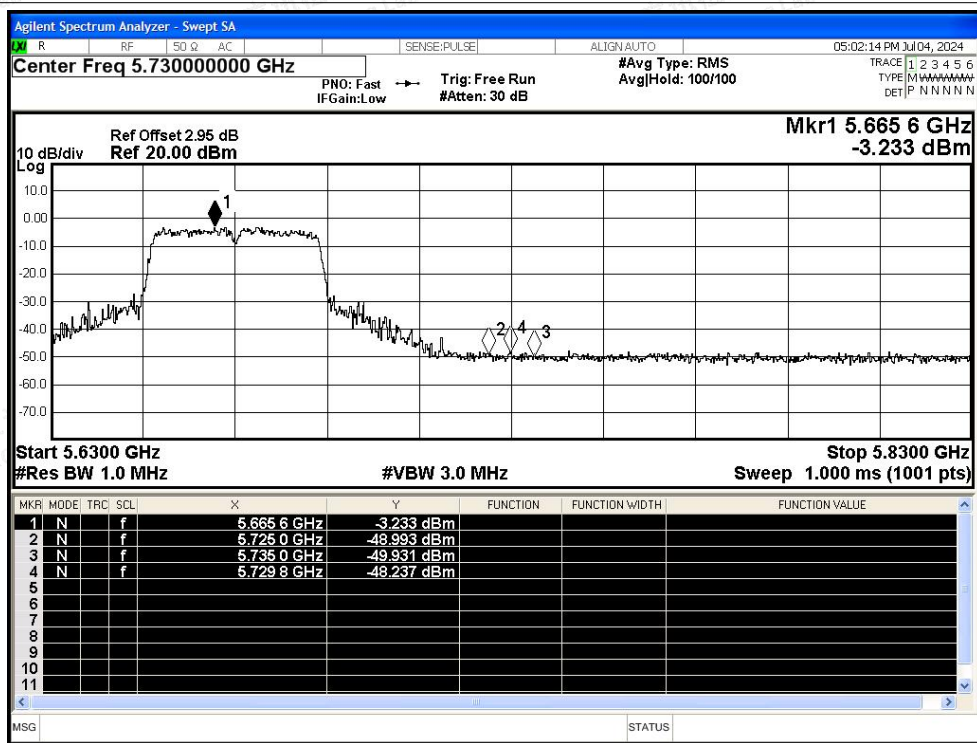


Restrict Band NVNT n40 5670MHz Ant1 Average

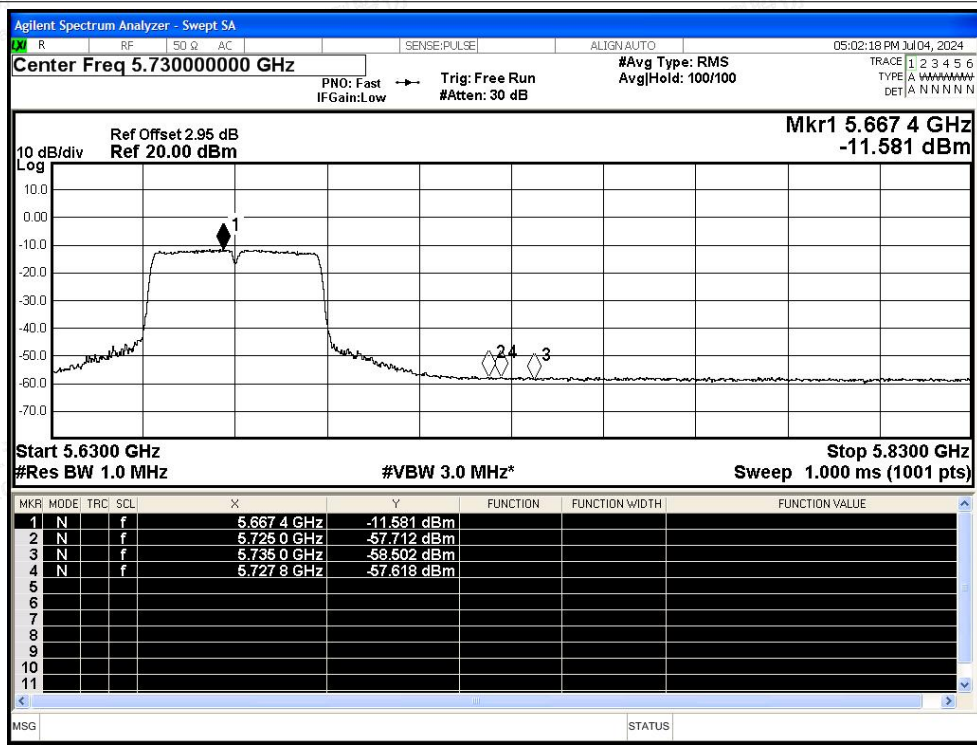




Restrict Band NVNT ac20 5500MHz Ant1 Peak

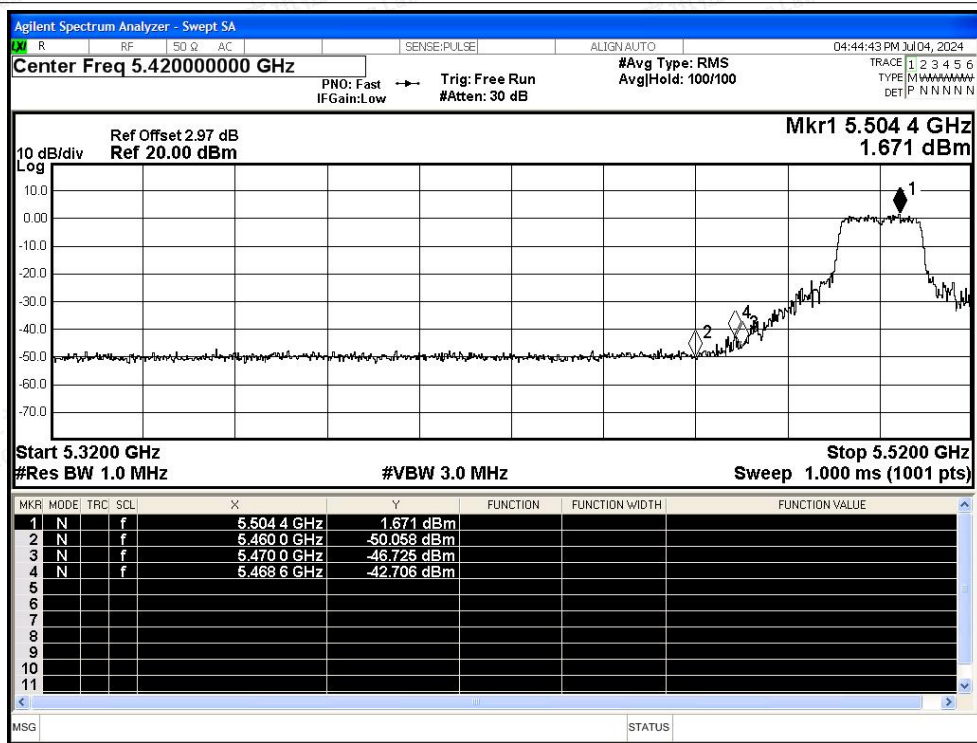


Restrict Band NVNT ac20 5500MHz Ant1 Average

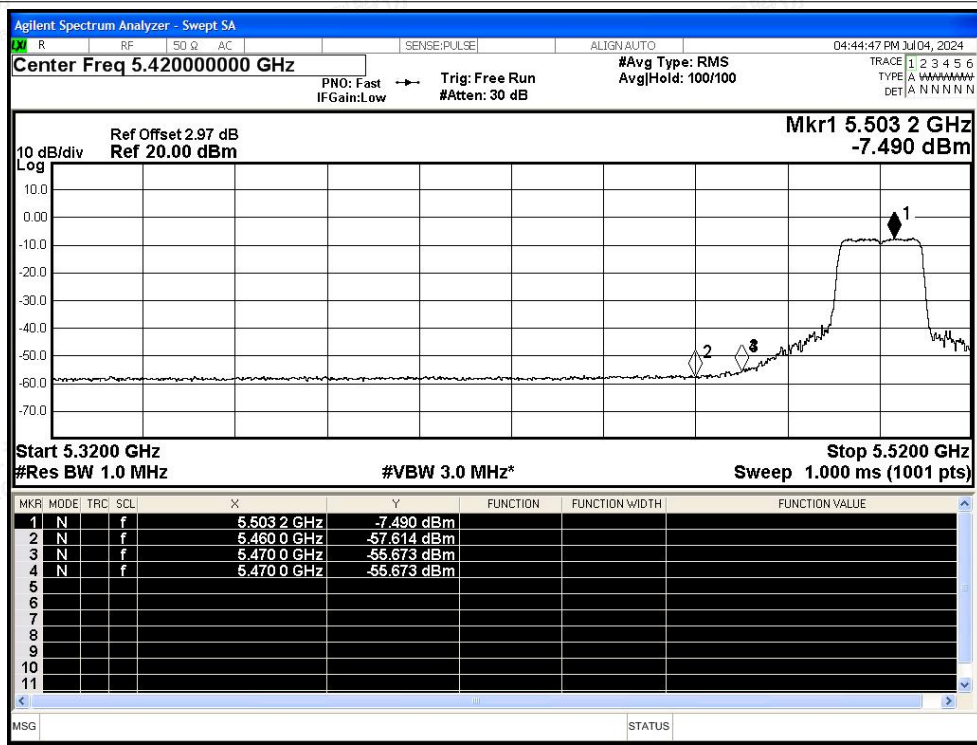




Restrict Band NVNT ac20 5700MHz Ant1 Peak

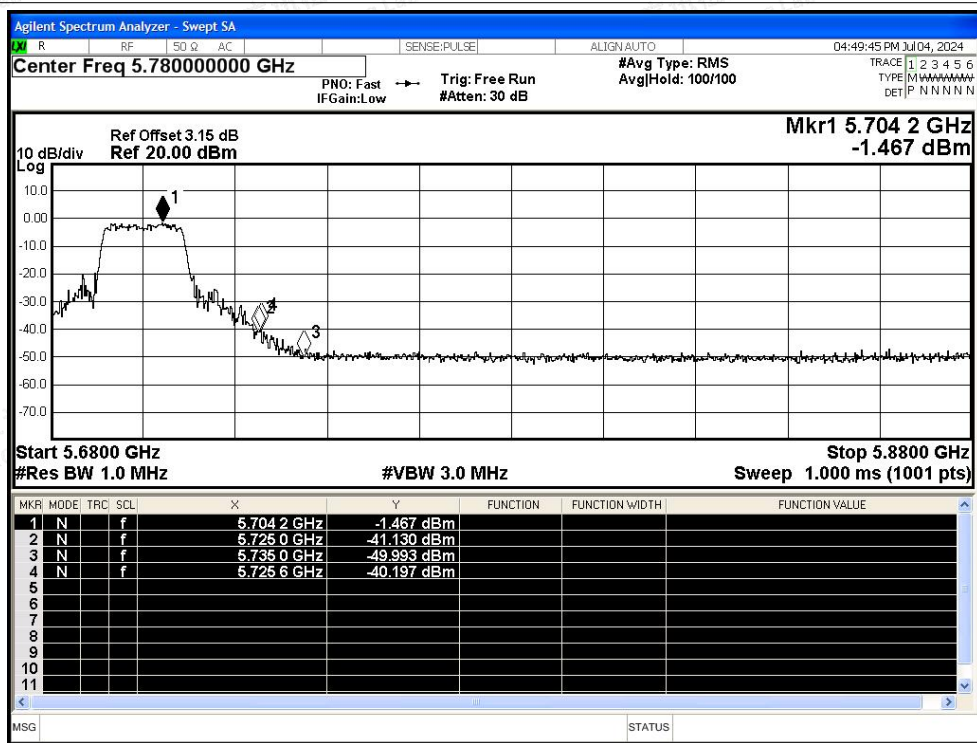


Restrict Band NVNT ac20 5700MHz Ant1 Average

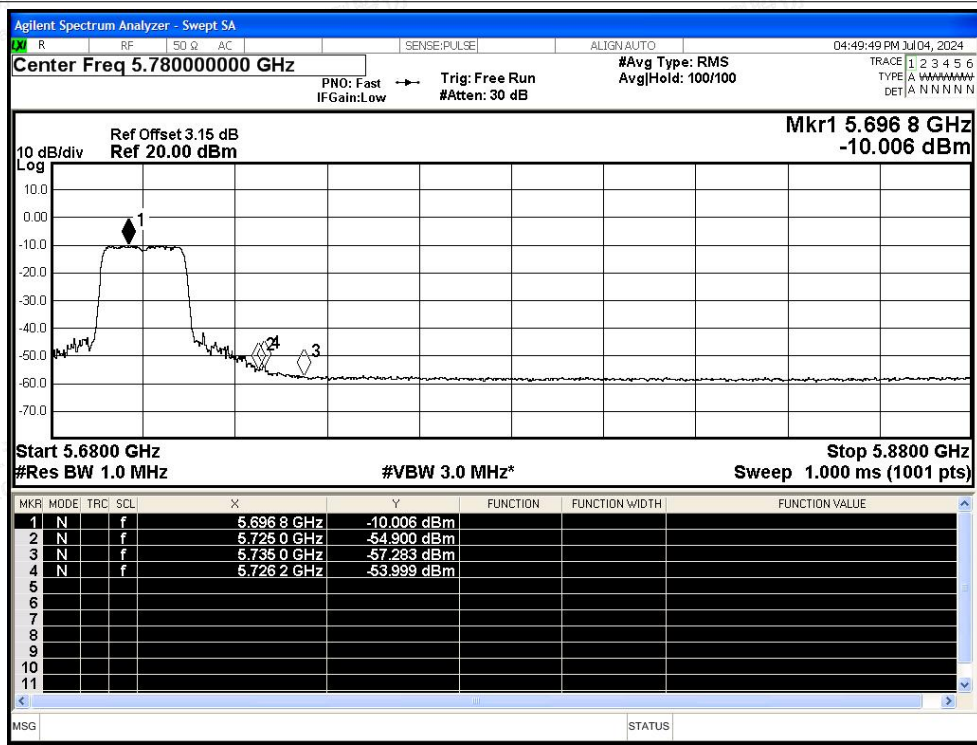




Restrict Band NVNT ac40 5510MHz Ant1 Peak

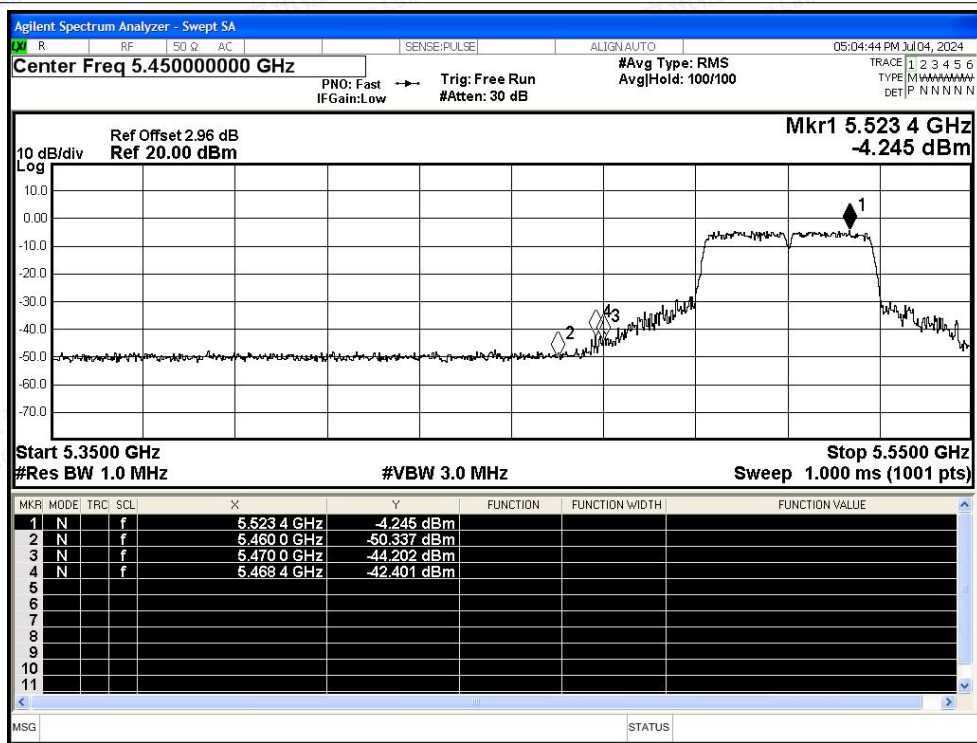


Restrict Band NVNT ac40 5510MHz Ant1 Average

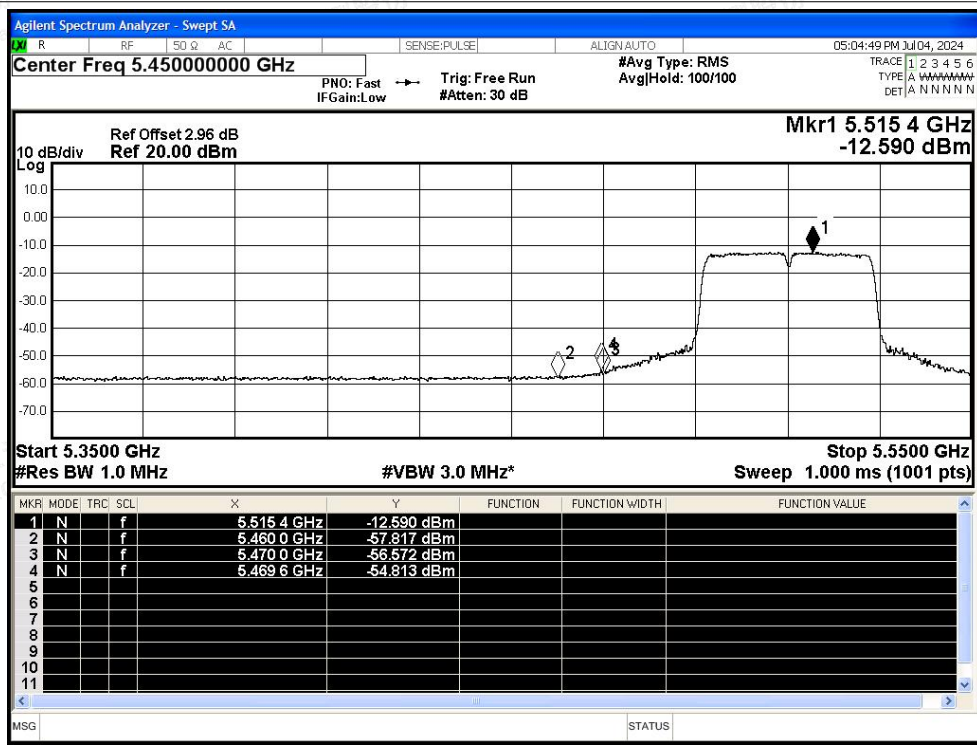




Restrict Band NVNT ac40 5670MHz Ant1 Peak

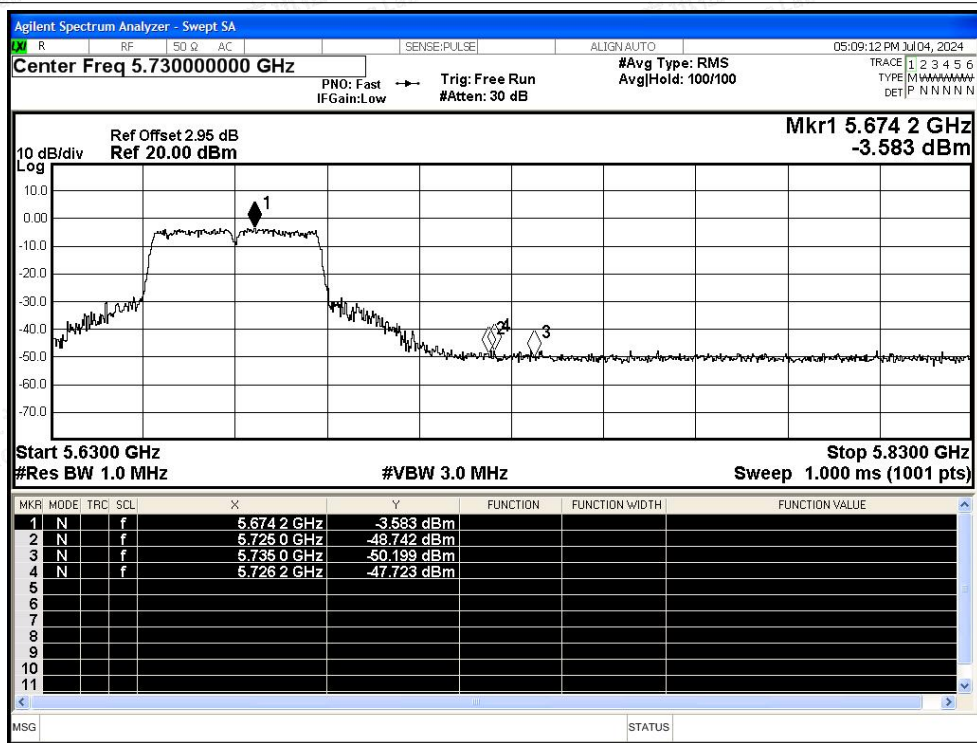


Restrict Band NVNT ac40 5670MHz Ant1 Average

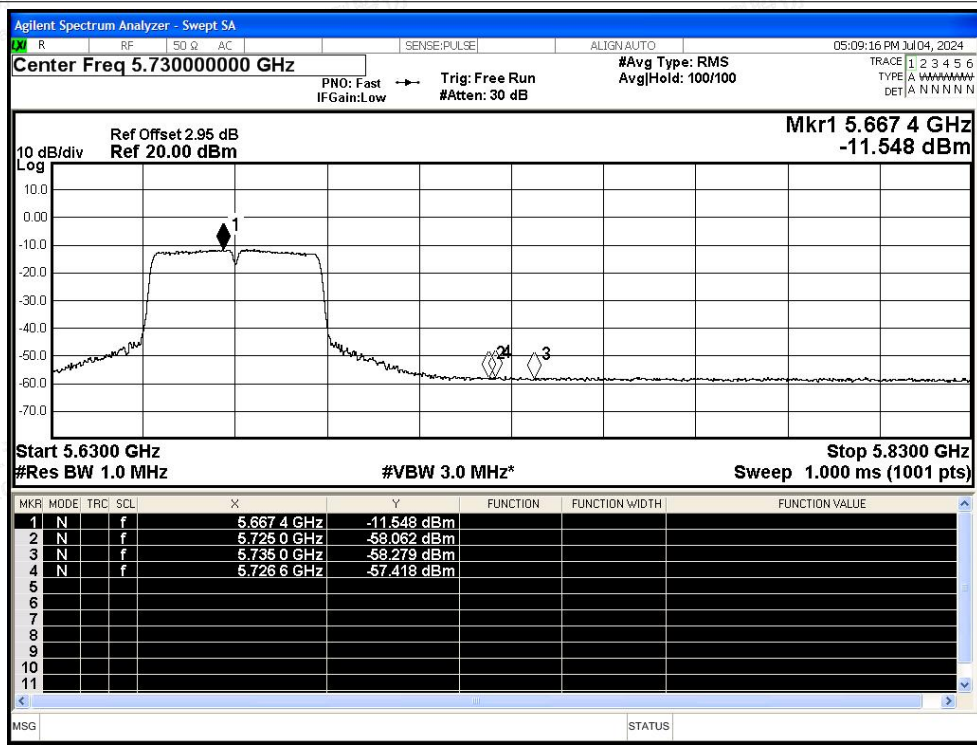




Restrict Band NVNT ac80 5530MHz Ant1 Peak

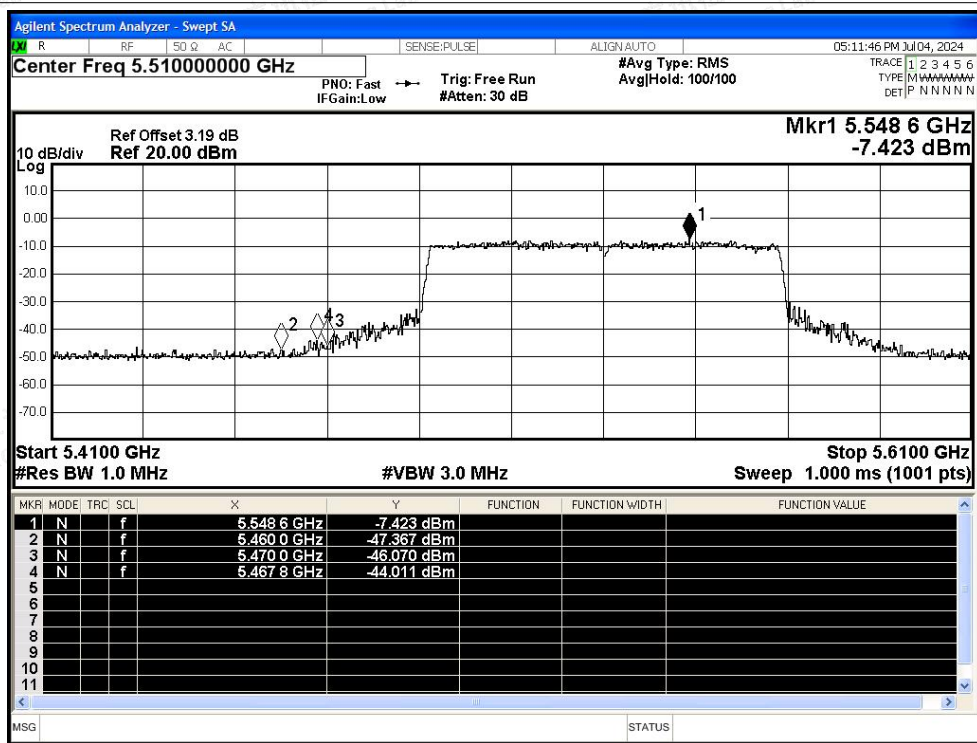


Restrict Band NVNT ac80 5530MHz Ant1 Average

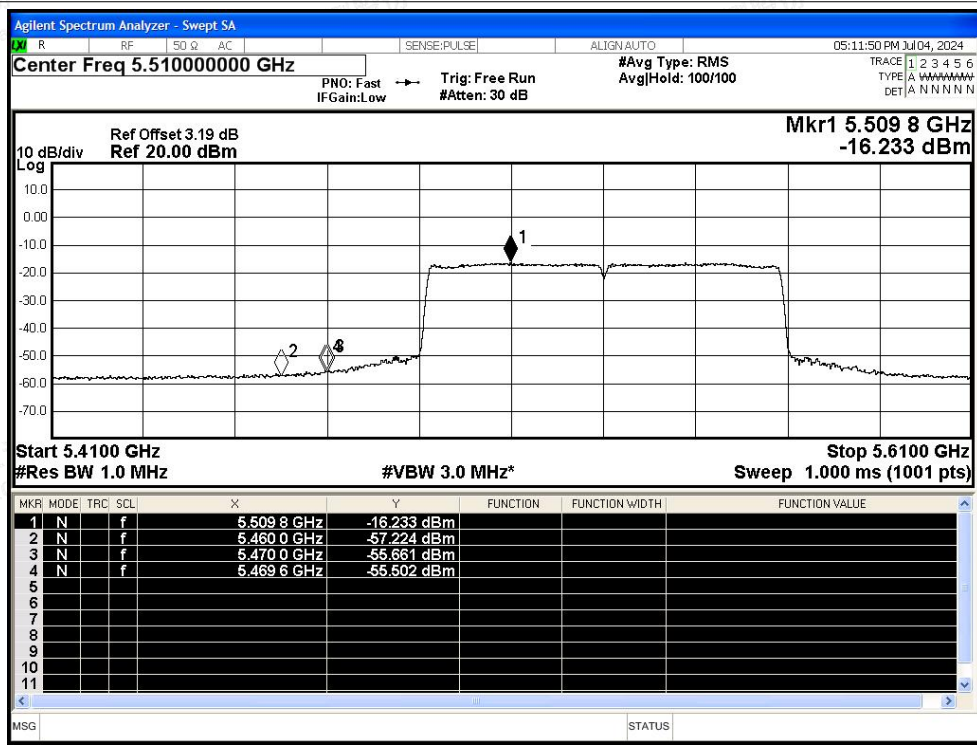




Restrict Band NVNT ac80 5610MHz Ant1 Peak

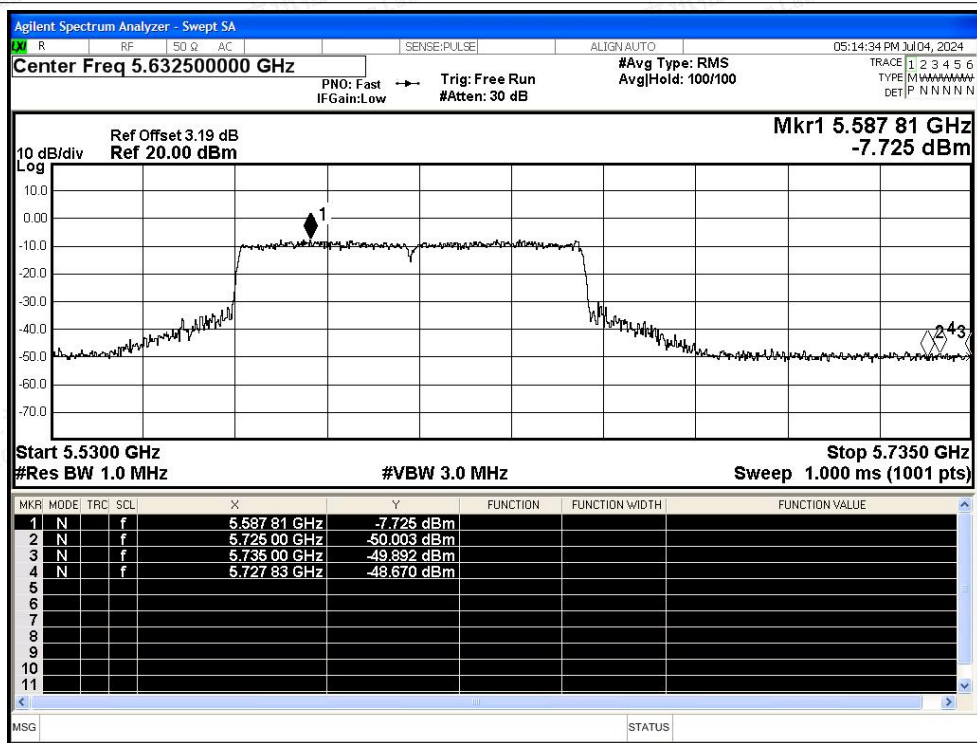

Restrict Band NVNT ac80 5610MHz Ant1 Average

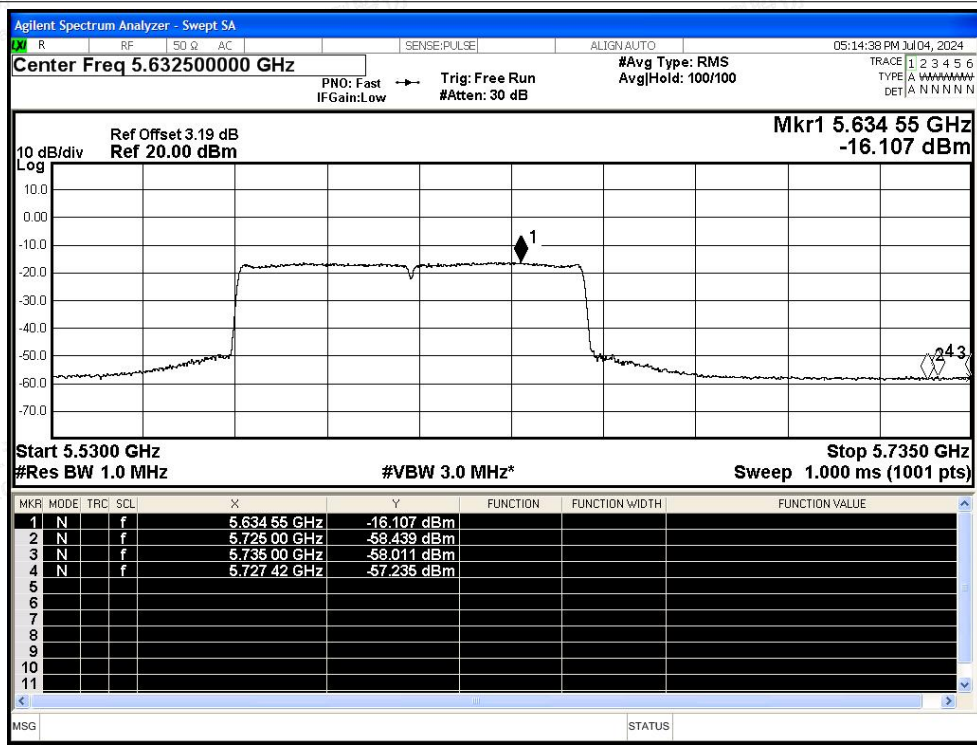





### F.5 Frequency Stability

Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	ac20	5500	Ant1	5499.98	-20000	-3.64	25	Pass
NVNT	ac20	5580	Ant1	5580	0	0	25	Pass
NVNT	ac20	5700	Ant1	5699.98	-20000	-3.51	25	Pass
NVNT	ac40	5510	Ant1	5509.96	-40000	-7.26	25	Pass
NVNT	ac40	5550	Ant1	5550	0	0	25	Pass
NVNT	ac40	5670	Ant1	5670	0	0	25	Pass
NVNT	ac80	5530	Ant1	5530	0	0	25	Pass
NVNT	ac80	5610	Ant1	5610	0	0	25	Pass




Shenzhen LCS Compliance Testing Laboratory Ltd.  
 Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China  
 Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com  
 Scan code to check authenticity




Test Graphs

Freq. Stability NVNT ac20 5500MHz Ant1

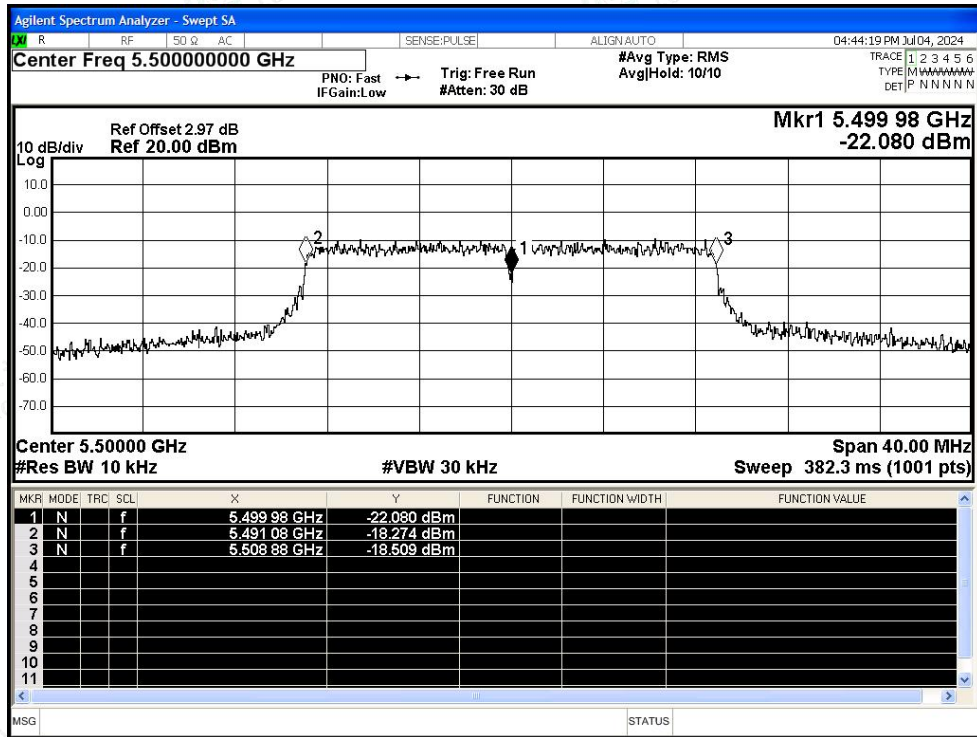


Freq. Stability NVNT ac20 5580MHz Ant1

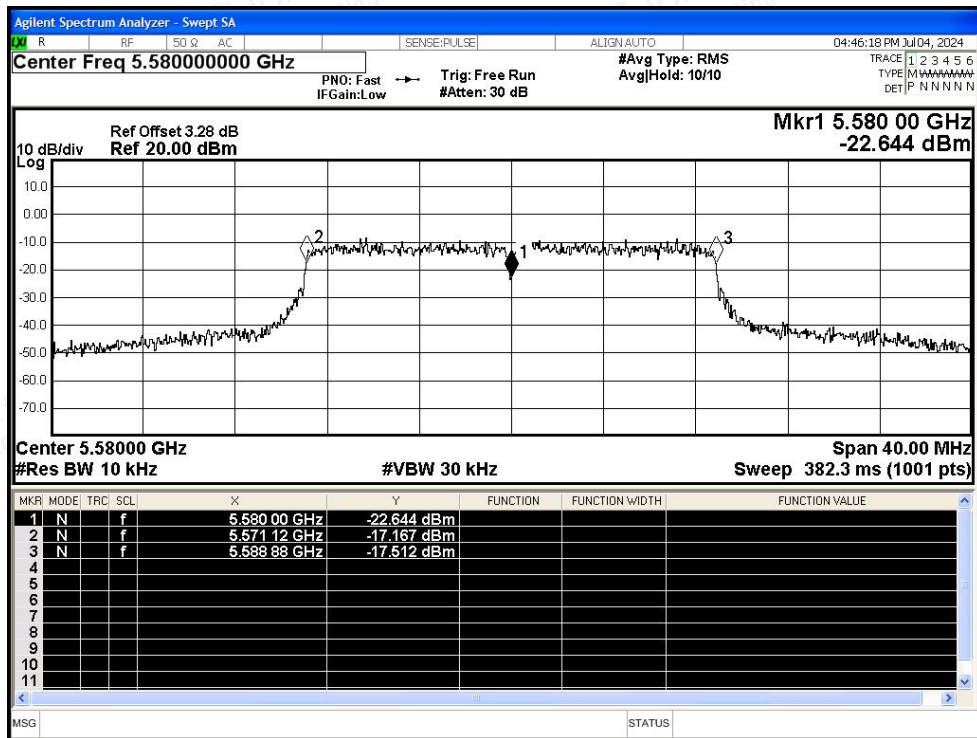




Freq. Stability NVNT ac20 5700MHz Ant1

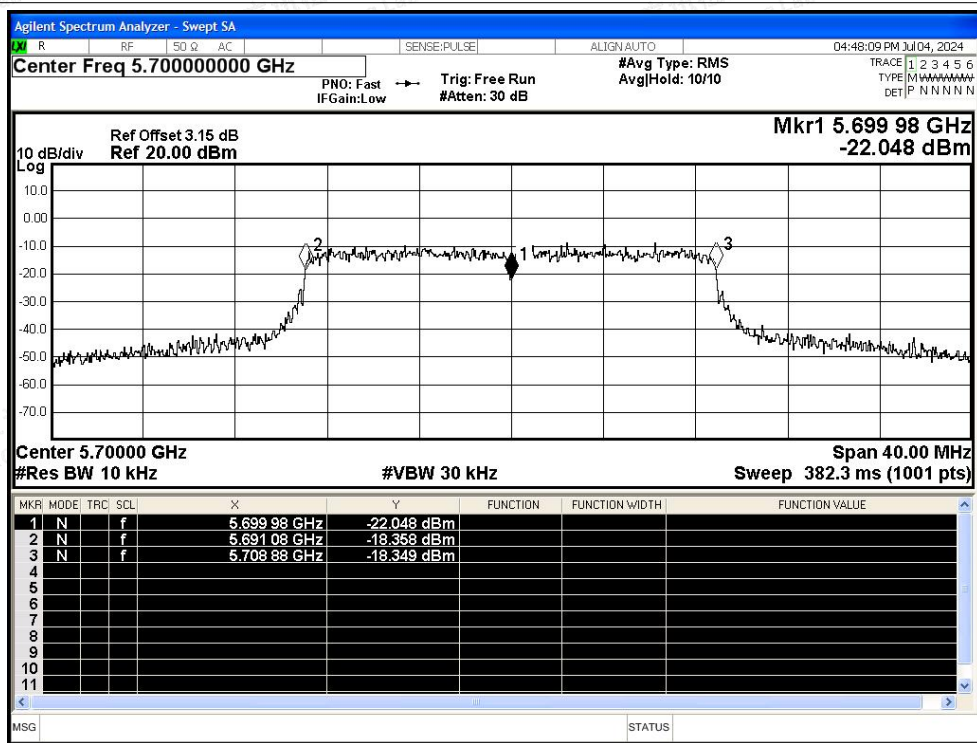


Freq. Stability NVNT ac40 5510MHz Ant1

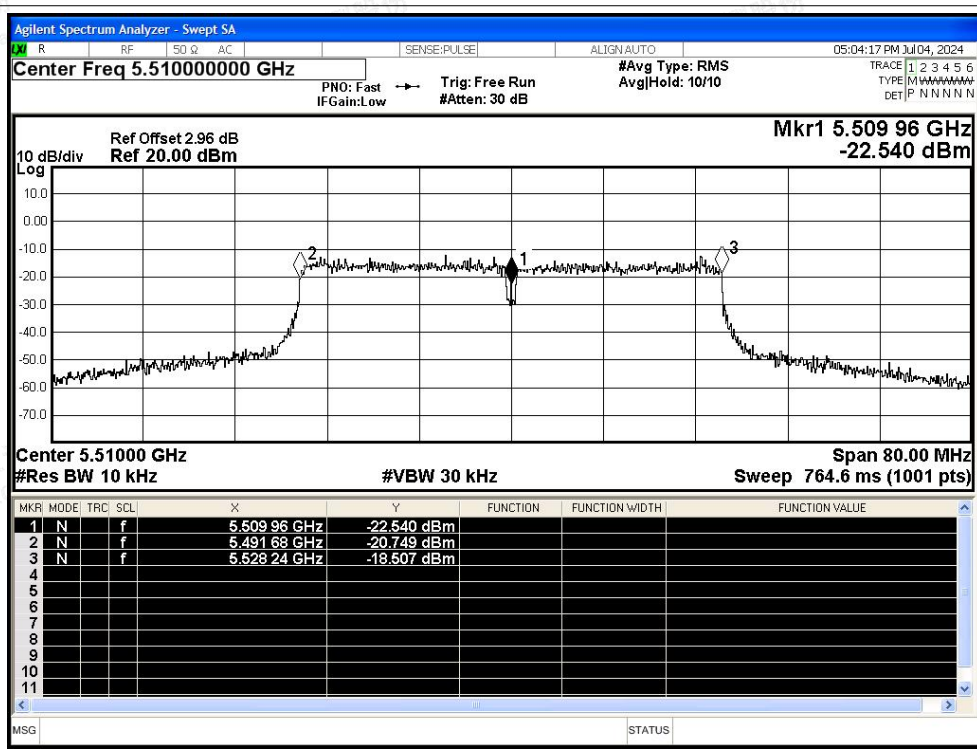






Freq. Stability NVNT ac40 5550MHz Ant1

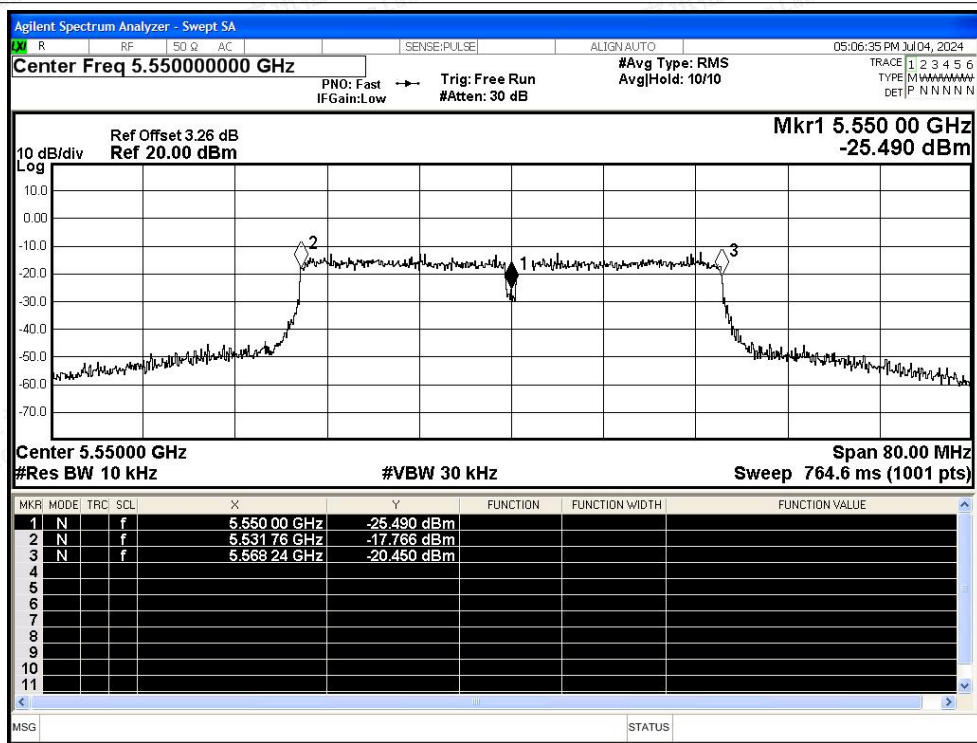

Freq. Stability NVNT ac40 5670MHz Ant1

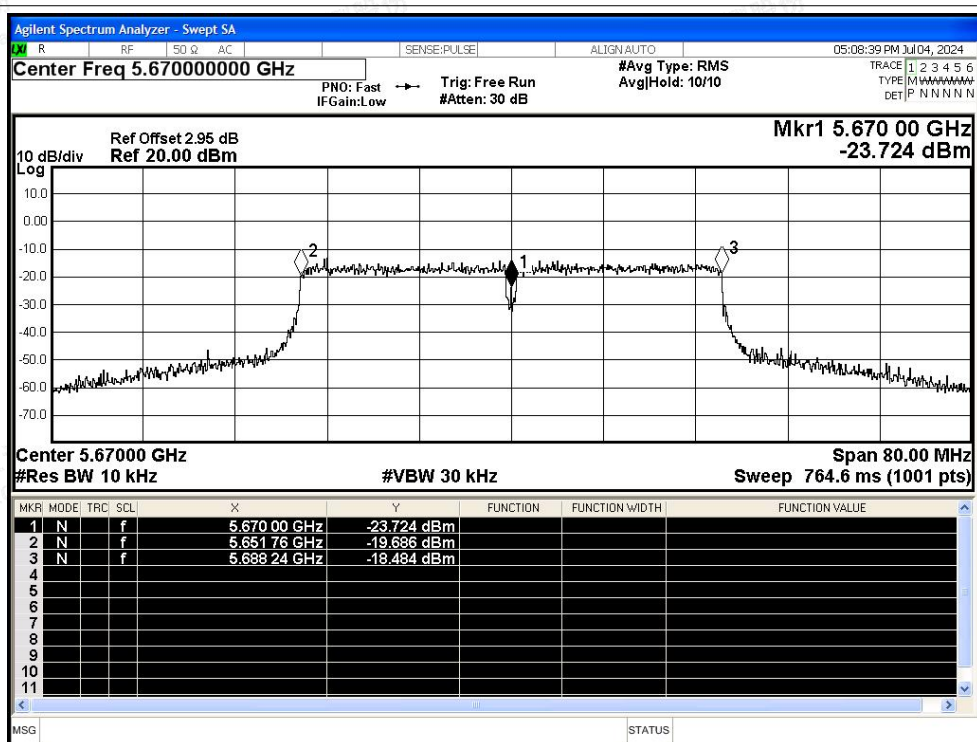

Shenzhen LCS Compliance Testing Laboratory Ltd.  
 Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China  
 Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com  
 Scan code to check authenticity

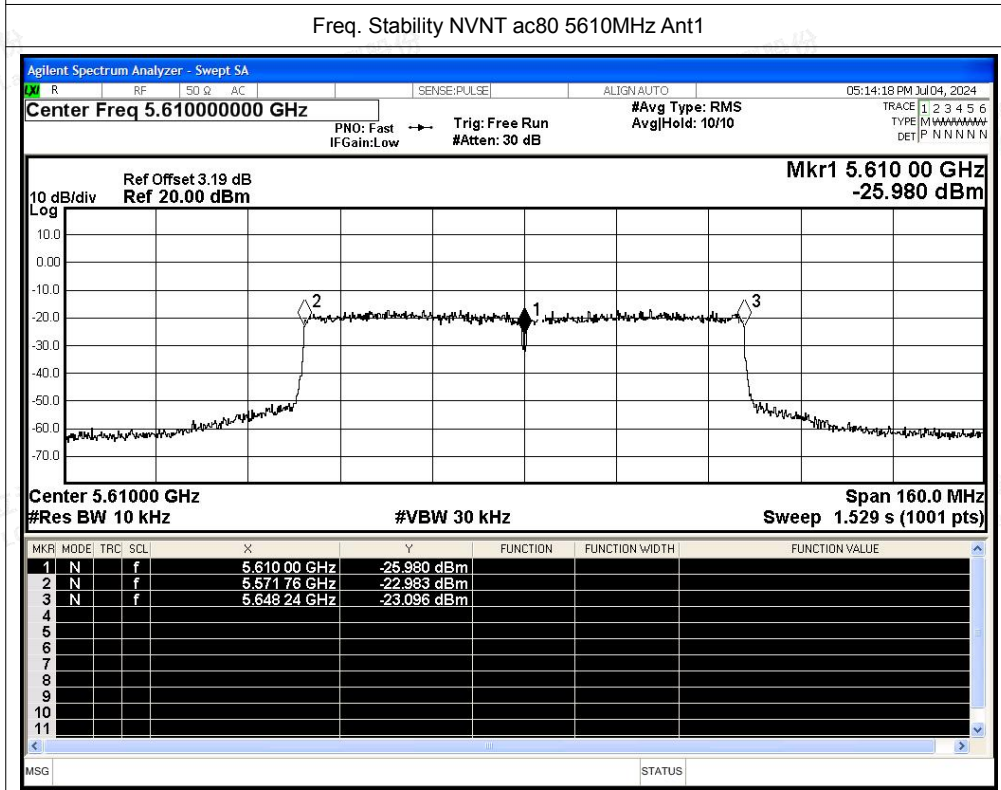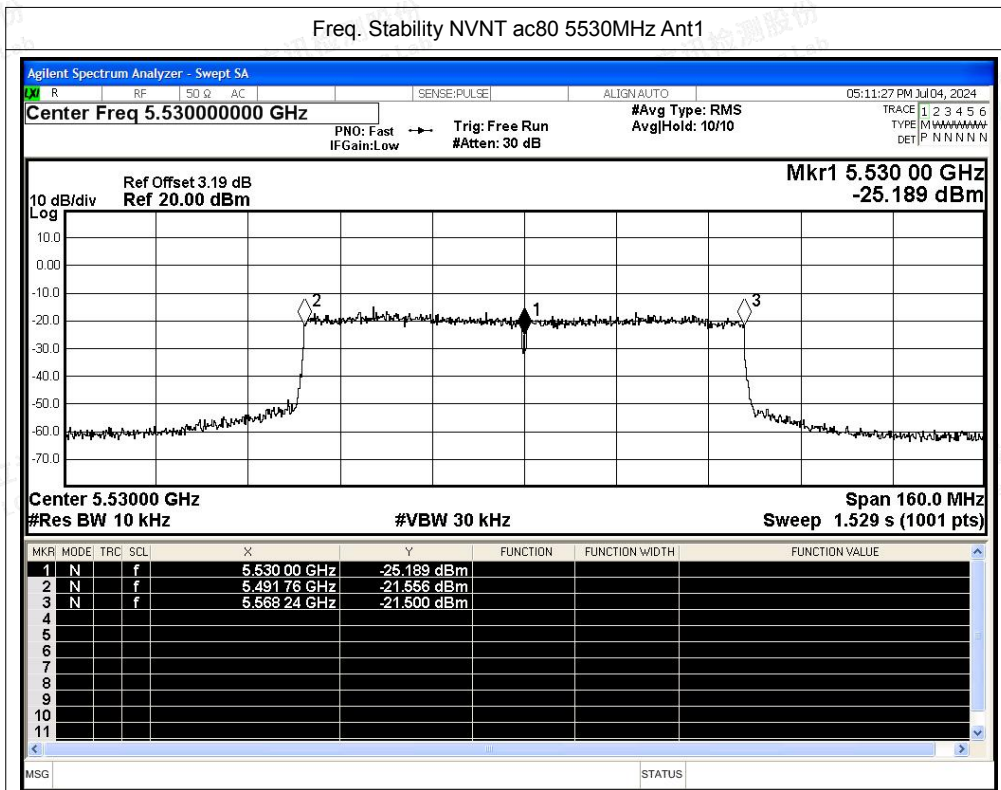

### F.6 Duty Cycle

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
-----------	------	-----------------	---------	----------------	------------------------	-----------



Shenzhen LCS Compliance Testing Laboratory Ltd.  
 Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China  
 Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com  
 Scan code to check authenticity



NVNT	a	5500	Ant1	94.56	0.24	0.91
NVNT	a	5580	Ant1	94.65	0.24	0.91
NVNT	a	5700	Ant1	94.65	0.24	0.91
NVNT	n20	5500	Ant1	93.77	0.28	1.07
NVNT	n20	5580	Ant1	93.67	0.28	1.07
NVNT	n20	5700	Ant1	93.77	0.28	1.07
NVNT	n40	5510	Ant1	97.23	0.12	0.46
NVNT	n40	5550	Ant1	97.23	0.12	0.46
NVNT	n40	5670	Ant1	97.23	0.12	0.46
NVNT	ac20	5500	Ant1	93.72	0.28	1.06
NVNT	ac20	5580	Ant1	93.82	0.28	1.06
NVNT	ac20	5700	Ant1	93.82	0.28	1.06
NVNT	ac40	5510	Ant1	97.24	0.12	0.46
NVNT	ac40	5550	Ant1	97.24	0.12	0.46
NVNT	ac40	5670	Ant1	97.19	0.12	0.46
NVNT	ac80	5530	Ant1	94.32	0.25	0.97
NVNT	ac80	5610	Ant1	94.32	0.25	0.97




Shenzhen LCS Compliance Testing Laboratory Ltd.  
 Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China  
 Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com  
 Scan code to check authenticity




Test Graphs

Duty Cycle NVNT a 5500MHz Ant1

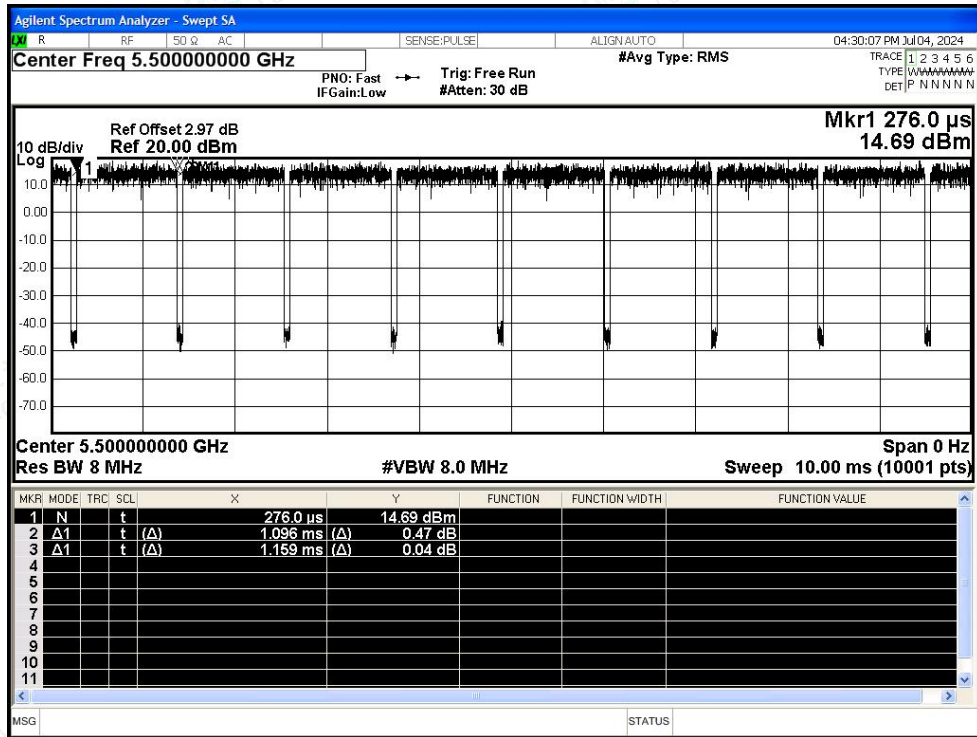


Duty Cycle NVNT a 5580MHz Ant1

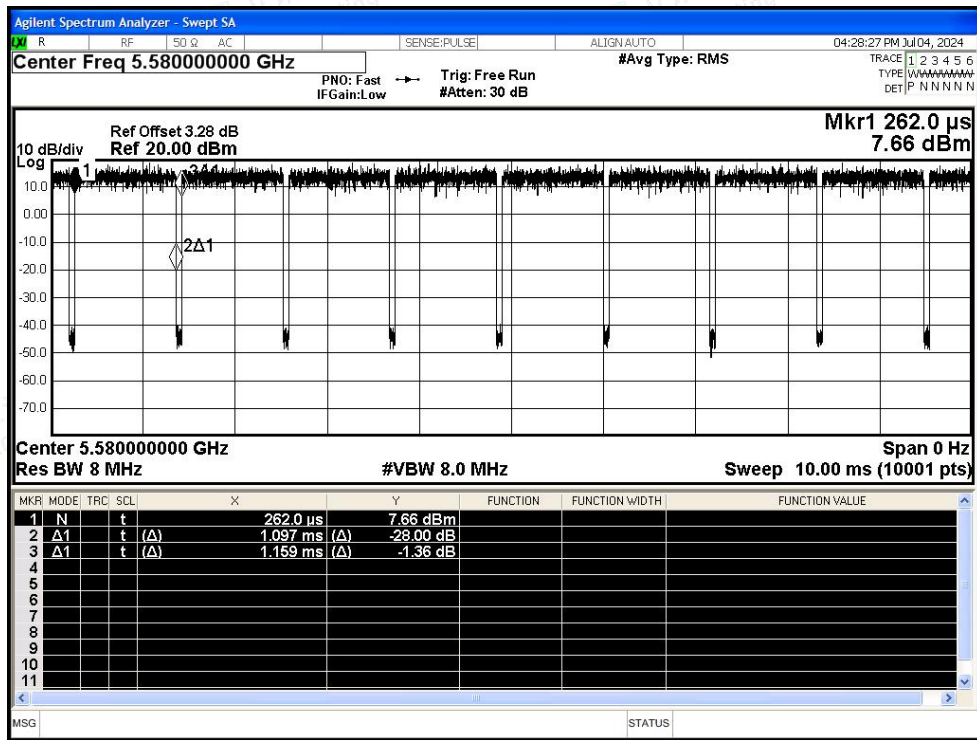




Duty Cycle NVNT a 5700MHz Ant1

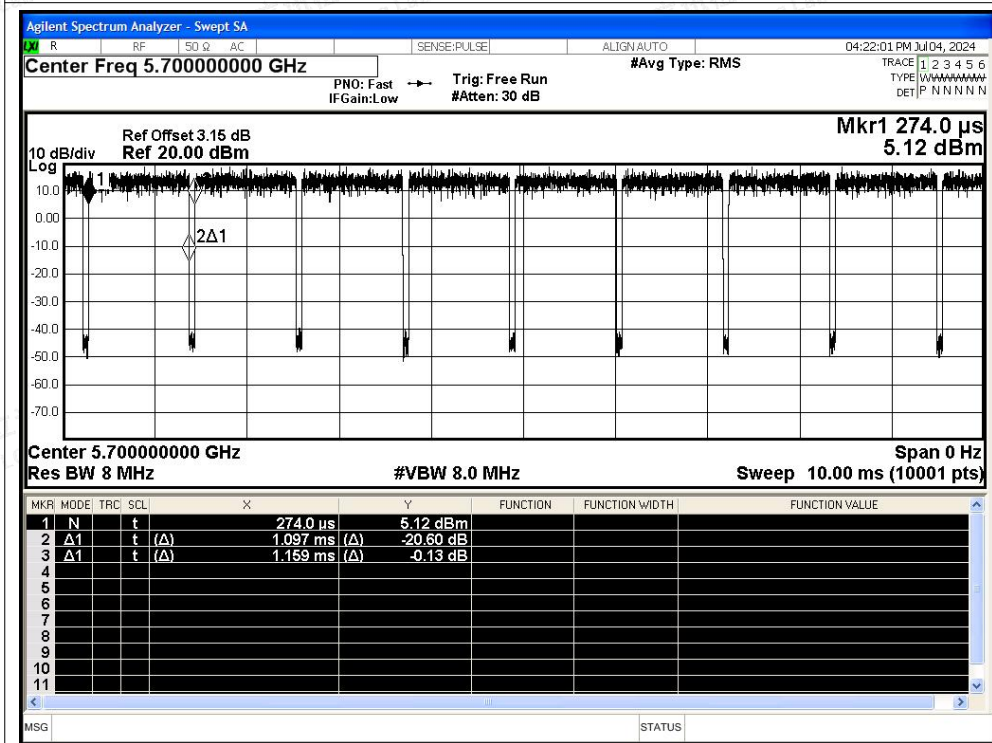


Duty Cycle NVNT n20 5500MHz Ant1

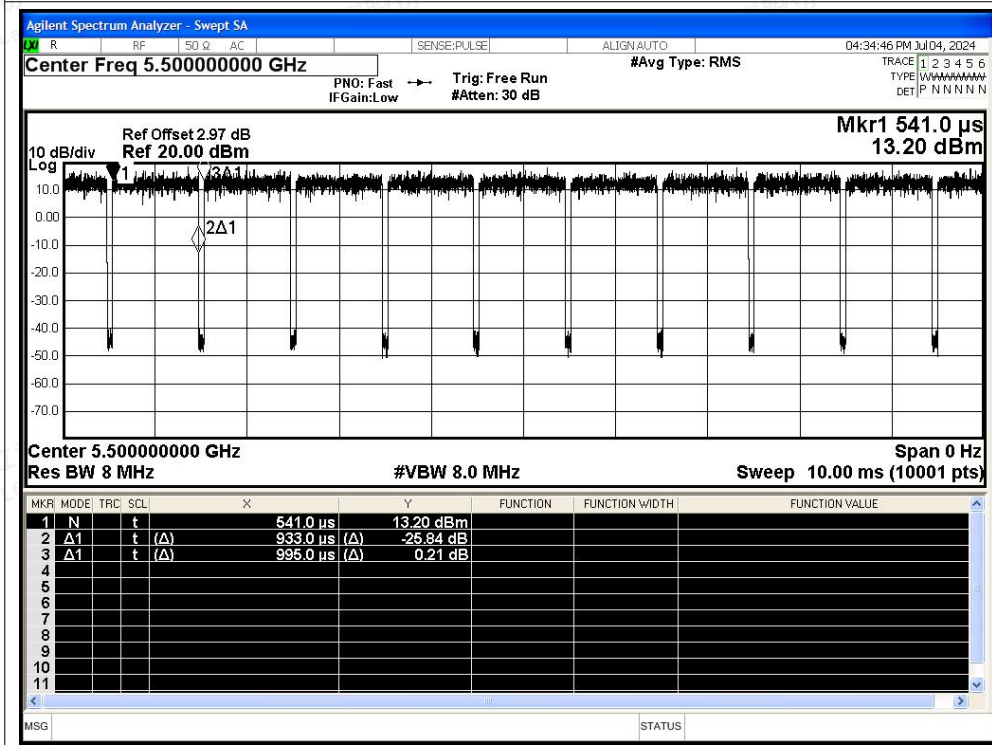






Duty Cycle NVNT n20 5580MHz Ant1

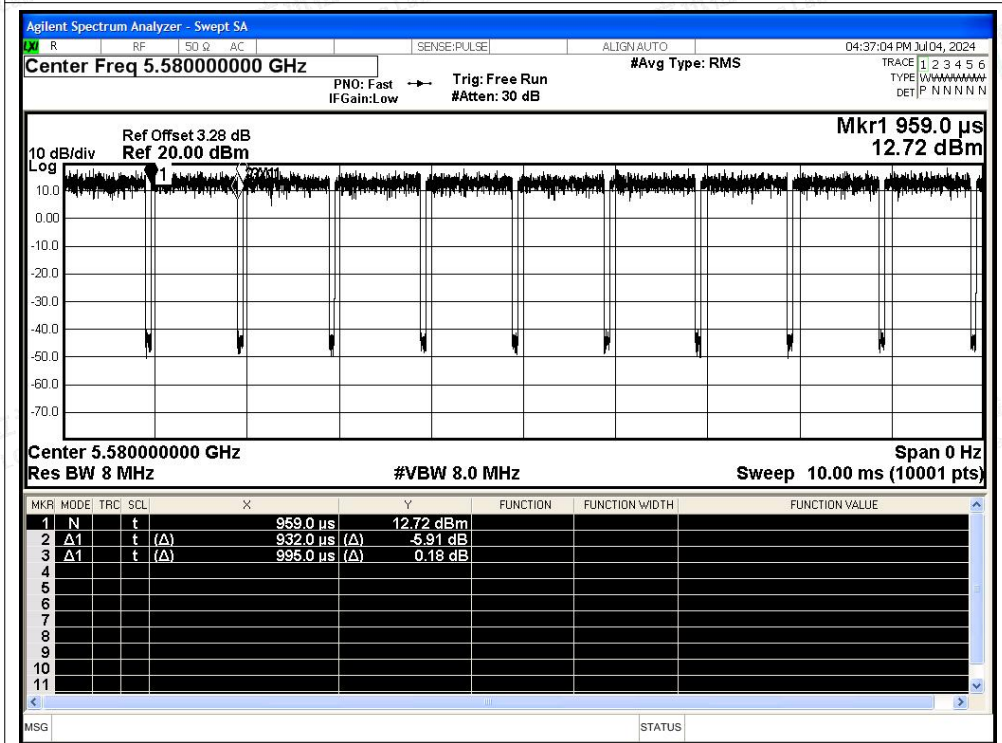


Duty Cycle NVNT n20 5700MHz Ant1

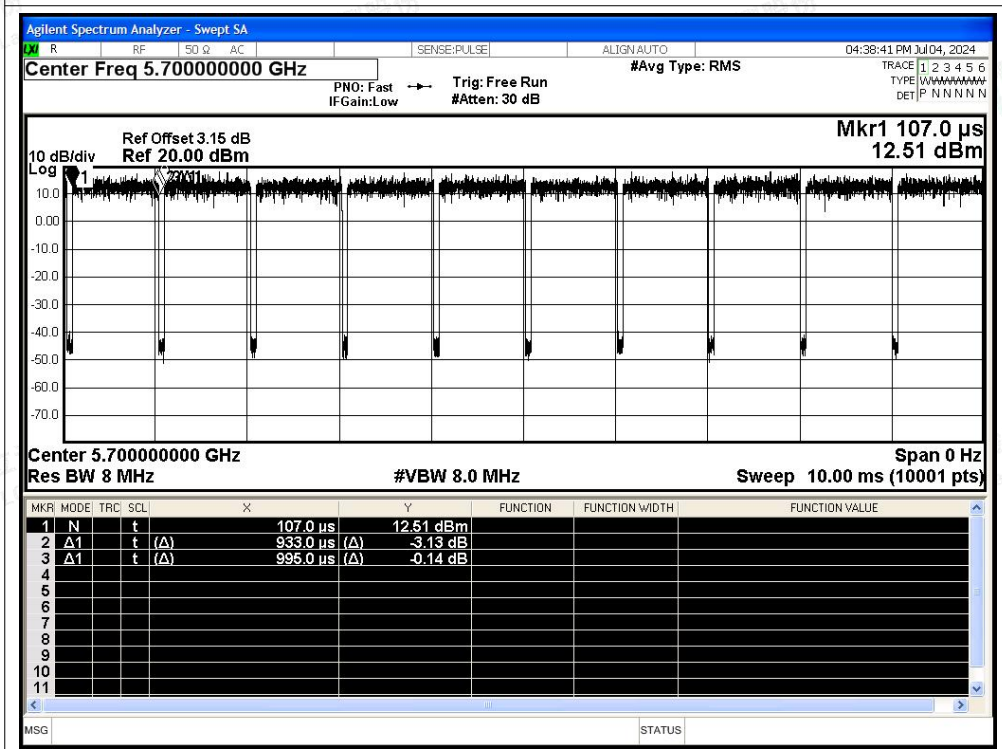




Duty Cycle NVNT n40 5510MHz Ant1

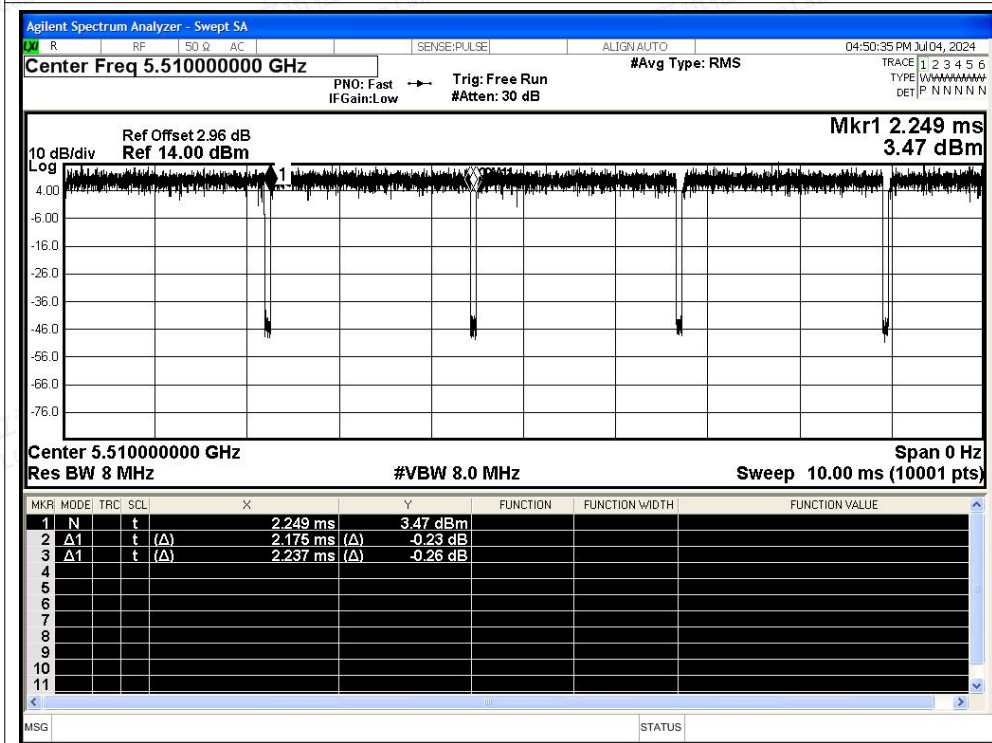


Duty Cycle NVNT n40 5550MHz Ant1

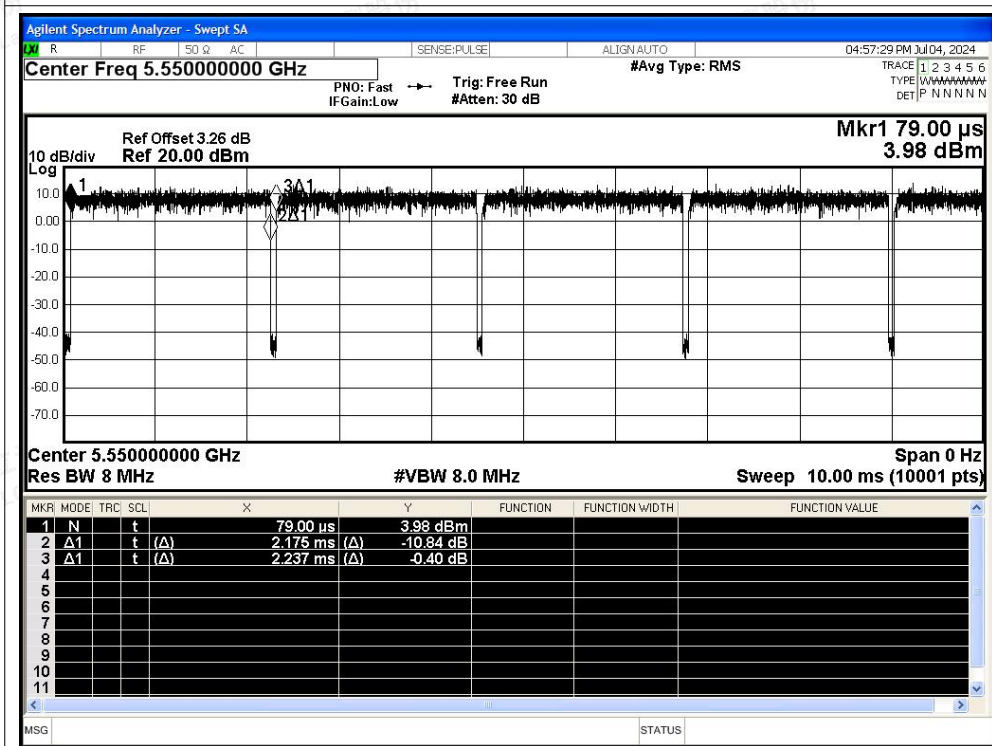




Duty Cycle NVNT n40 5670MHz Ant1

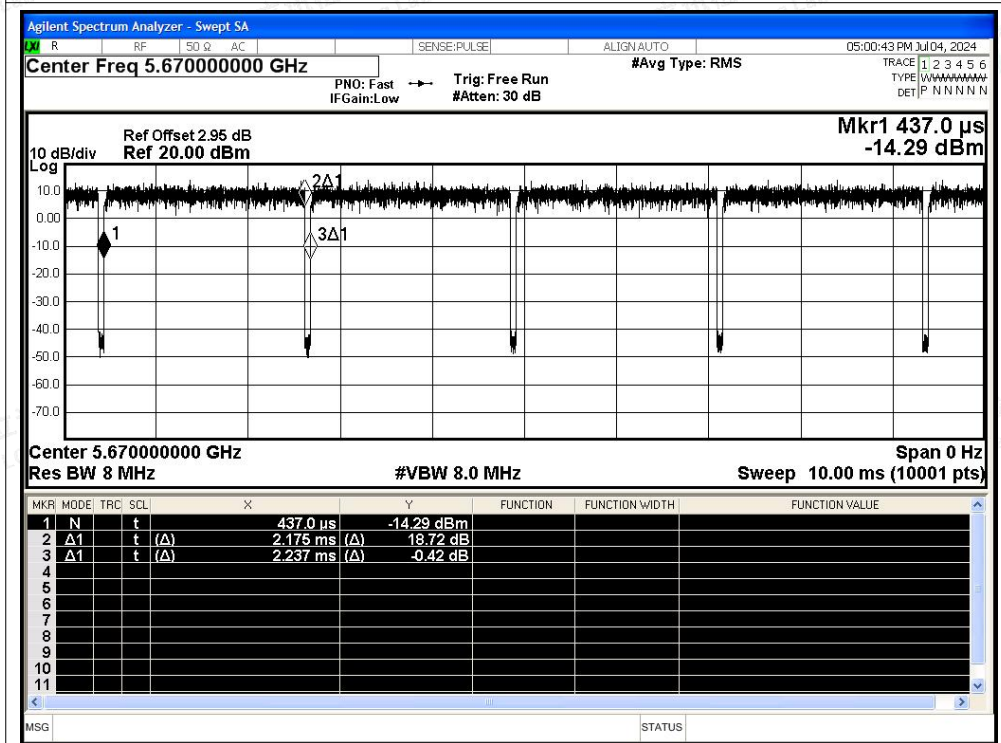


Duty Cycle NVNT ac20 5500MHz Ant1

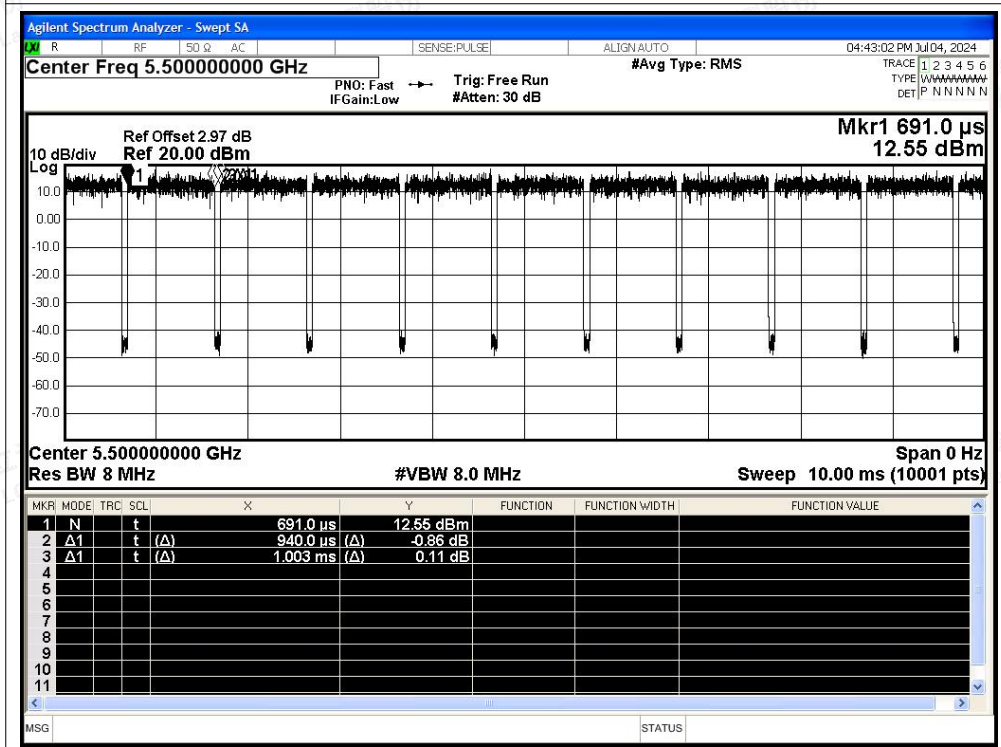



Duty Cycle NVNT ac20 5580MHz Ant1

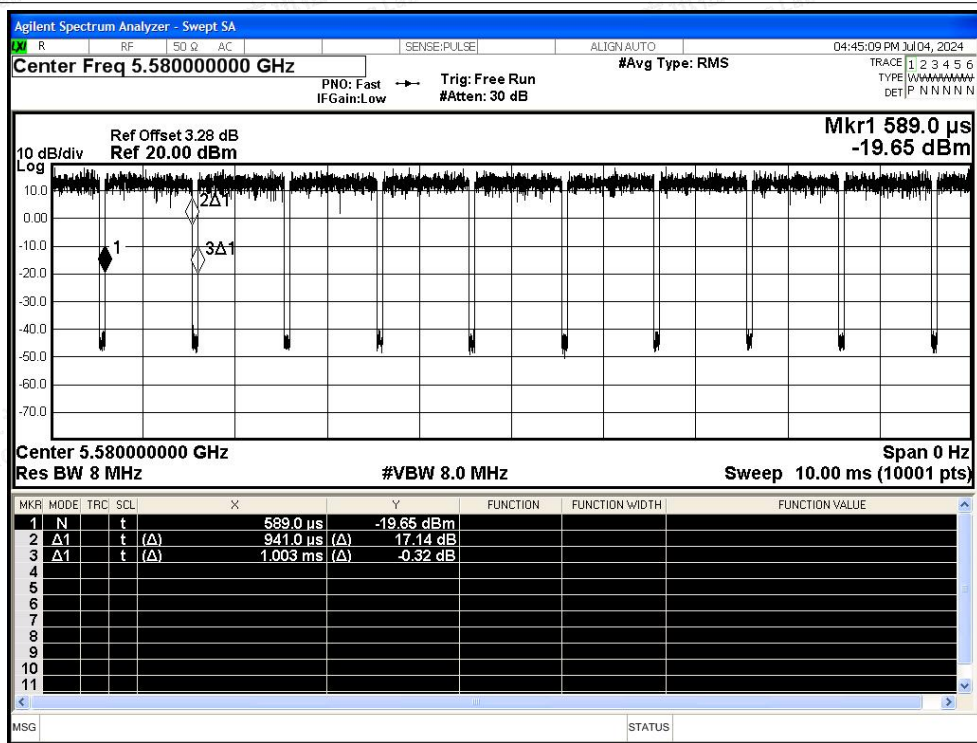

Duty Cycle NVNT ac20 5700MHz Ant1

