










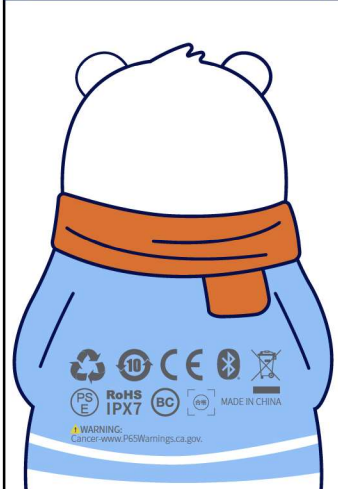


正面  
英文

440mm

80mm
55mm

 <p style="font-size: 24px; font-weight: bold;">T04X</p> <p>User manual</p>	<p style="text-align: center;">Hi, I am a genie baby. I am your family best friend. By using the APP, the teeth brushing performance of kids can be recorded. Before using, please read the instructions and precautions carefully, check whether the packaging accessories are complete. For the latest information about me, please follow the WeChat public account.</p> <div style="text-align: center;">  </div>	<p style="text-align: center;">Package content</p> <div style="display: flex; justify-content: space-around; align-items: center;">    </div> <div style="display: flex; justify-content: space-around; align-items: center;">   </div>	<p style="text-align: center;">Attaching the toothbrush</p> <div style="display: flex; justify-content: space-around; align-items: center;">    </div>	<p style="text-align: center;">Download APP (2 ways)</p> <ol style="list-style-type: none"> <li>Scan QR code to download</li> <li>Download "INFLY LIFE" from the APP market of mobile phone</li> </ol> <div style="text-align: center;">  </div> <p style="text-align: center;">APP interconnection function</p> <div style="display: flex; justify-content: space-around;"> <span>Teeth Brushing Lecture</span> <span>Teeth brushing report</span> </div>	<p style="text-align: center;">APP interconnection</p> <p>When power on the toothbrush for the first time, it will automatically search device under the network, the indicator light flashes quickly to indicating network is being configured. Turn on the phone APP and Bluetooth to search for and connect to this toothbrush device. After connecting to the toothbrush, select the corresponding WIFI and enter the password. Try to place the phone near to the toothbrush during pairing. After successful pairing, the toothbrush will automatically exit pairing mode then the indicator light is always on. If failed pairing within 1min, the toothbrush will automatically exit pairing mode.</p>	<p style="text-align: center;">APP interconnection</p> <p><b>Device reset</b> Long press the button for 5 seconds under power-on condition, the toothbrush will clear all network data. The indicator light will turn red-green-blue cyclically to complete the reset.</p> <p><b>APP Unbind</b> Click the unbind button in the APP then confirm to complete the unbind.</p>	<p style="text-align: center;">FAQ</p> <ol style="list-style-type: none"> <li>Why can't power on the toothbrush? Check if the toothbrush is fully charged. Fully charge the toothbrush before trying again.</li> <li>Why can't change the mode? The mode has been locked in the APP. Please unlock it first. Or long press the button for 5 seconds to reset the device to its initial state.</li> <li>Why is the vibration weakened and there is a short pause during the brushing process? This toothbrush is equipped with over-pressure protection. When the pressure is too high, the motor output strength is automatically reduced to protect the teeth, so the vibration is weakened accordingly. And the toothbrush will shortly pause twice to remind the kids. It will turn normal after the pressure is restored.</li> </ol>											
 <p style="font-size: 24px; font-weight: bold;">T04X</p> <p>User manual</p>	<p style="text-align: center;">Operation Instructions</p> <p><b>Power on</b> Press the on/off button to power on. Press the button continuously to switch the brushing mode.</p> <p><b>Power off</b> 1. After switching all modes in sequence once, press the button again to power off. 2. Once a mode is selected for 5 seconds, press the button again to power off. 3. Automatic power off in 2 minutes.</p>	<p style="text-align: center;">Charging</p> <p>Power on the electric toothbrush, if the indicator light flashes (with vibration) 3 times, it means that you need to charge your toothbrush. Please make sure the toothbrush handle and charging base are clean and dry, then set the toothbrush into charging base to power supply.</p> <p>This toothbrush is equipped with over-pressure protection. When the pressure is too high, the indicator light flashes (with vibration) twice, then the motor output strength is automatically reduced to protect the teeth, and it will turn to normal after the pressure is restored.</p>	<p style="text-align: center;">Important safety notice</p> <ol style="list-style-type: none"> <li>Before discarding the toothbrush, the battery must be removed;</li> <li>The battery must be removed in a power-off condition;</li> <li>The battery should be disposed of safely;</li> <li>Disassembly must be done by professionals only.</li> </ol> <p><b>Steps of battery removal:</b></p> <ol style="list-style-type: none"> <li>Remove the bottom cover;</li> <li>Remove the movement support assembly from the body shell;</li> <li>Heat the battery pins with electric ferrochrome to remove the battery.</li> </ol>	<p style="text-align: center;">Maintenance</p> <ul style="list-style-type: none"> <li>Wash the brush head and bristles after using and let them dry naturally.</li> <li>Please do not pull on the bristles, otherwise it will be easily deformed which may lead to falling off.</li> <li>Do not immerse the handle of the toothbrush in water for a long time.</li> <li>Do not clean the toothbrush using water higher than 40°C</li> <li>Before cleaning the charging base and plug, be sure to unplug the power plug from the socket first to prevent electric shock, and use soft and dry cloth for cleaning to avoid short circuit.</li> <li>Recommended to replace the brush head every 3 months.</li> <li>For the first using, please use up the remaining battery before recharging.</li> <li>If no use the toothbrush over 6 months, please charge it for 3-5 hours before using again.</li> <li>During use, if the charging indicator flashes for a few seconds and then stops, it means low battery.</li> <li>Place the toothbrush handle to the charging base and confirm the charger is plugged in.</li> <li>The indicator flashes slowly when charging and stays solid on when fully charged. If it's not charged over 6 months, the indicator won't flash until recharging for 6-10 minutes.</li> </ul>	<p style="text-align: center;">After-sales policy</p> <p>Thank you for choosing our products. We provide a one-year free warranty for the product, and unopened head to effectively protect consumers' right to use our high-quality products with confidence and satisfaction. In case of any fault within 12 months from the date of purchase, if it is verified by our After-sales Service Center as a quality problem, you will be provided with a free repair. Any damage or defect which is not attributable to the product quality is not covered by the warranty, including but not limited to:</p> <ol style="list-style-type: none"> <li>Failure or damage caused by acts of God, natural disasters;</li> <li>Unprofessional disassemble, modification or replacement of non-original parts by yourself or by non-authorized third party;</li> <li>Failure to operate in accordance with the manual or damage caused by improper use including wrong current voltage, unqualified socket, or other man-made damage, etc.</li> <li>For repairing within the scope of the warranty, please complete the warranty card. Free warranty service is only offered based on accurate information.</li> </ol> <p>For details of service and warranty, please visit our official website or call 400-026-8026</p>	<p style="text-align: center;">Warranty card</p> <p>Thank you for taking me home! We will provide you with 12 months after-sales service. In case of any non-human-made damages during this period, we will provide replacement instead of repair. We hope you will never use this card.</p> <p><small>FCC Statement: This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) the device must accept any interference received, including interference that may cause undesired operation.</small></p> <p>Model: T20040XN Product Name: Kids Electric Toothbrush Manufacturer: Dongguan Infly Life Technology Co., Ltd. Add: Room 202, Block 1, No.36 Caihix Road, Daojiao Town, Dongguan, Guangdong, China</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>Failure cause</td><td></td></tr> <tr><td>Name</td><td></td></tr> <tr><td>Contact information</td><td></td></tr> <tr><td>Address for return or replacement</td><td></td></tr> <tr><td>Purchase channel</td><td></td></tr> <tr><td>Order No.</td><td></td></tr> </table> <p><small>FCC Statement: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.</small></p>	Failure cause		Name		Contact information		Address for return or replacement		Purchase channel		Order No.	
Failure cause																		
Name																		
Contact information																		
Address for return or replacement																		
Purchase channel																		
Order No.																		