


Detail changes for "Mobile Model-SR25502001 Manual"


Change 1:

Change outside antenna and inside antenna distance from 15feet to 5feet.

Original:

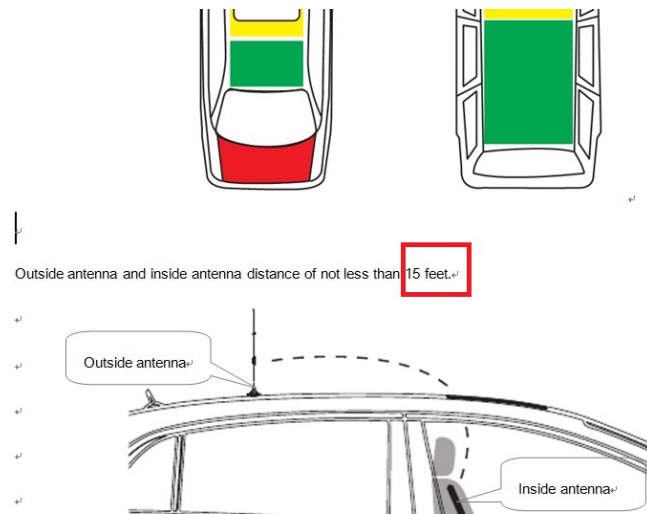

Revised:

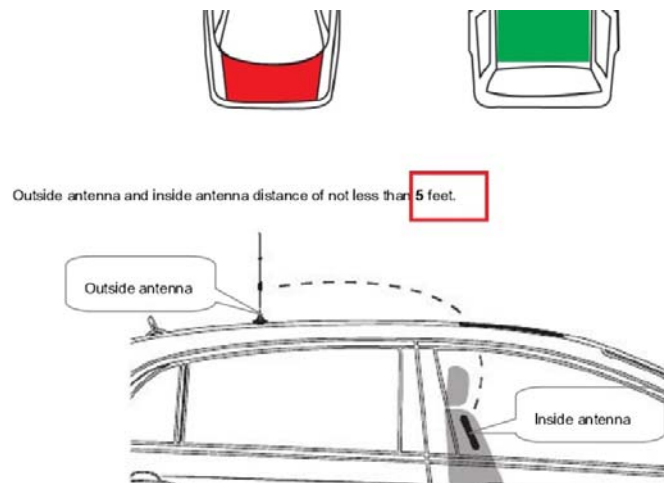

Change 2:

Change outside antenna and inside antenna information as below.

Original:

Antenna Kitting Information							
Component	Prod No. Description	Gain/Loss					Notes
		LTE-707	LTE-781	800MHz	1900MHz	1700MHz/2100MHz	
Outside Antenna	SR-30200100	2dBi	2dBi	2dBi	2dBi	2dBi	
Inside Antenna	SR-10200220	3dBi	3dBi	3dBi	3.5dBi	3.5dBi	
Outside Antenna	SR-30200100	2dBi	2dBi	2dBi	2dBi	2dBi	
Outdoor Cable	SRG58-15FN 15Feet	2.35dB	2.4dB	2.56dB	3.9dB	3.7dB/4.1dB	
Inside Antenna	SR-21200100	7dBi	7dBi	7dBi	10dBi	10dBi/10dBi	
All equivalent antennas and cables are suitable for use with the SR25502001 booster.							

Default antenna and cable shipped with the booster

Component	Prod No. Description	Gain/Loss					Notes
		LTE-707	LTE-781	800MHz	1900MHz	1700MHz/2100MHz	
Outside Antenna	SR-30200100	2dBi	2dBi	2dBi	2dBi	2dBi	
Inside Antenna	SR-10200220	3dBi	3dBi	3dBi	3.5dBi	3.5dBi	

Revised:

Component	Prod No. Description	Gain/Loss				
		LTE-707	LTE-781	800MHz	1900MHz	1700MHz /2100MHz
Outside Antenna	SR-ANT110301	3dBi	3dBi	3dBi	3dBi	3dBi
Inside Antenna	SR-ANT210001	0dBi	0dBi	0dBi	0dBi	0dBi
Outdoor Cable	SR-G58-15FN (15Feet)	2.5dB	2.5dB	2.5dB	4dB	4dB
Inside cable	SR-G58-10FN (10Feet)	1.7dB	1.7dB	1.7dB	2.6dB	2.6dB