

QUICK USER GUIDE for **AP-701**

(Summary version 1st)

This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body



ANTIA

All black & Black body & Blue Pen Cap




USB Connector (No Rubber Cap) ③ 10.5mm Descriptions ④ 13.4mm Criteria - Dimensions : (1) 152.9mm (with Pen Cap) ② 150.4mm (without Pen Cap) ③ 10.5mm (Pen Body) Appearance Lanyard Hole ④ 12.6mm (Pen Cap) (Size & Weight) - Weight : 18g - MMI : Green / Blue / Red LED Lamp / Buzzer Sound Communication - Bluetooth Dual Mode 4.2 (Bluetooth classic & BLE) - Operating angle : -45° to 50° 2 150.4mm ① 152mm Cylinder type Writing mode (Pen Body) - Reliable streaming with buffering (PG & APE) - Low latency streaming Internal Storage - 4MB (On board type) Buzzer & LED Hole - About 10 hours in continuous writing **Operation time** - About 10 days in waiting mode Refill Tip & Sensor - Lanyard(Necklace type) : Pen cap & Pen body Etc-01 - No power button [Front view] [Right side view] [Rear view]

Confidential Information

1. AP-701, SPEC.-1/2



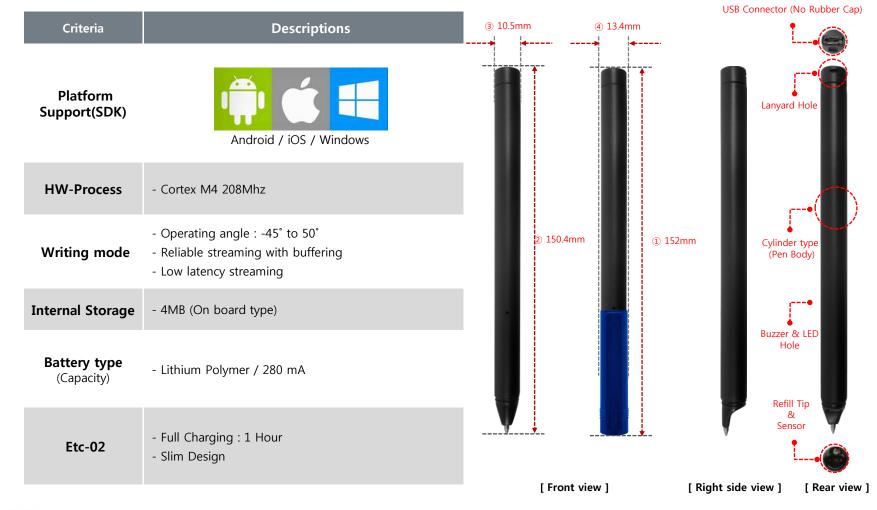

Confidential Information


1. AP-701, SPEC.-2/2



2. AP-701, Full PKG(Detail Components)



2-1. AP-701 : Full-PKG(included accessories)

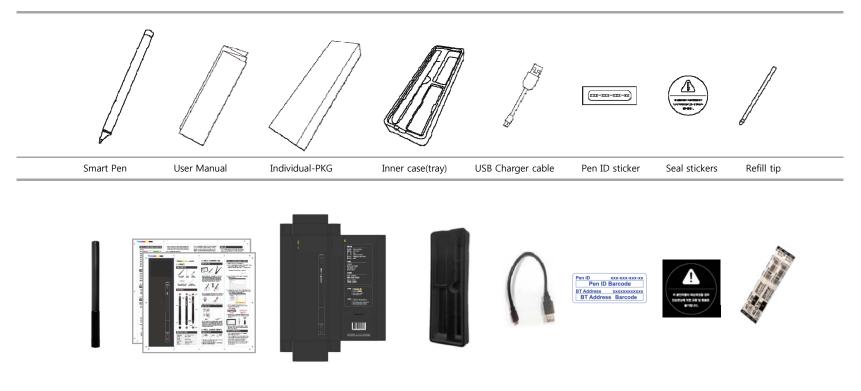

[customer's Sample guide]





3-1. AP-701 No power button.

- 3-2. **AP-701** Always power on status.
- 3-3. AP-701 Remained battery is under 2%

or received the command to power off from the host device application(app.)


3-4. Power On/Off

- AP-701 is in power off, it is possible to turn AP-701 on by connecting to PC USB port or Charger USB port It will take about 30 seconds to complete the booting
- AP-701 is in power on, it is able to turn AP-701 off by the command of host device application(app.) When the remained battery is under 2%, AP-701 will turn off automatically.



ANUTO

3-5. AP-701 supports 3-color LED and the buzzer sound for user notification

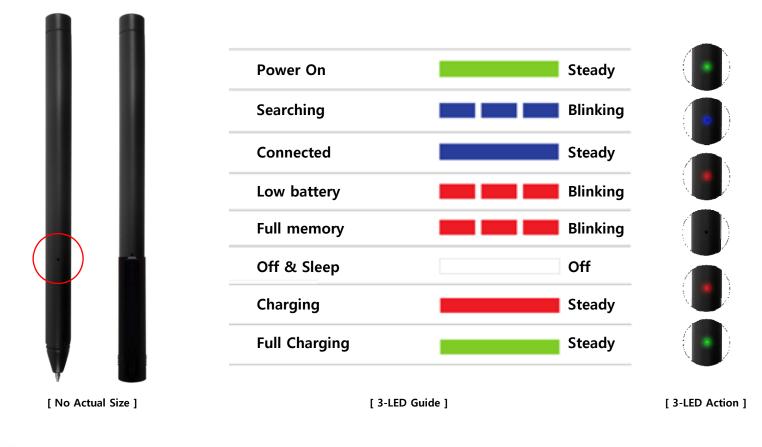



ANUTO

3-6. AP-701 Usage(Lanyard lace)





4. AP-701, User manual (Connected & Pairing)-1/4








4. AP-701, User manual (Connected & Pairing)-2/4



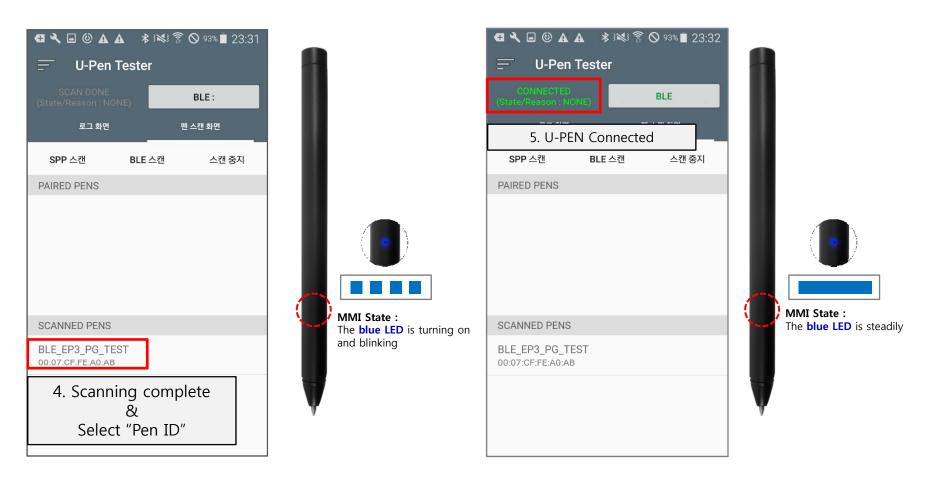



4. AP-701, User manual(Drawing mode)-3/4

ANDTO

🛨 🔧 🖬 🕲 🗛 🔺 🔻 🕅 🛠 🤋 🛜 🛇 93% 🛢 23:31
U-Pen Tester
1. Select "Menu" Icon
로그 화면 펜 스캔 화면
SPP 스캔 BLE 스캔 스캔 중지
PAIRED PENS
SCANNED PENS
BLE_EP3_PG_TEST 00:07:CF:FE:A0:AB


🖪 🔍 🛨 🗛 🗛 🖃 🔺 🖗 🛜 🛇 91% 🛢 0<u>0:09</u> Pen Genevations 설정 패키지 설치 스캔 중지 드로잉 화면 2. Select "Drawing Mode" 펌웨어 버전 조회 하드웨어 버전 조회 펜 메모리 정리 펜 메모리 사용량 조회 페어링 정리 펜 ID 옵션 USB 모드 옵션 블루투스 모드 옵션


€
FAP-201 Connected ?
3. Writing "AP-701 Connected"




4. AP-701, User manual(Disconnected mode)-4/4

ANDTO

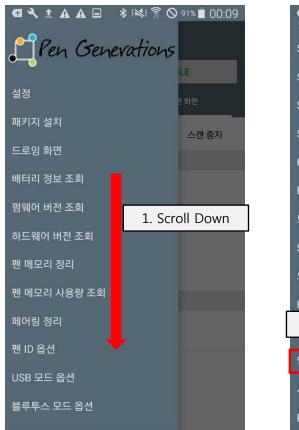

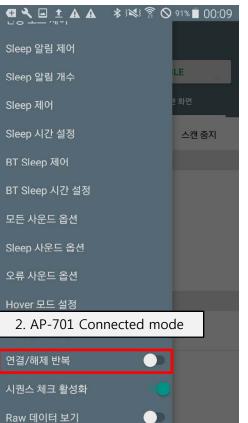

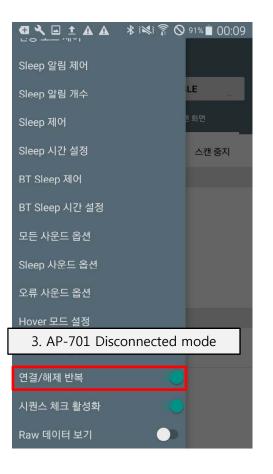

4. AP-701, User manual

Warning : This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and (2) this device must accept any interference received,Including interference that may cause undesired operation.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuantto part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications, However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct theinterference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.

***The grantee is not responsible for any changes or modifications not expressly approved by the party responcible for compliance. Such modifications could void the user's authority to operate the equipment.

ANUTO

Thank you for your attention