


Enter ADJUST MODE

Turn on the radio while pushing [WX] and [VOL] keys, the radio will be test mode.

(Should be connected High Data to NMEA in Port.)

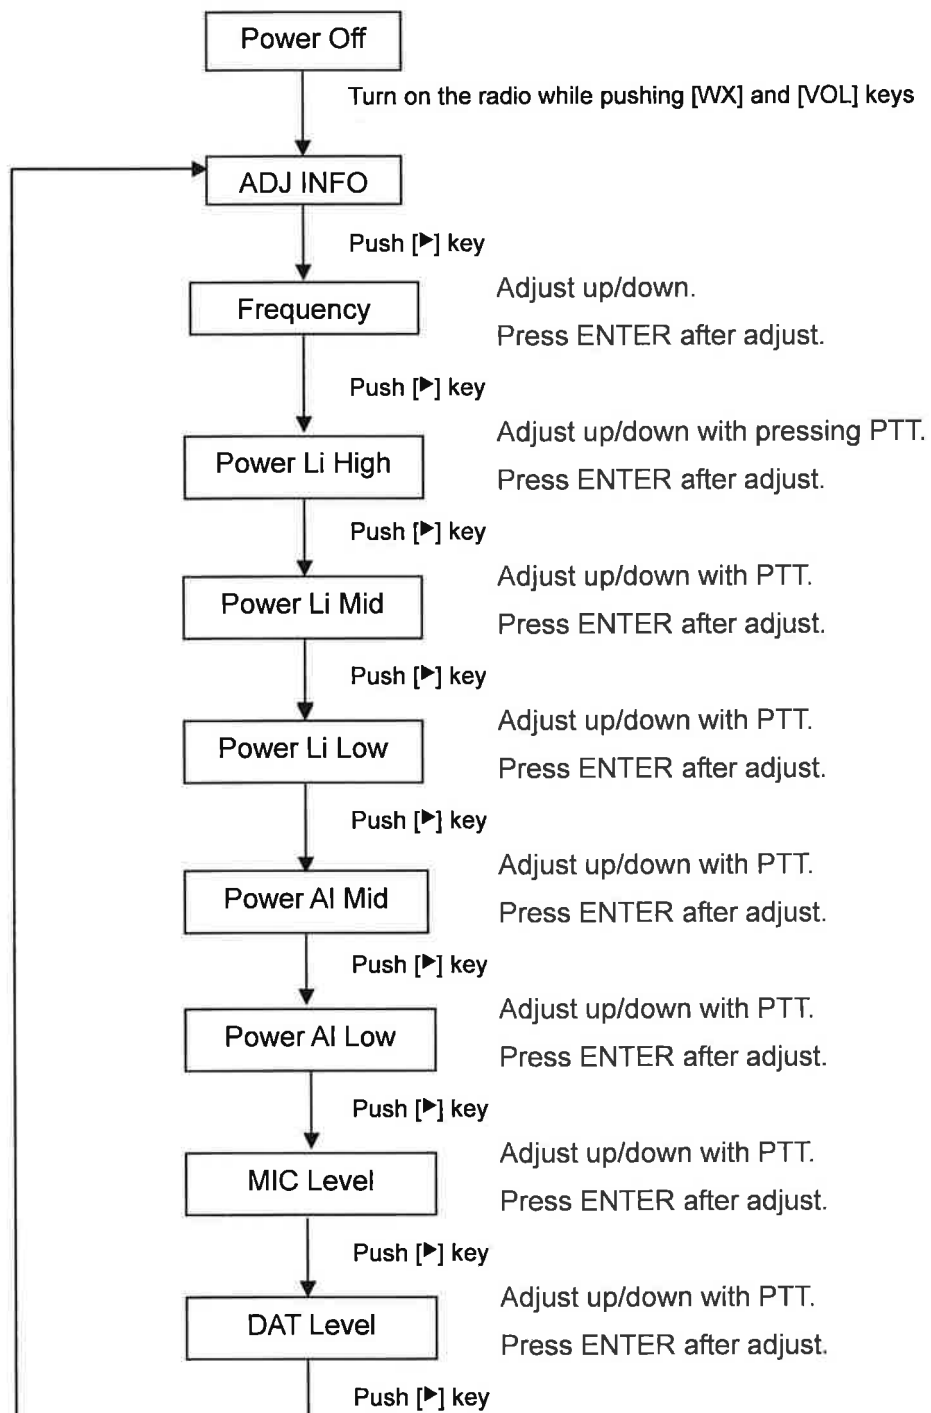

ALL ADJUST ITEM CONTROLLED BY MICROCOMPUTER

ADJUST SPEC SEE NEXT PAGE.

~ CONDITIONS ~

POWER SUPPLY:DC8.0V

TEMP:25°C

ANT:50ohm

~ITEM~

~ADJUST SPEC~

FREQUENCY

156.8MHz $\pm$ 20Hz

TX POWER (HI / LI-ION)@01CH

5.7W +0.2W/-0.05W

TX POWER (MID / LI-ION)@01CH

2.5W $\pm$ 0.05W

TX POWER (LOW / LI-ION)@01CH

0.8W $\pm$ 0.05W

TX POWER (MID / ALKALINE)@01CH

2.5W $\pm$ 0.05W

TX POWER (LOW / ALKALINE)@01CH

0.8W $\pm$ 0.05W

MIC LEVEL (MAX DEVIATION)@88CH

4.5KHz $\pm$ 0.1KHz-DEV

DATA LEVEL (DSC DEVIATION)@70CH

2.6KHz $\pm$ 0.1KHz-DEV