


Enter ADJUST MODE

Turn on the radio while pushing [WX] and [VOL] keys, the radio will be test mode.

(Should be connected High Data to NMEA in Port.)

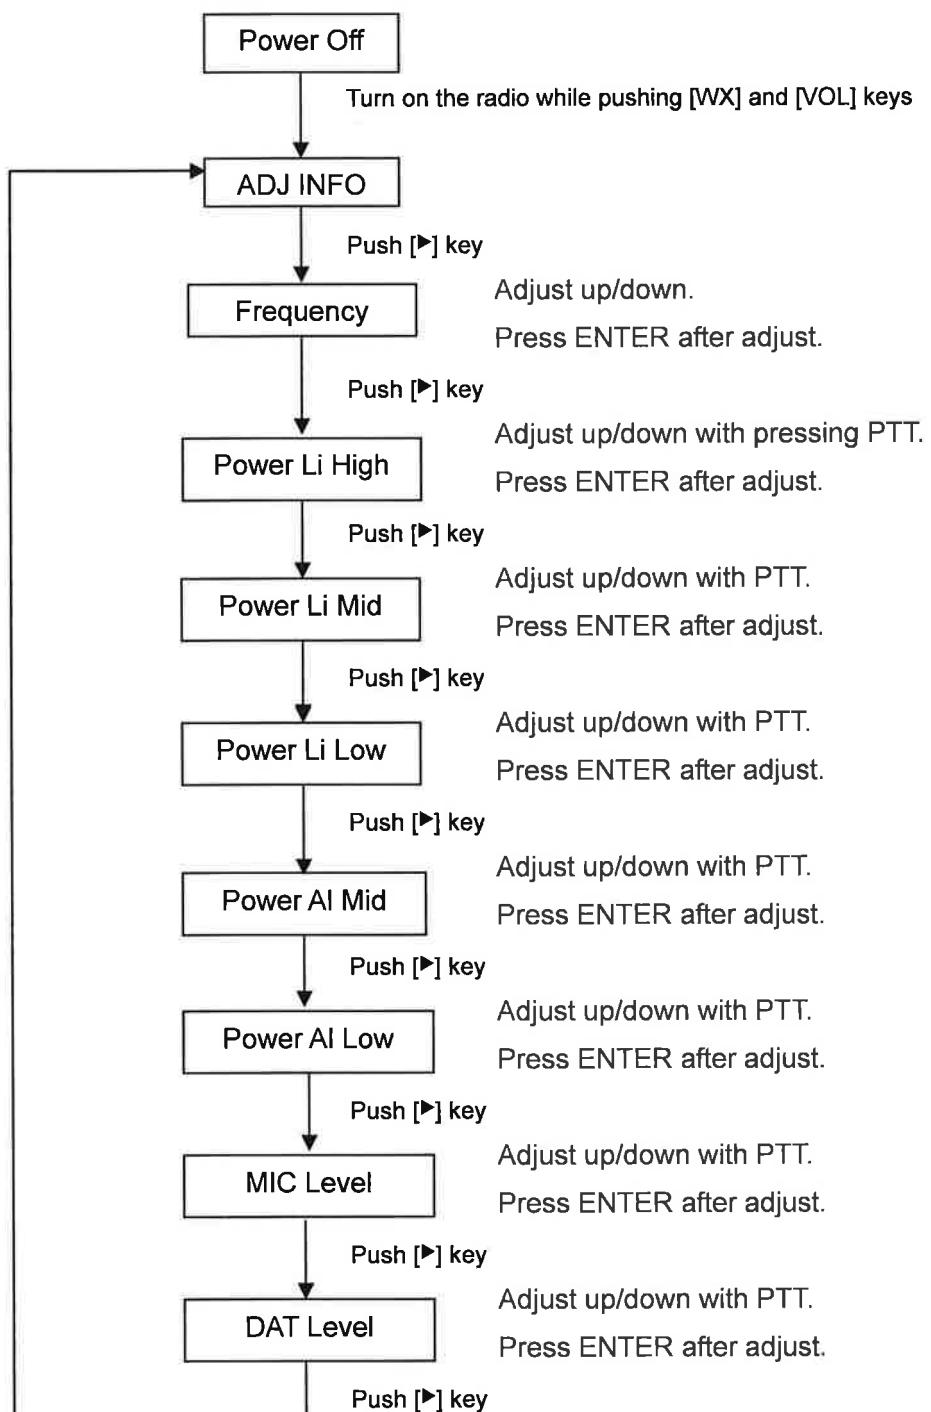

ALL ADJUST ITEM CONTROLLED BY MICROCOMPUTER

ADJUST SPEC SEE NEXT PAGE.

~ CONDITIONS ~

POWER SUPPLY:DC8.0V

TEMP:25°C

ANT:50ohm

~ITEM~

~ADJUST SPEC~

FREQUENCY	156.8MHz ±20Hz
TX POWER (HI / LI-ION)@01CH	5.7W +0.2W/-0.05W
TX POWER (MID / LI-ION)@01CH	2.5W±0.05W
TX POWER (LOW / LI-ION)@01CH	0.8W±0.05W
TX POWER (MID / ALKALINE)@01CH	2.5W±0.05W
TX POWER (LOW / ALKALINE)@01CH	0.8W±0.05W
MIC LEVEL (MAX DEVIATION)@88CH	4.5KHz±0.1KHz-DEV
DATA LEVEL (DSC DEVIATION)@70CH	2.6KHz±0.1KHz-DEV