Go to www.vtechphones.com to register your product for enhanced warranty support and the latest VTech product news.

Parent unit overview

LCD display

in or out.

while in **MENU**.

speaker is on.

speaker is on.

MENU/SELECT

CAM CAM

While viewing image, press to zoom

Press to resume video streaming

• While in a menu, press to scroll up,

While zooming in SINGLE-CAM or

PATROL mode, press and hold to

move the zoomed image upward.

Turn up the volume when the

• While in a menu, press to scroll

While zooming in SINGLE-CAM or

PATROL mode, press and hold to

move the zoomed image downward

Turn down the volume when the


Press to enter/exit the menu.

 While in a sub-menu, press to choose an item, or save a setting.

or to enter an item's sub-menu.

VM3251 VM3251-2

Video Monitor with Adjustable Lens

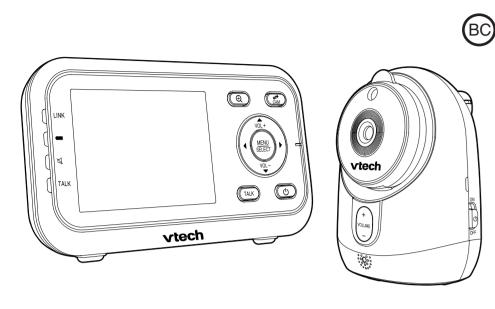

Vtech

User's manual

While in a menu, press to choose

PATROL mode, press and hold to

move the zoomed image leftward.

While in a menu, press to choose

the next item on the right, or return

While zooming in SINGLE-CAM or

PATROL mode, press and hold to

move the zoomed image rightward

Press and hold again to power off.

While viewing image, press and hole

Press to turn on or off the PATROL

Press to turn on or off the

Battery compartment cover

to talk to the selected baby unit.

Press and hold to power on.

While in **SINGLE-CAM** and

the main menu

to the main menu.

ம் On/off

TALK

PATROL

mode.

Speaker

14 Stand

Power jack

LCD ON/OFF

LCD screen

the next item on the left, or return to

Congratulations

on purchasing your new VTech product. Before using this product, please read Important safety instructions.


This manual has all the feature operations and troubleshooting necessary to install and operate your new VTech product. Please review this manual thoroughly to ensure proper installation and operation of this innovative and feature rich VTech product.


For support, shopping, and everything new at VTech. visit our website at www.vtechphones.com.

What's in the box





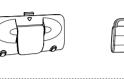

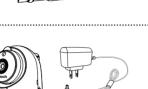



Parent unit lights

the baby unit.

paby units is lost.

pattery is charging.

the baby unit.

Parent unit status icons

parent unit.

parent unit.

1 or Current view status

vision feature.

Patrol mode

Ð

Connection status

LINK On when the parent unit is linked to

On when the parent unit is

connected to AC power, or the

Flashes when the parent unit

disconnected from AC power.

Off when the parent unit is

TALK On when the parent unit is talking to

parent unit is turned off.

battery is low and needs charging.

On when the speaker volume of the

Yull or Yul displays when strong

between the baby unit and the

Y or Y displays when moderate

or low signal strength is detected

link between

the baby unit and the parent unit

Displays when the parent unit is in **PATROL** mode.

unit that is being viewed when in

SINGLE-CAM or PATROL mode.

Displays when the camera at the

Displays when the baby unit being

viewed has activated the night

baby unit has zoomed in

between the baby unit and the

signal strength is detected

Flashes quickly when the link to


the baby unit is nearly lost. Flashes

when the link to at least one of the





while inserting the battery

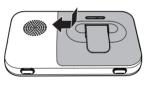

Replace the battery


Install the battery

The parent unit runs on rechargeable battery or AC power. To continuously monitor your baby, make sure you use both battery and AC power at the same time. With the battery alone, the parent unit can cordlessly run for a short time only.


⊘NOTES

- · Use only the battery supplied with this product. · The operating time for using the rechargeable battery is short. If you want to monitor your baby for a long time, we recommend you connect the parent unit to AC power.
- · If the parent unit will not be used for a long time, disconnect and remove the battery to prevent possible leakage.

Install the battery as shown below.

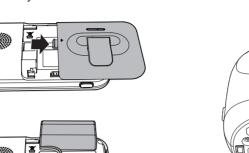



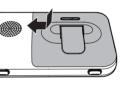

Talkback

Mute alert

Battery status

To replace the battery, pull out the battery compartment cover, and then lift up the battery. Follow the steps above to install the new battery

Displays when a lullaby is playing.

Displays when talking back to the

baby unit from parent unit.

Displays when the parent unit

Displays the real-time temperature

speaker volume is set to off.

detected by the baby unit in

Fahrenheit (°F) or Celcius (°C) (e.g. **57** °F or **14** °C).

⇒ → → m → m animates

when the battery is charging.

displays when the battery is

Displays when the parent unit is

connected to AC power without

Displays the parent unit speaker

You can change the brightness of

The baby unit and parent unit

can add or replace baby units

to your baby monitor system.

You can set a specific time to

screen off your parent unit.

provided are already paired. You

(VM3211, purchased separately)

You can remove the paired baby

volume level while adjusting.

Parent unit main menu icons

the parent unit screen

Unpairing baby unit

LCD screen off timer

Pairing baby unit

Brightness

displays solid when the

battery is fully charged.

low and needs charging.

AC power without batterv

the battery.

■■■■ Speaker volume

Real-time temperature

Connect and charge the


ONOTES

attery

by wall switches

- Use only the power adapters supplied with this
- product. Make sure the electrical outlets are not controlled
- The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if they are plugged into a ceiling, under-the-table
- Make sure the parent unit, the baby unit and the power adapter cords are out of reach of children

Connect the baby monitor

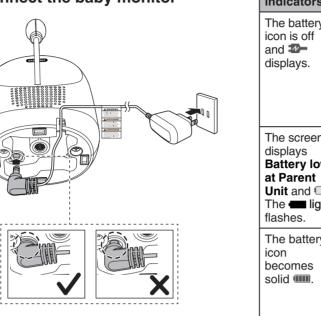

You can turn on the Temperature

temperature detected by the baby

alert tone so that the parent

unit beeps whenever the room

unit falls outside of the desired

You can set the baby unit lullaby

The selected baby unit is

The battery is empty and

eeds to be recharged.

Pairing or unpairing is

pairing or unpairing is in

Camera switching

Camera switching,

The temperature

pairing or unpairing is

detected by the baby unit

s higher/lower than the

desired temperature alert

he baby unit is unpairing

searching for baby units.

rom the parent unit.

The parent unit is

completed.

progress.

range.

* # represents the selected baby unit number.

out of range or is turned

temperature range.

playback parameters

Parent unit warning icons and

messages

Camera

🐼 /No link to

/Battery low

/Temperature

/Temperature

at Parent Unit

Charge the parent unit battery

When you have connected the parent unit and installed its battery for the first time or after power outage, the parent unit powers on automatically. The battery icon indicates the

battery status (see the following table).

- · The parent unit battery is fully charged after 3 hours of continuous charging.
- It takes longer to charge the battery when the parent unit is turned on. To shorten the charging time, turn the parent unit off while charging.

Battery Action

The standby time varies depending on the sensitivity level you set, your actual use and the age of the battery.

indicators	status	Action
The battery icon is off and displays.	No battery is installed but operates using AC power, or the battery has been installed incorrectly.	Install the parent unit battery. Charge without interruption (at least 30 minutes).
The screen displays Battery low at Parent Unit and	The battery has very little charge and may be used for only a short time.	Charge without interruption (about 30 minutes).
The battery icon becomes solid	The battery is fully charged.	To keep the battery charged, connect it to AC power when not in

efore use

⊘NOTE

 This baby monitor is intended as an aid. It is not a substitute for proper adult supervision, and should not be used as such

Test your baby monitor

For hearing protection, make sure the parent unit is more than 1 meter (3 feet) away from

noise, move the parent unit further until the

noise stops. You can also press -/VOL on

the parent unit to lower or mute the noise

> 1m (3ft)

are on.

baby unit.

parent unit

Then, repeat step 2.

1. Make sure your baby units and parent unit

2. The parent unit displays images from the

 Speak towards the microphone of the baby unit. You will hear the sound at the

3. If you have more than one baby unit, press

VIEW at the right side of your parent unit.

The screen switches to other baby units.

When the parent unit displays \(\frac{1}{10} \) or No link to

a live power socket and switched on.

Camera, and the LINK LED light flashes, move the parent unit closer to the baby unit (observe the minimum distance of 1 meter/ 3 feet). You can also check if the baby monitor is connected to

Increase the speaker volume of the parent unit if

you cannot hear the sounds transmitted from the


both baby units. If you hear any high-pitched

 To avoid interference from other electronic devices, place your baby monitor far away from devices such as wireless routers, microwaves, You may test the baby monitor before initial cell phones and computers.

use, and at regular times thereafter.

1. Place the baby unit more than 1 meter

baby's crib or playpen.

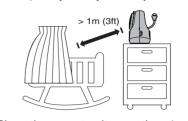


(3 feet) away from your baby.

Positioning the baby monitor

· Keep the baby unit out of the reach of your baby.

Never place or mount the baby unit inside the

2. Place the parent unit more than 1 meter(3 feets) away from the baby unit.

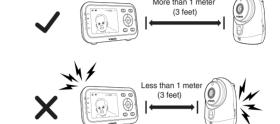

3. Rotate to adjust the angle of the camera on the baby unit according to your preference.




 The default volume of your parent unit is level 4. If you experience high-pitched screeching noise from your baby monitor while positioning: - Make sure your baby units and parent unit are

• Press PATROL to switch to PATROL mode

if you are in **SINGLE-CAM** mode, and vice

Turn down the volume of your parent unit.

more than 1 meter (3 feet) apart, OR

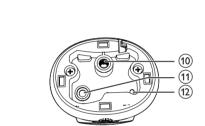



Operating range

The operating range of the baby monitor is up to 300 meters (1,000 feet) outdoors or 50 meters (160 feet) indoors. The actual operating range may vary depending on the environmental conditions and other interferences such as walls, doors and other obstructions.

Overview

Baby unit overview

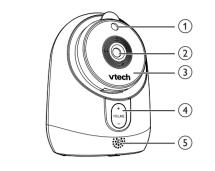

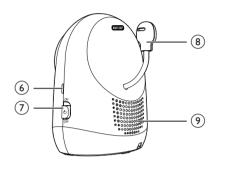

Night vision

Light sensor

Infrared LEDs

-/VOLUME/+

Microphone

ON/OFF LED light

parent unit is lost.

(b) ON/OFF switch

Temperature sensor

Threaded socket

Speaker

Power Jack

· Press to adjust the speaker volume.

It determines the talkback volume

transmitted from your parent unit.

On when the baby unit is turned on

Flashes when the baby unit is not

· Slide to turn on or off the baby unit.

For wall mount installation use

Your baby units and parent unit provided are already paired. Press and hold on accessory

baby units (VM3211, purchased

separately) to pair to the parent unit.

being viewed; or when the link to the

and is paired to the parent unit.

Camera

The baby unit has infrared LEDs that allow you to see your baby clearly at night or in a dark room. When the baby unit being viewed detects low light levels, the infrared LEDs are switched on automatically. The images from this baby unit is in black and white, and 🍑 appears on screen.

⊘NOTES

- · It is normal if you see a short white glare on your parent unit screen as the baby unit is adapting to the dark environment
- When the infrared LEDs are on, the image is in black and white. This is normal due to external light sources.

 Depending on the surroundings and other interfering factors, like lightings, objects, colors and backgrounds, the display resolution may vary. Adjust the baby unit's angle or place the baby

You can set the screen off timer of the parent unit, so that the parent unit screen will turn off automatically after being idle for a particular

1. Press **MENU** when the parent unit is idle.

2. Press ◀ or ▶ to choose ■, then press ▲.

press **SELECT** to confirm your selection.

SELECT. 4. Press ▼ or ▲ to choose F or C, then press **SELECT** to confirm your selection.

You can choose to display the temperature in

1. Press **MENU** when the parent unit is idle.

Press ◀ or ▶ to choose ∅, then press ▲.

3. Press ▼ or ▲ to choose ♣, then press

Ising the baby monitor

- Power on or off the baby unit • Slide the **ON/OFF** switch to the left to turn on the baby unit. The ON/OFF LED light turns on.
- Slide the ON/OFF switch to the right to turn off the baby unit. The **ON/OFF** LED light turns off.

Power on or off the parent unit Press and hold \(\Delta \) to turn on the parent unit.

- The screen turns on. Press and hold \odot again to turn off the
- parent unit. The screen turns off.

Turn on or off the parent unit screen You can turn on or off the parent unit screen

without powering off the parent unit. You can still hear sound from the baby unit. Press LCD ON/OFF on the parent unit to

- turn off the screen. Press any key on the parent unit to turn on
- the screen again.

Adjust speaker volume For parent unit: Press +/VOL/- on the parent unit at any

time when viewing images. **⊘**NOTE When the parent unit speaker volume is set to

zero. I appears on the screen and the ☒ light For baby unit:

The baby unit speaker volume determines the talkback volume transmitted from your parent

 Press +/VOLUME/- on the baby unit to adjust the speaker volume.

Adjust LCD brightness You can change the brightness of the parent unit screen from **Level 1** to **Level 5**. The LCD

your selection.

baby units.

brightness is preset to Level 3. 1. Press **MENU** when the parent unit is idle.

- 2. Press ◀ or ▶ to choose ☼, then press ▲.
- 3. Press ▼ or ▲ to choose the desired level of brightness, then press **SELECT** to confirm

Monitoring mode

Every time the parent unit is turned on, it displays a baby unit in SINGLE-CAM mode. If there are more than one baby units in your system, you can also monitor your baby in PATROL mode.

SINGLE-CAM	The screen displays a single baby unit in full screen.	
PATROL	A single cam view that transits to a different baby unit every 10 seconds.	

In SINGLE-CAM mode and PATROL mode:

 Press CAME to switch to another camera if you are in **SINGLE-CAM** mode.





Zoom

You can remotely zoom in while viewing images in SINGLE-CAM and PATROL mode.

Press PATROL.

- Press ⊕ to zoom in. Press again to zoom Press ◀ or ▶ to move the zoomed image
- leftward or rightward.

Talk

You can use the TALK function of the parent unit to comfort your baby in SINGLE-CAM and PATROL mode.

- 1. Press and hold TALK on the parent unit. The TALK light turns on
- 2. Speak towards the microphone on the parent unit. Your voice is broadcast to the baby unit. 3. Release the **TALK** key to stop the
- broadcast. The TALK light goes off.

Monitor the temperature Your baby unit monitors the temperature of

You can set the desired room temperature

alert range. The minimum temperature can be

set between 52 °F (11 °C) and 69 °F (20 °C).

. Press **MENU** when the parent unit is idle.

Press ◀ or ▶ to choose ∅, then press ▲.

The maximum temperature can be set

between 70 °F (21 °C) and 86 °F (30 °C).

3. Press ◀ or ▶ to choose ♣ then press

4. Press ▼ or ▲ to choose MIN or MAX, then

Press ▼ or ▲ to choose the desired.

minimum or maximum temperature, then

press **SELECT** to confirm your selection.

You can turn on the temperature alert tone

the detected temperature is out of range.

1. Press **MENU** when the parent unit is idle.

2. Press ◀ or ▶ to choose 💩, then press ▲.

3. Press ▼ or ▲ to choose ♣, then press

4. Press ▼ or ▲ to choose on or off, then

so that the parent unit will emit an alert tone if

Set temperature range

SELECT.

press **SELECT**.

Temperature alert tone

Temperature format

Fahrenheit (°F) or Celcius (°C).

your baby's room with its built-in temperature sensor. If the detected temperature is out of the preset temperature range, the parent unit will display an alert message.

unit at a higher level to prevent glare and blurry

Set screen off timer of parent

3. Press ▼ or ▲ to choose select (nins, nins, nins, nins,

4. Press SELECT to confirm your selection.



Pair and replace extra new baby

unit (VM) You can add or replace any baby units (VM3211 purchased separately) to your video and audio monitor system. You can pair a maximum of

- four baby units to your parent unit. 1. Press **MENU** when the parent unit is idle.
- 2. Press ◀ or ▶ to choose , then press ▲. 3. Press ▼ or ▲ to choose select a empty
- camera ([am], [am], [am] or [am]). Press SELECT to confirm your selection.
- Remove a paired baby unit (VM)

You can unpair baby unit from your video and audio monitor system.

- 1. Press **MENU** when the parent unit is idle.
- Press ◀ or ▶ to choose ☒, then press ▲.

- 3. Press ▼ or ▲ to choose select the camera you want to unpair (🖦, 🗐, 🖫 or 🖫).
- 4. Press SELECT.
- 5. Press SELECT again to select to confirm your selection.

You can play lullabies on the baby unit by remoting on the parent unit. On the baby unit, you can control the volume level of the lullabies.

3. Press ▼ or ▲ to choose a lullaby, or choose

Press VOL+ to increase the volume level of

• Press VOL- to decrease the volume level of

· Once the lullabies are played, the setting will be

stopped when the broadcast from the parents unit

is playing. The lullabies will resume in several

• The lullaby playback on the baby unit will be

4. Press **SELECT** to confirm your selection.

Volume level control on baby unit

the lullaby on the baby unit.

the lullaby on the baby unit.

applied to all registered baby units.

seconds after the broadcast is ended

PNOTES

Playing Iullabies

to stop playing.

- 1. Press **MENU** when the parent unit is idle.
- fluorescent lamps). DO NOT expose it to direct sunlight or moisture. 2. Press ◀ or ▶ to choose ♣, then press ▲. · Avoid dropping the product or treating it roughly.
 - · Clean with a soft cloth.

eneral product care

To keep this product working well and looking good,

Avoid putting it near heating appliances and devices

that generate electrical noise (for example, motors or

- DO NOT immerse the parent unit and the baby unit in water and do not clean them under the tap.
- DO NOT use cleaning spray or liquid cleaners.
- Make sure the baby unit and parent unit are dry before you connect them to the mains again.

Storage

When you are not going to use the baby monitor for some time, remove the rechargeable battery from the parent unit. Store the parent unit, the baby unit and the adapters in a cool and dry place.

requently asked question

Below are the questions most frequently asked about the baby monitor. If you cannot find the answer to your question, visit our website at www.vtechphones.com or contact 1 (800) 595-9511 for customer service.

Mby door	Try the following (in the order
Why does the baby monitor not respond normally?	listed) for common cure:
	Disconnect the power to the baby units and the parent unit. Remove the batteries in the parent unit. Then install the batteries again.
	Wait a few seconds before connecting power back to the baby units and the parent unit.
	4. Turn on the baby units and the parent unit.
	5. Wait for the parent unit to synchronize with the baby unit. Allow up to one minute for this

the appliance plug into the parent baby unit and | unit and put the adapter in a wal socket. Then press and hold Θ to parent unit switch on the parent unit and to switch on the establish connection with the baby Perhaps the baby unit is not connected to the power. Connect the baby unit to the mains. The set the ON/OFF switch to ON to switch on the baby unit and to establish connection with the Why doesn't Make sure the power is not controlled by a wall switch my parent unit charge Make sure the battery is installed connected to You may have used the battery AC power? for a long time. Replace a new battery. The screen is in black and white during night-time or in a dark roor when the night vision feature is activated. This is normal due to black and external light sources. During night-time or in a dark Why do I get glare or room, the surroundings and other interfering factors, like lightings on my screen | objects, colors and backgrounds may affect the image quality or my baby at our parent unit screen. Adjust th baby unit's angle or place the baby unit at a higher level to prevent glare and blurry display. Why does The parent unit and baby units may the baby be too close to each other

the baby units until the noise

Turn down the volume of your

The baby units may be out of

range. Move the parent unit clos

If the parent unit is powered by the

provided battery, it may not have

in the parent unit for up to 3 hours

The temperature of your baby's

oom may be too high or too low

enough charge for the parent unit to

to the baby units (but not less than

stops: ÓR

parent unit

Perhaps the parent unit is not

connected to the power. Insert

Why don't

produce a

Why does

the parent

unit beep'

high-pitche

the power-on

light on the air the baby unit. Make sure bot aby unit ashes and rent unit and baby unit are on the parent efore pairing. unit displays Press MENU when the parent unit is idle Press ◀ or ▶ to choose 🖺, then press \triangle . Press ▼ or ▲ to choose he parent unit screen display PAIR on the bottom of the baby unit. The LED light flashes quickly. When pairing is successful, the screen displays O, followed the view of the newly paired baby uni in **SINGLE-CAM** mode. The LED light on the new baby unit remain If pairing fails, the screen displays 1. Try the pairing process again. Only one baby unit can be paired at a time. Why don't hear a sound/Why my baby cry? Why can't I tablish a nnection hy is the nnection Move the parent unit away from lost every Other electronic products may cause interference with your baby

then? Why

interruptions

are there

The **ON/OFF** The baby unit is unpaired from the arent unit. Follow below steps to 3. This product is intended as an aid. It is not

		ı	
	The parent unit speaker volume may be too low or off. Press VOL+ to increase the volume.	Incorrect adapter polarity or voltage can seriously damage the product. Baby unit power adapter: Output: 6V DC 500r	
?		8.	The power adapters are intended to be correctly oriented in a vertical or floor mount position. The
	The baby units may be out of range. Move the parent unit closer to the baby units (but not less than		prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
	3 feet).	9.	For pluggable equipment, the socket-outlet shall

monitor. Try installing your baby

monitor as far away from these

ectronic devices as possible

easily accessible 10. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners Use a damp cloth for cleaning.

be installed near the equipment and shall be

- Unplug the power cords before replacing 12. Do not cut off the power adapters to replace
- them with other plugs, as this causes a hazardous situation 13. Do not allow anything to rest on the power cords Do not install this product where the cords may
- be walked on or crimped. 14. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local
- 15. Do not overload wall outlets or use an extension

power company.

- 16. Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
- 17. This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this

portant safety instruction

When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

Adult setup is required.

a wet basement or shower

RBRC® seal.

. Follow all warnings and instructions marked on

a substitute for responsible and proper adult

supervision and should not be used as such.

4. This product is not intended for use as a medical

5. Do not use this product near water. For example,

CAUTION: Use only the batteries indicated in

this manual. There may be a risk of explosion

if a wrong type of battery is used for the parent

or replacement battery pack (BT198555/

unit. Use only the supplied rechargeable battery

BT298555) for the parent unit. Do not dispose o

batteries in a fire. They may explode. Dispose of

used battery according to the information in The

kitchen sink, laundry tub or swimming pool, or in

do not use it next to a bath tub, wash bowl

18. Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the

heat register

19. To reduce the risk of electric shock, do not

product are provided for ventilation. To protect

em from overheating, these openings must

not be blocked by placing the product on a soft

surface such as a bed, sofa or rug. This product

should never be placed near or over a radiator or

- disassemble this product, but take it to an authorized service facility. Opening or removing parts of the product other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
- 20. You should test the sound reception every time you turn on the units or move one of the components
- 21. Periodically examine all components for damage.
- 22. Be aware of possible loss of privacy while using public airwayes. Conversations may be picked up by other nursery monitors, cordless phones. scanners, etc.
- 23. Children should be supervised to ensure that they do not play with the product
- 24. The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for

SAVE THESE INSTRUCTIONS

- 1. Use and store the product at a temperature etween 32°F and 104°F
- Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source
- 3. Batteries should not be exposed to excessive heat such as bright sunshine or fire. Make sure the baby unit(s) and the adapter

interference with your baby monitor. Try

installing your baby monitor as far away

from these electronic devices as possible

intercoms, room monitors, televisions

cordless telephones

pacemakers

Pacemaker patients

it is turned ON.

using wireless devices

Electromagnetic fields (EMF)

on scientific evidence available today

from the pacemaker

wireless routers, radios, cellular telephones,

personal computers, kitchen appliances and

Precautions for users of implanted cardiac

Cardiac pacemakers (applies only to digital cordless

Wireless Technology Research, LLC (WTR), an

evaluation of the interference between portable

wireless devices and implanted cardiac

independent research entity, led a multidisciplinary

pacemakers. Supported by the U.S. Food and Drug

• Should keep wireless devices at least six inches

Should NOT place wireless devices directly over

WTR's evaluation did not identify any risk to

bystanders with pacemakers from other persons

This VTech product complies with all standards

properly and according to the instructions in this

regarding electromagnetic fields (EMF). If handled

user's manual, the product is safe to be used based

the pacemaker, such as in a breast pocket, when

Administration, WTR recommends to physicians that:

- cord(s) are always out of reach of the baby, at least 3 feet away from the baby or crib, to avoid a possible strangulation hazard.
- trash or municipal waste, which may be illegal in Never place the baby unit(s) inside the baby's crib your area. or playpen. Never cover the baby unit(s) or parent VTech's participation in RBRC® makes it easy for unit with anything such as a towel or a blanket. 6. Other electronic products may cause

you to drop off the spent battery at local retailers participating in the RBRC® program or at authorized VTech product service centers. Please call 1 (800) 8 BATTERY® for information on Ni-MH battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.



States and Canada.

RBRC® and 1 (800) 8 BATTERY® are registered trademarks of the Rechargeable Battery Recycling Corporation.

FCC and IC regulations

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications mission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful nterference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to ry to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

- Increase the separation between the equipment
- and receiver Connect the equipment into an outlet on a
- circuit different from that to which the receiver is Consult the dealer or an experienced radio/TV
- technician for help. WARNING: Changes or modifications to this

equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

This device complies with Part 15 of the FCC rules Operation is subject to the following two conditions

The RBRC® seal

The RBRC® seal on the Ni-MH battery indicates

recycle these batteries at the end of their useful

lives, when taken out of service within the United

that VTech Communications. Inc. is voluntarily

The RBRC® program provides a convenient

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy participating in an industry program to collect and that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with he FCC criteria. The baby unit shall be installed and used such that parts of all persons' body are alternative to placing used Ni-MH batteries into the maintained at a distance of approximately 8 in (20 cm) or more. The transmitter and antenna of the parent unit shall be held at least 1 in (2.5 cm) from

> This Class B digital apparatus complies with Cana-CAN ICES-3 (B)/NMB-3(B)

(1) this device may not cause harmful interference,

nd (2) this device must accept any interference

received, including interference that may cause

Industry Canada This device complies with Industry Canada licence-

our face.

undesired operation.

exempt RSS standard(s)

Operation is subject to the following two conditions 1) this device may not cause harmful interference, nd (2) this device must accept any interference including interference that may cause undesired operation

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met. This product meets the applicable Industry Canada

technical specifications

RF radiation exposure statement

The baby unit complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. he baby unit should be installed and operated with a minimum distance of 8 in (20 cm) betweer the baby unit and all persons' body. Use of other ccessories may not ensure compliance with FCC RF exposure guidelines. This transmitter must not be co-located or operating in conjunction with any othe antenna or transmitter. This equipment complies also with Industry Canada RSS-102 with respect to Canada's Health Code 6 for Exposure of Humans to

California Energy Commission tery charging testing mode

This baby monitor meets the California Energy mmission (CEC) regulations for energy consumption. Your baby monitor is set up to comply with the energy-conserving standards right out of

Follow the instructions to install and charge the battery. The CEC battery charging testing mode is activated while charging. Even if the parent unit is paired to baby units, the

CEC battery charging testing mode is activated while it is powered off and charging.

For C UL compliance only

Mesures de sécurité importantes Afin de réduire les risques d'incendie, de

toujours ces mesures préventives de base

- lorsque vous utilisez votre téléphone 1. Lisez et comprenez bien toutes les
- Observez toutes les instructions et mises en

garde inscrites sur l'appareil.

3. Débranchez ce téléphone de la prise murale avant de le nettover. N'utilisez pas de nettoyeurs liquides ni en aérosol. N'utilisez qu'un chiffon doux et lég rement humecté.

blessures corporelles ou d'électrocution, suivez

- 1. N'utilisez pas ce produit pr s de l'eau, tel que pr s d'un bain, d'un lavabo, d'un évier de cuisine, d'un bac de lavage ou d'une piscine, ou dans un sous-sol humide ou sous la douche.
- . Ne déposez pas ce téléphone sur un chariot, support ou table chancelants. L'appareil pourrait tomber et tre
- sérieusement endommagé . Évitez d'installer le syst me téléphonique dans les endroits soumis une température extr me, la lumi re directe du soleil ou électriques ou électroniques. Protégez votre éléphone contre les sources d'humidité, la poussi re, les vapeurs et les liquides
- Le boîtier de l'appareil est doté de fentes et d'ouvertures d'aération situées l'arri re ou en dessous. Afin d'emp cher la surchauffe, ces ouvertures ne doivent pas tre obstruées en placant l'appareil sur un lit, divan, tapis ou autre surface similaires. Ne placez pas cet appareil proximité d'un élément de chauffage ni d'une plinthe électrique. De plus, ne l'installez pas dans une unité murale ou un cabinet fermé qui ne
- poss de pas d'aération adéquate. 8. Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur les étiquettes de l'appareil. Si vous ne connaissez pas le voltage de votre maison, consultez votre marchand ou votre fournisseur d'électricité.
- 9. Ne déposez rien sur le cordon d'alimentation. Installez cet appareil dans un endroit sécuritaire. Lo personne ne pourra trébucher sur la ligne d'alimentation ni le cordon téléphonique modulaire. 10. N'insérez iamais d'obiets travers les
- fentes et ouvertures de cet appareil, car ils

- pourraient toucher des points de tension dangereux ou court-circuiter des pi ces, ce qui constituerait un risque d'incendie ou d'électrocution. N'échappez pas de liquides
- dans l'appareil. 11. Afin de réduire les risques d'électrocution, ne démontez pas l'appareil, mais apportezle plutôt un centre de service qualifié s'il doit tre réparé. En enlevant le couvercle. vous vous exposez des tensions dangereuses ou autres dangers similaires Un remontage inadéquat peut tre l'origine d'une électrocution lors d'une utilisation ultérieure de l'appareil. Débranchez l'appareil avant de procéder au nettoyage.
- Utilisez un chiffon humide et doux. 12. Ne surchargez pas les prises de courant et les rallonges.
- 13. Débranchez cet appareil de la prise de courant et communiquez avec le département de service la client le de VTech dans les cas suivants:
- Lorsque le cordon d'alimentation est endommagé ou écorché.
- Si du liquide a été échappé dans Si l'appareil a été exposé une source

Si le produit ne fonctionne pas

d'humidité telle que la pluie ou l'eau.

- normalement en respectant les instructions de fonctionnement. Réglez uniquement les commandes indiquées dans le les instructions de fonctionnement. Les réglages incorrects des autres commandes pourraient provoquer un dommage qui pourrait exiger un travail exhaustif de la part d'un technicien autorisé afin de rétablir le fonctionnement normal de
- Si le produit a été échappé et que le socle et/ou le combiné a été endommagé.
- Si le produit affiche une nette diminution de sa performance. 14. Évitez d'utiliser un téléphone (autre qu'un
- sans fil) pendant un orage. Les éclairs peuvent tre l'origine d'une électrocution. 15. N'utilisez pas le téléphone pour rapporter
- une fuite de gaz proximité de la fuite. En certaines circonstances, une flamm che pourrait tre provoquée lorsque l'adaptateur est branché une prise de courant, ou lorsque le combiné est déposé sur le socle. Ceci est un événement commun associé la fermeture d'un circuit électrique. L'utilisateur ne devrait pas brancher le téléphone une prise de courant, et ne

- adéquate; des gaz industriels (dissolvants de nettoyage, des vapeurs d'essence,
 - 16. Ne placez que le combiné de votre téléphone pr s de votre oreille lorsqu'en mode de conversation
 - 17. Ces adaptateurs ont été conçus pour tre orientés en position verticale ou montés au sol. Les broches ne sont pas concues pour maintenir l'adaptateur en place si celui-ci est barnché dans une prise au plafond ou sous une table/ armoire

- auprès des autorités locales. N'ouvrez pas et ne mutilez pas la pile
- L'électrolyte qui s'en échapperait est corrosif et pourrait causer des br lures L'électrolyte est toxique si avalé.
- les piles afin d'éviter les courts-circuits provogués par des matériaux conducteurs. Rechargez la pile incluse avec cet appareil,

Stimulateurs cardiaques implantés dans l'organisme

uniquement aux téléphones numériques sans L'organisme 'Wireless Technology Research,

LLC (WTR)', une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiagues implantés dans l'organisme. Appuvée par l'Administration des aliments et drogues (FDA) des États-Unis, la firme WTR recommande aux médecins:

devrait pas déposer le combiné chargé sur le socle, si le téléphone se trouve proximité d'un endroit comportant des concentrations de gaz inflammables moins que la ventilation soit adéquate Une flamm che dans un tel endroit pourrait provoquer un incendie ou une explosion. De tels environnements peuvent comprendre: des endroits o l'on utilise de l'oxyg ne médical sans ventilation

etc.); une fuite de gaz naturel, etc.

CONSERVEZ CES INSTRUCTIONS

- MISE EN GARDE : N'utilisez que la pile
- Ne jetez pas la pile au feu. Vérifiez les instructions spécifiques de mise aux rebus
- ou des blessures aux yeux ou la peau. Sovez prudents lorsque vous manipulez

selon les instructions et limites spécifiées dans ce guide d'utilisation.

Les simulateurs cardiaques (s'applique

Avis aux détenteurs de stimulateurs

 Ils doivent tenir le téléphone sans fil une distance d'au moins six pouces du stimulateur cardiaque. Ils ne doivent PAS placer le téléphone sans

fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en marche. Ils doivent utiliser le téléphone sans fil en l'appuvant sur l'oreille qui se trouve dans la

direction opposée au stimulateur cardiaque L'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les détenteurs de simulateurs cardiaques causés par les gens qui utilisent un téléphone sans fil proximité de

À propos des téléphones sans fil

- Alimentation électrique: Les m mes caractéristiques qui constituent des avantages pour les téléphones sans fil affichent également des restrictions. Les appels téléphoniques sont transmis entre le combiné sans fil et le socle par le biais d'ondes radio ; il y a donc la possibilité que vos conversations téléphoniques sans fil soient interceptées par des équipements de réception radio se trouvant dans la portée du combiné sans fil. Pour cette raison, vous ne devez pas percevoir les communications téléphoniques sans fil comme étant aussi
- Alimentation électrique: Le socle de ce téléphone sans fil doit tre branché une prise électrique fonctionnelle. La prise électrique ne doit pas tre contrôlée par un interrupteur mural. Les appels ne pourront pas tre effectués du combiné sans fil si le socle est débranché ou mis hors tension ou si le courant est coupé.

Possibilité d'interférences aux

téléviseurs: Certains téléphones sans fil fonctionnent sur des fréquences pouvant causer des interférences aux téléviseurs et aux magnétoscopes. Pour réduire ou prévenir de telles interférences, ne placez pas le socle du téléphone sans fil pr s ou sur un téléviseur ou magnétoscope. S'il y a présence de parasites, il est conseillé d'éloigner le téléphone sans fil du téléviseur ou du magnétoscope afin de réduire possiblement les interférences.

• Piles rechargeables: Manipulez les piles

avec soin afin de ne pas les court-circuiter

avec des bagues, bracelets ou clés. Les

piles ou le conducteur peut surchauffer et

causer des blessures. Respectez la polarité

adéquate entre la pile et le chargeur Les bloc-piles rechargeables l'hydrure

métallique de nickel: Jetez ces blocs-piles de mani re écologique et sécuritaire. Ne les incinérez pas et ne les percez pas. Tel que les autres piles de ce type, elles pourraient dégager une mati re toxique qui peut causer des blessures corporelles si elles sont br lées ou percées.

imited warranty

What does this limited warranty cover? The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "vou") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship. pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective

Product")? During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge a Materially Defective Product. If we repai the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will etain defective parts, modules, or equipment Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or eplacement to take approximately 30 days.

How long is the limited warranty period? The limited warranty period for the Product extends

for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is

What is not covered by this limited warranty? This limited warranty does not cover: 1. Product that has been subjected to misuse,

accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion; or 2. Product that has been damaged due to repair, alteration or modification by anyone other than an

authorized service representative of VTech: or

3. Product to the extent that the problem experienced

is caused by signal conditions, network reliability,

4. Product to the extent that the problem is caused by use with non-VTech accessories; or

or cable or antenna systems: or

5. Product whose warranty/quality stickers, product

- serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or used for rental purposes); or
- customer controls, and installation or repair of systems outside the unit.

Except as provided by applicable law, you assume

- 1. Return the entire original package and contents including the Product to the VTech service
- and the date of purchase or receipt; and 3. Provide your name, complete and correct mailing address, and telephone number.

agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There

- 6. Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products
- 7. Product returned without a valid proof of purchase (see item 2 on the next page); o 8. Charges for installation or set up, adjustment of

How do you get warranty service? To obtain warranty service in the USA, please visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377. NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call.

the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited warranty.

What must you return with the Product to get warranty service?

- location along with a description of the malfunction 2. Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model)

This warranty is the complete and exclusive

are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification. State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other

rights, which vary from state to state or province to

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cos of substitute equipment, and claims by third parties)

limitation or exclusion may not apply to you. Please retain your original sales receipt as proof

incidental or consequential damages, so the above

provinces do not allow the exclusion or limitation of

resulting from the use of this Product. Some states/

Frequency Crystal controlled PLL synthesizer Baby unit: 2405 - 2475 MHz Parent unit: 2405 - 2475 MHz frequency Channels LCD 2.8" Color LCD (WQVGA 320x240 pixel) Maximum power allowed by FCC Nominal effective and IC. Actual operating range may vary according to environmental range conditions at the time of use.

echnical specifications

requirements Baby unit power adapter: Output: 6V DC @ 500mA Parent unit power adapter

Parent unit: 3.6V Ni-MH battery

Output: 6V DC @ 500mA



© 2016 VTech Communications, Inc. All rights reserved. 11/16. VM3251-X_CIB_V1

Specifications are subject to change without notice.