Go to www.vtechphones.com to register your product for enhanced warranty support and the latest VTech product news.

TALK

vtech

DM1211 DM1211-2

Enhanced Range Digital Audio Monitor









on purchasing your new VTech product. Before using this product, please read Important safety instructions.

Congratulations

This manual has all the feature operations and troubleshooting necessary to install and operate your new VTech product. Please review this manual thoroughly to ensure proper installation and operation of this innovative and feature rich VTech product

For support, shopping, and everything new at VTech, visit our website at www.vtechphones.com

What's in the box







1 set for DM1211; 2 sets for DM1211-2


Install the battery

The parent unit runs on rechargeable battery or AC power. To continuously monitor your baby, make sure you use both battery and AC power at the same time. With the battery alone, the parent unit can cordlessly run for a short time

⊘NOTES


- Use only the battery supplied with this product. . If the parent unit will not be used for a long time
- disconnect and remove the battery to prevent

Install the battery as shown below

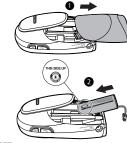

PNOTE

 Make sure the THIS SIDE UP is facing up while inserting the battery

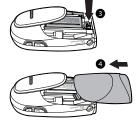

Replace the battery


To replace the battery, unplug the battery connector from the socket, and then pull the battery out of the battery compartment. Follow the steps above to install the battery


Connect and charge the

⊘NOTES

- Use only the power adapters supplied with this product.
- Make sure the electrical outlets are not controlled
- The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet
- Make sure the parent unit, the baby unit and the power adapter cords are out of reach of children

Connect the baby monitor

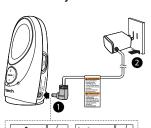

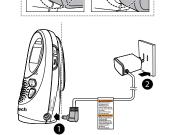

Charge the parent unit battery When you have connected the parent unit and

installed its battery for the first time, it powers **⊘**NOTE on automatically. The battery icon indicates the battery status (see the following table).

- The parent unit battery is fully charged after 11 hours of continuous charging
- It takes longer to charge the battery when the parent unit is turned on. To shorten the charging time, turn the parent unit off while charging

Battery

The standby time varies depending on the sensitivity level you set, your actual use, and the age of the battery.

Action

indicators	status		
The battery icon is off.	No battery is installed but operates using AC power.	Install the parent unit battery. Charge without interruption (at least 30 minutes).	
The screen displays LOW BATTERY and . The Ight flashes.	The battery has very little charge and may be used for only a short time.	Charge without interruption (about 30 minutes).	
The battery icon becomes solid .	The battery is fully charged.	To keep the battery charged, connect it to power socket when not in use.	

Before use


This baby monitor is intended as an aid. It is not a substitute for proper adult supervision, and should not be used as such

Test your audio monitor

You may test the baby monitor before initial use and at regular times thereafter.

()CAUTION

For hearing protection, make sure the parent unit is more than 6.5 feet (2 meters) away from the baby unit. If you hear any high-pitched noise, move the parent unit further until the noise stops. You can also press VOL on the parent unit to lower or mute the

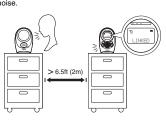

- 1. Make sure your baby unit and parent unit are
- 2. Speak towards the microphone of the baby unit. You will hear the sound at the parent unit, and see the visual sound indicators light up.

$\boldsymbol{\mathscr{G}}$ NOTE

When the parent unit displays NOT LINKED and If flashes, move the parent unit closer to the baby 2 meters). You can also check if the baby monitor is connected to a live power socket and switched

Increase the speaker volume of the parent unit if you cannot hear the sounds transmitted from the baby unit.

()CAUTION

baby's crib or playpen.

Keep the baby unit out of the reach of the baby. Never place or mount the baby unit inside the

Place the baby unit more than 3 feet (1 meter) away from your baby

Positioning the baby monitor



Place the parent unit more than 6.5 feet (2 meters) away from the baby unit.



> 6.5ft (2m)








- The default volume of your parent unit is level 3. If you experience high-pitched screeching noise from your baby monitor while positioning:
- Make sure your baby unit and parent unit are more than 6.5 feet (2 meters) apart, OR Turn down the volume of your parent unit.

Operating range

The operating range of the baby monitor is up to 1,500 feet (450 meters) outdoors or 160 feet (50 meters) indoors. The actual operating range may vary depending on the environmental conditions, and other interferences such as walls, doors, and other obstructions.

Overview

Baby unit overview

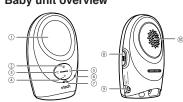

- manually.
- Press to decrease the speaker volume

(り(On/off)

- Press and hold to power off, and the
- Press to increase the speake volume 6 Microphone

POWER light


On when the baby unit is turned on PAGE

Press to start or stop paging parent

10 Speaker

9 Power jack

Parent unit overview

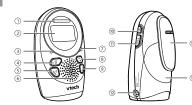

The visual sound indicator shows the

sound level detected by the baby unit.

detected by the baby unit.

One to three green

lights indicate a moderate sound level

Additional red lights

indicate a higher sound level detected

by the baby unit (e.g. baby crying

Visual sound indicator

Night light

- On when night light is turned on
- Off when night light is turned off
- Press to turn the night light on or off.

- Press to power on, and the power
- power light turns off
- Press to enter the menu
- While in a menu, press to return to the previous menu. 6 Speaker

Press to decrease the speaker

Press repeatedly until the volume

reaches the minimum to turn it off

While in a menu, press to scroll down.

Ⅲ Battery LED Light on when the battery is being

loudly).

LCD display

Microphone

volume

- charged.
- Light flashes when the battery is low and needs charging.
- Light off when the parent unit is running on AC power without battery installed, or the parent unit is running on battery only.

- Press to increase the speaker volume While in a menu, press to scroll up.
- SELECT While in a menu, press to choose an item, or save a setting
- (l)(On/off) Press and hold to power on, the screen turns on
- Press and hold again to power off, the screen turns off While in a menu, press to return to

11 TALK

- Press and hold to talk to the baby.
- 12 Power jack 13 Belt clip
- 14 Battery compartment cover

Parent unit status icons

- Connection status I displays when strong signal strength is detected between the
- baby unit and the parent unit. I displays when moderate signal strength is detected between the baby unit and the parent unit.
- T displays when the weak signal strength is detected between the baby unit and the parent unit.

Night light

((•))

Sound alert Displays when the sound alert of the

Vibration alert

Volume off Displays when the patient unit

Battery status → animates when the battery is charging.

speaker volume is turned off.

- displays solid when the battery is fully charged. flashes when the battery is in low
- level and needs charging. No battery icon displays when there is no battery installed.

Parent unit display screen messages

Il displays when strong signal strength is detected between the baby unit and the parent unit.		LINKED	•	The link between the parent unit and the baby unit is established.	
Tidisplays when moderate signal strength is detected between the baby unit and the parent unit. Tidisplays when the weak signal strength is detected between the		LOW BATTERY	•	The parent unit uses only the rechargeable battery pack and it needs to be recharged.	•
baby unit and the parent unit. If flashes when the link between the baby unit and the parent unit is lost.		NOT LINKED	•	The link between the parent unit and the baby unit is lost continuously for over 10 seconds.	
light light On when the night light is turned on.		PAGING	•	Both idle parent units are being paged by the baby	F
Sound alert				unit.	
Displays when the sound alert of the parent unit is turned on.		SAVED	•	Your selection has been saved.	•
Flashes when there are loud sounds detected from the baby unit.		SEARCHING	•	The parent unit is out of range of the baby unit, or the	
/ibration alert				baby unit is out of power.	
Displays when the vibration alert of the parent unit is turned on. Flashes when there are loud sounds detected from the baby unit. //olume off Displays when the patient unit speaker volume is turned off.		TALK	•	You are using the parent unit to talk to your baby.	
		TALKBACK •		Someone is using the other parent unit to talk to the baby, and the voice is	
				also broadcasting to your parent unit. No sound will	,

transmit from the baby unit

to any parent unit during


For DM1211-2 onl

Using the baby monitor

Power on or off the baby unit

power light turns on. The power light turns off

- unit. The screen turns on.
- Press and hold & again to power off the

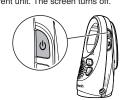

The parent unit powers on automatically once it is connected to power socket or battery installed The baby unit also powers on automatically once

Adjust the speaker volume for baby unit

Press ^{VOL} or ^{VOL} on the baby unit at any

You can adjust the speaker volume from

You can choose to hear sounds from the baby

Sensitivity

Level

HIGHES

HIGH

MEDIUM

LOWEST


• Press 0 to power on the baby unit. The

Press and hold \odot to power off the baby unit.




Power on or off the parent unit

- Press and hold Φ to power on the parent

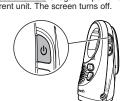

confirmation tone unit all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby unit. The higher the sensitivity level, the more

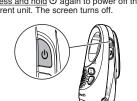





VOLUME 1 to VOLUME 5, or turn it off. The speaker volume is preset to VOLUME 3.

OFF, the screen displays 4

sensitive the baby unit is in detecting sounds

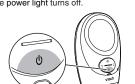

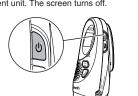



Adjust the speaker volume for parent unit

When the speaker volume is set to VOLUME

Press ^{VOL} or ^{VOL} when the parent unit is not

Adjust the sound sensitivity of the baby unit

for transmitting to the parent unit. The VOX

sensitivity level is preset to HIGHEST.

High sensitivity

To enter the **VOX Level** menu of the parent unit, the baby unit must be turned on.

Description

Highest VOX sensitivi

The parent unit speaker i

constantly on, and you will hear all sounds (including

background noises) from

High VOX sensitivity

The parent unit speake

turns on for soft babbling

your baby. It remains

quiet when your baby sleeps soundly

Medium VOX sensitivi

The parent unit speaker

and louder sounds fron

turns on for loud babbling

your baby. It remains quiet

when your baby makes

Low VOX sensitivity

The parent unit speake

turns on for crying and louder sounds from you

when your baby makes soft sounds.

Lowest VOX sensitivity

The parent unit speaker

screeching sounds from

vhen your baby makes

1. Press 🛳 when the parent unit is not in

2. Press SELECT to select VOX LEVEL

3. Press VOL or VOL to choose the VOX

sensitivity level

irns on for loud crying o

your baby. It remains quie

baby. It remains quiet

vour baby's room.

Sound alert

If you want the parent unit alerts you with sound. especially when the baby unit detects loud sounds, you can turn on the sound alert feature. This feature is preset to **OFF**.

Press SELECT to confirm your selection.

The screen displays **SAVED** and you hear a

- Once this feature is on, (() is shown on LCD display. When the visual sound indicator hits the red light range, i.e. the baby unit detects loud sounds, your parent unit beeps and () flashes
- Press MENU when the parent unit is not in
- Press ^{VOL} or ^{VOL} to choose **SOUND ALERT**, then press SELECT.
- 3. Press VOL or VOL volume on or OFF. Press SELECT to confirm your selection.
 The screen displays SAVED and you hear a confirmation tone.

The sound alert setting on each parent unit is

Vibration alert You can set your parent unit to vibrate and alert you, whenever the baby unit detects loud sounds. This feature is preset to OFF.

Once this feature is on, si shown on LCD display. When the visual sound indicator hits the red light range, i.e. the baby unit detects loud sounds, your parent unit vibrates and a flashes.

- 1. Press $\stackrel{\clubsuit}{\text{\tiny{MENU}}}$ when the parent unit is not in use Press ^{VOL} or ^{VOL} to choose VIBE ALERT,
- then press SELECT. 3. Press VOL or VOL to choose ON or OFF. 4. Press **SELECT** to confirm your selection.

The screen displays SAVED and you hear a

- confirmation tone. **O**NOTES
- the parent unit vibrates briefly after you press SELECT. Each time you set the vibration alert to ON.
- The vibration alert setting on each parent unit is

Niahtliaht

Both your parent unit(s) and baby unit allow you to turn on or off the nighlight on the baby unit.

Turn on/off the nightlight using the baby unit:

- 1. Press o- to turn on the nightlight.
- 2. Press -o- again to turn off the nightlight. Turn on/off the nightlight using the

parent unit: 1. Press MENU when the parent unit is not in

- Press ^{VOL} or ^{VOL} to choose NIGHTLIGHT, then press SELECT.
- Press ^{vol.} or ^{vol.} to choose ON or OFF.
- 4 Press SELECT to confirm your selection The screen displays SAVED and you hear a confirmation tone.

PNOTES

- When the nightlight is turned on, the parent unit displays .
- The nightlight on baby unit operates even when the parent unit battery is out of charge or has been turned off.
- If the parent unit lost link, the nightlight icon on its LCD display will disappear, regardless of the nightlight status

Language

You can select a language (English, Spanish or French) to be used in all screen displays. The language is preset to English

- 1. Press MENU when the parent unit is not in Press ^{VOL} or ^{VOL} to choose LANGUAGE,
- then press **SELECT**. 3. Press ^{VOL} or ^{VOL} to choose **ENGLISH**, ESPANOL, or FRANCAIS.
- 4. Press **SELECT** to confirm your selection. The screen displays SAVED and you hear a confirmation tone.

⊘NOTE

The language setting on each parent unit is

Set default

then press SELECT.

the previous menu.

the other parent unit.

Find/page the parent unit

Talk to the baby unit

made.

PNOTES

PNOTES

Use this feature to restore to the default settings. Restoring the default settings on one parent unit will also reset the shared settings for VOX sensitivity level of the other parent unit.

Press ^{VOL} or ^{VOL} to choose YES or NO.

4. When you choose YES, press SELECT to

confirm your selection. The screen displays

SAVED and you hear a confirmation tone.

When you choose NO. press SELECT to

You can broadcast messages from a parent unit

have two parent units, you can use both of them

parent unit. The screen displays TALK when

to the baby unit and the other parent unit. If you

Press and hold TALK on the side of the

the voice connection to the baby unit is

Speak towards the MIC on the parent unit.

Your voice is broadcast to the baby unit and

If you have two parent units, and you use one of

The other parent unit displays TALKBACK

If speaker volume of the parent unit has been

Use this feature to locate misplaced parent units.

1. Press PAGE on the baby unit. All idle parent

2. To end paging, press any key on the parent

Paging rings all parent units even if the speaker volume of parent unit is set to **VOLUME OFF**.

The baby unit cannot page any parent unit that is turned off, out of range, or talking to the baby unit

unit, or press PAGE on the baby unit

units ring and display PAGING.

o any parent unit during broadcasting.

them to talk to you baby, your voice will broadcast to both the baby unit and the other parent unit.

However, no sound will transmit from the baby unit

at the same time to talk to the baby unit.

confirm your selection. The screen displays

- Avoid putting it near heating appliances and 1. Press some when the parent unit is not in devices that generate electrical noise (for example, motors or fluorescent lamps). use
- Press ^{VOL} or ^{VOL} to choose SET DEFAULT, DO NOT expose it to direct sunlight or moisture

follow these guidelines:

General product care

Avoid dropping the product or treating it roughly.

To keep this product working well and looking good,

- Clean with a soft cloth
- DO NOT immerse the parent unit and the baby unit in water and do not clean them under the tap.
- DO NOT use cleaning spray or liquid cleaners Make sure the baby unit and parent unit are dry before you connect them to the mains again

Storage

witch on the

unit?

When you are not going to use the baby monitor for some time, remove the rechargeable battery from the parent unit. Store the parent unit, the baby unit and the adapters in a cool and dry place.

Frequently asked questions

Below are the questions most frequently asked about the baby monitor. If you cannot find the answer to your question, visit our website at www.vtechphones.com or call 1 (800) 595-9511 for customer service.

of call I (600) 393-9311 for custoffier service.		
Why does the baby monitor not respond normally?	Try the following (in the order listed) for common cure: 1. Disconnect the power to the baby unit and the parent unit. 2. Remove the batteries in the parent unit. Then, install the batteries again. 3. Wait a few minutes before connecting power back to the baby unit and the parent unit. 4. Turn on the baby unit and the parent unit. 5. Wait for the parent unit to synchronize with the baby unit. Allow up to one minute for this to take place.	
Why doesn't the screen of the parent unit	Perhaps the rechargeable battery of the parent unit is empty and the parent unit is not connected to the	

power. Insert the appliance plug

into the parent unit and put the

adapter in a wall socket.

high-pitched than 6.5 feet (2 meters) away from each other. Why does the The haby unit also detects other sounds than those of your baby. Adjust the VOX sensitivity level to too quickly to other sounds? a lower level or adjust the speaker olume on the parent unit. The volume of the parent unit may Why don't I hea have set too low. Press VOL to ncrease the volume level abv crv? You may have set a low VOX sensitivity level. See Adjust the sound sensitivity of the baby unit to change the setting. Why does the If the sound alert feature is- on nere is sound detected from the baby unit. The baby unit may be out of range. Move the parent unit closer to the baby unit (but not less than 6.5 feet). If the parent unit is powered by the provided battery, it may not have enough charge for the parent unit to perform normally. Charge the battery in the parent unit for up to 11 hours. Why can't I The baby unit may be out of establish a range. Move the parent unit connection? closer to the baby unit (but not Why is the less than 6.5 feet). Other electronic products may every now and

Perhaps the baby unit is not

he baby unit to the power.

The units may be too close to

each other Make sure the parent

unit and the baby unit are more

onnected to the power. Connect

Why doesn't the

POWER light

go on when I

unit?

witch on the

Why does the

baby monitor

then? Why are

nterruptions?

here sound

Why doesn't

the battery icor

shown on LCD

display even I

battery?

nportant safety

When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- 1. Follow all warnings and instructions marked on the product.
- Adult setup is required.

The RBRC® seal.

- This product is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.
- . This product is not intended for use as a medical monitor. 5. Do not use this product near water. For example, do not use it next to a bath tub, wash bowl, kitchen sink, laundry tub or swimming
- pool, or in a wet basement or shower CAUTION: Use only the batteries indicated in this manual. There may be a risk of explosion if a wrong type of battery is used for the parent unit. Use only the supplied rechargeable battery or replacement battery pack (BT166342/ BT266342) for the parent unit. Do not dispose of batteries in a fire. They may explode. Dispose of used battery according to the information in
- . Use only the adapters included with this product. Incorrect adapter polarity or voltage can seriously damage the product. Baby unit power adapter: Output: 6V DC 400mA; Parent unit power adapter Output: 6V DC 400mA.
- 8. The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling under-the-table or cabinet outlet.
- 9. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- 10.Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 11.Unplug the power cords before replacing 12.Do not cut off the power adapters to replace
- them with other plugs, as this causes a hazardous situation
- 13.Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or crimped.

14. This product should be operated only from Cautions the type of power source indicated on the marking label. If you are not sure of the type

dealer or local power company.

extension cord.

the product.

components.

for damagé.

phones, scanners, etc.

15.Do not overload wall outlets or use an

16.Do not place this product on an unstable table.

area where proper ventilation is not provided.

Slots and openings in the back or bottom

of this product are provided for ventilation. To protect them from overheating, these

openings must not be blocked by placing the

product on a soft surface such as a bed, sofa

or rug. This product should never be placed

product through the slots because they may

touch dangerous voltage points or create a

short circuit. Never spill liquid of any kind on

not disassemble this product, but take it to

an authorized service facility. Opening or

removing parts of the product other than

20 You should test the sound reception every

22.Be aware of possible loss of privacy while

specified access doors may expose you to

dangerous voltages or other risks. Incorrect

reassembling can cause electric shock when

time you turn on the units or move one of the

using public airwayes. Conversations may be

picked up by other nursery monitors, cordless

23. Children should be supervised to ensure that

persons (including children) with reduced

physical, sensory or mental capabilities,

by a person responsible for their safety.

SAVE THESE INSTRUCTIONS

unless they have been given supervision or instruction concerning use of the appliance

or lack of experience and knowledge,

near or over a radiator or heat register

18. Never push objects of any kind into this

19.To reduce the risk of electric shock, do

the product is subsequently used.

21.Periodically examine all components

they do not play with the product.

24. The product is not intended for use by

shelf, stand or other unstable surfaces.

17. This product should not be placed in any

- 1. Use and store the product at a temperature between 32°F and 104°F. of power supply in your home, consult your 2. Do not expose the product to extreme cold
 - heat or direct sunlight. Do not put the product close to a heating source.
 - 3. Batteries should not be exposed to excessive heat such as bright sunshine or fire
 - ▲ Warning—Strangulation Hazard—Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3 ft away). Do not remove this tag.
 - Never place the baby unit inside the baby's crib or playpen. Never cover the baby unit or parent unit with anything such as a towel or a blanket.
 - 6. Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible: wireless routers radios cellular telephones intercoms, room monitors, televisions, personal computers, kitchen appliances and

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless devices):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients

- Should keep wireless devices at least six inches from the pacemaker. Should NOT place wireless devices directly
- over the pacemaker, such as in a breast pocket, when it is turned ON. WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons

using wireless devices. Electromagnetic fields (EMF)

This VTech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based on scientific evidence available today

The RBRC® seal

that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives when taken out of service within the United States and Canada

municipal waste, which may be illegal in your area. VTech's participation in RBRC® makes it easy for you to drop off the spent battery at local retailers participating in the RBRC® program or at authorized VTech product service centers. Please call **1** (800) 8 BATTERY® for information on Ni-MH battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment



BBBC® and 1 (800) 8 BATTERY® are registered trademarks of Rechargeable Battery Recycling

FCC and IC regulations

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment
- circuit different from that to which the receiver is
- Consult the dealer or an experienced radio/TV
- technician for help.

expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystande according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The baby unit shall be installed and used such that parts of all persons' body are maintained at a distance of approximately 8 in (20 cm) or more The transmitter and antenna of the parent unit shall be held at least 1 in (2.5 cm) from your face. This Class B digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B)

Industry Canada

This device complies with Industry Canada licence-

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation. The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

This product meets the applicable Innovation, Science and Economic Development Canada technical

RF radiation exposure statement

The baby unit complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The baby unit should be installed and operated with a minimum distance of 8 in (20 cm) between the baby unit and all persons' body. For body worn operation, this parent unit has been tested and meets the FCC RF exposure guidelines when used with the accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitte This equipment complies also with Industry Canada RSS-102 with respect to Canada's Health Code 6 for Exposure of Humans to RF Fields

lifornia Energy Commissior attery charging testing mode

This baby monitor meets the California Energy Commission (CEC) regulations for energy consumptio Your baby monitor is set up to comply with the energyconserving standards right out of the box.

Follow the instructions to install and charge the battery. The CEC battery charging testing mode is ctivated while charging.

Even if the parent unit is paired to baby unit, the CEC battery charging testing mode is activated while it is powered off and charging.

For c-UL compliance only

Mesures de sécurité importantes

Lorsque vous utilisez votre appareil, vous devriez toujours suivre certaines mesures de précaution de base afin de réduire les risques d'incendie. d'électrocution et de blessures corporelles, dont ceux qui suivent:

- 1. Observez toutes les instructions et mises en garde inscrites sur l'appareil
- 2. L'installation par un adulte est requise.
- Ce produit a été conçu pour être un dispositif d'appoint seulement. Il n'est pas le remplacement d'une supervision responsable et adéquate par un adulte et ne devrait pas être utilisé comme telle.
- 4. Ce produit n'est pas conçu pour être utilisé en tant
- N'utilisez pas cet appareil près de l'eau ni de toute autre source d'humidité, par exemple, près d'une baignoire, cuve à lessive, évier de cuisine, dans un sous-sol humide ni près d'une piscine, dans un soussol humide ou une douche
- MISE EN GARDE: Il peut y avoir un risque d'explosion si vous utilisez le mauvais type de piles pour l'unité du parent. N'utilisez que le bloc-piles echargeable inclus ou le bloc-piles de rechange (BT166342/BT266342). N'incinérez pas les piles Celles-ci risqueraient d'exploser. Jetez les piles usées selon les renseignements suivant le sceau du BBBCMD
- polarité ou la tension serait inadéquate risque d'endommager sérieusement le produit et mettre votre sécurité en péril. daptateur de l'unité du bébé: Sortie : 6 V CC 400 mA. Adaptateur de l'unité du parent: Sortie : 6 V

7. N'utilisez que les adaptateurs inclus avec ce

produit. L'utilisation d'un adaptateur dont la

- 8. Lorsqu'ils sont branchés dans une prise de courant, les adaptateurs secteur ont été conçus pour être orientés correctement, soit à la verticale ou au plancher. Les broches n'ont pas été conçues pour supporter le poids du bloc d'alimentation et le maintenir en place si celuici est branché dans une prise au plafond, sous une table ou dans ur
- 9. Pour les PRODUITS À BRANCHER À UNE PRISE DE COURANT, la prise de courant doit être installée près du produit, afin d'assurer une accessibilité sécuritaire à la prise de courant.
- 10. Débranchez ce produit de la prise de courant avant de procéder au nettoyage. N'utilisez pas de nettoyants en aérosols. Utilisez un chiffon humide pour le nettoyer.
- 11. Débranchez les cordons d'alimentation avant de remplacer le bloc-piles.
- 12. Ne coupez pas les cordons d'alimentation pour remplacer les fiches, car ceci peut présenter un danger potentiel
- 13. Ne laissez aucun obiet reposer ni appuver sur le cordon d'alimentation. N'installez pas cet appareil dans un endroit où l'on risque d'écraser le cordon d'alimentation ou de le piétiner. 14. Ne faites fonctionner cet appareil qu'avec le type
- d'alimentation indiqué sur l'étiquette. Si vous ne connaissez pas le type d'alimentation que vous possédez à votre domicile, consultez votre marchand ou votre compagnie locale d'électricité
- 15. Ne surchargez pas les prises de courant murales ni les rallonges électriques.
- Ne placez pas cet appareil sur un chariot, meuble. trépied, support de montage ni table chancelants.
- 17. Les trous et ouvertures du boîtier, situés à l'arrière de l'appareil ou sous celui-ci, servent à aérer l'appareil. Pour l'empêcher de surchauffer, ne bloquez sous aucun prétexte ces ouvertures et n'empêchez pas l'aération adéquate de l'appareil en le plaçant sur un lit, divan, tapis ou toute autre surface similaire. De même, ne le positionnez pas à proximité ni au-dessus d'une source de chaleur ou d'un calorifère. De plus, ne placez pas l'apparei dans un endroit avant de vous assurer qu'il y ait une bonne circulation d'air.
- 18. N'enfoncez iamais d'obiets à travers les ouvertures de cet appareil, car ils pourraient entrer en contact avec des points de tension dangereux ou causer des courts-circuits qui neuvent dégénérer en incendies ou en risques d'électrocution. Ne renversez jamais de liquide dans ce produit. 19 Afin de réduire les risques d'électrocution, ne
- démontez pas cet appareil, mais apportez-le dans un centre de service autorisé. L'ouverture du boîtier ou le retrait de toutes pièces que contien

cet appareil, à l'exception de l'accès autorisé à certaines portes ou ouvertures, risque de vous exposer à des points de tension dangereux ou d'autres dangers. Un remontage incorrect peut par la suite présenter des risques d'électrocution 20. Vous devriez tester la réception chaque fois que

cause interference with your baby

monitor. Try installing your baby monitor as far away from these

lectronic devices as possible.

The battery may not be working.

ontact our customer service to

ourchase a new battery.

- vous mettez l'appareil en fonction 21. Examinez les composantes afin de vérifier si celles-ci ne sont pas endommagées.
- 22. Sovez avisé de la perte de la confidentialité lorsque vous utilisez les ondes publiques. Les conversations peuvent être entendues par d'autres moniteurs de bébé, des téléphones sans fil, des scanneurs, etc.
- 23. Les enfants devraient être supervisés afin de vous
- assurer qu'ils ne jouent pas avec l'appareil. 24. Le produit n'est pas conçu pour être utilisé par des personnes (incluant des enfants) aux capacités physiques, sensorielles ou mentales réduites ou qui manquent d'expérience et de connaissances à moins qu'on leur ait donné suffisamment de supervision ou d'instructions relativement à l'utilisation de l'appareil par une personne responsable de leur sécurité.

CONSERVEZ CES INSTRUCTIONS

Mises en garde

- 1. Utilisez et entreposez le produit à une température entre 0° C (32°F) et 40°C (104° F).
- 2. N'exposez pas cet appareil à des froids ou des chaleurs extrêmes, ainsi qu'à la lumière directe du soleil. Ne l'installez pas près d'une source de
- 3. Le bloc-piles ne doit pas être exposé à la chaleur excessive telle que la lumière du soleil ou au feu.
- 4. Assurez-vous que le moniteur et le cordon de l'adaptateur sont toujours hors de portée des enfants, à au moins 1 mètre (3 pieds) de l'enfant ou du berceau pour éviter tout risque de strangulation. 5. Ne jamais placer le moniteur à l'intérieur du
- berceau ou du parc de bébé. Ne jamais couvrir le moniteur ou l'unité (s) portative avec un article tel une serviette ou une couverture. 6. D'autres équipements électroniques peuvent
- produire des interférences sur votre moniteur vidéo et audio. Tentez d'installer votre moniteur vidéo ou audio à l'écart des appareils électroniques tels que des routeurs sans fil, radios, téléphones cellulaires, interphones, moniteurs, téléphones, ordinateurs personnels, électroménagers et téléphones sans

Stimulateurs cardiaques implantés dans Les simulateurs cardiaques (ne s'applique qu'aux

dispositifs numériques sans fil): L'organisme 'Wireless Technology Research, LLC (WTR)', une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration des ents et drogues (FDA) des États-Unis, la firme WTR recommande aux médecins:

Avis aux détenteurs de stimulateurs cardiaques

- Vous devriez maintenir les dispositifs sans fil à au
- moins six pouces du simulateur cardiaque. Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en marche.

L'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les détenteurs de simulateurs cardiaques causés par les gens qui utilisent dispositifs sans fil à proximité de ceux-ci

Champs électromagnétiques (EMF)

Ce produit de VTech est conforme à toutes les normes se rapportant aux champs électromagnétiques (EMF) standard. Si vous le manipulez correctement en suivant les instructions de ce guide, son utilisation sera sécuritaire pendant de nombreuses années. selon les meilleures évidences scientifiques dont nous disposons aujourd'hui.

Limited warranty

What does this limited warranty cover? The manufacturer of this VTech Product warrants to

the holder of a valid proof of purchase ("Consumer" or "vou") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following ns and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")? During the limited warranty period, VTech's authorized

service representative will repair or replace at VTech's option, without charge, a Materially Defective Product. If we repair the Product, we may use new

or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever

What is not covered by this limited warranty?

- This limited warranty does not cover: Product that has been subjected to misuse accident, shipping or other physical damage improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion: or
- Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech: or Product to the extent that the problem experie is caused by signal conditions, network reliability, or
- cable or antenna systems: or Product to the extent that the problem is caused by use with non-VTech accessories; or 5 Product whose warranty/quality stickers product
- serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes): or
- Product returned without a valid proof of purchase (see item 2 below); or Charges for installation or set up, adjustment of customer controls, and installation or repair of

systems outside the unit.

1 (800) 595-9511. In Canada, go to

How do you get warranty service? To obtain warranty service in the USA, please visit our ebsite at www.vtechphones.com or call

ww.vtechcanada.com or call 1 (800) 267-7377.

Except as provided by applicable law, you assume the

risk of loss or damage during transit and transportation

NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call.

incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify yo and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited

and are responsible for delivery or handling charges

What must you return with the Product to get warranty service?

- Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty: and Include a "valid proof of purchase" (sales receipt)
- identifying the Product purchased (Product model) and the date of purchase or receipt; and

 3. Provide your name, complete and correct mailing

address, and telephone number.

Other limitations

This warranty is the complete and exclusive ment between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product, There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification. State/Provincial Law Rights: This warranty gives you

specific legal rights, and you may also have other rights, which vary from state to state or province to province Limitations: Implied warranties, including those of

fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/provinces do not allow limitations on now long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states provinces do not allow the exclusion or limitation of ncidental or consequential damages, so the above limitation or exclusion may not apply to you.

Please retain your original sales receipt as proof

The RBRC® seal on the nickel-metal battery indicates

The RBRC® program provides a convenient alternative to placing used nickel-metal batteries into the trash or to protecting our environment and conserving natural

resources.

FCC Part 15

Commission (ECC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment

- Recrient or relocate the receiving antenna.
- Connect the equipment into an outlet on a

Changes or modifications to this equipment not

Technical specifications

Frequency control	Crystal controlled PLL synthesizer	
Transmit frequency	Baby unit: 1921.536-1928.448 MHz Parent unit: 1921.536-1928.448 MHz	
Channels	5	
LCD	35 (x) x 21.2 (y) mm B&W LCD	
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.	
Power requirement	Parent unit: 2.4 V Ni-MH battery Baby unit power adapter: Output: 6V DC 400mA Parent unit power adapter: Output: 6V DC 400mA	

ons are subject to change without notice © 2018 VTech Communications, Inc. All rights reserved. 02/18. DM1211 CIB V2.0

