


EUT	Mobile Computer	Date of Test	2024-07-21
Factor	VULB 9162	Temp. / Humidity	22°C /58%
Polarity	Horizontal	Site / Test Engineer	AC2 / Owen
Test Mode	802.11ax-20MHz_Band5_RX_CH 1 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

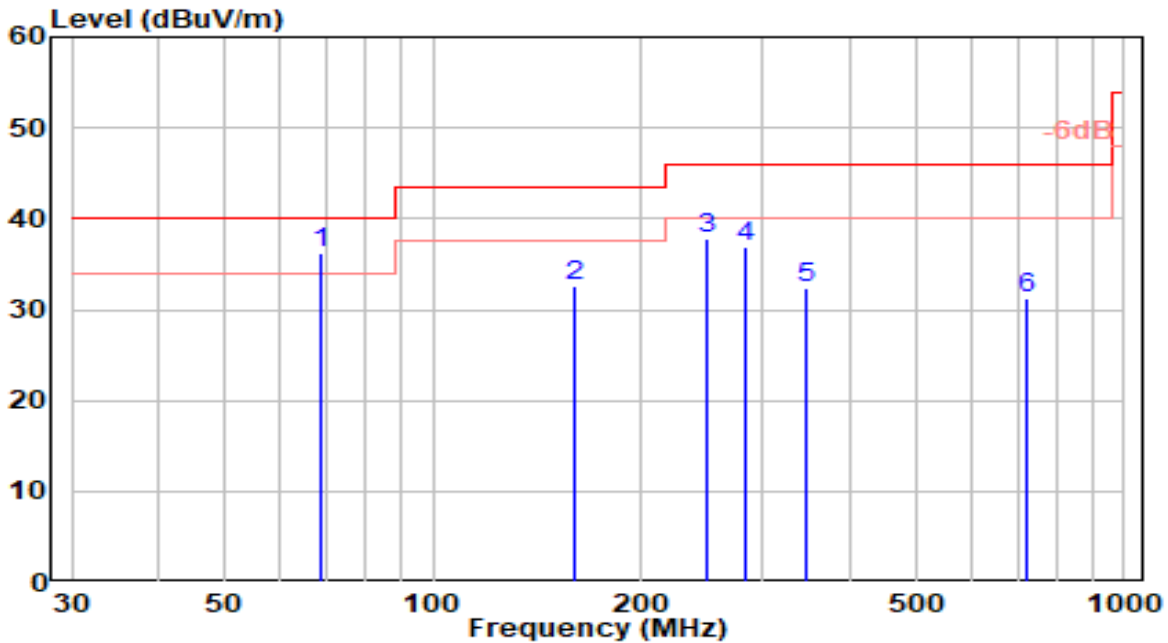


No	Frequency (MHz)	Reading (dBUV)	C.F (dB/m)	Measurement (dBUV/m)	Margin (dB)	Limit (dBUV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	68.910	20.24	16.00	36.23	-3.77	40.00	288	216	QP
2		159.860	17.11	15.47	32.58	-10.92	43.50	150	150	QP
3		248.930	18.07	19.83	37.90	-8.10	46.00	100	310	QP
4		282.170	16.77	20.20	36.97	-9.03	46.00	100	210	QP
5		346.760	10.11	22.34	32.45	-13.55	46.00	100	20	QP
6		721.540	2.67	28.50	31.17	-14.83	46.00	100	240	QP

Note:

- "*", means this data is the worst emission level.
- C.F (Correction Factor) = Antenna Factor (dB/m)+ Cable Loss (dB).
- Measurement (dBUV/m) = Reading(dBUV) + C.F (Correction Factor).
- The emission levels of other frequencies are very lower than the limit and not show in test report.
- The amplitude of radiated emissions (frequency range from 9kHz to 30MHz) is that proximity to ambient noise, which also are attenuated more than 20dB below the permissible value. Therefore, the data is not presented in the report.

EUT	Mobile Computer	Date of Test	2024-07-21
Factor	VULB 9162	Temp. / Humidity	22°C /58%
Polarity	Vertical	Site / Test Engineer	AC2 / Owen
Test Mode	802.11ax-20MHz_Band5_RX_CH 1 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

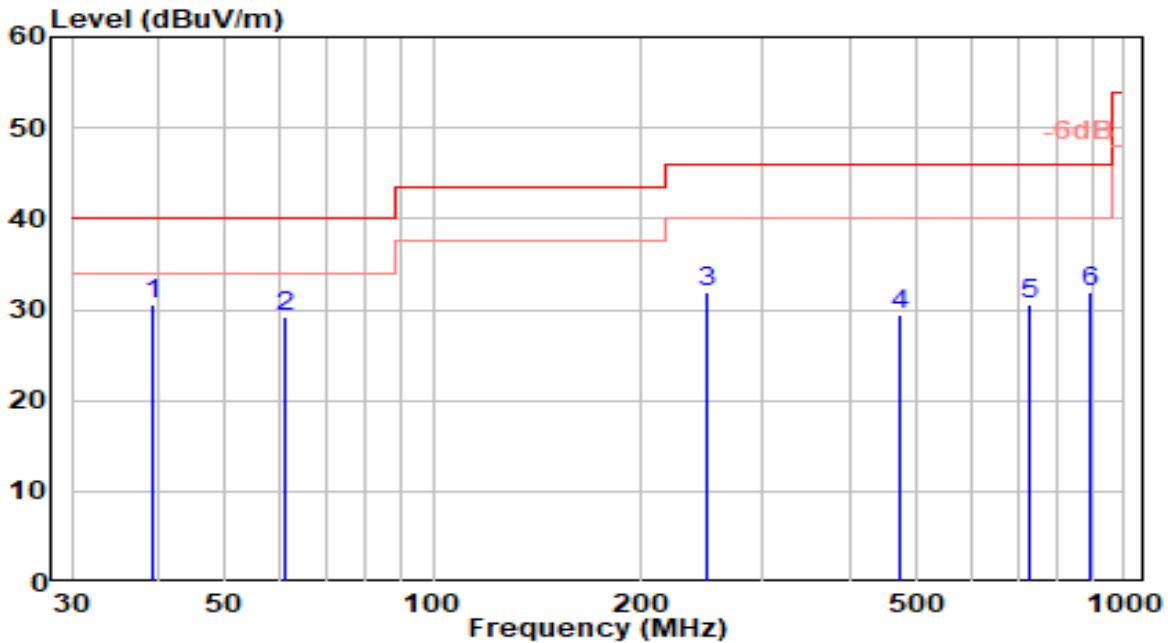


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	39.200	11.10	19.43	30.53	-9.47	40.00	170	10	QP
2		60.880	10.40	18.92	29.32	-10.68	40.00	200	306	QP
3		248.510	12.11	19.81	31.92	-14.08	46.00	200	190	QP
4		474.220	5.01	24.39	29.41	-16.59	46.00	160	10	QP
5		727.180	2.03	28.61	30.64	-15.36	46.00	100	30	QP
6		896.440	1.30	30.69	31.99	-14.01	46.00	100	210	QP

Note:

- "*", means this data is the worst emission level.
- C.F (Correction Factor) = Antenna Factor (dB/m)+ Cable Loss (dB).
- Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
- The emission levels of other frequencies are very lower than the limit and not show in test report.
- The amplitude of radiated emissions (frequency range from 9kHz to 30MHz) is that proximity to ambient noise, which also are attenuated more than 20dB below the permissible value. Therefore, the data is not presented in the report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band5_TX_CH 2 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

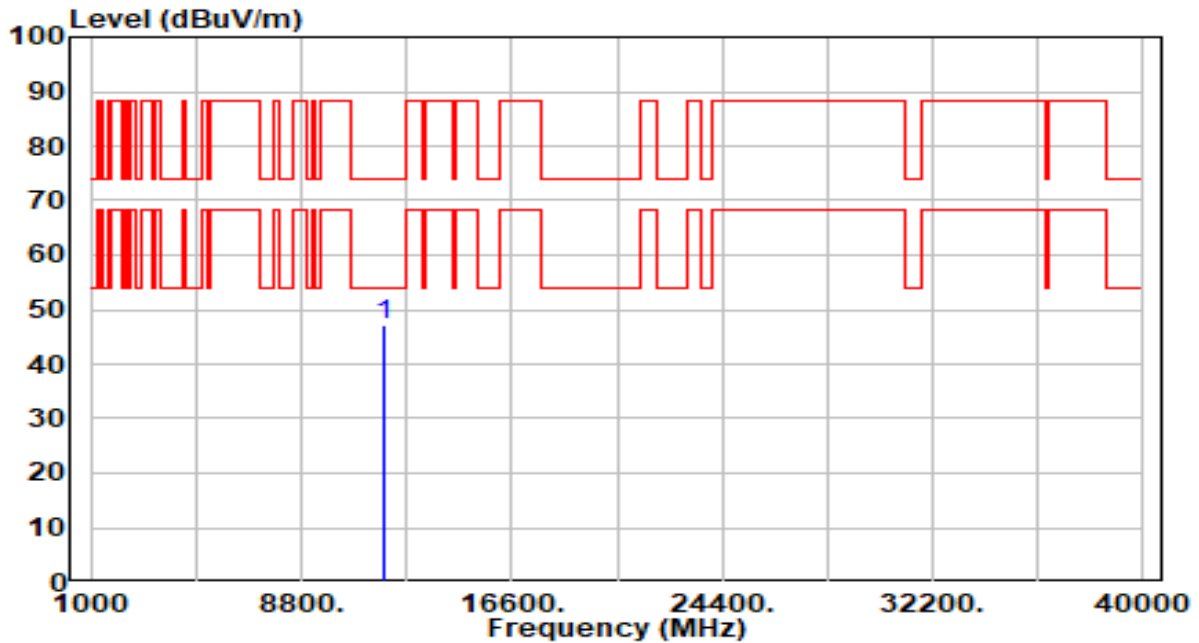


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.71	5.34	47.05	-26.95	74.00	200	220	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band5_TX_CH 2 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

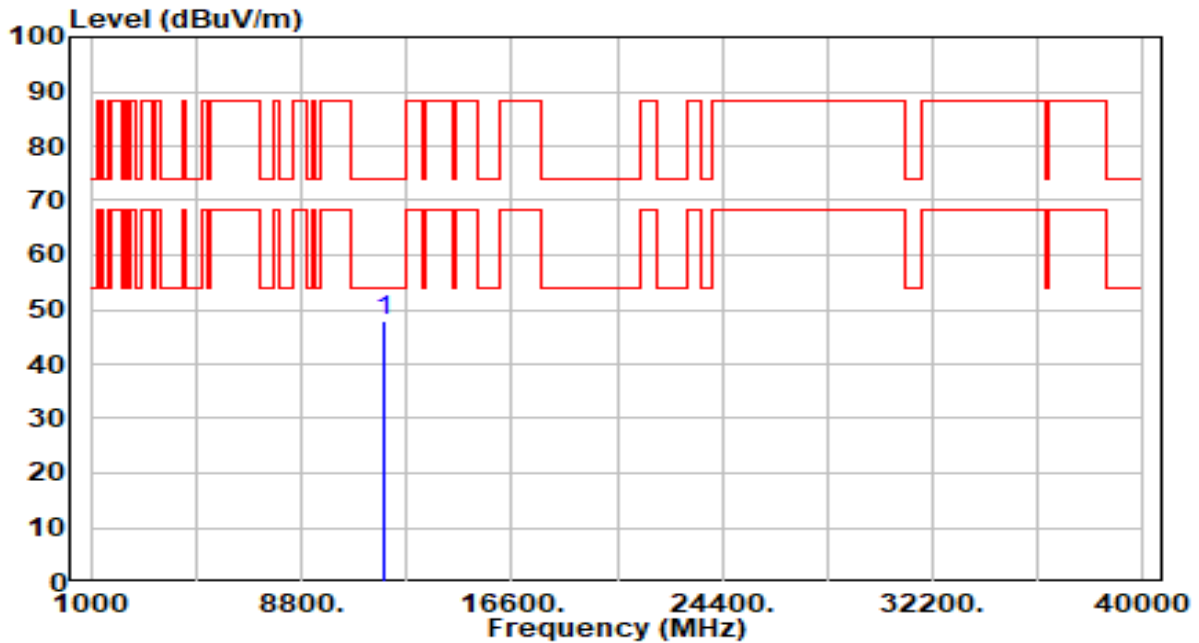


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	11870.000	42.45	5.34	47.79	-26.21	74.00	100	218	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band5_TX_CH 1 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

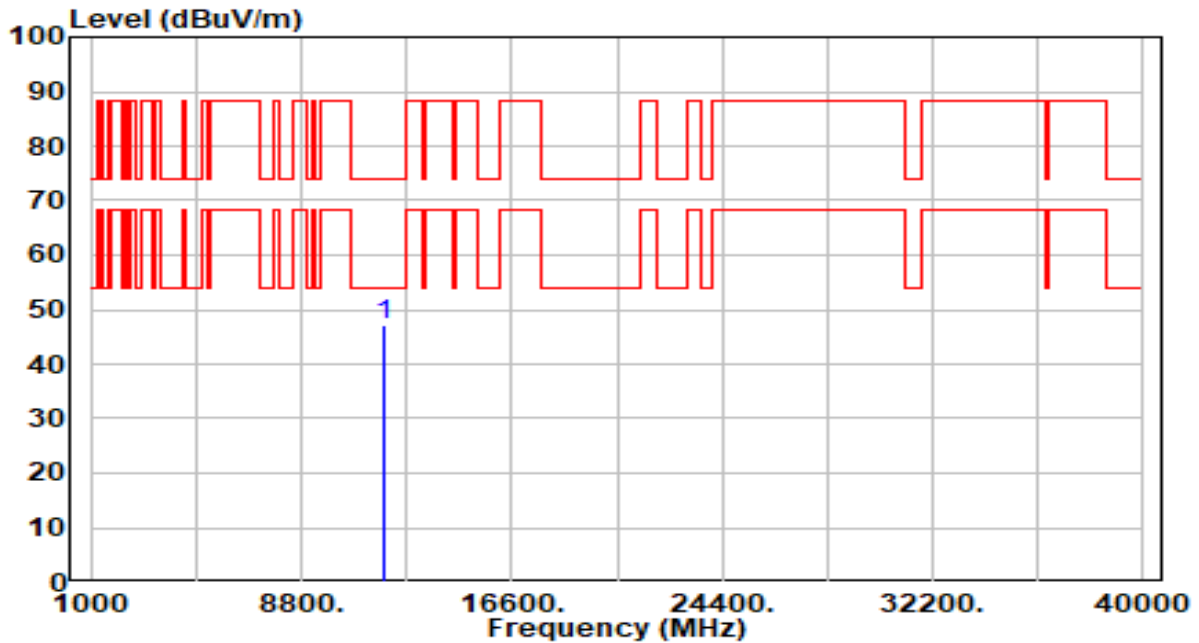


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	11910.000	41.73	5.39	47.12	-26.88	74.00	100	127	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band5_TX_CH 1 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

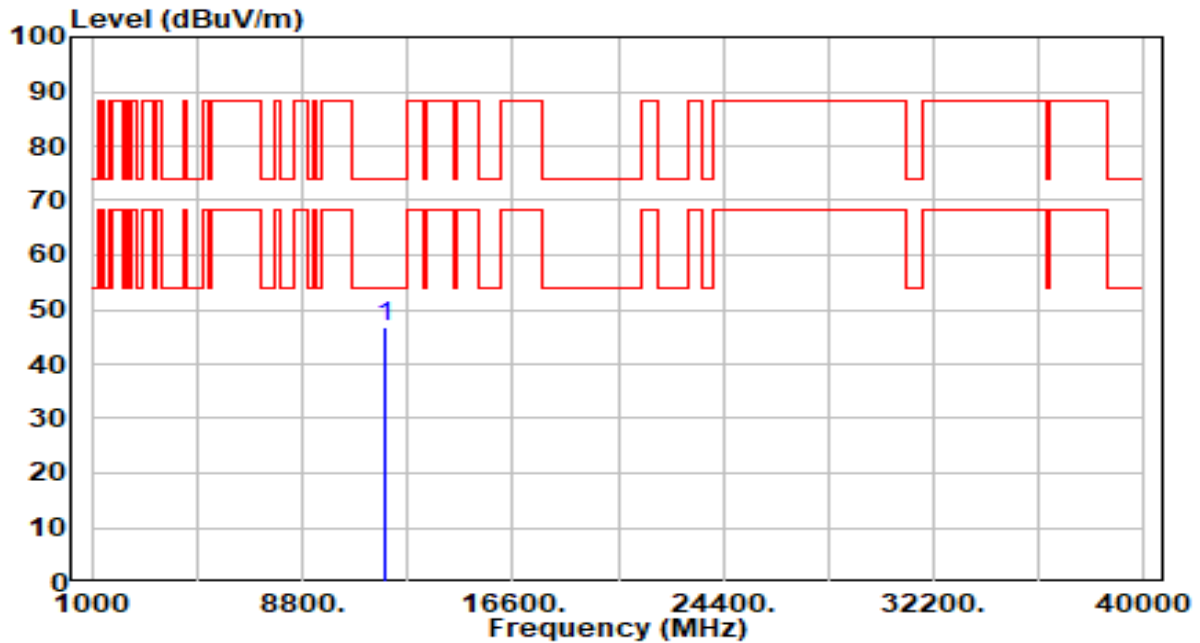


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	11910.000	41.49	5.39	46.87	-27.13	74.00	100	169	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band5_TX_CH 49 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

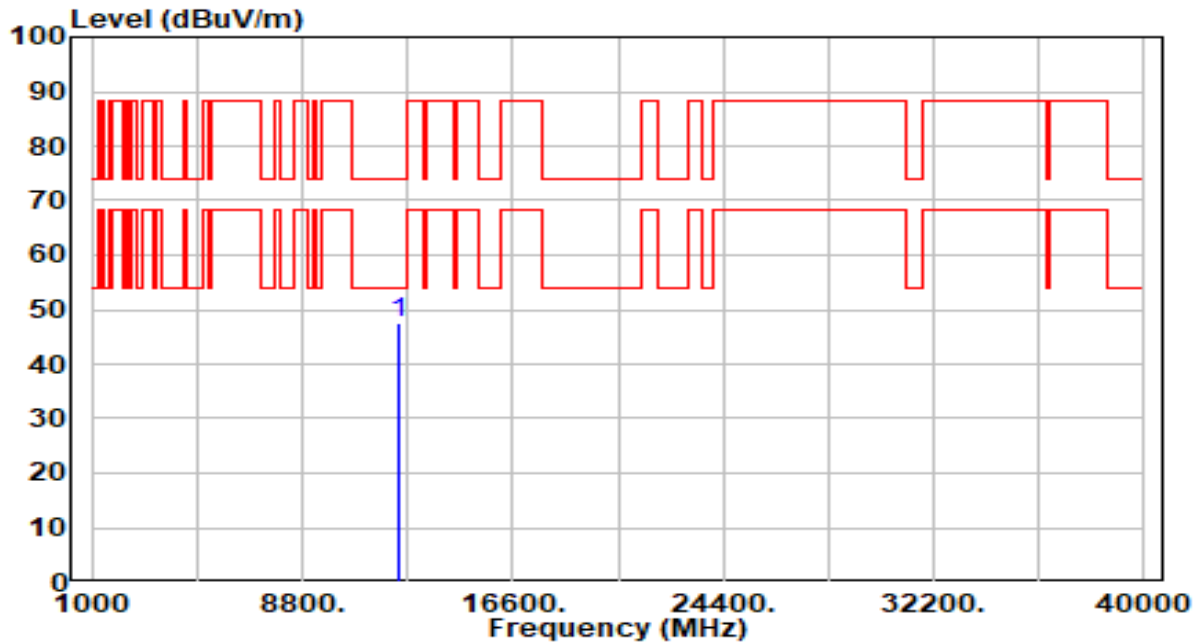


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	12390.000	41.42	6.15	47.57	-26.43	74.00	100	28	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band5_TX_CH 49 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

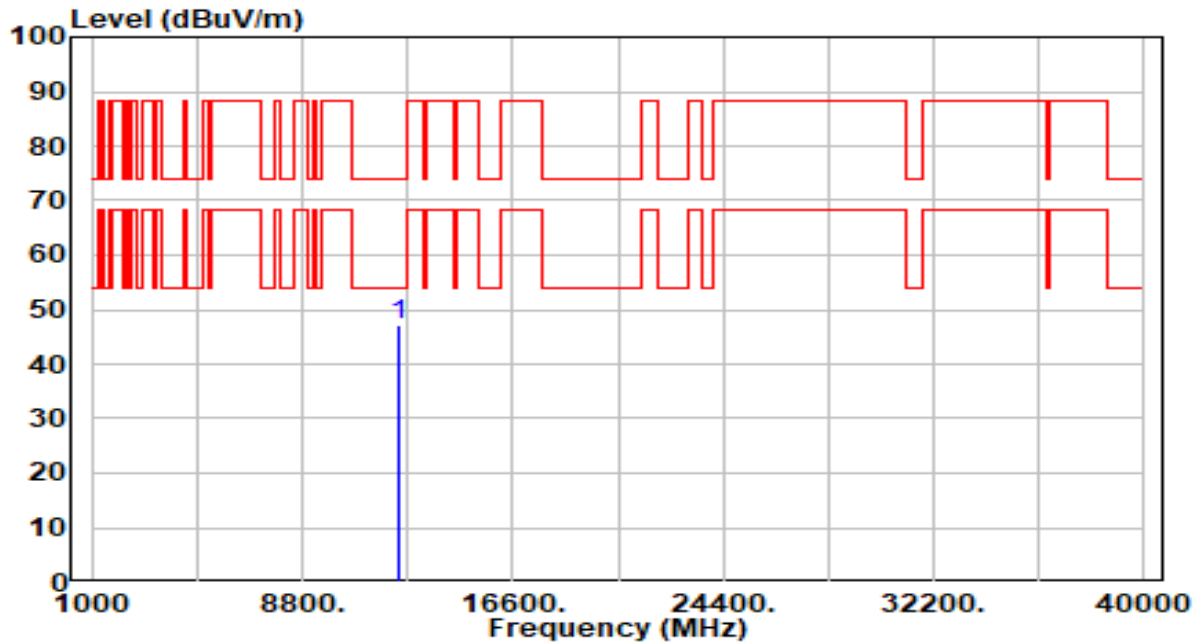


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	12390.000	41.04	6.15	47.19	-26.81	74.00	100	249	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band5_TX_CH 93 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

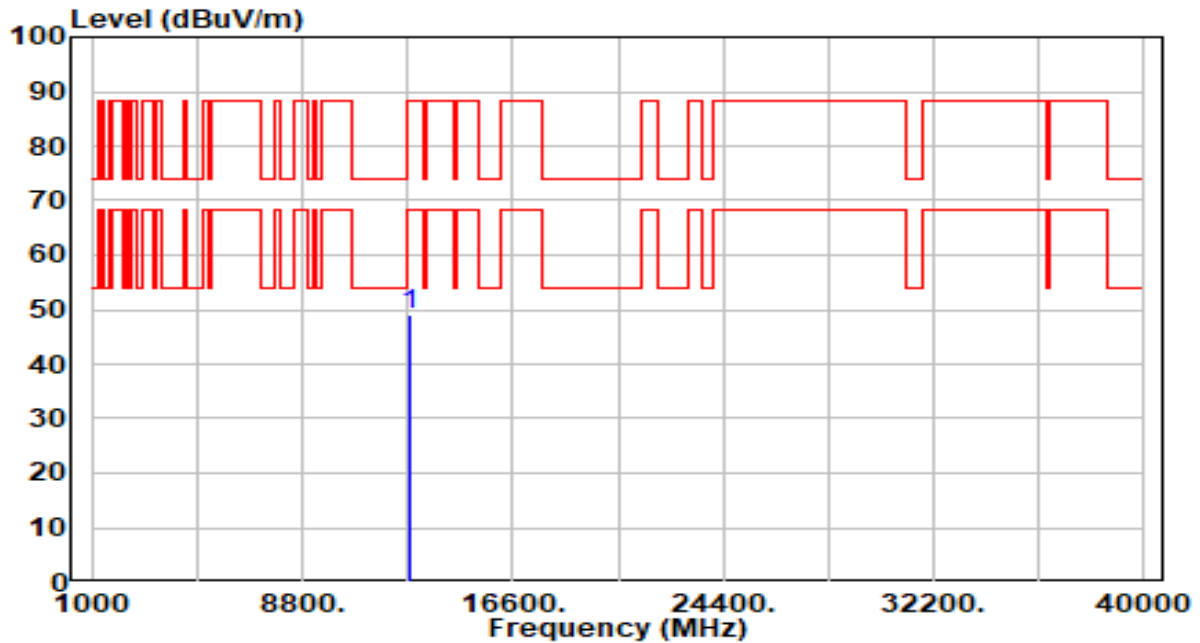


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	12830.000	42.18	6.92	49.10	-39.10	88.20	100	21	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band5_TX_CH 93 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

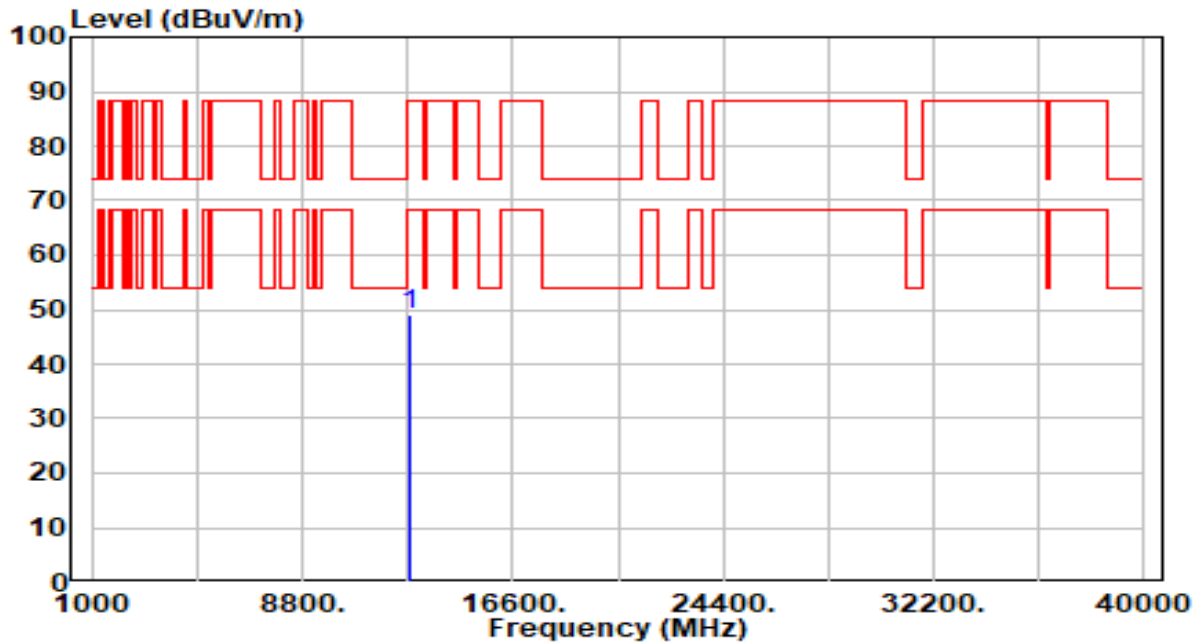


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	12830.000	42.15	6.92	49.06	-39.14	88.20	100	7	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band6_TX_CH 97 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

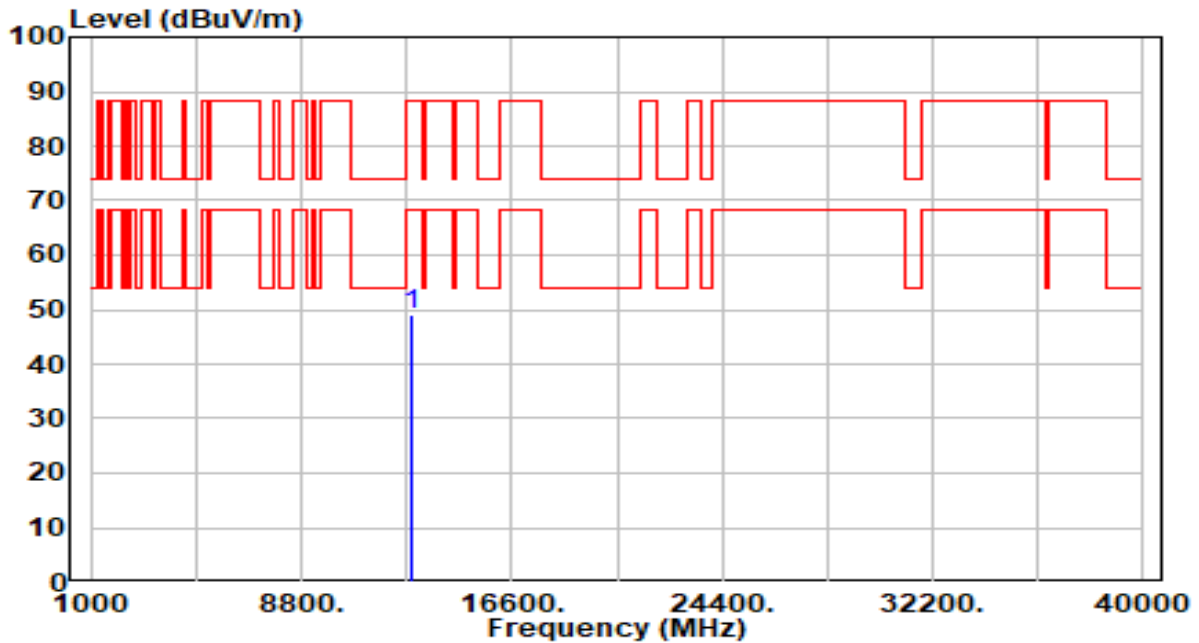


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	42.13	6.91	49.04	-39.16	88.20	100	261	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band6_TX_CH 97 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

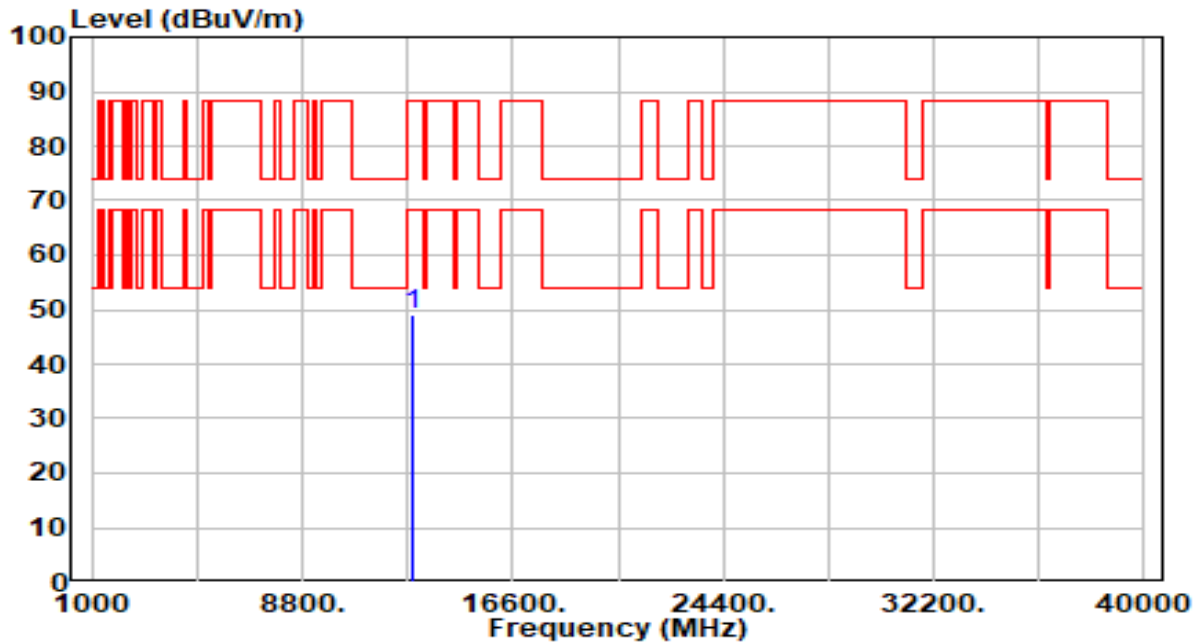


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	42.05	6.91	48.95	-39.25	88.20	100	237	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band6_TX_CH 105 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

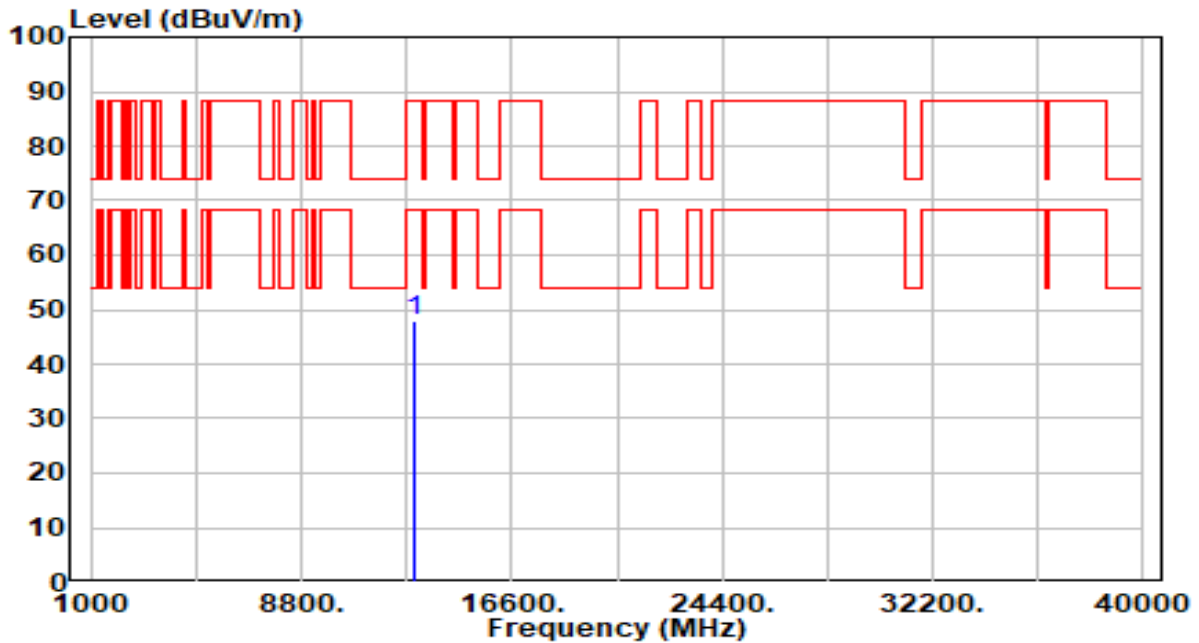


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.20	6.88	48.08	-40.12	88.20	100	247	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band6_TX_CH 105 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

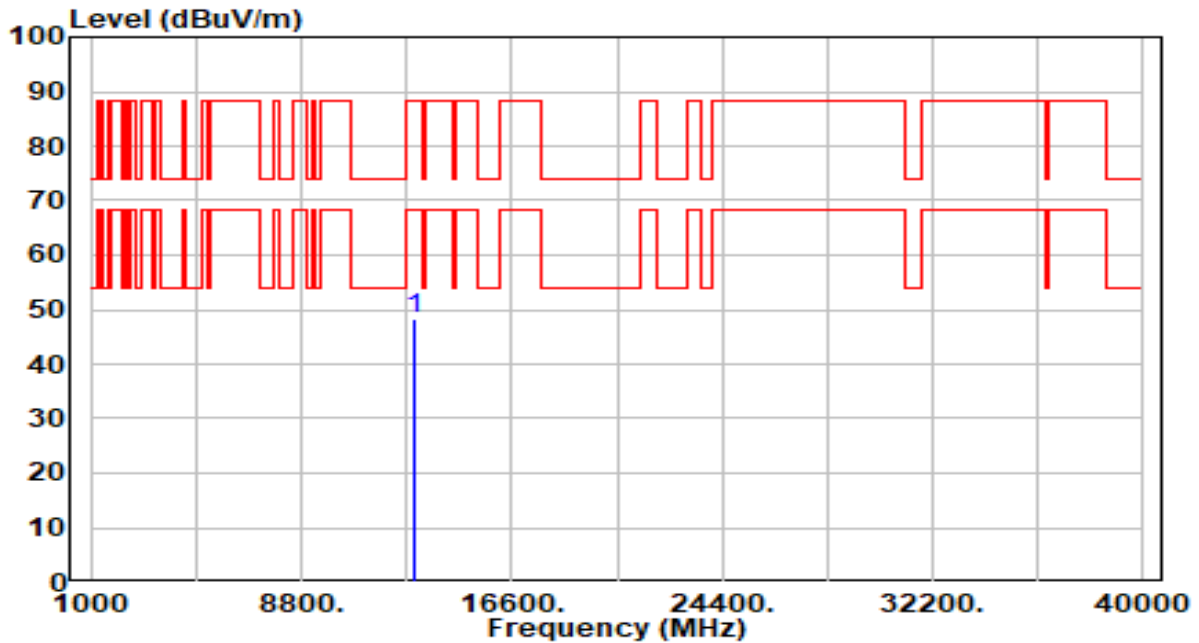


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	12950.000	41.58	6.88	48.46	-39.74	88.20	100	59	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band6_TX_CH 113 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

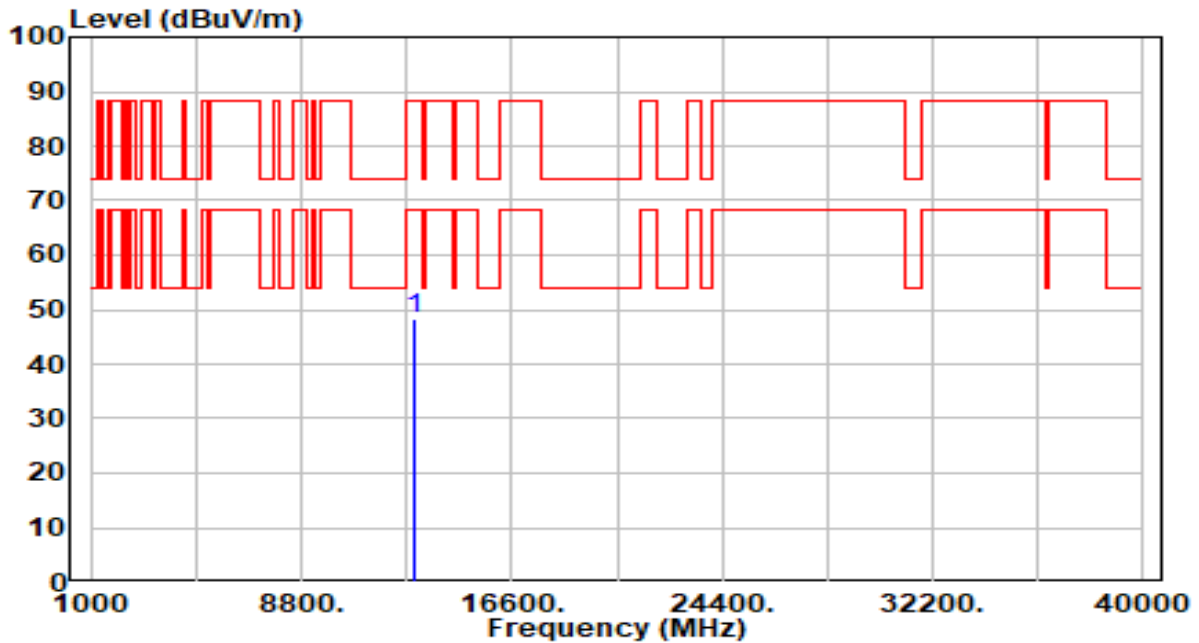


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13030.000	41.47	6.86	48.32	-39.88	88.20	100	58	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band6_TX_CH 113 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

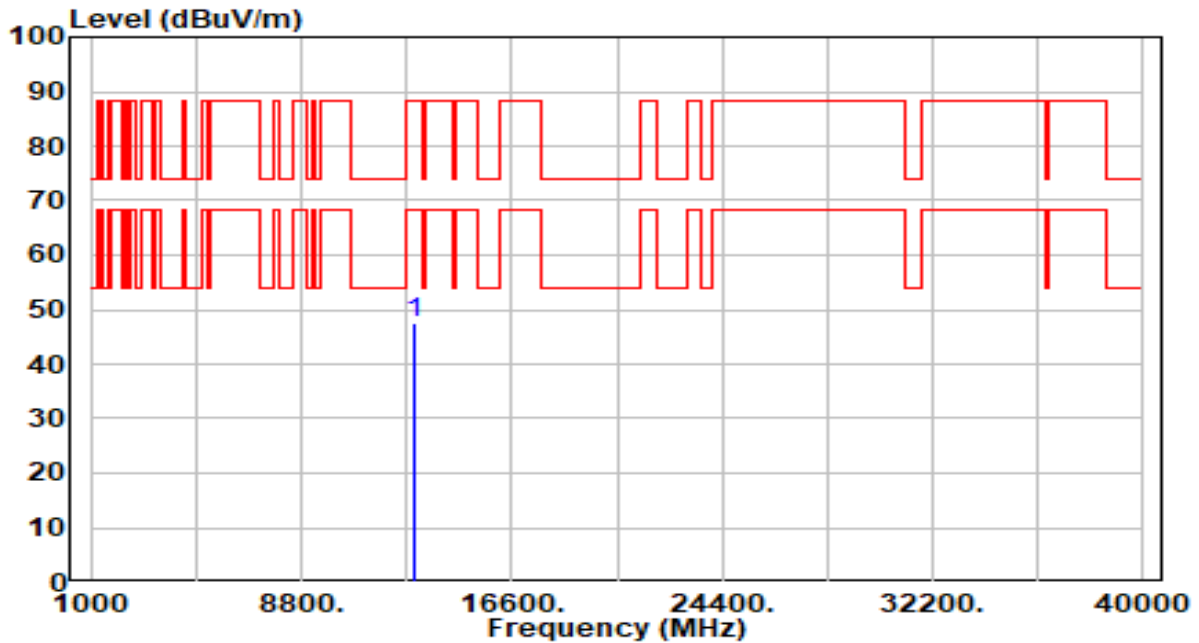


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13030.000	40.71	6.86	47.57	-40.63	88.20	100	203	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band7_TX_CH 117 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

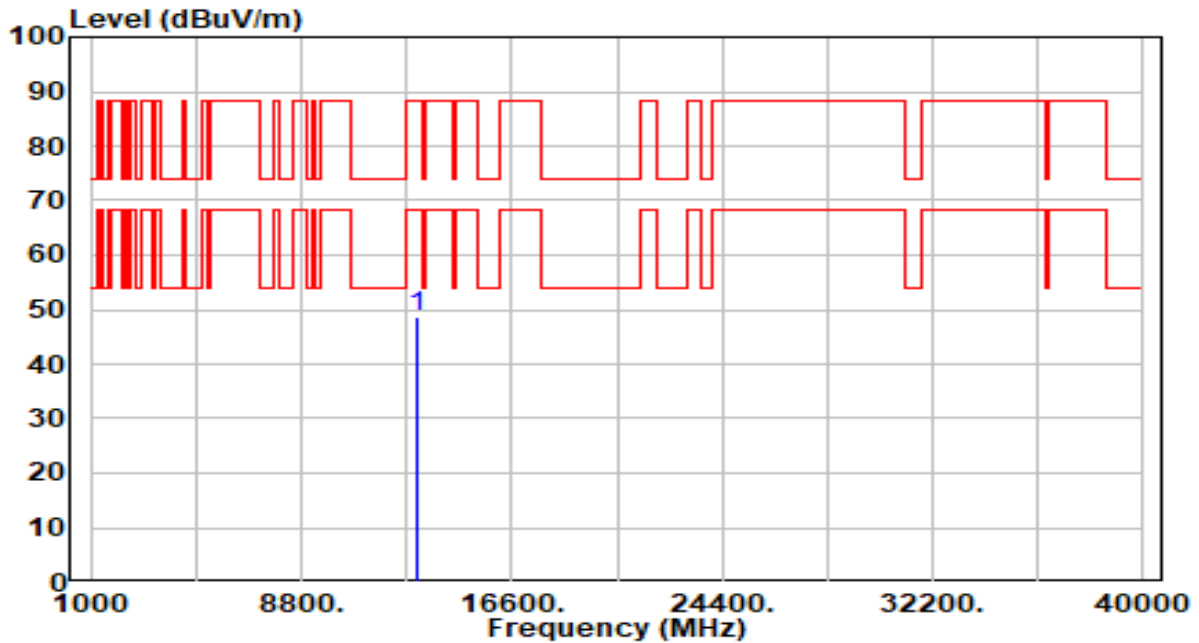


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13070.000	41.68	6.84	48.53	-39.67	88.20	100	289	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band7_TX_CH 117 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

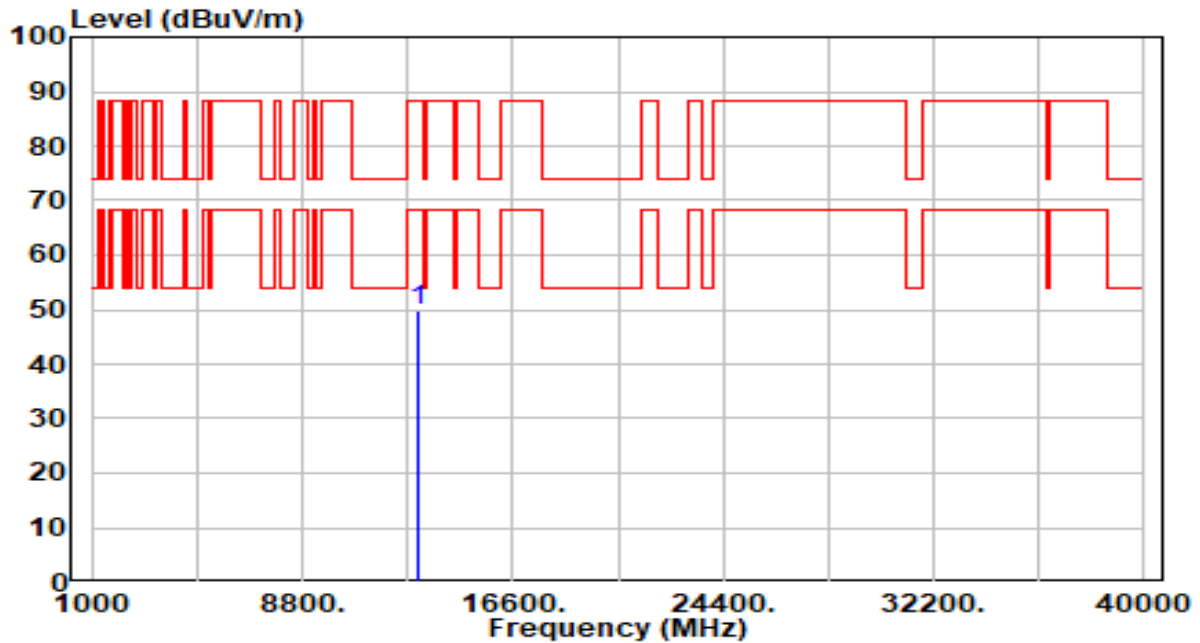


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13070.000	42.80	6.84	49.65	-38.55	88.20	100	82	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band7_TX_CH 153 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

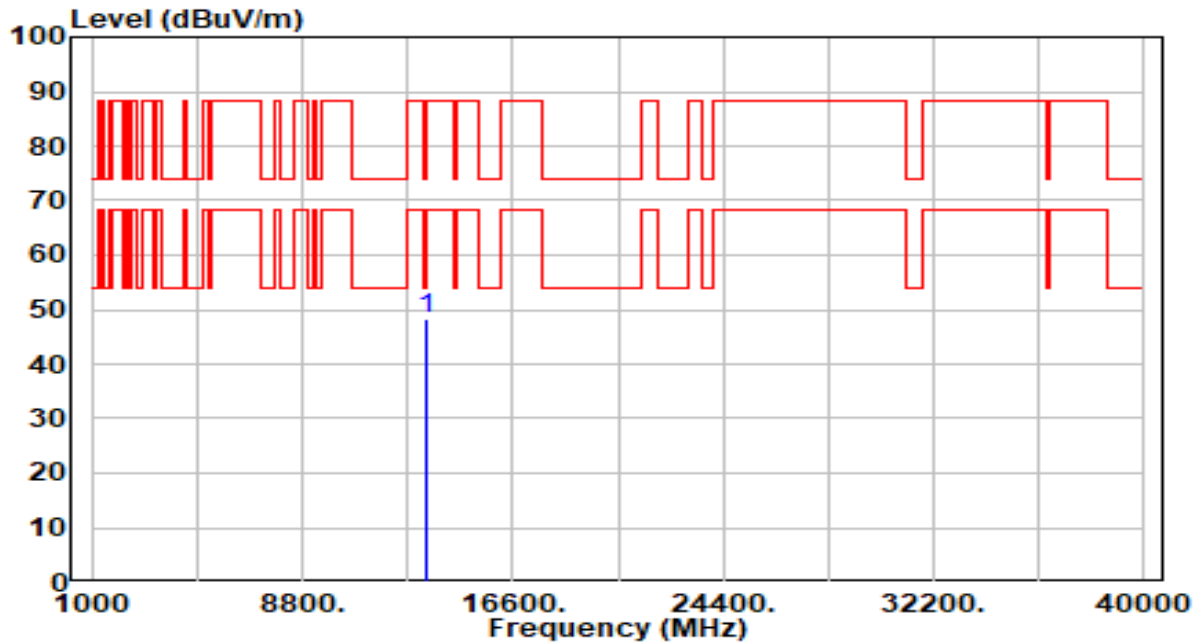


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.65	6.79	48.44	-39.76	88.20	100	7	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band7_TX_CH 153 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

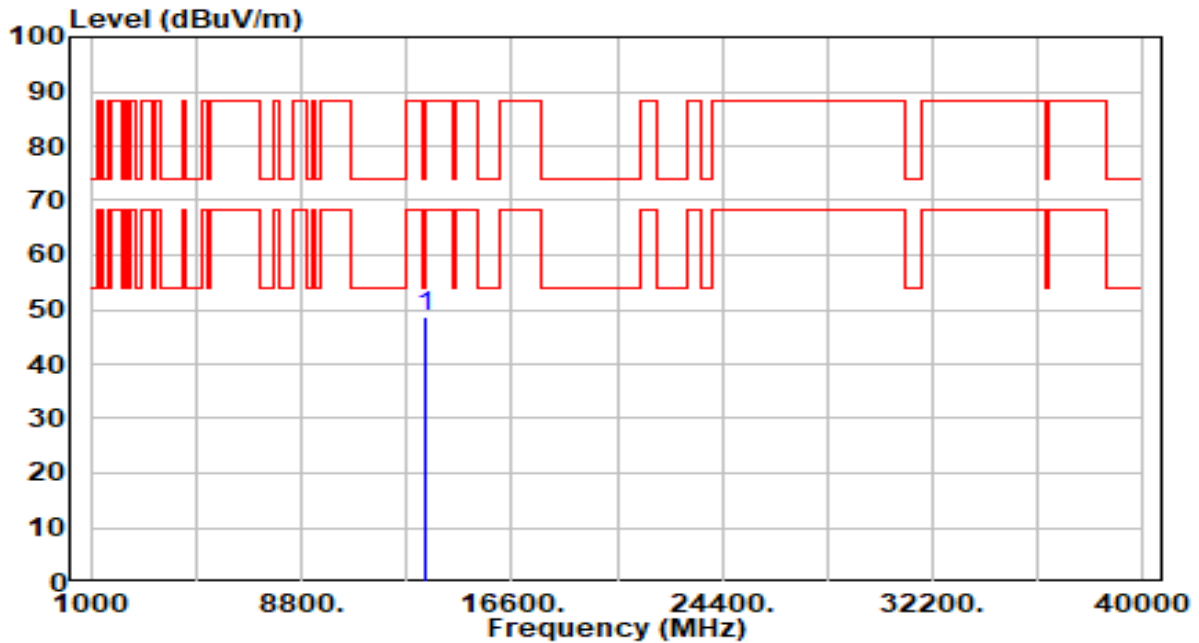


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13430.000	41.76	6.79	48.56	-39.64	88.20	100	104	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band7_TX_CH 181 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

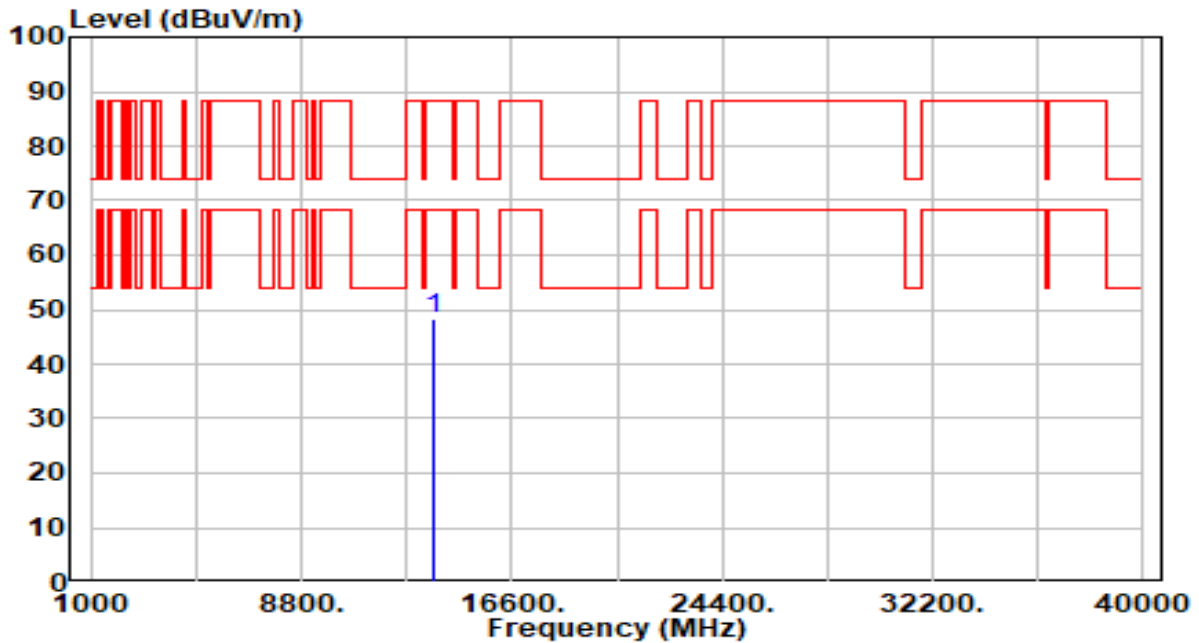


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.79	6.53	48.32	-39.88	88.20	100	7	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band7_TX_CH 181 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

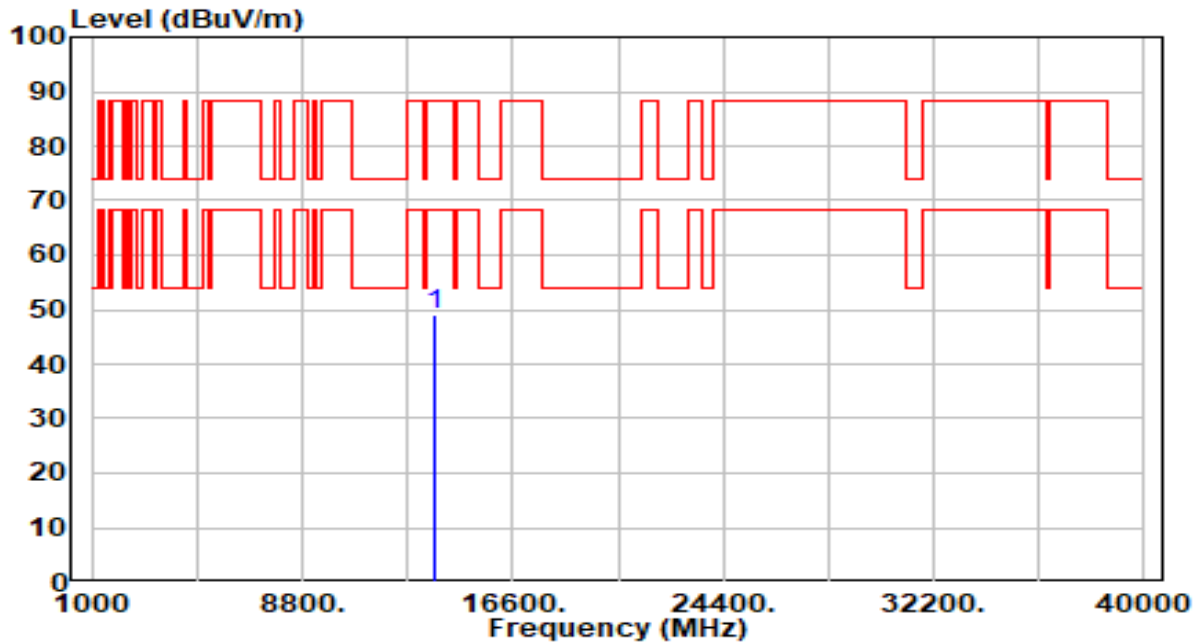


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13710.000	42.45	6.53	48.98	-39.22	88.20	100	252	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-31
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band8_TX_CH 185 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

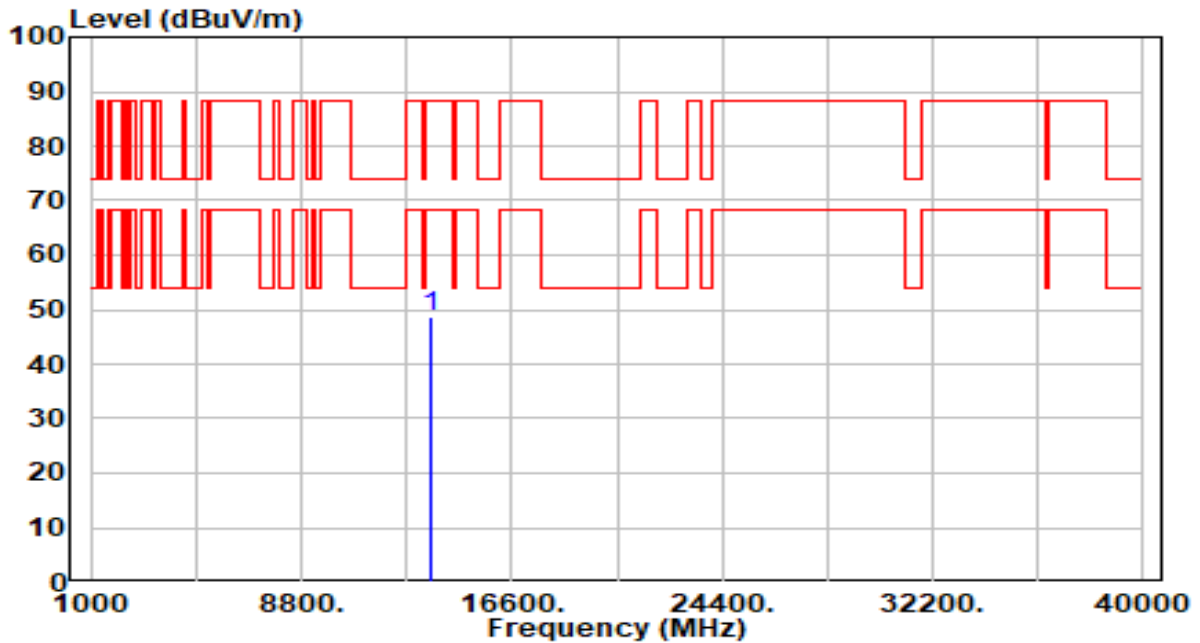


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	* 13570.000	42.16	6.59	48.75	-39.45	88.20	100	304	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m)+ Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-31
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band8_TX_CH 185 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

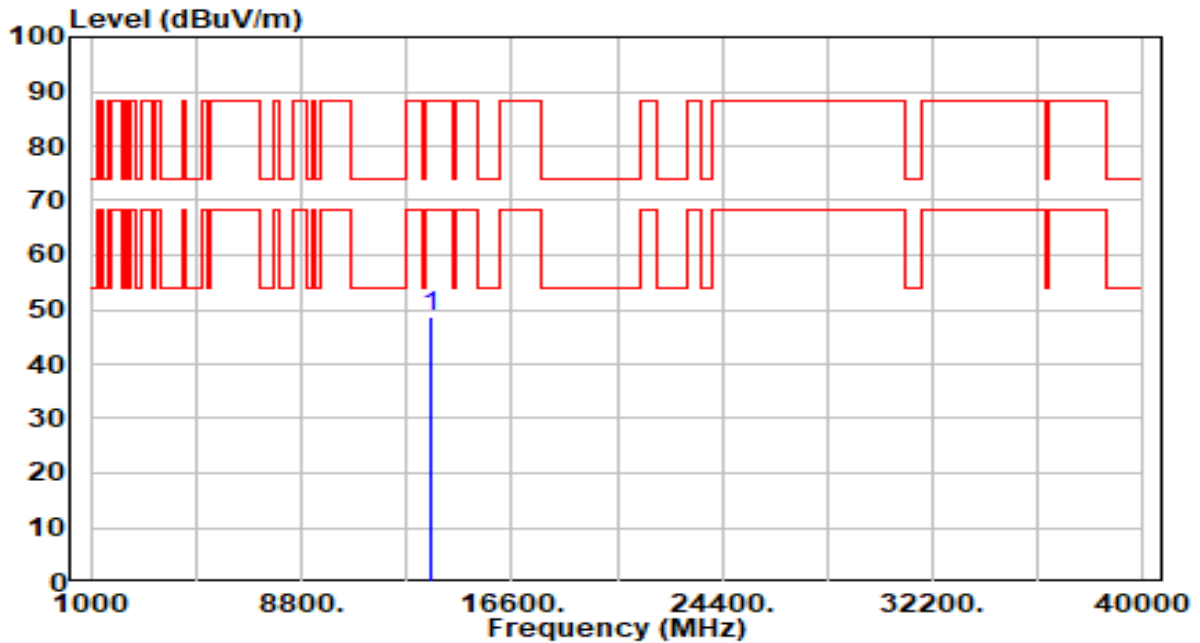


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13570.000	42.20	6.59	48.78	-39.42	88.20	100	87	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m)+ Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band5_TX_CH 2 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

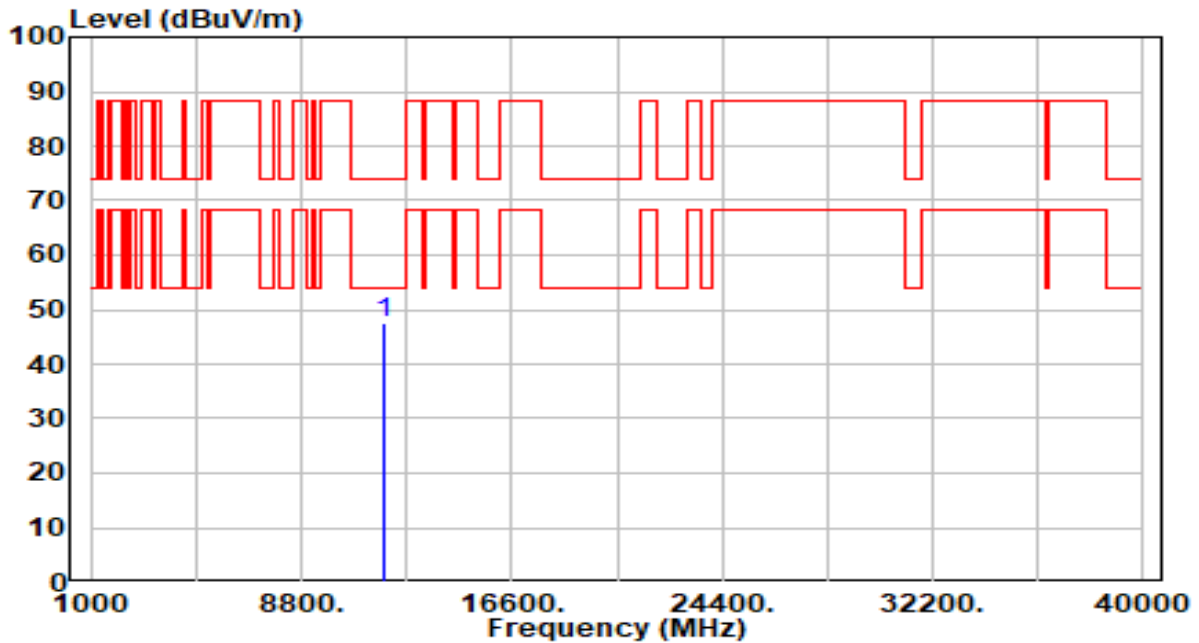


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	42.24	5.34	47.58	-26.42	74.00	100	2	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band5_TX_CH 2 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

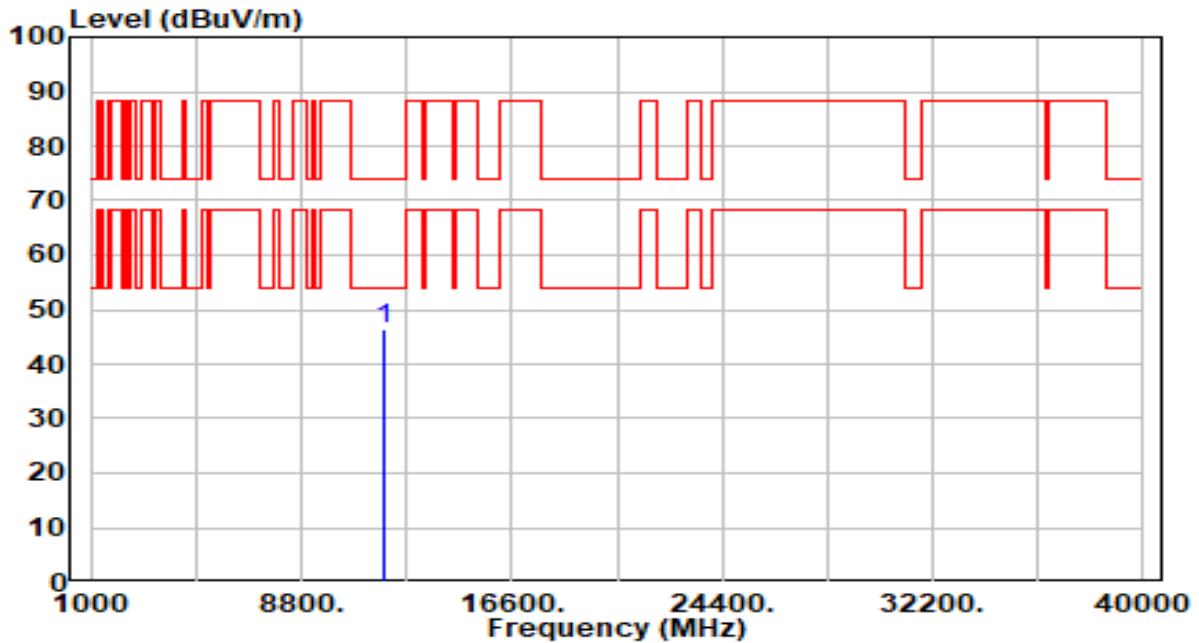


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.17	5.34	46.51	-27.49	74.00	100	104	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band5_TX_CH 1 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

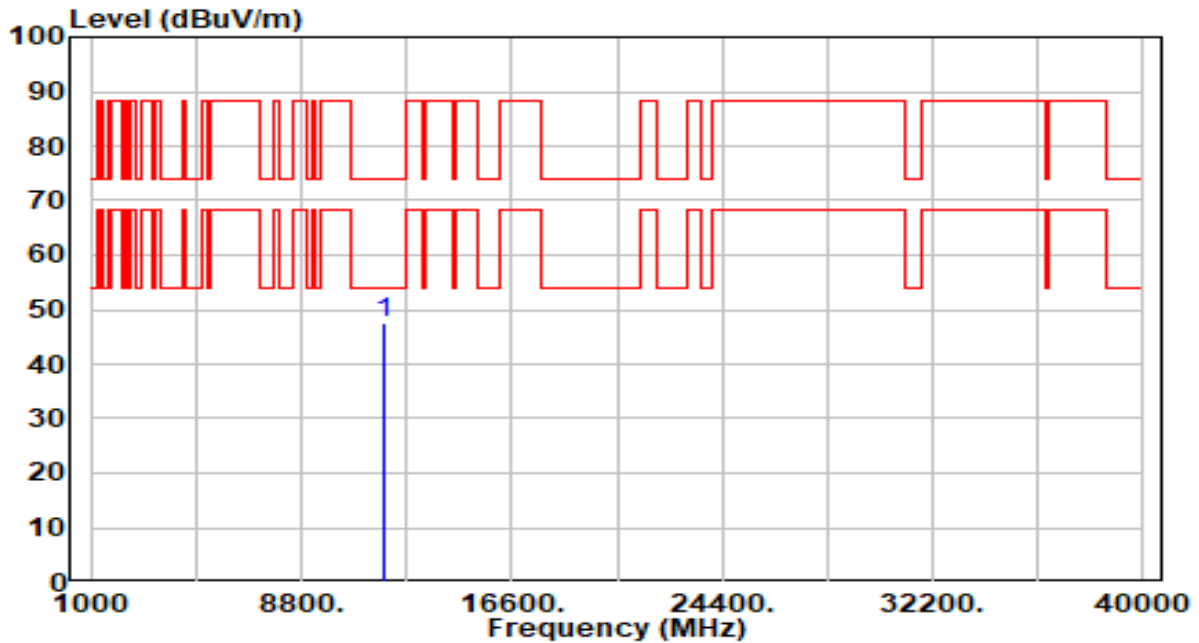


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	11910.000	41.98	5.39	47.37	-26.63	74.00	100	7	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band5_TX_CH 1 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

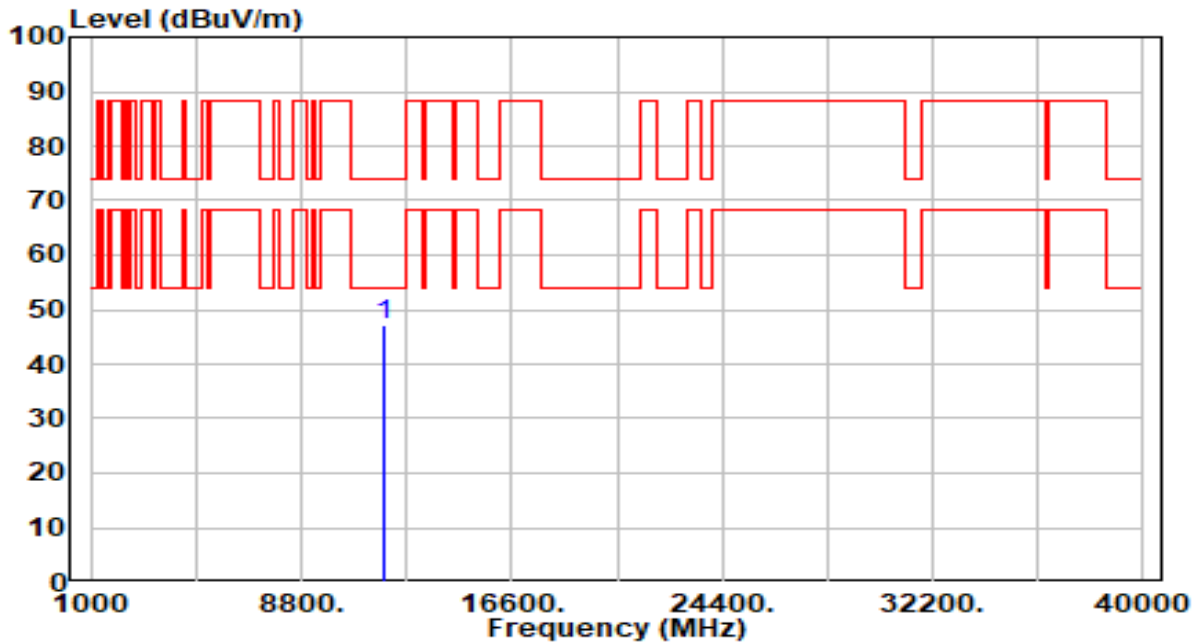


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	11910.000	41.89	5.39	47.28	-26.72	74.00	100	295	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band5_TX_CH 49 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

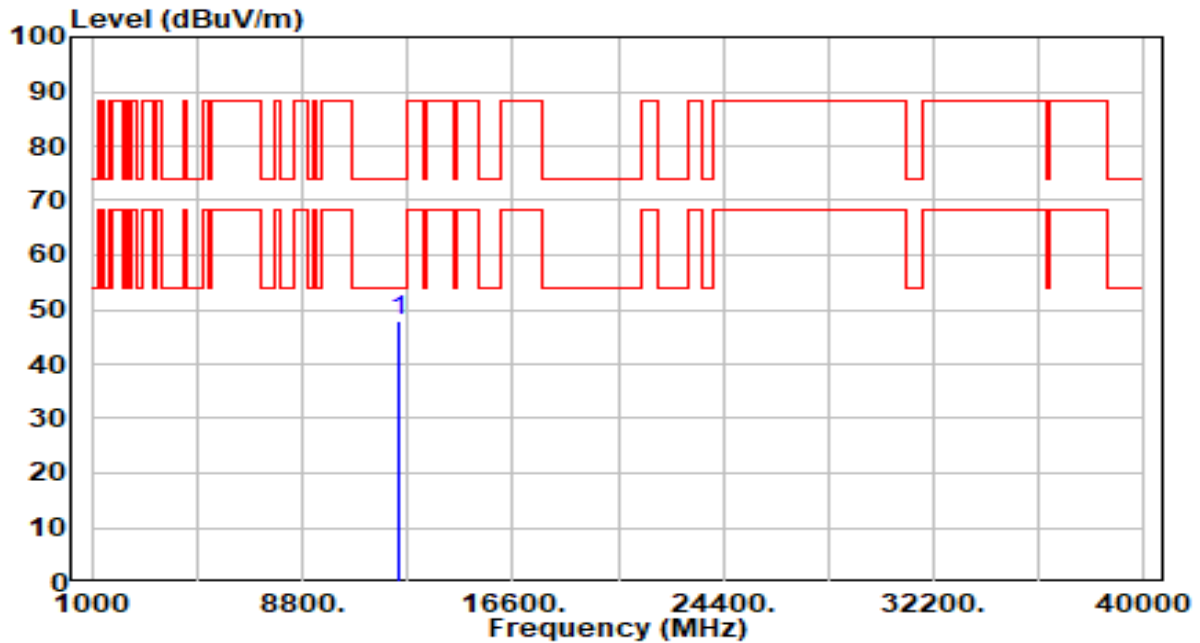


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.78	6.15	47.93	-26.07	74.00	100	184	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band5_TX_CH 49 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

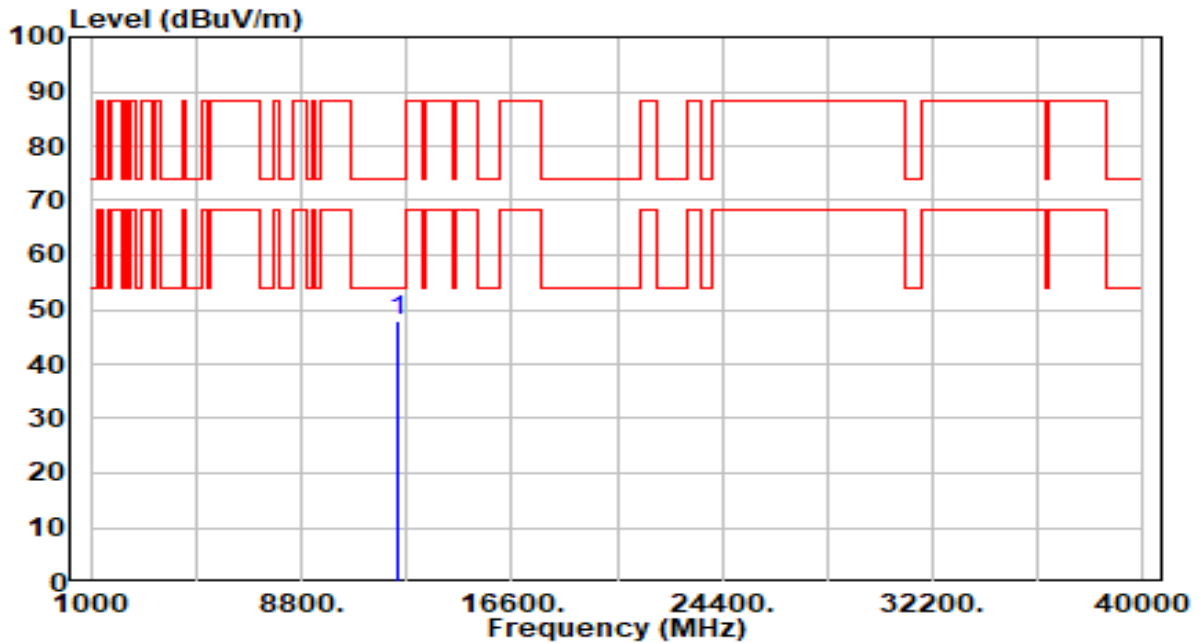


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	12390.000	41.60	6.15	47.75	-26.25	74.00	100	217	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band5_TX_CH 93 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

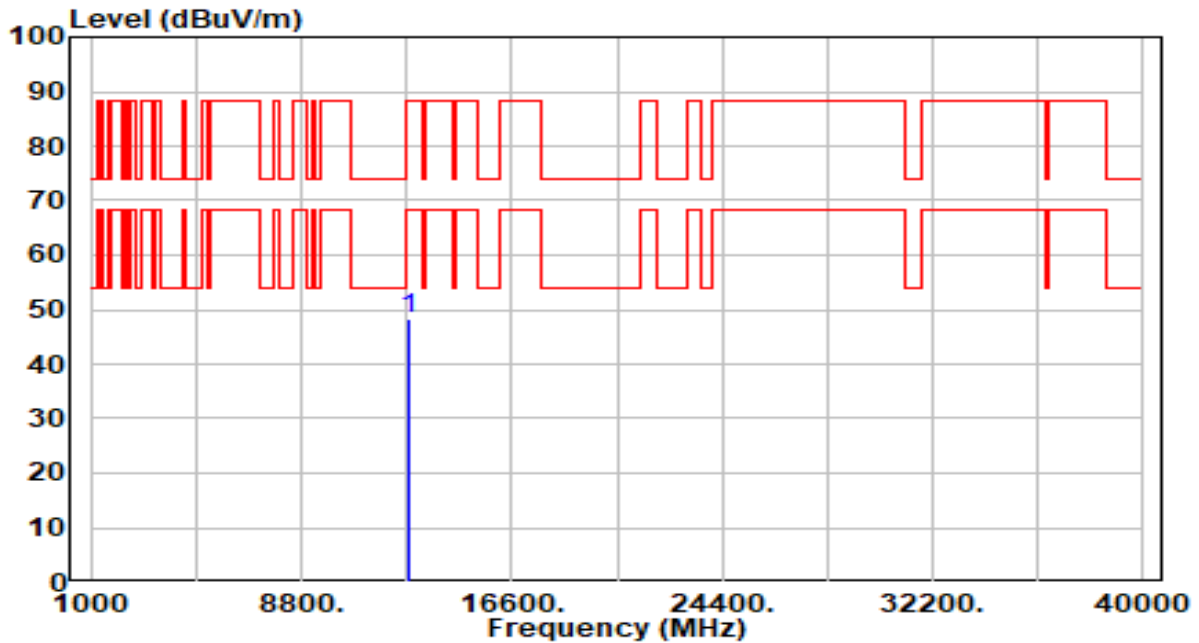


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.41	6.92	48.32	-39.88	88.20	100	172	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band5_TX_CH 93 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

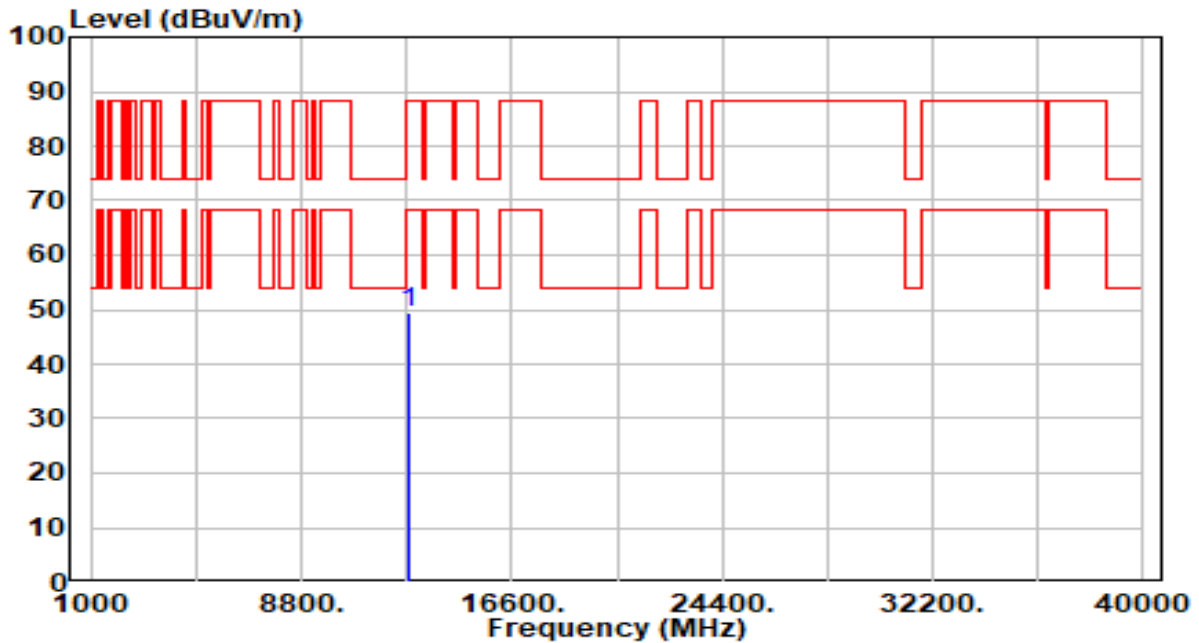


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	42.35	6.92	49.27	-38.93	88.20	100	146	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band6_TX_CH 97 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

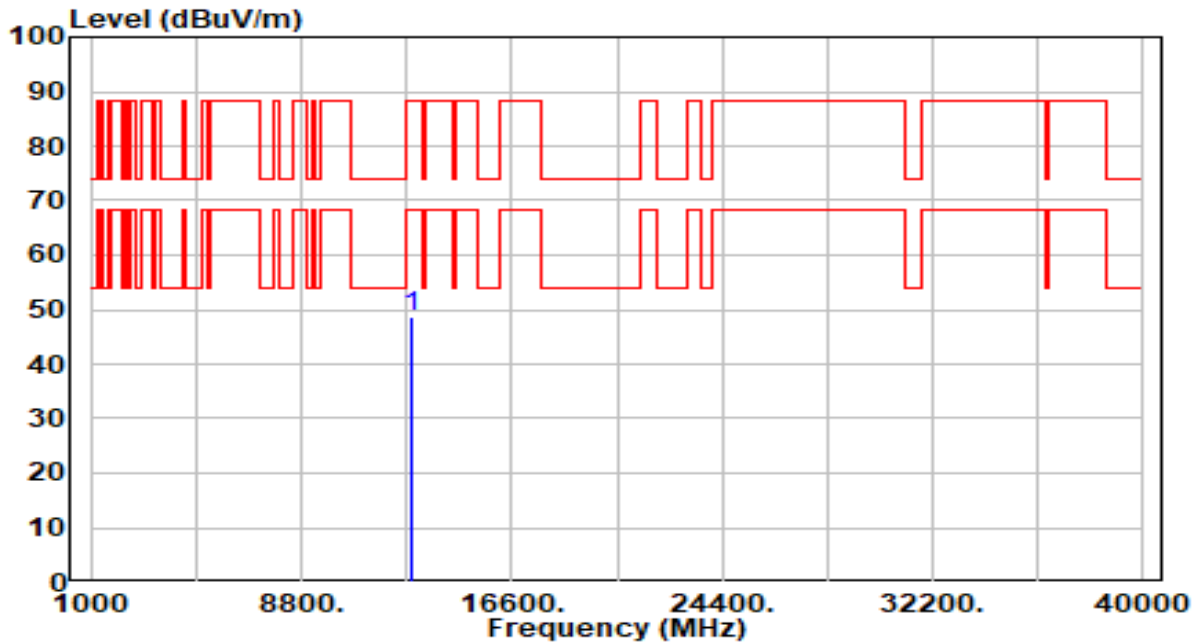


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.75	6.91	48.65	-39.55	88.20	100	292	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band6_TX_CH 97 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

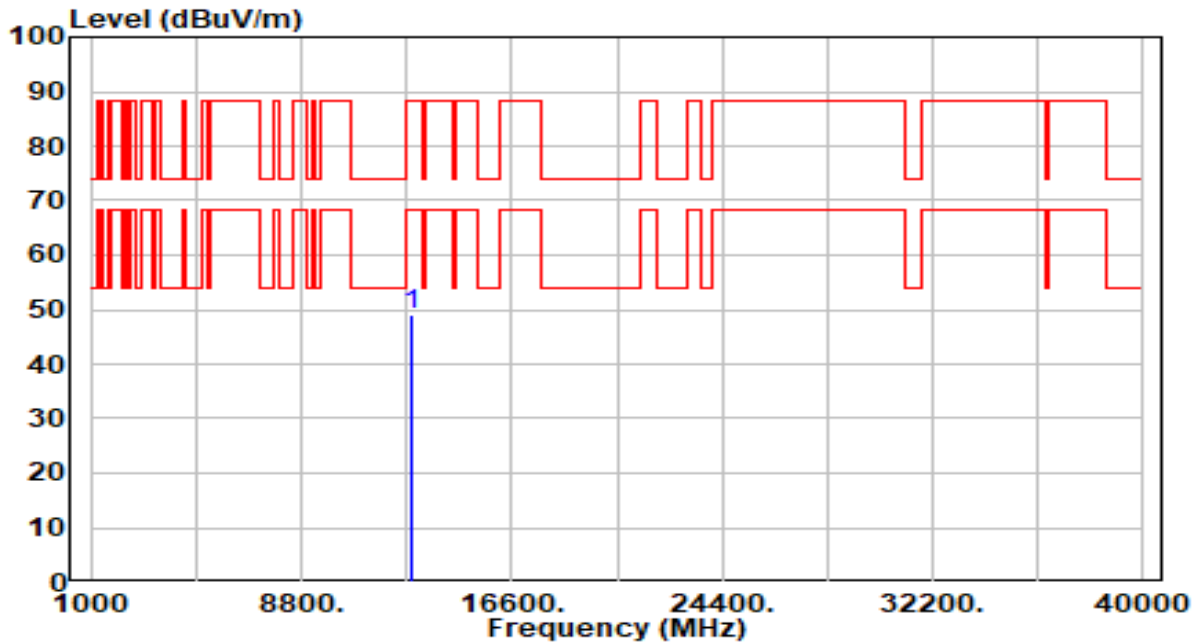


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	12870.000	42.17	6.91	49.08	-39.12	88.20	100	82	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band6_TX_CH 105 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

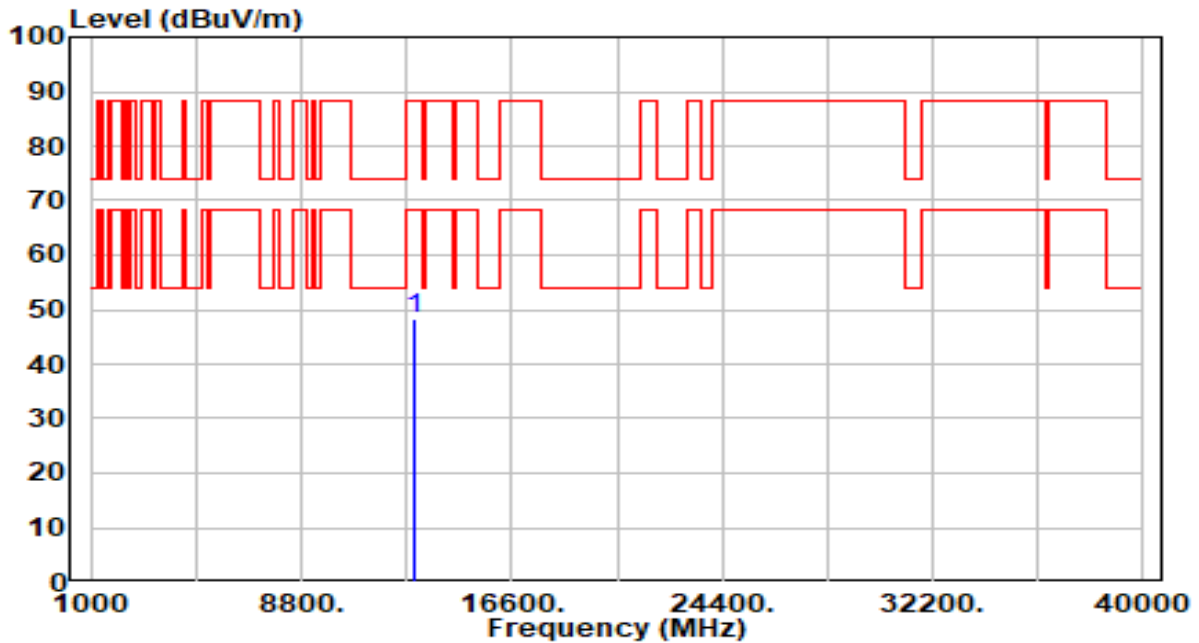


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.54	6.88	48.42	-39.78	88.20	100	2	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band6_TX_CH 105 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

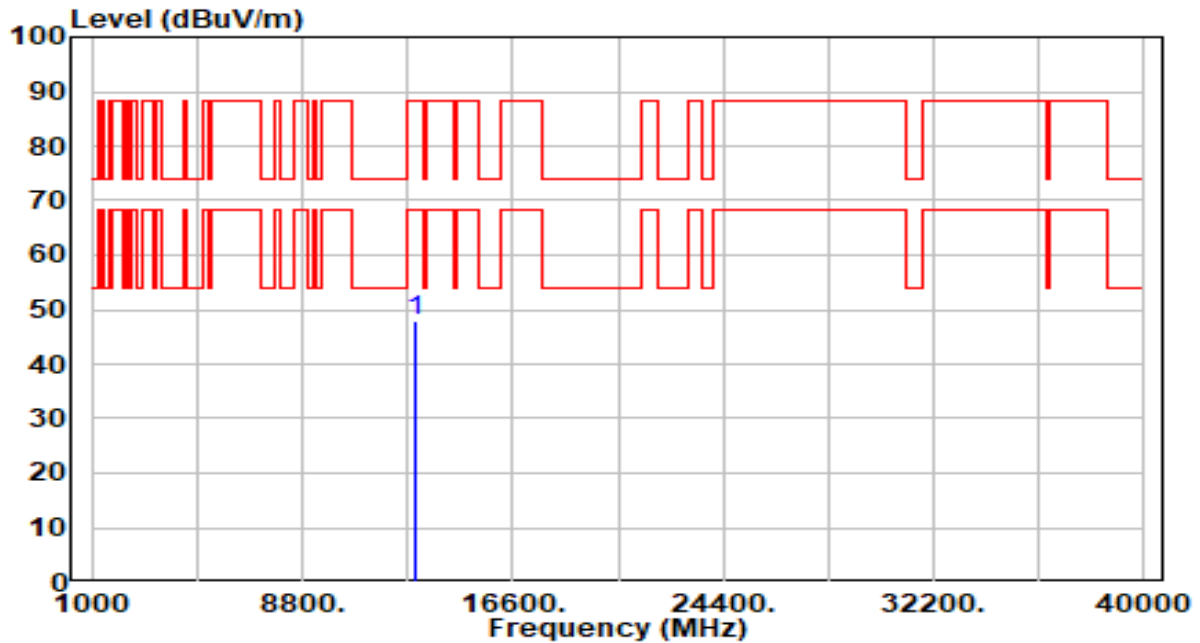


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	12950.000	40.87	6.88	47.76	-40.44	88.20	100	141	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band6_TX_CH 113 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

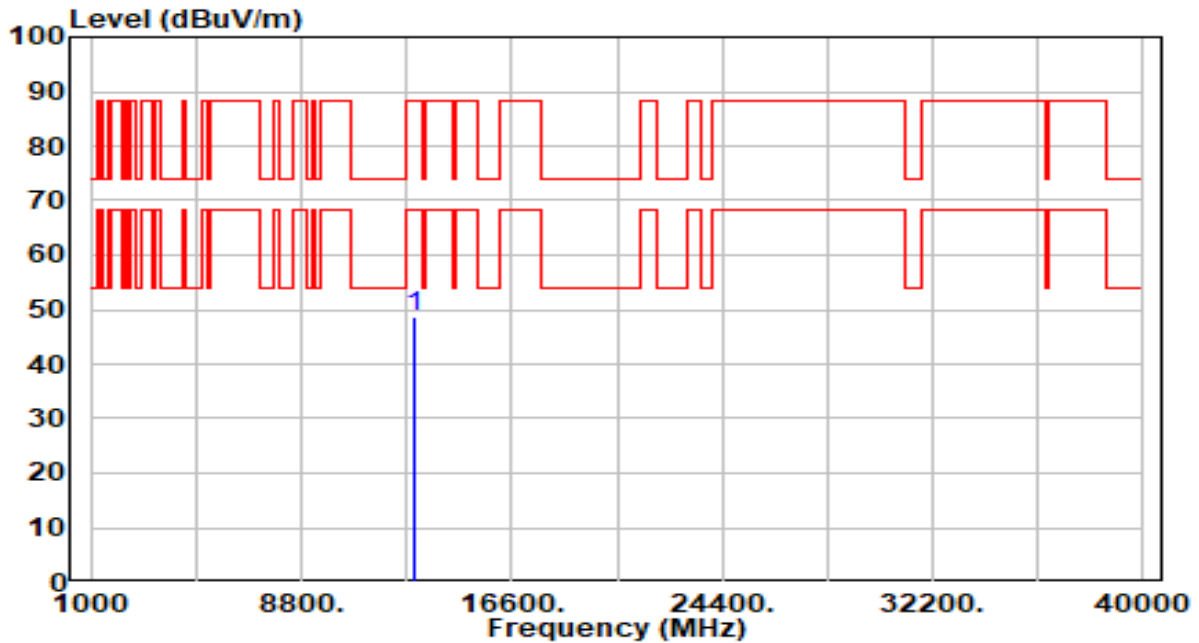


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13030.000	41.70	6.86	48.56	-39.64	88.20	100	5	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band6_TX_CH 113 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

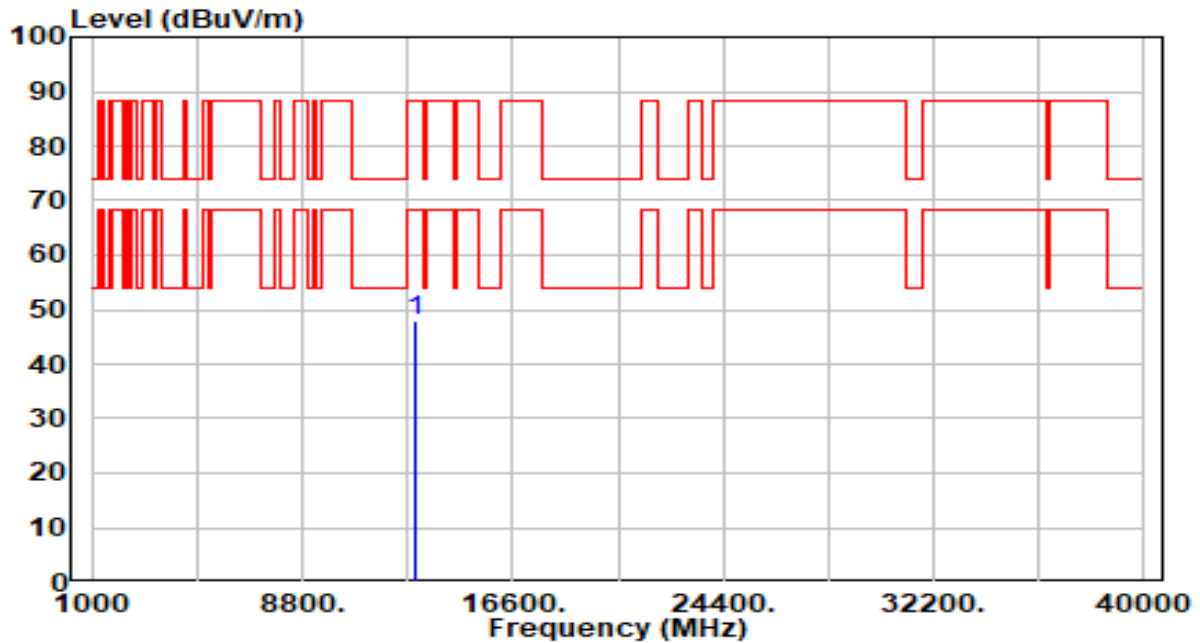


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13030.000	40.94	6.86	47.80	-40.40	88.20	100	86	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band7_TX_CH 117 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

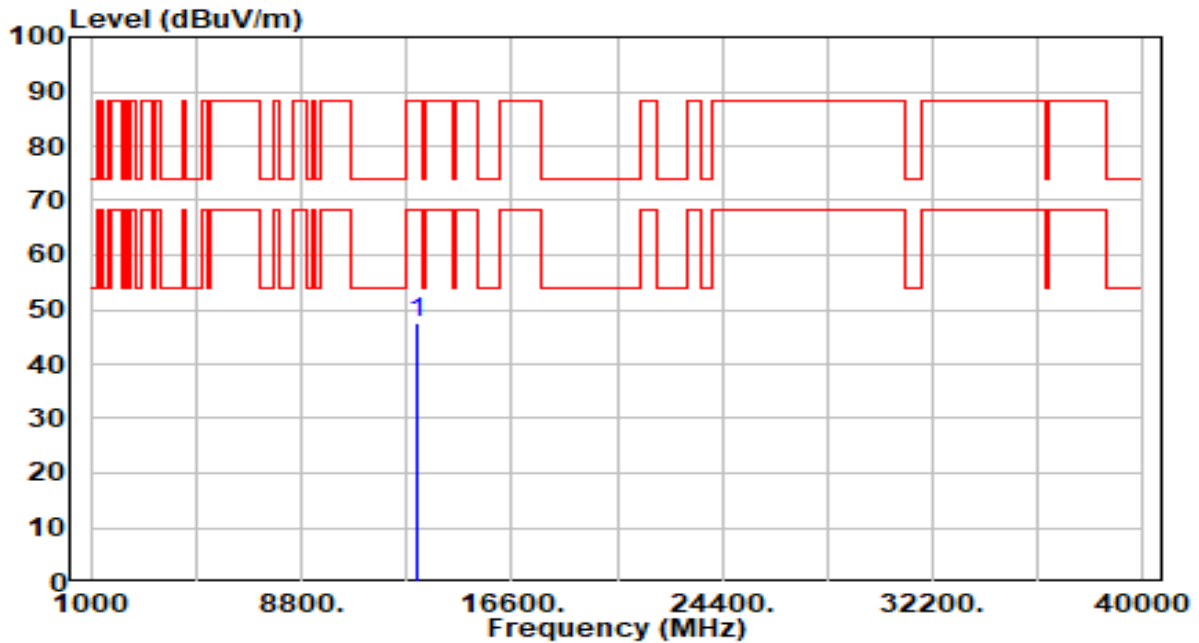


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13070.000	40.85	6.84	47.69	-40.51	88.20	100	316	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band7_TX_CH 117 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

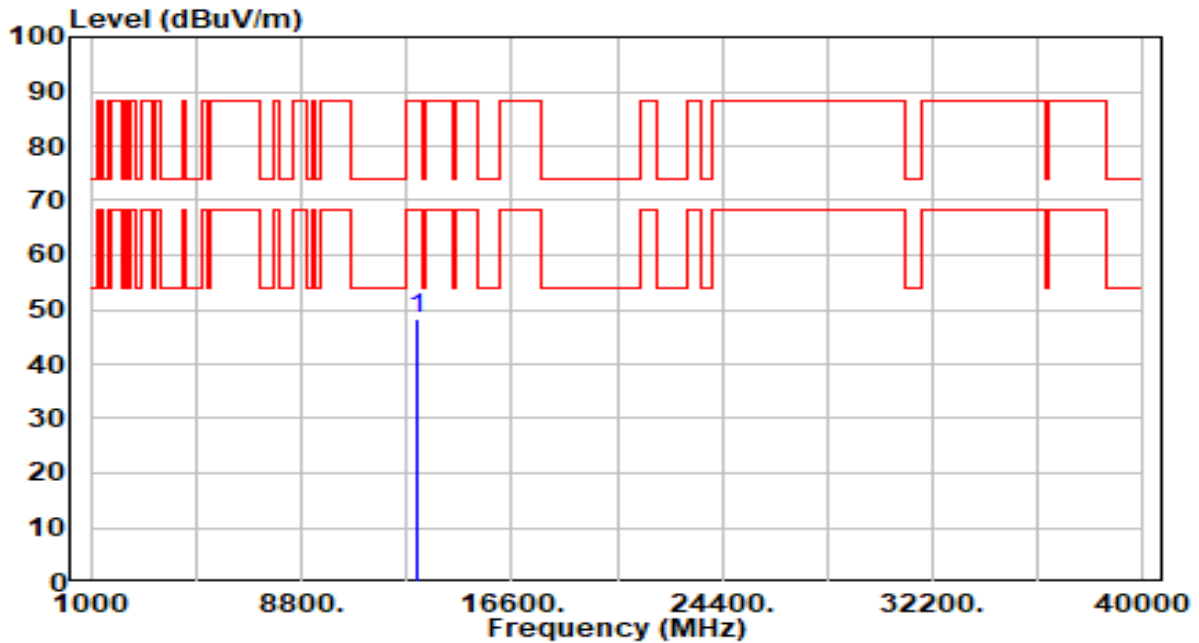


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13070.000	41.35	6.84	48.20	-40.00	88.20	100	88	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band7_TX_CH 153 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

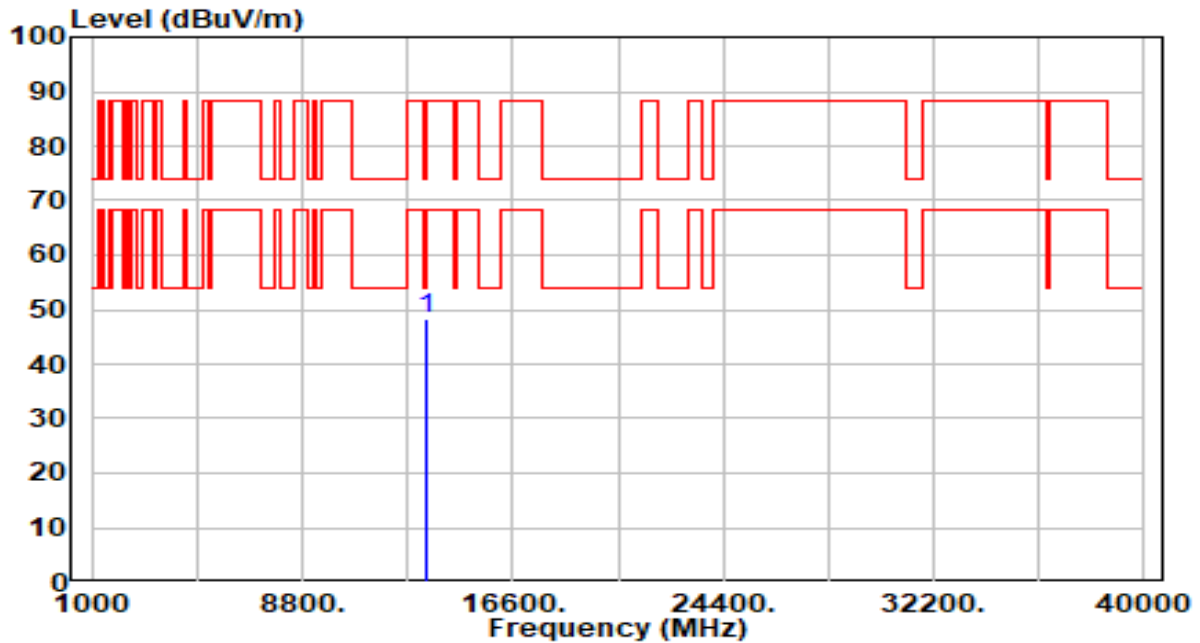


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13430.000	41.62	6.79	48.42	-39.78	88.20	100	69	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band7_TX_CH 153 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

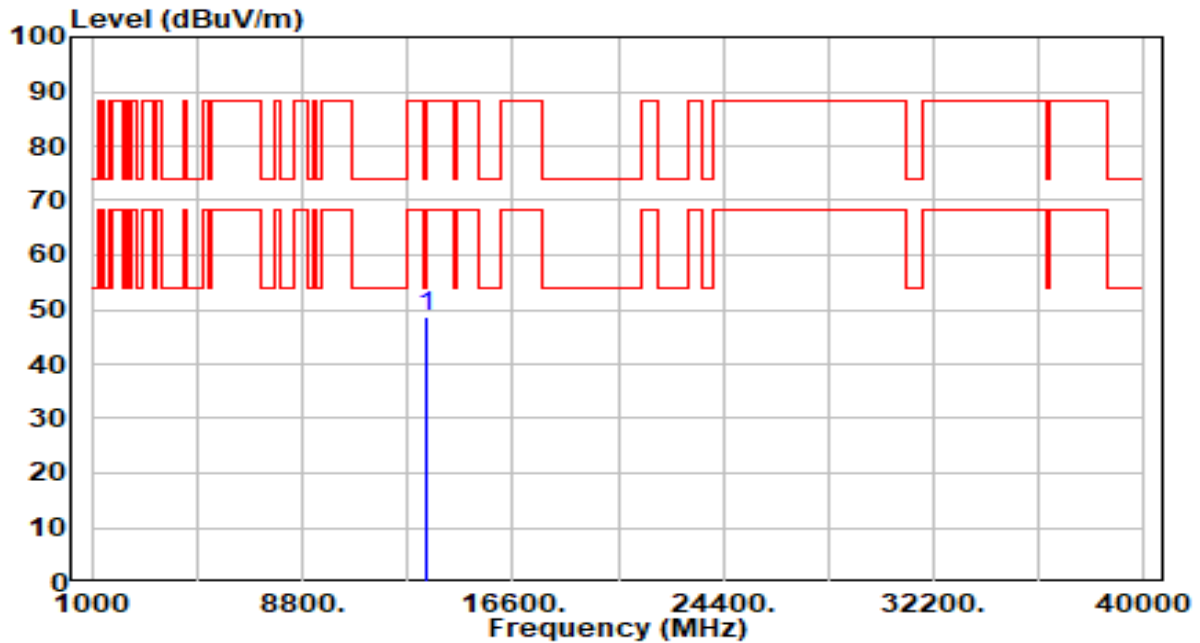


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.80	6.79	48.59	-39.61	88.20	100	178	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band7_TX_CH 181 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

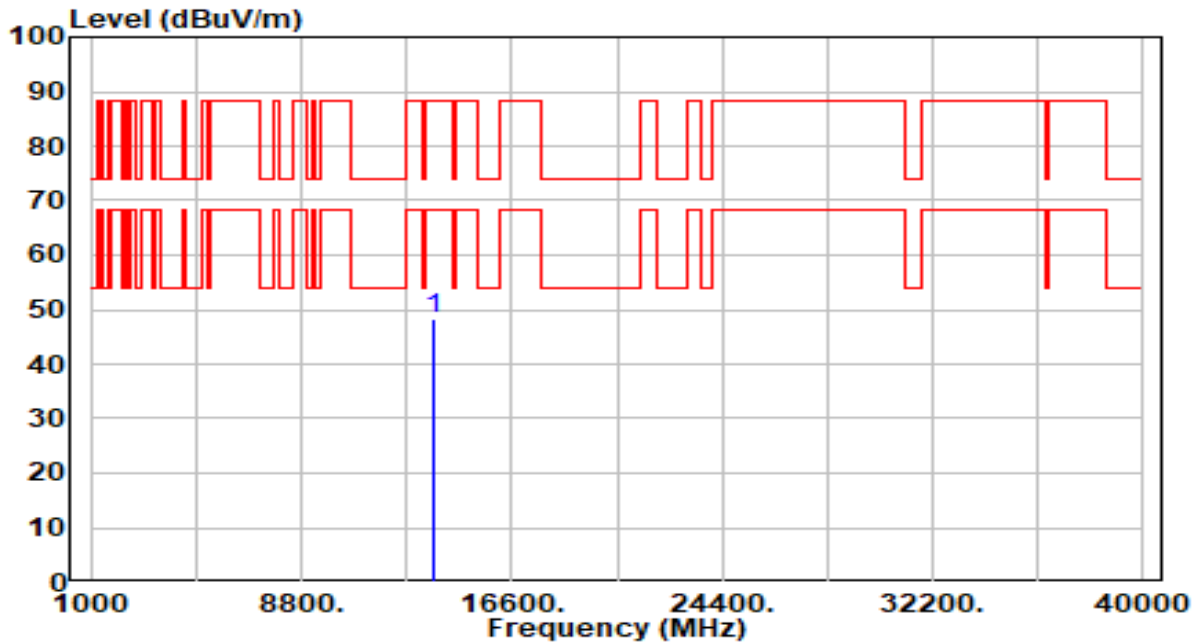


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.70	6.53	48.22	-39.98	88.20	100	304	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band7_TX_CH 181 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

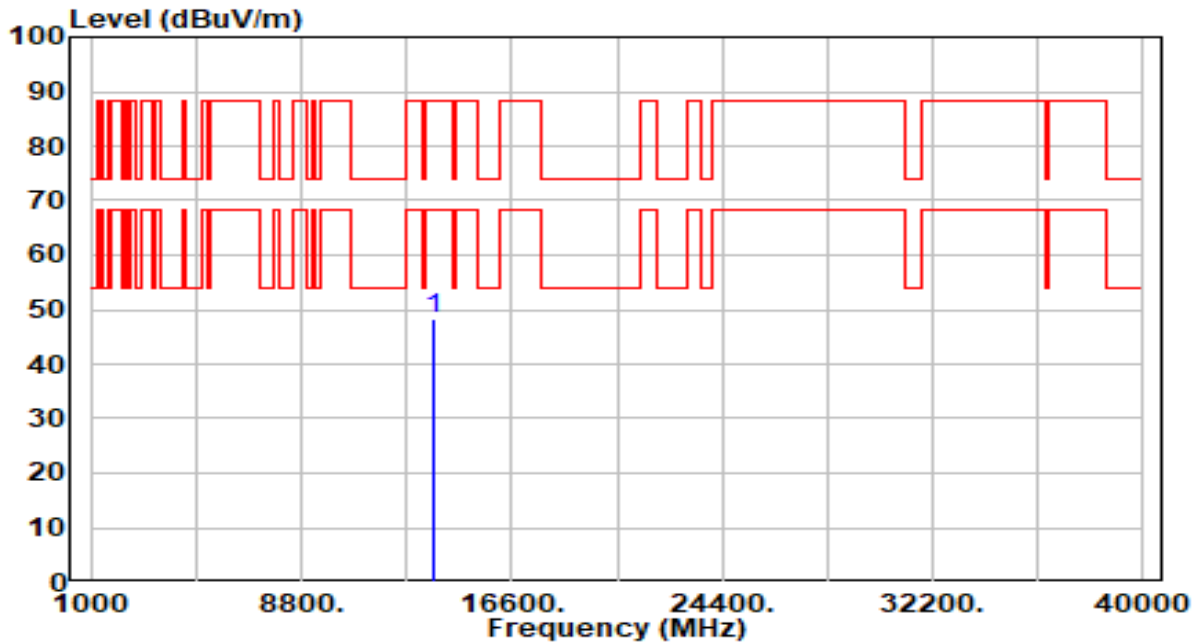


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.77	6.53	48.30	-39.90	88.20	100	311	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band8_TX_CH 185 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

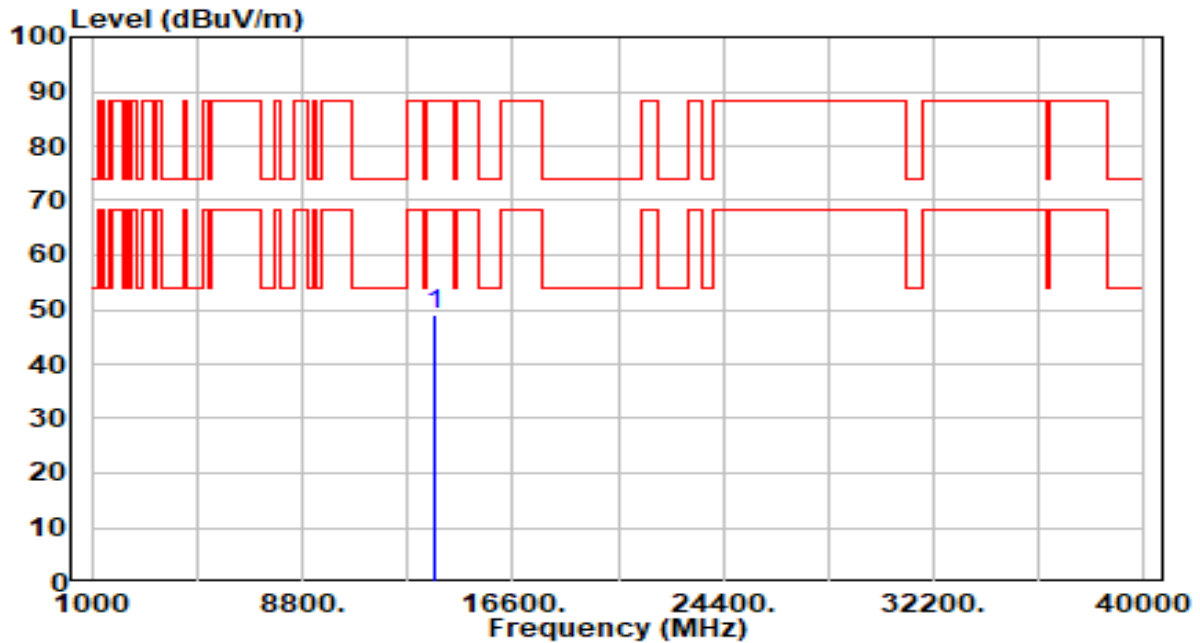


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	42.60	6.53	49.13	-39.07	88.20	100	56	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band8_TX_CH 185 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

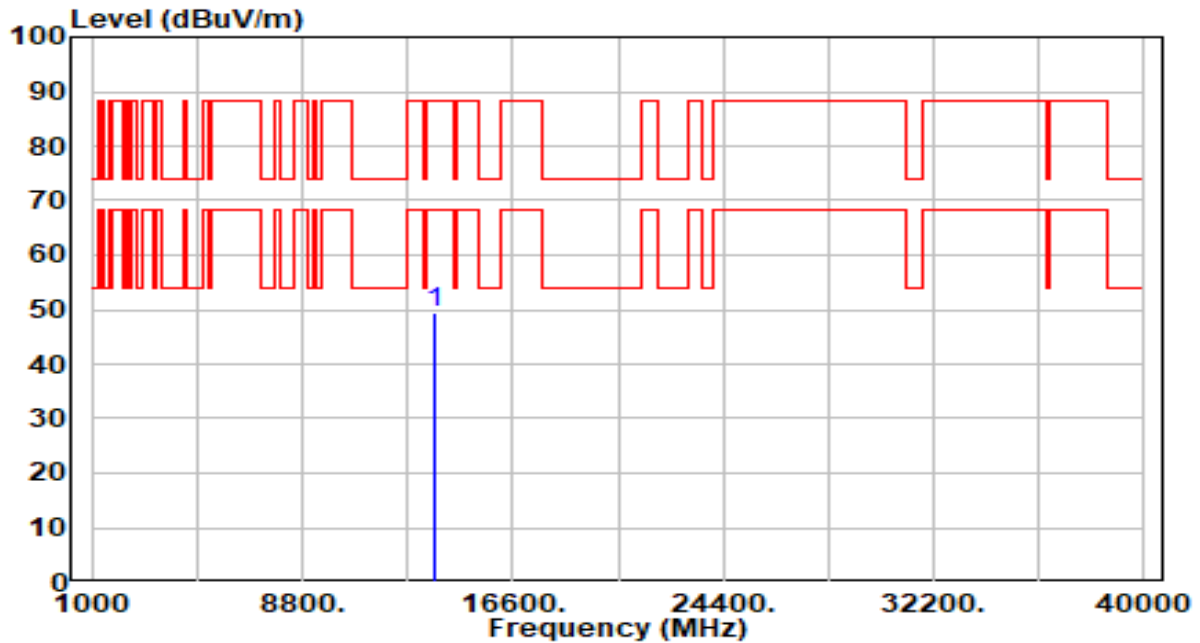


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	42.89	6.53	49.42	-38.78	88.20	100	274	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band8_TX_CH 189 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

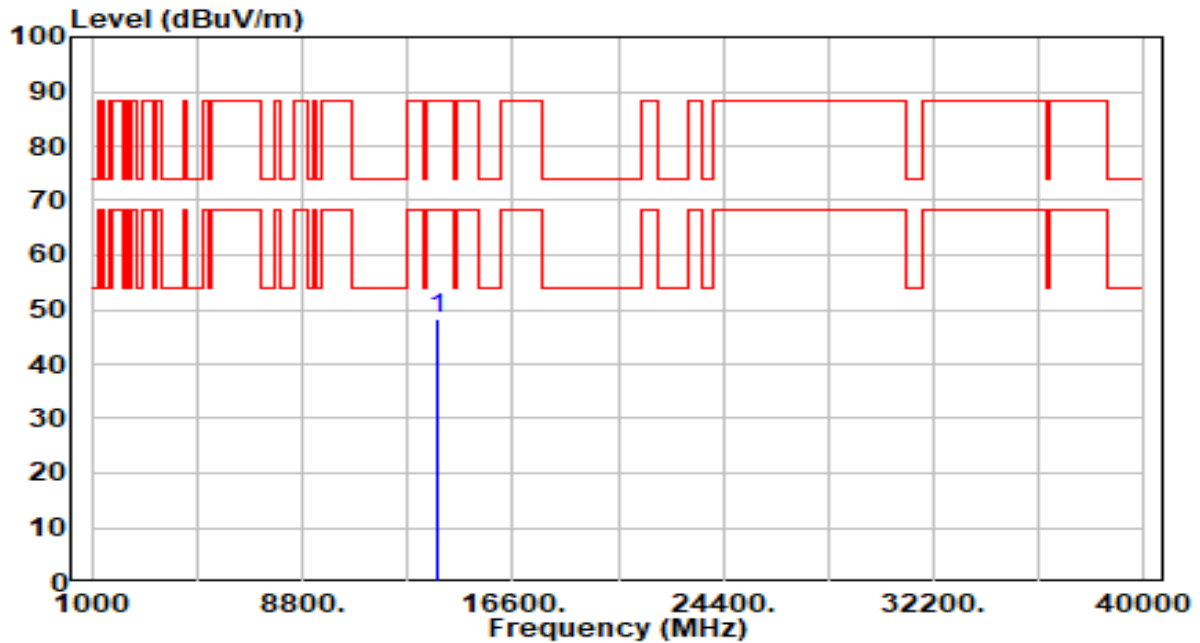


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.82	6.52	48.34	-39.86	88.20	100	360	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band8_TX_CH 189 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

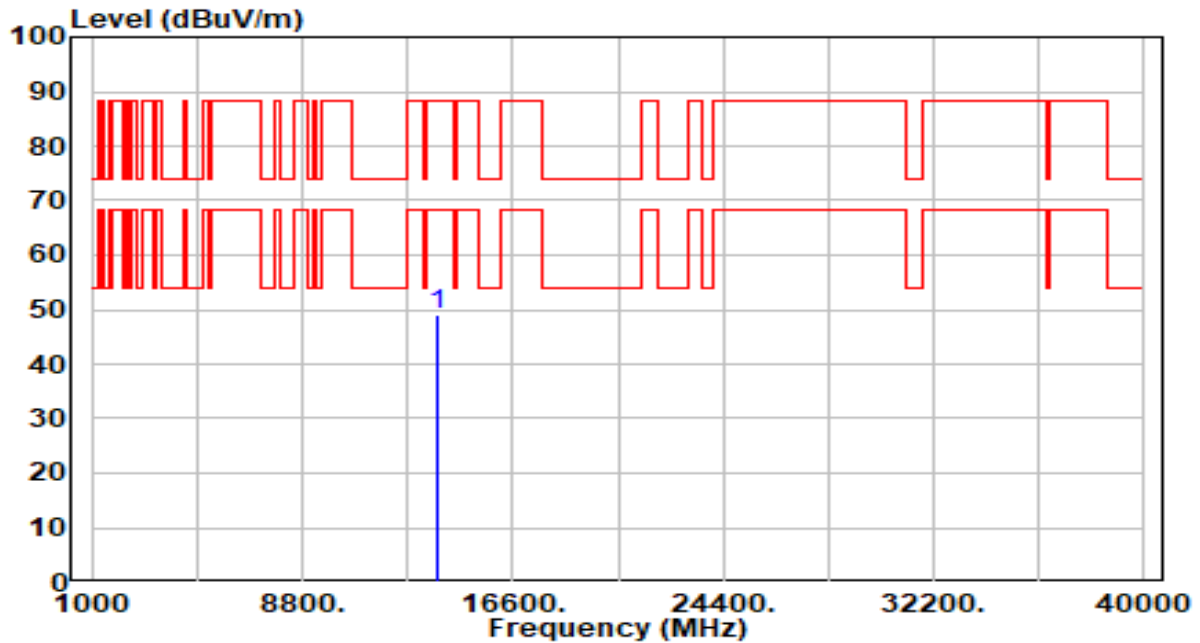


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	* 13790.000	42.70	6.52	49.23	-38.97	88.20	100	166	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band8_TX_CH 213 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

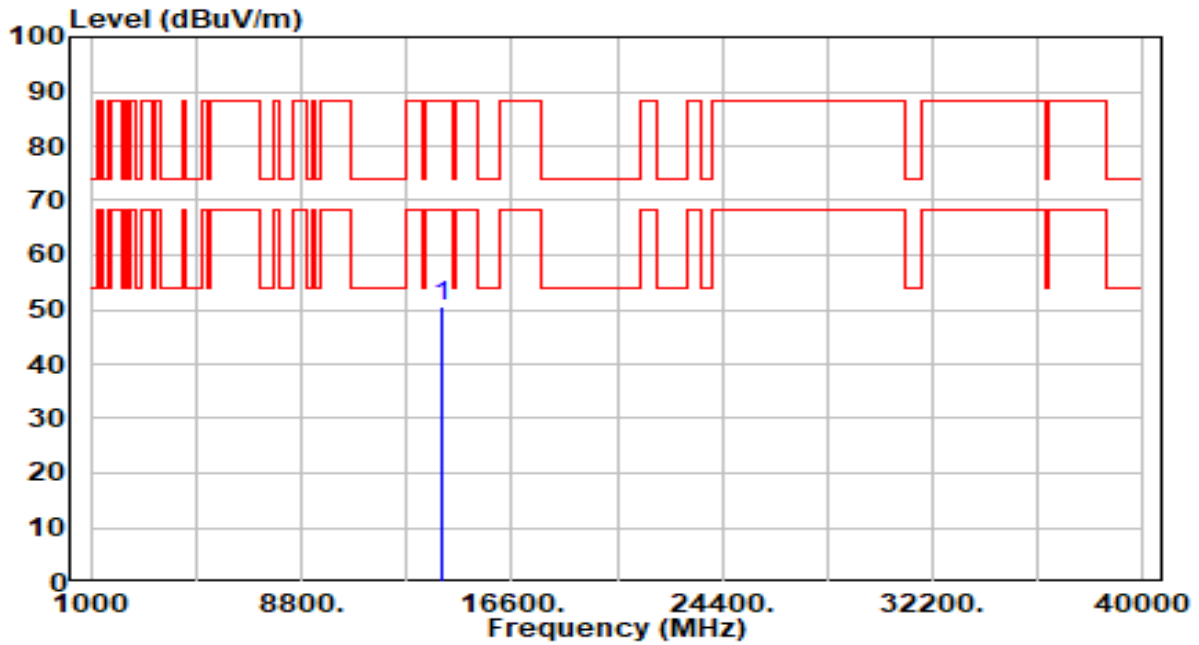


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	43.90	6.63	50.53	-37.67	88.20	100	335	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band8_TX_CH 213 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

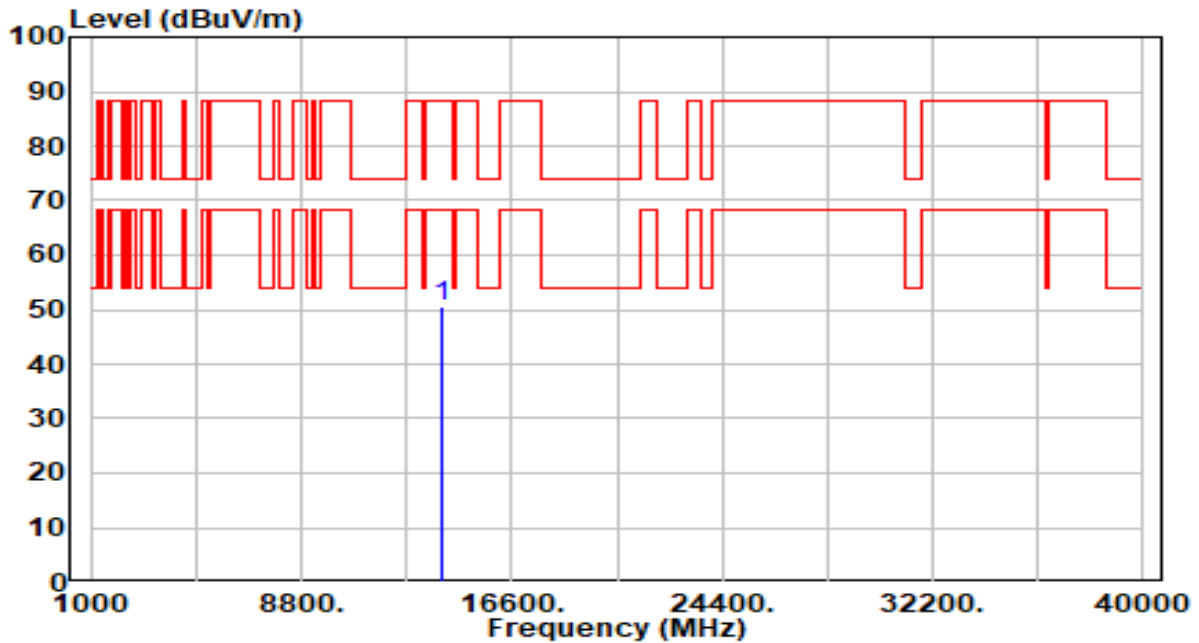


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	43.89	6.63	50.51	-37.69	88.20	100	196	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band8_TX_CH 229 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

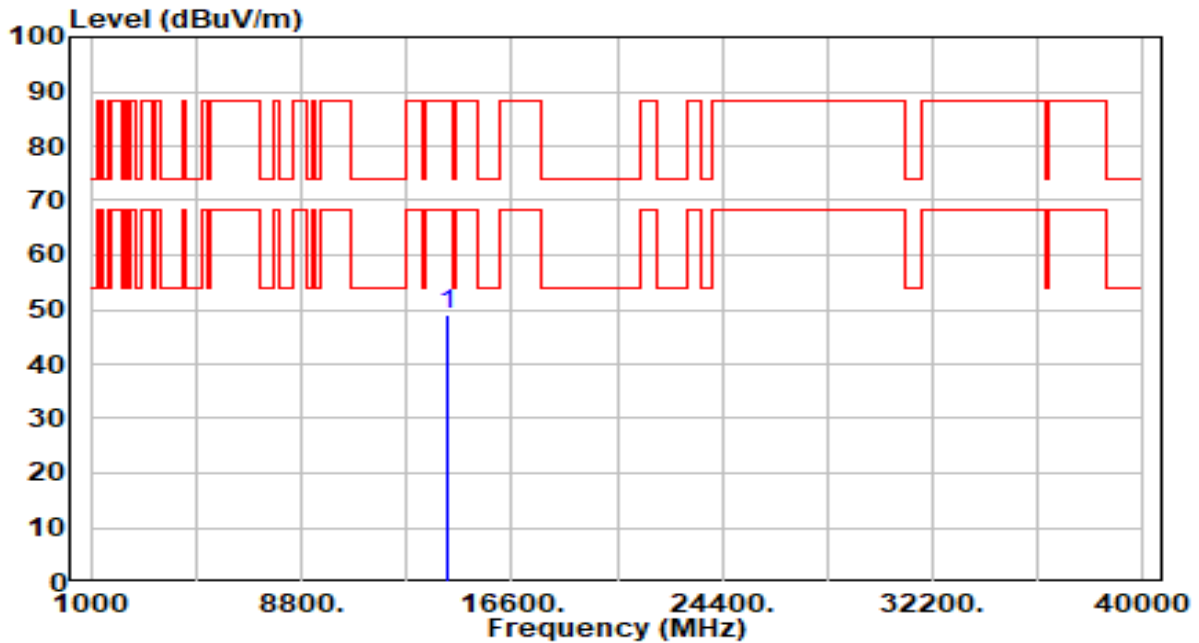


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	42.55	6.66	49.20	-39.00	88.20	100	224	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band8_TX_CH 229 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

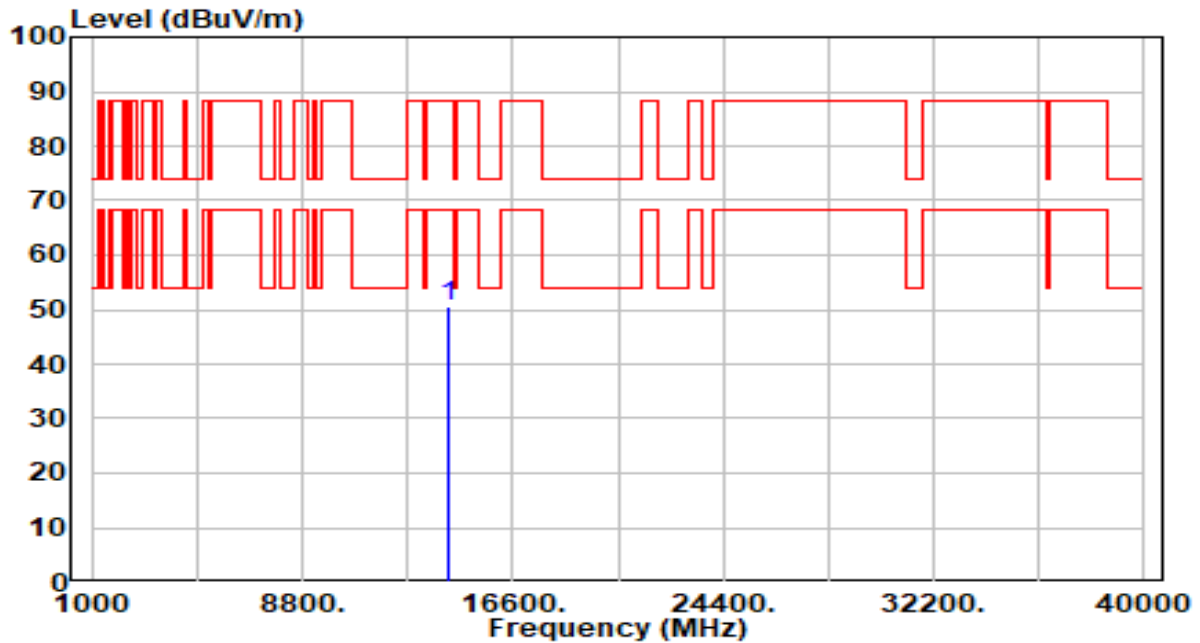


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	43.96	6.66	50.61	-37.59	88.20	100	0	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band8_TX_CH 233 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

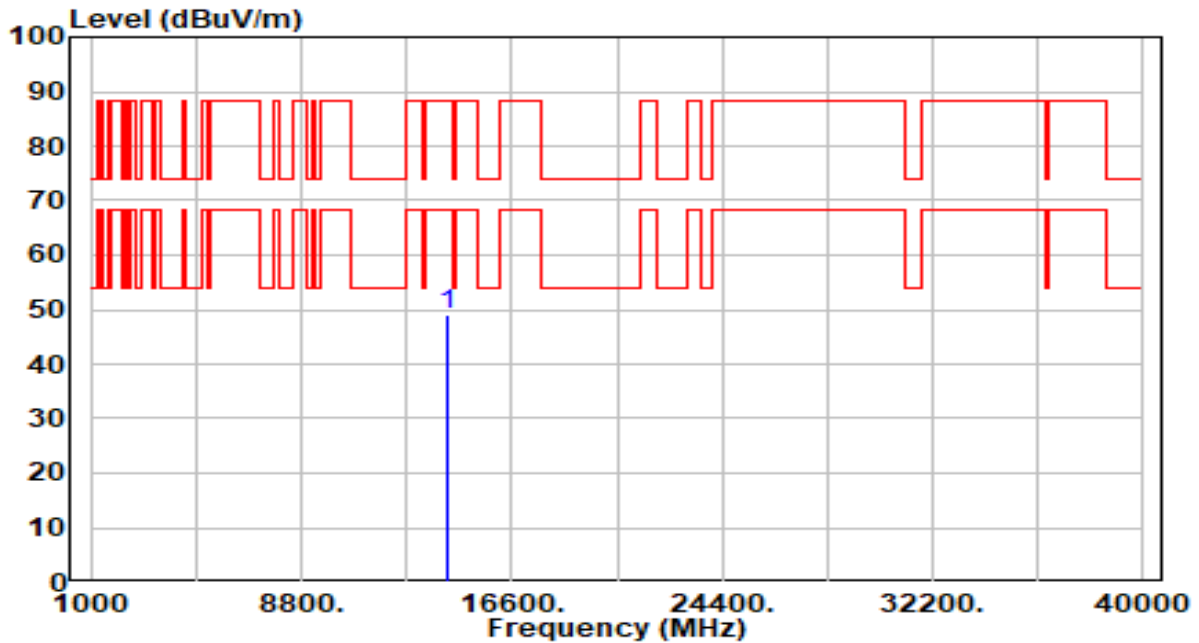


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	42.51	6.66	49.18	-39.02	88.20	100	346	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band8_TX_CH 233 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

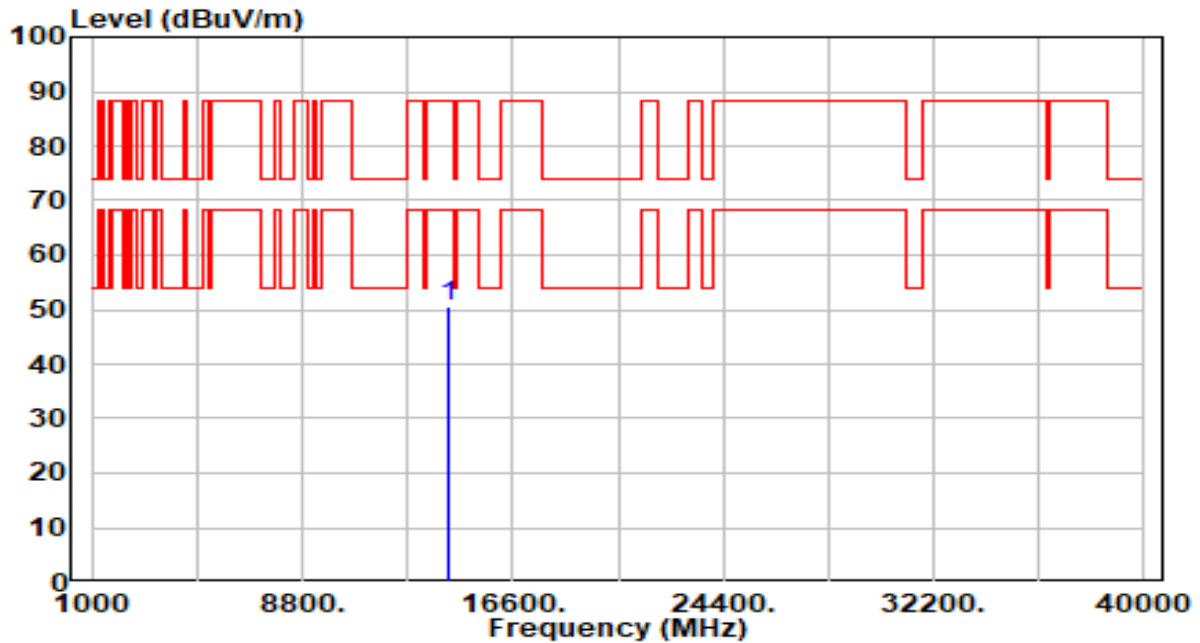


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	43.95	6.66	50.61	-37.59	88.20	100	10	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-40MHz_Band5_TX_CH 3 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

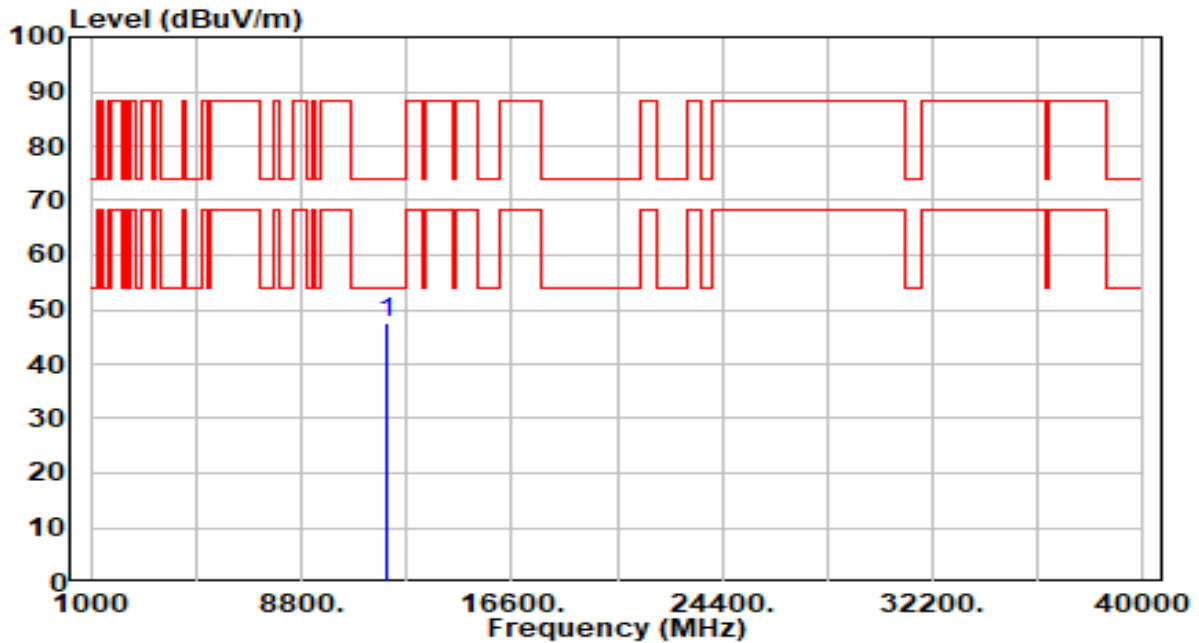


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	11930.000	42.20	5.41	47.62	-26.38	74.00	100	21	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-40MHz_Band5_TX_CH 3 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

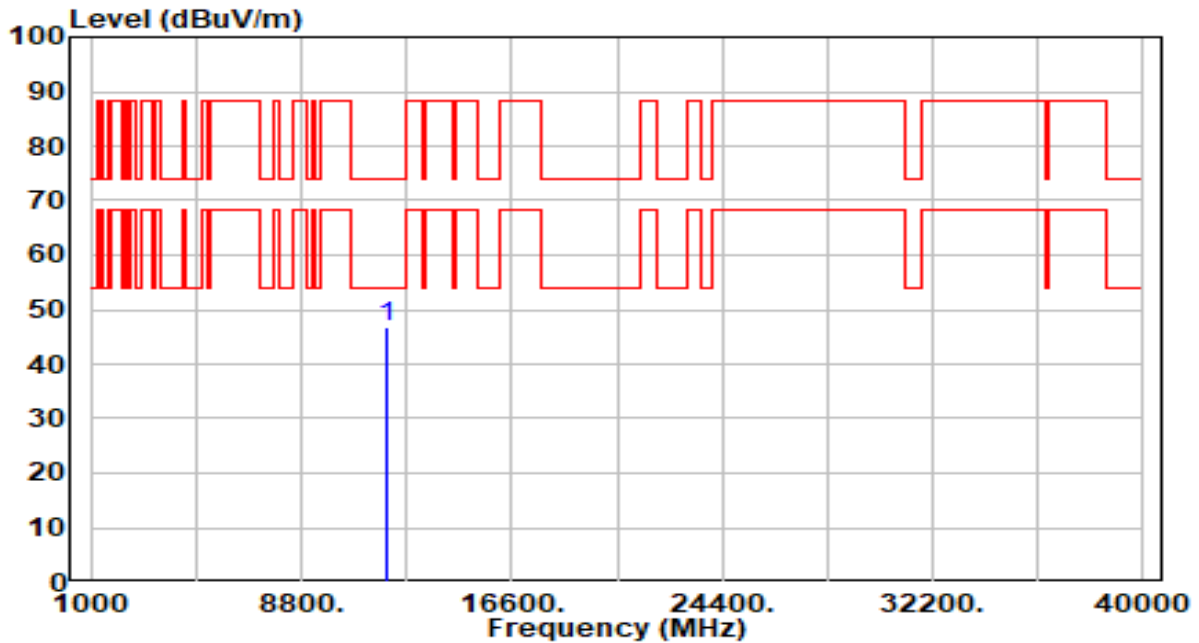


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	11930.000	41.39	5.41	46.80	-27.20	74.00	100	44	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-40MHz_Band5_TX_CH 51 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

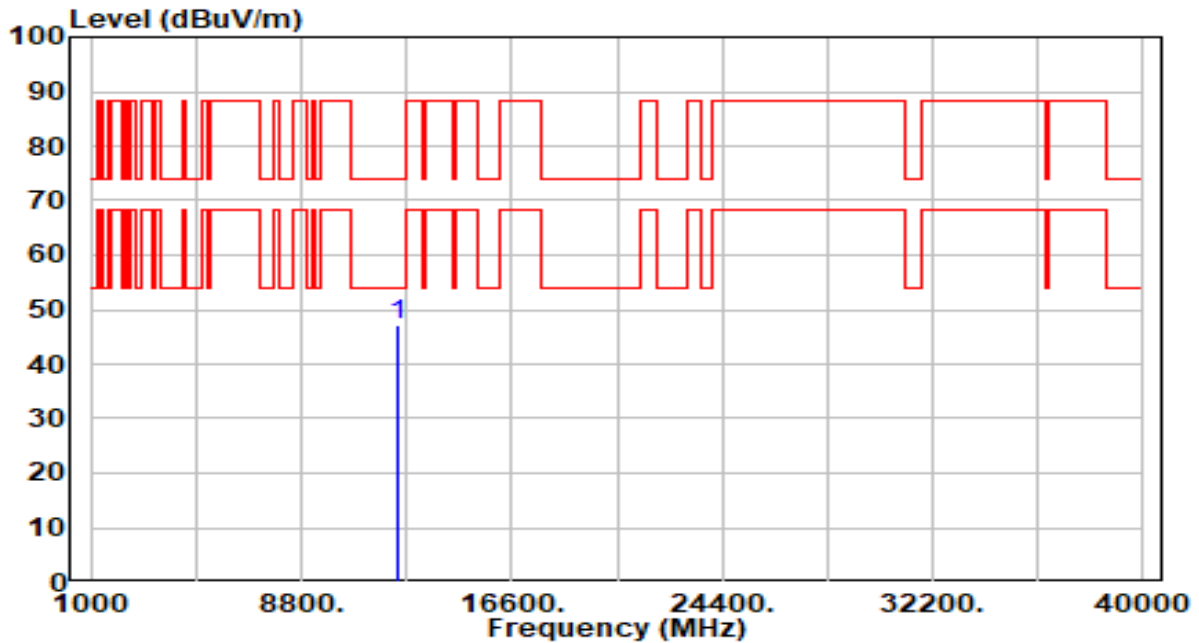


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	40.94	6.20	47.13	-26.87	74.00	100	211	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-40MHz_Band5_TX_CH 51 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

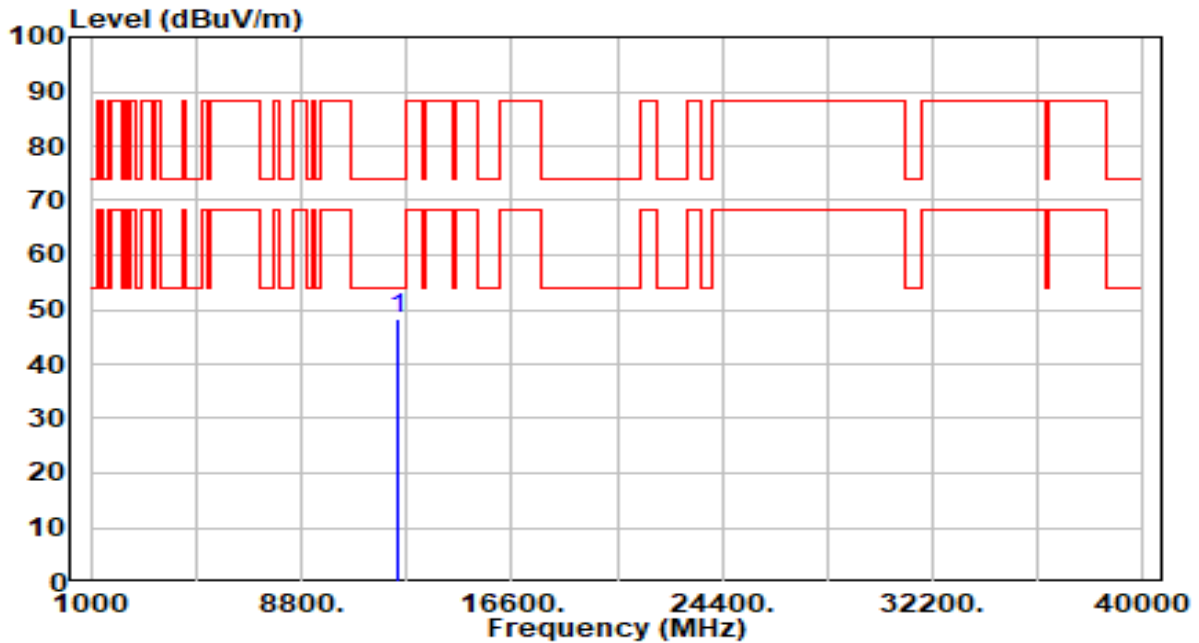


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.95	6.20	48.15	-25.85	74.00	100	207	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-40MHz_Band5_TX_CH 91 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

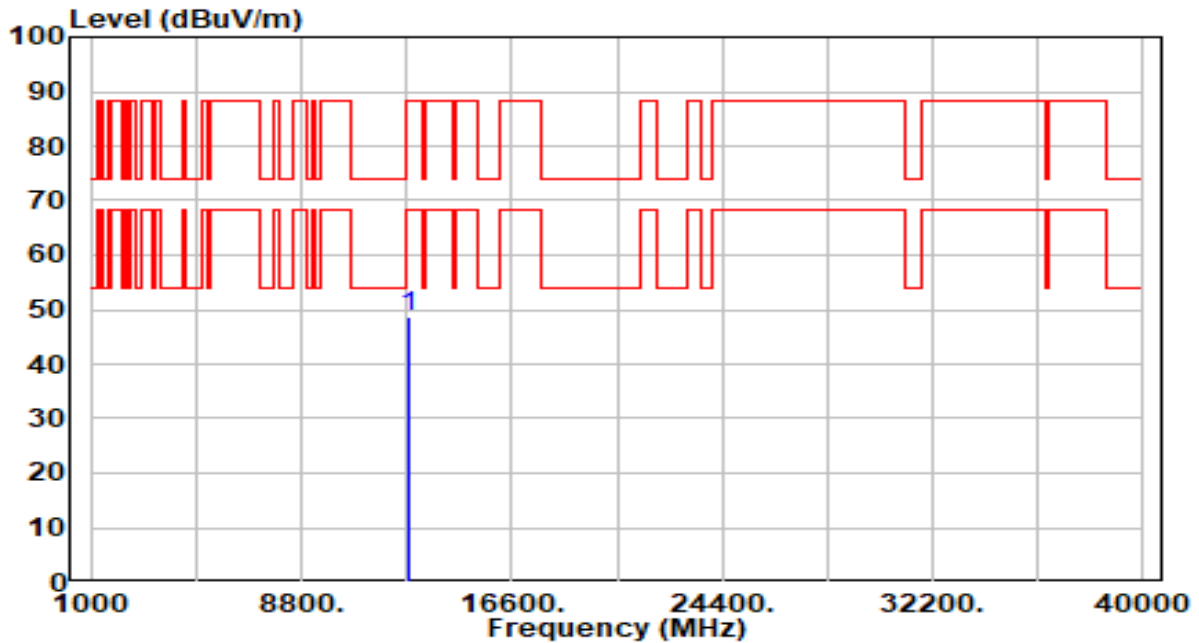


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.92	6.92	48.84	-39.36	88.20	100	225	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-40MHz_Band5_TX_CH 91 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

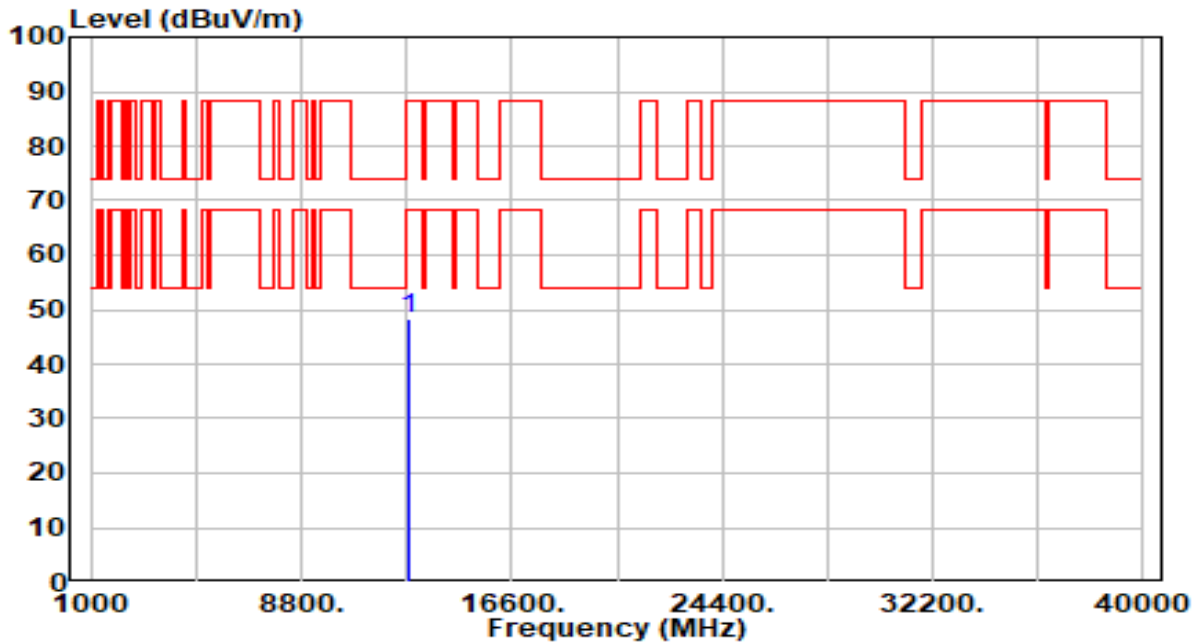


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.47	6.92	48.40	-39.80	88.20	100	24	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-40MHz_Band6_TX_CH 99 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

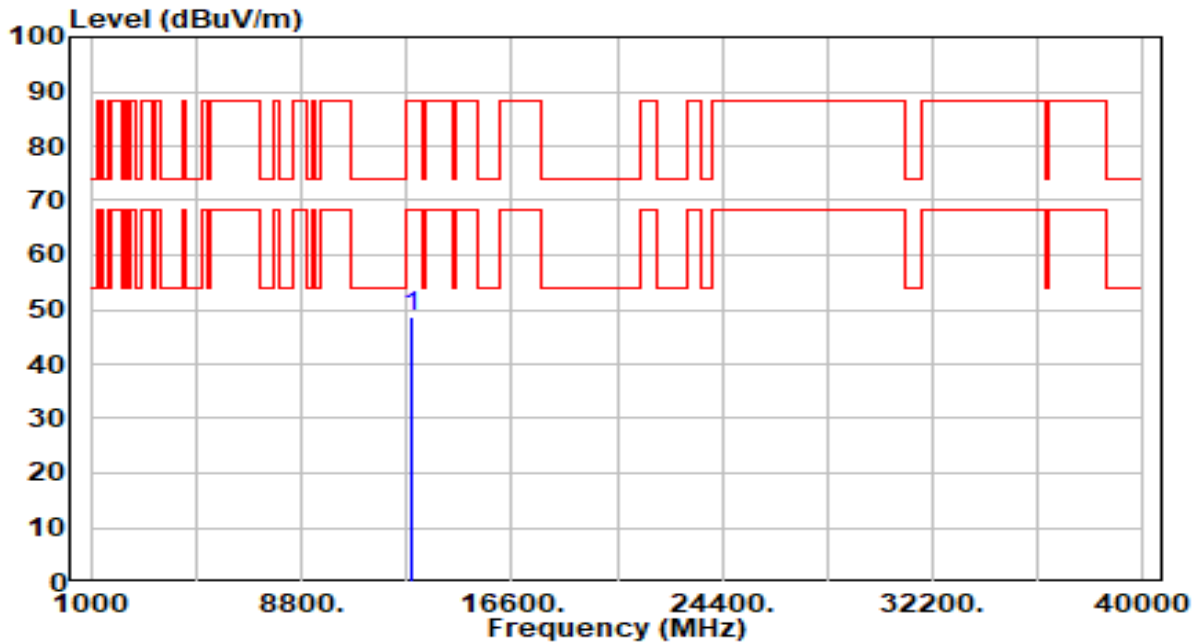


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	12890.000	41.80	6.90	48.70	-39.50	88.20	100	261	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-40MHz_Band6_TX_CH 99 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

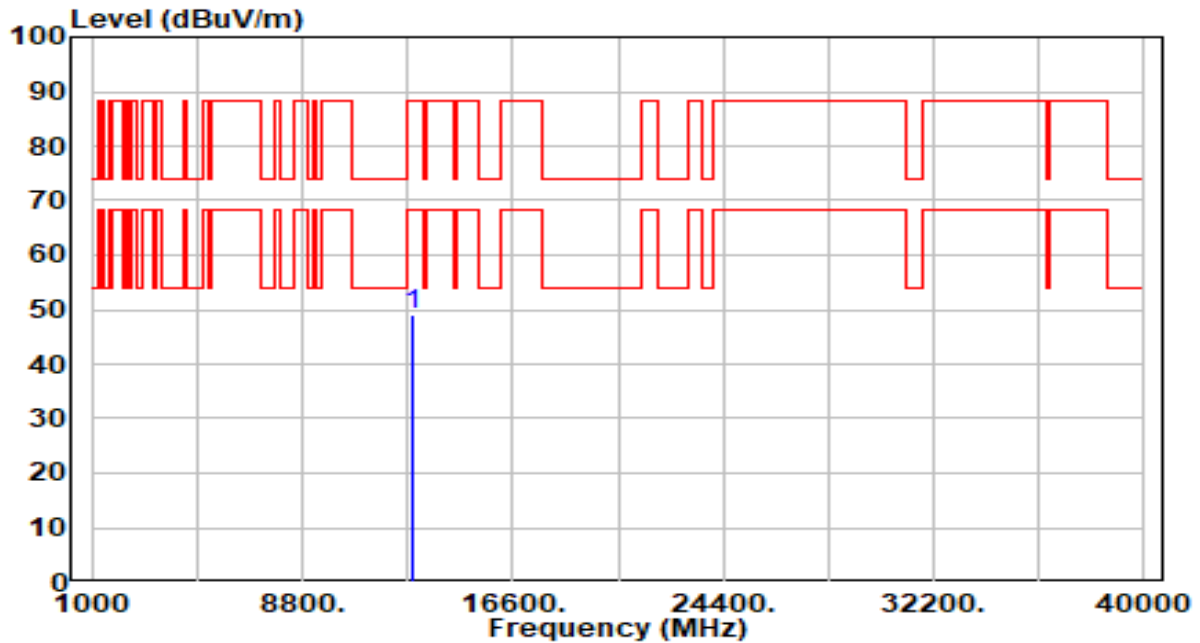


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	12890.000	42.03	6.90	48.93	-39.27	88.20	100	134	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-40MHz_Band6_TX_CH 107 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

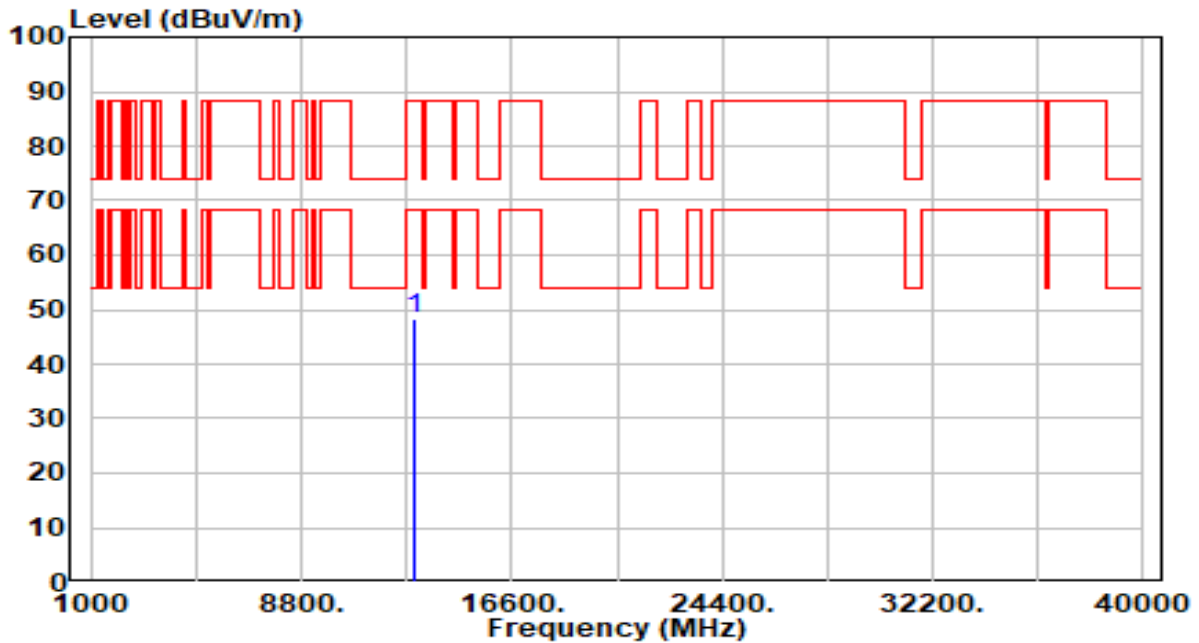


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.51	6.88	48.39	-39.81	88.20	100	289	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-40MHz_Band6_TX_CH 107 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

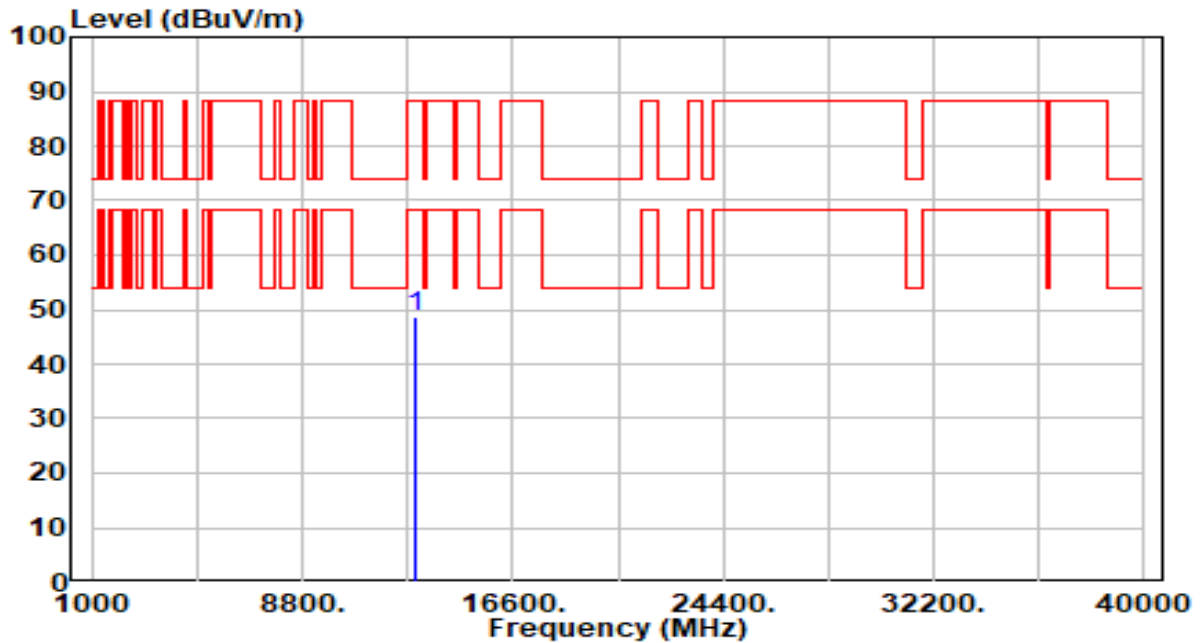


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	12970.000	41.62	6.88	48.50	-39.70	88.20	100	7	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-40MHz_Band6_TX_CH 115 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

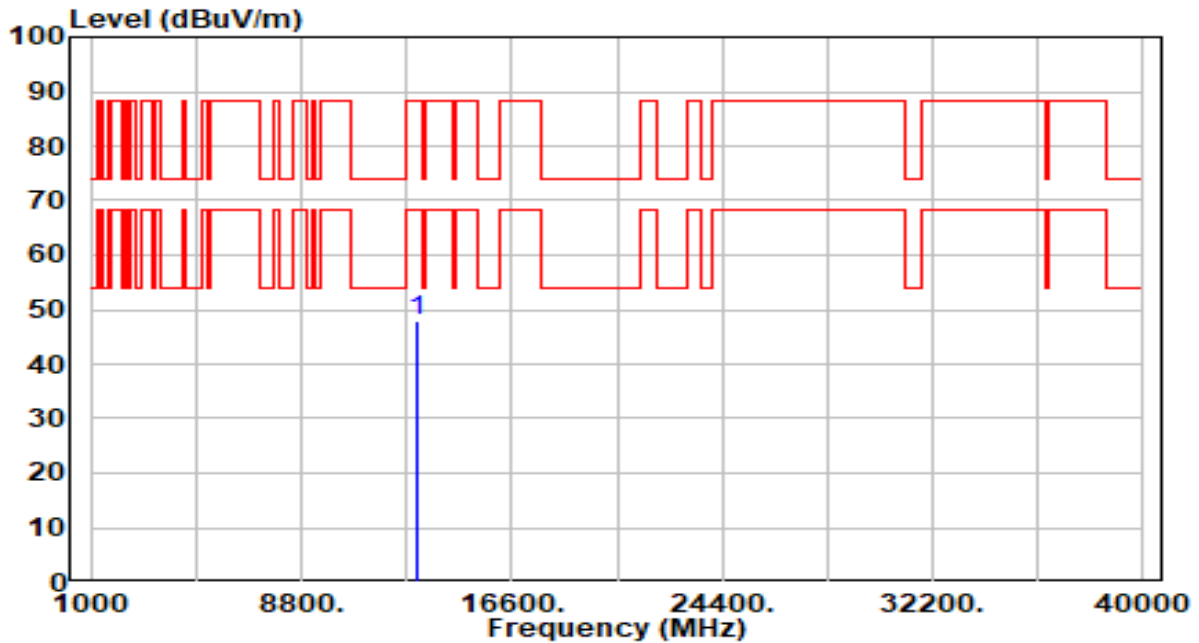


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.22	6.85	48.07	-40.13	88.20	100	182	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-40MHz_Band6_TX_CH 115 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

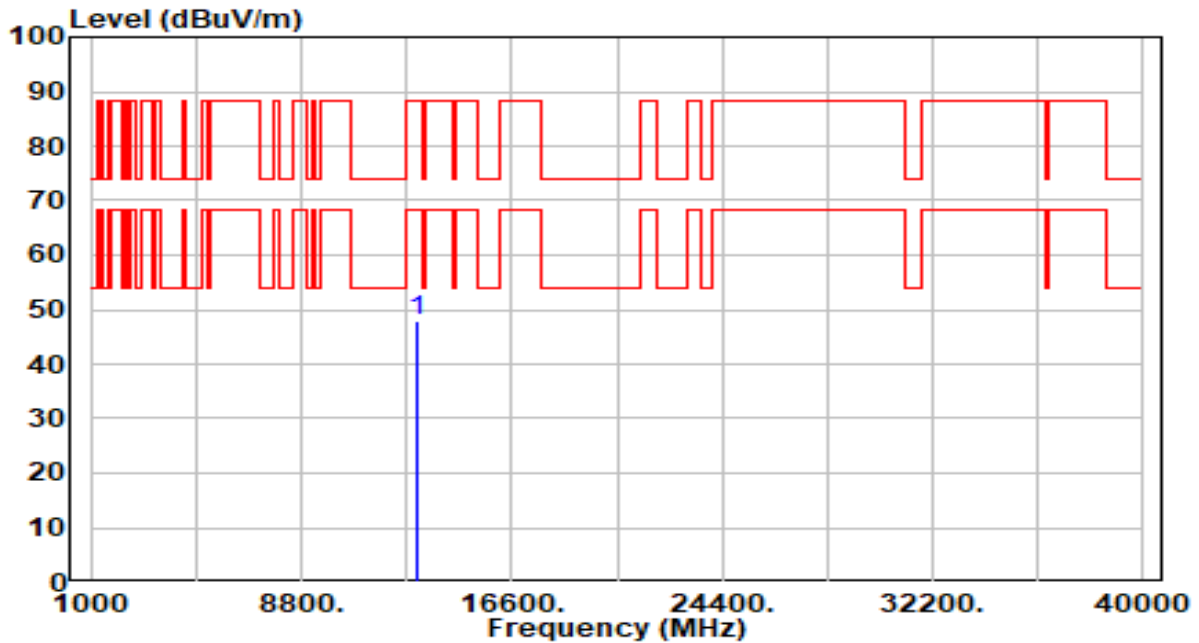


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13050.000	40.92	6.85	47.77	-40.43	88.20	100	333	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-40MHz_Band7_TX_CH 123 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

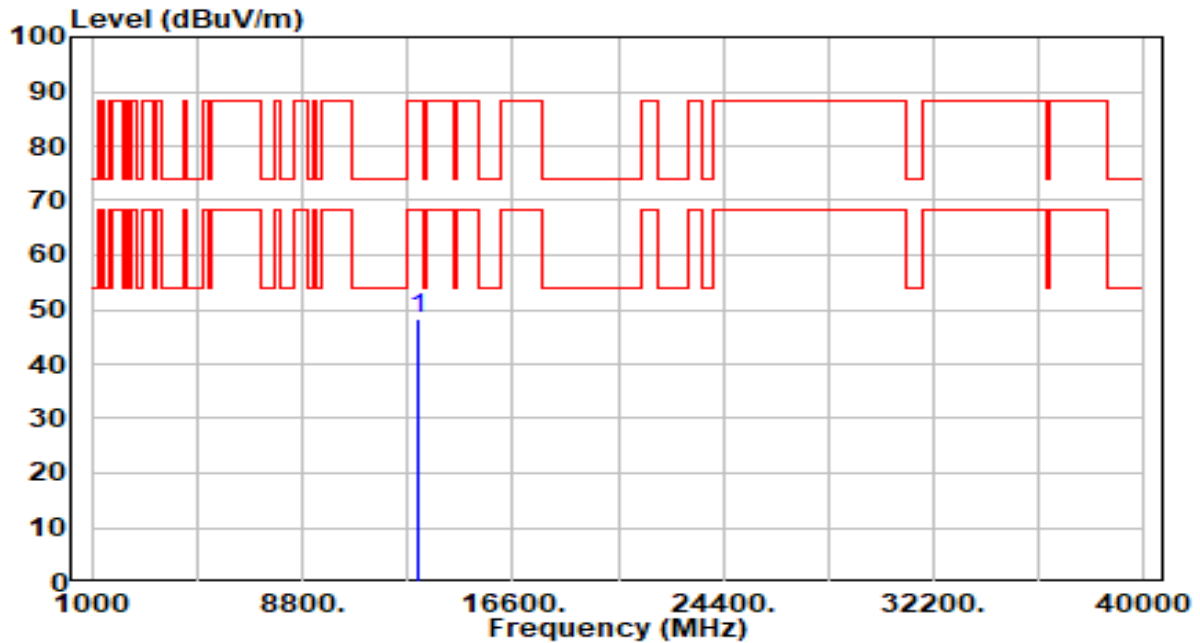


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.31	6.82	48.13	-40.07	88.20	100	282	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-40MHz_Band7_TX_CH 123 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

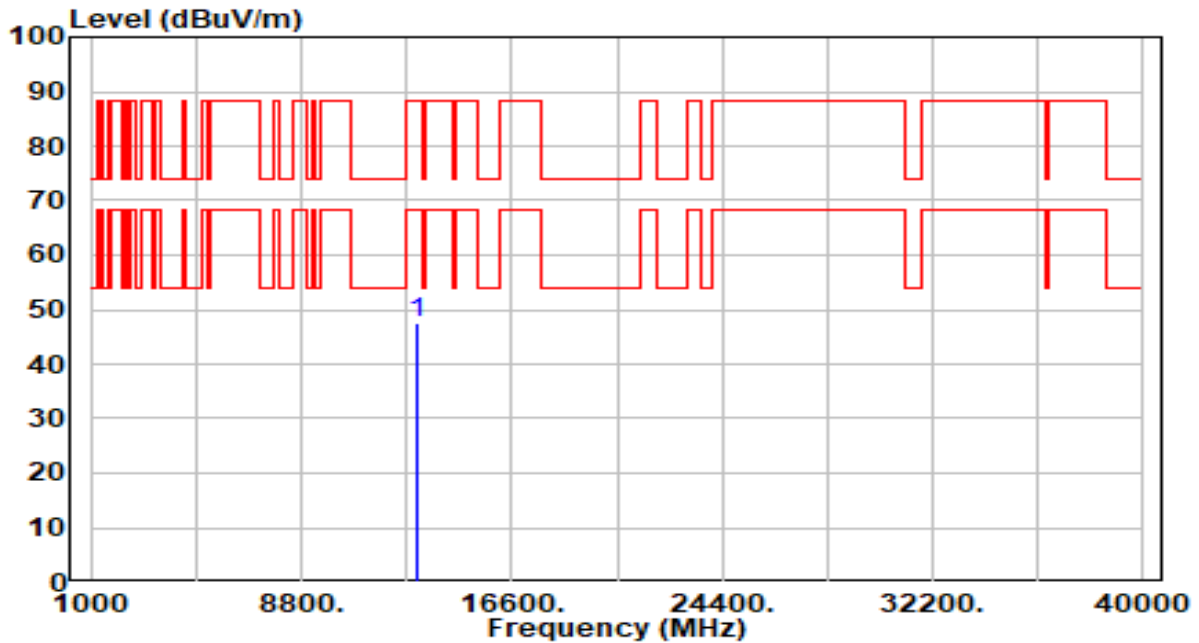


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13130.000	40.82	6.82	47.64	-40.56	88.20	100	7	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-40MHz_Band7_TX_CH 147 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

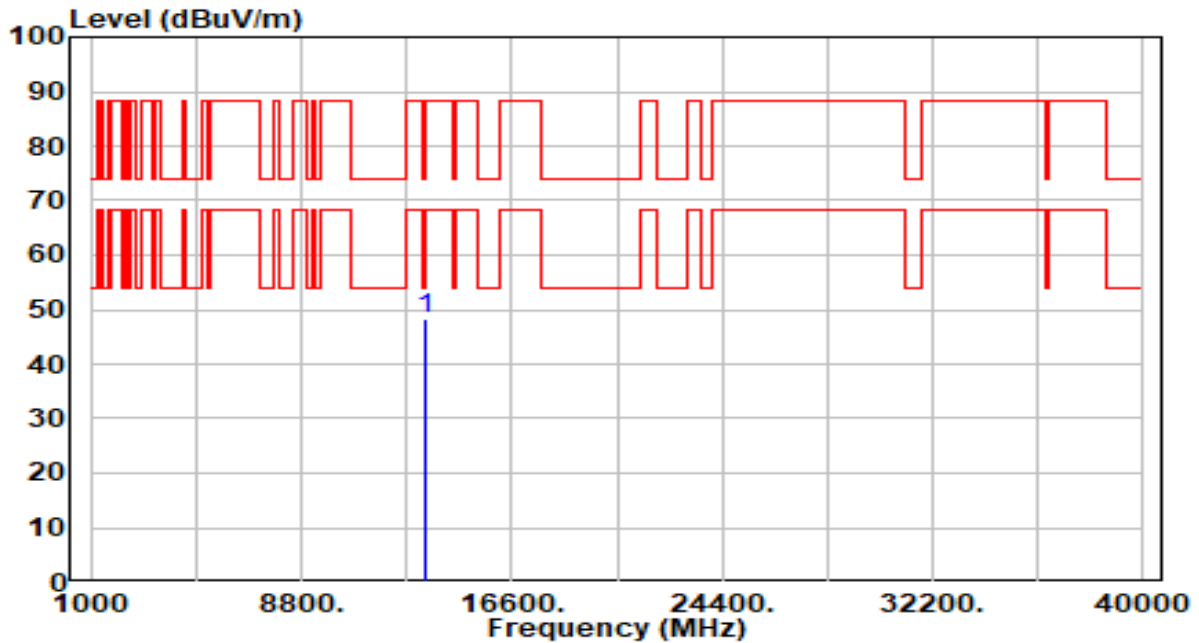


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.57	6.81	48.38	-25.62	74.00	100	181	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-40MHz_Band7_TX_CH 147 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

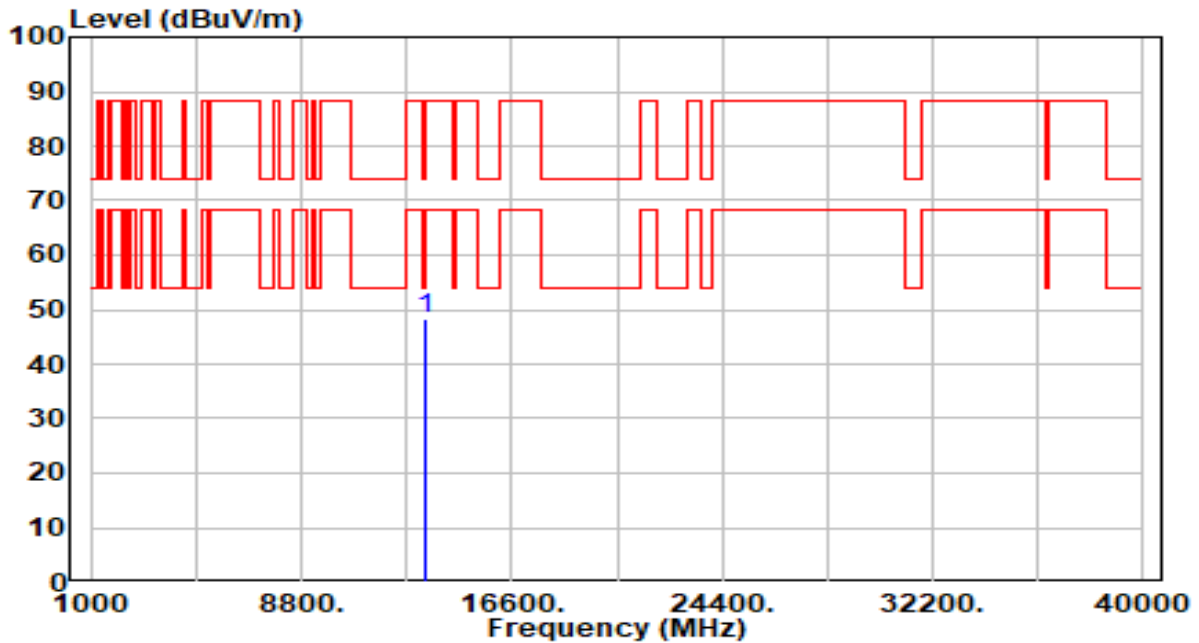


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.38	6.81	48.19	-25.81	74.00	100	7	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-40MHz_Band7_TX_CH 179 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

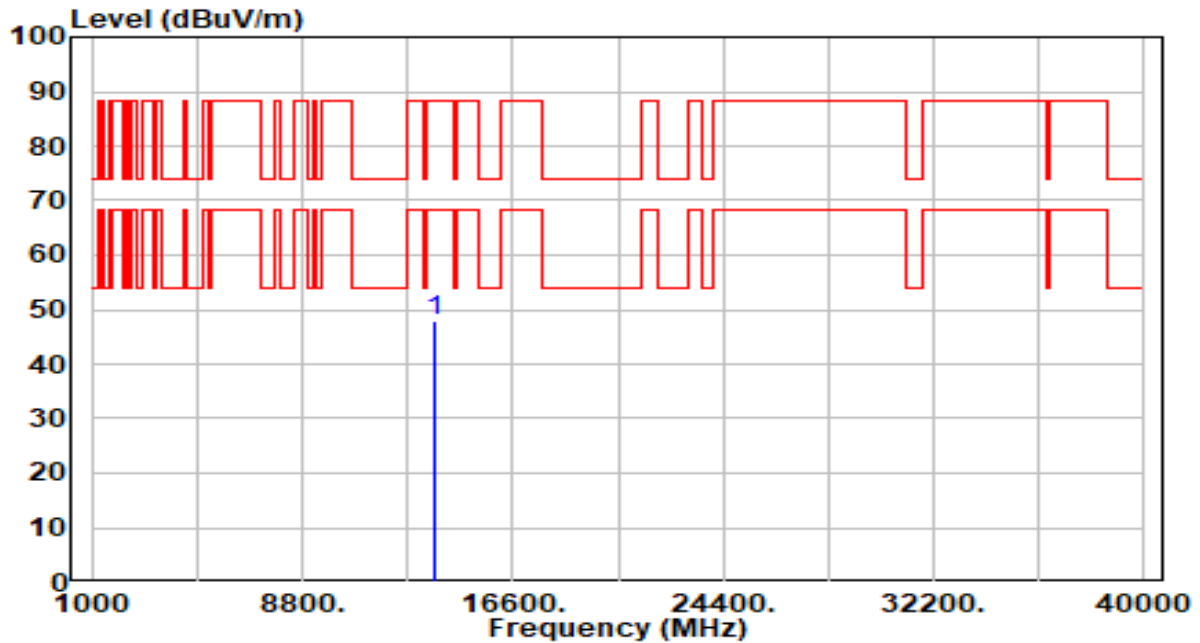


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.35	6.53	47.88	-40.32	88.20	100	115	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-40MHz_Band7_TX_CH 179 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

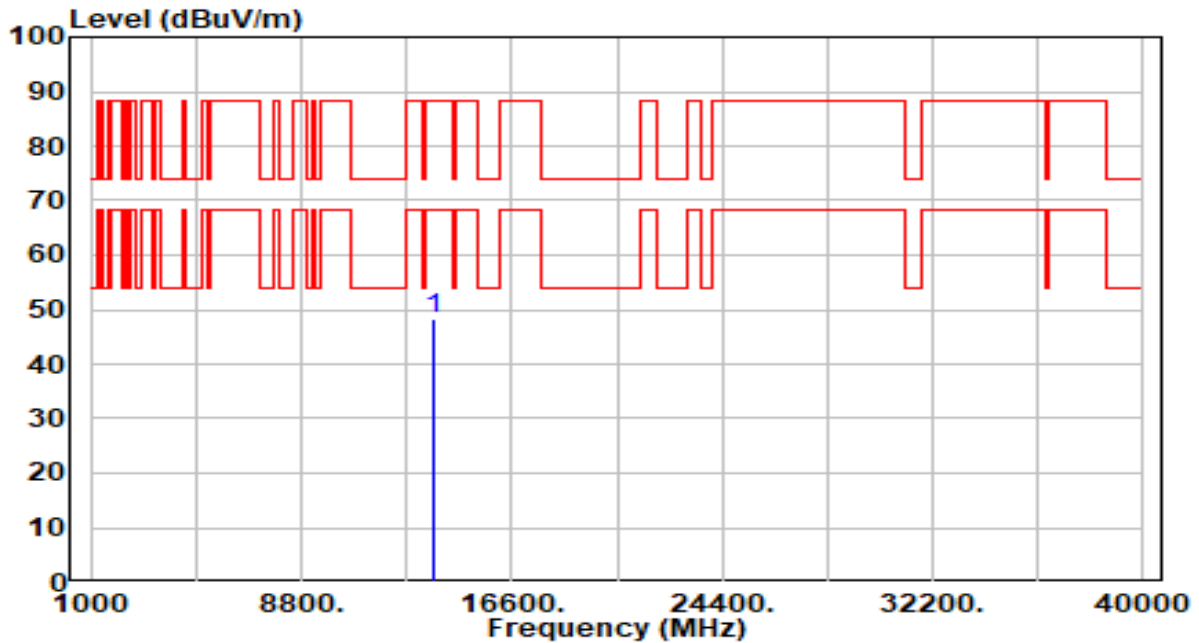


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.61	6.53	48.14	-40.06	88.20	100	260	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-80MHz_Band5_TX_CH 7 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

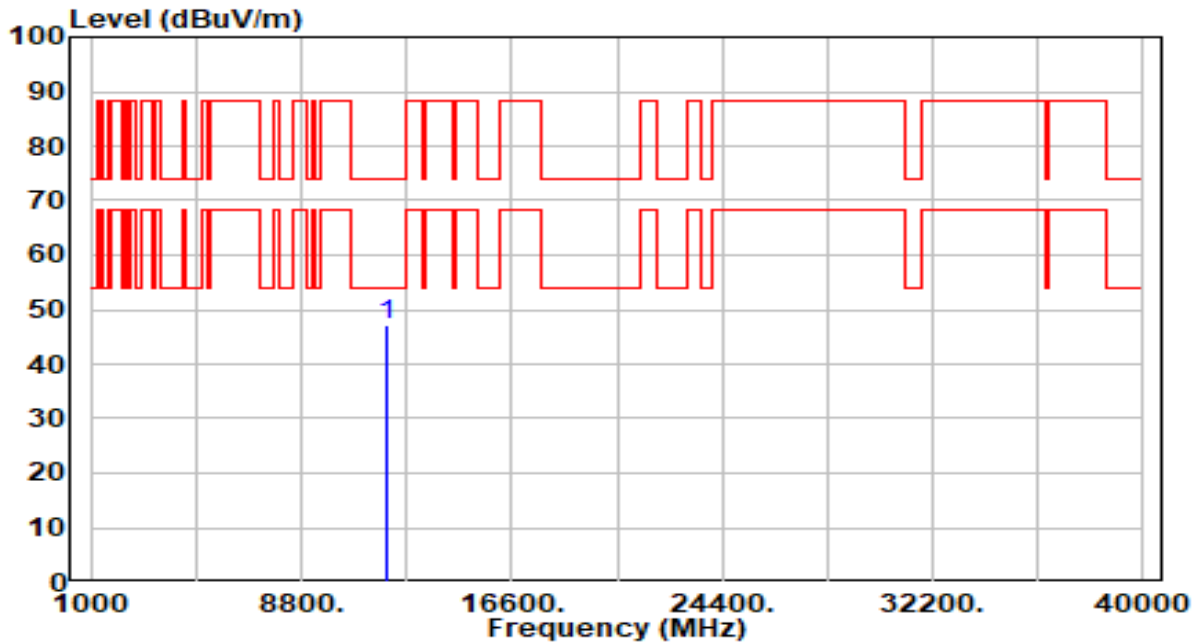


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	11970.000	41.62	5.46	47.08	-26.92	74.00	100	292	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-80MHz_Band5_TX_CH 7 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

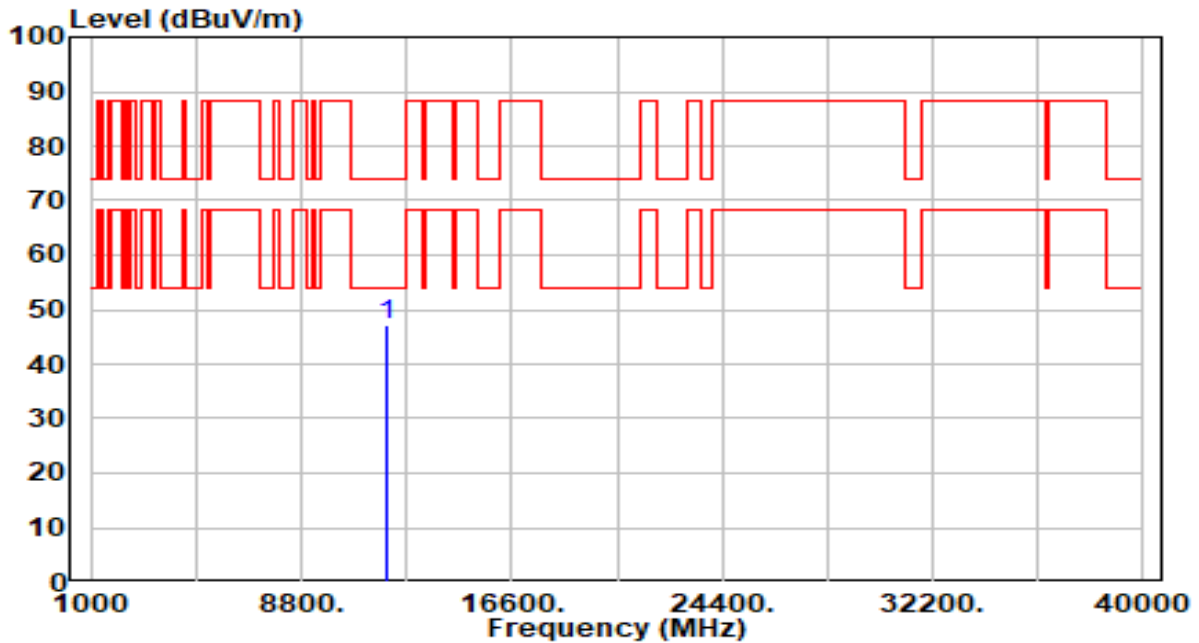


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	11970.000	41.52	5.46	46.98	-27.02	74.00	100	112	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-80MHz_Band5_TX_CH 55 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

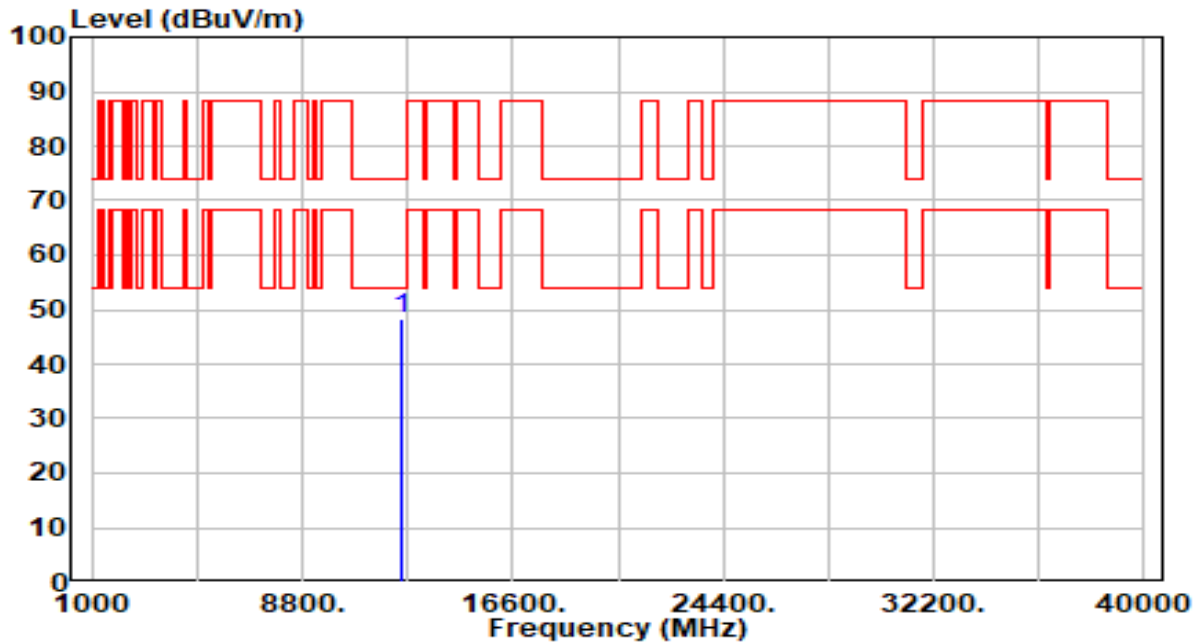


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	42.15	6.33	48.48	-25.52	74.00	100	115	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-80MHz_Band5_TX_CH 55 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

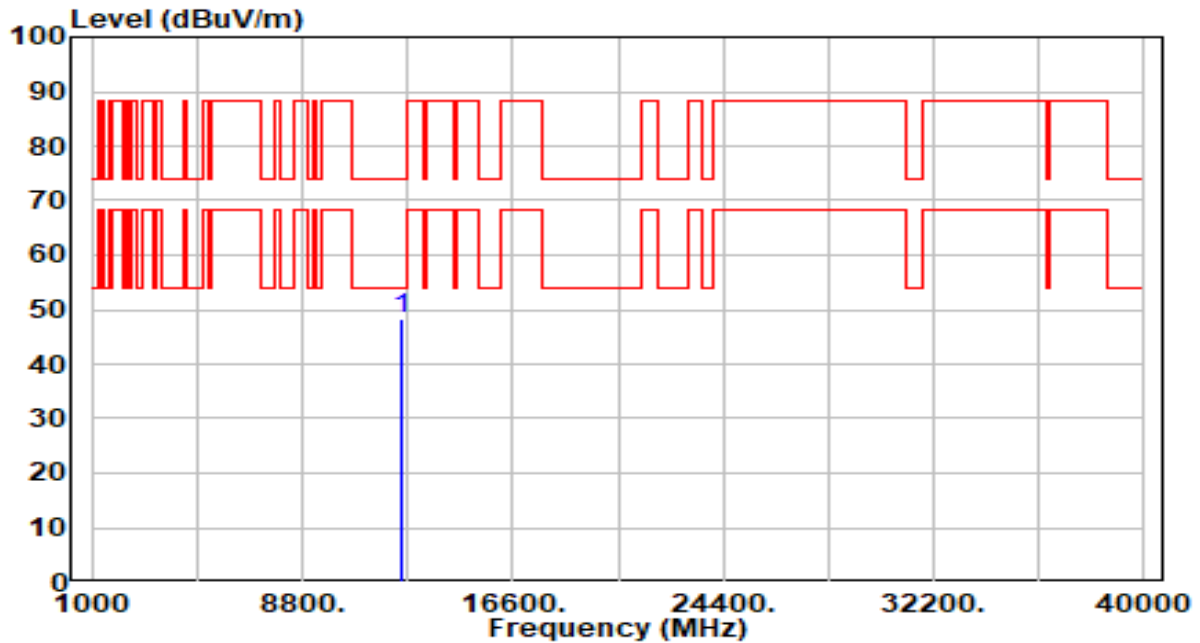


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	42.05	6.33	48.39	-25.61	74.00	100	24	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-80MHz_Band5_TX_CH 87 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

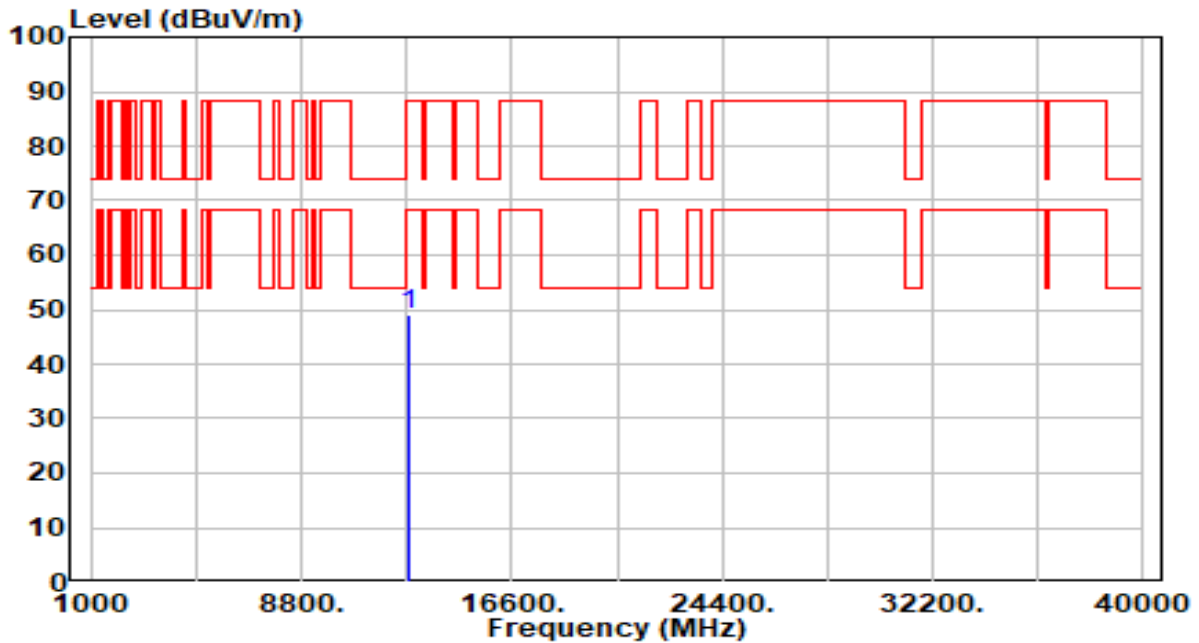


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.97	6.90	48.87	-39.33	88.20	100	219	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-80MHz_Band5_TX_CH 87 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

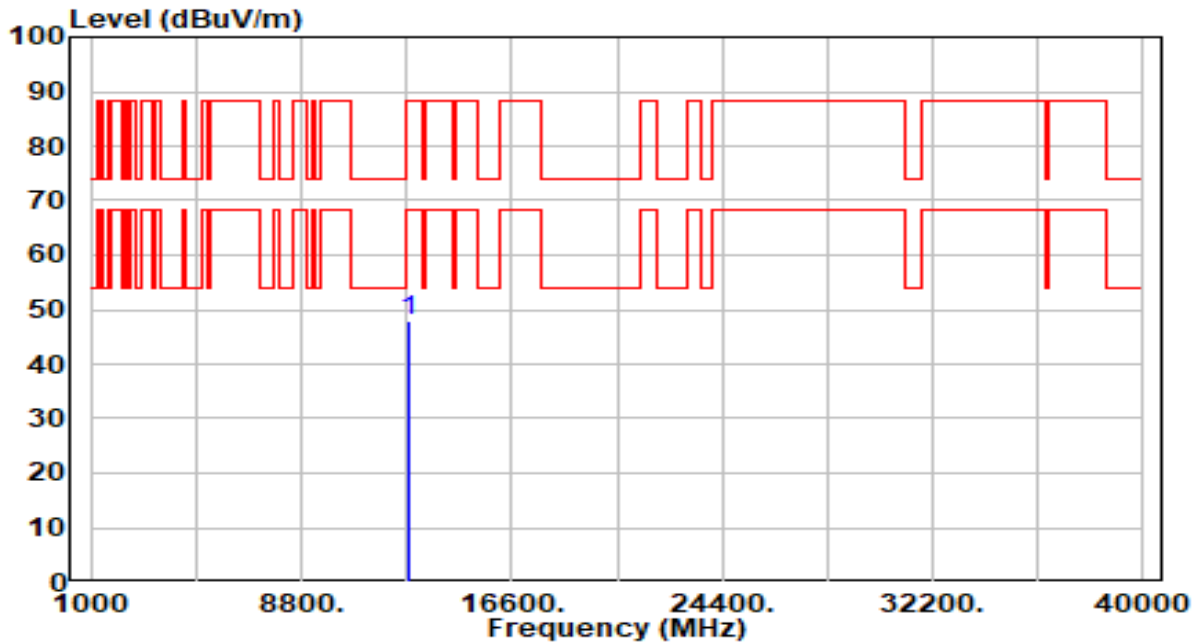


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	12770.000	41.20	6.90	48.11	-40.09	88.20	100	195	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-80MHz_Band6_TX_CH 103 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

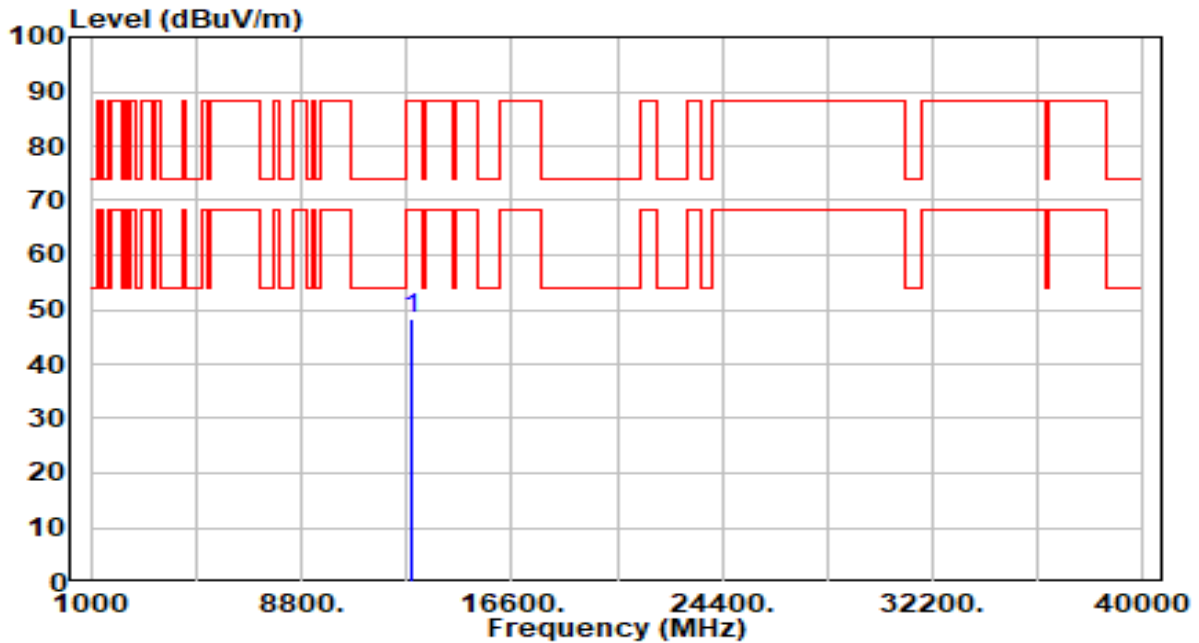


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.34	6.89	48.23	-39.97	88.20	100	15	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-80MHz_Band6_TX_CH 103 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

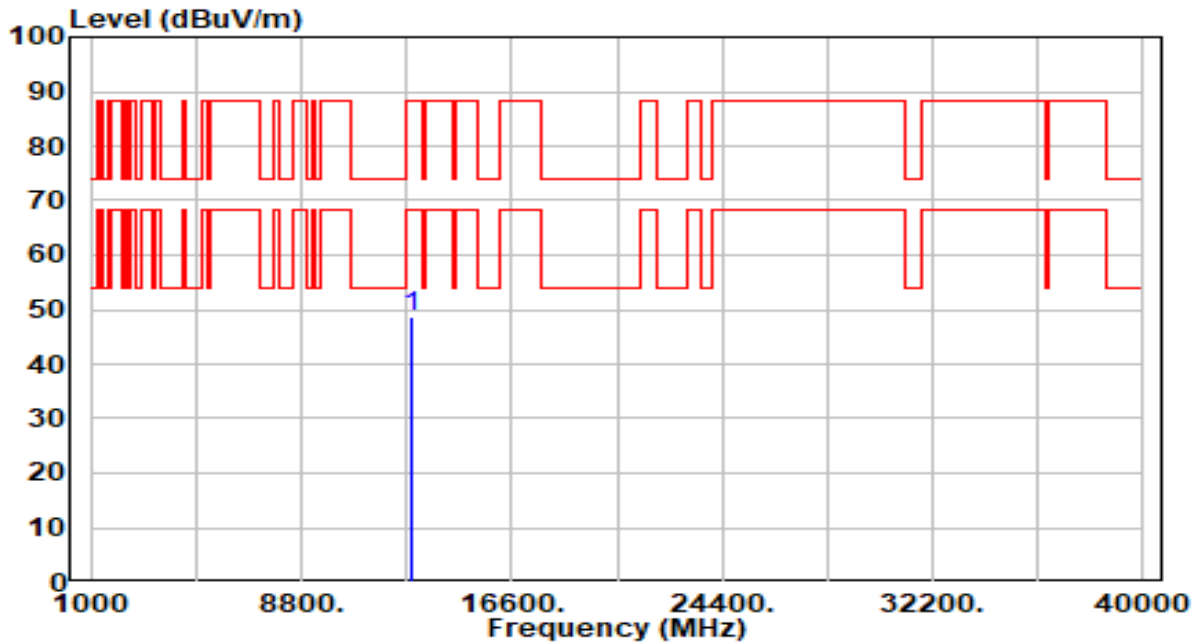


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.73	6.89	48.62	-39.58	88.20	100	218	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-80MHz_Band6_TX_CH 119 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

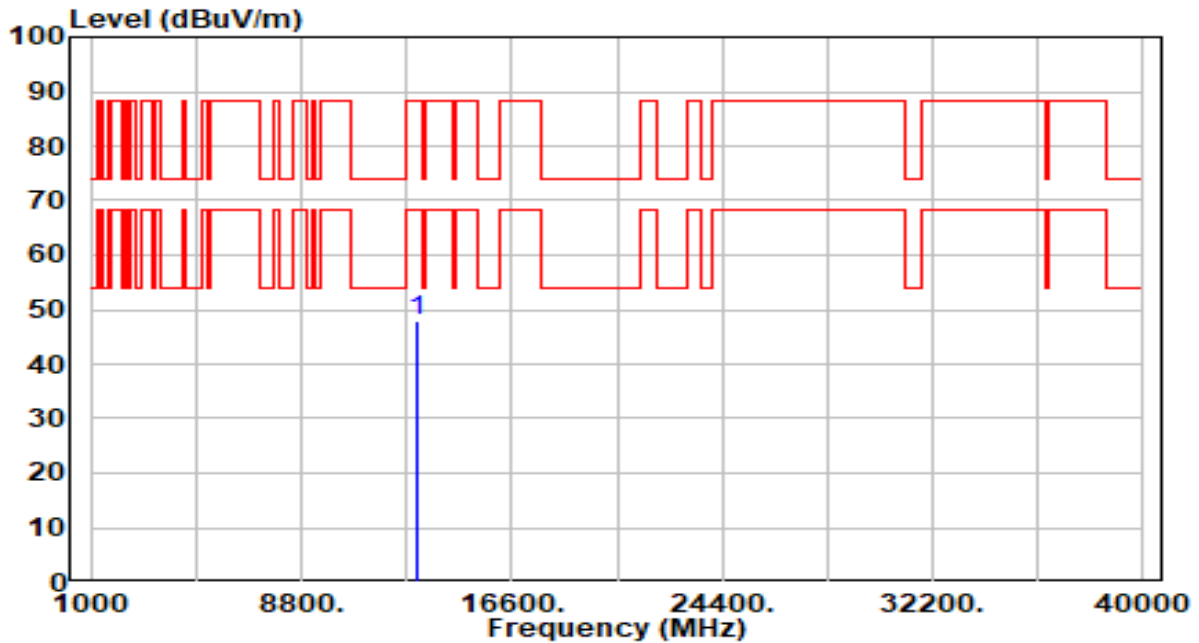


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13090.000	40.99	6.84	47.83	-40.37	88.20	100	27	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-80MHz_Band6_TX_CH 119 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

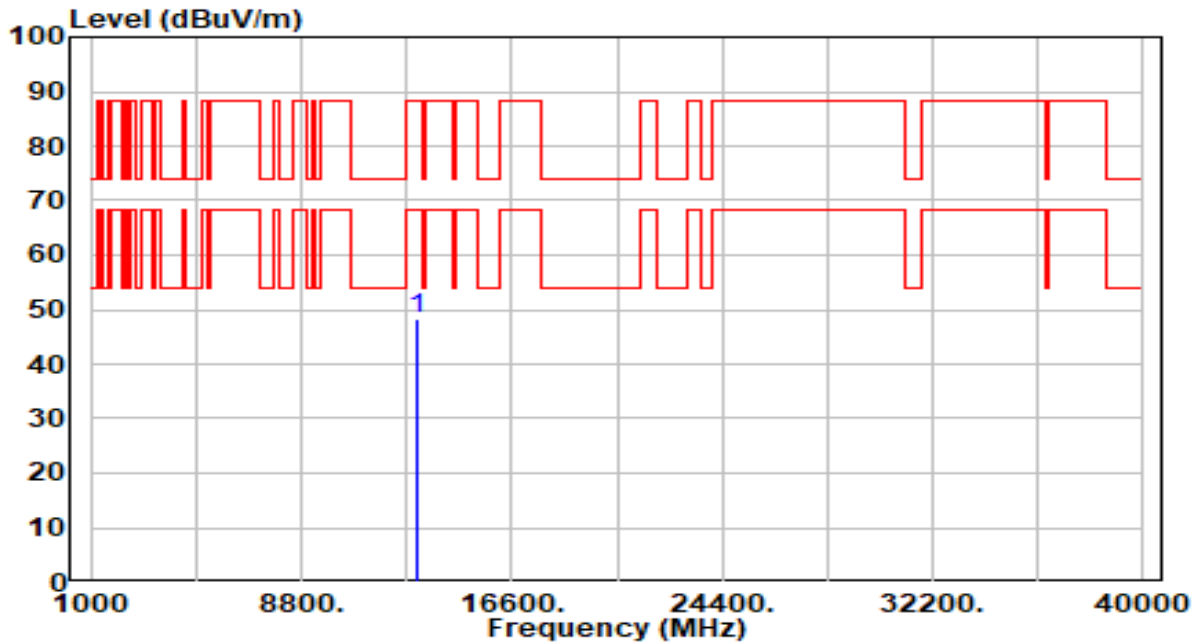


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.54	6.84	48.37	-39.83	88.20	100	101	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-80MHz_Band7_TX_CH 135 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

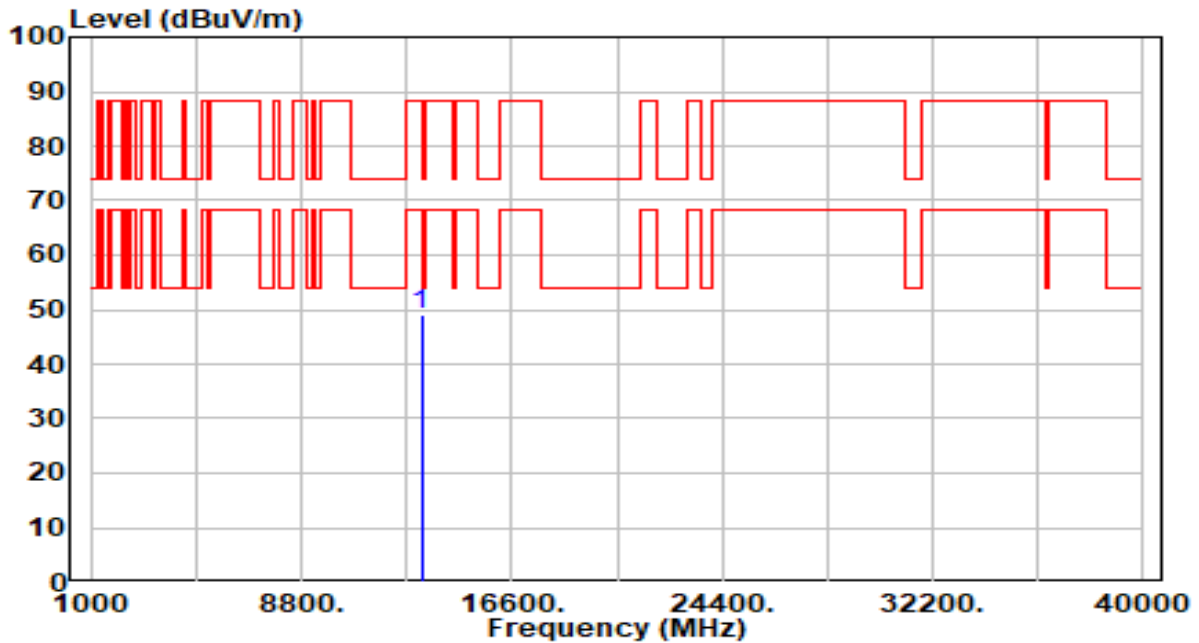


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	42.10	6.80	48.90	-25.10	74.00	100	337	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-80MHz_Band7_TX_CH 135 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

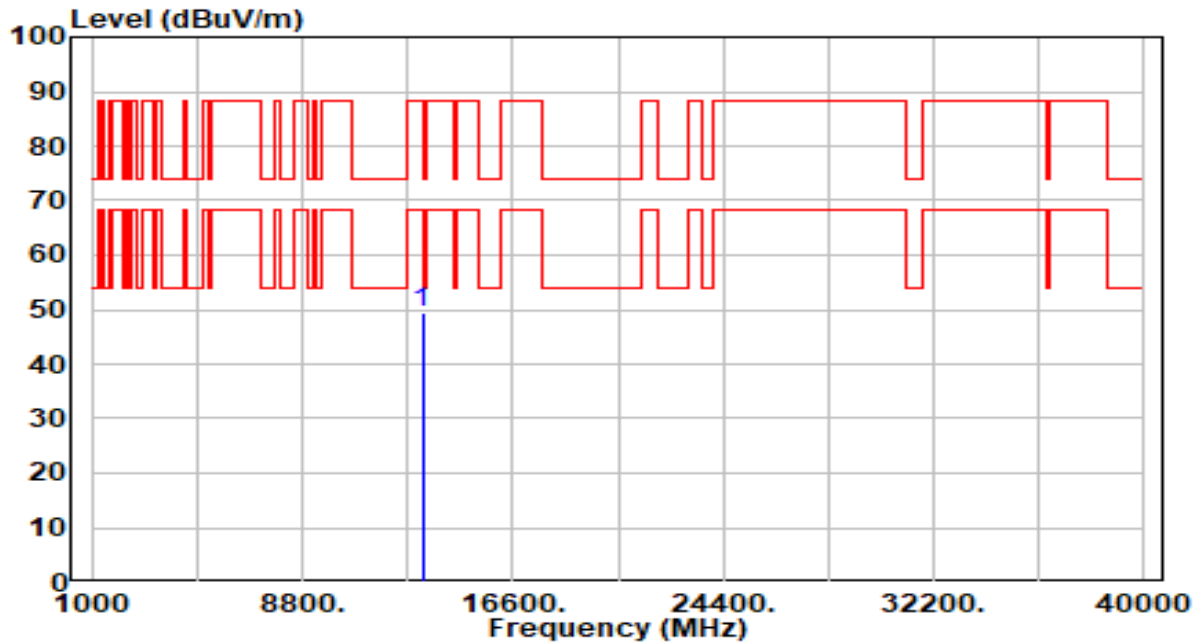


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	42.59	6.80	49.39	-24.61	74.00	100	20	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-80MHz_Band7_TX_CH 151 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

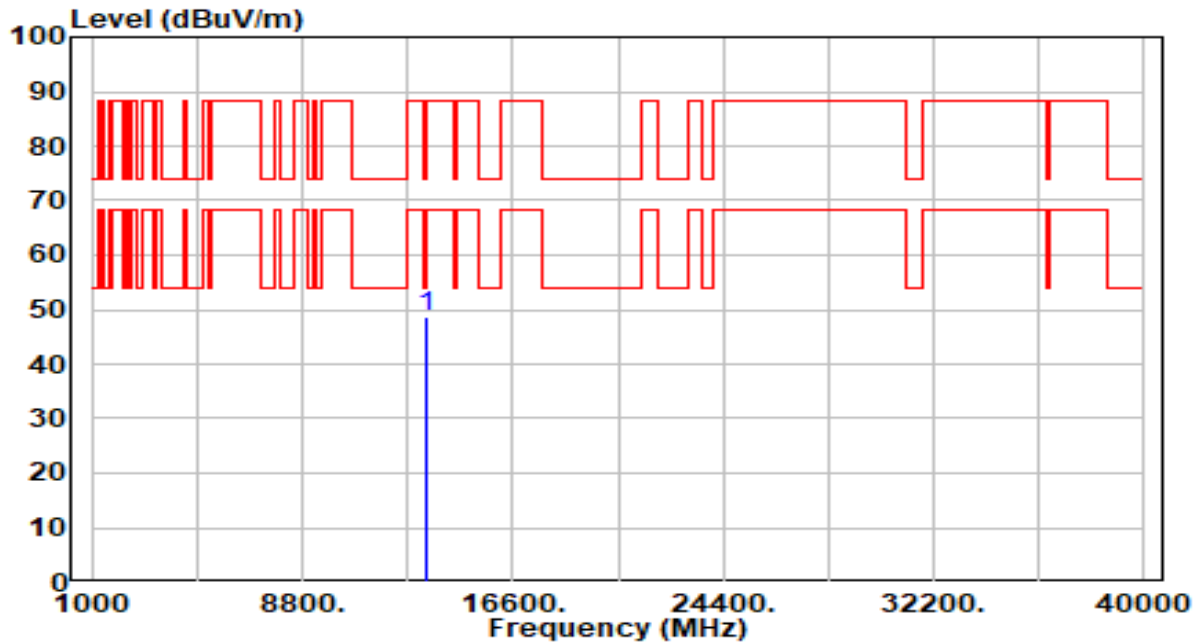


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.79	6.81	48.60	-39.60	88.20	100	60	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-80MHz_Band7_TX_CH 151 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

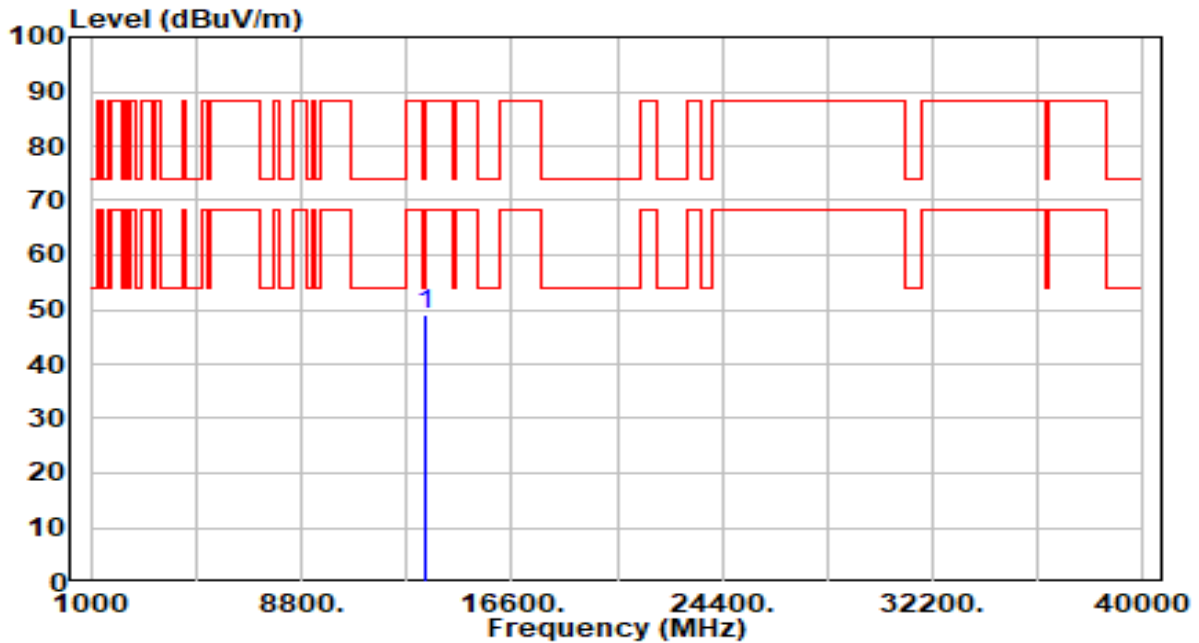


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	42.19	6.81	49.00	-39.20	88.20	100	150	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-80MHz_Band7_TX_CH 183 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

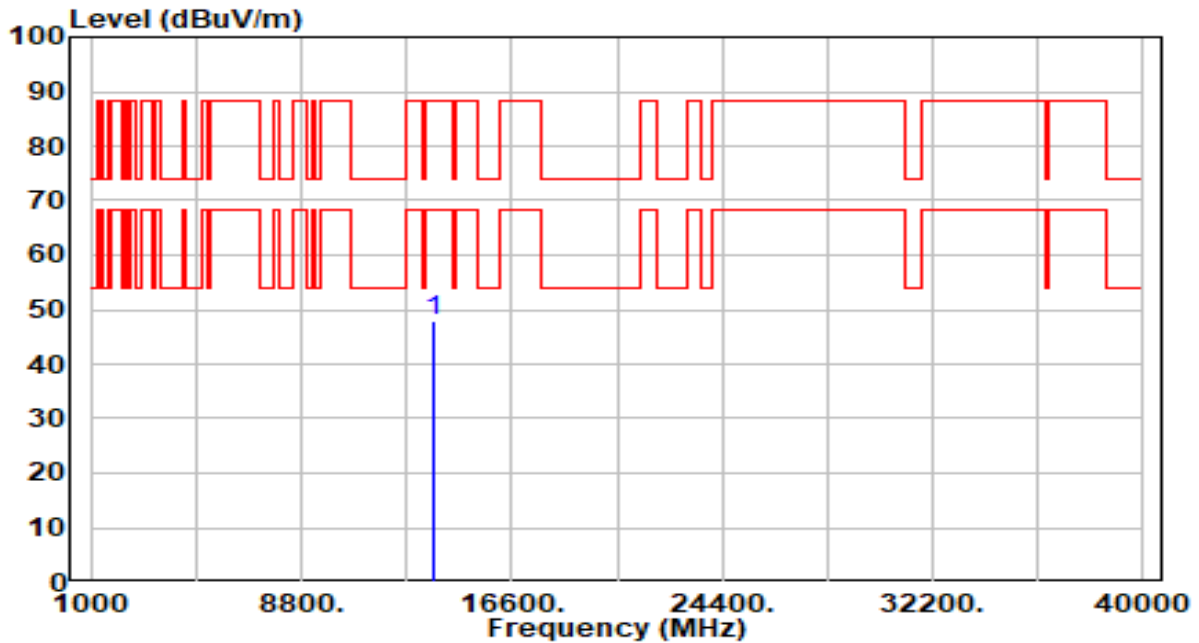


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.43	6.53	47.96	-40.24	88.20	100	43	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-80MHz_Band7_TX_CH 183 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

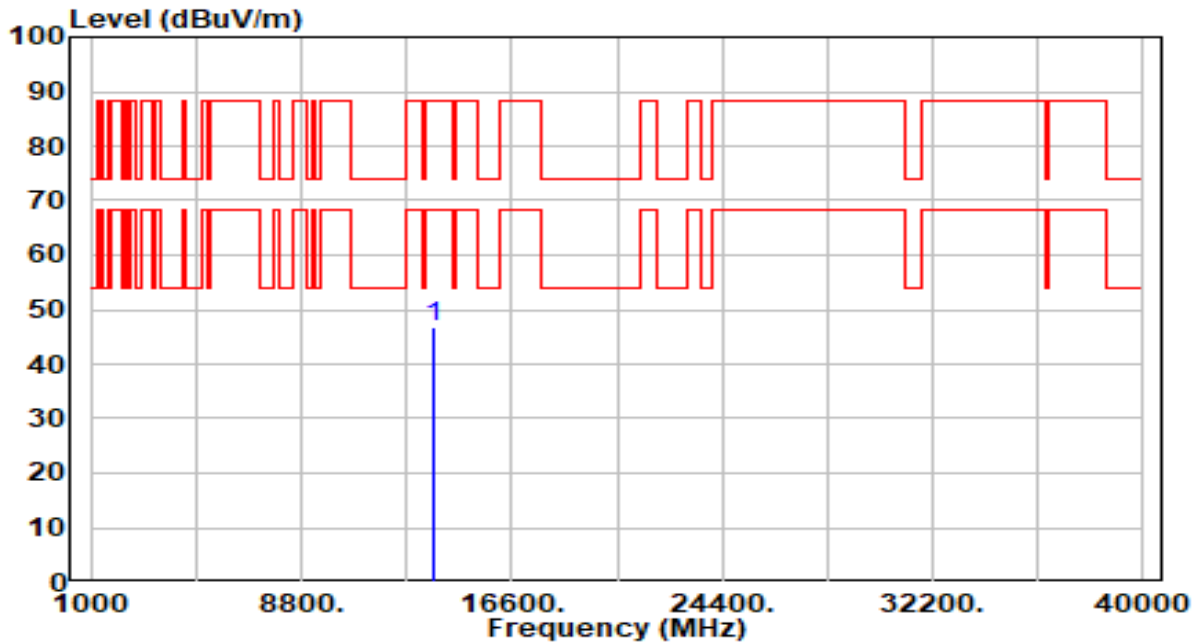


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13730.000	40.25	6.53	46.77	-41.43	88.20	100	192	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-160MHz_Band5_TX_CH 15 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

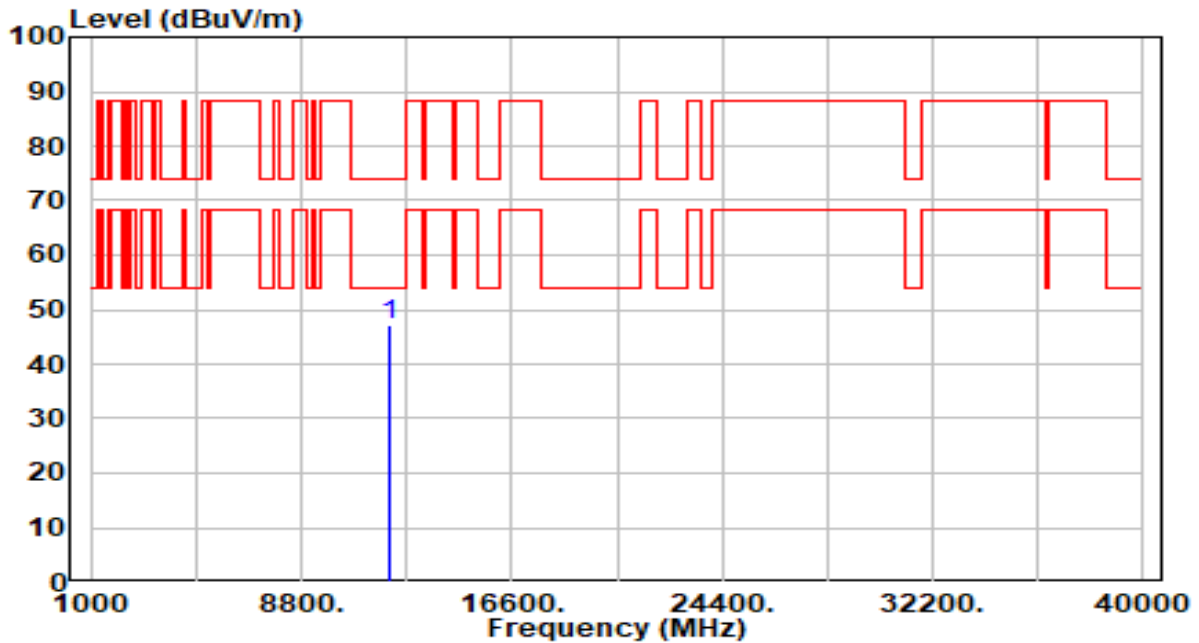


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	12050.000	41.60	5.60	47.20	-26.80	74.00	100	272	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-160MHz_Band5_TX_CH 15 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

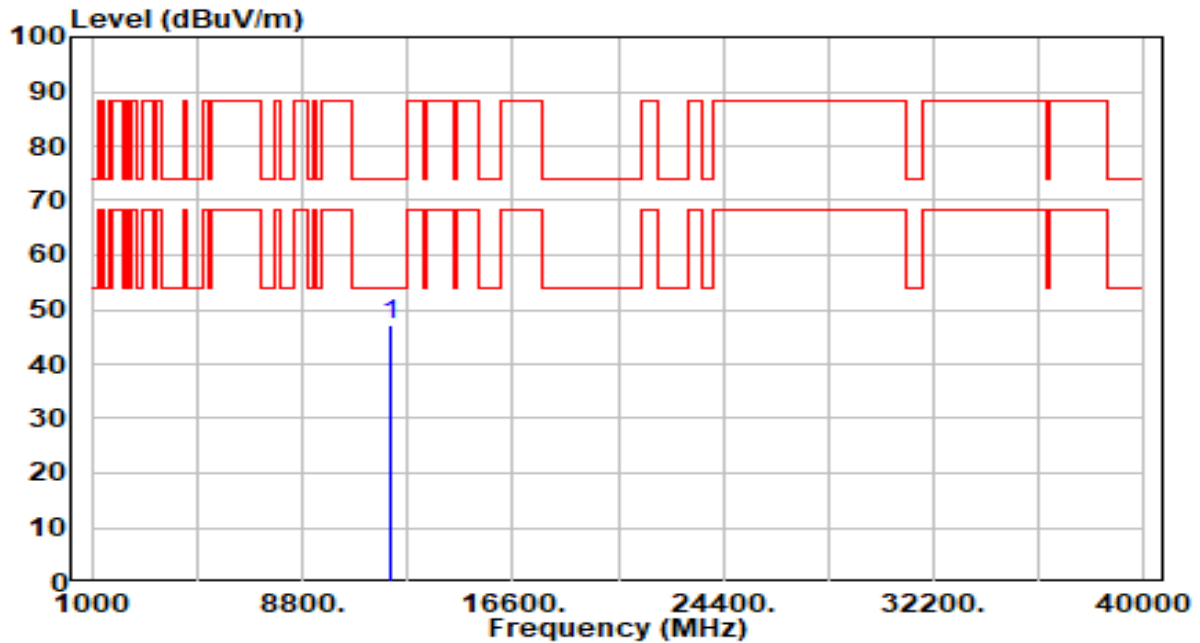


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.46	5.60	47.06	-26.94	74.00	100	99	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-160MHz_Band5_TX_CH 47 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

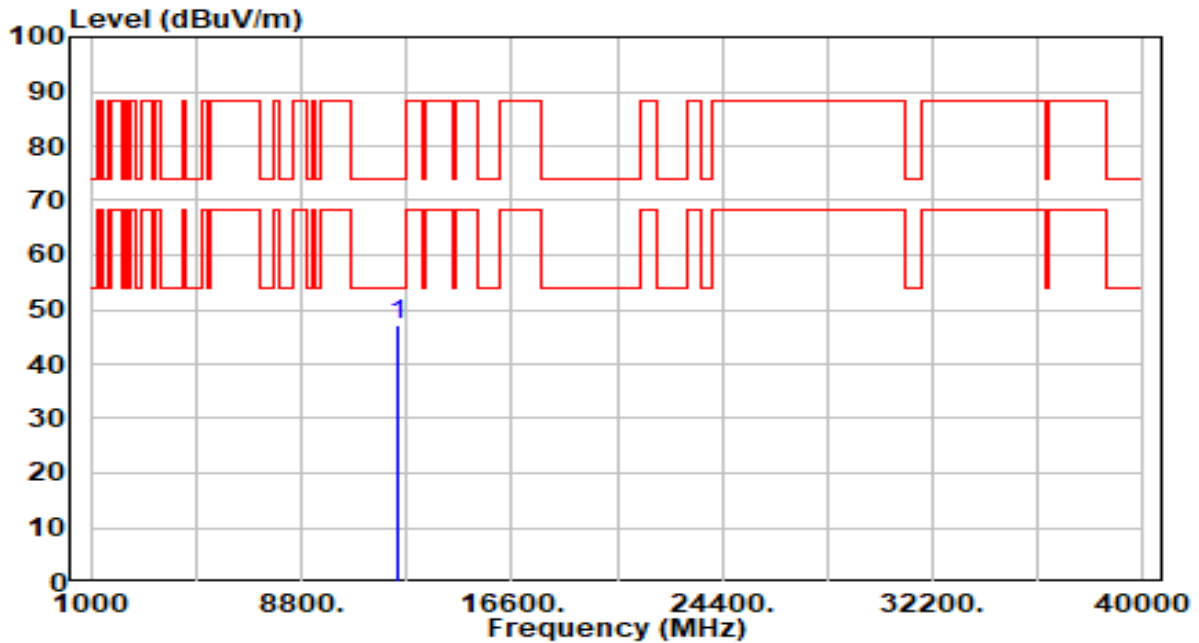


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.13	6.12	47.25	-26.75	74.00	100	151	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-160MHz_Band5_TX_CH 47 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

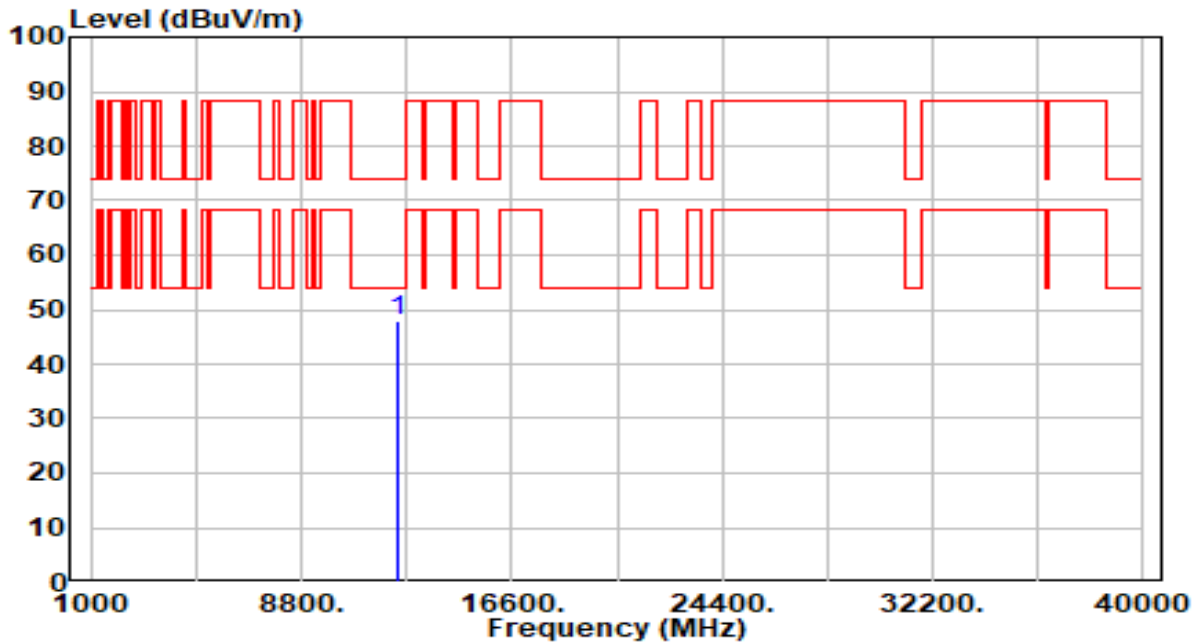


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.76	6.12	47.89	-26.11	74.00	100	231	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-160MHz_Band5_TX_CH 79 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

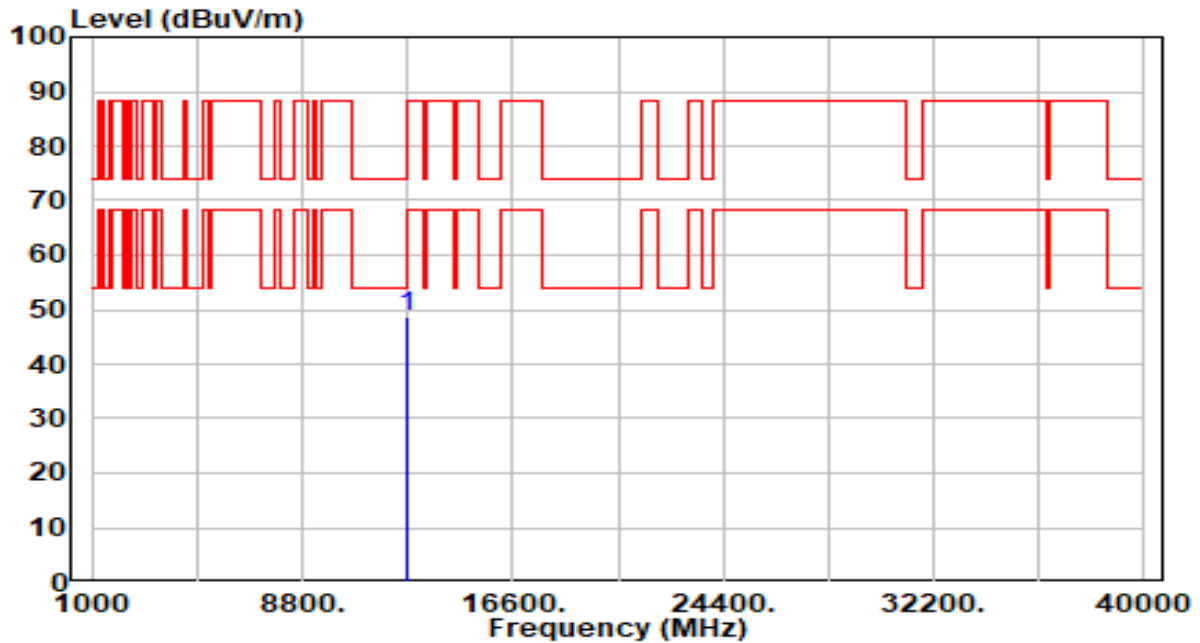


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.94	6.84	48.78	-25.22	74.00	100	332	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-160MHz_Band5_TX_CH 79 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

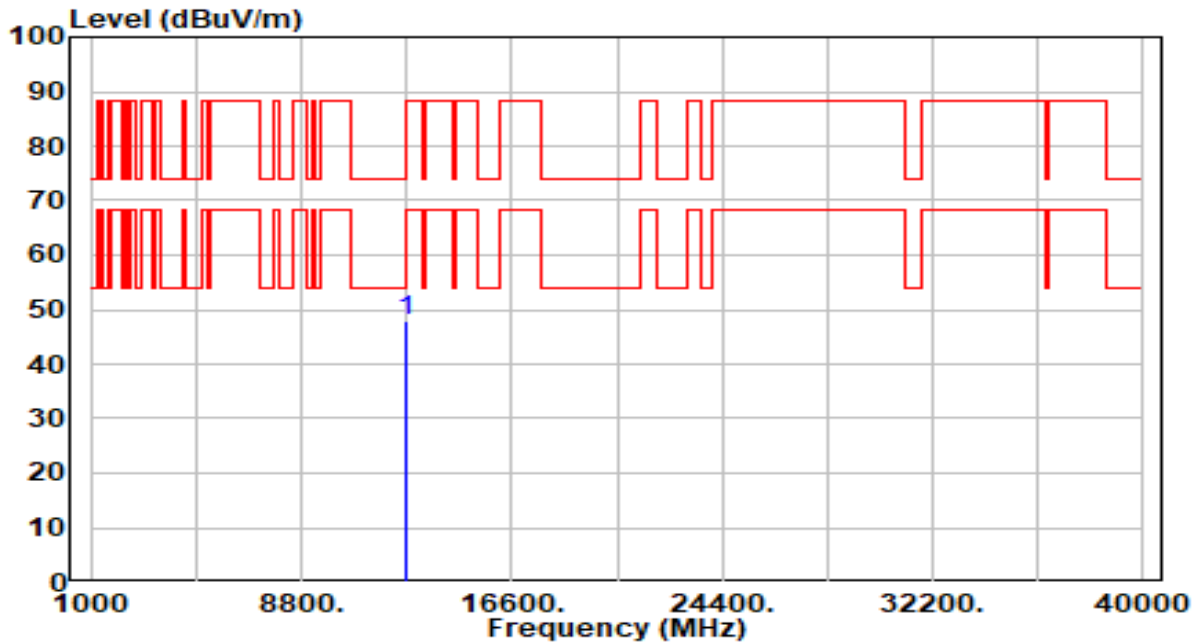


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.03	6.84	47.87	-26.13	74.00	100	17	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-160MHz_Band6_TX_CH 111 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

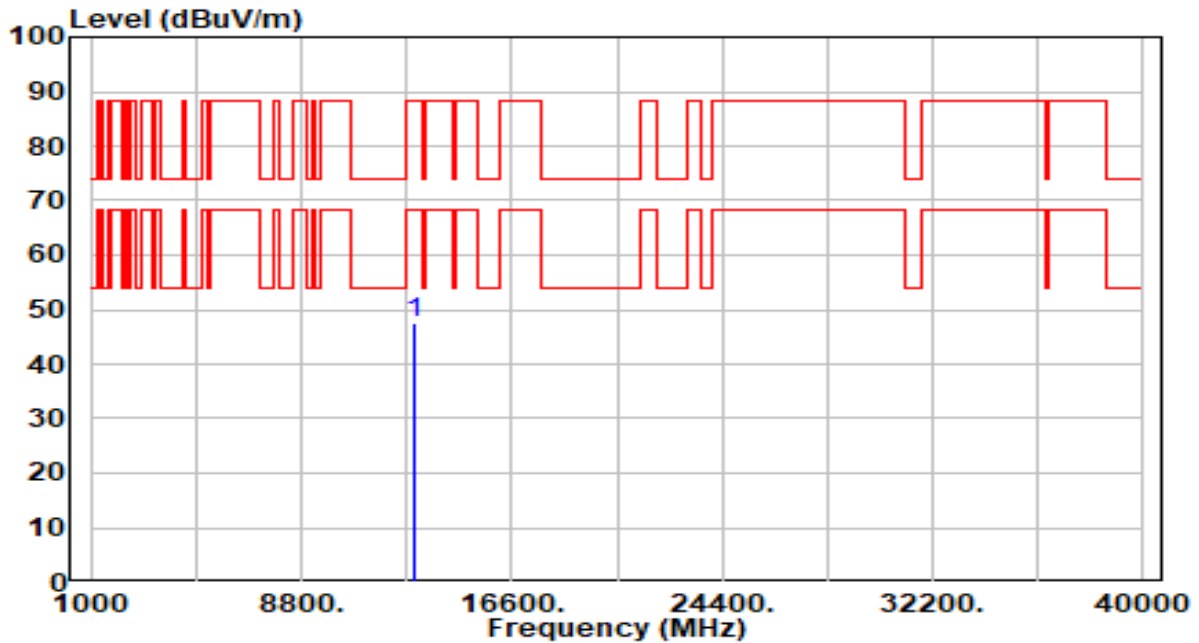


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13010.000	40.86	6.87	47.72	-40.48	88.20	100	94	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-160MHz_Band6_TX_CH 111 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

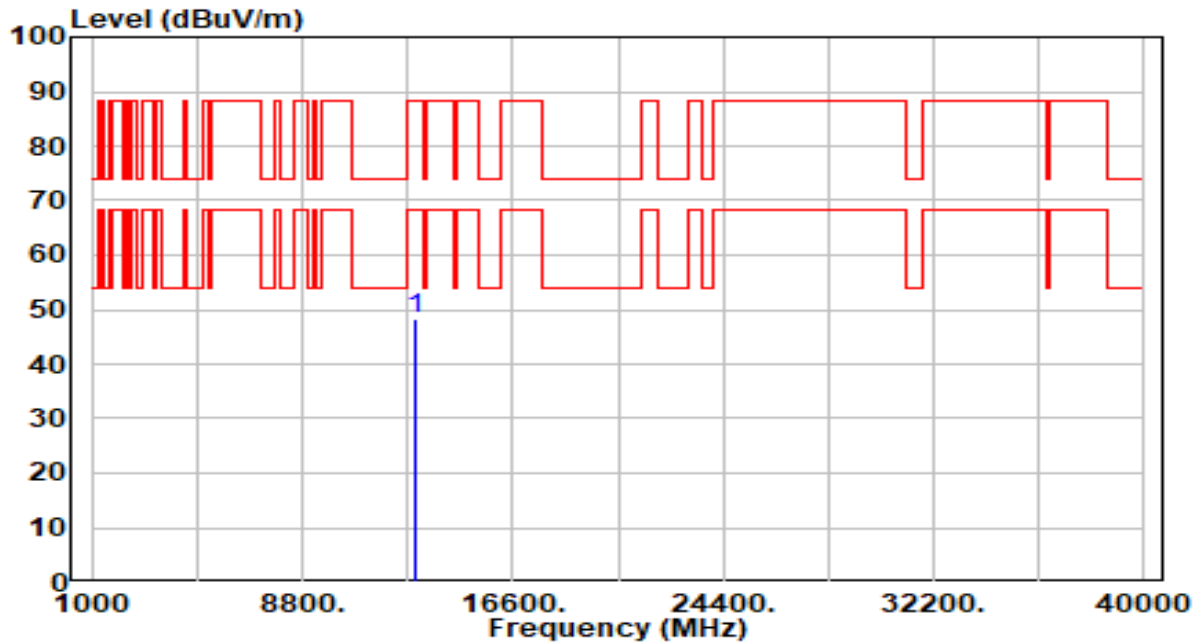


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13010.000	41.52	6.87	48.39	-39.81	88.20	100	7	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-160MHz_Band7_TX_CH 143 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

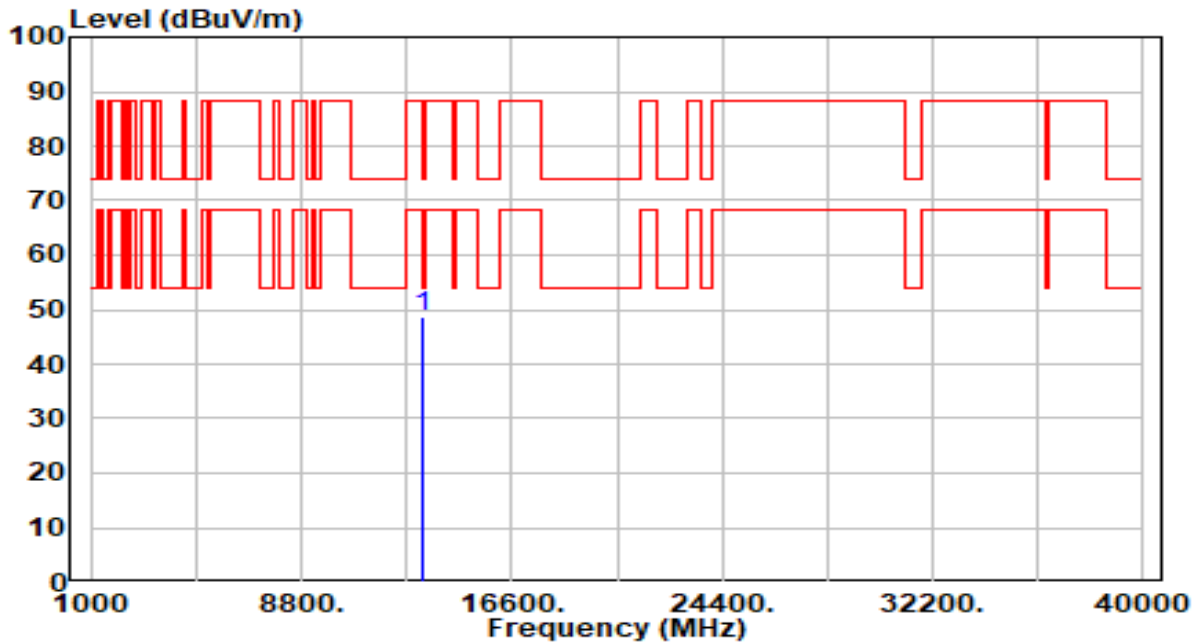


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13330.000	41.73	6.81	48.54	-25.46	74.00	100	245	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-160MHz_Band7_TX_CH 143 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

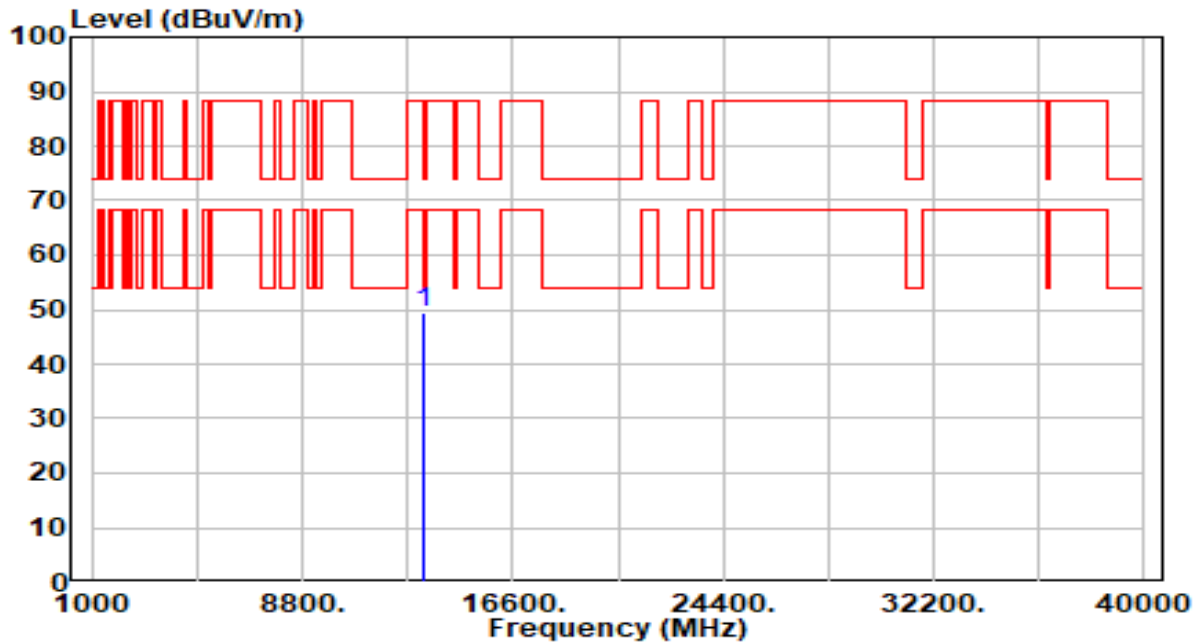


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13330.000	42.60	6.81	49.41	-24.59	74.00	100	82	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band5_RX_CH 1 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

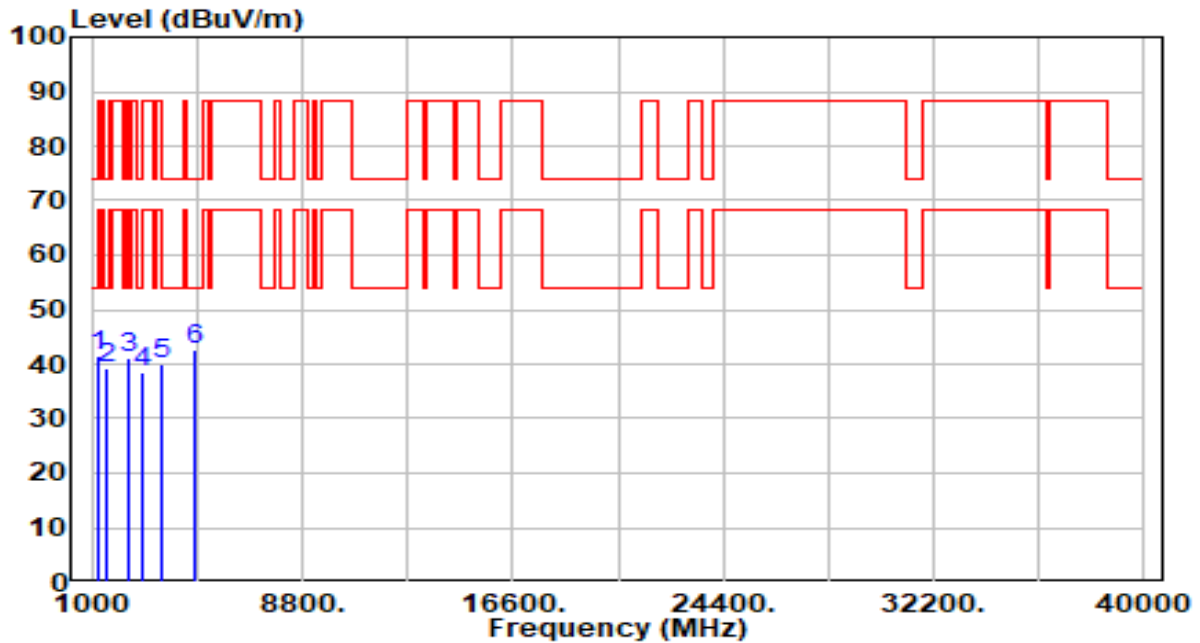


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	1198.624	49.71	-8.17	41.54	-32.46	74.00	100	122	Peak
2	1579.402	47.07	-7.73	39.34	-34.66	74.00	200	255	Peak
3	2396.343	46.37	-5.13	41.23	-46.97	88.20	200	241	Peak
4	2916.902	42.48	-3.88	38.60	-49.60	88.20	100	178	Peak
5	3595.797	42.19	-2.35	39.84	-48.36	88.20	300	156	Peak
6	* 4796.095	42.64	0.17	42.81	-31.19	74.00	300	218	Peak

Note:

- "*", means this data is the worst emission level.
- C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
- Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
- The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band5_RX_CH 1 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

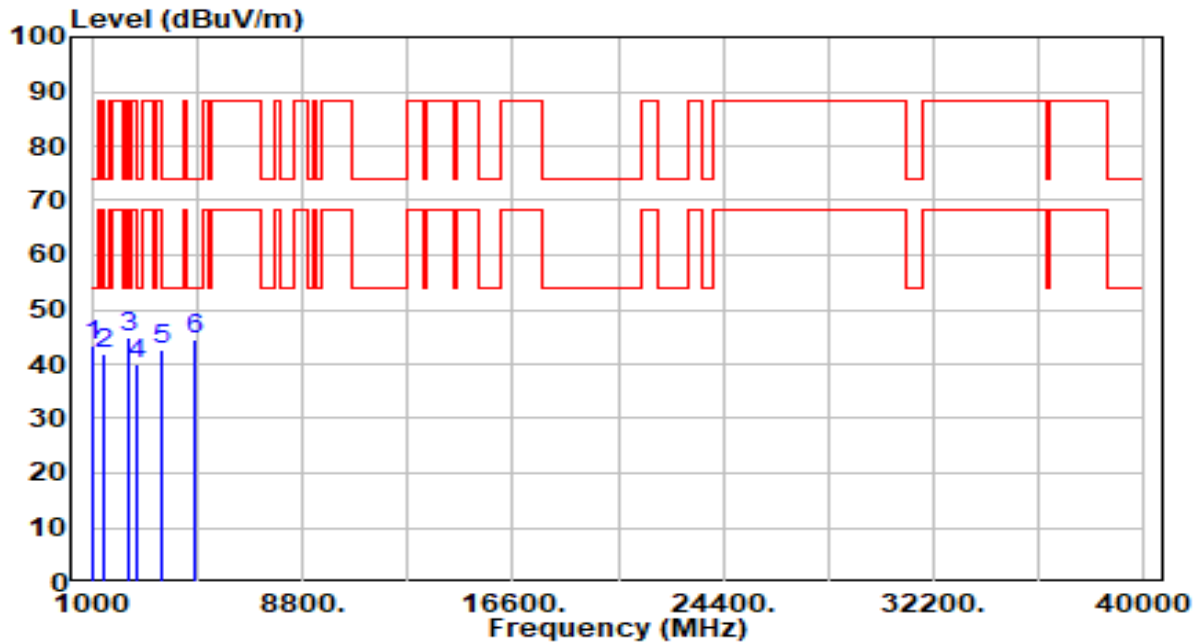


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	1051.801	51.45	-8.17	43.28	-30.72	74.00	200	281	Peak
2	1496.813	49.40	-7.50	41.90	-32.10	74.00	300	289	Peak
3	2391.755	50.19	-5.14	45.04	-43.16	88.20	200	105	Peak
4	2692.079	44.66	-4.56	40.10	-33.90	74.00	200	245	Peak
5	3593.503	44.86	-2.36	42.51	-45.69	88.20	100	221	Peak
6	* 4796.095	44.31	0.17	44.48	-29.52	74.00	100	61	Peak

Note:

- "*", means this data is the worst emission level.
- C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
- Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
- The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band6_26Tone_RU0_TX_CH 97 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

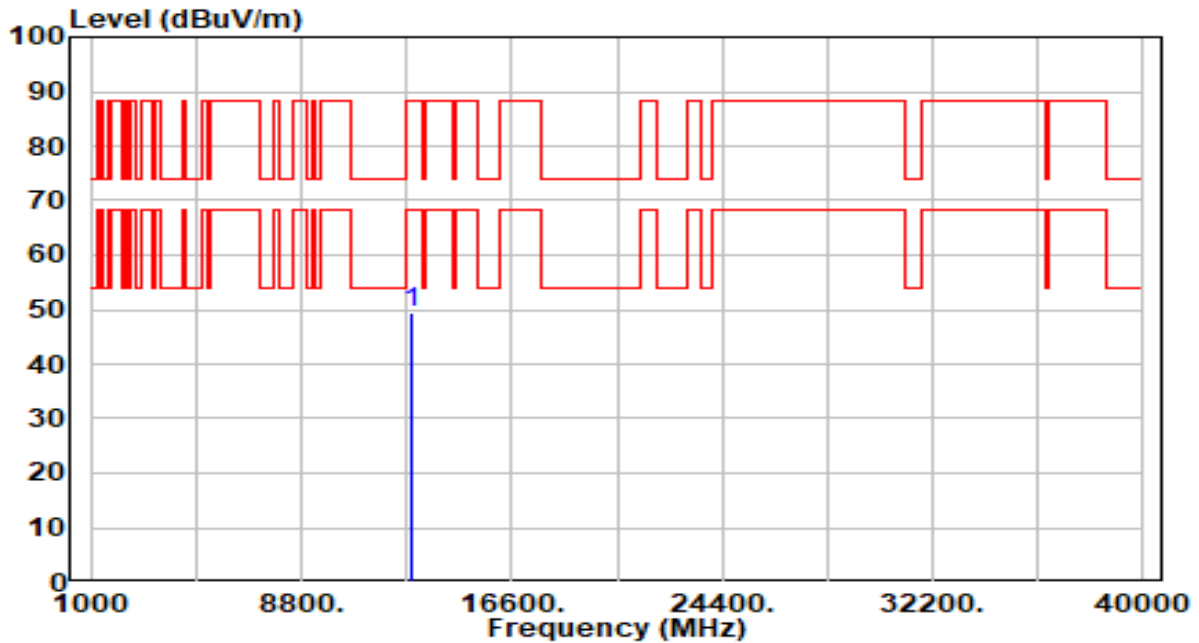


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	12870.000	42.66	6.91	49.56	-38.64	88.20	100	276	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band6_26Tone_RU0_TX_CH 97 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

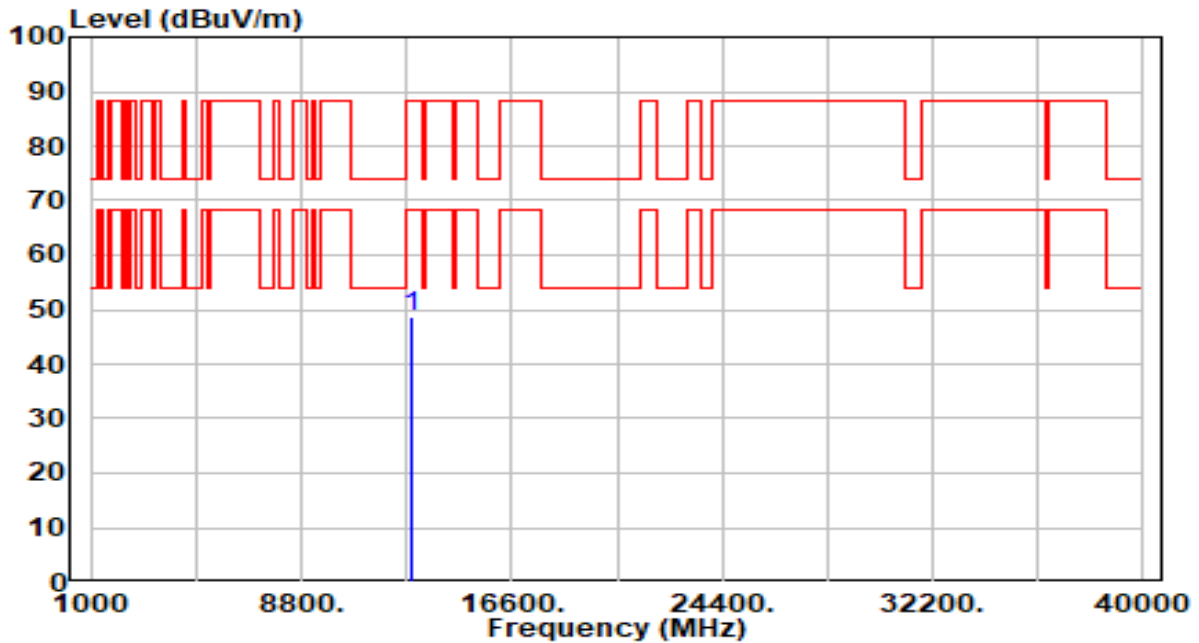


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	41.94	6.91	48.85	-39.35	88.20	100	243	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band6_26Tone_RU8_TX_CH 113 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

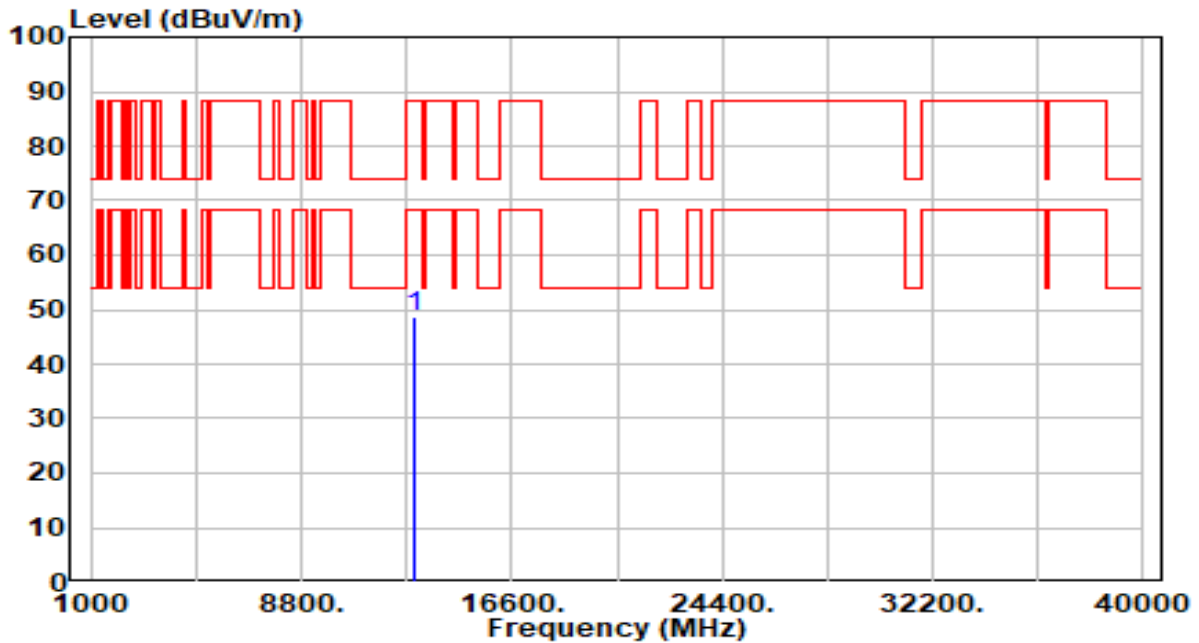


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13030.000	41.76	6.86	48.62	-39.58	88.20	100	144	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band6_26Tone_RU8_TX_CH 113 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

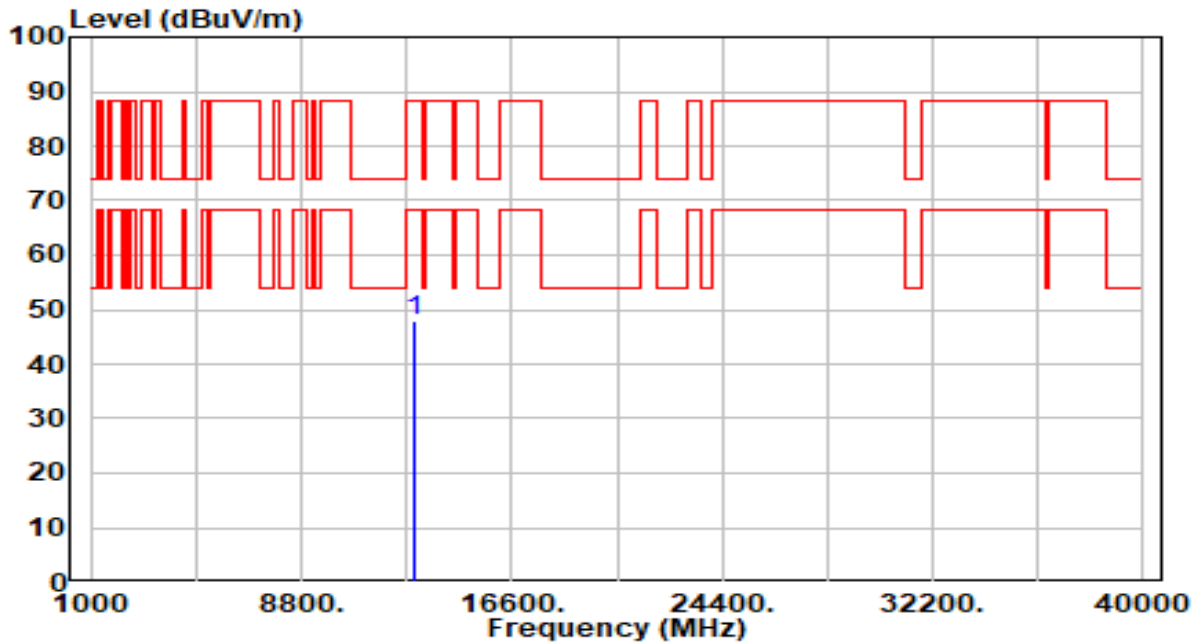


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13030.000	41.16	6.86	48.02	-40.18	88.20	100	148	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band6_52Tone_RU74_TX_CH 97 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

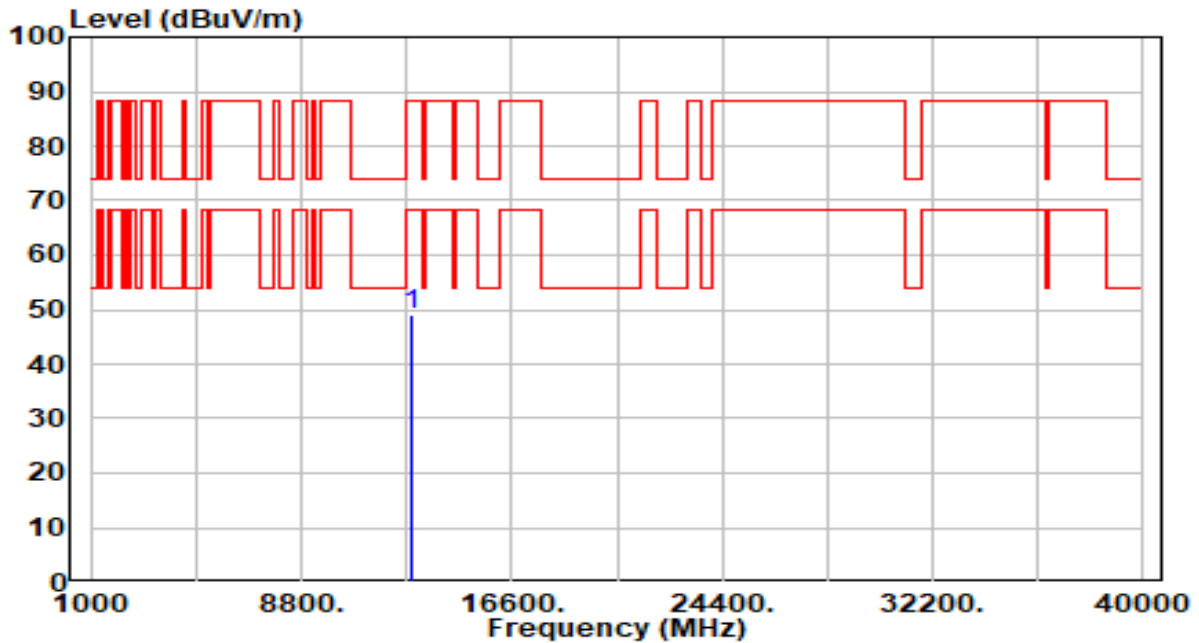


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	42.24	6.91	49.15	-39.05	88.20	121	325	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band6_52Tone_RU74_TX_CH 97 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

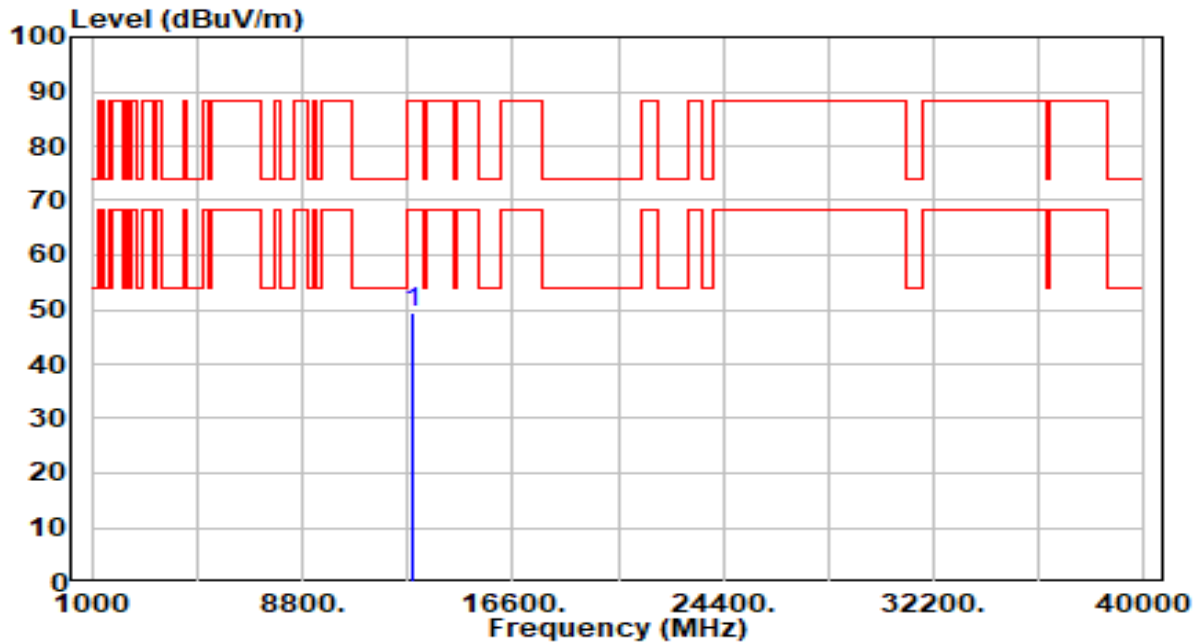


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	42.38	6.91	49.28	-38.92	88.20	121	142	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band6_52Tone_RU77_TX_CH 113 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

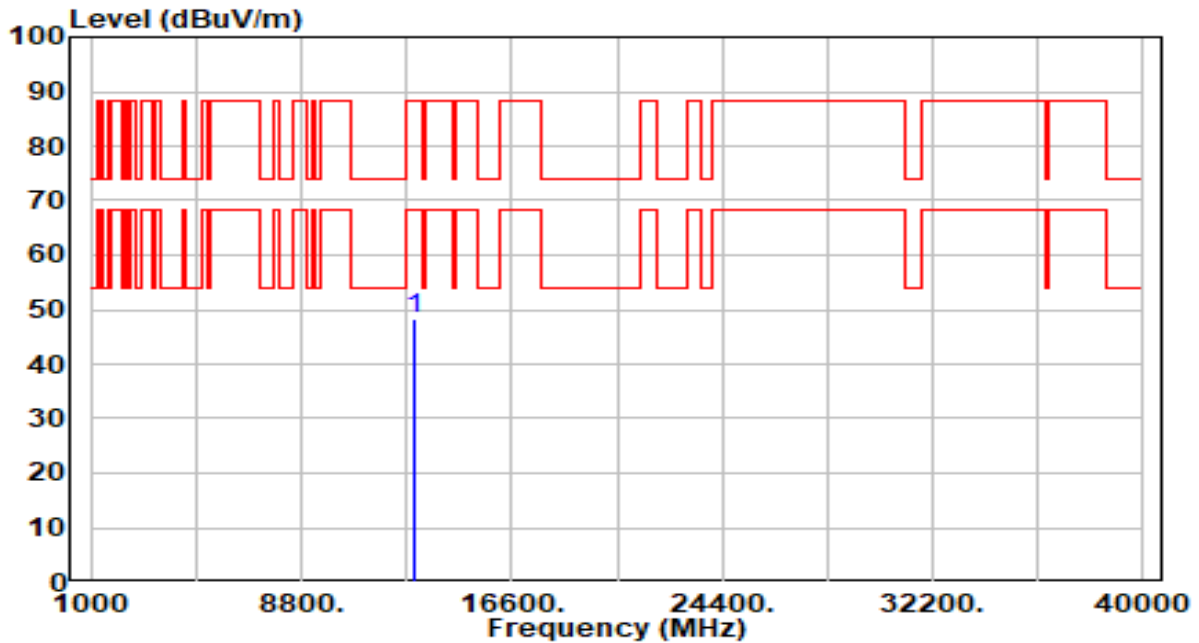


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13030.000	41.51	6.86	48.36	-39.84	88.20	100	360	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band6_52Tone_RU77_TX_CH 113 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

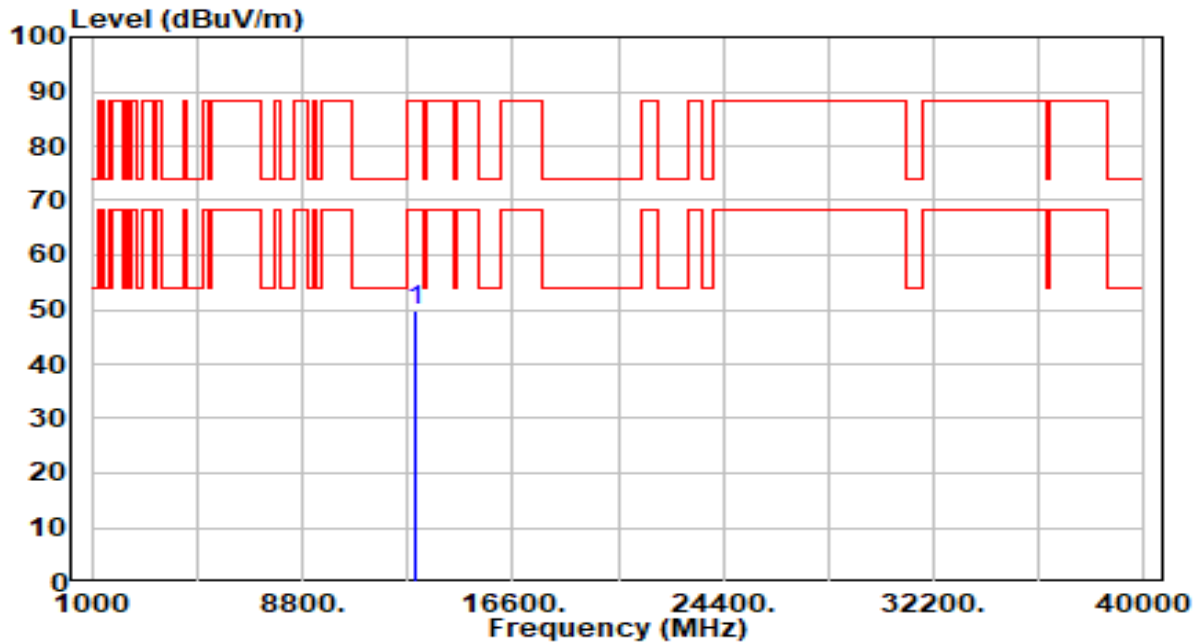


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13030.000	43.08	6.86	49.94	-38.26	88.20	100	92	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band6_106Tone_RU106 TX_CH 97 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

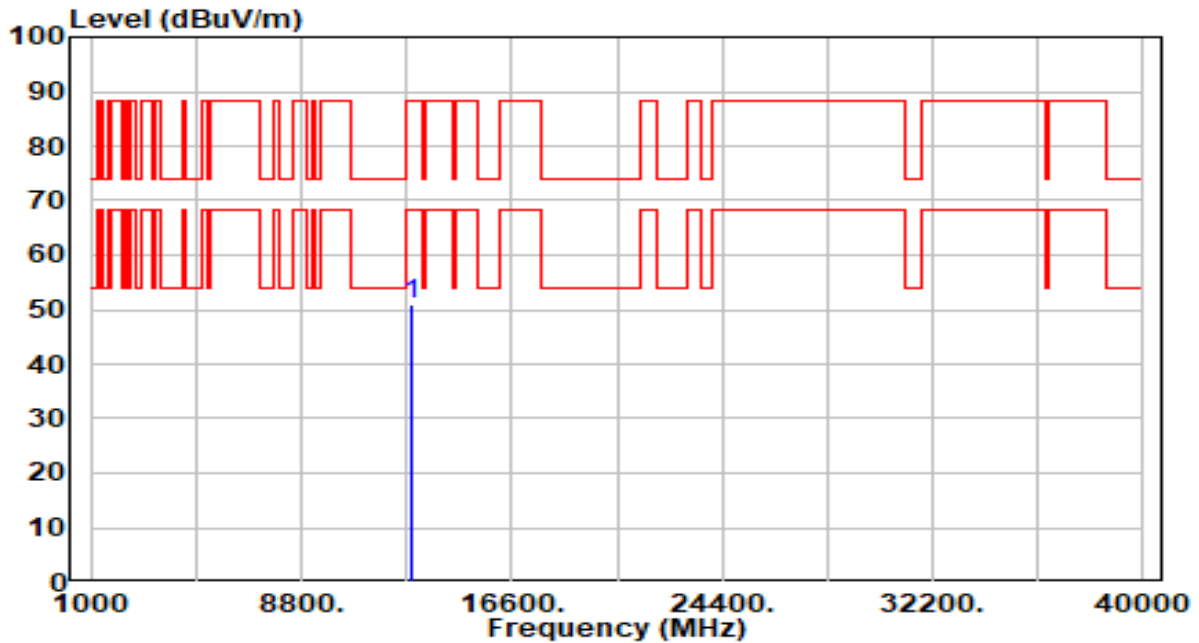


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	43.99	6.91	50.89	-37.31	88.20	100	233	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band6_106Tone_RU106 TX_CH 97 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

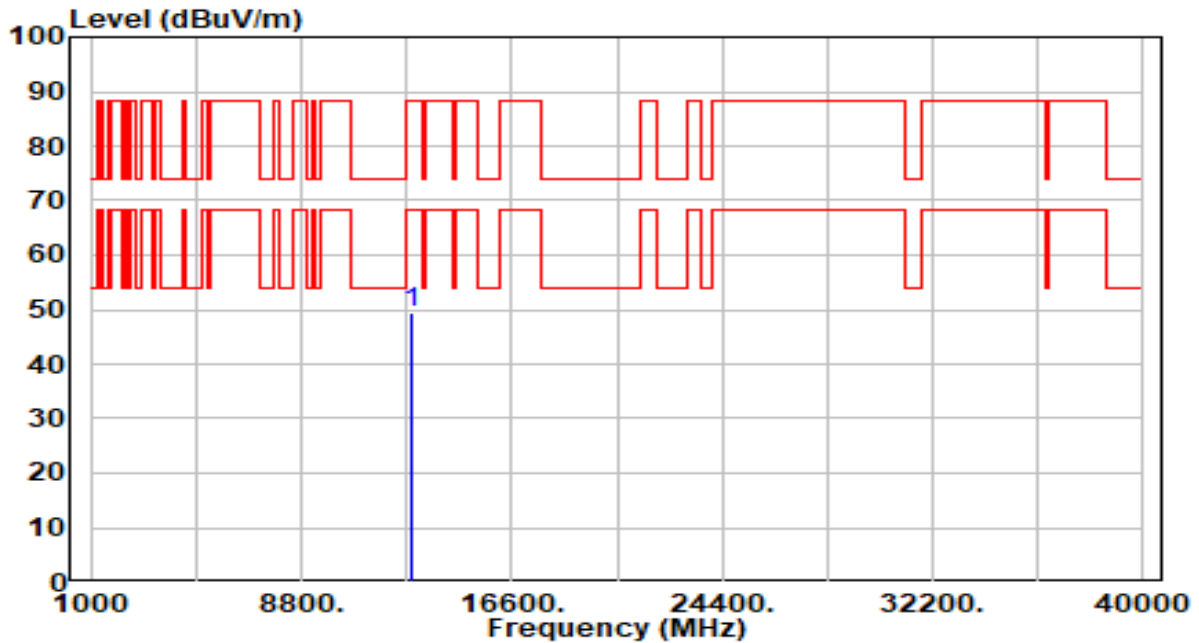


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	12870.000	42.51	6.91	49.41	-38.79	88.20	100	106	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band6_106Tone_RU107 TX_CH 113 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

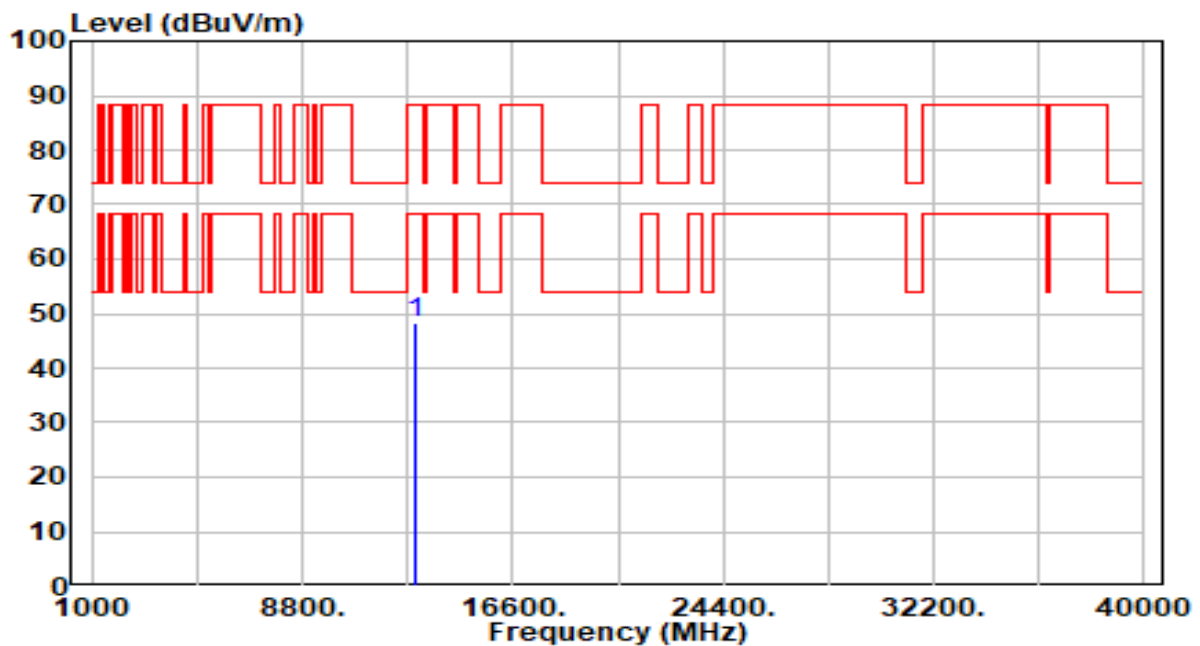


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13030.000	41.55	6.86	48.41	-39.79	88.20	100	0	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band6_106Tone_RU107 TX_CH 113 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

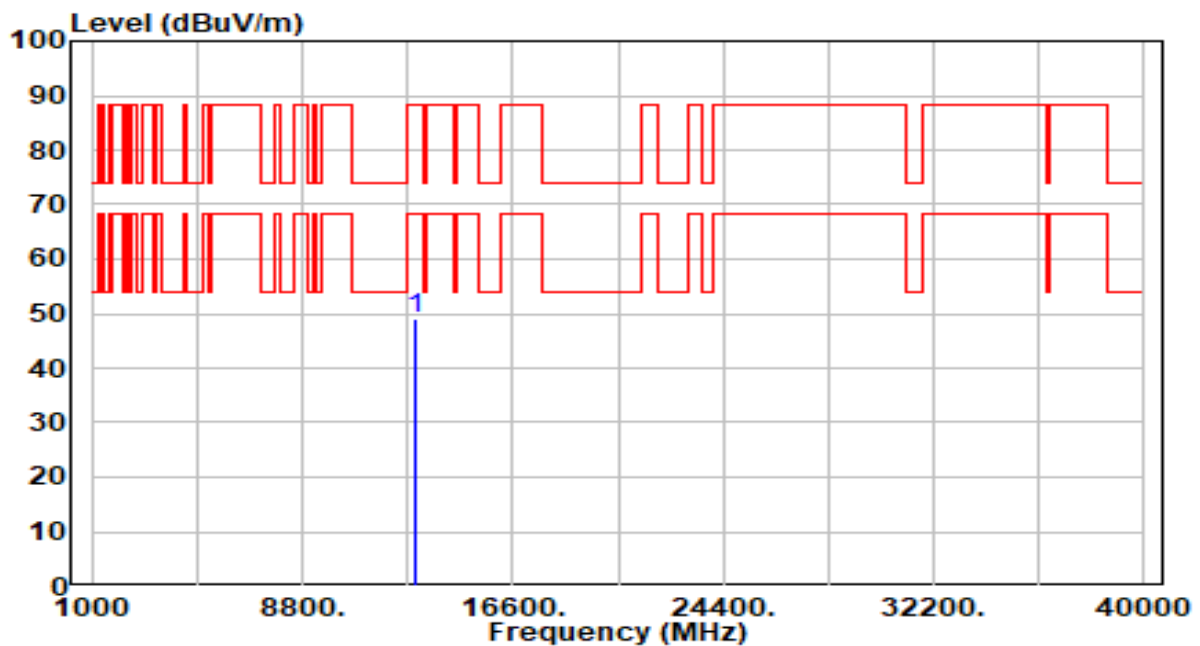


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13030.000	42.11	6.86	48.96	-39.24	88.20	100	196	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band6_242Tone_RU122 TX_CH 97 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

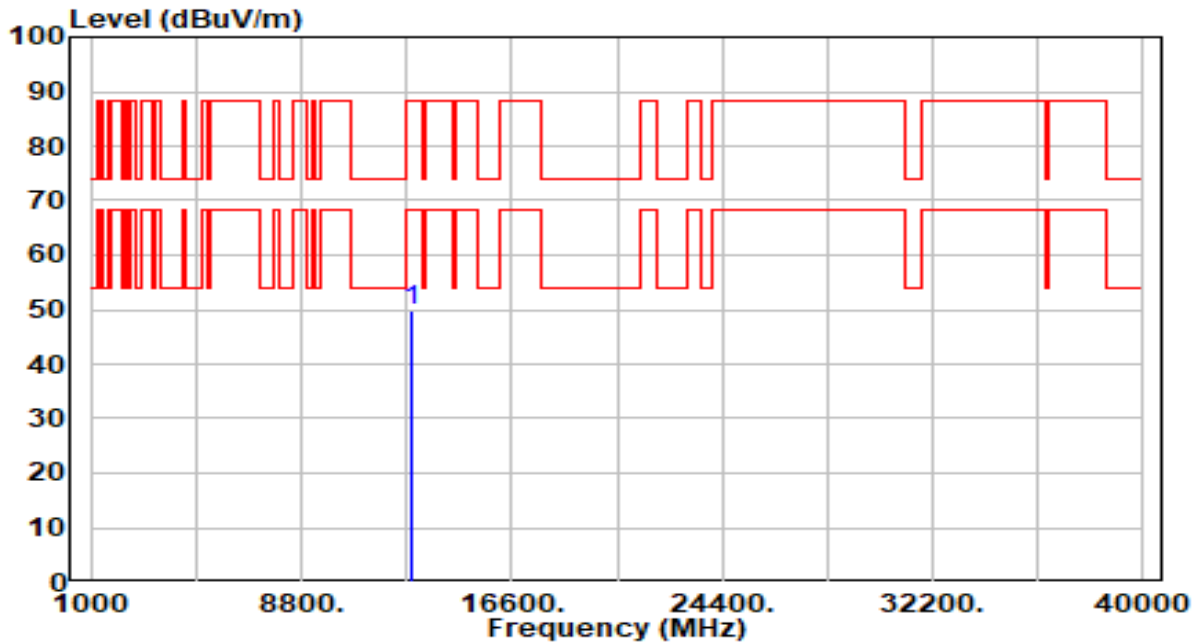


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	42.79	6.91	49.69	-38.51	88.20	100	361	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band6_242Tone_RU122 TX_CH 97 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

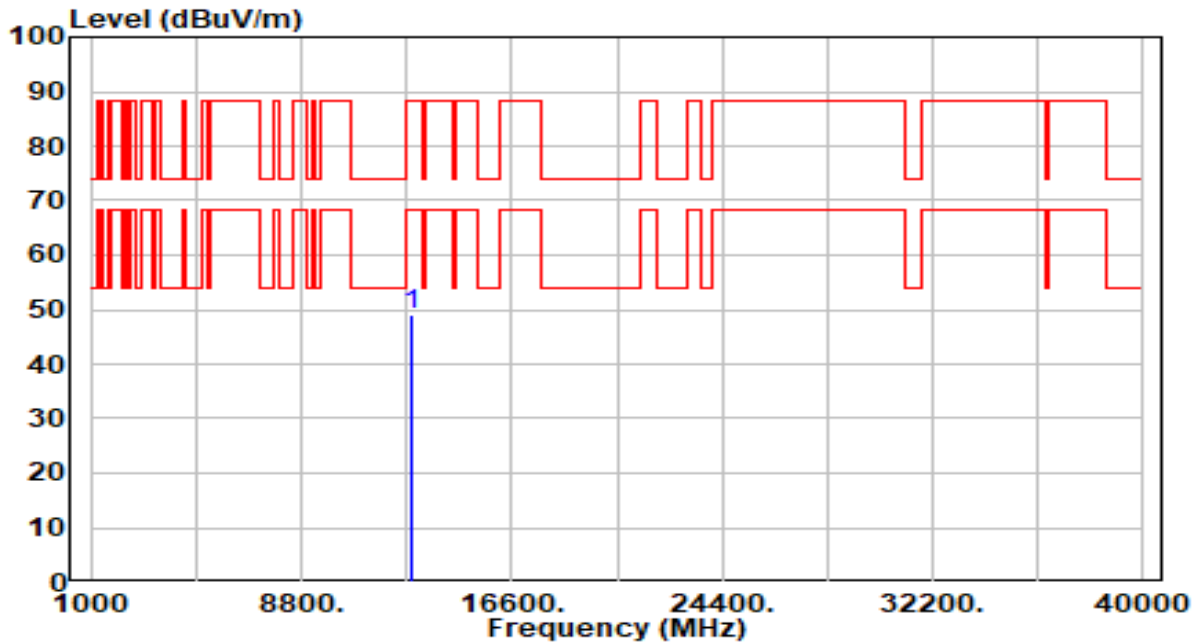


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	12870.000	42.23	6.91	49.14	-39.06	88.20	100	150	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band6_242Tone_RU122 TX_CH 113 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

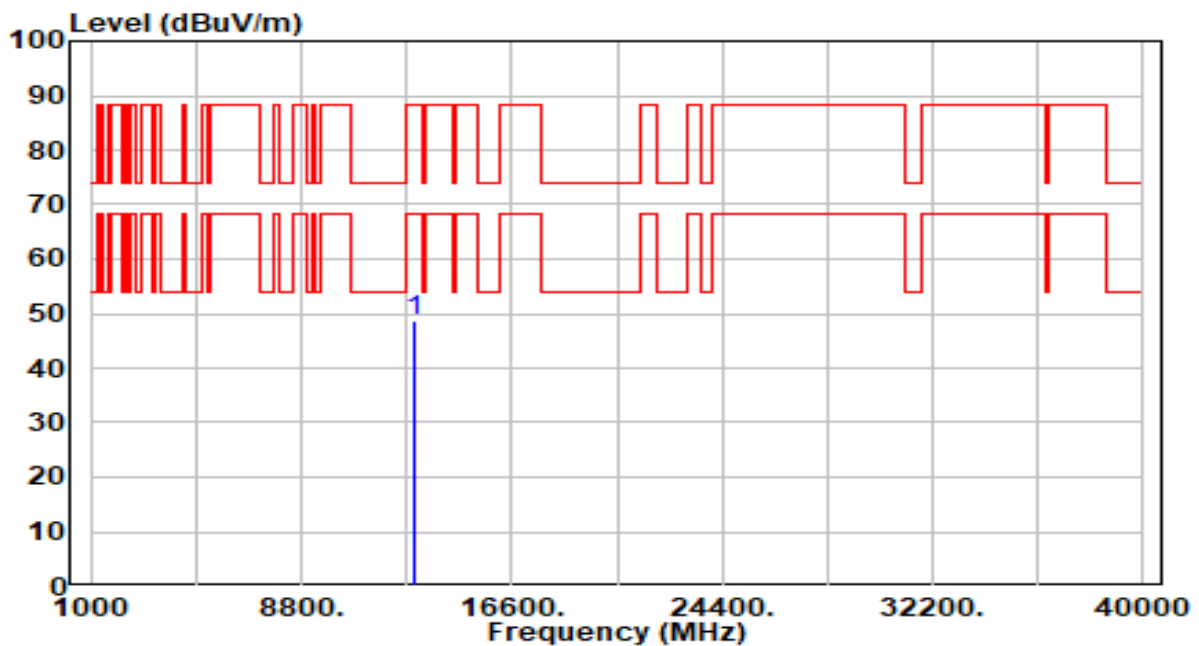


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	* 13030.000	41.82	6.86	48.68	-39.52	88.20	100	215	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band6_242Tone_RU122 TX_CH 113 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

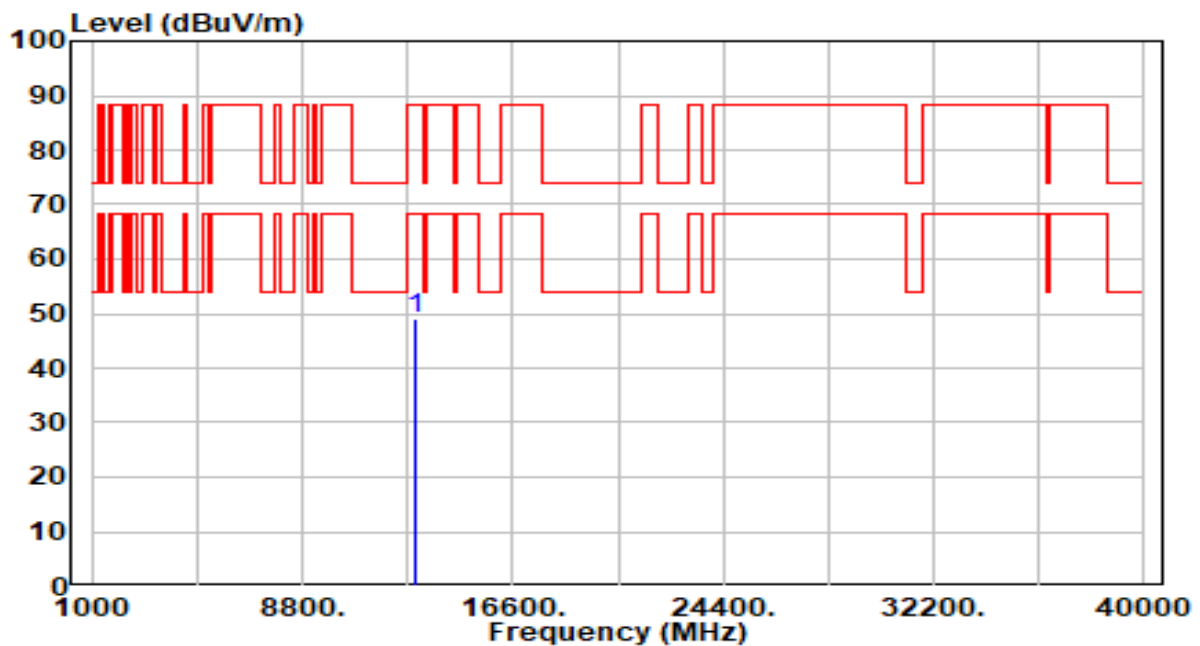


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	* 13030.000	42.21	6.86	49.07	-39.13	88.20	100	73	Peak

Note:

- "*", means this data is the worst emission level.
- C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
- Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
- The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band8_26Tone_RU0_TX_CH 189 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

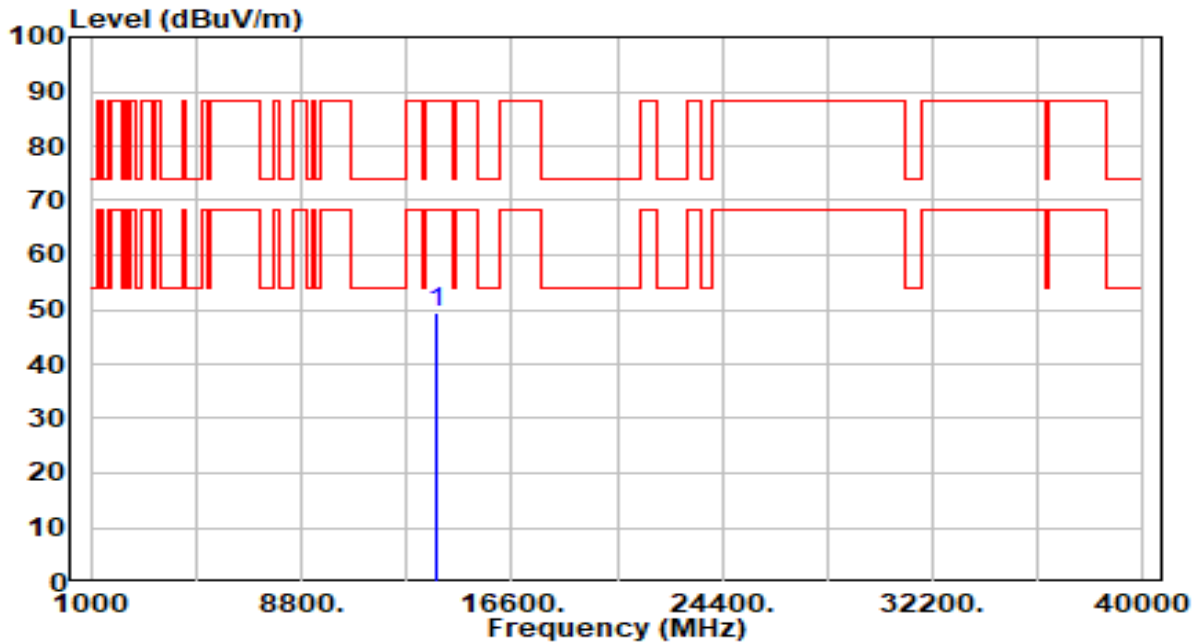


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13790.000	42.88	6.52	49.40	-38.80	88.20	100	360	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band8_26Tone_RU0_TX_CH 189 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

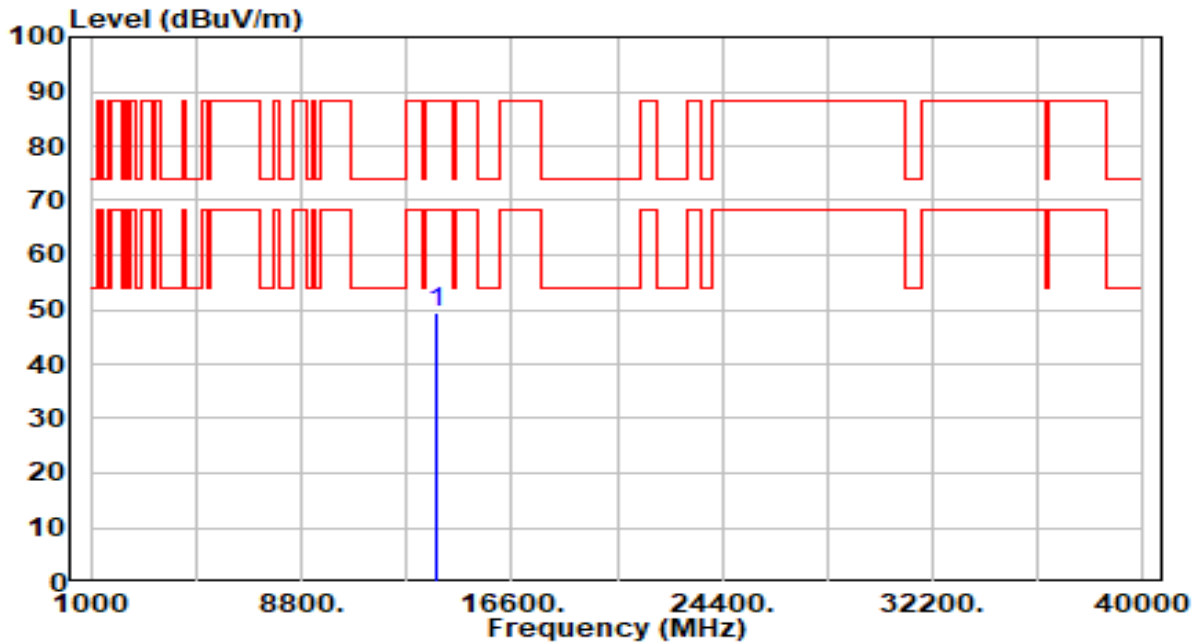


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	43.05	6.52	49.57	-38.63	88.20	100	231	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band8_26Tone_RU8_TX_CH 233 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

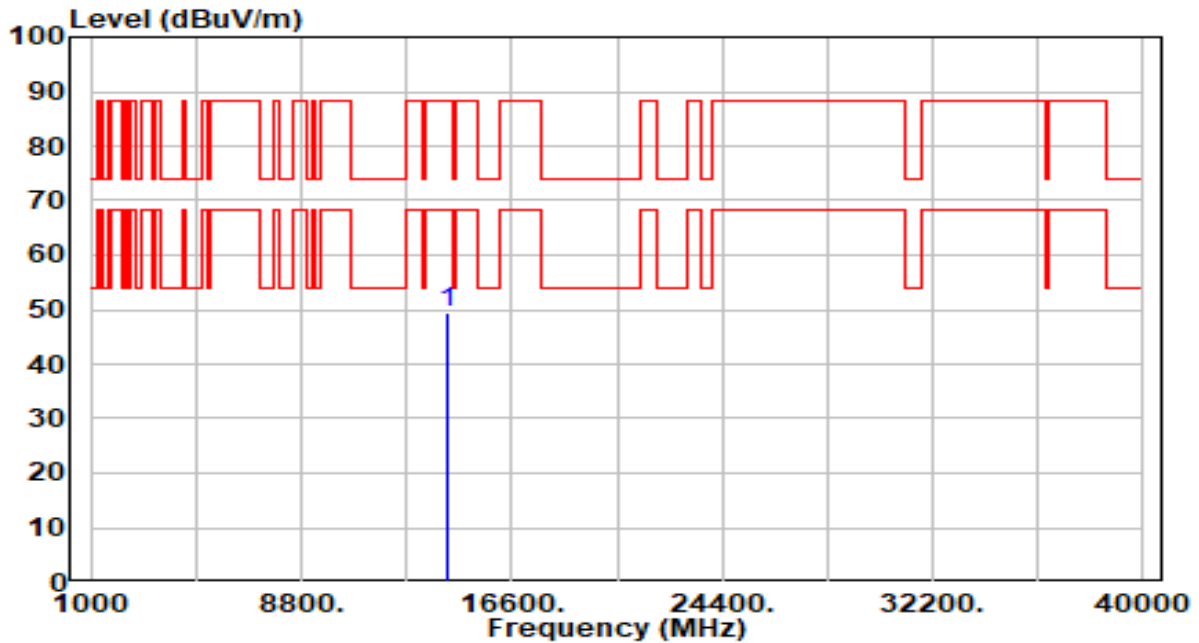


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	42.92	6.66	49.58	-38.62	88.20	100	116	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band8_26Tone_RU8_TX_CH 233 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

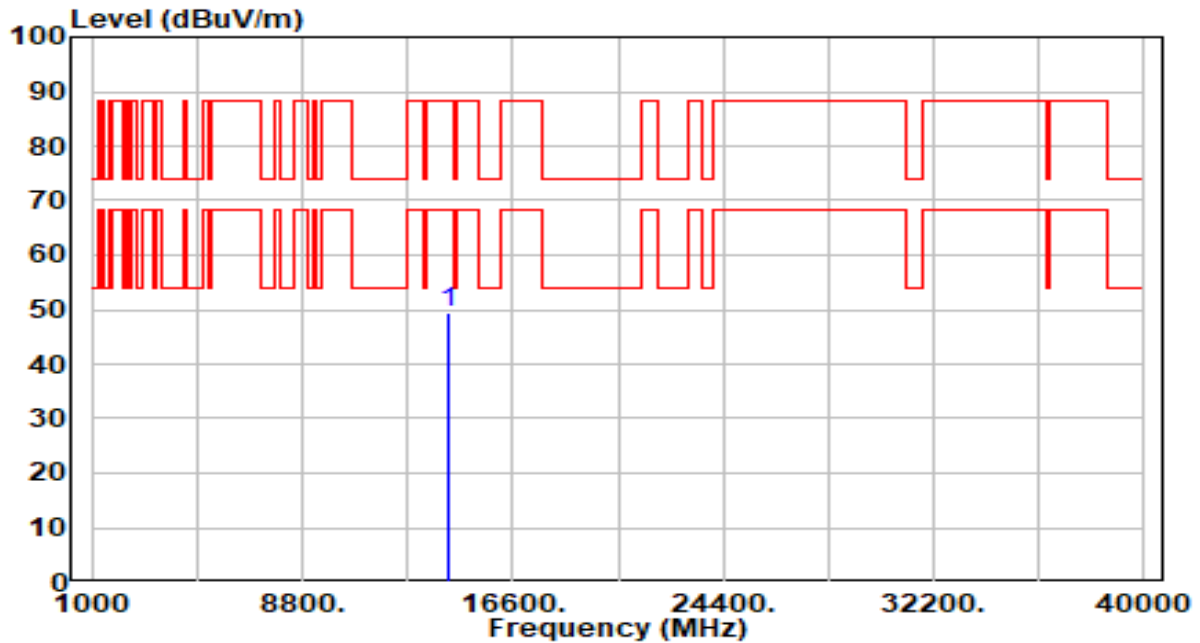


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	42.75	6.66	49.42	-38.78	88.20	100	271	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band8_52Tone_RU74_TX_CH 189 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

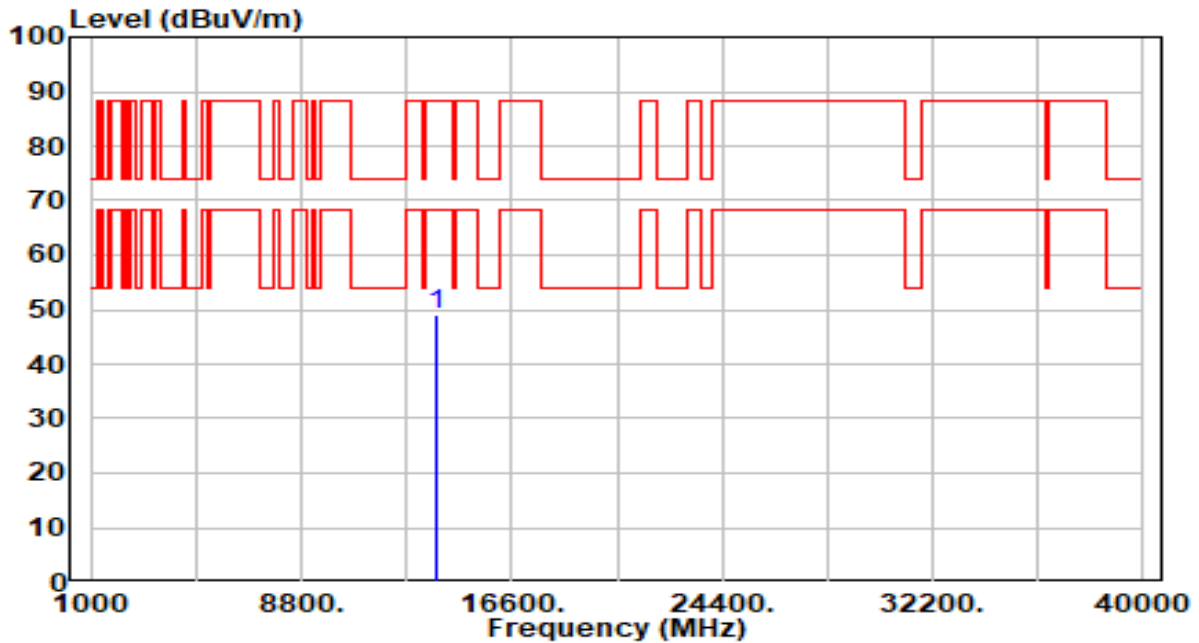


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13790.000	42.66	6.52	49.18	-39.02	88.20	100	286	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band8_52Tone_RU74_TX_CH 189 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

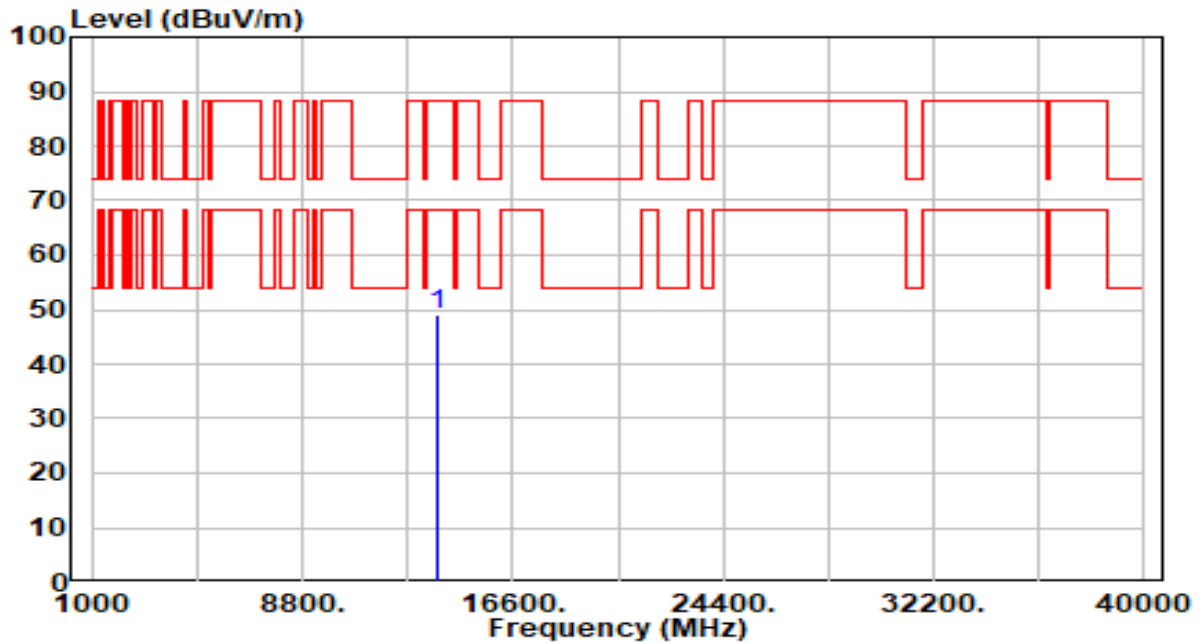


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13790.000	42.35	6.52	48.87	-39.33	88.20	100	69	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band8_52Tone_RU77_TX_CH 233 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

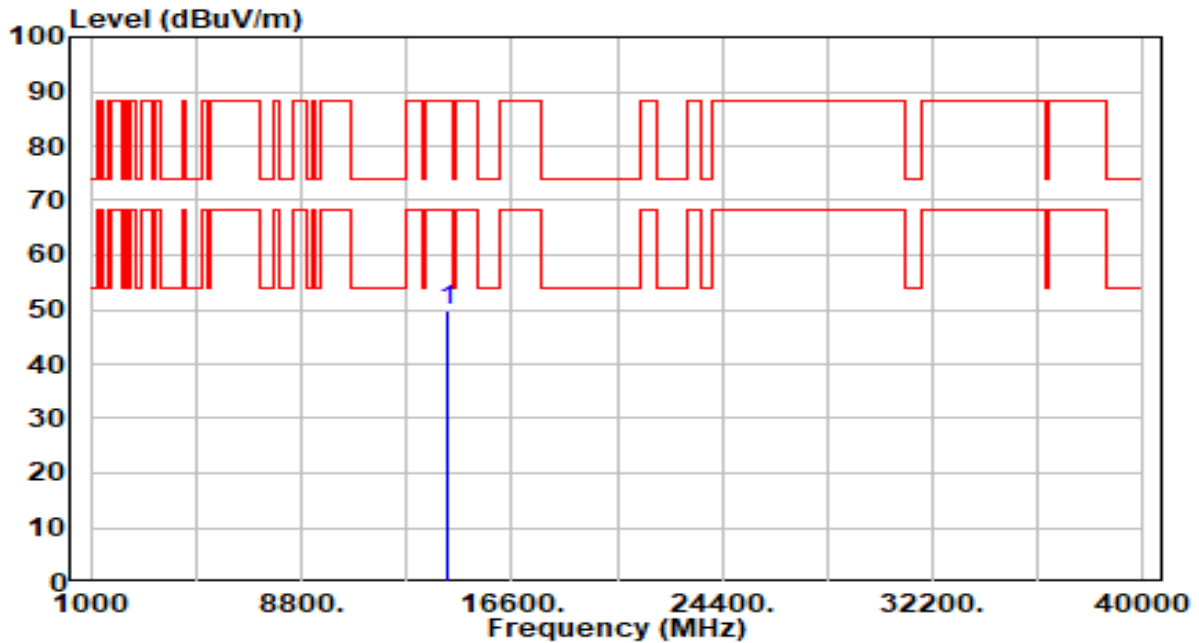


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	43.27	6.66	49.93	-38.27	88.20	100	190	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band8_52Tone_RU77_TX_CH 233 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

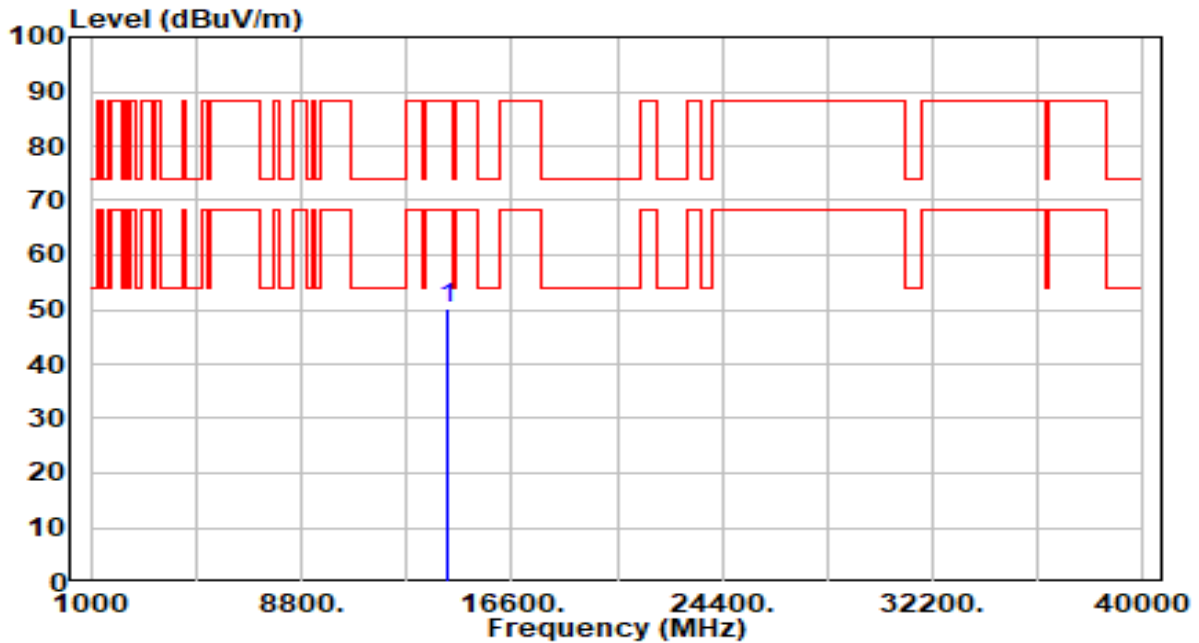


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	43.40	6.66	50.06	-38.14	88.20	100	0	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band8_106Tone_RU106 TX_CH 189 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

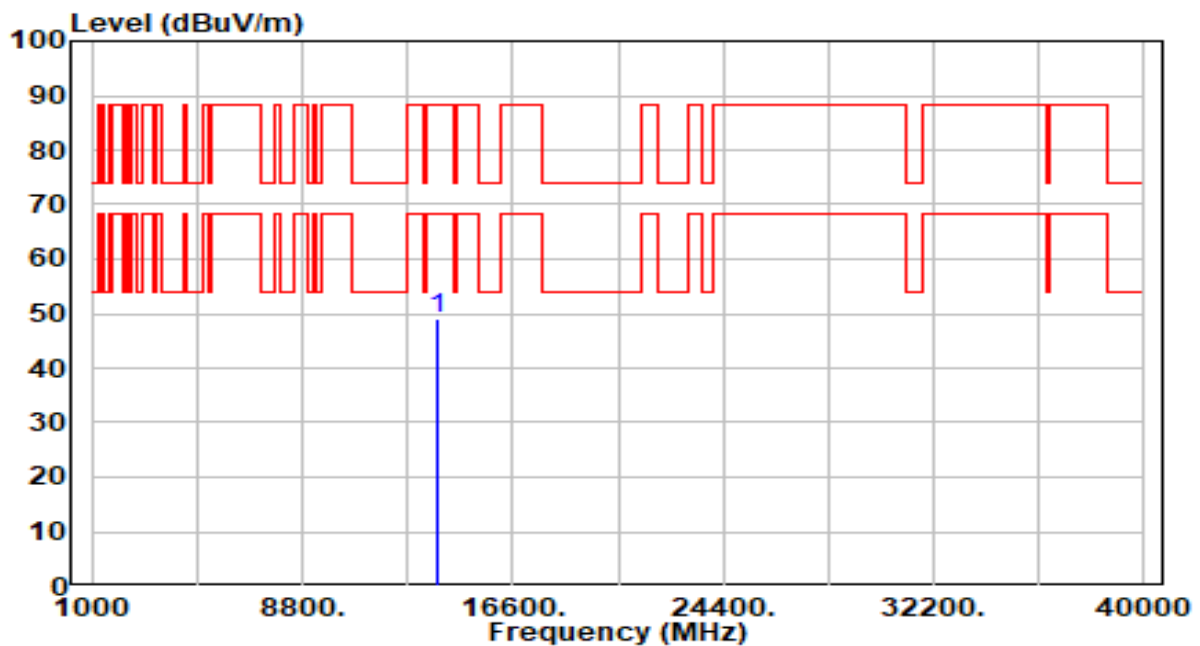


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13790.000	42.62	6.52	49.15	-39.05	88.20	100	37	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band8_106Tone_RU106 TX_CH 189 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

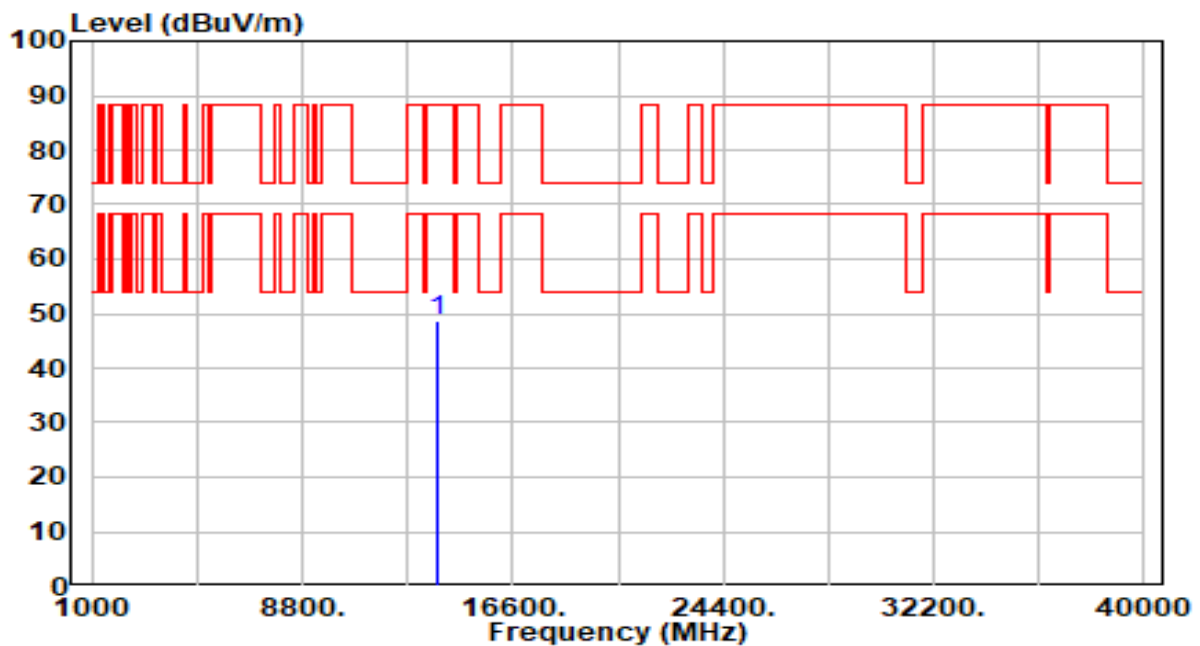


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13790.000	42.21	6.52	48.73	-39.47	88.20	100	9	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band8_106Tone_RU107 TX_CH 233 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

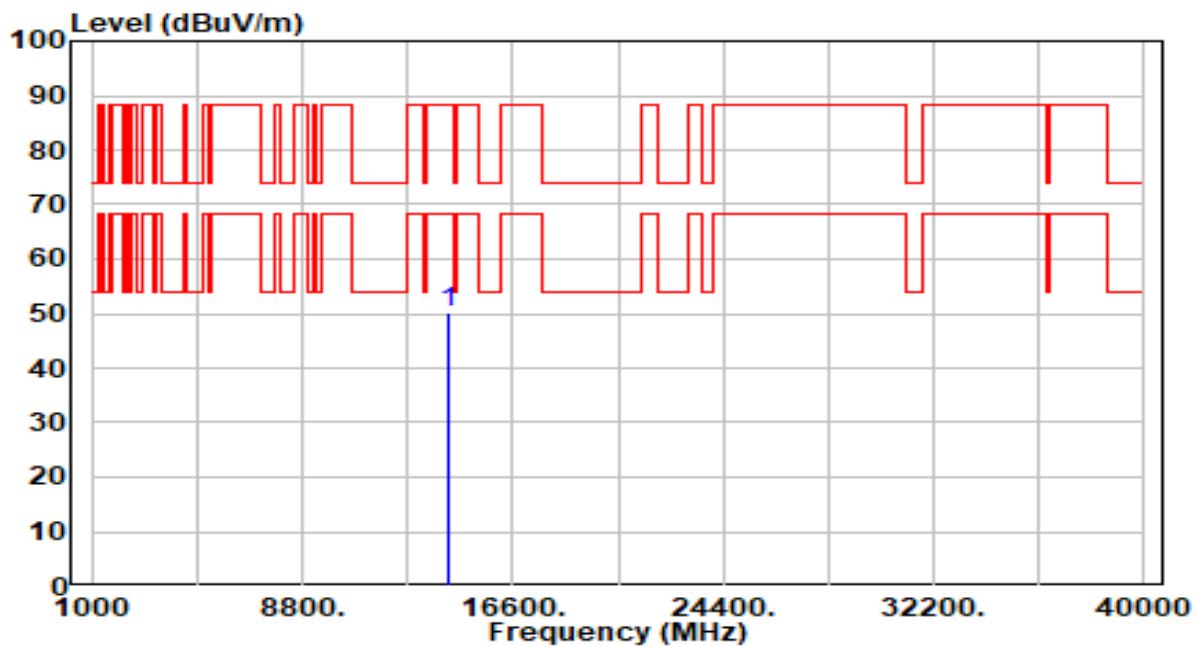


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	43.41	6.66	50.07	-38.13	88.20	100	113	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band8_106Tone_RU107 TX_CH 233 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

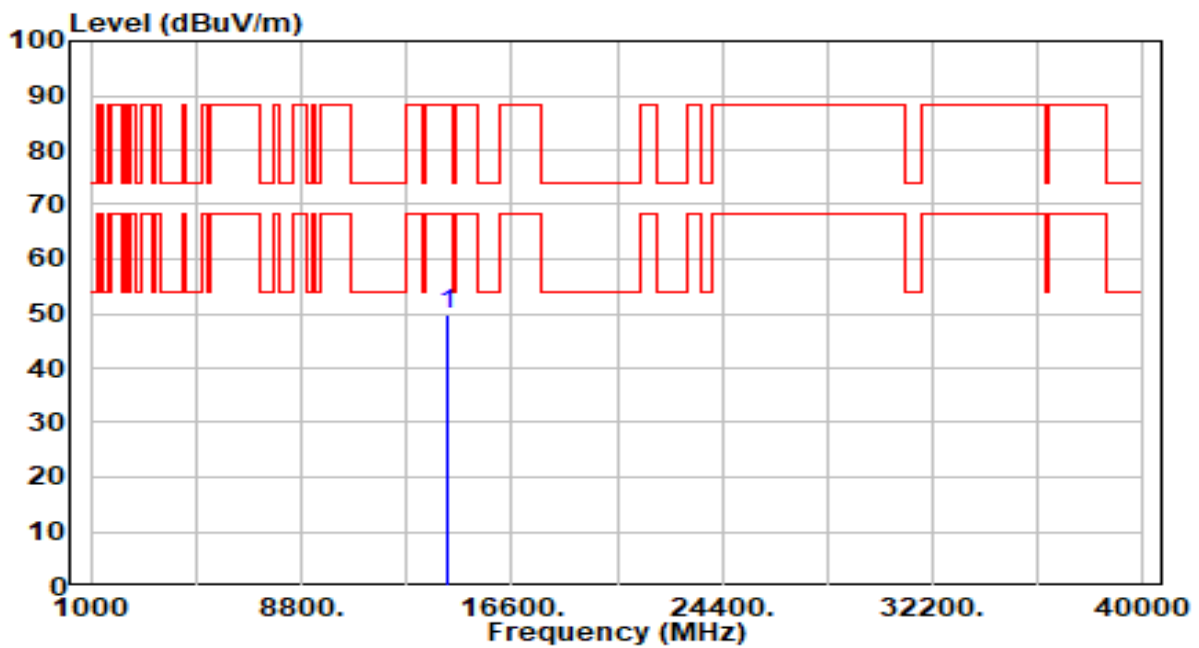


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	43.25	6.66	49.92	-38.28	88.20	100	360	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band8_242Tone_RU122 TX_CH 189 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

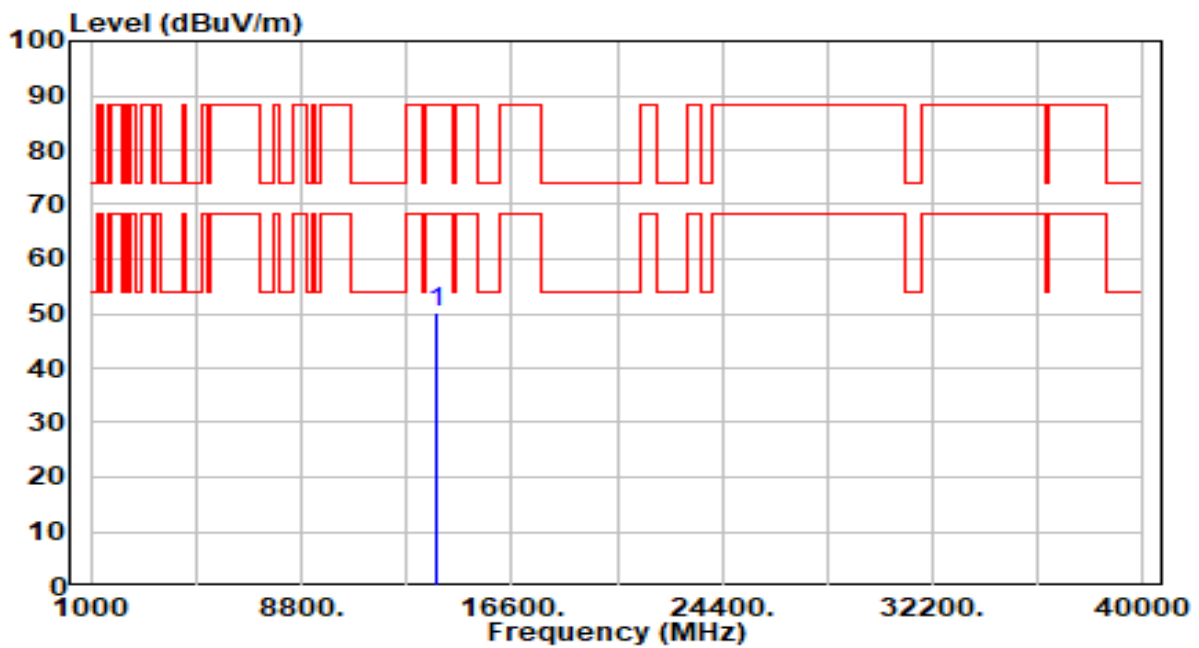


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13790.000	43.54	6.52	50.06	-38.14	88.20	100	26	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band8_242Tone_RU122 TX_CH 189 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

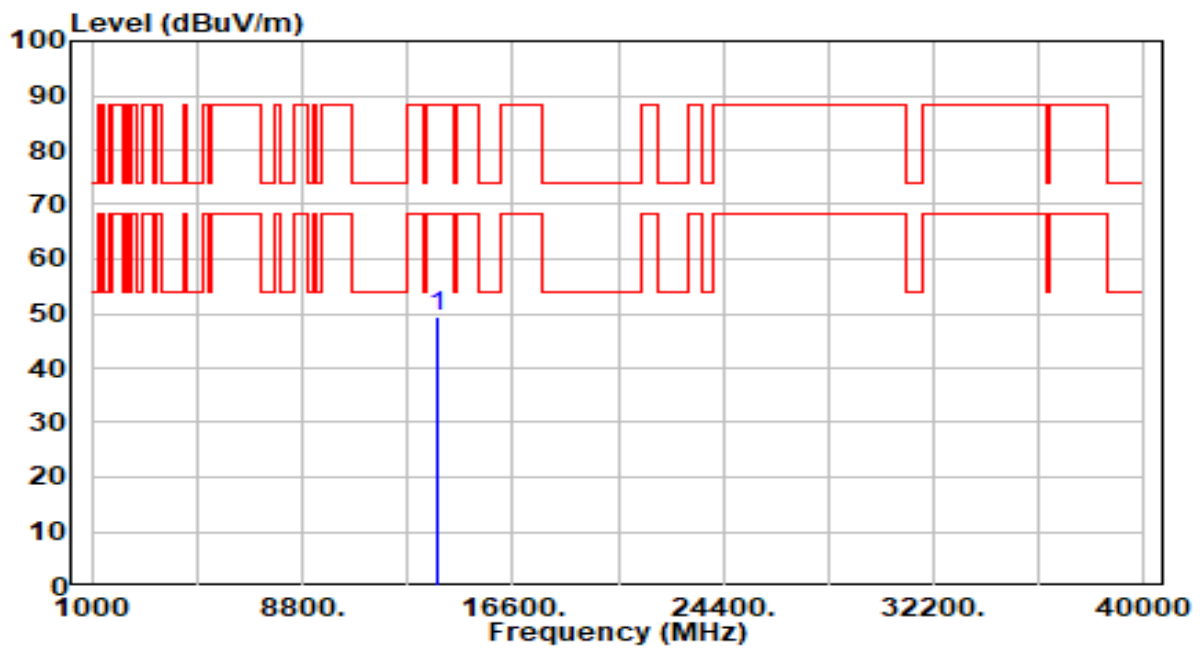


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	13790.000	42.99	6.52	49.52	-38.68	88.20	100	47	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band8_242Tone_RU122 TX_CH 233 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

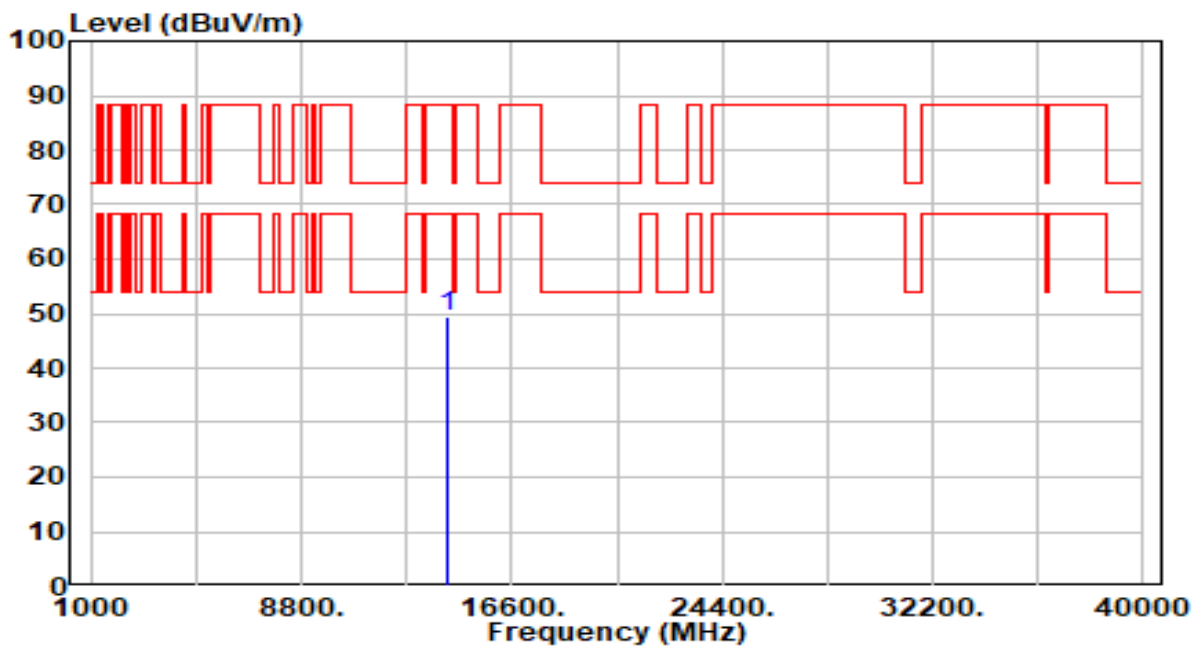


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	14230.000	42.73	6.66	49.40	-38.80	88.20	100	92	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band8_242Tone_RU122 TX_CH 233 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

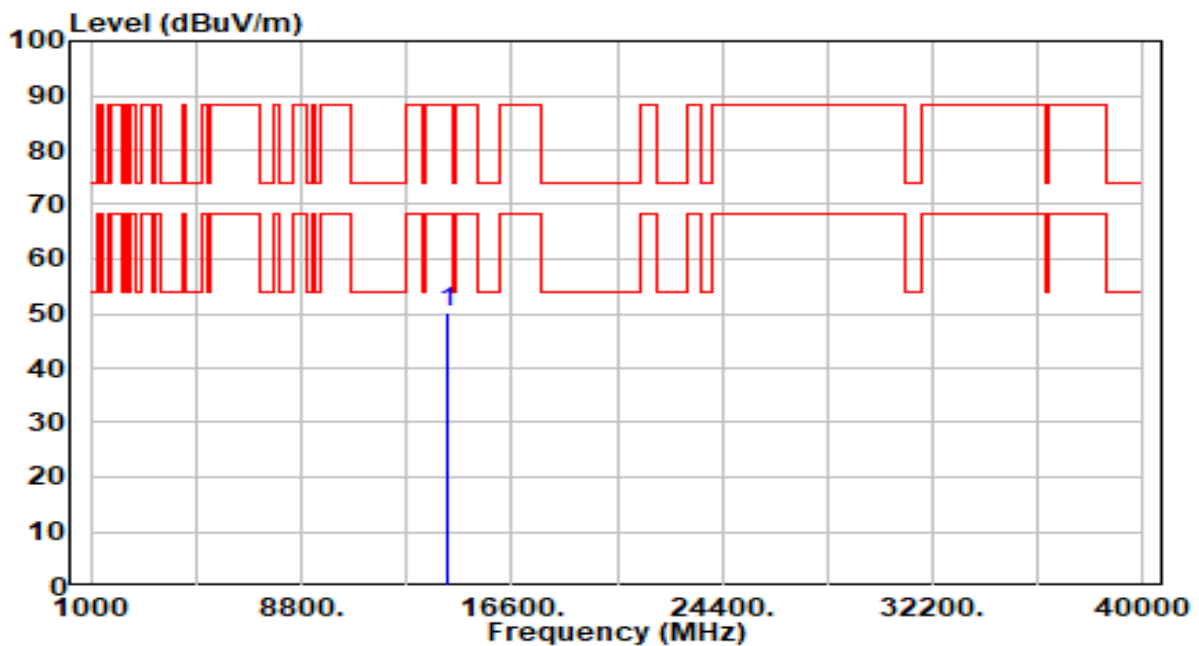


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	43.40	6.66	50.07	-38.13	88.20	100	0	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band6_26Tone_RU0 RX_CH 97 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

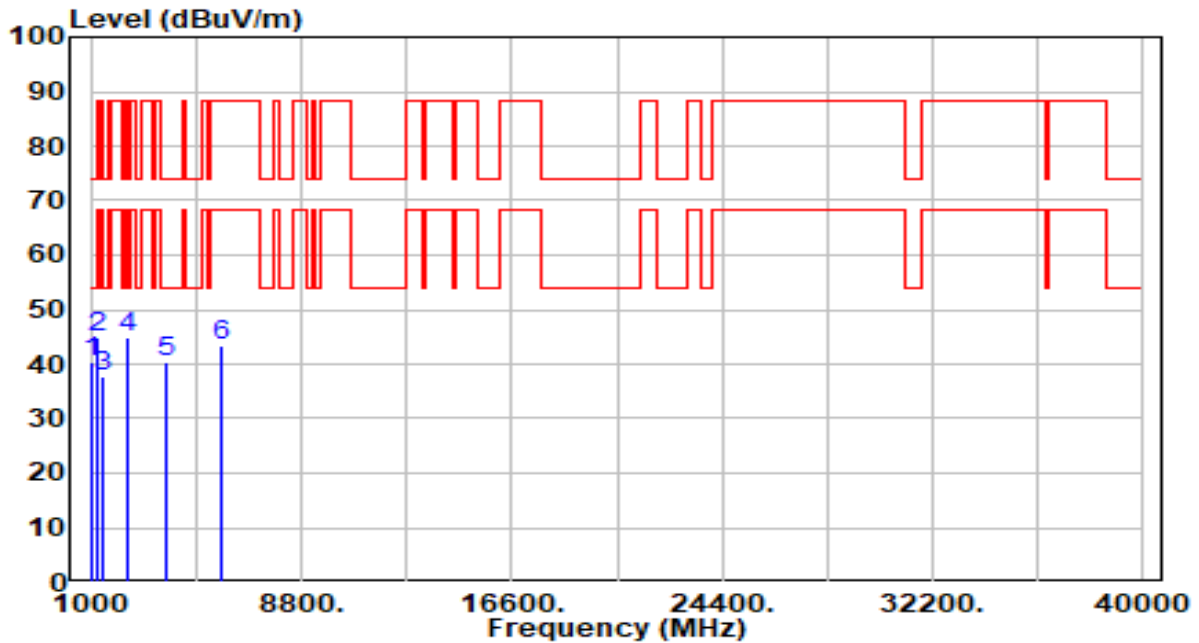


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	1037.000	48.41	-8.17	40.24	-33.76	74.00	100	19	Peak
2	* 1196.000	53.22	-8.17	45.06	-28.94	74.00	100	251	Peak
3	1472.000	45.24	-7.44	37.80	-36.20	74.00	100	251	Peak
4	2391.000	50.04	-5.14	44.90	-43.30	88.20	100	240	Peak
5	3807.000	41.93	-1.70	40.23	-33.77	74.00	100	343	Peak
6	5847.000	41.30	2.27	43.57	-44.63	88.20	100	65	Peak

Note:

- "*", means this data is the worst emission level.
- C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
- Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
- The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-20
Factor	DRH18-E & BBHA 9170	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / You
Test Mode	802.11ax-20MHz_Band6_26Tone_RU0 RX_CH 97 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

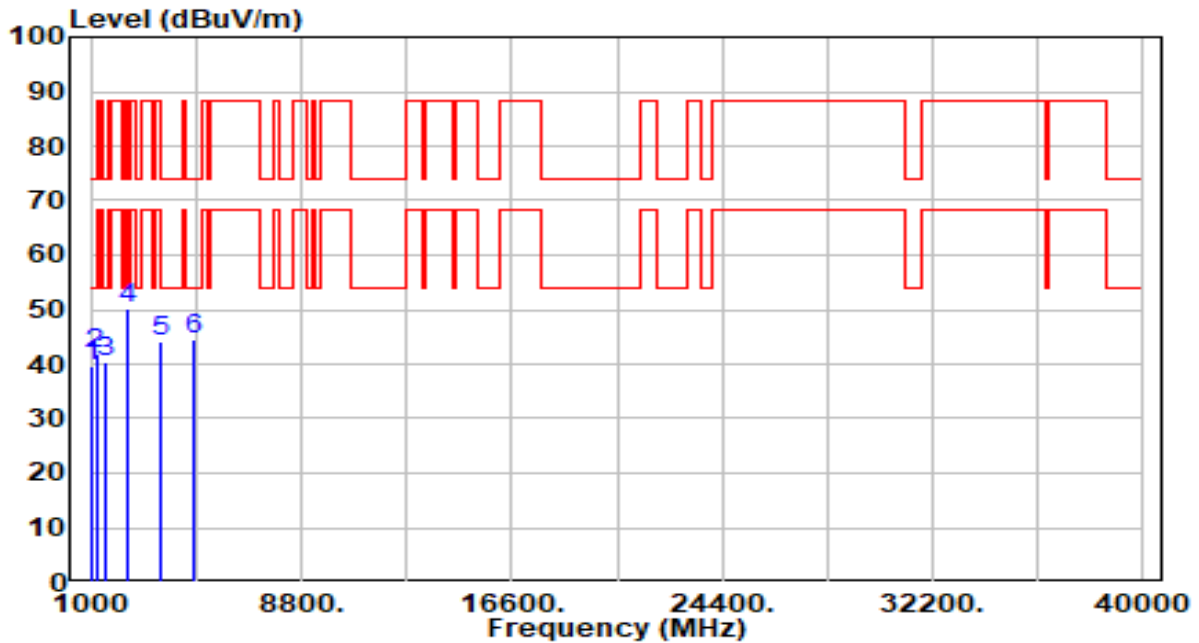

No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	1043.000	47.83	-8.17	39.66	-34.34	74.00	100	169	Peak
2	1195.000	50.16	-8.17	42.00	-32.00	74.00	100	0	Peak
3	1528.000	47.84	-7.59	40.25	-33.75	74.00	100	295	Peak
4	2396.000	55.34	-5.13	50.21	-37.99	88.20	100	258	Peak
5	3589.000	46.42	-2.37	44.05	-44.15	88.20	100	215	Peak
6	* 4800.000	44.30	0.17	44.47	-29.53	74.00	100	240	Peak

Note:

- "*", means this data is the worst emission level.
- C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB).
- Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
- The emission levels of other frequencies are very lower than the limit and not show in test report.

6.9. Radiated Restricted Band Edge

6.9.1. Test Limit

For 15.205 requirement:

Radiated emissions which fall in the restricted bands, as defined in Section 15.205(a) of FCC part 15, must also comply with the radiated emission limits specified in Section 15.209(a).

Frequency (MHz)	Frequency (MHz)	Frequency (MHz)	Frequency (GHz)
0.090 - 0.110	16.42 - 16.423	399.9 - 410	4.5 - 5.15
¹ 0.495 - 0.505	16.69475 - 16.69525	608 - 614	5.35 - 5.46
2.1735 - 2.1905	16.80425 - 16.80475	960 - 1240	7.25 - 7.75
4.125 - 4.128	25.5 - 25.67	1300 - 1427	8.025 - 8.5
4.17725 - 4.17775	37.5 - 38.25	1435 - 1626.5	9.0 - 9.2
4.20725 - 4.20775	73 - 74.6	1645.5 - 1646.5	9.3 - 9.5
6.215 - 6.218	74.8 - 75.2	1660 - 1710	10.6 - 12.7
6.26775 - 6.26825	108 - 121.94	1718.8 - 1722.2	13.25 - 13.4
6.31175 - 6.31225	123 - 138	2200 - 2300	14.47 - 14.5
8.291 - 8.294	149.9 - 150.05	2310 - 2390	15.35 - 16.2
8.362 - 8.366	156.52475 - 156.52525	2483.5 - 2500	17.7 - 21.4
8.37625 - 8.38675	156.7 - 156.9	2690 - 2900	22.01 - 23.12
8.41425 - 8.41475	162.0125 - 167.17	3260 - 3267	23.6 - 24.0
12.29 - 12.293	167.72 - 173.2	3332 - 3339	31.2 - 31.8
12.51975 - 12.52025	240 - 285	3345.8 - 3358	36.43 - 36.5
12.57675 - 12.57725	322 - 335.4	3600 - 4400	(²)
13.36 - 13.41	--	--	--

For 15.407(b)(5) requirement

For transmitters operating within the 5.925-7.125 GHz band: Any emissions outside of the 5.925-7.125 GHz band must not exceed an e.i.r.p. of -27 dBm/MHz.

Refer to 987594 D02 U-NII 6GHz EMC Measurement v02r01 clause G - Unwanted Emission Measurement

Use guidance in KDB 789033 for measurements below 1000 MHz and above 1000 MHz. Unwanted emissions outside of restricted bands are measured with a RMS detector. In addition, 15.35(b) applies where the peak emissions must be limited to no more than 20 dB above the average limit.

All out of band emissions appearing in a restricted band as specified in Section 15.205 of the Title 47CFR must not exceed the limits shown in Table per Section 15.209.

FCC Part 15 Subpart C Paragraph 15.209		
Frequency [MHz]	Field Strength [uV/m]	Measured Distance [Meters]
0.009 - 0.490	2400/F (kHz)	300
0.490 - 1.705	24000/F (kHz)	30
1.705 - 30	30	30
30 - 88	100	3
88 - 216	150	3
216 - 960	200	3
Above 960	500	3

6.9.2. Test Procedure Used

KDB 789033 D02v02r01- Section G

6.9.3. Test Setting

Peak Measurements above 1GHz


1. Analyzer center frequency was set to the frequency of the radiated spurious emission of interest
2. RBW = 1MHz
3. VBW = 3MHz
4. Detector = Peak
5. Sweep time = Auto couple
6. Trace mode = Max hold
7. Trace was allowed to stabilize

Average Measurements above 1GHz (Method VB)

1. Analyzer center frequency was set to the frequency of the radiated spurious emission of interest
2. RBW = 1MHz
3. VBW; if the EUT is configured to transmit with duty cycle $\geq 98\%$, set VBW = 10Hz
4. If the EUT duty cycle is $< 98\%$, set VBW $\geq 1/T$. T is the minimum transmission duration
5. Detector = Peak


6. Sweep time = Auto
7. Trace mode = Max hold
8. Trace was allowed to stabilize

6.9.4. Test Setup

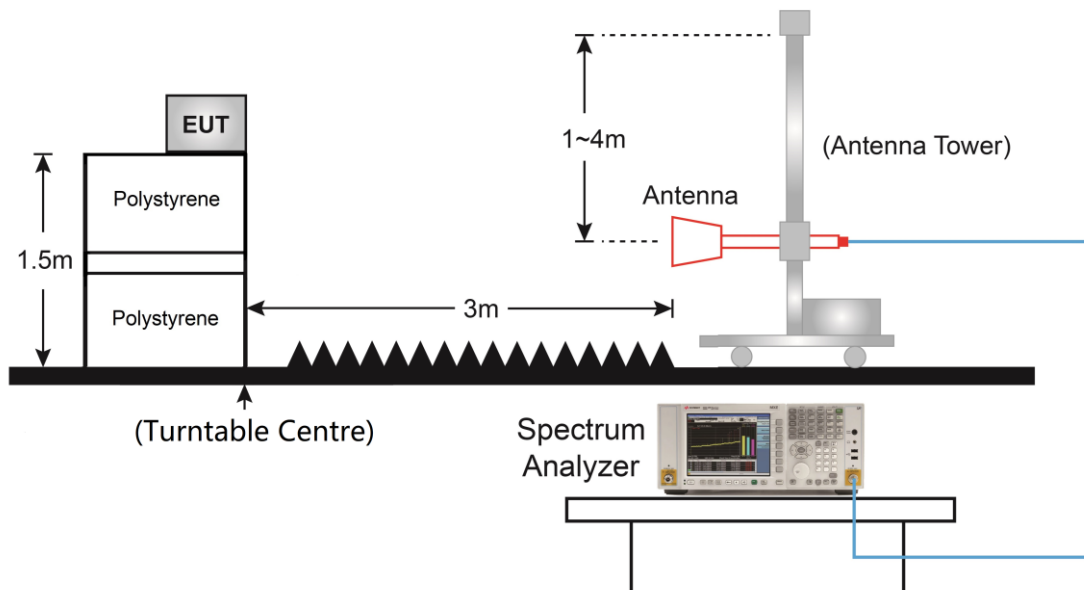

6.9.5. Test Result

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band5_TX_CH 2 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

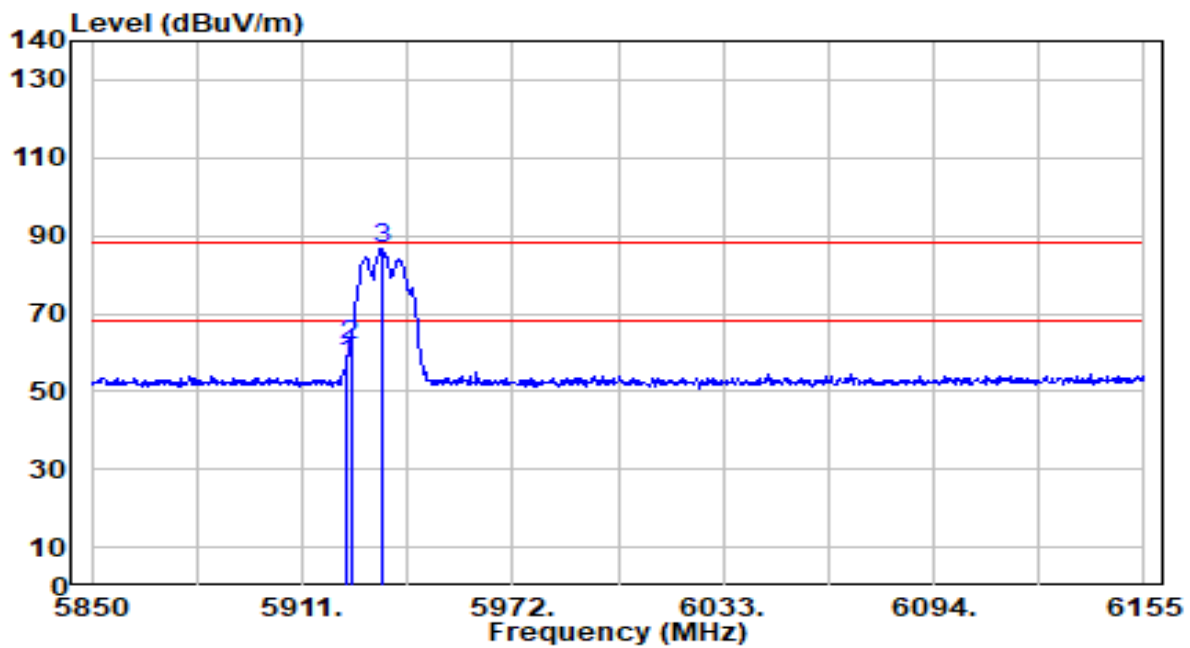


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	5923.810	54.98	2.25	57.23	-30.97	88.20	100	260	Peak
2	* 5925.000	59.38	2.25	61.62	-26.58	88.20	100	260	Peak
3	5934.180	84.47	2.24	86.71	N/A	N/A	100	260	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band5_TX_CH 2 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

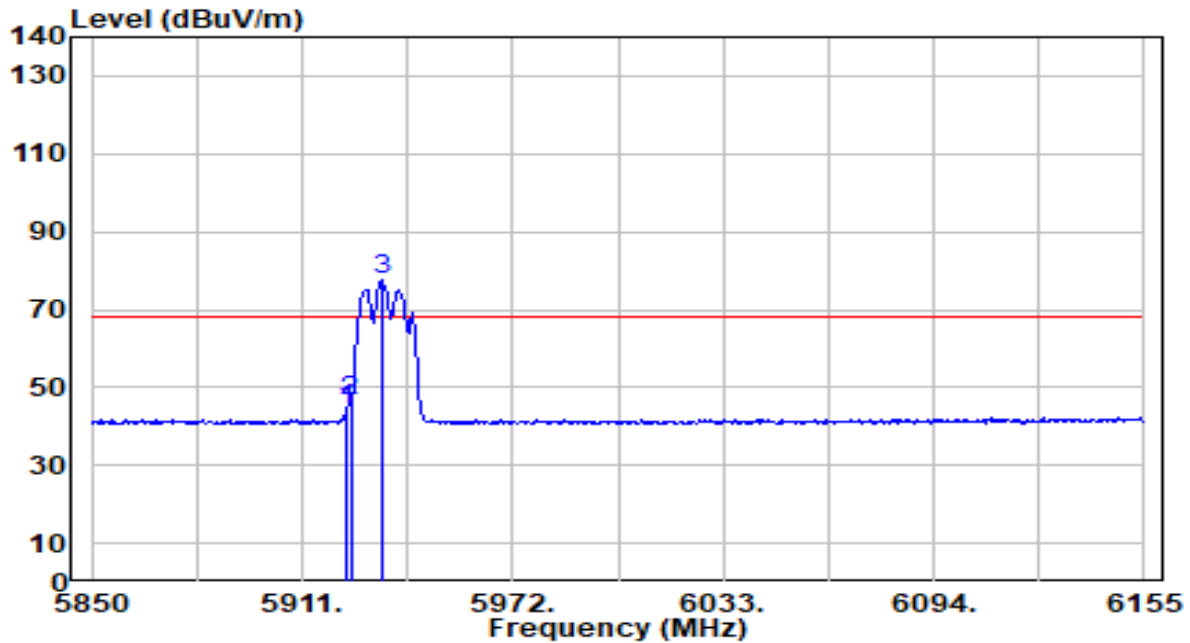


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	5923.810	42.34	2.25	44.59	-23.61	68.20	100	260	Average
2	* 5925.000	44.41	2.25	46.65	-21.55	68.20	100	260	Average
3	5934.180	75.57	2.24	77.81	N/A	N/A	100	260	Average

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band5_TX_CH 2 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

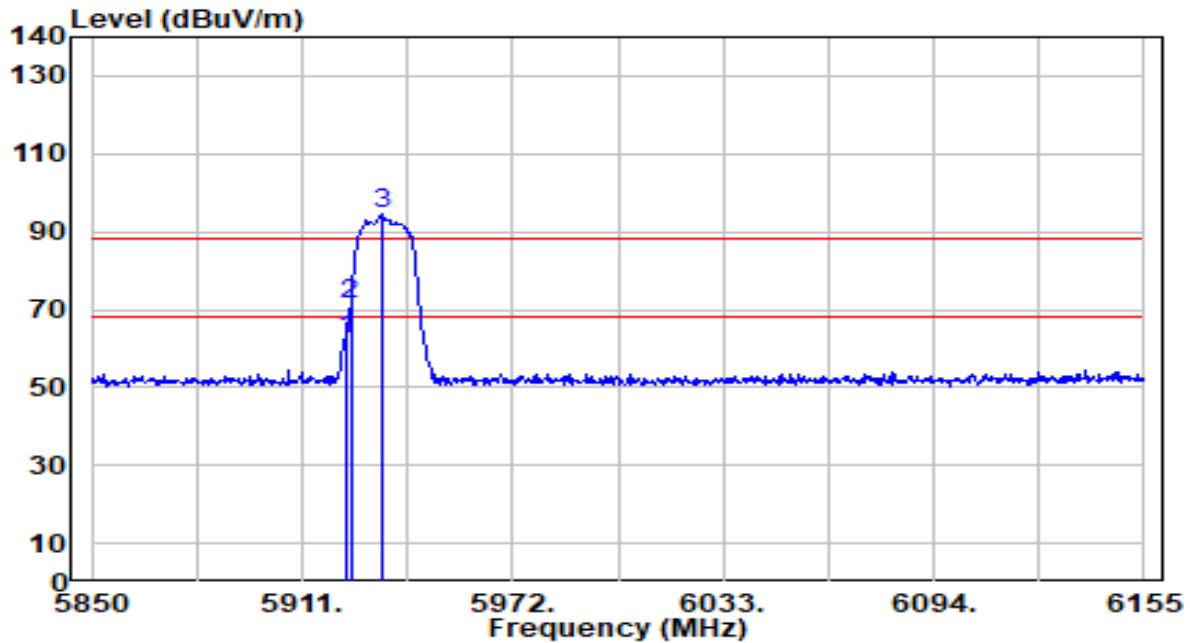


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	5923.810	60.26	2.25	62.50	-25.70	88.20	134	238	Peak
2	* 5925.000	68.90	2.25	71.15	-17.05	88.20	134	238	Peak
3	5934.485	92.17	2.24	94.41	N/A	N/A	134	238	Peak

Note:

- "*", means this data is the worst emission level.
- C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
- Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
- The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band5_TX_CH 2 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

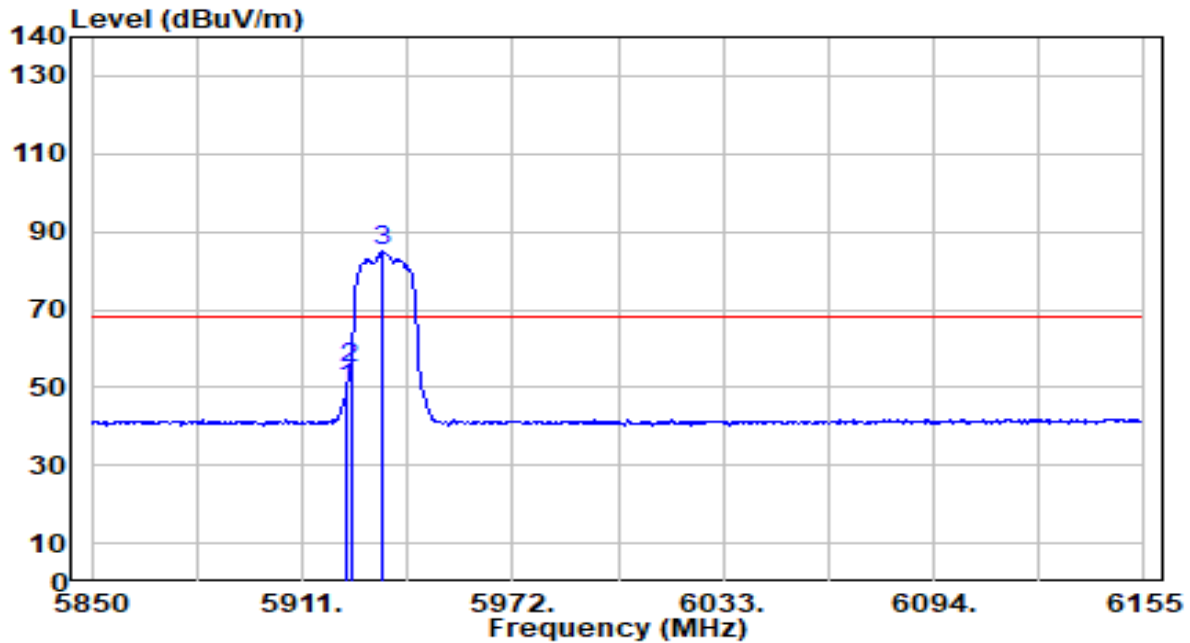


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	5923.810	47.41	2.25	49.65	-18.55	68.20	134	238	Average
2	* 5925.000	52.64	2.25	54.88	-13.32	68.20	134	238	Average
3	5933.875	82.98	2.24	85.22	N/A	N/A	134	238	Average

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band5_TX_CH 1 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

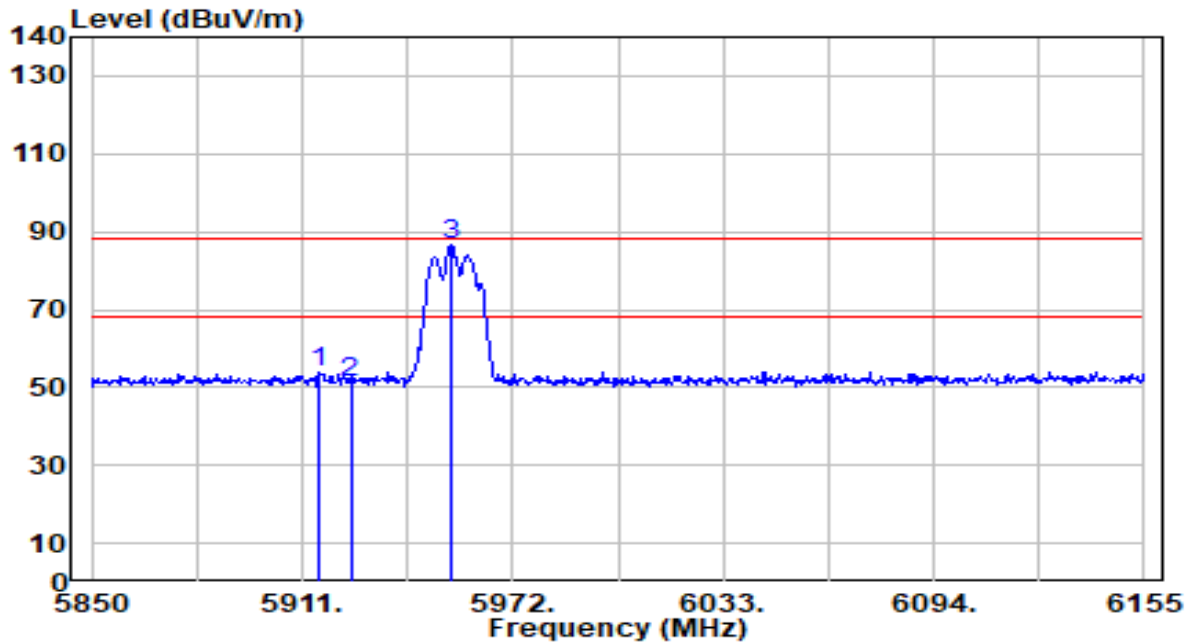


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	5916.185	51.40	2.25	53.65	-34.55	88.20	100	260	Peak
2		5925.000	48.93	2.25	51.17	-37.03	88.20	100	260	Peak
3		5954.005	84.33	2.24	86.57	N/A	N/A	100	260	Peak

Note:

- "*", means this data is the worst emission level.
- C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
- Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
- The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band5_TX_CH 1 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

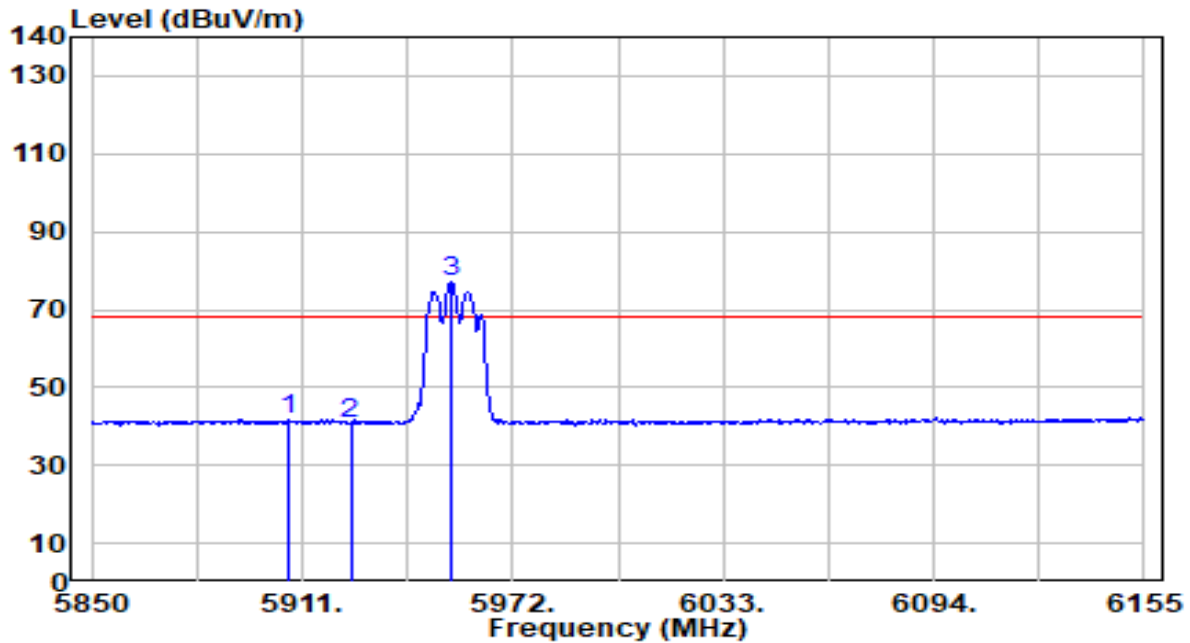


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	* 5906.730	39.40	2.25	41.65	-26.55	68.20	100	260	Average
2	5925.000	38.70	2.25	40.94	-27.26	68.20	100	260	Average
3	5954.310	74.89	2.24	77.12	N/A	N/A	100	260	Average

Note:

- "*", means this data is the worst emission level.
- C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
- Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
- The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band5_TX_CH 1 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

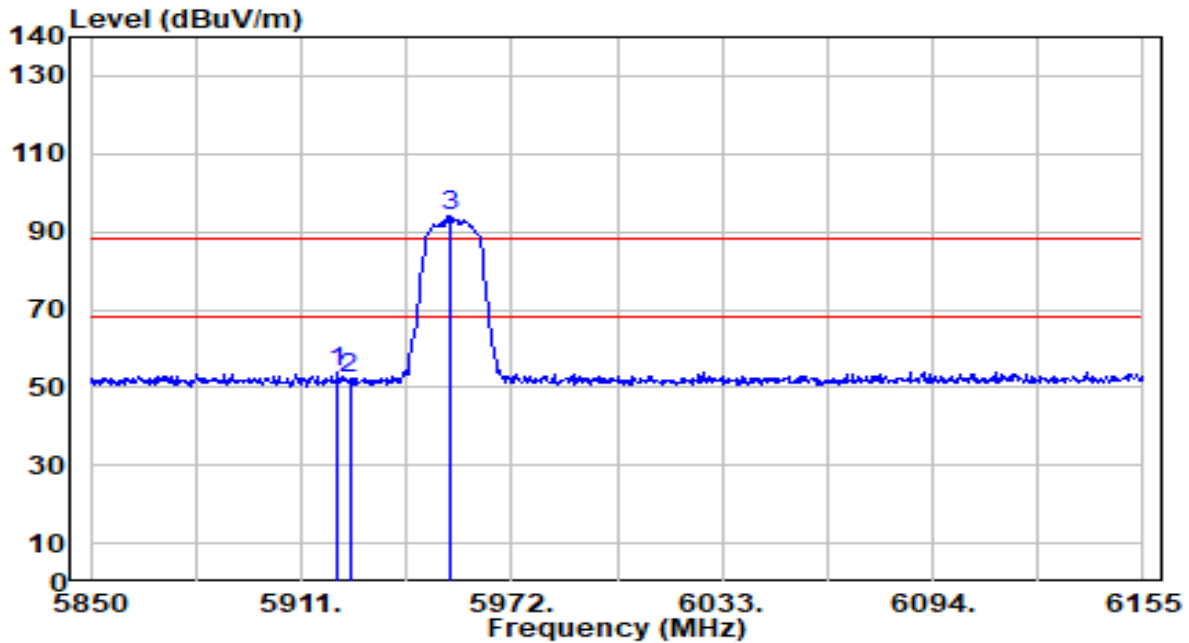


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	5921.675	51.55	2.25	53.80	-34.40	88.20	134	238	Peak
2		5925.000	50.26	2.25	52.51	-35.69	88.20	134	238	Peak
3		5954.005	92.04	2.24	94.28	N/A	N/A	134	238	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band5_TX_CH 1 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

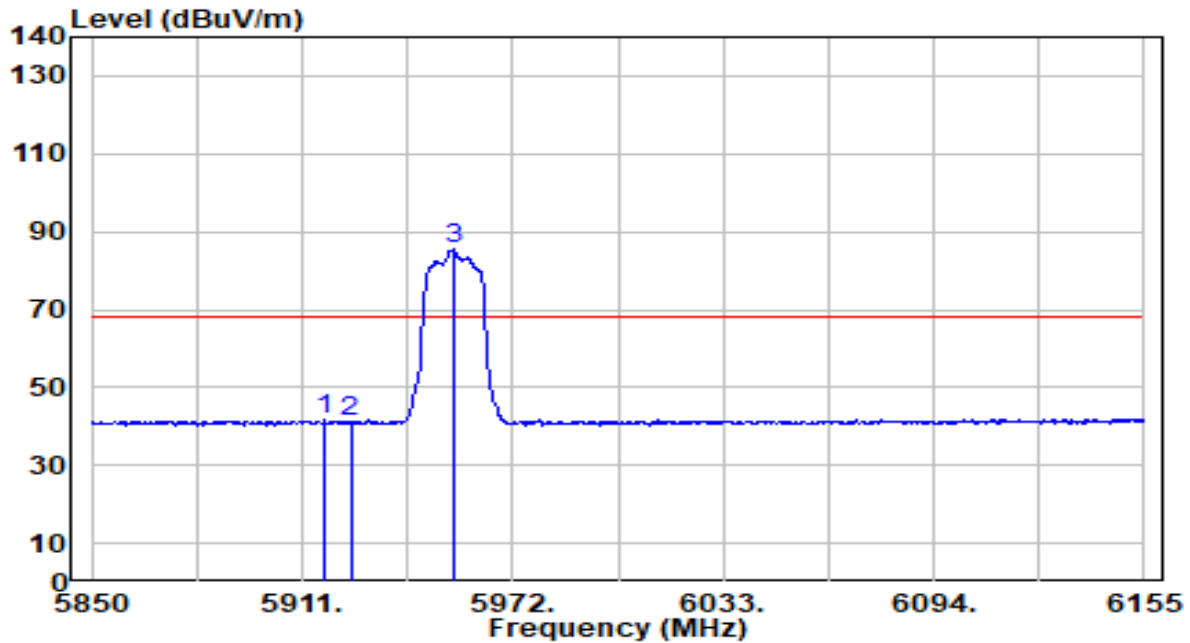


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	5917.710	39.29	2.25	41.54	-26.66	68.20	134	238	Average
2		5925.000	38.80	2.25	41.04	-27.16	68.20	134	238	Average
3		5954.615	83.11	2.24	85.34	N/A	N/A	134	238	Average

Note:

- "*", means this data is the worst emission level.
- C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
- Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
- The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band8_TX_CH 229 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

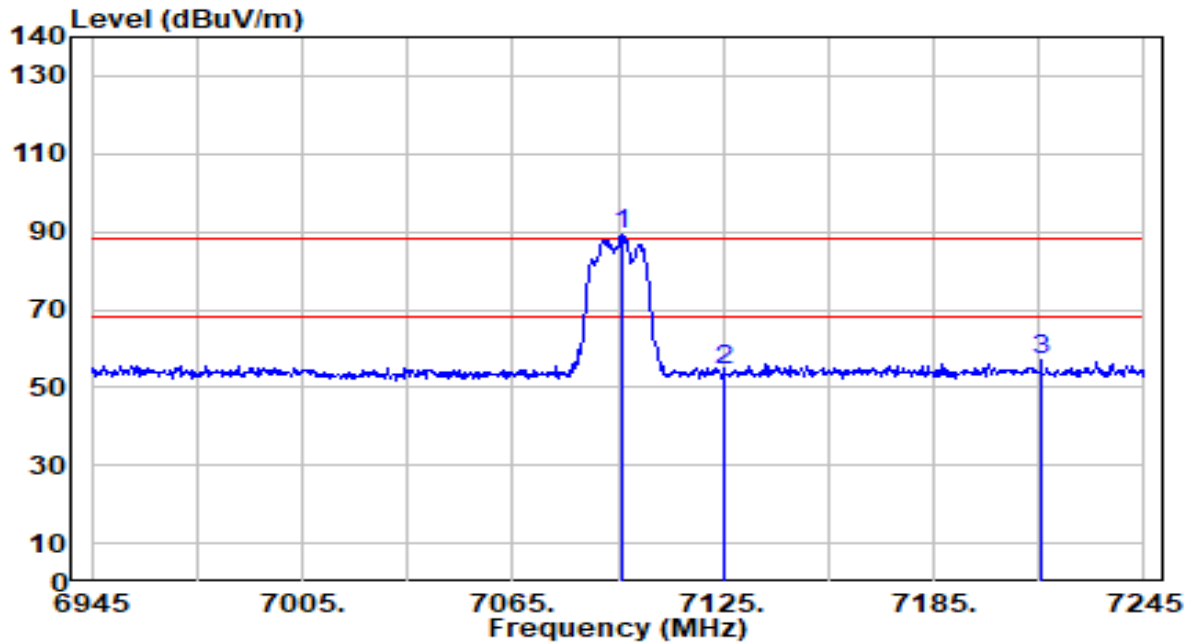


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	7096.200	83.76	5.46	89.22	N/A	N/A	221	299	Peak
2	7125.000	48.68	5.48	54.15	-34.05	88.20	221	299	Peak
3	* 7215.600	51.29	5.53	56.82	-31.38	88.20	221	299	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band8_TX_CH 229 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

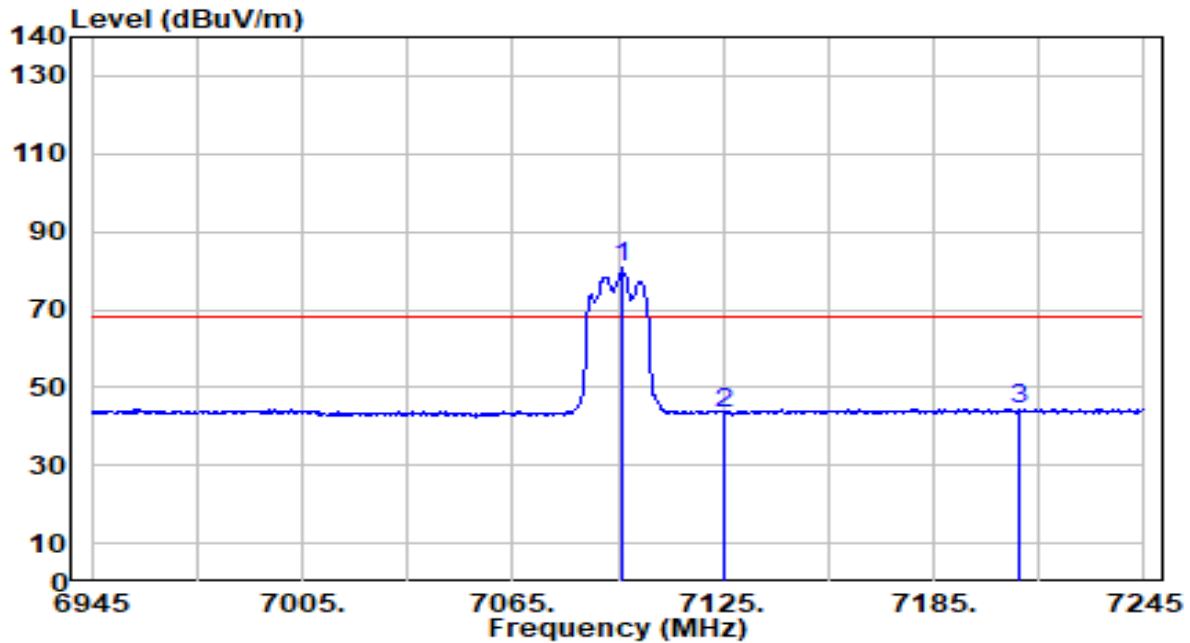


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	7096.200	75.12	5.46	80.58	N/A	N/A	221	299	Average
2	7125.000	37.63	5.48	43.10	-25.10	68.20	221	299	Average
3	* 7209.600	39.09	5.53	44.62	-23.58	68.20	221	299	Average

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band8_TX_CH 229 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

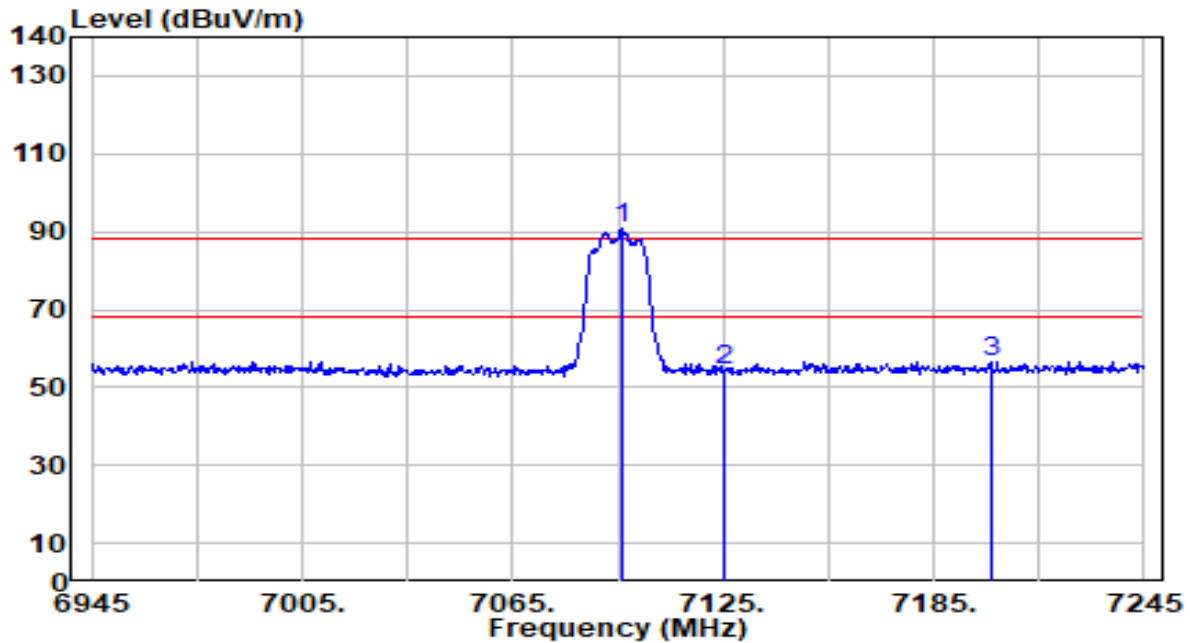


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	7095.900	85.38	5.46	90.83	N/A	N/A	114	2	Peak
2	7125.000	48.77	5.48	54.25	-33.95	88.20	114	2	Peak
3	* 7201.200	51.20	5.52	56.72	-31.48	88.20	114	2	Peak

Note:

- "*", means this data is the worst emission level.
- C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
- Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
- The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band8_TX_CH 229 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

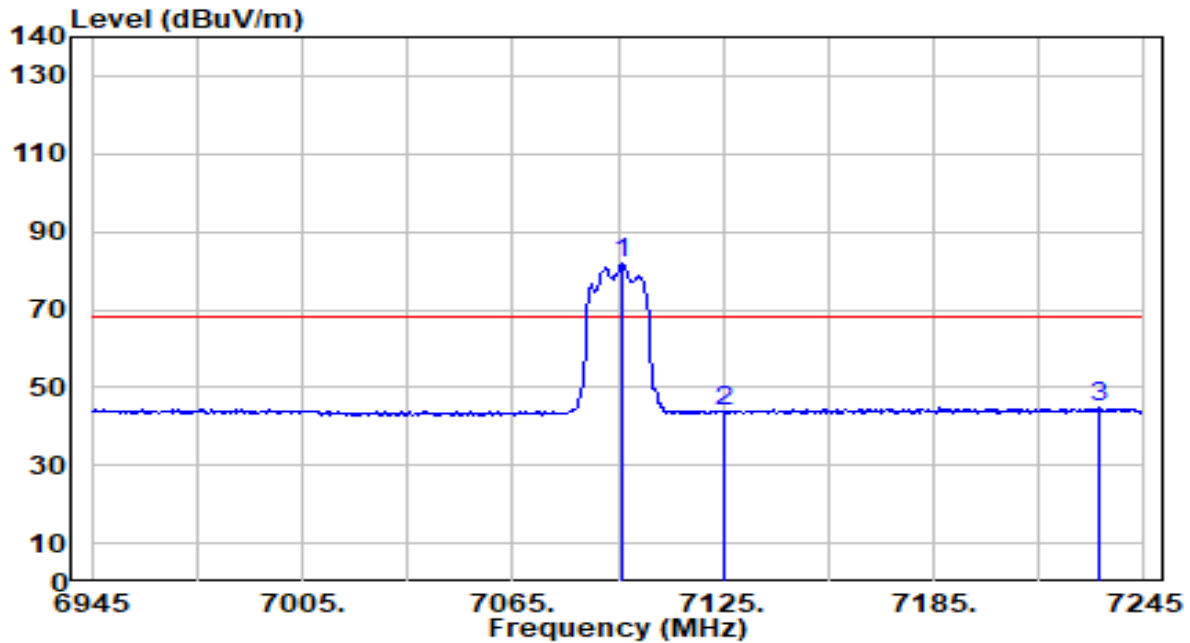


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	7096.200	76.29	5.46	81.75	N/A	N/A	114	2	Average
2	7125.000	38.26	5.48	43.74	-24.46	68.20	114	2	Average
3	* 7232.400	39.27	5.54	44.81	-23.39	68.20	114	2	Average

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band8_TX_CH 233 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

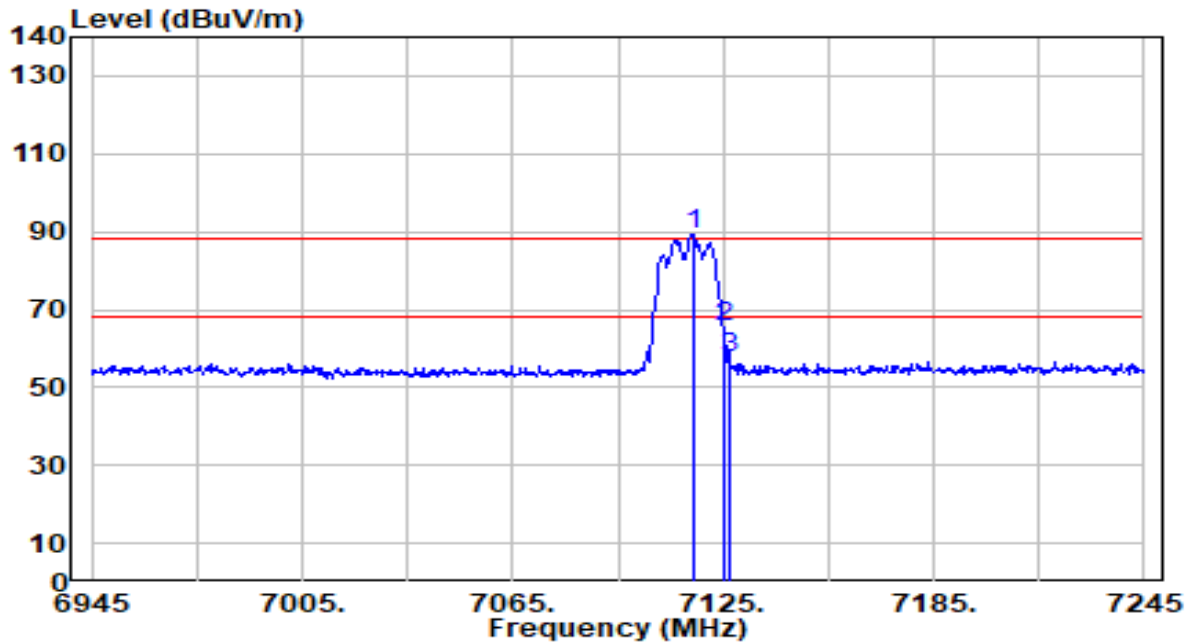


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	7116.300	83.92	5.47	89.39	N/A	N/A	221	299	Peak
2	* 7125.000	60.25	5.48	65.72	-22.48	88.20	221	299	Peak
3	7126.800	52.34	5.48	57.82	-30.38	88.20	221	299	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band8_TX_CH 233 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

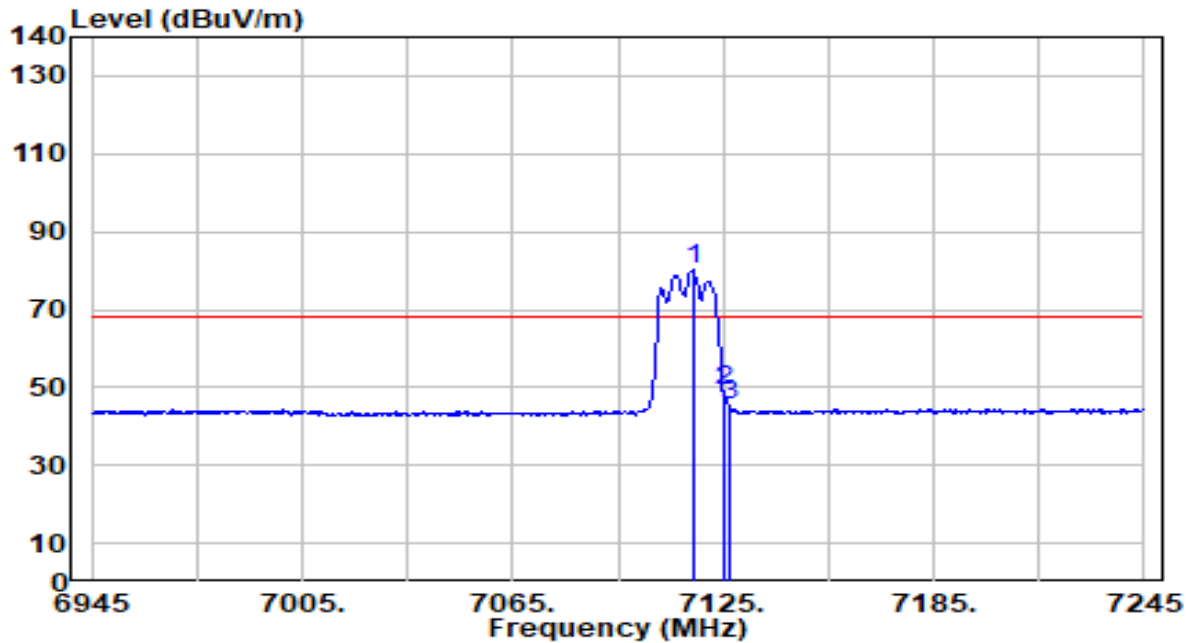


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	7116.300	75.08	5.47	80.55	N/A	N/A	221	299	Average
2	* 7125.000	43.42	5.48	48.89	-19.31	68.20	221	299	Average
3	7126.800	39.90	5.48	45.38	-22.82	68.20	221	299	Average

Note:

- "*", means this data is the worst emission level.
- C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
- Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
- The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band8_TX_CH 233 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

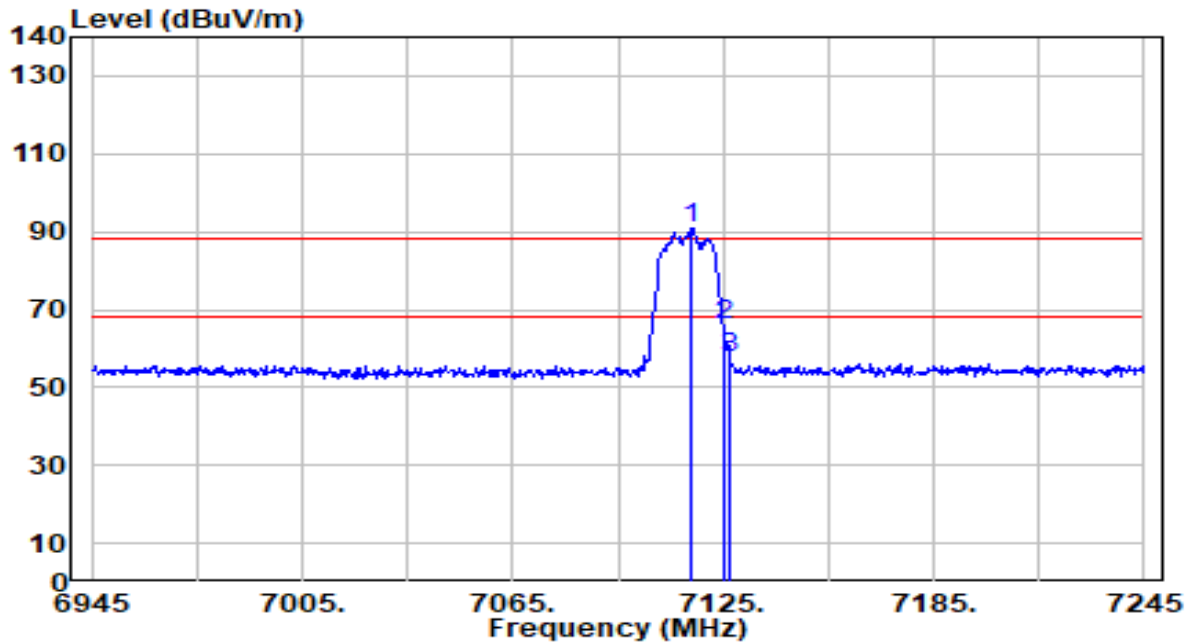


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	7116.000	85.66	5.47	91.13	N/A	N/A	114	2	Peak
2	* 7125.000	60.54	5.48	66.02	-22.18	88.20	114	2	Peak
3	7126.800	52.30	5.48	57.78	-30.42	88.20	114	2	Peak

Note:

- "*", means this data is the worst emission level.
- C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
- Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
- The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11a_Band8_TX_CH 233 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

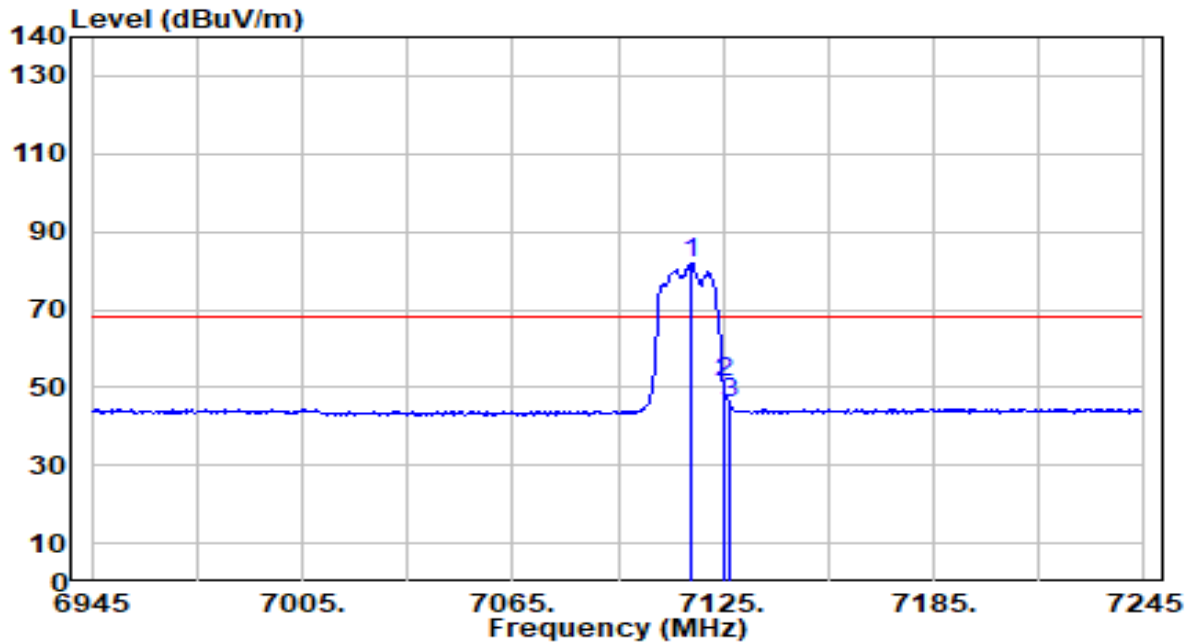


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	7116.000	76.43	5.47	81.90	N/A	N/A	114	2	Average
2	* 7125.000	45.54	5.48	51.01	-17.19	68.20	114	2	Average
3	7126.800	40.34	5.48	45.81	-22.39	68.20	114	2	Average

Note:

- "*", means this data is the worst emission level.
- C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
- Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
- The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band5_TX_CH 2 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

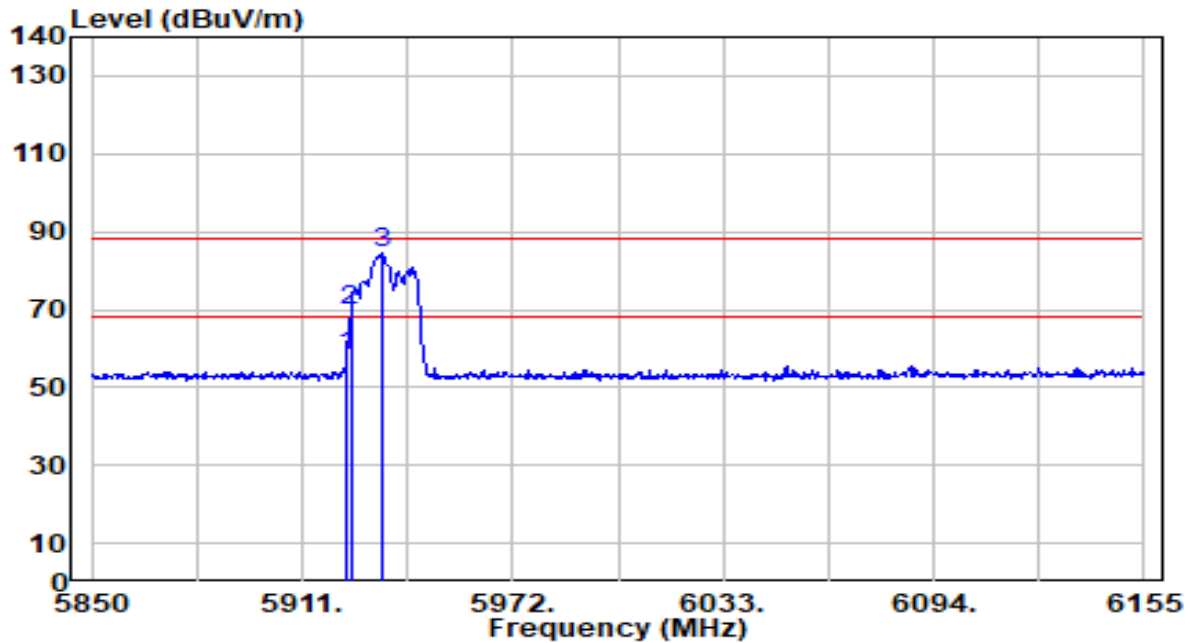


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	5923.810	55.86	2.25	58.10	-30.10	88.20	100	260	Peak
2	* 5925.000	67.70	2.25	69.95	-18.25	88.20	100	260	Peak
3	5934.485	82.43	2.24	84.67	N/A	N/A	100	260	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band5_TX_CH 2 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

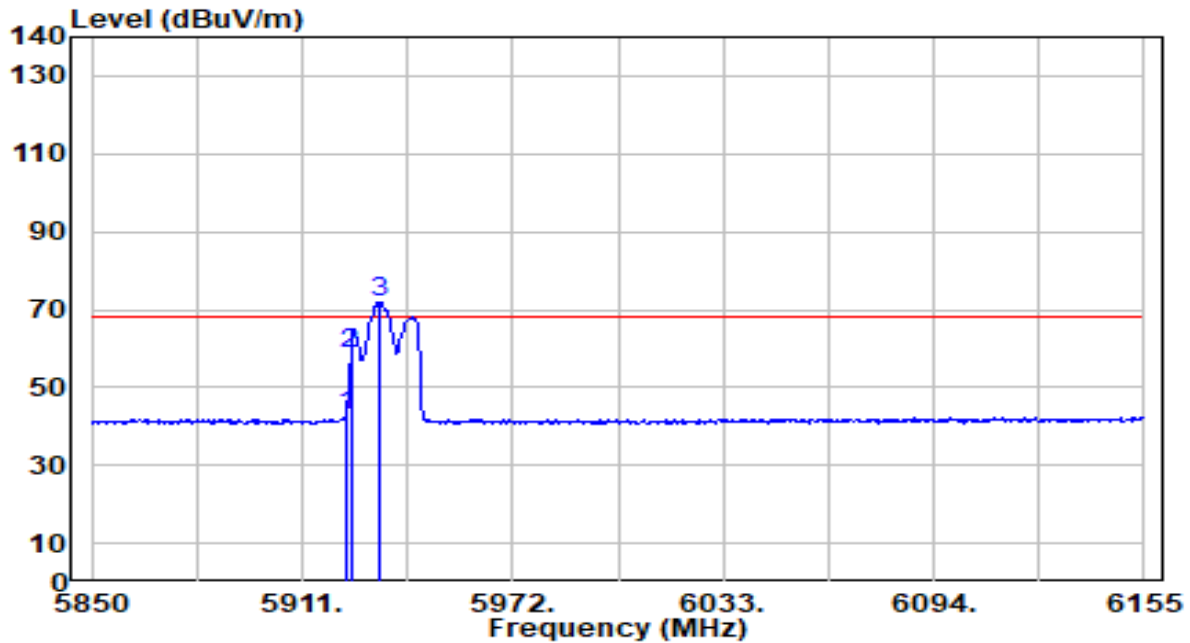


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	5923.810	40.77	2.25	43.01	-25.19	68.20	100	260	Average
2	* 5925.000	56.47	2.25	58.72	-9.48	68.20	100	260	Average
3	5933.265	69.60	2.24	71.84	N/A	N/A	100	260	Average

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band5_TX_CH 2 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

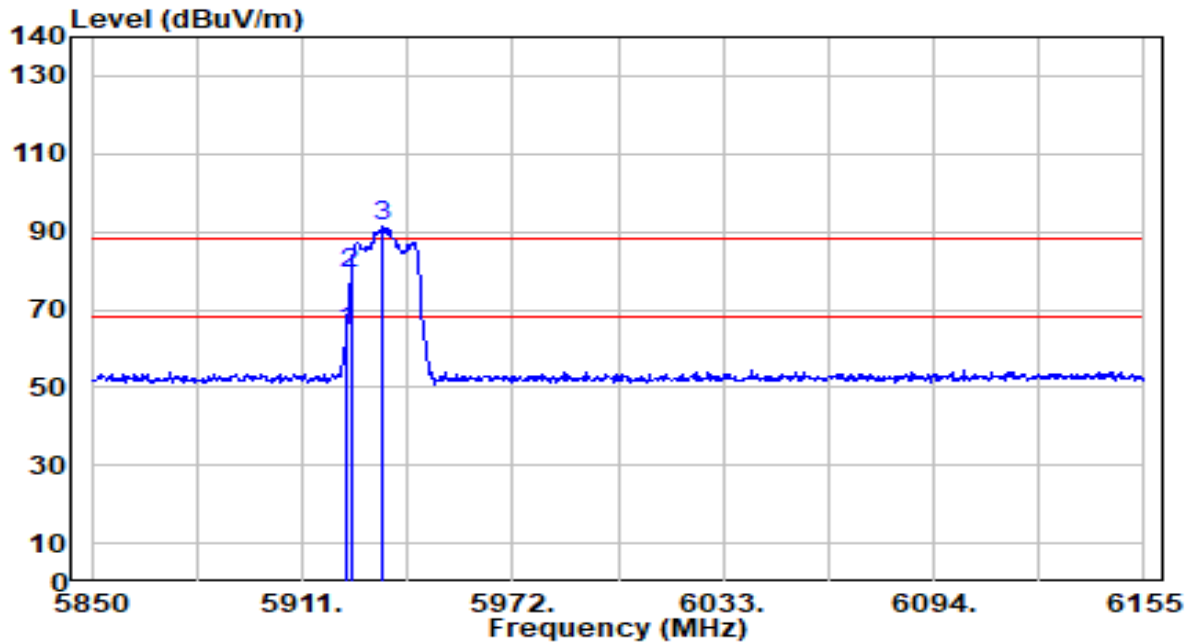


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	5923.810	61.95	2.25	64.20	-24.00	88.20	134	238	Peak
2	* 5925.000	77.14	2.25	79.38	-8.82	88.20	134	238	Peak
3	5933.875	88.89	2.24	91.13	N/A	N/A	134	238	Peak

Note:

- "*", means this data is the worst emission level.
- C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
- Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
- The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band5_TX_CH 2 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

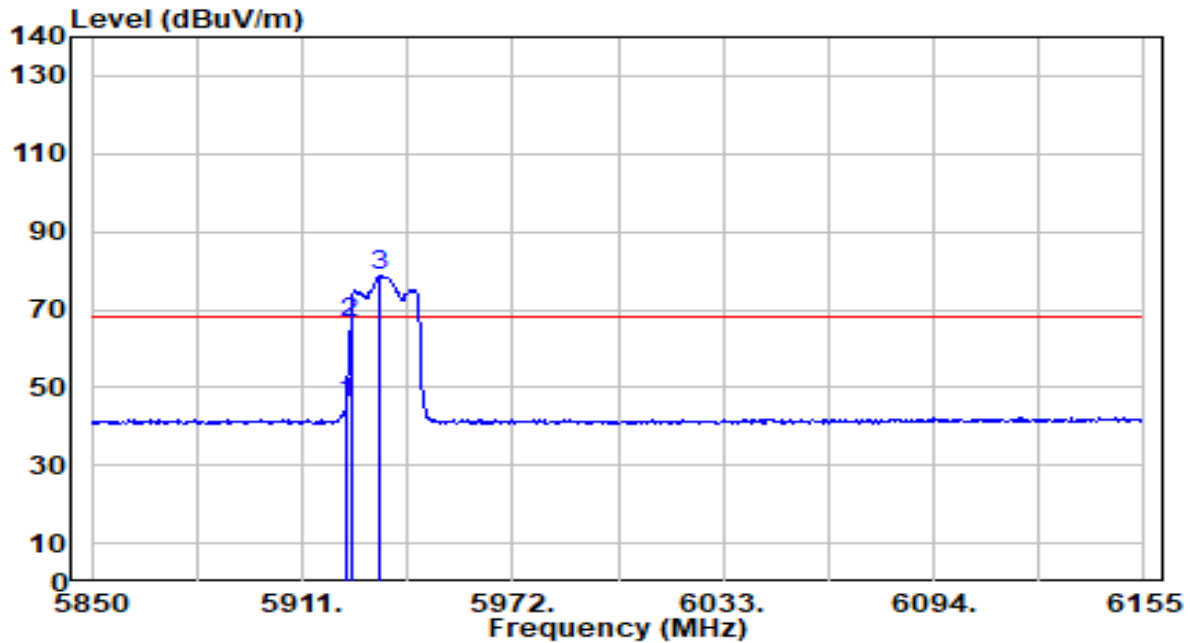


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	5923.810	43.66	2.25	45.91	-22.29	68.20	134	238	Average
2	* 5925.000	64.39	2.25	66.64	-1.56	68.20	134	238	Average
3	5933.570	76.70	2.24	78.95	N/A	N/A	134	238	Average

Note:

- "*", means this data is the worst emission level.
- C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
- Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
- The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band5_TX_CH 1 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

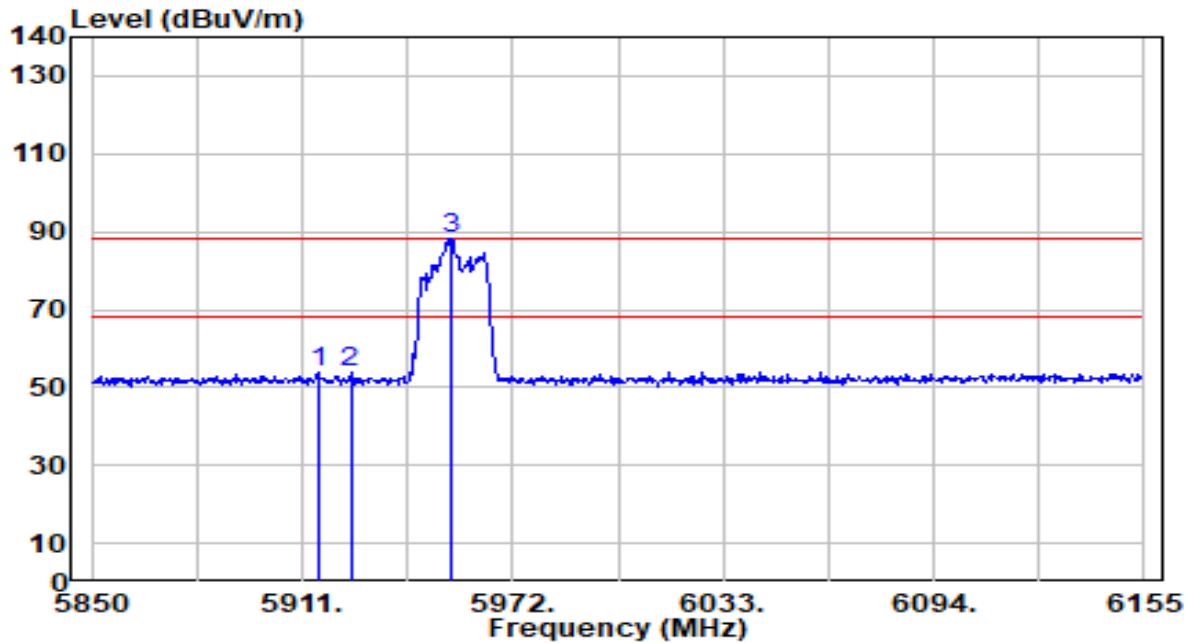


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	5915.880	51.49	2.25	53.73	-34.47	88.20	100	260	Peak
2	* 5925.000	51.59	2.25	53.83	-34.37	88.20	100	260	Peak
3	5954.310	86.15	2.24	88.38	N/A	N/A	100	260	Peak

Note:

- "*", means this data is the worst emission level.
- C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
- Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
- The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band5_TX_CH 1 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

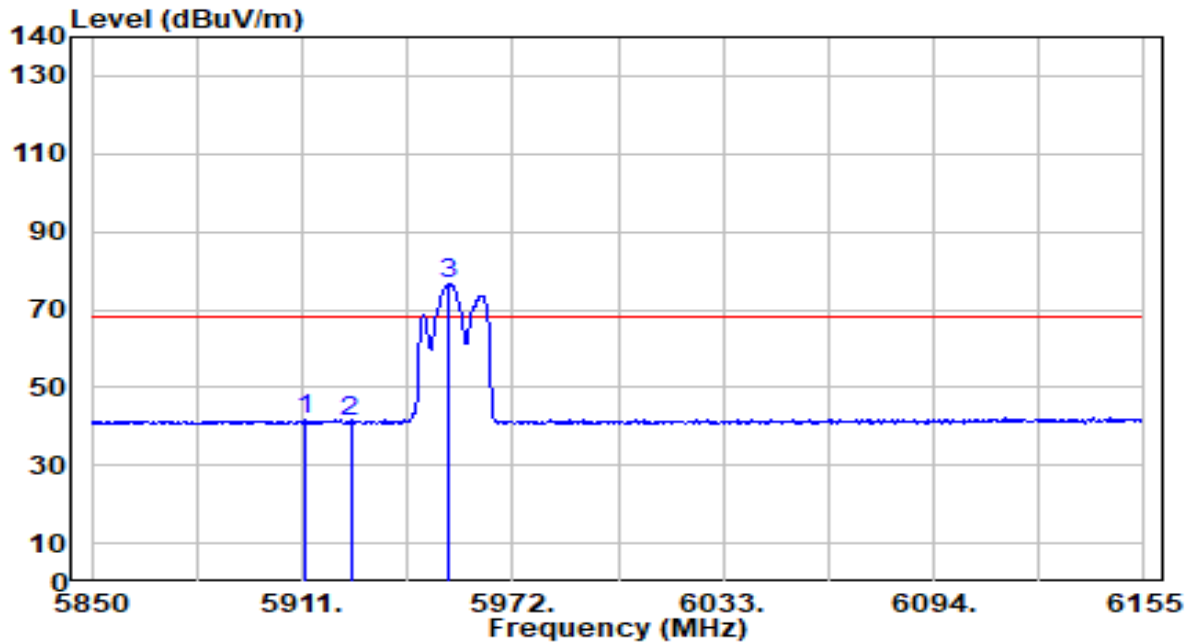


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	5911.915	39.32	2.25	41.57	-26.63	68.20	100	260	Average
2		5925.000	39.17	2.25	41.41	-26.79	68.20	100	260	Average
3		5953.700	74.45	2.24	76.69	N/A	N/A	100	260	Average

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band5_TX_CH 1 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

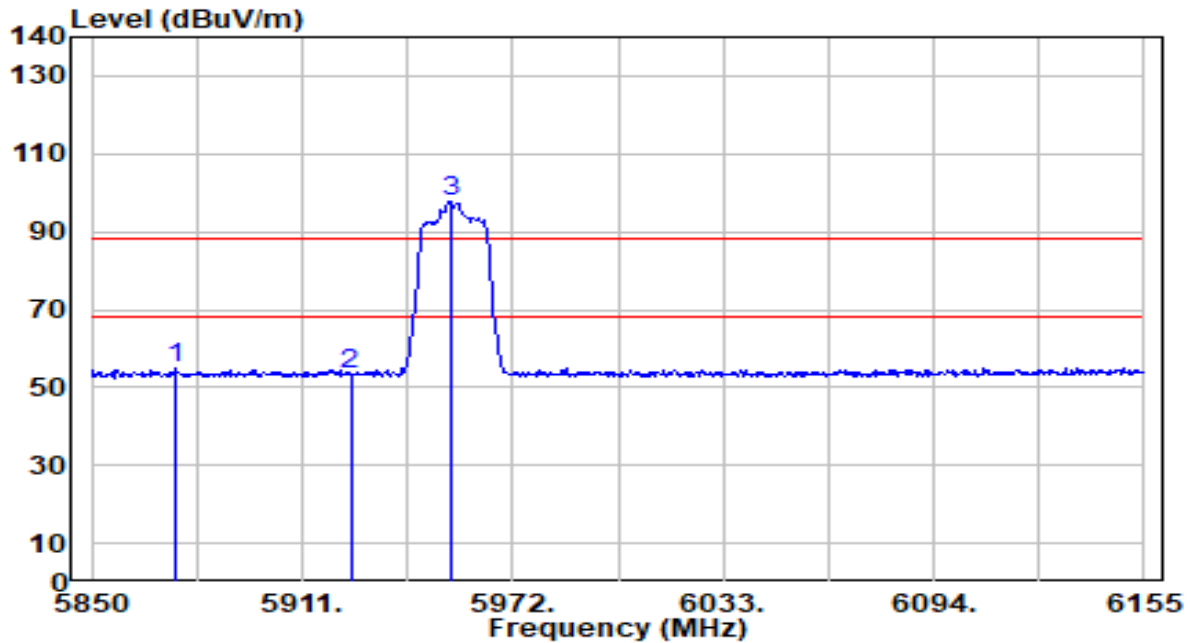


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	*	52.44	2.26	54.71	-33.49	88.20	134	238	Peak
2		51.29	2.25	53.54	-34.66	88.20	134	238	Peak
3		95.58	2.24	97.81	N/A	N/A	134	238	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band5_TX_CH 1 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

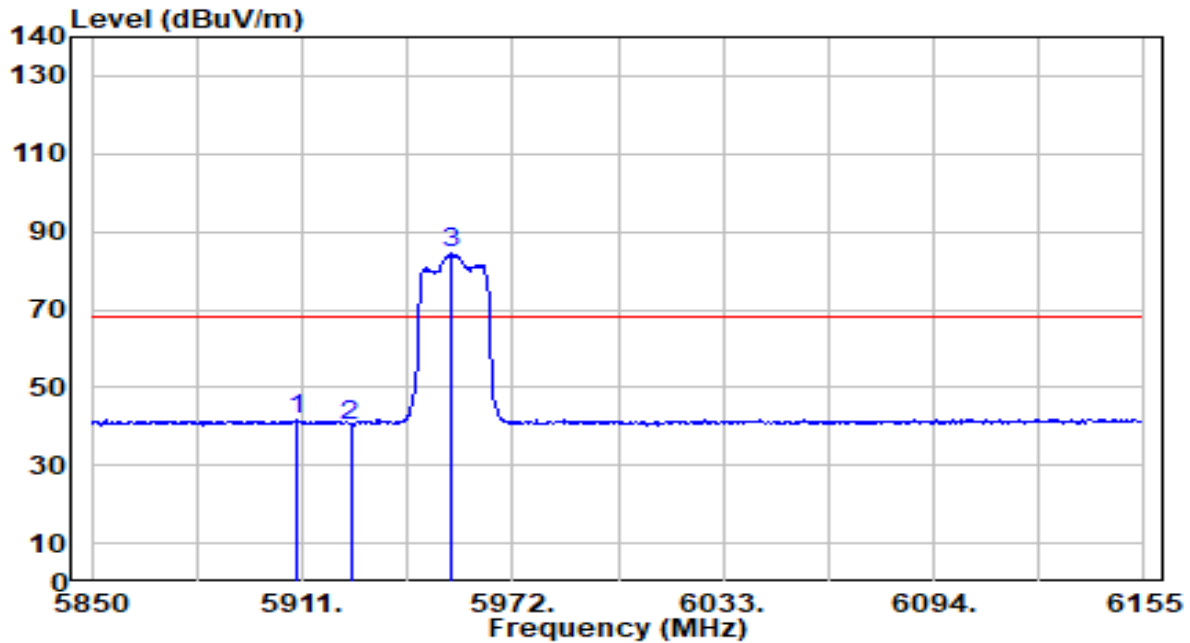


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)	
1	*	5909.780	39.38	2.25	41.63	-26.57	68.20	134	238	Average
2		5925.000	38.16	2.25	40.41	-27.79	68.20	134	238	Average
3		5954.310	82.25	2.24	84.49	N/A	N/A	134	238	Average

Note:

- "*", means this data is the worst emission level.
- C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
- Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
- The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band8_TX_CH 229 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

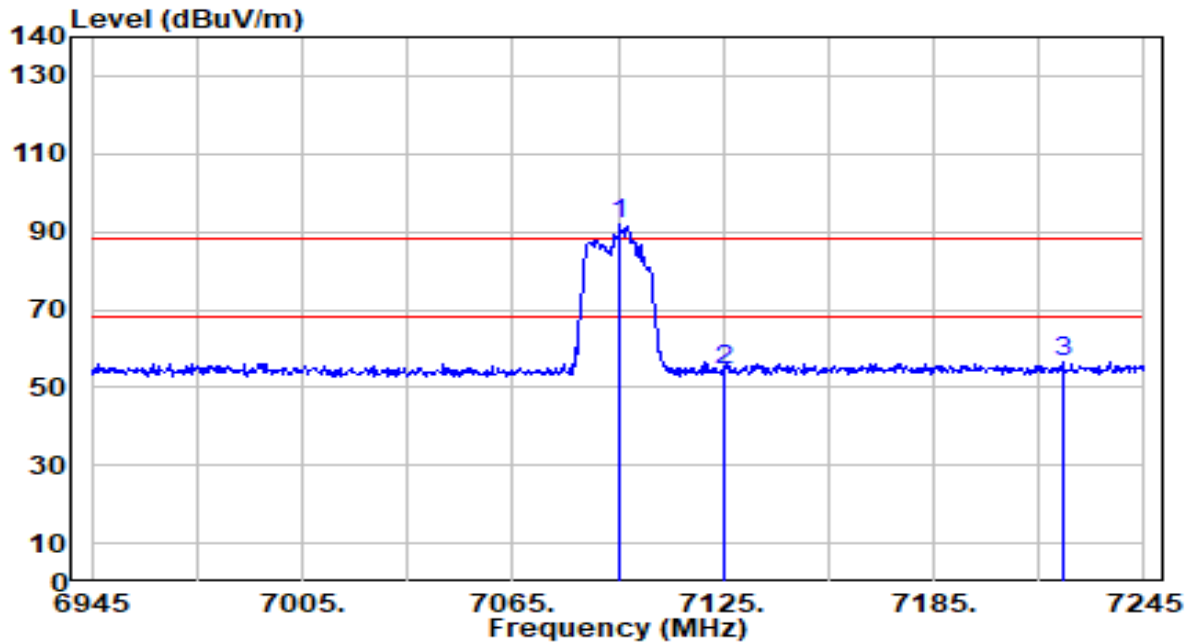


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	7095.600	86.32	5.46	91.78	N/A	N/A	221	299	Peak
2	7125.000	48.98	5.48	54.45	-33.75	88.20	221	299	Peak
3	* 7221.600	51.05	5.54	56.59	-31.61	88.20	221	299	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Horizontal	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band8_TX_CH 229 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

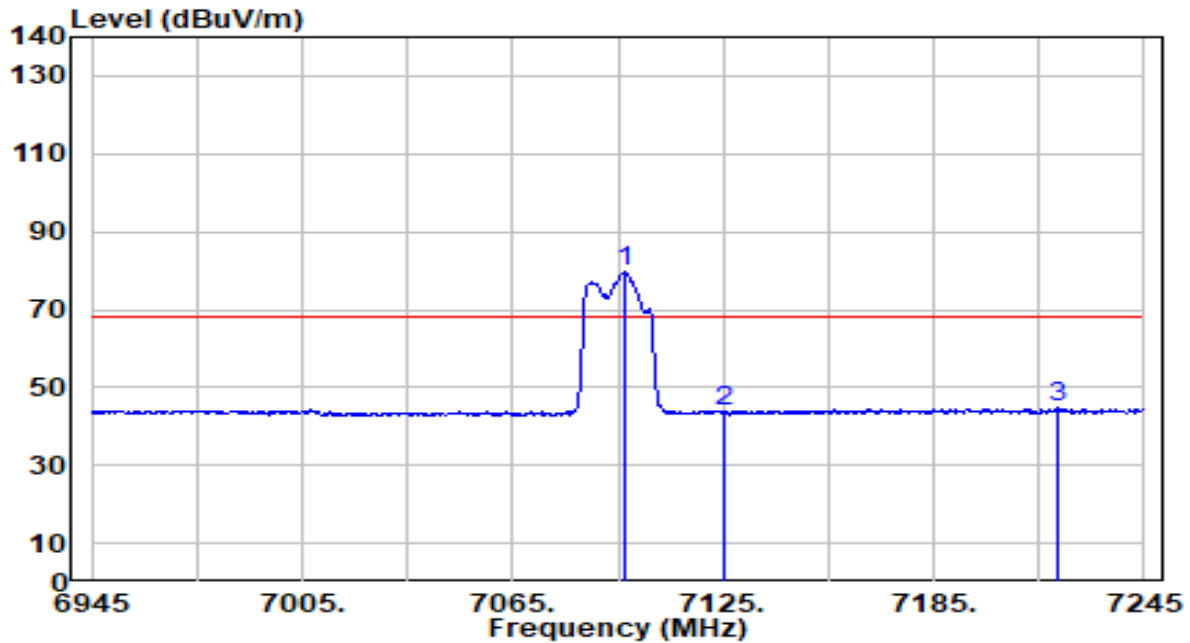


No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	7096.800	74.12	5.46	79.58	N/A	N/A	221	299	Average
2	7125.000	38.12	5.48	43.60	-24.60	68.20	221	299	Average
3	* 7220.100	39.15	5.53	44.69	-23.51	68.20	221	299	Average

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

EUT	Mobile Computer	Date of Test	2024-07-15
Factor	DRH18-E	Temp. / Humidity	20°C /65%
Polarity	Vertical	Site / Test Engineer	AC2 / Stanley
Test Mode	802.11ax-20MHz_Band8_TX_CH 229 ANT 0+1_Client Low Power Indoor	Test Voltage	By Notebook PC

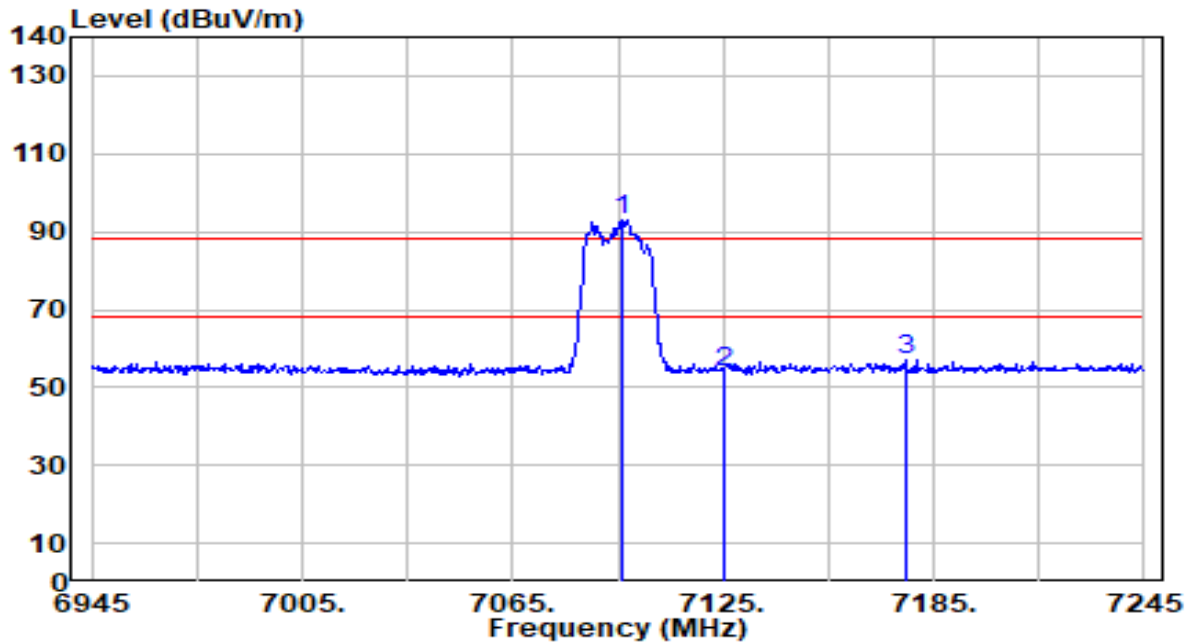

No	Frequency (MHz)	Reading (dBuV)	C.F (dB/m)	Measurement (dBuV/m)	Margin (dB)	Limit (dBuV/m)	Height (cm)	Angle (deg)	Remark (QP/PK/AV)
1	7096.200	87.67	5.46	93.13	N/A	N/A	114	2	Peak
2	7125.000	48.55	5.48	54.02	-34.18	88.20	114	2	Peak
3	* 7176.900	51.56	5.51	57.07	-31.13	88.20	114	2	Peak

Note:

1. " *", means this data is the worst emission level.
2. C.F (Correction Factor) = Antenna Factor (dB/m) + Cable Loss (dB) – Preamplifier(dB) + 10dB Attenuation.
3. Measurement (dBuV/m) = Reading(dBuV) + C.F (Correction Factor).
4. The emission levels of other frequencies are very lower than the limit and not show in test report.