



DAKLEY
RAZRWIRE™
USER'S GUIDE

 **MOTOROLA**



Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196
www.hellomoto.com

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. All other product or service names are the property of their respective owners.

© Motorola, Inc., 2005.

Caution: Changes or modifications made in the phone or Bluetooth unit, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual Number: 6809494A40-0

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

Oakley, Inc.
One Icon
Foothill Ranch, CA 92610
www.oakley.com

© 2005 Oakley, Inc.
Oakley, Ellipse logo, O Matter, Plutonite, Microclear, Raznwire, Unobtainium, and XYZ Optics are trademarks or registered trademarks of Oakley, Inc. in the United States and other countries. All other brand and product names listed are trademarks or registered trademarks of their respective holders and are hereby recognized as such. Sunglasses Made in USA & Bluetooth Unit Made in China. U.S. Patent Nos. owned by Oakley, Inc.: 5,648,832, 5,689,323, 5,969,789, 6,010,218, 6,168,271 B1, 5,054,903, 5,137,342, 5,054,902. Additional U.S. and international patents pending.

OAKLEY® RAZRWIRE™ is the first eyewear to combine patented Oakley optics with wireless Bluetooth® technology. It frees you from wires by offering hands-free mobile communications anywhere and everywhere you want to be. Fully integrated electronics let you easily handle incoming and outgoing calls to your Bluetooth enabled cell phone from a range of up to thirty-three feet. Answer a call instantly without digging for your cell phone. Carry on a phone conversation without being tethered by a headset wire. The ultra-lightweight design offers the comfort, protection and clarity of Oakley optics combined with third-generation Motorola Bluetooth technology.

RAZRWIRE features Oakley's patented XYZ Optics®, an innovation that maximizes clarity at all angles of vision. The semi-rimless design means there's no frame rim to block your downward view, and the durable Plutonite® lens material blocks all UV. For durability and all-day comfort, the frame is made of O Luminum, an alloy 40% lighter than pure titanium. The adjustable design lets you reposition the speaker to wherever it is comfortable. Custom engineered spring hinges provide a secure, adaptable fit, and soft Unobtainium® components increase grip with perspiration. You also get the optical precision and impact protection found in Oakley's premium performance eyewear.

Package Contents

- Sunglasses (Eyewear)
- Bluetooth Unit
- Wall Charger
- User's Guide (this booklet)
- MicroClear™ bag for cleaning and storage
- Accessories Card
- Oakley Registration Card
- Rx Ready Card

Contents

Charging the Unit	3
Assembling RAZRWIRE	3
Mounting the Unit on your Eyewear	3
Removing the Unit from your Eyewear	4
Pairing RAZRWIRE with your Phone	4
Using RAZRWIRE	5
Adjusting RAZRWIRE for a Comfortable Fit	5
Answering & Ending a Call	5
Turning the Unit On & Off	5
Advanced RAZRWIRE	6
Making Calls	6
Redialing the Last Dialed Call	6
Adjusting the Volume	6
Transferring Calls	6
Placing a Call on Mute	6
Toggling Phone Calls	6
Mounting the Unit on the Left Side of your Eyewear	7
RAZRWIRE Indicator Light and Audio Tone States	8
Safety and General Information	9
Support	10
Consumer Warranty	10

Charging the Unit

Important: Charge the Bluetooth unit for 2.5 hours before using it the first time.

To charge the unit:

1 Plug the charger plug into a electrical wall outlet.


2 Open the rubber cover on the top part of the unit and plug the silver side of the charger cable into the charging port.

Be sure to align the plug correctly. If the plug does not connect to the unit easily, try flipping it over and re-inserting.

The indicator light on the unit will be solid red while it is charging.


3 When the indicator light turns off, charging is complete.

Note: With an optional USB Cable sold separately through Oakley dealers, you can charge the unit by plugging it into any computer USB port. That way, you can leave the wall charger at home and use the USB Cable at the office, or anywhere you have access to a computer.

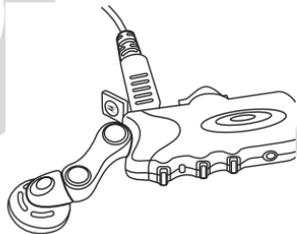

Assembling RAZRWIRE™ TM

RAZRWIRE includes your Oakley eyewear and a Bluetooth unit. Here's a quick anatomy lesson of the unit.

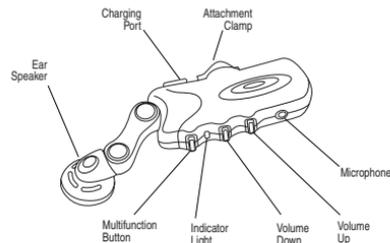

Mounting the Unit on your Eyewear

To mount the unit on the right side of your eyewear frames:

1 With the attachment clamp open, hold the unit in your right hand.


Note: If the clamp on your unit is closed, gently twist the clamp until it snaps open.

2 Hold the right arm of the frames in your left hand.

3 Drop the arm of the frame into the groove of the attachment clamp.

4 Snap the top of the attachment clamp closed.

Note: If you need to mount the unit on the left side of the eyewear frames, see Mounting the Unit on the Left Side of your Eyewear on page 7.

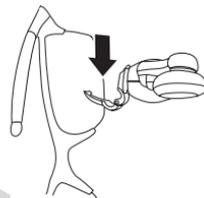

Step 3




Step 4

Removing the Unit from your Eyewear

To remove the unit from your frames:

- 1 Hold the body of the unit in your right hand.
- 2 Hold the arm of the eyewear frame that the unit is attached.
- 3 Gently twist the unit until the clamp snaps open and you can remove it from the frame.

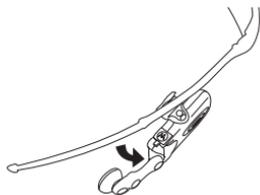

Pairing RAZRWIRE™ with your Phone

You must pair (or bond) your RAZRWIRE unit with your phone before they will work together. This procedure only needs to be performed once and then the next time you turn on your RAZRWIRE unit and phone they will automatically pair.

To pair your unit and phone:


- 1 On your Motorola phone*, select **[Menu] (Menu) > Settings > Connection > Bluetooth Link > Handsfree > Look for Devices.**

- 2 With the unit turned off, press and hold the **Multifunction Button** until you hear a high-pitched tone in the ear speaker.

Note: When the unit is successfully in pairing mode the indicator light will remain solidly lit.

- 3 The phone lists all Bluetooth devices it finds. Select **Oakley RAZRWIRE.**
- 4 Select **OK** or **Yes** to pair (bond) the headset.
- 5 Enter the passkey: **0000**
- 6 Select **OK.**
- 7 When your RAZRWIRE is successfully paired with your phone, the Indicator Light flashes ten times and automatically turns on for use.

Note: *These steps are for most Motorola phones. For other phones, see your phone user's guide.

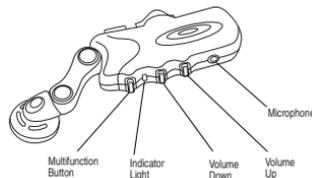


Using RAZRWIRE™

Adjusting RAZRWIRE for a Comfortable Fit

You may need to adjust the position of the unit so that the speaker fits comfortably in your ear.

To do so, simply slide the unit forward or back along the frame temple.

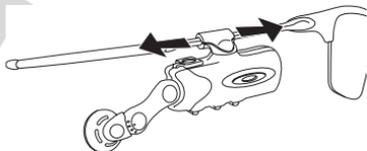

Answering & Ending a Call

To answer an incoming call:

Press the **Multifunction Button** until you hear the call is answered.

To end a call:

Press the **Multifunction Button**.

To reject a call:

When the phone rings, press and hold the **Multifunction Button** until you hear a medium-pitch tone in the ear speaker.

Turning the Unit On & Off

To turn the Unit On:

Press and hold the **Multifunction Button** until the Indicator Light flashed three times. If you are wearing RAZRWIRE, you will hear an inclining tone through the ear speaker.


Note: Once you pair RAZRWIRE unit with your phone (see Pairing RAZRWIRE with your Phone on page 4), it automatically pairs each time you turn it on.

To turn the Unit Off:

While not participating in an active call, press and hold the **Multifunction Button** until you hear low and medium pitch tones, then declining tones through the ear speaker. The Indicator Light flashes twice upon power down.

Note:

- When the unit is activated, it is in "standby" mode, ready for use. The internal rechargeable battery offers approximately 100 hours of standby time.
- When RAZRWIRE is turned off, it uses no power. However, the internal rechargeable battery will naturally wear down over time and eventually requires charging.

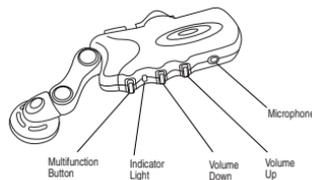

Making Calls

While wearing the eyewear and unit, make a call by:

- 1 On your phone, dial the phone number.
- 2 On your phone, press **Send**.
You will hear the ringing while waiting for the recipient to answer the call.

Voice Dialing

While wearing the eyewear and unit, make a voice-dial call by:

Note: In order for this feature to work, your phone must have voice dial capabilities. See your phone's user's guide to set up voice dial recorded names in your phone book. Once voice dial names are set you can perform Voice Dialing with RAZRWIRE.

- 1 Press the **Multifunction Button** and listen for a tone.
- 2 Then when you hear a second tone, speak the voice dial name clearly.
You will hear a low-pitch tone in the ear speaker when the call is sent.

Redialing the Last Dialed Call

To redial the last dialed call:

Press and hold the **Multifunction Button** until you hear a low and medium pitched tone in the ear speaker.


Adjusting the Volume

To turn the volume up:

Press the **Volume Up** (front) button repeatedly to increase the volume.

To turn the volume down:

Press the **Volume Down** (back) button repeatedly to decrease the volume.

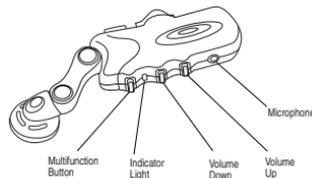

Transferring Calls

To transfer a call from the phone to RAZRWIRE:

When the phone rings indicating an incoming call, on the unit, press the **Multifunction Button**.

To transfer a call from RAZRWIRE to the phone:

While on the call, press and hold the **Volume Up** button until you here a medium-pitch tone in the ear speaker.

Placing a Call on Mute

While on a call, press and hold the **Volume Down** button until you hear a high tone in the ear speaker.

Toggling Phone Calls

To place a call on hold:

While on a call, press and hold the **Volume Up** button until you hear a medium-pitch tone in the ear speaker.

To release a call on hold:

With an active call on hold, press and hold the **Volume Up** button until you hear a high-pitched tone in the ear speaker.


Mounting the Unit on the Left Side of your Eyewear

Since the unit is set to be on your right ear in the package, you'll need to do a few extra steps to mount it on the frames for your left ear.


Note: If you have already mounted the unit onto the right arm of your eyewear frame and want to remove it, see Removing the Unit from your Eyewear on page 4.

To mount the unit on your left ear:


- 1 Twist the attachment clamp on the top side of the unit until it faces the opposite direction.
- 2 Fold the ear speaker so it is perpendicular to the unit.
Note: When folding and rotating the ear speaker, do not use excessive force, it could damage the unit.
- 3 Gently rotate the speaker down and around until it snaps into place on the other side.

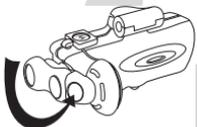

- 4 Fold open the ear speaker.

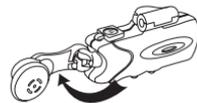

- 5 Open the attachment clamp and hold RAZRWIRE in your left hand.
- 6 Hold the left arm of the frames in your right hand.
- 7 Drop the left arm of the frames into the groove of the attachment clamp.
- 8 Snap the top of the attachment clamp closed.

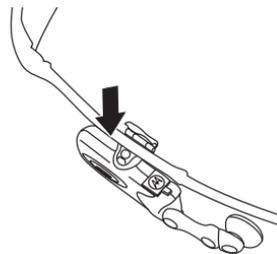

RAZRWIRE Indicator Light and Audio Tone States

The following table explains indicator light and audio tone states.

Function	Headset	Phone	Indicator Light	Audio Tone
Power On	Off		Flashes 3 times while powering on.	Four tone scale. Starts at a low-pitch and continues to high-pitch.
Power Off	On		Flashes 2 times while powering off.	Four tone scale. Starts at a high-pitch and continues to low-pitch.
Pairing	On	On	Solidly lit during pairing process. Flashes 10 times when pairing is successful.	Single high-pitched tone.
Receive Call	On	On - Ring	Flashes slowly while on call.	Ring Tone for incoming call.
Reject Call	On	In - Ring	None	Single medium-pitched tone.
Transfer Call from Phone to RAZRWIRE	On - In call	On - In call	None	Single low-pitched tone.
Transfer Call from RAZRWIRE to Phone	On	On - In call	None	Single medium-pitched tone.
Dial a Number	On	On - Dial	Flashes slowly while on call.	None.
Redial a Number	On	On	Flashes slowly while on call.	Single medium-pitched tone.
Voice Dial a Number	On	On - Idle	Flashes slowly while on call.	Single low-pitched tone.
Place Active Call On Hold (Toggle Calls)	On	On -In call	Flashes slowly while on call.	Single medium-pitched tone.
End a Call	On	On - In call	None	Single low-pitched tone.
Release a Call On Hold	On	On - In call	None	Single low-pitched tone.
Mute	On	On - In call	None	Single high-pitched tone signals Mute active. Single low-pitched tone repeated every 20 seconds.

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR DEVICE.

Safety Information: Wireless Devices

Electromagnetic Interference

RF Energy Warning

To avoid electromagnetic interference and/or compatibility conflicts, turn off your device in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external radio frequency (RF) energy emitted by your device.

Aircraft

While aboard aircraft, turn off your device when instructed to do so. Any use of the device must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Hearing Aids: Some devices may interfere with some hearing aids. In the event of such interference, you may want to consult with your hearing aid manufacturer to discuss alternatives.

Other Medical Devices: If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Electronic Systems

Do not expose RAZRWIRE to strong magnetic fields such as those that surround stereo speakers and TV picture tubes, in your car or home, without first checking with the manufacturer of those items.

Safety Information: General Use

USE AT YOUR OWN RISK

Avoid Distraction

Using headsets while operating a motor vehicle, motorcycle or bicycle is dangerous, and is illegal in some states. Check your local laws. Use caution while using your RAZRWIRE when engaging in ANY activity that requires your full attention. Avoid placing or receiving calls while driving an

automobile, motorcycle, equipment or any other motorized mode of transportation to reduce the risk of accident or injury.

Avoid Hearing Damage

Using the headset at high volume may result in permanent hearing loss. If you experience ringing in your ear, reduce the volume or discontinue using RAZRWIRE. With continued use at high volume, your ear may become accustomed to the sound level, which may result in permanent damage to your hearing. Keep RAZRWIRE volume at a safe level.

Eyewear Use

This eyewear is not designed to protect the wearer from all injury in the event of impact with hard objects or if the lens or lenses are not properly secured in the frame. Oakley does not recommend the use of tinted lenses for night driving, or direct viewing of the sun or strong artificial light sources. Sunglasses are not recommended for industrial protection.

Avoid Moisture

Using RAZRWIRE in or near water or other liquids, or in wet locations, may cause electric shock and serious injury. The transceiver unit is not waterproof, so follow these safeguards:

- Do not use RAZRWIRE while swimming or bathing.
- Do not wear RAZRWIRE in the rain.
- If any food or liquid is spilled on RAZRWIRE or its power adapter, unplug the charging cable from RAZRWIRE and unplug the power adapter from the electrical outlet before drying.

Location of Use

RAZRWIRE is NOT to be used in the vicinity of any explosive or hazardous substances, as it may become volatile and cause serious injury or death.

See "Electromagnetic Interference" above for restrictions on using RAZRWIRE in medical facilities and aboard aircraft.

Proper Care of your RAZRWIRE

Do Not Modify or Dismantle

Do not attempt to open RAZRWIRE. Doing so may expose you to electric shock and serious injury. There are no user-serviceable parts inside. Any attempt to alter or repair the unit, except by an Authorized Oakley Service Facility, will void the limited warranty. Users are not permitted to make changes or modify the device in any way. Changes and modifications not expressly approved by Oakley could void the user's authority to operate the device. See 47 CFR Sec. 15.21.

Battery

Do not attempt to remove the internal rechargeable battery. Disposal of devices that contain internal rechargeable batteries must be in accordance with local environmental regulations.

Temperature

- Do not store or use RAZRWIRE in temperatures lower than -20°C / -4°F or higher than 50°C / 122°F.
- Do not recharge RAZRWIRE in temperatures lower than 0°C / 32°F or higher than 40°C / 104°F.
- Conditions inside a parked car can exceed this temperature range. Do not store RAZRWIRE in a parked car.
- Do not store RAZRWIRE in direct sunlight.
- Storing RAZRWIRE fully charged in high temperature conditions may permanently reduce the life of the internal battery.
- Battery life may temporarily shorten in low-temperature conditions.

Shockwave

Do not expose RAZRWIRE to excessive force or impact. Be careful not to drop RAZRWIRE.

Charger

Do not force the charging cable connector into the unit port. If the connector won't go into the port, try flipping the connector 180 degrees. Do not attempt to charge RAZRWIRE with any charger other than the one designed by Oakley specifically to be used with this product.

Cleaning

To clean the lenses, use the Microclear™ bag that is included with RAZRWIRE, or use a soft cotton cloth. First, gently brush the cloth across all lens surfaces to remove any grit or particles that might scratch the lens. Next, gently rub the lenses between the folds of the cloth. When necessary, hand wash and air-dry the Microclear bag.

When cleaning RAZRWIRE, please note the following:

- The transceiver unit is not waterproof, and moisture may damage the electronic circuitry. Do not rinse or immerse any part of the unit. Keep the unit dry at all times.
- Before cleaning, make sure RAZRWIRE is unplugged from the wall charger.
- Do not clean the lenses with soaps, detergents, ammonia, alkaline cleaners, abrasive cleaning compounds or solvents. These substances may damage the lens coatings or leak into the unit and damage the electronic circuitry.
- Should a lens become scratched, have it replaced immediately to ensure your vision is not compromised.

Support

If your RAZRWIRE Bluetooth Accessory Module does not function, please make sure that the battery is charged, you have followed the instructions to pair your Bluetooth phone to the RAZRWIRE. In addition, go to www.oakley.com/RAZRWIRE for the latest support information. If RAZRWIRE Bluetooth Accessory Module still does not function, contact Motorola Product Support at www.hellomoto.com or 1.877.MOTOBLU.

Consumer Warranty

Oakley Eyewear Warranty Policy

You're now wearing the best eye protection on earth.

Only Oakley utilizes pure Plutonite® lens material, a proprietary synthetic that exceeds the optical requirements of ANSI Z87.1 standards while inherently blocking 100% of all UVA, UVB, UVC and harmful blue light. Oakley performance eyewear also takes advantage of patented XYZ Optics®, a breakthrough that maintains precise clarity at all angles of vision and extends the range of optical correction to the periphery of dual-spherical eyewear lenses and single-lens sports shields.

All Oakley sunglasses satisfy ANSI Z80.3 & EN 1836 standards for optical and mechanical performance and are in accordance with the EC Directive 89/686/EEC for the I.P.D. of category I corresponding to the European Community.

Light transmission ranges from 10% to 39% of available light. All transmission profiles are based on data obtained according to ANSI Z80.3 and EN 1836 test protocols.

How to keep the best at their best

All Oakley Lenses: To help maintain the High Definition Optics® (HDO®) of Oakley lenses, your new eyewear comes with a specially-woven electrostatic Microclear™ bag for cleaning and storage. Using it will preserve the superior optical quality of Oakley's pure Plutonite lenses. Hand wash and air-dry the Microclear bag regularly.

Iridium® Lenses: Oakley Iridium lens coating is engineered to reduce glare and improve contrast. An array of available tints allows the wearer to balance light transmission in any light condition. The 12-micron jacket of Iridium must be treated with special care to avoid scratching. Never use cleaning solutions. Use only mild soap and water, and dry by gently blotting with the Microclear bag provided.

Oakley Warranty Policy

All Oakley eyewear is warranted against breakage due to defects in material or workmanship for one year from the date of purchase (two years in the EEC). This warranty is valid only with proof of purchase from an Authorized Oakley Dealer. Oakley does not warrant any lens against scratches. Alteration, misuse or abuse of any Oakley product will void its warranty. Legal rights under applicable national law governing the sale of consumer goods are not affected by this warranty. (EE DIRECTIVE 1999/44/EC).

How to make a warranty claim

Within the United States, telephone our Global Headquarters at 1 (800) 403-7449 with your purchase information. Customers outside the United States should contact their local Authorized Oakley Dealer or visit our website at <http://www.oakley.com> for the phone number of the nearest Oakley Distributor.

Customers outside the United States should contact their local Authorized Oakley Dealer or visit our website at <http://www.oakley.com> for the number to your nearest Oakley Distributor.

Lens tint transmission profiles			
Light grey 39%		Bronze 22%	
Protection Index: 2		Protection Index: 2	
G30 30%		Grey 18%	
Protection Index: 2		Protection Index: 2	
VR28 28%		Gold Iridium 12%	
Protection Index: 2		Protection Index: 3	
Slate Iridium 23%		Black Iridium 10%	
Protection Index: 2		Protection Index: 3	

The sunglass lens type is printed on the package. The corresponding protection index can be found in the Lens Tint Transmission Profiles chart above.

Protection Index (in compliance with the standard EN 1836)

Index 0: Aesthetic, very low protection

Index 1: For weak sun luminosity

Index 2: For average sun luminosity

Index 3: For strong sun luminosity

Motorola Bluetooth Accessory Module Limited Warranty

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola warrants the Bluetooth module accessory according to the "MOTOROLA LIMITED WARRANTY" and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty. Oakley warrants the eyewear according to the Eyewear Warranty Policy.

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Consumer and Professional Two-Way Radio Accessories.	Ninety (90) days from the date of purchase by the first consumer purchaser of the product.

Products Covered	Length of Coverage
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided "as is" and without warranty.

Who Is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	Phones: 1-800-331-6456 Pagers: 1-800-548-9954 Two-Way Radios and Messaging Devices: 1-800-353-2729
Canada	All Products: 1-800-461-4575
TTY	1-888-390-6456
For Accessories and Software , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

Wireless Phone Safety Tips

Drive Safe, Call Smart SM

Check the laws and regulations on the use of wireless phones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. Contact www.motorola.com/callsmart for more information.

Your wireless phone lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your wireless phone while driving, remember the following tips:

- **Get to know your Motorola wireless phone and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original™ handsfree accessories available today.
- **Position your wireless phone within easy reach.** Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- **Use your wireless phone to call for help.** Dial 9-1-1 or other local emergency number in the case of fire, traffic accident, or medical emergencies.¹
- **Use your wireless phone to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.¹
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.¹

¹ Wherever wireless phone service is available.

Industry Canada Notice to Users

Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device Ref IC RSS 210 Sec. 5.11. The term "IC:" before the certification/registration number only signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment. See Ref IC Self-Marking 6(f) and RSP-100 Sec. 4.


FCC Notice to Users

Users are not permitted to make changes or modify the device in any way. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

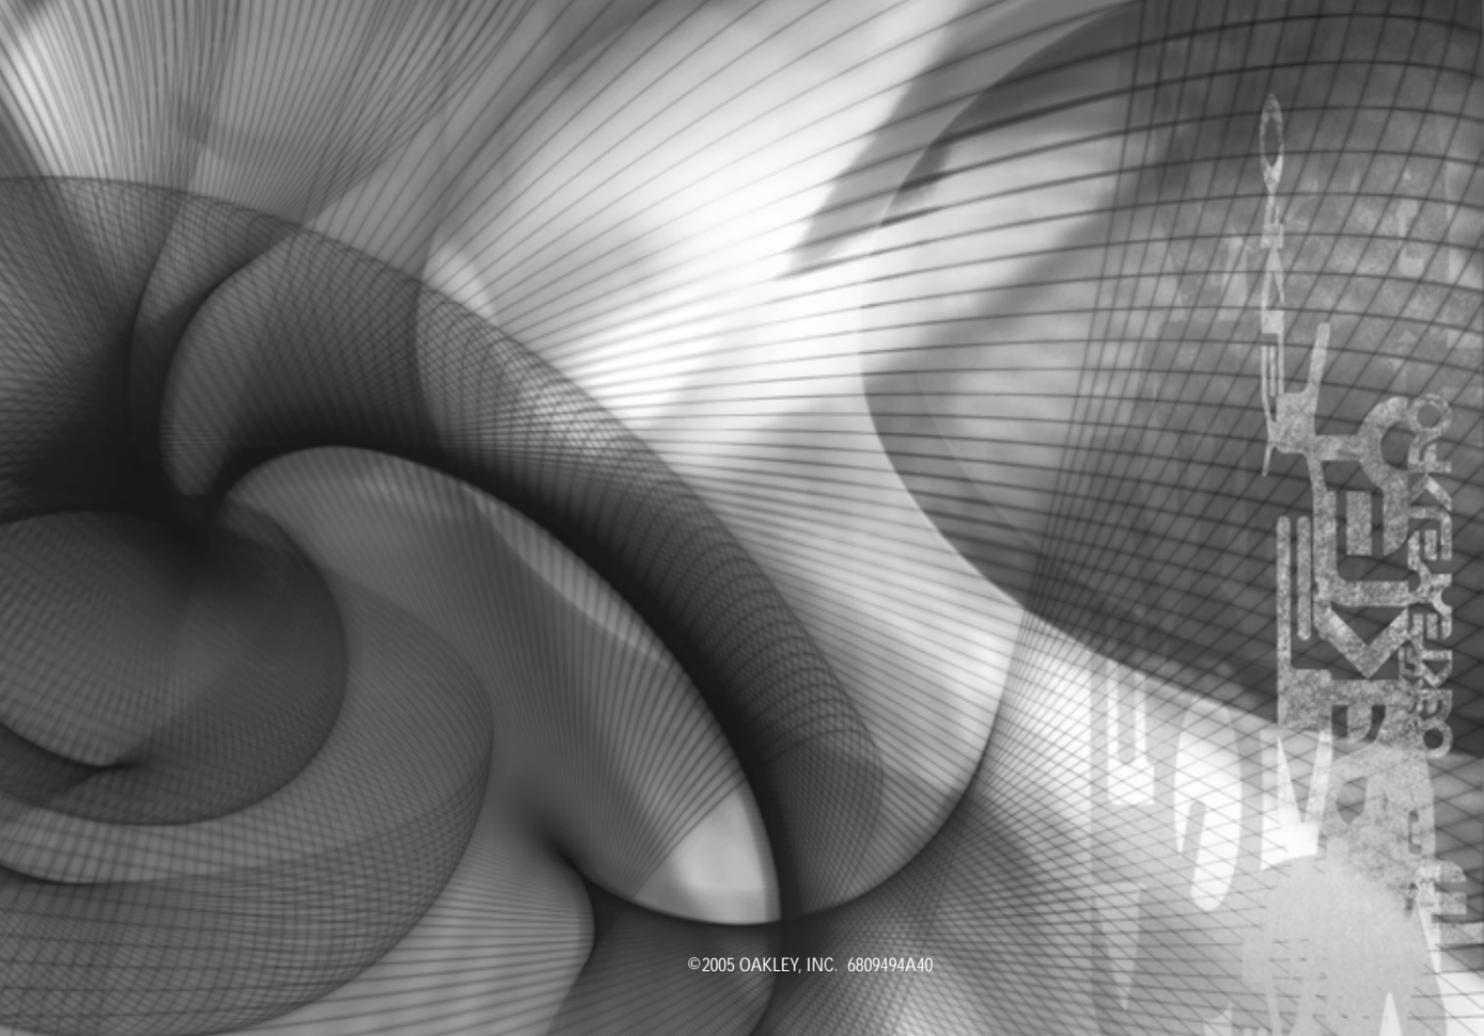

©2005 OAKLEY, INC. 6809494A40