

TuneView for iPod

USER MANUAL

for
p/n TVI-200C



Introduction..... 2	Support Information..... 12
• Package Contents (TVI-200C)	• Support Options (US Based)
• Requirements	• International Support Options
Setting Up Your TuneView for iPod..... 3	Specs - TuneView for iPod..... 13
• Connecting Everything Together	• Package Contents (TVI-200C)
Using The TuneView Remote..... 7	• Buttons On Remote
• Using The TuneView Remote	• Other Details
• Setup Menu	Warranty Information [1 Year]..... 14
• Language Settings	• Definitions
• Repeat Settings	• Limited Warranty on Hardware:
• Scroll Thumb Settings	• How To Obtain Warranty Service/Repair
• Firmware	Notices..... 16
• The Wizard Button	• United States FCC
Troubleshooting..... 10	• CE MARK DECLARATION OF CONFORMITY
• Sync Your Remote To Your Dock	• Canada Digital Apparatus EMI Standard
• Reset To Factory Settings	• Australia/New Zealand
• Menu Navigation Is Sluggish / Range Issues	• Copyright
• No Audio	• Trademarks
• Error Message - iPod Busy	
• Error Message - iPod Not Connected	
• Message - Starting Player	

Introduction

TuneView for iPod provides a new wireless way to manage your music throughout your house or office. TuneView allows you to:

- * Connect the iPod to a stereo or powered speakers using the line out jack
- * Connect the iPod to a TV using the S-Video jack
- * Charge the iPod from an AC outlet using the USB Power Adapter
- * Browse and control the iPod from around the house with LCD remote.

The TuneView dock may also be used to sync an iPod with a PC or Mac.

Both the TuneView dock and TuneView remote are USB devices that can be updated via a firmware download (just like an iPod). Over time we will release firmware updates that add new capabilities to TuneView.

Package Contents (TVI-200C)

The Keyspan TuneView for iPod package (TVI-200C Package) contains the following items:

- | | |
|----------------------------|--|
| • TuneView Dock | • Dock Adapters: |
| • TuneView Remote | iPod mini |
| • USB Power Adapter | iPod (20GB, U2) |
| • USB Cable | iPod with color display (20GB, 30GB, U2) |
| • Audio Cable | • Batteries: |
| (3.5mm stereo to dual RCA) | Two AA Batteries |

Requirements

iPod mini

with firmware v1.4.1 or greater

4G Pod (BW Display)

4th generation

with firmware v3.1.1 or greater

iPod Photo (aka iPod with Color Display)

4th generation

with firmware v1.2.1 or greater

nano

1st generation

with firmware v1.2.0 or greater

5G Pod

5th generation (video)

with firmware v1.2.0 or greater

2G nano

2nd generation (aluminum)

with firmware v1.0.1 or greater

Setting Up Your TuneView for iPod

Connecting Everything Together

Step 1 - Connect The Audio and Video Cables To Your Dock

Audio:

Connect the audio cable's 3.5mm stereo jack to the **LINE OUT** port on the back of the TuneView Dock. Next, connect the stereo cable's dual RCA connectors to your stereo/speakers.



Video:

S-Video jack allows connection to a TV for viewing slideshows and video (if your iPod supports these features). Connect one end of an S-Video cable (not included in the TVI-200C Package) to the **S-VIDEO OUT** port on the TuneView Dock and then connect the other end into your TV.

Step 2 - Connect The USB Cable/Power Supply To Your Dock



Power Via Included USB Power Adapter:

Connect one end of the USB cable to the **SYNC/POWER** port on the TuneView Dock. Connect the other end of the USB cable to the USB port on the USB Power Adapter.



Power Via Your Computer's USB Port:

You can also use your computer's USB port to power your dock as well as to sync your iPod to your computer. To do this, connect the one end of the USB cable to the **SYNC/POWER** port on your dock. Connect the other end of the USB cable to the USB port on your computer.

Troubleshooting Tip:


When you turn on your TuneView Dock, its status light will turn on and then turn off indicating that the dock is working and ready to use.

Step 3 - Insert Included Batteries Into The TuneView Remote



Turn over your TuneView Remote and remove the battery cover. Then insert the the two AA batteries and replace the battery cover. The TuneView LCD screen will now turn on. Your remote establish communication with the dock.

For now, the LCD screen should display the message 'iPod Not Connected'.

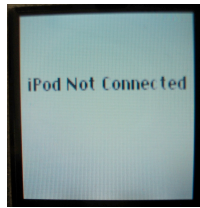

If you see this message, Proceed to the next step.

If You Have Multiple TuneView Remotes/Docks:

The TuneView dock will automatically **sync** (aka pair) with to the first TuneView remote it detects. If you have multiple sets of TuneView docks and remotes, please turn them on one at a time so that they can properly communicate with during setup. After setup, they will can all be turned on at the same time and functioning at the same time.

Step 4 - Insert Universal Dock Adapter and iPod Into The TuneView Dock