

iPhone[™] and *iPod*[™] touch functionality only.

Table of Contents

lefore Beginning4	1
rodigy™ Wi-Fi Bridge Receiver Installation 5	5
rodigy™ Bridge Application Setup	7
rodigy™ Position Screen1′	1
rodigy™ Massage Screen12	2
rodigy™ Presets Screen13	3
rodigy™ Sleep Timer Screen14	1
rodigy™ More Screen15	5
rodigy™ Gentle Wake Alarm Screen16	3
rodigy™ Diagnostics Screen17	7

FCC DISCLAIMER

Changes or modifications not expressively approved by the party responsible for compliance could void the user's authority to operate the equipment.

Before Beginning

STEP 1

Before beginning Prodigy^{\dagger} Wi-Fi Bridge setup, be sure you have uploaded the Prodigy Bridge App. to your iPhone^{\dagger} or iPod^{\dagger} touch (**FIGURE 1**). Go to . . .

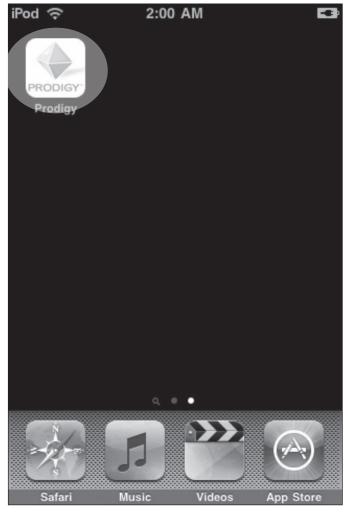


FIGURE 1: Home screen with Prodigy™ Bridge App.

Prodigy™ Wi-Fi Bridge Receiver Installation

STEP 2

Locate the Prodigy™ Wi-Fi Bridge receiver and electrical power cord (**FIGURE 2**).

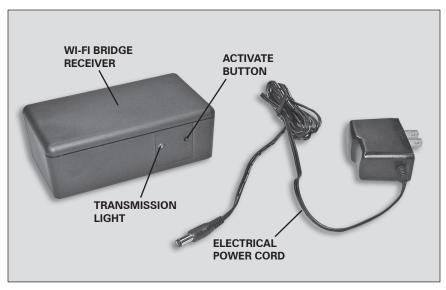


FIGURE 2: Prodigy[™] Wi-Fi Bridge receiver and electrical power cord.

Prodigy™ Wi-Fi Bridge Receiver Installation

STEP 3

Insert the power cord into the Prodigy[™] Wi-Fi Bridge receiver, then plug into electrical power source (electrical surge protection device recommended, not included) (**FIGURE 3**).

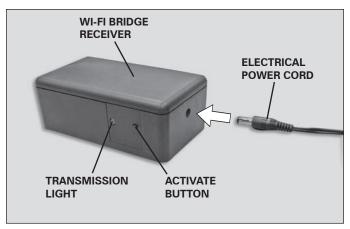


FIGURE 3: Prodigy™ Wi-Fi Bridge receiver power cord installation and activation button location.

STFP 4

Press the activate button on the Prodigy™ Wi-Fi Bridge receiver for (1) second, then press the learn button on the Prodigy™ adjustable base power down box for (1) second (**FIGURES 3 and 4**). The transmission light on both receiver boxes will flash on-and-off in succession indicating communication. *NOTE: The Prodigy™ Wi-Fi Bridge receiver must be in the same general location as the power down box.*

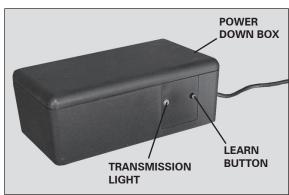


FIGURE 4: Power down box learn button location.

6 Prodigy™ Wi-Fi Bridge Setup / Operation Guide 993011XX

STEP 5

Access the **Settings** screen from the **Home** screen (**FIGURE 5**). Select **Wi-Fi ProdigyXXXXXXXX** (number is particular to your device).



FIGURE 5: Settings screen.

STEP 6

The **Wi-Fi Networks** screen appears. Make sure Wi-Fi function is set to **ON**. Select √**ProdigyXXXXXXX** (**FIGURE 6**).

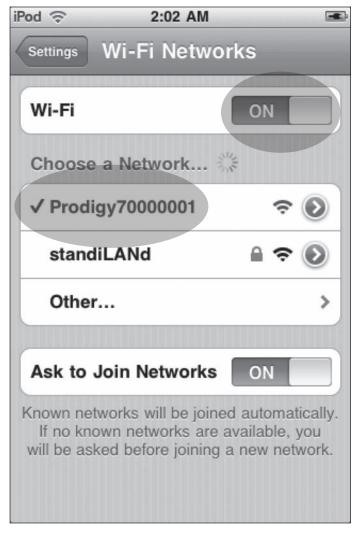


FIGURE 6: Wi-Fi Networks screen.

STEP 7
Select the **Prodigy™ Bridge App.** from the **Home** screen (**FIGURE 1**).

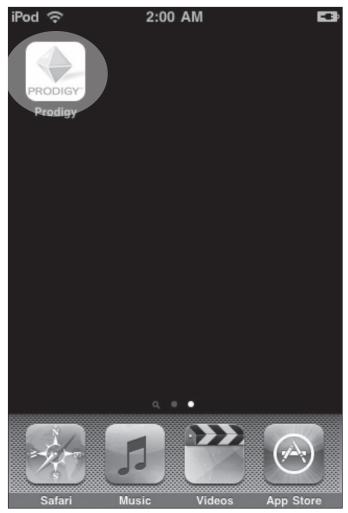


FIGURE 1: Home screen with Prodigy™ Bridge App.

STEP 8

A screen will appear indicating device is updating (**FIGURE 7**). Let device complete updating (this may take a few moments).



FIGURE 7: Updating screen.

Prodigy™ Position Screen

STEP 9

The **Position** screen will appear indicating Prodigy[™] Wi-Fi Bridge setup was successful (**FIGURE 8**). Touch desired position button to activate adjustable base with your iPhone[™] or iPod[™] touch.

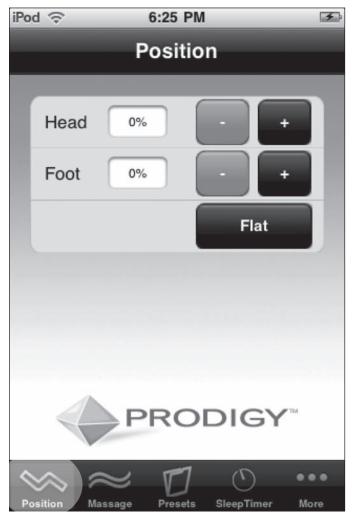


FIGURE 8: Position screen. (Active screen is highlighted.)

Prodigy[™] Massage Screen

STEP 10

Touch the **Massage** icon to access massage function. The **Massage** screen will appear. Adjust the massage by touching the appropriate button (**FIGURE 9**).



FIGURE 9: Massage screen.

Prodigy™ Presets Screen

STEP 11

Touch the **Presets** icon to access preset function. The **Presets** screen will appear. Touch a **Presets** button to return the bed to a factory preset position (**FIGURE 10**).

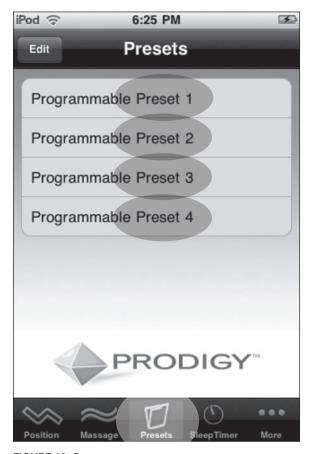


FIGURE 10: Presets screen.

To reprogram a preset position:

- 1. Adjust the bed to the desired position.
- 2. On the **Presets** screen, touch the *edit* button.
- 3. Select the preset number to save as the new position.
- 4. The new position is now programmed.

Prodigy™ Sleep Timer Screen

STEP 12

Touch the **Sleep Timer** icon to access sleep timer function. The **Sleep Timer** screen will appear. Set the sleep timer by touching the appropriate button (**FIGURE 11**).



FIGURE 11: Sleep Timer screen.

Prodigy™ More Screen

STEP 13

Touch the **More** icon to access extra functions. The **More** screen will appear. Touch the appropriate button to access the **Gentle Wake Alarm** and **Diagnostics** screens (**FIGURE 12**).

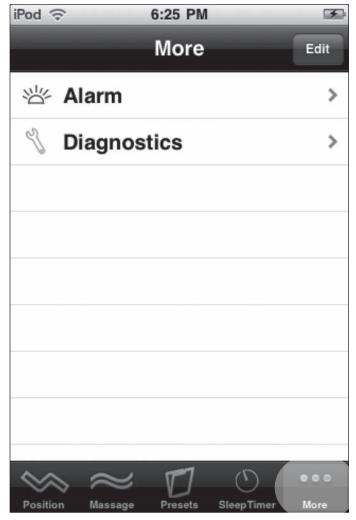


FIGURE 12: More screen.

Prodigy™ Gentle Wake Alarm Screen

STEP 14

After selecting the Alarm button from the More screen, the Gentle Wake Alarm screen will appear. Make sure Gentle Wake Alarm is set to ON. Scroll to find the appropriate time and then touch the Set button (FIGURE 13).



FIGURE 13: Gentle Wake Alarm screen.

Prodigy™ Diagnostics Screen

STEP 15

After selecting the **Diagnostics** button from the **More** screen, the **Diagnostics** screen will appear. A number will appear in the Fault Code field if there is a fault (**FIGURE 14**).



FIGURE 14: Diagnostics screen.

FCC DISCLAIMER

Changes or modifications not expressively approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: A 20 cm separation distance must be maintained between this transmitter and any nearby person during operation

For customer service, call toll free 800.888.3078
For customer service online, email:
accustomerservice@leggett.com

