

---

**OWNER'S MANUAL**  
**Draft**

## TABLE OF CONTENTS

<b>1</b>	SAFETY GUIDELINES.....	3	<b>1</b>
<b>2</b>	IDENTIFYING YOUR RADIO.....	7	<b>2</b>
<b>3</b>	ALL ABOUT UCONNECT ACCESS.....	11	<b>3</b>
<b>4</b>	UCONNECT 7A/7AN.....	97	<b>4</b>
<b>5</b>	UCONNECT SETTINGS.....	253	<b>5</b>
<b>6</b>	VOICE RECOGNITION QUICK TIPS.....	257	<b>6</b>



---

# SAFETY GUIDELINES

1

## CONTENTS

---

m SAFETY GUIDELINES.....	4
--------------------------	---

---

**WARNING!**

**ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.**

Ensure that all persons read this manual carefully before using the system. It contains instructions on how to use the system in a safe and effective manner.

Please read and follow these safety precautions. Failure to do so may result in injury or property damage.

- Glance at the screen only when safe to do so. If prolonged viewing of the screen is necessary, park in a safe location and set the parking brake.
- Stop use immediately if a problem occurs. Failure to do so may cause injury or damage to the product. Return it to your authorized dealer for repair.
- Make certain that the volume level of the system is set to a level that still allows you to hear outside traffic and emergency vehicles.

**Safe Usage of the Uconnect Access System**

- Read all instructions in this manual carefully before using your system to ensure proper usage!
- Your system is a sophisticated electronic device. Do not let young children use your system.

---

- Permanent hearing loss may occur if you play your music or the system at loud volumes. Exercise caution when setting the volume on your system.

- Keep drinks, rain, and other sources of moisture away from your system. Besides damage to your system, moisture can cause electric shocks as with any electronic device.

**NOTE:** Many features of this system are speed dependent. For your own safety, it is not possible to use some of the touchscreen features while the vehicle is in motion.

#### **Touchscreen**

- **Do NOT attach any object to the touchscreen, doing so can result in damage to the touchscreen.**
- Do not press the screen with any hard or sharp objects (pen, USB stick, jewelry, etc.) which could scratch the touchscreen surface!

- Do not spray any liquid or caustic chemicals directly on the screen! Use a clean and dry micro fiber lens cleaning cloth in order to clean the touchscreen.

- If necessary, use a lint-free cloth dampened with a cleaning solution, such as isopropyl alcohol, or an isopropyl alcohol and water solution ratio of 50:50. Be sure to follow the solvent manufacturer's precautions and directions.

#### **Disc Player – If Equipped**

- Do not insert any damaged, warped, scratched or dirty discs into the disc player.
- Discs that have been modified with an adhesive label should not be used in the disc player.
- Do not insert more than one disc at a time into the disc slot.



---

## IDENTIFYING YOUR RADIO

### CONTENTS

---

m IDENTIFYING YOUR RADIO .....	8
m CYBERSECURITY .....	9



#### Uconnect 7A/7AN



#### Key Features

The 7A and 7AN share some features between them, but the 7AN has features that set it apart. The following features are shared between radios:

- 7" Touchscreen
- Hands-free/Bluetooth
- USB port, AUX jack and SD Card slot – If Equipped
- Touchscreen Climate Controls
- SiriusXM Satellite Radio with 1 year Trial Included – If Equipped
- Uconnect Access – U.S. Market Only – If Equipped

The 7AN sets itself apart by offering these unique features:

- HD Radio – U.S. Market Only
- Navigation Standard
- One-shot destination entry
- 3D content (Select this option and zoom to an appropriate level. Not all tall buildings are in 3D)

- 
- Enhanced Digital Terrain Model (DTM)
  - SiriusXM Traffic with 5 year Trial Included – U.S. Market Only – If Equipped
  - SiriusXM Travel Link with 5 year Trial Included – U.S. Market Only – If Equipped

**NOTE:** 3D Landmarks are visible at 250 ft (76 m) and below, 3D City Models are visible at 50 ft (15 m) and below and Digital Terrain is visible at 100 mi and below.

Your vehicle may be a connected vehicle and may be equipped with both wired and wireless networks. These networks allow your vehicle to send and receive information. This information allows systems and features in your vehicle to function properly.

Your vehicle may be equipped with certain security features to reduce the risk of unauthorized and unlawful access to vehicle systems and wireless communications. Vehicle software technology continues to evolve over time and FCA US LLC, working with its suppliers, evaluates and takes appropriate steps as needed. Similar to a computer or other devices, your vehicle may require software updates to improve the usability and performance of your systems or to reduce the potential risk of unauthorized and unlawful access to your vehicle systems.

The risk of unauthorized and unlawful access to your vehicle systems may still exist, even if the most recent version of vehicle software (such as Uconnect software) is installed.

---

**WARNING!**

- It is not possible to know or to predict all of the possible outcomes if your vehicle's systems are breached. It may be possible that vehicle systems, including safety related systems, could be impaired or a loss of vehicle control could occur that may result in an accident involving serious injury or death.
- ONLY insert media (e.g., USB, SD card, or CD) into your vehicle if it came from a trusted source. Media of unknown origin could possibly contain malicious software, and if installed in your vehicle, it may increase the possibility for vehicle systems to be breached.
- As always, if you experience unusual vehicle behavior, take your vehicle to your nearest authorized dealer immediately.

**NOTE:**

Privacy of any wireless and wired communications cannot be assured. Third parties may unlawfully intercept information and private communications without your consent. For further information, refer to "Privacy Practices - If Equipped with Uconnect 7 radio" in "All About Uconnect Access" in your Owner's Manual Radio Supplement and "Onboard Diagnostic System (OBD II) Cybersecurity" in "Maintaining Your Vehicle" in your Owner's Manual on the DVD.

---

## ALL ABOUT UCONNECT ACCESS

### CONTENTS

m INTRODUCTION TO UCONNECT ACCESS . . .	13	□ Using Mopar Owner Connect .....	21
□ What Is Uconnect Access?.....	13	m USING UCONNECT ACCESS.....	24
□ Included Trial Period For New Vehicles .....	17	□ Getting Started With Apps.....	24
□ Features And Packages .....	19	□ 9-1-1 Call.....	25
m GETTING STARTED WITH UCONNECT		□ Roadside Assistance Call .....	32
ACCESS.....	19	□ Yelp.....	35
□ Registration .....	19	□ Security Alarm Notification.....	39
□ Download The Uconnect Access App .....	20	□ Stolen Vehicle Assistance.....	42
□ Purchasing Apps And WiFi Hotspot For Your		□ WiFi Hotspot.....	45
Vehicle.....	21	□ Voice Texting .....	48

□ Remote Door Lock/Unlock .....	55	□ Adding Vehicles To My Uconnect Access Account .....	85
□ Remote Vehicle Start .....	60	m UCONNECT CARE AND FAQs .....	85
□ Remote Horn And Lights .....	64	□ Uconnect Care Business Hours: .....	85
□ Vehicle Health Alert .....	67	□ Safety Guidelines .....	91
□ Via Mobile Apps .....	68	□ Safe Usage Of The Uconnect Access System . . .	91
m MAINTAIN MY UCONNECT ACCESS ACCOUNT .....	84	m DEVICE CONNECTION AND AUDIO TIPS WITH UCONNECT .....	94
□ How To Remove My Uconnect Access Account .	84		

---

To unlock the full potential of Uconnect Access in your vehicle, you first need to register with Uconnect Access.

**NOTE:** Your vehicle may be transmitting data as authorized by the subscriber.

**WARNING!**

- **ALWAYS** obey traffic laws and pay attention to the road. Some Uconnect Access services, including 9-1-1 and Assist, will NOT work without an operable 1X (voice/data) or 3G (data) network connection.
- **ALWAYS** drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

Uconnect Access enhances your ownership and driving experience by connecting your vehicle with an operable 1X (voice/data) or 3G (data) network. Uconnect Access is available only on equipped vehicles purchased within the continental United States, Alaska and Hawaii. Services can only be used where coverage is available, see coverage map for details.

For a complete list of Uconnect Access services, please visit: [DriveUconnect.com](http://DriveUconnect.com).

Uconnect Access provides:

- The ability to remotely lock/unlock your doors and start your vehicle (if equipped) from virtually anywhere, with the Uconnect Access App, the Mopar Owner Connect website (moparownerconnect.com) and Uconnect Care.
- The functionality to turn your vehicle into a WiFi Hotspot on demand.
- Security Alarm Notification via text or E-mail.
- Yelp to help find great places, businesses and other locations when you need them.
- Voice Texting so you can compose, send and receive text messages with your voice while keeping your hands on the wheel.

---

**NOTE:** Voice Texting through Uconnect Access is available for Android phones only. iPhone texting is supported with Siri and does not require a Uconnect Access subscription.

Before you drive, familiarize yourself with the easy-to-use Uconnect System.

**1. The ASSIST And 9-1-1 Buttons On Your Rearview Mirror**

The ASSIST Button is used for contacting Roadside Assistance, Vehicle Care and Uconnect Care. The 9-1-1 button connects you directly to emergency services.


---




**2. The Uconnect “Apps” Button On The Menu Bar Of The In-Vehicle Touchscreen**

This is where you can begin registration for Uconnect Access, find the Apps and purchase WiFi Hotspot on demand.


**3. The Uconnect Voice Command And Uconnect Phone Buttons On Your Steering Wheel**

The buttons let you use your voice to give commands, make phone calls, send and receive text messages hands-free, enter navigation destinations and control your radio and media devices.

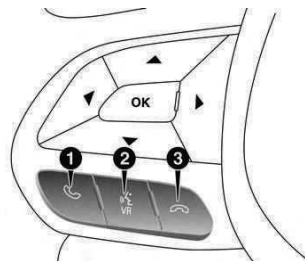

- 1 – Phone Pick up Button 
- 2 – Voice Recognition Button 
- 3 – Phone Hang Up Button 



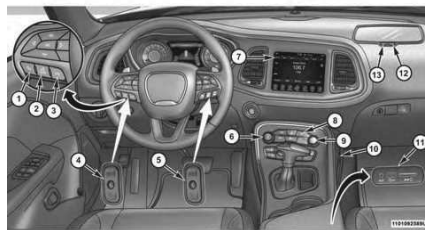

- 
- |  |   |
|--|---|
| 1 – Uconnect Phone Button  | 7 – Uconnect Access 7AN Radio   |
| 2 – Uconnect Voice Command Button  | – Back Button   |
| 3 – Phone Hang Up Button   | 9 – Tune or Scroll Knob/Browse or Enter Button                            |
| 4 – Steering Wheel Audio Controls (Left Rear Surface of Steering Wheel)  | 10 – Power Outlet   |
| 5 – Steering Wheel Audio Controls (Right Rear Surface of Steering Wheel) | 11 – Media Hub – USB port, SD Card and Audio Jack (Inside Center Console) |
| 6 – Volume/Mute Button   | 12 – 9-1-1 Button   |
|  | 13 – ASSIST Button  |
-

**NOTE:** Dodge Challenger interior shown, your vehicle may vary. first register with Uconnect Access. Once registered, Uconnect Access customers can purchase additional services and Apps over the lifetime of their vehicle ownership.

Your new vehicle may come with an included trial period for use of the Uconnect Access Services starting at the date of vehicle purchase. To activate the trial, you must

**3**

<b>Included Trial on New Vehicles ONLY</b>		
<b>Radio</b>	<b>Uconnect 7A</b>	<b>Uconnect 7AN</b>
<b>Radio Sales Code</b>	RA3	RA4
<b>Trial Period</b>	Six months of the Advantage Package	12 months of the Advantage Package

There are a few quick ways for you to identify your radio. For a more complete description, please refer to the User Guide in your glove box or visit [DriveUconnect.com](http://DriveUconnect.com).

- Both the Uconnect 7A and Uconnect 7AN feature a large 7 inch full color touchscreen.
- Only the Uconnect 7AN will have the HD Radio icon when listening to FM or AM stations. The icon will be lit when it is receiving an HD Radio signal (not all stations currently broadcast an HD Radio signal).




---

After the trial period, you can subscribe to continue your service by visiting the Uconnect Store located within the Mopar Owner Connect website ([moparownerconnect.com](http://moparownerconnect.com)). If you need assistance, you can also call Uconnect Care at:

1-855-792-4241

For the latest information on packages and pricing information, visit [DriveUconnect.com](http://DriveUconnect.com).

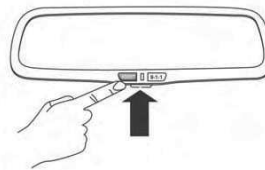

3


1101092926US

To unlock the full potential of Uconnect Access in your vehicle, you first need to register with Uconnect Access.

1. Push the ASSIST button on your rearview mirror.

2. Press the "Uconnect Care" button on the touchscreen.
3. A helpful Uconnect Care Agent will register your vehicle and handle all of the details.

---

**Signing up is easy!** Simply follow the steps above. Or, press the "Apps"  button on the touchscreen to "Register By Web" to complete the process using your wireless device or computer.

For further information please visit [DriveUconnect.com](http://DriveUconnect.com).

You're only a few steps away from using remote commands and playing your favorite music in your car.



1001087754US

#### Mobile App

To link your internet radio accounts:

1. Download the Uconnect Access App to your mobile device.
2. Press the Via Mobile icon on the navigation bar at the bottom of the App.

- 
3. Press the App you'd like to connect to your vehicle.
  4. Enter your login information for the selected App and press Link.
  5. Next time you're in your vehicle, enable Bluetooth, pair your phone and select the Via Mobile App you want to play from the Uconnect touchscreen to stream your personalized music.

**NOTE:**

- You can also complete this process on the web. Simply visit [moparownerconnect.com](http://moparownerconnect.com) log in and click Set Up Via Mobile Profile (under Quick Links).
- Once you download the App to your compatible mobile device, you will also be able to start your vehicle and lock/unlock its doors from virtually anywhere. For further information please visit [DriveUconnect.com](http://DriveUconnect.com).

Apps and WiFi Hotspot can be purchased from the Uconnect Store from within your vehicle, and online at the Mopar Owner Connect website [moparownerconnect.com](http://moparownerconnect.com). You must first register and set up a Uconnect Payment account.

**3**

The Mopar Owner Connect website [moparownerconnect.com](http://moparownerconnect.com) provides you with all the information you need, all in one place. You can track your service history, find recommended accessories for your vehicle, watch videos about your vehicle's features, and easily access your user guides and manuals. It is also where you can manage your Uconnect Access account. This section will familiarize you with the key elements of the website that will help you get the most of your Uconnect Access system.

---

- **Your Vehicle(s):**

Images are placed here to represent the FCA US LLC vehicles (Chrysler, Jeep, Dodge, Ram and FIAT) you own. If a vehicle you own is not shown here, click on the "Add New Vehicle" button. Likewise, if a vehicle is shown that you no longer own click on the "Edit Profile" to manage your account.

- **Edit Profile:**

To manage the details of your Uconnect Access account, such as your contact information, password and PIN, click on the "Edit Profile" button to access the details of your account.

- **Shop:**

To purchase a WiFi hotspot and renew your subscription to a package, click on the "Shop" tab, then go to the Uconnect Store to make your purchase.

- **Connected Vehicle:**

This statement will indicate which vehicle's you own that are equipped with the Uconnect Access system. Other vehicles you own may not have Uconnect Access and will indicate that it is a non-Uconnect Access Vehicle.

- **Remote Services:**

For vehicles with an active Uconnect Access subscription, press one of these icons and enter your four-digit Uconnect Security PIN to command your vehicle to remotely start, lock/unlock doors or sound the horn and lights.

- **Subscription Status:**

Refer to this section to quickly see if you are currently subscribed to remote services.

---

· **Uconnect Access App:**

This is where you can enter the mobile phone number for your compatible device to download the Uconnect Access App. Device compatibility can be verified at UconnectPhone.com. For more details, see the section labeled Download the Uconnect Access App.

· **Learn & Use:**

Click on the "Learn & Use" tab to find user guides and other information about your vehicle. More specifically, there is a dedicated Uconnect Access tab in this section to learn all about your connected vehicle capabilities.

**Editing Your Notifications**

Notifications are an important element of your Uconnect Access Account. For example, any time you use your remote services (such as Remote Door Unlock), or if your security alarm is set off, you can elect to receive a text

message and/or E-mail to notify you of the event. To set up the notifications, please follow these instructions.

1. Log on to moparownerconnect.com
2. Click the "Edit Profile" button in the upper-right corner of the page.
3. Click the Uconnect Notifications tab on the left side of the page.
4. If you have more than one vehicle with Uconnect Access, please select which vehicle you want to manage notifications for using the drop down menu.
5. You can enter up to five mobile phone and/or email addresses to your notifications, and you can customize which ones receive the types of messages.




- 
6. If you add a mobile phone number, you will receive a confirmation text message asking to confirm and receive vehicle notifications. If you are OK with this, reply to the text message saying "yes" (message and data rates may apply, please see your mobile phone provider for details). If you have questions, text "HELP" in your reply.

Applications (Apps for short) in your Uconnect Access system are designed to deliver the features and services that you want. There are two basic categories:

- **Built-In Apps** — uses the 1X (voice/data) or 3G (data) network on your Uconnect 7A or 7AN radio.

- **Uconnect Access via Mobile (if equipped)** — uses the Uconnect Access App and your device's data plan to access your personal Pandora, iHeartRadio, Aha and Slacker accounts from the vehicle and control them using the vehicle touchscreen. Customer's data plan charges will apply.

#### **Apps Main Menu**

Press the "Apps"  button on the touchscreen to open the Apps main menu, in this screen you will be able to access all of your available Apps. To access an App directly, press the corresponding button on the touchscreen and you will be directed to that App. To view the rest of your Apps, press the page forward or page back button.

---

### App Manager

Press the "App Manager" button to access the following categories:

- **Favorite Apps** – this is a good place to put the Apps you use most frequently.
- **All Apps** – all of your available Apps will reside in the "All Apps" folder.
- **Running Apps** – press this tab to see which Apps are currently running.



**NOTE:** Most Uconnect Access features do not require that you have a compatible device. The Uconnect Access features must have an operable 1X (voice/data) or 3G (data) network connection and you must be registered with Uconnect Access with an active subscription. Only Voice Texting the Uconnect Access App and Via Mobile Apps require a compatible device to work with your Uconnect Access system.

3

<b>WARNING!</b>
-----------------

Some Uconnect Access services, including 9-1-1 and assist will NOT work without an operable 1X (voice/data) or 3G (data) network connection.
--

#### Access To Emergency Services At The Push Of A Button

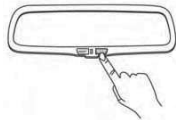

1101092926US

#### Uconnect Access In-Vehicle Assistance Features

With Uconnect Access, your vehicle has on-board assistance features located on the rear view mirror designed to enhance your driving experience if you should ever need assistance or support.

#### Description

9-1-1 Call is a feature that, at the push of a button, can contact emergency services. It's a convenient way to get in contact with a 9-1-1 operator in the event of an emergency. When the connection between the vehicle and a 9-1-1 operator is made, your vehicle will automatically transmit location information to the 9-1-1 operator.

#### How It Works

1. Push the "9-1-1" Call button on the Rearview Mirror; the indicator light will turn green indicating a call has been placed.

---

**NOTE:**

- In case the “9-1-1” Call button is accidentally pushed, there is a 10 second delay before the 9-1-1 call is placed. The system will verbally alert you that a call is about to be made. To cancel the 9-1-1 Call connection, push the “9-1-1” Call button on the Rearview Mirror or press the “Cancellation” button on the Phone Screen.
  - During a 911 call the Bluetooth paired phone is disconnected so incoming or outgoing calls will go through mobile versus the handsfree system which is not available due to the 911 call.
2. Once a connection between the vehicle and a 9-1-1 operator is made, the 9-1-1 Call system will transmit the following important vehicle information to a 9-1-1 operator:
    - Indication that the occupant placed a 9-1-1 Call.
    - The vehicle brand.
    - The last known GPS coordinates of the vehicle.
  3. You should be able to speak with the 9-1-1 operator through the vehicle audio system to determine if additional help is needed.

If a connection is made between a 9-1-1 operator and your vehicle, you understand and agree that 9-1-1 operators may, like any other 9-1-1 call, record conversations and sounds in and near your vehicle upon connection.

**9-1-1 Call System Limitations**

Vehicles sold in Canada and Mexico **DONOT** have 9-1-1 Call system capabilities. 9-1-1 or other emergency line operators in Canada and Mexico may not answer or respond to 9-1-1 system calls.

---


If the 9-1-1 Call system detects a malfunction, any of the following may occur at the time the malfunction is detected:

- The Rearview Mirror light will continuously be illuminated red.
- The screen will display the following message "Vehicle phone requires service. Please contact your dealer."
- An In-Vehicle Audio message will state "Vehicle phone requires service. Please contact your dealer."

Even if the 9-1-1 Call system is fully functional, factors beyond FCA US LLC's control may prevent or stop 9-1-1 Call system operation. These include, but are not limited to, the following factors:

- The ignition key has been removed from the ignition and the delayed accessories mode is active.
- The ignition key is in OFF position.

- The vehicle's electrical systems are not intact.
- The 9-1-1 Call system software and/or hardware is damaged during a vehicle crash.
- The vehicle battery loses power or becomes disconnected during a vehicle crash.
- 1X (voice/data) or 3G (data) network and/or Global Positioning Satellite signals are unavailable or obstructed.
- Equipment malfunction at the 9-1-1 operator facility.
- Operator error by the 9-1-1 operator.
- 1X (voice/data) or 3G (data) network congestion.
- Weather.
- Buildings, structures, geographic terrain, or tunnels.

**NOTE:** The signal strength bars on the “Apps” button on the touchscreen will show a single bar and a prohibition symbol  to indicate your vehicle is not connected to an operable 1X (voice/data) or 3G (data) network.

If your vehicle loses battery power for any reason (including during or after an accident) the 9-1-1 Call System, among other vehicle systems, will not operate.



#### Requirements

- This feature is available only on vehicles sold in the U.S.
- Vehicle must be properly equipped with the Uconnect Access System.
- Vehicle must have an operable 1X (voice/data) or 3G (data) network connection.
- Vehicle must be powered in the ON/RUN or ACC (Accessory) position with a properly functioning electrical system.

**WARNING!**

· Never place anything on or near the vehicle's 1X (voice/data) or 3G (data) and GPS antennas. You could prevent 1X (voice/data) or 3G (data) and GPS signal reception, which can prevent your vehicle from placing an emergency call. An operable 1X (voice/data) or 3G (data) network connection and a GPS signal is required for the 9-1-1 Call system to function properly.

*(Continued)*

**WARNING! (Continued)**

· Do not add any aftermarket electrical equipment to the vehicle's electrical system. This may prevent your vehicle from sending a signal to initiate an emergency call. To avoid interference that can cause the 9-1-1 Call system to fail, never add aftermarket equipment (e.g., two-way mobile radio, CB radio, data recorder, etc.) to your vehicle's electrical system or modify the antennas on your vehicle. **IF YOUR VEHICLE LOSES POWER FOR ANY REASON (INCLUDING DURING OR AFTER AN ACCIDENT) THE UCONNECT FEATURES, APPS AND SERVICES AMONG OTHERS WILL NOT OPERATE.**

*(Continued)*

**WARNING! (Continued)**

- The Occupant Restraint Controller (ORC) turns on the Air Bag Warning Light on the instrument panel if a malfunction in any part of the air bag system is detected. If the Air Bag Warning Light is illuminated, the air bag system may not be working properly and the 9-1-1 system may not be able to send a signal to a 9-1-1 operator. If the Air Bag Warning Light is illuminated, have an authorized dealer service your vehicle immediately.
- Ignoring the Rearview Mirror light could mean you will not have 9-1-1 Call services if needed. If the Rearview Mirror light is illuminated, have an authorized dealer service the 9-1-1 Call system immediately.

(Continued)

**WARNING! (Continued)**

- If anyone in the vehicle could be in danger (e.g., fire or smoke is visible, dangerous road conditions or location), do not wait for voice contact from a 9-1-1 operator. All occupants should exit the vehicle immediately and move to a safe location.
- Failure to perform scheduled maintenance and regularly inspect your vehicle may result in vehicle damage, accident or injury.


**FAQs**

1. **What Happens If I Accidentally Push The 9-1-1 Button On The Mirror?** You have 10 seconds after pushing the 9-1-1 button to cancel the call. To cancel the call, either push the "9-1-1" button again, or press the "cancel" button on the in-vehicle touchscreen.



- 
- 2. What Type Of Information Is Sent When I Call 9-1-1 From My Vehicle?** Certain vehicle information, such as make and model, is transmitted along with last known GPS location. Also note that 9-1-1 operators may record conversations and sounds within your vehicle once a connection is made, and that by using the service you consent to having this information shared.
  - 3. When Could I Use The 9-1-1 Button?** You can use the 9-1-1 button to make a call if you or someone else needs emergency assistance.

**Easy Call To Roadside Assistance 24/7 Using ASSIST Button**

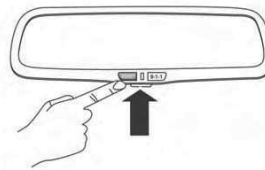

---

**Uconnect Access In-Vehicle Assistance Features**

With Uconnect Access, your vehicle has on-board assistance features located on the rear view mirror designed to enhance your driving experience if you should ever need assistance or support.

**Description**


Vehicles equipped with the Uconnect Access system feature will contain an ASSIST button on the rear view mirror. Once the vehicle has been registered and is subscribed to the Advantage Package, the ASSIST button can connect you directly to one of three important care centers for support.

- **Roadside Assistance** — If you get a flat tire, or need a tow, you'll be connected to someone who can help anytime. Additional fees may apply. (See the Disclaimers section below for more detail).
- **Uconnect Care** — In vehicle support for Uconnect Access System, Apps, and Features.
- **Vehicle Care** — Total support for your vehicle.

**How It Works**

You or someone in the vehicle simply presses the ASSIST button located on the rear view mirror and you will be presented with your ASSIST options. Make your selection by pressing the touchscreen.



**NOTE:** The signal strength bars on the “Apps” button on the touchscreen will show a single bar and a prohibition symbol  to indicate your vehicle is not connected to an operable 1X (voice/data) or 3G (data) network.

#### Requirements

- This feature is available only on vehicles sold in the U.S.
- Vehicle must be properly equipped with the Uconnect Access System.
- Vehicle must have an operable 1X (voice/data) or 3G (data) network connection.
- Vehicle must be registered with Uconnect Access and have an active subscription that includes the applicable feature or App.
- Vehicle must be powered in the ON/RUN or ACC (Accessory) position with a properly functioning electrical system.

---

#### Disclaimers

If Roadside Assistance is provided to your vehicle, you agree to be responsible for any additional roadside assistance service costs that you may incur. In order to provide Uconnect Services to you, we may record and monitor your conversations with Roadside Assistance, Uconnect Care or Vehicle Care, whether such conversations are initiated through the Uconnect Services in your vehicle, or via a landline or mobile device, and may share information obtained through such recording and monitoring in accordance with regulatory requirements. You acknowledge, agree and consent to any recording, monitoring or sharing of information obtained through any such call recordings.

#### FAQs

1. **What Is The Phone Number For Roadside Assistance?** The phone number is:  
800-521-2779

**NOTE:** Some Apps are suspended while an Assist call is active.

2. **If I Am Subscribed To Uconnect Access, Does It Cover Towing Or Other Expenses Incurred By Using FCA Roadside Assistance?** No, however your new vehicle may include Roadside Assistance services.

Looking for a burrito joint that is open? A boutique to buy a new pair of jeans? Yelp is here to help. Use Yelp to search for places to eat, shop, relax and play.

---

### Description


Yelp is a familiar, widely used website and mobile App that connects people to great local businesses. Now with Uconnect Access, Yelp has been adapted for your vehicle, and on the go capability. Yelp gives you the ability to search for a Point of Interest (POI) or desired destination using either pre-defined search categories, or custom searches, using keywords like "tacos." Searching can be done by voice recognition or by using the touchscreen keypad.

Here is what Yelp can do for you while you are on the road:


- Deliver a list of up to 20 results, prioritizing by best match, by distance or rating.
- Provide up-to-date search listings (pulling the latest information from the cloud).


- The live and local search engine will scan 12 categories and millions of POIs to provide drivers with a local guide for real word-of-mouth recommendations.
- With one press, select from the list to find location address, phone number, user ratings, hours of operation (if available) and price ratings (if available).
- The ability to call the selected POI directly (a device must be paired via Bluetooth), or have the address immediately sent to the navigation system for routing (if equipped).

### How It Works



1. **Using the touchscreen**, launch Yelp by pressing Apps  > Yelp.

**OR**

- Using voice recognition**, push the  button and say "Launch Yelp."

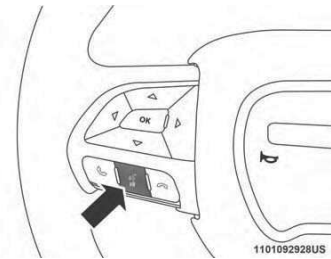

**Give It A Try!**



1. Push the  button on the steering wheel and say "Launch Yelp."
2. Push the  button on the steering wheel and say "Yelp Search."

3. Uconnect will prompt you to say something like, "car wash." After the beep, say "restaurants."
4. The Uconnect system will link out to the cloud to do your Yelp search, and depending on your search request, this may take up to 30 seconds.
5. Using the touchscreen, select a restaurant from the list of search results.
6. Navigate to the location by pressing "Go Now" (if equipped with navigation).

**3**


**NOTE:** Save your destination to Favorites. To find it again go to Nav > Where to > Favorites.

**How To Add And Delete Search Categories**

Yelp provides the ability to save custom search categories by first initiating the search, then pressing the star . To delete a search category, select it, and press the star . A confirmation prompt will appear to confirm. Create up to 36 custom search categories!

---

### Requirements

- Vehicle must be properly equipped with the Uconnect Access System.
- Your vehicle must be in range of an operable 1X (voice/data) or 3G (data) network connection (indicated by the signal strength bars on the "Apps"  button on the touchscreen).
- Vehicle must be registered with Uconnect Access and have an active subscription that includes the applicable feature or App.
- Vehicle must be powered in the ON/RUN or ACC (Accessory) position with a properly functioning electrical system.
- Vehicle must have onboard navigation to use **Go Now**.
- Mobile device must be paired with Bluetooth and connected to call a POI directly.


### Safety Information

WARNING!
<ul style="list-style-type: none"><li>· <b>ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.</b></li></ul>



### Tips And Shortcuts

- To improve your search results, use single search terms like "coffee" rather than multiple words, which may deliver mixed results, for example, "home improvement and gardening stores."
- Press the "microphone" on the touchscreen to use voice commands.

- If you wish to cancel a search request, press “Cancel.”
- To learn more about a listing, press the line that appears on the display details such as the address, phone number and hours of operation (if applicable).
- Sort results by Best Match, Rating or Distance (default is Best Match).
- The Rating tab will re-sort your search based on ratings submitted by everyday users to Yelp’s online database.
- Distance will sort by the closest POI near you.
- To bypass the voice prompts hit the  button a second time to barge in and state your desired command.
- To exit Yelp, press the “X” (close) button in the upper right corner of the touchscreen.

Notifies you via email or text message (SMS) when the vehicle’s factory-installed theft alarm system has been set-off.

**Description**

The Theft Alarm Notification feature notifies you via email or text message (SMS) when the vehicle’s factory-installed theft alarm system has been set-off. You’ve probably seen this before, a vehicle’s alarm goes off in a parking lot or out on the street, and the owner is nowhere to be found. With Theft Alarm Notification your vehicle will alert you of the situation.

Should you receive a notification that your theft alarm has been set-off, please react with caution. There are a number of reasons why your alarm may have been triggered, one of which could be that your vehicle was stolen. If so, please see the details of the Stolen Vehicle Assistance service below.



---

### How It Works

Theft Alarm Notification can send you an email or text message (SMS) should the alarm go off. The following instructions will help you manage your notifications.

1. Log on to the Mopar Owner Connect website (moparownerconnect.com) using the username and password you used when registering your Uconnect Access system.
  - If you forgot your username or password, links are provided on the website to help you retrieve them.
2. Once logged in you will find yourself on the Dashboard. Click on the "Edit Profile" button in the upper-right corner of the page.
3. Click on the "Notifications" tab on the left side of the page.
4. If you have more than one vehicle with Uconnect Access, please select which vehicle you want to manage notifications for using the drop down menu.
5. You can enter up to five mobile phone and/or email addresses to your notifications, and you can customize which ones receive the types of messages.
6. You will receive a confirmation text message, asking to confirm and receive vehicle notifications. If you are ok with this, reply to the text message saying "yes" (message and data rates may apply, please see your mobile device provider for details). If you have questions, text "HELP" in your reply.
7. You're all set. Should your theft alarm go off, a notification(s) will be sent to the number(s) and/or email(s) you provided.

---

**Requirements**

- Vehicle must be properly equipped with the Uconnect Access System and a factory installed Theft Alarm system.
- Your vehicle must have an operable 1X (voice/data) or 3G (data) network connection.
- Vehicle must be registered with Uconnect Access and have an active subscription that includes the applicable feature or App.
- Owner must properly set-up notification to have the Theft Alarm Notification sent to an appropriate mobile device or email account.

**CAUTION!**

**In the event your theft alarm is activated, use caution and evaluate the situation from a safe distance. If any unauthorized or suspicious person is near or inside of your vehicle, immediately contact the police. Do not do anything that could jeopardize your safety or the safety of those around you.**

**3****FAQs**

1. **What do I do if my Theft Alarm goes off?** In the event your theft alarm is activated, use caution and evaluate the situation from a safe distance. If any unauthorized or suspicious person is near or inside of your vehicle, immediately contact the police. Do not do anything that could jeopardize your safety or the safety of those around you.

- 
- 2. How can I change where I receive notifications?** You can manage your notifications by going to the Mopar Owner Connect website ([moparownerconnect.com](http://moparownerconnect.com)) and log in with your username and password. Once there, you can click on "Edit Profile", then the "Notifications" tab.
  - 3. Can I receive a text message (SMS) when my Theft Alarm goes off?** Yes. Text messages are a convenient and quick way to receive notifications. You can manage your notifications by going to the Mopar Owner Connect website ([moparownerconnect.com](http://moparownerconnect.com)) and log in with your username and password. Once there, you can click on "Edit Profile", then the "Notifications" tab to add, remove and edit your notification options.

#### Description

If your vehicle is stolen, contact local law enforcement immediately to file a stolen vehicle report. Once this report has been filed with law enforcement and you have also notified Uconnect Care that you have filed the report, Uconnect Care can help locate your vehicle. The Uconnect Care Agent will ask for the stolen vehicle report number issued by local law enforcement. As long as your vehicle has an operable 1X (voice/data) or 3G (data) network connection, the Uconnect Care Agent may be able to locate the stolen vehicle and work with law enforcement to help recover it. The Vehicle must have an operable 1X (voice/data) or 3G (data) network connection and must be registered with Uconnect Access with an active subscription that includes the applicable feature (Vehicle must be within the United States, have network coverage and must be registered with Uconnect Access with an active subscription that includes the applicable feature).

If your vehicle is ever stolen, this App (with your permission) can provide its location to the law enforcement to help them track it down.

---

Stolen Vehicle Assistance is a secure process that can only be done with your permission. Law enforcement gets involved only after you file a stolen vehicle report with them.

**How It Works**

1. If your vehicle is stolen, contact local law enforcement as soon as possible. They will work with you to file a stolen vehicle report.
2. Next, inform Uconnect Care that your vehicle has been stolen. Uconnect Care can be reached by calling:  
1-855-792-4241

The Uconnect Care Agent will ask for the stolen vehicle report number (as issued by your local law enforcement). If you have downloaded the Uconnect Access App, you can push the "Operator" button on your device and select "Uconnect Care" to make the call.

3. Uconnect Care will authenticate that you are the owner of the vehicle and contact the law enforcement with whom you filed the stolen vehicle report.

4. Uconnect Care will work with your local law enforcement to track and attempt to recover the vehicle. You will be contacted by law enforcement if your vehicle is recovered. While the investigation is ongoing, you should also contact your insurance company to inform it of the situation.

3

**Requirements**

- Vehicle must be properly equipped with the Uconnect Access System.
- Vehicle must have an operable 1X (voice/data) or 3G (data) network connection.
- Vehicle must be registered with Uconnect Access and have an active subscription that includes the applicable feature or App.

---

#### Disclaimers

- No security system is invincible, and vehicle thieves may develop ways to prevent your vehicle from being located.

#### FAQs

1. **What to do if my vehicle is stolen?** First, call local law enforcement as soon as possible. They will work with you to file a stolen vehicle report. Then call Uconnect Care at:  
1-855-792-4241  
and inform Uconnect Care that your vehicle has been stolen and that you have filed a stolen vehicle report with law enforcement. Uconnect Care will help you through the process.

2. **Can someone track my vehicle?** To ensure your privacy, and the privacy of others using your vehicle, you must involve local law enforcement to have Uconnect locate your vehicle. This helps to ensure that someone is not tracking your vehicle for purposes other than at your request to locate it in the event it is stolen.
3. **How will I know if my vehicle is recovered?** After you provide the Uconnect Care Agent with the stolen vehicle report, the agent will work together with law enforcement to try to locate your vehicle. If your vehicle is recovered, you will be contacted by law enforcement.

---

4. **Can Uconnect Access lower my insurance rates?**

Some insurance providers offer lower rates on vehicles equipped with systems that can deter auto theft. When shopping for insurance, be sure to inform your insurance provider of your Uconnect Access system (Stolen Vehicle Assistance requires a subscription), to find out if your insurance provider offers a lower rate if your vehicle is equipped with Uconnect access and you have an active subscription.



**Create A WiFi Hotspot For Use In Your Vehicle**

**Description**

WiFi Hotspot is an in-vehicle feature that connects your device to an operable 1X (voice/data) or 3G (data) network using Uconnect Access and is ready to go where

ever you are. Once your vehicle is registered for Uconnect Access, you can purchase a WiFi Hotspot subscription at the Uconnect Store. After you've made your purchase, turn on your signal and connect your devices.

**WARNING!**

**NEVER use the WiFi Hotspot if you are driving the vehicle. Failure to do so may result in an accident involving serious injury or death.**


- Enables all your passengers to be simultaneously connected to the web.
- Connect several devices at one time.
- Any WiFi-enabled device — such as a laptop or any other portable enabled media can connect over your private in-vehicle network.

- 
- A high-speed, secured connection lets anyone on your private network access the Web – great for working and relaxing.


#### **How It Works**

The WiFi Hotspot feature provides the vehicle passengers with an internet access hot spot in the vehicle, using the radio as an access point. The hot spot will allow WiFi enabled in-vehicle devices (such as a laptop or any other portable enabled media device) to wirelessly connect to the internet.

#### **Give it a Try!**

1. Purchase a subscription to the WiFi Hotspot feature for a day, a week, or a month. You can buy WiFi Hotspot in one of two ways:
  - From your in-vehicle touchscreen (Apps  > Uconnect Store).
  - From the Mopar Owner Connect website (moparownerconnect.com) > Shop > Uconnect Store.

**NOTE:** You must set up your Uconnect Payment Account on the Mopar Owner Connect website and establish a Uconnect Payment PIN to purchase WiFi Hotspot.

2. After purchasing WiFi Hotspot, it will be enabled/turned on in your vehicle. The WiFi Hotspot App can be found on your in-vehicle touchscreen by selecting Apps  > WiFi Hotspot.




3

3. **WiFi Hotspot** should be turned on after purchasing a subscription. To disable WiFi Hotspot, simply press to uncheck the box to the right of the App (this feature is available while the vehicle is in motion).

**Optional:** Give your hot spot a unique name by pressing Hotspot Name (key pad is not available while vehicle is in motion).

4. From your in-vehicle touchscreen, select the appropriate in-vehicle network and the desired security level setting. Each security level has different pass phrase constraints. Change the security level setting by selecting the checkbox for any of the following security settings.



- WPA2/WPA – “WiFi Protected Access” – This is the default security and can be changed by pressing WiFi Hotspot > View/Edit Pass phrase.
  - WEP – “Wired Equivalent Privacy” – Pass phrase must be 13 characters long.
  - None – No security, will not prompt you for a pass phrase, when you attempt to connect to WiFi Hotspot.
5. From your Wi-Fi enabled device (laptop, tablet, etc.).
- Search for and select the Uconnect hotspot in the settings of your device.
  - Type the network security key (this is called “pass phrase” and is found in Apps.  > WiFi Hotspot > View/Edit Pass phrase).
  - Click OK.

You are now connected!

**WARNING!**

**ALWAYS** drive safely with your hands on the wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

**Add Free-Form Voice Texts To Your Voice Text Reply Feature**

**Description**

This Voice Texting enhances the Voice Text Reply feature built into your Uconnect Access 7A and 7AN radio. While Voice Text Reply provides 18 pre-defined messages you can send, Voice Texting lets you create and send nearly any message you want. Just speak your message

---

as if you were talking to the recipient, and the Uconnect Access voice-texting technology will convert your voice into a text message.

Voice Texting and Voice Text Reply features are compatible with many newer Android and Blackberry devices. Before using, determine if your device has been tested to support Bluetooth "Message Access Profile (MAP)" at UconnectPhone.com. iPhone and some other devices do not currently support Bluetooth MAP. Ensure MAP is ON and incoming message notification is enabled.

#### **How It Works**

##### **Set Up Your Device To Work With Voice Texting**

After pairing your device to the vehicle using Bluetooth see (UconnectPhone.com), push the "phone" button on the menu bar of the radio to see the main Phone screen. A minute or so after a compatible MAP enabled device has been Bluetooth connected to the vehicle; the "messaging" button on the touchscreen will change from gray

to white. This is an indicator that Voice Texting will work with your device. Outgoing voice texts may not be possible. The device may allow incoming texts only.

Determine if your device has been tested to support Bluetooth "Message Access Profile" (MAP) - at UconnectPhone.com. (Your device may support Voice Texting even if not found on this website. Check with your device manufacturer to see if it supports MAP protocol.)


**NOTE:** If your device supports MAP, then ensure MAP is on and incoming message notification is enabled, (see UconnectPhone.com for device specific instructions).

Follow the steps below to see if your device can set up to work with Voice Texting.





If a Bluetooth authorization window appears showing your device requesting permissions, check the box for Always and press Accept.

#### **Sending A New Text Message From Radio**

1. Push  on the steering wheel.
2. Say "Send text message."


3. The system will respond "Say the phone number or the full name and the phone type of the contact that you want to send a message to."
4. Dictate message ("I will be home at eight.")
5. When finished dictating, wait for prompt and say "Send."

#### **Viewing Or Listening To Incoming Messages To Listen to a Message from Radio**

1. Push the  button on the steering wheel. Say (Listen to message.)
- OR**
- Press the  button on the touchscreen.

### Viewing Your Messages

1. Push the "Phone" button on the steering wheel.

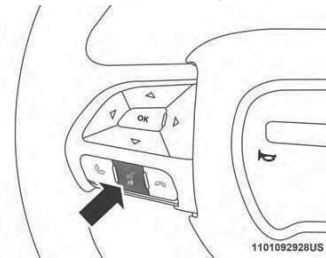

2. Say "View message."

**OR**

Press "View" on the in-vehicle touchscreen.



Contact names or phone numbers of the message sender appears in a list along with **View** and **Listen** buttons on the touchscreen.

---

#### Viewing A Specific Message

1. Press "View" next to the contact name/phone number of the message you want to be displayed.

**OR**


Say "Show message n."

n = the number of the message

#### Listening To A Message

1. Press "Listen" on the touchscreen or push the "Phone" button on the steering wheel and say "Listen," the Uconnect system will read the received text message over the vehicle audio system.

#### Barge-In

Barge-in is a feature that enables a user to say a valid command without waiting for the system to finish speaking. When the system is "speaking" you can push the  button on the steering wheel and say a valid command.

For example, if the system is explaining all of the options available after dictating a text message, at any time the user can press **Listen** on touchscreen or push the **Phone** button on the steering wheel and say **Listen**.

#### Requirements

- (MAP may not be compatible with Apple iPhones (pre iOS 6). Apple iOS 6 supports receiving text messages, but does not support sending text messages).
- Available on vehicles sold in the United States with a Uconnect 7A (sales code RA3) or Uconnect 7AN (sales code RA4) radio equipped with Uconnect Access.

- Vehicle must be registered with an active Uconnect Access Advantage trial or paid subscription for free form text response to work.
- Vehicle and device must have an operable 1X (voice/data) or 3G (data) network connection.
- Customer must have a properly paired and connected device with Bluetooth Message Access Profile (MAP) enabled. Voice Texting is compatible with many newer BlackBerry and Android mobile devices. Apple iOS 5 and earlier does not support MAP so iPhones will not send free form text messages. Apple iOS 6 supports receiving, not sending text messages. To check if your device has been tested to be compatible please visit UconnectPhone.com.
- Your MAP supported device must be paired and connected to a compatible Uconnect radio.
- Vehicle must have an operable 1X (voice/data) or 3G (data) network connection to voice text.
- FCA US LLC Uconnect and its affiliates are not responsible for errant text messages.
- Vehicle must be registered with an active Uconnect Access trial or paid subscription.

**Disclaimers**

- Not all Voice Texting features may be available on your device.

**WARNING!**

**ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.**

---

## FAQs

- 1. Can I still voice text if my device is not listed?** We are constantly testing devices and updating our compatibility database. If your device is not listed, you may still be able to pair and connect your MAP supported device to a compatible Uconnect radio to see if all or most voice texting functions work. Check your device manufacturer if MAP is supported on your device.
- 2. Can I use voice texting while in my other FCA vehicle?** The Voice Texting free text response feature is available only on Uconnect 7A (sales code RA3) or Uconnect 7AN (sales code RA4) radios. Other FCA vehicles do support hands free texting, but only with fixed responses.
- 3. My "Messaging" button on the touchscreen is White, but I can only use pre-formatted responses.** The Voice Texting free-form voice response requires a subscription to the Uconnect Access Advantage package. (Some devices will support pre-formatted responses, but not free-form. Refer to [UconnectPhone.com](http://UconnectPhone.com) for further details.)
- 4. Do I have to "train" my Uconnect radio to my voice?** FCA uses the latest voice recognition engine that provides good recognition without required training. This makes it easier for a passenger to also use the system.
- 5. Can a passenger voice text?** Yes, however, voice recognition microphones are optimized for the driver, so the system may have difficulty hearing the passenger; also, the system will use the currently connected device, so be sure your passenger isn't sending texts to the wrong recipient.

- 
- 6. **Does Voice Texting work with accents?** Speech isn't perfect. Technology isn't perfect. While FCA strives to use the latest voice recognition engine, the technology may have difficulty with strong accents.
  - 7. **Can I voice text my car?** The Voice Texting feature allows you to listen to, and reply to text messages (SMS) sent to your device by voice while in your vehicle.
  - 8. **How many pre-formatted replies are there?** You can respond with a set of up to 18 preset outgoing messages such as "I'll call you later." Refer to "Voice Texting" section of this supplement.
  - 9. **Can I use abbreviations and emoticons?** Of course! Just say the name of the most popular emoticon or abbreviation, e.g. smiley, frown, wink, & LOL.
  - 10. **Can I use Text Messaging if the "messaging" button doesn't turn white?** Only MAP compatible devices will work with Text Messaging. If your device is compatible, the "messaging" light will turn white, after the device is Bluetooth connected, and you will then be able to do hands free Text Messaging. The system will respond with "Sorry, I didn't understand you" if you push the steering wheel "Phone" button and say a voice command for Text Messaging, when the button isn't active ("white").

**Lock Or Unlock Your Vehicle From Virtually Anywhere Using Your Computer Or Device App**

**Description**

The Remote Door Lock/Unlock feature provides you the ability to lock or unlock the door on your vehicle, without the keys and from virtually any distance. You can send a request to your vehicle in one of three ways:



- 
- Using the Uconnect Access App from a compatible device
  - From the Mopar Owner Connect website (moparownerconnect.com)
  - Contacting Uconnect Care

If you want, you can set up notifications for your account to receive an email or text (SMS) message every time a command is sent to lock or unlock your doors.

#### **How It Works**

##### **Uconnect Access App:**


1. Download the Uconnect Access App to a compatible device and login using your username and password.
2. To lock the doors, push the button with the closed lock icon; to unlock the driver's door push the button with the open lock icon.
3. A pop-up screen will appear asking for your Uconnect Security PIN (this is the same 4-digit code established when you registered your Uconnect Access system). Enter the Uconnect Security PIN on the keypad and press "OK."
4. The Uconnect Access App will confirm if your command was sent (or not). Press "OK" to close the pop-up screen.
5. It will take a little while for the command to go through to your vehicle. The time it takes depends on a number of technical conditions.
6. A message will appear on the screen to let you know if the command was received by your vehicle.

**Mopar Owner Connect website:**

1. Log on to the Mopar Owner Connect website (moparownerconnect.com) using the username and password you used when registering your Uconnect Access system.

**NOTE:** If you forgot your username or password, links are provided on the website to help you retrieve them.

2. If you have more than one vehicle registered into the Mopar Owner Connect website (moparownerconnect.com), select the vehicle you want to send the command by clicking on its image along the top.
3. Beneath the image of a vehicle like yours, you will see a row of icons. To lock the doors, click on the closed lock icon; to unlock the driver's door click on the "open lock icon."

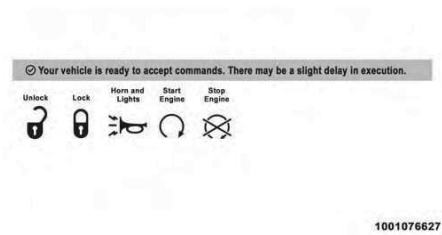

**3**

4. You will then be asked to enter your Uconnect Security PIN (this is the same 4-digit code established when you registered your Uconnect Access system). Please enter your Uconnect Security PIN.
5. A message will appear on the screen to let you know if the command was received by your vehicle.

---

**Uconnect Care:**

1. If you need to unlock the doors of your vehicle, contact Uconnect Care by calling:  
855-792-4241

**NOTE:** The Uconnect Care agents are trained to help you with unlocking of your door (for example, in an accidental lock-out). All other Remote Services should be performed via the Mopar Owner Connect website ([moparownerconnect.com](http://moparownerconnect.com)) or through the Uconnect Access App on your compatible device.

2. For security purposes, the Uconnect Care agent will verify your identity by asking for your 4-digit Uconnect Security PIN.
3. After providing your Uconnect Security PIN, you can ask them to lock or unlock your vehicle. The agent will send a command to your vehicle to get the task done.

**Requirements**

- Vehicle must be properly equipped with the Uconnect Access System.
- Vehicle must have an operable 1X (voice/data) or 3G (data) network connection.
- Vehicle must be registered with Uconnect Access and have an active subscription that includes the applicable feature or App.
- If using the Uconnect Access App to command your vehicle, your device must be compatible and be connected to an operable 1X (voice/data) or 3G (data) network connection.
- An ignition cycle is required for some remote commands such as Remote Vehicle Start and Remote Door Lock/Unlock if following a Remote Horn and Lights activation.

---

## FAQs

- 1. How long does it take to unlock or lock the door?**  
Depending on various conditions, it can take 1-2 minutes or more for the request to get through to your vehicle, although Uconnect is always striving to improve performance.
- 2. Which is faster, my Key Fob or the Uconnect Access App?**  
Your Key Fob will lock/unlock the door quicker, however its range is limited and it can sometimes get misplaced or locked in the vehicle. Your Uconnect Access App comes in handy for these and other situations.
- 3. Will my vehicle be safe if I lose my device?**  
People sometimes lose their devices, which is why security measures have been engineered into the Uconnect Access App. Asking for your username, password and UconnectSecurity PIN help to ensure that nobody can get into your vehicle if they happen to find your device.
- 4. Why can't all devices use the Uconnect Access App?**  
The Uconnect Access App has been designed to work on most devices with the Apple and Android operating systems. The capabilities of these devices allows us to remotely command your vehicle. Other operating systems may be supported in the future.

---

5. **Why is the Uconnect Access App running slow?** The Uconnect Access App relies on a mobile network connection from your device to send commands to your vehicle which must have an operable 1X (voice/data) or 3G (data) network connection. If either your device or your vehicle are in an area with below average coverage, it may take longer to log in and send commands.

**Use Your Computer Or Wireless Device App To Start The Engine And Warm-Up Or Cool-Down The Vehicle From Almost Anywhere**

**Description**

The Remote Vehicle Start feature provides you with the ability to start the engine on your vehicle, without the keys and from virtually any distance. Once started, the pre-set climate controls in your vehicle can warm-up or

cool-down the interior before you have to get in. You can send a request to your vehicle in one of two ways:

- Using the Uconnect Access App from a compatible device.
- From the Mopar Owner Connect website ([moparownerconnect.com](http://moparownerconnect.com)).

You can also send a command to turn-off an engine that has been remote started. After 15 minutes if you have not entered your vehicle with the key, the engine will shut off automatically.

This remote function requires your vehicle to be equipped with a factory-installed Remote Start system.

If you want, you can set-up notifications for your account to receive an email or text (SMS) message every time a command is sent to remote start or cancel a remote start.

---

**How It Works****Uconnect Access App:**

1. Download the Uconnect Access App to a compatible device and login using your username and password.
2. To start the engine, press the "circular arrow", to turn-off an engine that has been remote started press the "cancel" button.
3. A pop-up screen will appear asking for your Uconnect Security PIN (this is the same 4-digit code established when you registered your Uconnect Access system). Enter the Uconnect Security PIN on the keypad and press "OK."
4. The Uconnect Access App will confirm if your command was sent (or not). Press "OK" to close the pop-up screen.

5. It will take a little while for the command to go through to your vehicle. The time it takes depends on a number of technical conditions.

6. A message will appear on the screen to let you know if the command was received by your vehicle.

**3****Mopar Owner Connect website:**

1. Log on to the Mopar Owner Connect website (moparownerconnect.com) using the username and password you used when registering your Uconnect Access system.

**NOTE:** If you forgot your username or password, links are provided on the website to help you retrieve them.

2. If you have more than one vehicle registered into the Mopar Owner Connect website (moparownerconnect.com), select the vehicle you want to send the command by clicking on its image along the top.

- 
3. Beneath the image of a vehicle like yours, you will see a row of icons. To start the engine, press the "circular arrow", to turn-off an engine that has been remote started press the "cancel" button.
  4. You will then be asked to enter your Uconnect Security PIN (this is the same 4-digit code established when you registered your Uconnect Access system). Please enter your Uconnect Security PIN.
  5. A message will appear on the screen to let you know if the command was received by your vehicle.

**Uconnect Care:**

1. If you need to unlock the doors of your vehicle, contact Uconnect Care by calling:  
855-792-4241

**NOTE:** The Uconnect Care Agents are trained to help you with unlocking of your door (for example, in an accidental lock-out). All other Remote Services should be performed via the Mopar Owner Connect website ([moparownerconnect.com](http://moparownerconnect.com)) or through the Uconnect Access App on your compatible device.

2. For security purposes, the Uconnect Care Agent will verify your identity by asking for your 4-digit Uconnect Security PIN.
3. After providing your Uconnect Security PIN, you can ask them to lock or unlock your vehicle. The agent will send a command to your vehicle to get the task done.

---

## FAQs

1. **How long does it take to remote start my vehicle?**

Depending on various conditions, it can take three minutes or more for the request to get through to your vehicle, although Uconnect is always striving to improve performance.

2. **Which is faster, my Key Fob or the Uconnect Access App?** Your Key Fob will remote start your vehicle quicker, however its range is limited. For example, when you are leaving the stadium after the game, you can remote start your vehicle to have the inside comfortable before you even get there.

3. **Will my vehicle be safe if I lose my wireless device?**

People sometimes lose their wireless devices, which is why security measures have been engineered into the Uconnect Access App. Asking for your username, password and Uconnect Security PIN help to ensure that nobody can start your vehicle if they happen to find your device.

4. **Can someone drive off with my vehicle using the App?** No. Driving your vehicle still requires the keys to be in the vehicle. The Remote Start feature simply starts the engine to warm-up or cool down the interior before you arrive, you cannot drive away without the keys.

5. **Can I stop a vehicle that is being driven by canceling the engine start command?** No. If a vehicle is driving down the road the cancel Remote Start button will not stop it. It simply cancels or ends a Remote Start of the engine.



---

**6. Why can't all devices use the Uconnect Access App?**

The Uconnect Access App has been designed to work on most devices with the Apple and Android operating systems. The capabilities of these device allows us to remotely command your vehicle. Other operating systems may be supported in the future.

- Using the Uconnect Access App from a compatible device.
- From the Mopar Owner Connect website (moparownerconnect.com).
- Contacting Uconnect Care.

If you want, you can set-up notifications for your account to receive an email or text (SMS) message every time a command is sent to turn on the horn and lights.

**Can't Find Your Vehicle In The Parking Lot? Sound The Horn And Flash The Lights On Your Vehicle To Locate It**

**Description**

It is easy to locate a vehicle in a dark, crowded or noisy parking area by activating the horn and lights. It may also help if you need to draw attention to your vehicle for any reason. You can send a request to your vehicle in one of three ways:

**How It Works**

1. Download the Uconnect Access App to a compatible device and login using your username and password.
2. To turn on the horn and lights, press the "trumpet icon." To turn-off the horn and lights, press the "trumpet icon" again.

- 
3. A pop-up screen will appear asking for your Uconnect Security PIN (this is the same 4-digit code established when you registered your Uconnect Access system). Enter the Uconnect Security PIN on the keypad and press "OK."
  4. The Uconnect Access App will confirm if your command was sent (or not). Press "OK" to close the pop-up screen.
  5. It will take a little while for the command to go through to your vehicle. The time it takes depends on a number of technical conditions.
  6. A message will appear on the screen to let you know if the command was received by your vehicle.

**Mopar Owner Connect website:**

1. Log on to the Mopar Owner Connect website (moparownerconnect.com) using the username and password you used when registering your Uconnect Access system.
  - If you forgot your username or password, links are provided on the website to help you retrieve them.
2. If you have more than one vehicle registered into the Mopar Owner Connect website (moparownerconnect.com), select the vehicle you want to send the command by clicking on its image along the top.

- 
3. Beneath the image of a vehicle like yours, you will see a row of icons. To turn on the horn and lights, press the "trumpet icon." To turn off the horn and lights, press the "trumpet icon" again.

**NOTE:** A quicker way to turn off your Remote Horn and Lights would be to push the "Panic" button on your Key Fob if you are near the vehicle.

4. You will then be asked to enter your Uconnect Security PIN (this is the same 4-digit code established when you registered your Uconnect Access system). Please enter your Uconnect Security PIN.
5. A message will appear on the screen to let you know if the command was received by your vehicle.

**Uconnect Care:**

1. If you need to unlock the doors of your vehicle, contact Uconnect Care by calling:  
855-792-4241

**NOTE:** The Uconnect Care agents are trained to help you with unlocking of your door (for example, in an accidental lock-out). All other Remote Services should be performed via the Mopar Owner Connect website ([moparownerconnect.com](http://moparownerconnect.com)) or through the Uconnect Access App on your compatible device.

2. For security purposes, the Uconnect Care agent will verify your identity by asking for your 4-digit Uconnect Security PIN.
3. After providing your Uconnect Security PIN, you can ask them to lock or unlock your vehicle. The agent will send a command to your vehicle to get the task done.

**NOTE:** The Remote Horn and Lights feature is designed to be loud and get noticed. Please keep in mind the surroundings when using this feature.

---

## FAQs

- 1. How long does it take to sound my horn and flash the lights?** Depending on various conditions, it can take three minutes or more for the request to get through to your vehicle, although Uconnect is always striving to improve performance.
- 2. Which is faster, my Key Fob or the Uconnect Access App?** Your Key Fob will sound the horn and flash the lights quicker; however its range is limited.
- 3. Will my vehicle be safe if I lose my wireless device?** People sometimes lose their device, which is why security measures have been engineered into the Uconnect Access App. Asking for your username, password and Uconnect Security PIN help to ensure that nobody can access your vehicle if they happen to find your device.
- 4. How do I turn off the horn and lights after I turn them on?** By pressing the "horn icon" a second time on your Uconnect Access App, a second command will be sent to shutoff the horn and lights. Alternatively, if you are close enough to the vehicle you can use the Key Fob to turn off the horn and lights by pressing the red "Panic" button.
- 5. Why can't all devices use the Uconnect Access App?** The Uconnect Access App has been designed to work on most devices with the Apple and Android operating systems. The capabilities of these device allows us to remotely command your vehicle. Other operating systems may be supported in the future.

Your vehicle will send you an email alert if it senses a problem under the hood with one of your vehicles key systems. For further information go to the Mopar Owner Connect website [moparownerconnect.com](http://moparownerconnect.com).

---

#### **Pandora – If Equipped**

Pandora gives people the music and comedy they love anytime, anywhere. Personalized stations launch instantly, with the input of a favorite artist, track, comedian, or genre.

#### **Description**

Easily control your Pandora App through an intuitive interface via the vehicle touchscreen and steering wheel controls.

- Reduce the need to use your device to access Pandora so you can stay focused on driving.
- Launch Pandora using Voice Recognition (VR) via a button on the steering wheel.
- Pandora offers personalized radio based on your favorite artists, or songs and can create a custom station<sup>9</sup> playing similar music. Custom stations are created on the Pandora website or the mobile App.
- Listen to previously created stations in “shuffle” mode.
- For the best music experience, continuously personalize your music using the “Like” or “Dislike” buttons on the touchscreen whenever a particular song is played that you want to hear more or less of.
- Enjoy a higher quality of music by adjusting the Pandora settings.
- Customers can leverage an existing Pandora account, or set up a new account on the Pandora website at [pandora.com](http://pandora.com).

- Customers can also create a new Pandora account by clicking on a link from the Uconnect Access Via Mobile profile page during registration and setup.

Ensure that Via Mobile data has been turned on under "Settings" in the Uconnect Access App.

Each time you want to use a Via Mobile App in your vehicle, the Uconnect Access App must be running on your device and the device must be paired via Bluetooth.

A message will be displayed to remind you that Via Mobile Apps utilize the data plan on your connected device to provide content. Press "OK" to continue or the "X" to exit.

**NOTE:** Many devices have a limit to how much data they can utilize before incurring additional charges. The amount of data being used varies by device, service provider and specific App. Check your device service plan for more details.

#### Requirements

- Vehicle must be properly equipped with the Uconnect Access System.
- Your device must be compatible with the Uconnect Access App and properly connected to the vehicle.
- To perform updates to this application, if required, your vehicle must be connected to an operable 1X (voice/data) or 3G (data) network.
- Your device must be connected to a mobile network.
- Vehicle must be registered with Uconnect Access and have an active subscription that includes the applicable feature or App.
- Vehicle must be powered in the ON/RUN or ACC (Accessory) position with a properly functioning electrical system.
- Vehicle must be equipped with Uconnect 7A/7AN.

---

## FAQs

- 1. Why can't I get Pandora Via Mobile to work?** Here are some things to consider:
  - Check to ensure you have linked your Pandora account credentials with Uconnect Access. This is usually done during registration and setup. Then, check to ensure you have properly connected your compatible device to the vehicle touchscreen. The Uconnect Access App must be open and you must be logged in. A blue light indicates that it's providing data to the vehicle.
  - If you recently changed your password for Pandora, it may need to be updated on Mopar Owner Connect under the "Via Mobile" section.
- 2. If I changed my password for Pandora, do I have to update it with Uconnect Access?** Yes. Visit [moparownerconnect.com](http://moparownerconnect.com), log in, and click on Via Mobile.
- 3. How do I set up a Pandora account?** You can create an account with Pandora by visiting [pandora.com](http://pandora.com). To make changes to an existing Pandora account, visit the Pandora website.
- 4. Can I create a Pandora account during Uconnect Access registration and setup?** There is a link from the Via Mobile profile page where the customer can go to the Pandora website to create a new account.

- 
5. **Can I customize my Pandora stations?** The “Thumbs up” and “Thumbs down” buttons on the touchscreen are used to personalize stations based on the currently playing track. Give a track the “thumbs up” to hear more tracks with similar qualities, or “thumbs down” to remove that track from the station and avoid tracks with similar qualities.
  6. **Can I create a station from within the vehicle using the vehicle touchscreen?** Custom content can only be created from the Pandora website or the Pandora mobile App.
  7. **How do I improve the sound quality within the App and how will this affect the experience?** The default setting is 32 kbps. Users can increase to 64 kbps by selecting “Pandora Settings” once within the App (icon looks like two gears). This will double the impact to the user’s data plan and is subject to more playbacks/buffering.
  8. **How do I block explicit content?** Customers have the ability to block explicit content by adjusting their settings through the Pandora website at [pandora.com](http://pandora.com) or through the Pandora mobile App.
  9. **Should I have the Pandora App downloaded to my device to use Pandora Via Mobile?** You do not need to have the Pandora App on your device to use Pandora Via Mobile. The Uconnect Access App is required, however.
  10. **How do I know how much data is being used?** Uconnect Access Via Mobile uses your device’s existing data plan to stream content. Data usage varies by phone/device, content (e.g. videos), high quality audio and several other factors. Please refer to your device carrier for specific details.



---

### **iHeartRadio – If Equipped**

iHeartRadio provides instant access to more than 1,500 live radio stations from across the country and allows listeners to create custom music stations inspired by their favorite artists or songs.

#### **Description**

- Easily control your iHeartRadio App through an intuitive interface via the touchscreen and steering wheel controls.
- Reduce the need to use your device to access iHeartRadio so you can stay focused on driving.
- Leverage an existing iHeartRadio account, or set up a free account at iHeartRadio.com.
- Customers can also create a new iHeartRadio account by clicking on a link from the Uconnect Access Via Mobile profile page during registration and set-up.

- Launch iHeartRadio using Voice Recognition (VR) or through touchscreen controls.

- Browse, listen, and save radio stations for easy access.

- Browse and create custom stations (e.g. Zac Brown Band).

- Create a new custom station based on what's currently playing with a single button press.

- Steering wheel controls supported for preset jump and "next track" (until reaching maximum skips).

- Listen to live radio stations from across the U.S.

- Continually refine stations to your liking using the "Thumbs Up" and "Thumbs Down" buttons.

Ensure that Via Mobile data has been turned on under "Settings" in the Uconnect Access App.

---

Each time you want to use a Via Mobile App in your vehicle, the Uconnect Access App must be running on your device and the device must be paired via Bluetooth.

A message will be displayed to remind you that Via Mobile Apps utilize the data plan on your connected device to provide content. Press "OK" to continue or the "X" to exit.

**NOTE:** Many devices have a limit to how much data they can utilize before incurring additional charges. The amount of data being used varies by device, service provider and specific App. Check your device service plan for more details.

**Requirements**

- Vehicle must be properly equipped with the Uconnect Access System.

- Your device must be compatible with the Uconnect Access App and properly connected to the vehicle.
- To perform updates to this application, if required, your vehicle must be connected to an operable 1X (voice/data) or 3G (data) network.
- Your device must be connected to a mobile network.
- Vehicle must be registered with Uconnect Access and have an active subscription that includes the applicable feature or App.
- Vehicle must be powered in the ON/RUN or ACC (Accessory) position with a properly functioning electrical system.
- Vehicle must be equipped with Uconnect 7A/7AN.

---

#### Tips and Shortcuts

- Continually refine stations to your liking using the “Thumbs Up” or “Thumbs Down” buttons.
- Press the “HOLD to Set” button on the top of the screen for three seconds to add current station as a preset. Set up to 10 presets.

**NOTE:** Presets must be set from the music player screen.

- Use the “Discovery Tuner” button on the touchscreen to change the variety of the station you are listening to. Set the tuner to “Familiar,” “Mixed,” and “Less Familiar”
  - Familiar – The most popular songs for this station.
  - Mixed – Additional artists and songs, for increased variety.
  - Less Familiar – The widest variety of music, for the most discovery.

#### FAQs

1. **Why can't I get iHeartRadio Via Mobile to work?**  
Here are some things to consider:

- Check to ensure you have linked your iHeartRadio account credentials with Uconnect Access. This is usually done during registration and setup. Then, check to ensure you have properly connected your compatible device to the radio. The Uconnect Access App must be open and you must be logged in. A blue light indicates that it's providing data to the vehicle.
- If you recently changed your password for iHeartRadio, it may need to be updated on Mopar Owner Connect under the “Via Mobile” section.

- 
2. **How do I personalize the music played on my custom station?** Press the “thumbs up” icon when music is played that you like, and the “thumbs down” icon when music is played that you do not like. Future music played will give you more of the music with characteristics that meet your preferences. The more often you use Thumb Up and Thumbs Down, the better your station becomes.
  3. **How do I know when iHeartRadio is playing one of the songs I indicated I “liked”?** The Thumbs Up button on the radio touchscreen will appear in red when playing a song you previously liked.
  4. **If I changed my password for iHeartRadio, do I have to update it with Uconnect Access?** Yes. Visit Mopar Owner Connect [moparownerconnect.com](http://moparownerconnect.com), log in, and click on Via Mobile.
  5. **Can I create an iHeartRadio account during Uconnect Access registration and set-up?** There is a link from the Via Mobile profile page where the customer can go to iHeartRadio’s website to create a new account.
  6. **How do I set up an iHeartRadio account?** You can create or make changes to an existing iHeartRadio account by visiting their website at [iHeartRadio.com](http://iHeartRadio.com).
  7. **Can I create custom content from within the vehicle?** Yes. From the iHeartRadio Home screen, press “Create Station.”
  8. **Should I have the iHeartRadio App downloaded to my device to use Uconnect Access Via Mobile?** You do not need to have the iHeartRadio App on your device in order to use iHeartRadio Via Mobile. The Uconnect Access App is required, however.

---

9. **How do I know how much data is being used?** Uconnect Access Via Mobile uses your device's existing data plan to stream content. Data usage varies by phone/device, content (e.g. videos), high quality audio and several other factors. Please refer to your device carrier for specific details.

10. **How do I block explicit content?** Customers have the ability to block explicit content within the iHeartRadio Settings menu. Go to iHeartRadio Home and select the "gear" icon.

**Slacker Radio – If Equipped**

Enjoy millions of songs and hundreds of handcrafted stations.

**Description**

· Easily control your Slacker Radio App through an intuitive interface via the vehicle touchscreen and steering wheels controls.

· Reduce the need to use your device to access Slacker Radio so you can stay focused on driving.

· Launch Slacker Radio using Voice Recognition (VR) or through touchscreen controls.

· Leverage existing Slacker Radio account. Customer can set up a free or paid account on the Slacker Radio website at [slacker.com](http://slacker.com).

· Customers can also create a new Slacker Radio account from the Uconnect Access Via Mobile profile page during registration and setup.

· Browse and listen to stations by selecting from hundreds of expert-programmed stations or tune into entertainment, sports and news stations. You can also access Recently Played and stations you've previously created at My Station (browse and listen to previously created playlists for premium account only).

- Listen to customized stations based on your favorite artists and music.
- Continually refine stations to your liking using the "Heart," "Ban Artist" or "Ban Song" controls.

Ensure that Via Mobile data has been turned on under "Settings" in the Uconnect Access App.

Each time you want to use a Via Mobile App in your vehicle, the Uconnect Access App must be running on your device and the device must be paired via Bluetooth.

A message will be displayed to remind you that Via Mobile Apps utilize the data plan on your connected device to provide content. Press "OK" to continue or the "X" to exit.

**NOTE:** Many devices have a limit to how much data they can utilize before incurring additional charges. The amount of data being used varies by device, service provider and specific App. Check your device service plan for more details.

Your chosen station will play. Use the "Heart" and "Ban" buttons on the touchscreen to quickly and easily customize your experience. Like a song? Heart it to hear it more often. Dislike a song? Ban it and the song or artist will be removed from your station. Slacker Radio makes it easy and personal.

#### **Requirements**

- Vehicle must be properly equipped with the Uconnect Access System.
- Your device must be compatible with the Uconnect Access App and properly connected to the vehicle.

- To perform updates to this application, if required, your vehicle must be connected to an operable 1X (voice/data) or 3G (data) network.
- Your device must be connected to a mobile network.
- Vehicle must be registered with Uconnect Access and have an active subscription that includes the applicable feature or App.
- Vehicle must be powered in the ON/RUN or ACC (Accessory) position with a properly functioning electrical system.
- Vehicle must be equipped with Uconnect 7A/7AN.

#### FAQs

##### 1. Why can't I get Slacker Radio Via Mobile to work?

Here are some things to consider:

- Check to ensure you have linked your Slacker Radio account credentials with Uconnect Access. This is

usually done during registration and setup. Then, check to ensure you have properly connected your compatible device to the vehicle touchscreen. The Uconnect Access App must be open and you must be logged in. A blue light indicates that it's providing data to the vehicle.

- If you recently changed your password for Slacker Radio, it may need to be updated on Mopar Owner Connect under the "Via Mobile" section.

##### 2. How do I customize the music being played on the station?

As you listen to music, use the button on the touchscreen to confirm your preference to the music currently being played. Press the "like" icon to confirm what you want to hear more of, and the "dislike" icon to eliminate what you do not want to hear.

- 
3. **How do I know when Slacker Radio is playing one of the songs I indicated I “liked”?** The heart button on the touchscreen will appear in yellow when playing a song you previously liked. When you see it appear in yellow, you do not need to “like” it again, and you know that Slacker Radio is playing your preferences.
  4. **Can I ban a particular artist from playing in Slacker Radio?** Yes, Slacker Radio gives you the capability to ban all songs from a particular artist or song by using the “dislike” button on the touchscreen.
  5. **Can I create a Slacker Radio account during Uconnect Access registration and set-up?** There is a link from the Via Mobile profile page where the customer can go to Slacker Radio’s website to create a new account.
  6. **How do I set up a Slacker Radio account?** You can create an account with Slacker Radio by visiting their website at [slacker.com](http://slacker.com). To make changes to an existing Slacker Radio account, visit Slacker Radio’s website.
  7. **Can I create custom content from within the vehicle?** To create a custom station, visit Slacker Radio’s website at [slacker.com](http://slacker.com) or the Slacker Radio mobile App. Custom content cannot be created from within the vehicle.
  8. **Should I have the Slacker Radio App downloaded to my device to use Uconnect Access Via Mobile?** You do not need to have the Slacker Radio App on your device to use Slacker Radio Via Mobile. However, the Uconnect Access App is required.



---

**9. How do I know how much data is being used?**

Uconnect Access Via Mobile uses your device's existing data plan to stream content. Data usage varies by phone/device, content (e.g. videos), high quality audio and several other factors. Please refer to your device carrier for specific details.

**Aha by HARMAN – If Equipped**

Aha makes it easy to instantly access your favorite Web content on the go. Choose from over 40,000+ stations spanning internet radio, personalized music, news, entertainment, hotels, weather, audiobooks, Facebook, Twitter, and more.

**Description**

Aha lets you easily access and organize your favorite web content on your device, then seamlessly integrates the experience with your vehicle.

- Listen to audio updates from Facebook or Twitter (Vehicle must be registered with Uconnect Access).
- Organize your favorite content from the web into personalized on-demand radio stations.
- Aha gives customers the flexibility to create up to 30 pre-set stations from within the vehicle, on the Aha website (aharadio.com), or through the Aha mobile App.
- "Like" and "Dislike" buttons on the touchscreen are available to refine songs being played on the station.
- Ability to perform location-based local searches (e.g. "Hungry" and "Coffee") and route to a point of interest by sending the address to the navigation system (if nav equipped).
- Real-time traffic reports and audio books (read aloud).

- 
- Access your favorite podcasts, internet radio, on-demand music, traffic reports and restaurant recommendations.
  - News, sports, talk, social, comedy and special interest podcasts.

Ensure that Via Mobile data has been turned on under "Settings" in the Uconnect Access App.

Each time you want to use a Via Mobile App in your vehicle, the Uconnect Access App must be running on your device and the device must be paired via Bluetooth.

A message will be displayed to remind you that Via Mobile Apps utilize the data plan on your connected device to provide content. Touch "OK" to continue or the "X" to exit.

**NOTE:** Many devices have a limit to how much data they can utilize before incurring additional charges. The amount of data being used varies by device, service provider and specific App. Check your device service plan for more details.

You can associate your Aha account with your personal Facebook, Twitter and Slacker accounts. If you have the Aha App downloaded to your device visit the Aha settings screen and look for "Associate Accounts." You can also associate your Aha account from [aharadio.com](http://aharadio.com).

#### **Requirements**

- Vehicle must be properly equipped with the Uconnect Access System.
- Your device must be compatible with the Uconnect Access App and properly connected to the vehicle.

- 
- To perform updates to this application, if required, your vehicle must be connected to an operable 1X (voice/data) or 3G (data) network.
  - Your device must be connected to a mobile network.
  - Vehicle must be registered with Uconnect Access and have an active subscription that includes the applicable feature or App.
  - Vehicle must be powered in the ON/RUN or ACC (Accessory) position with a properly functioning electrical system.
  - Vehicle must be equipped with Uconnect 7A/7AN.

#### FAQs

1. **Why can't I get Aha Via Mobile to work?** Here are some things to consider:
  - Check to ensure you have linked your Aha account credentials with Uconnect Access. This is usually

done during registration and setup. Then, check to ensure you have properly connected your compatible device to the vehicle touchscreen. The Uconnect Access App must be open and you must be logged in. A blue light indicates that it's providing data to the vehicle.

- If you recently changed your password for Aha, it may need to be updated on Mopar Owner Connect under the "Via Mobile" section.

2. **How does Aha help refine my music options?** It organizes your favorite content into personalized on-demand radio stations. You can access podcasts, internet radio, personalized traffic reports and even restaurant recommendations. It will assemble content for you based on your use of the "like" and "dislike" buttons on the touchscreen.

- 
3. **Where does the search function search from?** The search function will provide results based on the location of your vehicle. As you drive, the search results will change to reflect your vehicle's current location.
  4. **How do I sync my Aha account with Facebook, Twitter and Slacker?** Associate your Aha account with Facebook, Twitter and Slacker services at [aharadio.com](http://aharadio.com), or from the Aha device App. From the Aha device App, visit the Aha settings screen and look for "Associate Accounts."
  5. **If I enter personalized preferences on the web, will it also save my setting when I am in the vehicle?** Yes, your personalized selections are saved to a common area, so they will be reflected wherever you access Aha in the vehicle on the vehicle touchscreen, device or the Aha website [aharadio.com](http://aharadio.com).
  6. **Why can't I get Aha Via Mobile to work?** Ensure you have registered for Uconnect Access and associated your Aha account credentials with Uconnect Access. This is done during registration and setup process. Then, ensure you have properly connected your compatible device to the vehicle touchscreen. The Uconnect Access App must be open. A blue light indicates that it's providing data to the vehicle.
  7. **If I changed my password for Aha, do I have to update it with Uconnect Access?** Yes. Visit [moparownerconnect.com](http://moparownerconnect.com), log in, and click on Via Mobile.
  8. **How do I set up an Aha account?** You can create an account with Aha by visiting [aharadio.com](http://aharadio.com). To make changes to an existing Aha account, visit the Aha website.

- 
9. **Can I create an Aha account during Uconnect Access registration and setup?** There is a link from the Via Mobile profile page where the customer can go to the Aha website to create a new account.
10. **How do I block explicit content?** By default Aha automatically filters and blocks explicit content for you. If you would like to enable the ability to listen to explicit podcasts, as well as comedy or user-generated shouts, you must visit the "Settings" screen and switch the "Allow Explicit Content" setting to ON.
11. **Should I have the Aha App downloaded to my device to use Aha Via Mobile?** You do not need to have the Aha App on your device to use Aha Via Mobile. The Uconnect Access App is required.
12. **How do I know how much data is being used?** Uconnect Access Via Mobile uses your device's existing data plan to stream content. Data usage varies by phone/device, content (e.g. videos), high quality audio and several other factors. Please refer to your device carrier for specific details.
- To remove your Uconnect Access account or cancel your Uconnect Access subscription go to the Mopar Owner Connect website ([moparownerconnect.com](http://moparownerconnect.com)). On Mopar Owner Connect, go to Uconnect Store, and click on "Remove My Vehicle."

---

For further assistance call Uconnect Care at:  
855-792-4241

You can also phone Uconnect Care directly at:  
855-792-4241

You can easily add vehicles to your Uconnect Access account online by going to the Mopar Owner Connect website ([moparownerconnect.com](http://moparownerconnect.com)) > Dashboard > Add a Vehicle. Connected vehicles must follow the secure registration process to be added to an account.

For additional information about Uconnect Access, push the ASSIST button on the rear view mirror and then select Uconnect Care on your in-vehicle touchscreen to contact Uconnect Care. Your call will be directed to a Uconnect Care agent or held in a queue until an agent is available or go to the Mopar Owner Connect website ([moparownerconnect.com](http://moparownerconnect.com)).

Central Time

- Monday through Friday - 7:00 am to 7:00 pm
- Saturday and Sunday - 8:00 am to 4:00 pm

1. **How Do I Register For My Uconnect Access Account?** Press the "Apps" button on the in-vehicle touchscreen, then select Uconnect Registration.
2. **Why Do I Need An Email Address?** Without an email address, customers cannot register for Uconnect Access. Customers need to register so they can subscribe to receive additional services and create a Uconnect Security PIN for remote command requests.

- 
3. **How Do I Create A Uconnect Security PIN?** Set up your Uconnect Security PIN during the registration process. The Uconnect Security PIN will be required to authenticate you when accessing your account via Uconnect Care or performing any remote services such as Remote Door Lock/Unlock, Remote Horn & Lights, or Remote Vehicle Start.
  4. **What If I Forgot My Uconnect Security PIN?** If you've already registered and forgot your Uconnect Security PIN, you can reset the pin by selecting Edit Profile on the Mopar Owner Connect website [moparownerconnect.com](http://moparownerconnect.com).  
you can also call Uconnect Care at:  
1-855-792-4241
  5. **How Do I Create A Uconnect Payment PIN?** Log into the Mopar Owner Connect website [moparownerconnect.com](http://moparownerconnect.com) with your username and password. Select Edit Profile > Uconnect Payment Account to create an account (and PIN) (if you have a Uconnect Access equipped vehicle).
  6. **What Is A Uconnect Payment PIN?** A Uconnect Payment PIN is a unique 4-digit code that you create to gain access to your payment information - your credit cards, billing address, payment history and more. It is required in order to purchase Uconnect Access packages and Apps.
  7. **What If I Forgot My Uconnect Payment PIN?** The next time you are asked for your Uconnect Payment PIN, select "Forgot PIN?" and follow the steps to reset it.

- 
8. **How Do I Update My Uconnect Payment Account Address?** Your Uconnect Payment Account address must be updated online only: Login to the Mopar Owner Connect website [moparownerconnect.com](http://moparownerconnect.com), and select Edit Profile > Uconnect Payment Account.
  9. **How Do I Update My Uconnect Profile?** Your name, home address, phone number, email address and Uconnect Security PIN can be updated online on the Mopar Owner Connect website [moparownerconnect.com](http://moparownerconnect.com).
    - a. Log in to the Mopar Owner Connect website [moparownerconnect.com](http://moparownerconnect.com) then select Edit Profile to edit your personal information.
    - b. Make your edits and click "Save."
  10. **Can I Try Apps, Features Or Packages Before I Buy Them?** Your new vehicle purchase may have come with an included trial period for certain Apps and services.

For more information please contact Uconnect Care at:  
1-855-792-4241
  11. **Can I Access Every App And Service While Driving?** No, some applications and services are not available while driving. For your own safety, it is not possible to use some of the touchscreen features while the vehicle is in motion (e.g. key pad).
  12. **Can I Access The Uconnect Store While I Am Driving?** No, some applications and services are not available while driving. Only use Uconnect applications and services when the vehicle is parked in a safe location.




- 
13. **How Do I Know When A New App, Feature Or Package Is Offered?** Go to Uconnect Store to check for updated features, packages and Apps.
  14. **Will I Be Notified When My Subscription Is Expired Or Will It Automatically Renew?** There is no auto-renewal feature currently offered. You can find the expiration dates for all of your App and package subscriptions from your in-vehicle touchscreen, select Apps > Uconnect Store > My Apps.
  15. **How Do I Manage My Notification Preferences?** Go to Edit Profile > Uconnect Notifications on the Mopar Owner Connect website [moparownerconnect.com](http://moparownerconnect.com).
  16. **Do I Receive A Purchase Confirmation?** Yes. You will receive a purchase confirmation email any time you renew your Uconnect Access subscription or purchase WiFi Hotspot service.
  17. **How Do I Purchase A Subscription Or WiFi Hotspot?** From your in-vehicle touchscreen:
    - a. Select Apps > Uconnect Store.
    - b. Choose a package or service.
    - c. Follow the steps to enter your Uconnect Payment PIN and complete the process.

You can also go to the Uconnect Store online at Mopar Owner Connect [moparownerconnect.com](http://moparownerconnect.com), select the Shop tab, then Uconnect Store.

For additional support please contact Uconnect Care at:  
1-855-792-4241
  18. **How Do I Update My Credit Card Information?** Login to the Mopar Owner Connect website [moparownerconnect.com](http://moparownerconnect.com), and select Edit Profile, then select Uconnect Payment Account.

- 
19. **How Do I Find Out How Much Longer I Have On My Subscription?** From your vehicle touchscreen > select Apps > Uconnect Store > My Apps and choose a subscription to view its expiration date. When your subscription is about to expire you will receive an email notification.
  20. **Which Apps Are Included With My Vehicle?** Go to Uconnect Store > My Apps to see Apps currently available on your vehicle.
  21. **If I Delete/Remove A Package From My Screen, Does It Cancel My Subscription?** Yes, this removes the subscription of the selected package.
  22. **Can I Get A Refund If I Have Not Used The Entire Subscription?** No.
  23. **Can I Cancel A Subscription Before It Expires?** Yes, but your subscription will still be active until the expiration date. If you subscribe to another package, the new subscription will start immediately.
  24. **Do I Have To Keep My Vehicle On During The App Download Process?** Yes.
  25. **How Do I Re-Initiate A Download App If There Was An Error?** If you're having issues with an App you can reinstall it. This returns the App to its original state which usually fixes the problem. This does not affect your Uconnect subscriptions or account information. To reinstall an App from the in-vehicle touchscreen, press Apps > Uconnect Store > My Apps > Settings > Reinstall Apps > Continue.

- 
26. **What Should I Do If I Want To Sell My Vehicle?**  
Before your vehicle is sold to a new owner, you'll want to remove your account information. This process removes all personal information and returns the Uconnect system to its original factory settings.  
To remove your account information from the Uconnect system contact Uconnect Care at:  
1-855-792-4241
27. **What If I Forgot To Remove My Account Information Before I Returned My Lease Vehicle Or Sold It?**  
Don't worry - your information is secure.  
Contact Uconnect Care at:  
1-855-792-4241
28. **I Am Trading My Vehicle In. Can I Transfer Apps To My New Vehicle If I Have An Active Subscription?** No.
29. **What will happen if there is not an operable 1X (voice/data) or 3G (data) network connection?** The 9-1-1 and ASSIST buttons will NOT function if you are not connected to an operable 1X (voice/data) or 3G (data) network. Other Uconnect services will only be operable if your Uconnect Access service is active and you are connected to an operable 1X (voice/data) or 3G (data) network.
30. **How will I know if my vehicle is not connected to an operable 1X (voice/data) or 3G (data) network?** The signal strength bars on the "Apps" button on the touchscreen will show a single bar and a prohibition symbol  to indicate your vehicle is not connected to an operable 1X (voice/data) or 3G (data) network.

#### Privacy Practices

For more information on how FCA US LLC and Sprint may use your information, please see the Uconnect

privacy policy at [driveuconnect.com/privacy/](http://driveuconnect.com/privacy/) and the FCA US LLC privacy statement at [chrysler.com/universal/privacy.html](http://chrysler.com/universal/privacy.html).

**WARNING!**

**ALWAYS obey traffic laws and pay attention to the road. Some Uconnect Access services, including 9-1-1 and Assist, will NOT work without an operable 1X (voice/data) or 3G (data) network connection.**

**NOTE:** Your vehicle may be transmitting data as authorized by the subscriber.

Ensure that all persons read this manual carefully before using the radio system. It contains instructions on how to use the system in a safe and effective manner.

- Glance at the screen only when safe to do so. If prolonged viewing of the screen is required, park in a safe location and set the parking brake.
- Stop use of the system immediately if a problem occurs. Failure to do so may cause injury or damage to the product. Return it to your authorized dealer to repair.
- Ensure the volume level of the system is set to a level that still allows you to hear outside traffic and emergency vehicles.
- Read all instructions in this manual carefully before using your system to ensure proper usage!
- Your system is a sophisticated electronic device. Do not let young children use your system.

- 
- Permanent hearing loss or damage may occur if you play your music or otherwise operate the system at loud volumes. Exercise caution when setting the volume on your system.

**NOTE:** Many features of this system are speed dependent. For your own safety, it is not possible to use some of the touchscreen features while the vehicle is in motion.

- Keep drinks, rain, and other sources of moisture away from your system. Besides damage to your system, moisture can cause electric shocks as with any electronic device.

#### **Touchscreen**

- Do not touch the screen with any hard or sharp objects (pen, USB stick, jewelry, etc.) which could scratch the touchscreen surface!

- Do not spray any liquid or caustic chemicals directly on the screen! Use a clean and dry micro fiber lens cleaning cloth in order to clean the touchscreen.

- If necessary, use a lint-free cloth dampened with a cleaning solution, such as isopropyl alcohol, or an isopropyl alcohol and water solution ratio of 50:50. Be sure to follow the solvent manufacturer's precautions and directions.

#### **Disc Drive**

- Do not insert any damaged, warped, scratched or dirty discs into the disc player.
- Discs that have been modified with an adhesive label should not be used in the CD/DVD player.
- Do not insert more than one disc at a time into the drive slot.

---

**FCC Declaration**

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Modifications not expressly approved by the radio manufacturer could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in an installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Increase the separation between the equipment and receiver.

Consult the dealer or an experienced radio technician for help.

---

### Safety Information

#### Exposure to Radio Frequency Radiation

The radiated output power of the internal wireless radio is far below the FCC radio frequency exposure limits.

The internal wireless radio operates within guidelines found in radio frequency safety standards and recommendations, which reflect the consensus of the scientific community. The radio manufacturer believes the internal wireless radio is safe for use by consumers. The level of energy emitted is far less than the electromagnetic energy emitted by wireless devices such as mobile devices.

- More than one device can be paired to your vehicle. The connected device with the highest priority will be used. To transition between devices, Select Phone > Settings, then press the desired device.
- Multiple devices may be connected at one time. For example, a device can be paired and connected for hands-free calling and texting, while a USB media source is connected for audio. However, only one Bluetooth connection can be used at a time.

- 
- Device calls will always have the highest priority regardless of which connection is active (only the 9-1-1 Call and Assist will have a higher priority than the device). For example, if an App is launched and the user receives a call, the user will be exited out of the App and returned to the App when the call ends.
  - After all devices are connected/paired, when switching to a different audio source, audio will auto-play from the new source.
  - Current audio (AM/FM/SXM/AUX) will continue to play when switching to a non-media type App.
  - Current audio (AM/FM/SXM/AUX) is muted during Assist and 9-1-1 Call.
  - Device calls will mute all audio except for NAV prompts if guidance is currently active (audio will resume after device call is ended).
  - All secondary incoming device calls will be treated similar to "call waiting" (except 9-1-1 Call).
  - When connecting a second device via USB, that device will have priority and auto play accordingly. A device that is already paired/connected will still be available for hands-free calling and texting.
  - Incoming calls received while entering a nav destination (before pressing "Go") will cancel the nav entry. The user is required to start over when the device call has ended.





---

## UCONNECT 8.4A/8.4AN

### CONTENTS

m UCONNECT 7A/7AN SYSTEM.....	100	□ USB/iPod Mode.....	120
m PERSONALIZED MENU BAR.....	101	□ AUX Mode.....	121
m RADIO MODE.....	102	□ SD Card Mode – If Equipped.....	122
□ Radio Controls.....	102	□ Bluetooth Mode.....	124
□ Setting Presets.....	105	m UCONNECT PHONE.....	126
□ SiriusXM Satellite Radio Mode – If Equipped.....	106	□ Overview.....	126
□ Audio.....	114	□ Operation.....	129
m MEDIA MODE.....	118	□ Phone Call Features.....	139
□ Disc Mode – If Equipped.....	118	□ Advanced Phone Connectivity.....	144

---

□ Things You Should Know About Your Uconnect Phone.....	145	□ Accessing The System From The Uconnect Theater Rear Screens .....	215
m NAVIGATION.....	151	□ Pairing The Remote.....	217
□ Main Menu .....	151	□ Unpairing The Remote .....	217
□ Where To?.....	153	□ Media Sources .....	218
□ View Map .....	190	□ Uconnect Theater Remote Control.....	219
□ Information.....	202	□ Uconnect Theater Home Screen And Controls .....	221
□ Emergency.....	205	□ Play A DVD/Blu-ray Or USB Media File From Uconnect Radio.....	223
□ Map Updates.....	211	□ Blu-ray Controls - Disc Specific Functions .....	226
m UCONNECT THEATER – If Equipped.....	212	□ Uconnect Theater Apps.....	227
□ Getting Started .....	212	□ Using The Rear Video USB Port.....	229
□ Accessing The System From The Uconnect Radio .....	213	□ Play Video Games .....	230
□ Uconnect Theater Controls.....	214	□ Headphones Operation .....	231

<ul style="list-style-type: none"> <li>□ Disc Menu ..... 234</li> <li>□ Listening To Audio With The Screen Closed . . .234</li> <li>□ Rear Climate Controls ..... 235</li> <li>□ BD And DVD Region Codes .....236</li> <li>□ Product Agreement ..... 239</li> <li>□ General Information .....242</li> </ul>	<ul style="list-style-type: none"> <li>m SiriusXM TRAVELINK – U.S. MARKET ONLY (7AN ONLY) ..... 243</li> <li>m SECURITY FEATURES ..... 244 <ul style="list-style-type: none"> <li>□ Roadside Assistance – If Equipped ..... 244</li> <li>□ 9-1-1 Call – If Equipped ..... 245</li> </ul> </li> <li>m REMOTE SERVICE FEATURES ..... 251</li> </ul>
<ul style="list-style-type: none"> <li>m SiriusXM TRAFFIC – U.S. MARKET 7AN ONLY ..... 243</li> </ul>	



### 1. Radio

Press the "Radio" button on the touchscreen to enter Radio Mode. The different tuner modes; AM, FM and SXM can be selected by pressing the corresponding buttons on the touchscreens in Radio Mode.

### 2. Media

Press the "Media" button on the touchscreen to access media sources such as: Disc (If Equipped), USB Device, AUX, Bluetooth, and SD Card (If Equipped) as long as the requested media is present.

### 3. Controls

Press the "Controls" button on the touchscreen to adjust the auto-dimming mirror, heated & vented seats, heated & vented steering wheel (If Equipped).

### 4. Apps

Press the "Apps" button on the touchscreen to access Smartphone and Connected vehicle options.

### 5. Climate

Refer to Climate Controls in your vehicle's Owner's Manual for further details.

---

**6. Nav – If Equipped**

Press the “Nav” button on the touchscreen to access the Navigation feature. Refer to the Navigation section in this manual for further details.

**7. Phone**

Press the “Phone” button on the touchscreen to access the Uconnect Phone feature.

**8. Enter/Browse & Tune/Scroll**

Push the ENTER/BROWSE button to accept a highlighted selection on the screen. Rotate the TUNE/SCROLL rotary knob to scroll through a list or tune a radio station.

**9. Back**


Push the BACK button to return to a previous menu or screen.

**10. Volume/Mute**

Rotate the rotary knob to adjust the Volume. Push the VOLUME/MUTE button to mute the system.

The Uconnect features and services in the main menu bar are easily changed for your convenience. Simply follow these steps:



1. Press the “Apps”  button to open the App screen.
2. Press and hold, then drag the selected App to replace an existing shortcut in the main menu bar.  
The replaced shortcut will now be an active App/shortcut on the main menu bar.

The radio is equipped with the following modes:

- AM
- FM
- SiriusXM Satellite Radio (if equipped)

Press the RADIO button on the touchscreen, bottom left corner, to enter the Radio Mode. The different tuner modes; AM, FM, and SXM, can then be selected by pressing the corresponding buttons in the Radio mode.

**VOLUME/MUTE Control**

Push the VOLUME/MUTE control knob to mute the radio. Push the VOLUME/MUTE control knob a second time to unmute the radio.

---

The electronic volume control turns continuously (360 degrees) in either direction, without stopping. Turning the VOLUME/MUTE control knob clockwise increases the volume, and counterclockwise decreases it.

**TUNE/SCROLL Control**

When the audio system is turned on, the sound will be set at the same volume level as last played.

Turn the rotary TUNE/SCROLL control knob clockwise to increase or counterclockwise to decrease the radio station frequency. Push the ENTER/BROWSE button to choose a selection.

**Screen Close**

The X button on the touchscreen at the top right, provides a means to close the Direct Tune Screen. The Direct Tune Screen also auto closes if no activity occurs within 10 seconds.

**HD Radio (7AN Only)**

HD Radio technology (available on Uconnect 7AN in the U.S. market) works similar to conventional radio except it allows broadcasters to transmit a high-quality digital signal. With an HD radio receiver, the listener is provided with a clear sound that enhances the listening experience. HD radio can also transmit data such as song title or artist.

**Seek And Direct Tune Functions**

The Seek Up and Down functions are activated by pressing the double arrow buttons on the touchscreen to the right and left of the radio station display, or by pressing the left "Steering Wheel Audio Control" (if equipped) up or down.

**Seek Up ►►**


Press and release the "Seek Up" ►► button on the touchscreen to tune the radio to the next listenable




---

station or channel. During a Seek Up function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.


**Fast Seek Up**

Press and hold the “Seek Up”  button on the touchscreen to advance the radio through the available stations or channels at a faster rate, the radio stops at the next available station or channel when the button on the touchscreen is released.

**Seek Down** 

Press and release the “Seek Down”  button on the touchscreen to tune the radio to the next listenable station or channel. During a Seek Down function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

**Fast Seek Down**

Press and hold the “Seek Down”  button on the touchscreen to advance the radio through the available stations or channel at a faster rate, the radio stops at the next available station or channel when the button on the touchscreen is released.


**Direct Tune**

Press the “Tune” button on the touchscreen located at the bottom of the radio screen. The Direct Tune button on the touchscreen is available in AM, FM and SXM radio modes and can be used to direct tune the radio to a desired station or channel.

Press the available number button on the touchscreen to begin selecting a desired station. Once a number has been entered, any numbers that are no longer possible (stations that cannot be reached) will become deactivated/grayed out.

---

**Undo**

You can backspace an entry by pressing the bottom left "Undo" button or the  button on the touchscreen.

**GO**

Once the last digit of a station has been entered, the DIRECT TUNE screen will close and the system will automatically tune to that station.

The selected Station or Channel number is displayed in the Direct Tune text box.

The Presets are available for all Radio Modes, and are activated by pressing any of the six "Preset" buttons on the touchscreen, located at the top of the screen.

When you are receiving a station that you wish to commit into memory, press and hold the desired numbered button on the touchscreen for more than two seconds or until you hear a confirmation beep.

The Radio stores up to 12 presets in each of the Radio modes. A set of 6 presets are visible at the top of the radio screen.

You can switch between the two radio presets by pressing the "arrow button" located in the upper right of the radio touchscreen.

**Browse In AM/FM**

When in either AM or FM, the Browse Screen provides a means to edit the Presets List and is entered by pushing the ENTER/BROWSE button.

---

**Scrolling Preset List**

Once in the Browse Presets screen, you can scroll the preset list by rotation of the TUNE/SCROLL knob, or by pressing the “Up and Down” arrow keys, located on the right of the screen.

**Preset Selection From List**

A Preset can be selected by pressing any of the listed Presets, or by pushing the ENTER/BROWSE button on the TUNE/SCROLL knob to select the currently highlighted Preset.

When selected, the radio tunes to the station stored in the Preset and returns to the main radio screen.

**Deleting Presets**

A Preset can be deleted in the Presets Browse screen by pressing the “Trash Can” icon for the corresponding Preset.

**Return To Main Radio Screen**

You can return to the Main Radio Screen, by pressing the “X” button on the touchscreen when in the Browse Presets screen.

SiriusXM Satellite Radio uses direct satellite-to-receiver broadcasting technology to provide clear, coast to coast radio content. SiriusXM is a subscription based service.

**SiriusXM All Access Package**

All satellite radio equipped vehicles come with a one year trial to the SiriusXM All Access package, providing over 160 channels of the best programming for all the places life takes you.

- In your vehicle – You’ll get every channel available on your radio, including all the premium programming like Howard Stern, every NFL game, every MLB game, every NASCAR race, Oprah Radio, and more.

---

· On the go — With a SiriusXM Internet Radio subscription included with the All Access trial, you'll get SiriusXM on your computer, smartphone, or tablet. Including:

- A huge On Demand catalog
- Xtra Channels featuring SiriusXM Latino—a collection of Spanish-language channels
- MySXM—allowing you to personalize your favorite music channels

Go to [siriusxm.com/getallaccess](http://siriusxm.com/getallaccess) for more information

SiriusXM services require subscriptions, sold separately after the 12-month trial included with the new vehicle purchase. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call SiriusXM at 866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com). All fees and programming subject

to change. Our satellite service is available only to those at least 18 and older in the 48 contiguous USA and D.C. Our SiriusXM satellite service is also available in PR (with coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK. © 2015 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc. Service available in Canada; see [www.siriusxm.ca](http://www.siriusxm.ca).

This functionality is only available for radios equipped with a Satellite receiver. In order to receive satellite radio, the vehicle needs to be outside with a clear view to the sky.

If the screen shows Acquiring Signal, you might have to change the vehicle's position in order to receive a signal. In most cases, the satellite radio does not receive a signal in underground parking garages or tunnels.

---

### No Subscription

Radios equipped with a Satellite receiver, require a subscription to the SiriusXM Service. When the Radio does not have the necessary subscription, the Radio is able to receive the Pre-View channel only.

### Acquiring SiriusXM Subscription

To activate the SiriusXM Satellite Radio subscription, U.S. residents call:

1-800-643-2112

Canadian residents call:

1-877-438-9677

**NOTE:** You will need to provide the SiriusXM ID (RID) located at the bottom of the Channel 0 screen.

The Satellite Mode is activated by a press of the "SXM" button on the touchscreen.

### When in Satellite mode:

- The SXM button on the touchscreen is highlighted.
- The SiriusXM Presets are displayed at the top of the screen.
- The Genre is displayed below the Presets Bar.
- The SiriusXM Channel Number is displayed in the center.
- The Program Information is displayed at the bottom of the Channel Number.
- The SiriusXM function buttons are displayed below the Program Information.

Tuning is done by operating the Tune Knob or by Direct Tune, similar to other Radio Bands, see Presets, browse, Tune Knob, and Direct Tune.

---

In addition to the tuning Operation functions common to all Radio modes, the replay, Traffic/Weather Jump, and fav button functions are available in SiriusXM Mode.

#### **Replay**

The replay function provides a means to store and replay up to 22 minutes of music audio and 48 minutes of talk radio. Once the channel is switched, content in replay memory is lost.

Press the "Replay" button on the touchscreen. The play/pause, rewind/forward and live buttons will display at the top of the screen, along with the replay time.

You can exit by pressing the "Replay" button on the touchscreen, any time during the Replay mode.

#### **Play/Pause**

Press the "Pause/Play" button on the touchscreen to pause the playing of live or rewound content at any time. Play can be resumed again by pressing of the "Pause/Play" button on the touchscreen.

#### **Rewind**

Press the "RW" button on the touchscreen to rewind the content in steps of five seconds. Pressing the "RW" button on the touchscreen for more than two seconds rewinds the content. The Radio begins playing the content at the point at which the press is released.

#### **Forward**

Each press of the "FW" button on the touchscreen forwards the content in steps of five seconds. Forwarding of the content can only be done when the content is previously rewound, and therefore, can not be done for live content. A continuous press of the "FW" button on

---

the touchscreen also forwards the content. The Radio begins playing the content at the point at which the press is release.

**Live**

Press the "Live" button on the touchscreen to resume playing of Live content.

**Favorites**

Press the "fav." button on the touchscreen to activate the favorites menu, which will time out in five seconds in absence of user interaction.

You can exit the Favorites Menu by a press of the "X" in the top right corner.

The favorites feature enables you to set a favorite artist, or song that is currently playing. The Radio then uses this

information to alert you when either the favorite song, or favorite artist are being played at any time by any of the SiriusXM Channels.

The maximum number of favorites that can be stored in the Radio is 50.

**Fav. Artist:** While the song is playing to set a Favorite Artist, press the "fav." button on the touchscreen and then the Fav. Artist button on the touchscreen.

**Fav. Song:** While the song is playing to set a Favorite Song, press the "fav." button on the touchscreen and then the Fav Song button on the touchscreen.

**Traffic & Weather – Available On The 7AN If Equipped In The U.S. Market Only**

Press the Traffic & Weather button on the touchscreen to tune to a SiriusXM Traffic and Weather channel. To set a Traffic & Weather alert for any one of the cities in the Jump Browse list, see Browse in SXM.

---

When the Traffic & Weather button on the touchscreen is pressed, the Traffic & Weather channel is tuned.

If the Traffic & Weather alert City is not set, you are presented with a pop up to allow you to select the favorite city using the Browse Screen.

#### **Browse In SXM**

Press the "Browse" button on the touchscreen to edit Presets, Favorites, Game Zone, and Jump settings, along with providing the SiriusXM Channel List.

This Screen contains many sub menus. You can exit a sub menu to return to a parent menu by pressing the "Back Arrow."

#### **All**

Press the "All" button at the left of the Browse Screen.

#### **Channel List**

Press the Channel List, or Genre, to display all the SiriusXM Channel Numbers. You can scroll the Channel list by pressing the "Up and Down arrows", located on the right side of the screen. Scrolling can also be done by operating the TUNE/SCROLL knob.

#### **Genre**

Press the "Genre" button on the touchscreen to display a list of Genres. You can select any desired Genre by pressing the "Genre" list, the Radio tunes to a channel with the content in the selected Genre.

#### **Presets**

Press the "Presets" button located at the left of the Browse screen.



---

You can scroll the Presets list pressing the up and down arrows located at the right side of the screen. Scrolling can also be done by operating the TUNE/SCROLL knob as well.

#### **Preset Selection**

A Preset can be selected by pressing any of the listed "Presets", or by pushing the ENTER/BROWSE button on the TUNE/SCROLL knob to select the currently highlighted Preset. When selected, the Radio tunes to the station stored in the Preset, and returns to the main Radio screen.

#### **Deleting A Preset**

A Preset can be deleted in the Presets Browse screen by pressing the "Trash Can" Icon for the corresponding Preset.

#### **Favorites**

Press the "Favorites" button located at the left of the Browse screen.

The Favorites menu provides a means to Edit the Favorites list and to configure the Alert Settings, along with providing a list of Channels currently airing any of the items in the Favorites list.

You can scroll the Favorites list by pressing the "Up and Down" arrows located at the right side of the screen. Scrolling can also be done by operating the TUNE/SCROLL knob as well.

#### **Remove Favorites**

Press the "Remove Favorites" tab at the top of the screen. Press the "Delete All" button on the touchscreen to delete all of the Favorites or press the "Trash Can" icon next to the Favorite to be deleted.

---

**Alert Settings**

Press the "Alert Setting" tab at the top of the screen. The Alert Settings menu allows you to choose from a Visual alert or Audible and Visual alert when one of your favorites is airing on any of the SiriusXM channels.

**Game Zone**

Press the "Game Zone" button, located at the left of the Browse screen. This feature provides you with the ability to select teams, edit the selection, and set alerts.

**On Air**

Press the "On-Air" tab at the top of the screen. The On-Air list provides a list of Channels currently airing any of the items in the Selections list, and pressing any of the items in the list tunes the radio to that channel.

**Select Teams**

Press the "Select Teams" button on the touchscreen to activate the League Scroll list. Press the chosen league and a scroll list of all teams within the league will appear, then you can select a team by pressing the corresponding box. A check mark appears for all teams that are chosen.

**Remove Selection**

Press the "Remove Selection" tab at the top of the screen. Press the "Delete All" button on the touchscreen to delete all of the Selections or press the "Trash Can Icon" next to the Selection to be deleted.

**Alert Settings**

Press the "Alert Setting" tab at the top of the screen. The Alert Settings menu allows you to choose from "Alert me to on-air games upon start" or "Alert upon score update" or both when one or more of your selections is airing on any of the SiriusXM channels.

---

### Balance/Fade

Press the "Audio" button on the touchscreen to activate the Audio settings screen to adjust Balance/Fade, Equalizer, Speed Adjusted Volume, Aux volume Offset, and Surround Sound.

You can return to the Radio screen by pressing the "X" located at the top right.



Press the "Balance/Fade" button on the touchscreen to Balance audio between the front speakers or fade the audio between the rear and front speakers.

Pressing the "Front," "Rear," "Left," or "Right" buttons or press and drag the red Speaker Icon to adjust the Balance/Fade.

#### Equalizer



Press the "Equalizer" button on the touchscreen to activate the Equalizer screen.

Press the "+" or "-" buttons, or by pressing and dragging over the level bar for each of the equalizer bands. The level value, which spans between  $\pm 9$ , is displayed at the bottom of each of the Bands.

#### Speed Adjusted Volume



Press the "Speed Adjusted Volume" button on the touchscreen to activate the Speed Adjusted Volume screen.

The Speed Adjusted Volume is adjusted by selecting from "Off," "1," "2" or "3." This alters the automatic adjustment of the audio volume with variation to vehicle speed. Volume increases automatically as speed increase to compensate for normal road noise.

#### **Surround Sound**

Press the "On" button on the touchscreen to activate Surround Sound. Press "Off" to deactivate this feature.

When Surround Sound is On, you can hear audio coming from every direction as in a movie theatre or home theatre system.



#### Loudness



Press the "On" button on the touchscreen to activate Loudness. Press "Off" to deactivate this feature.

When Loudness is On, the sound quality at lower volumes improves.

#### AUX Volume Offset



Press the "AUX Volume Offset" button on the touchscreen to activate the AUX Volume Offset screen.

The AUX Volume Offset is adjusted by pressing of the "+" and "-" buttons. This alters the AUX input audio volume. The level value, which spans between  $\pm 3$ , is displayed above the adjustment bar.

---

### Overview

Disc Mode is entered by either inserting a Disc or pressing the "Disc" button on the left side of the display. Once in Media Mode, press the "Source" button on the touchscreen and select "CD."

A "Insert Disc" message will be displayed on the screen in the Disc mode when a Disc is not present in the Radio.

### Seek Up ►► / Seek Down ◀◀

Press and release the Seek Up ►► button on the touchscreen for the next selection on the Disc. Press and release the Seek Down ◀◀ button on the touchscreen to return to the beginning of the current selection, or to return to the beginning of the previous selection if the Disc is within the first three seconds of the current selection.

### Browse

Press the "Browse" button on the touchscreen to display the browse window. The left side of the browse window displays a list of ways you can browse through the contents of the Disc. If supported by the device, you can browse by Folders, Artists, Playlists, Albums, Songs, etc. Press the desired button on the touchscreen on the left side of the screen. The center of the browse window shows items and its sub-functions, which can be scrolled by pressing the "Up" and "Down" buttons to the right. The TUNE/SCROLL knob can also be used to scroll.

### Media Mode

Press the "Media" button on the touchscreen to select the desired audio source: Disc.

---

**Repeat**

Press the "Repeat" button on the touchscreen to toggle the repeat functionality. The Repeat button on the touchscreen is highlighted when active. The Radio will continue to play the current track, repeatedly, as long as the repeat is active.

**Shuffle**

Press the "Shuffle" button on the touchscreen to play the selections on the compact disc in random order to provide an interesting change of pace. Press the button on the touchscreen a second time to turn this feature off.

**Audio**

Refer to Radio Mode for adjusting the audio settings.

**Info**

Press the "Info" button on the touchscreen to display the current track information. Press the "Info" button on the touchscreen a second time to cancel this feature.

**Tracks**

Press the "trks" button on the touchscreen to display a pop up with the Song List. The currently playing song is indicated by an arrow and lines above and below the song title. When in the Tracks List screen you can rotate the TUNE/SCROLL knob to highlight a track (indicated by the line above and below the track name) and then push the ENTER/BROWSE knob to start playing that track.

Pressing the "trks" button on the touchscreen while the pop up is displayed will close the pop up.



---

### Overview

USB/iPod Mode is entered by either inserting a USB device or iPod and cable into the USB Port or press the "iPod" button on the left side of the display.

### Seek Up ►► / Seek Down ◀◀

Press and release the Seek Up ►► button on the touchscreen for the next selection on the USB device/iPod. Press and release the Seek Down ◀◀ button on the touchscreen to return to the beginning of the current selection, or to return to the beginning of the previous selection if the USB device/iPod is within the first three seconds of the current selection.

### Browse

Press the "Browse" button on the touchscreen to display the browse window. The left side of the browse window displays a list of ways you can browse through the

contents of the USB device/iPod. If supported by the device, you can browse by Folders, Artists, Playlists, Albums, Songs, etc. Press the desired button on the left side of the screen. The center of the browse window shows items and its sub-functions, which can be scrolled by pressing the "Up" and "Down" buttons to the right. The TUNE/SCROLL knob can also be used to scroll.

### Media Mode

Press the "Media" button on the touchscreen to select the desired audio source: USB.

### Repeat

Press the "Repeat" button on the touchscreen to toggle the repeat functionality. The Repeat button on the touchscreen is highlighted when active. The Radio will continue to play the current track, repeatedly, as long as the repeat is active.

---

**Shuffle**

Press the "Shuffle" button on the touchscreen to play the selections on the USB/iPod device in random order to provide an interesting change of pace. Press the "Shuffle" button on the touchscreen a second time to turn this feature off.

**Info**

Press the "Info" button on the touchscreen to display the current track information. Press the "Info" button on the touchscreen a second time to cancel this feature.

**Tracks**

Press the "trks" button on the touchscreen to display a pop up with the Song List. The currently playing song is indicated by an arrow and lines above and below the song title. When in the "trks" List screen you can rotate the TUNE/SCROLL knob to highlight a track (indicated by the

line above and below the track name) and then push the ENTER/BROWSE knob to start playing that track.

Pressing the "trks" button on the touchscreen while the pop up is displayed will close the pop up.

**Audio**

Refer to Radio Mode for adjusting the audio settings.

**Overview**

AUX (Auxiliary Mode) is entered by inserting an AUX device using a cable with a 3.5 mm audio jack into the AUX port or by pressing the AUX button on the left side of the display.

**Inserting Auxiliary Device**

Gently insert the Auxiliary device cable into the AUX Port. If you insert an Auxiliary device with the ignition

---

ON and the radio ON, the unit will switch to AUX mode and begin to play when you insert the device cable.

#### **Controlling The Auxiliary Device**

The control of the auxiliary device (e.g., selecting playlists, play, fast forward, etc.) cannot be provided by the radio; use the device controls instead. Adjust the volume with the VOLUME/MUTE rotary knob, or with the volume of the attached device.

**NOTE:** The vehicle radio unit is acting as the amplifier for audio output from the Auxiliary device. Therefore if the volume control on the Auxiliary device is set too low, there will be insufficient audio signal for the radio unit to play the music on the device.

#### **Media Mode**

Press the "Media" button on the touchscreen to select the desired audio source: AUX.

#### **Audio**

Refer to Radio Mode for adjusting the audio settings.

#### **Overview**

SD Card Mode is entered by either inserting a SD Card into the SD Card slot or press the "SD Card" button on the left side of the display.

#### **Seek Up ►►/Seek Down◄◄**

Press and release the Seek Up ►► button on the touchscreen for the next selection on the SD Card. Press and release the Seek Down ◄◄ button on the touchscreen to return to the beginning of the current selection, or to return to the beginning of the previous selection if the SD Card is within the first three seconds of the current selection.

---

**Browse**

Press the "Browse" button on the touchscreen to display the browse window. The left side of the browse window displays a list of ways you can browse through the contents of the SD Card. If supported by the device, you can browse by Folders, Artists, Playlists, Albums, Songs, etc. Press the desired button on the left side of the screen. The center of the browse window shows items and its sub-functions, which can be scrolled by pressing the "Up" and "Down" buttons to the right. The TUNE/SCROLL knob can also be used to scroll.

**Media Mode**

Press the "Media" button on the touchscreen to select the desired audio source: SD Card.

**Repeat**

Press the "Repeat" button on the touchscreen to toggle the repeat functionality. The Repeat button on the touchscreen is highlighted when active. The Radio will continue to play the current track, repeatedly, as long as the repeat is active.

**Shuffle**

Press the "Shuffle" button on the touchscreen to play the selections on the SD Card device in random order to provide an interesting change of pace. Press the "Shuffle" button on the touchscreen a second time to turn this feature off.

**Info**

Press the "Info" button on the touchscreen to display the current track information. Press the "Info" button on the touchscreen a second time to cancel this feature.

---

### Tracks

Press the “trks” button on the touchscreen to display a pop up with the Song List. The currently playing song is indicated by an arrow and lines above and below the song title. When in the Tracks List screen you can rotate the TUNE/SCROLL knob to highlight a track (indicated by the line above and below the track name) and then push the ENTER/BROWSE knob to start playing that track.

Pressing the “trks” button on the touchscreen while the pop up is displayed will close the pop up.

### Audio

Refer to Radio Mode for adjusting the audio settings.

### Overview

Bluetooth Streaming Audio (BTSA) or Bluetooth Mode is entered by pairing a Bluetooth device, containing music, to the Uconnect System.

Before proceeding, the Bluetooth device must be paired to the Uconnect Phone to communicate with the Uconnect System.

**NOTE:** See the pairing procedure in the Uconnect Phone section for more details.

To access Bluetooth mode, press the “Bluetooth” button on the left side of the display.



#### Seek Up **▶▶**/Down **◀◀**

Press and release the "Right Arrow" **▶▶** button on the touchscreen for the next selection on the Bluetooth device. Press and release the "Left Arrow" **◀◀** button on the touchscreen to return to the beginning of the

current selection, or return to the beginning of the previous selection if the Bluetooth device is within the first second of the current selection.

#### Media Mode

Press the "Media" button on the touchscreen to select the desired audio source: Bluetooth.

#### Tracks

If the Bluetooth device supports this feature, press the "trks" button on the touchscreen to display a pop up with the Song List. The currently playing song is indicated by a red arrow and lines above and below the song title.

Pressing the "trks" button on the touchscreen while the pop up is displayed will close the pop up.

#### Audio

Refer to Radio Mode for adjusting the audio settings.

---

Uconnect Phone is a voice-activated, hands-free, in-vehicle communications system. Uconnect Phone allows you to dial a phone number with your mobile phone.

Uconnect Phone supports the following features:

**Voice Activated Features:**

- Hands-Free dialing via Voice (“Call John Smith Mobile” or, “Dial 248-555-1212”).
- Hands-Free text to speech listening of your incoming SMS messages.
- Hands-free Text Message Reply. (Forward one of 18 pre-defined SMS messages to incoming calls/text messages).
- Redialing last dialed numbers (“Redial”).

- Calling Back the last incoming call number (“Call Back”).
- View Call logs on screen (“Show incoming calls,” “Show Outgoing calls,” “Show missed Calls,” “Show Recent Calls”).
- Searching Contacts phone number (“Search for John Smith Mobile”).
- Voice Texting (Requires registration to Uconnect Access and a current subscription).

**NOTE:** Examples of Voice Commands are provided throughout this manual. For quick use, go to the Voice Command Quick Reference Section. Voice Texting (Requires registration to Uconnect Access and a current subscription).

---

**Screen Activated Features**

- Dialing via Keypad using touchscreen.
- Viewing and Calling contacts from Phonebooks displayed on the touchscreen.
- Setting Favorite Contact Phone numbers so they are easily accessible on the Main Phone screen.
- Viewing and Calling contacts from Recent Call logs.
- Reviewing your recent Incoming SMS.
- Listen to Music on your Bluetooth Device via the touchscreen.
- Pairing up to 10 phones/audio devices for easy access to connect to them quickly.

**NOTE:** Your phone must be capable of SMS messaging via Bluetooth for messaging features to work properly.

Your mobile phone's audio is transmitted through your vehicle's audio system; the system will automatically mute your radio when using the Uconnect Phone.

For Uconnect customer support:

- U.S. residents - visit [UconnectPhone.com](http://UconnectPhone.com) or call: 877-855-8400
- Canadian residents - (English) call: 800-465-2001  
or (French) call: 800-387-9983

Uconnect Phone allows you to transfer calls between the system and your mobile phone as you enter or exit your vehicle and enables you to mute the system's microphone for private conversation.



---


**WARNING!**

**ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.**


The Uconnect Phone is driven through your Bluetooth "Hands-Free Profile" mobile phone. Uconnect features Bluetooth technology - the global standard that enables different electronic devices to connect to each other without wires or a docking station, so Uconnect Phone works no matter where you stow your mobile phone (be it your purse, pocket, or briefcase), as long as your phone is turned on and has been paired to the vehicle's Uconnect Phone. The Uconnect Phone allows up to ten mobile phones or audio devices to be linked to the


system. Only one linked (or paired) mobile phone and one audio device can be used with the system at a time.

***Uconnect Phone Button***


The Uconnect Phone  button on your steering wheel is used to get into the phone mode and make calls, show recent, incoming, outgoing calls, view phonebook etc., When you press the button you will hear a BEEP. The beep is your signal to give a command.

***Uconnect Voice Command Button***

The Uconnect Voice Command  button on your steering wheel is only used for "barge in" and when you are already in a call and you want to send Tones or make another call.

The  button on your steering wheel is also used to access the Voice Commands for the Uconnect Voice

---

Command features if your vehicle is equipped. Please see the Uconnect Voice Command section for direction on how to use the  button.

The Uconnect Phone is fully integrated with the vehicle's audio system. The volume of the Uconnect Phone can be adjusted either from the radio volume control knob or from the steering wheel radio control (right switch), if equipped.

Voice commands can be used to operate the Uconnect Phone and to navigate through the Uconnect Phone menu structure. Voice commands are required after most Uconnect Phone prompts. There are two general methods for how Voice Command works:

1. Say compound commands like "Call John Smith mobile."

2. Say the individual commands and allow the system to guide you to complete the task.

You will be prompted for a specific command and then guided through the available options.

- Prior to giving a voice command, one must wait for the beep, which follows the "Listen" prompt or another prompt.
- For certain operations, compound commands can be used. For example, instead of saying "Call" and then "John Smith" and then "mobile", the following compound command can be said: "Call John Smith mobile."
- For each feature explanation in this section, only the compound command form of the voice command is given. You can also break the commands into parts and say each part of the command when you are asked for it. For example, you can use the compound command

---

form voice command “Search for John Smith,” or you can break the compound command form into two voice commands: “Search Contact” and when asked “John Smith.” Please remember, the Uconnect Phone works best when you talk in a normal conversational tone, as if speaking to someone sitting a few feet/meters away from you.


#### **Natural Speech**

Your Uconnect Phone Voice system uses a Natural Language Voice Recognition (VR) engine.

Natural speech allows the user to speak commands in phrases or complete sentences. The system filters out certain non-word utterances and sounds such as “ah” and “eh.” The system handles fill-in words such as “I would like to.”

The system handles multiple inputs in the same phrase or sentence such as “make a phone call” and “to Kelly

Smith.” For multiple inputs in the same phrase or sentence, the system identifies the topic or context and provides the associated follow-up prompt such as “Who do you want to call?” in the case where a phone call was requested but the specific name was not recognized.

The system utilizes continuous dialog; when the system requires more information from the user it will ask a question to which the user can respond without pushing the “Voice Command”  button on your steering wheel.

#### **Help Command**

If you need assistance at any prompt, or if you want to know your options at any prompt, say “Help” following the beep.

To activate the Uconnect Phone from idle, simply push the Phone  button on your steering wheel and say a

command or say "help." All Uconnect Phone sessions begin with a push of the Phone button on the radio control head.

#### Cancel Command

At any prompt, after the beep, you can say "Cancel" and you will be returned to the main menu.

You can also push the Phone or Voice Command button on your steering wheel when the system is listening for a command and be returned to the main or previous menu.

#### Pair (Link) Uconnect Phone To A Mobile Phone

To begin using your Uconnect Phone, you must pair your compatible Bluetooth enabled mobile phone. Mobile phone pairing is the process of establishing a wireless connection between a cellular phone and the Uconnect system.

To complete the pairing process, you will need to reference your mobile phone Owner's Manual. Please visit [UconnectPhone.com](http://UconnectPhone.com) for complete mobile phone compatibility information.



---

**NOTE:**

- You must have Bluetooth enabled on your phone to complete this procedure.
  - The vehicle must be in PARK.
1. Place the ignition in the ACC or ON position.
  2. Press the "Phone" button in the Menu Bar on the touchscreen.
    - If there is no phones currently connected with the system, a pop-up will appear asking if you would like to pair a mobile phone.
  3. Select "Yes" to begin the pairing process.
  4. Search for available devices on your Bluetooth enabled mobile phone.
    - Press the Settings button on your mobile phone.
    - Select Bluetooth and ensure it is enabled. Once enabled, the mobile phone will begin to search for Bluetooth connections.
  5. If No is selected, and you still would like to pair a mobile phone, press the "Settings" button from the Uconnect Phone main screen.
    - Select "Paired Phones" then press the "Add Device" button on the touchscreen.
    - Search for available devices on your Bluetooth enabled mobile phone (see below). When prompted on the phone, select "Uconnect" and accept the connection request.
  6. Uconnect Phone will display an in progress screen while the system is connecting.
  7. When your mobile phone finds the Uconnect system, select "Uconnect."

8. When prompted on the mobile phone, accept the connection request from Uconnect Phone.

**NOTE:** Some mobile phones will require you to enter the PIN number.

9. When the pairing process has successfully completed, the system will prompt you to choose whether or not this is your favorite phone. Selecting "Yes" will make this phone the highest priority. This phone will take precedence over other paired phones within range and will connect to the Uconnect system automatically when entering the vehicle. Only one mobile phone and/or one Bluetooth audio device can be connected to the Uconnect system at a time. If "No" is selected, simply select "Uconnect" from the mobile phone/audio device Bluetooth screen, and the Uconnect system will reconnect to the Bluetooth device.



4

#### Pair Additional Mobile Phones

1. Press the "Settings" button on the touchscreen from the Phone main screen.
2. Next, press the "Phone/Bluetooth" button on the touchscreen.



3. Press the "Add Device" button on the touchscreen.
4. Search for available devices on your Bluetooth enabled mobile phone. When prompted on the phone, enter the name and PIN shown on the Uconnect screen.
5. Uconnect Phone will display an in process screen while the system is connecting.

6. When the pairing process has successfully completed, the system will prompt you to choose whether or not this is your favorite phone. Selecting "Yes" will make this phone the highest priority. This phone will take precedence over other paired phones within range.

**NOTE:** For phones which are not made a favorite, the phone priority is determined by the order in which it was paired. The latest phone paired will have the higher priority.

You can also use the following VR commands to bring up the Paired Phone screen from any screen on the radio:

- "Show Paired Phones" or
- "Connect My Phone"

#### **Pair A Bluetooth Streaming Audio Device**

1. Press the "Media" button on the touchscreen to begin.
2. Change the Source to Bluetooth.

---

3. Press the "Bluetooth" button on the touchscreen to display the Paired Audio Devices screen.

4. Press the "Add Device" button on the touchscreen.

**NOTE:** If there is no device currently connected with the system, a pop-up will appear.

5. Search for available devices on your Bluetooth enabled audio device. When prompted on the device, enter the PIN shown on the Uconnect screen.

6. Uconnect Phone will display an in process screen while the system is connecting.

7. When the pairing process has successfully completed, the system will prompt you to choose whether or not this is your favorite device. Selecting Yes will make this device the highest priority. This device will take precedence over other paired devices within range.

**NOTE:** For devices which are not made a favorite, the device priority is determined by the order in which it was paired. The latest device paired will have the higher priority.

You can also use the following VR command to bring up a list of paired audio devices.

- "Show Paired Phones" or
- "Connect My Phone"

4

#### **Connecting To A Particular Mobile Phone Or Audio Device After Pairing**

Uconnect Phone will automatically connect to the highest priority paired phone and/or Audio Device within range. If you need to choose a particular phone or Audio Device follow these steps:

1. Press the "Settings" button on the touchscreen.



- 
2. Press the "Paired Phones" or "Paired Audio Sources" button on the touchscreen.
  3. Press to select the particular Phone or the particular Audio Device.
  4. Press the "X" to exit out of the Settings screen.

#### **Disconnecting A Phone Or Audio Device**

1. Press the "Settings" button on the touchscreen.
2. Press the "Paired Phones" or "Paired Audio Devices" button on the touchscreen.
3. Press the "Settings" button located to the right of the device name.
4. The options pop-up will be displayed.
5. Press the "Disconnect Device" button on the touchscreen.
6. Press the "X" to exit out of the Settings screen.

#### **Deleting A Phone Or Audio Device**

1. Press the "Settings" button on the touchscreen.
2. Press the "Pair Phones" or "Paired Audio Devices" button on the touchscreen.
3. Press the "Settings" button located to the right of the device name for a different Phone or Audio Device than the currently connected device.
4. The options pop-up will be displayed.
5. Press the "Delete Device" button on the touchscreen.
6. Press the "X" to exit out of the Settings screen.

#### **Making A Phone Or Audio Device A Favorite**

1. Press the "Settings" button on the touchscreen.
2. Press the "Paired Phones" or "Paired Audio Devices" button on the touchscreen.

- 
3. Press the "Settings" button located to the right of the device name.
  4. The options pop-up will be displayed.
  5. Press the "Make Favorite" button on the touchscreen; you will see the chosen device move to the top of the list.
  6. Press the "X" to exit out of the Settings screen.

**Phonebook Download (Automatic Phonebook Transfer From Mobile Phone) – If Equipped**

If equipped and specifically supported by your phone, Uconnect Phone automatically downloads names (text names) and number entries from the mobile phone's phonebook. Specific Bluetooth Phones with Phone Book Access Profile may support this feature. See Uconnect website, [UconnectPhone.com](http://UconnectPhone.com), for supported phones.

- To call a name from a downloaded mobile phone book, follow the procedure in the "VOICE RECOGNITION QUICK TIPS" section.
- Automatic download and update of a phone book, if supported, begins as soon as the Bluetooth wireless phone connection is made to the Uconnect Phone, for example, after you start the vehicle.
- A maximum of 5,000 contact names with four numbers per contact will be downloaded and updated every time a phone is connected to the Uconnect Phone.
- Depending on the maximum number of entries downloaded, there may be a short delay before the latest downloaded names can be used. Until then, if available, the previously downloaded phonebook is available for use.
- Only the phonebook of the currently connected mobile phone is accessible.

- 
- This downloaded phonebook cannot be edited or deleted on the Uconnect Phone. These can only be edited on the mobile phone. The changes are transferred and updated to Uconnect Phone on the next phone connection.

#### **Managing Your Favorites**

There are three ways you can add an entry to your Favorites.

1. During an active call of a number to make a favorite, press and hold the preset button on the touchscreen on the top of the phone main screen.
2. After loading the mobile phonebook, select phonebook from the Phone main screen, then select the appropriate number. Press the **Settings** button next to the selected number to display the options pop-up. In the pop-up select "Add to Favorites."

**NOTE:** If the Favorites list is full, you will be asked to remove an existing favorite.

3. From the Phone main screen, select phonebook. From the phonebook screen, select the "Favorites" button on the touchscreen and then select the **Settings** button on the touchscreen located to the right of the phonebook record.
4. Select an empty entry and press the **Settings** button on that selected entry. When the Options pop-up appears, press "Add from Mobile." You will then be asked which contact and number to choose from your mobile phonebook. When complete the new favorite will be shown.

---

**To Remove A Favorite**

1. To remove a Favorite, select "phonebook" from the Phone main screen.
2. Next select "Favorites" on the left side of the screen and then press the 9Settings9 button on the touch-screen.
3. Press the 9Settings9 button next to the Favorite you would like to remove.
4. The Options pop-up will display, press "Remove from Favs."

The following features can be accessed through the Uconnect Phone if the feature(s) are available and supported by Bluetooth on your mobile service plan. For example, if your mobile service plan provides three-way

calling, this feature can be accessed through the Uconnect Phone. Check with your mobile service provider for the features that you have.


**Ways To Initiate A Phone Call**

Listed below are all the ways you can initiate a phone call with Uconnect Phone.


- Redial
- Dial by pressing in the number
- Voice Commands (Dial by Saying a Name, Call by Saying a Phonebook Name, Redial or Call Back)
- Favorites
- Mobile Phonebook
- Recent Call Log
- SMS Message Viewer

---

**Dial By Saying A Number**

1. Push the "Phone"  button on your steering wheel to begin.
2. After the "Listening" prompt and the following beep, say "Dial 151-123-4444."
3. The Uconnect Phone will dial the number 151-123-4444.

**Call By Saying A Phonebook Name**

1. Push the Phone  button on your steering wheel to begin.
2. After the "Listening" prompt and the following beep, say "Call John Doe Mobile."
3. The Uconnect Phone will dial the number associated with John Doe, or if there are multiple numbers it will ask which number you want to call for John Doe.

**Call Controls**


The touchscreen allows you to control the following call features:

- Answer
- End
- Ignore
- Hold/unhold
- Mute/unmute
- Transfer the call to/from the phone
- Swap two active calls
- Join two active calls together

---

#### Touch-Tone Number Entry

1. Press the "Phone" button on the touchscreen.
2. Press the "Dial" button on the touchscreen.
3. The Touch-Tone screen will be displayed.
4. Use the numbered buttons on the touchscreens to enter the number and press "Call."


If your vehicle has two buttons on the steering wheel (VR and Phone), press the VR  button on your steering wheel to send a touch-tone. If your vehicle has three buttons on the steering wheel (VR, Phone Send, and Phone End), press the Phone Send button on your steering wheel to send a touch-tone and say "Send 1234#" or you can say "Send Voicemail Password" if Voicemail password is stored in your mobile phone-book.

#### Recent Calls

You may browse up to 31 of the most recent of each of the following call types:

- All Calls
- Incoming Calls
- Outgoing Calls
- Missed Calls


These can be accessed by pressing the "recent calls" button on the Phone main screen.

You can also push the  button on your steering wheel and say "Show my incoming calls" from any screen and the Incoming calls will be displayed.


**NOTE:** Incoming can also be replaced with "Outgoing," "Recent" or "Missed."

---

**Answer Or Ignore An Incoming Call – No Call Currently In Progress**

When you receive a call on your mobile phone, the Uconnect Phone will interrupt the vehicle audio system. Push the Phone  button on the steering wheel to accept the call. You can also press the “answer” button on the touchscreen or press the caller ID box.

**Answer Or Ignore An Incoming Call – Call Currently In Progress**

If a call is currently in progress and you have another incoming call, you will hear the same network tones for call waiting that you normally hear when using your mobile phone. Press the “Uconnect Phone”  button on the steering wheel, answer button on the touchscreen or caller ID box to place the current call on hold and answer the incoming call.

**NOTE:** The Uconnect Phone compatible phones in the market today do not support rejecting an incoming call when another call is in progress. Therefore, the user can only answer an incoming call or ignore it.

**Do Not Disturb**

With Do Not Disturb, you can disable notifications from incoming calls and texts, allowing you to keep your eyes on the road and hands on the wheel. For your convenience there is a counter display to keep track of your missed calls and text messages while you were using Do Not Disturb.

Do Not Disturb can automatically reply with a text message, a call or both, when declining an incoming call and send it to voicemail.

---

Automatic reply messages can be:

- "I am driving right now, I will get back to you shortly."
- Create a custom auto reply message up to 160 characters.

**NOTE:** Only the first 25 characters can be seen on the touchscreen while typing a custom message.

While in Do Not Disturb, Conference Call can be selected so you can still place a second call without being interrupted by incoming calls.

**NOTE:**

- Reply with text message is not compatible with iPhones.
- Auto reply with text message is only available on phones that supporting Bluetooth MAP.

#### **Place/Retrieve A Call From Hold**

During an active call, press the "Hold" button on the Phone main screen.

#### **Making A Second Call While Current Call Is In Progress**

You can place a call on hold by pressing the "Hold" button on the Phone main screen, then dial a number from the dialpad, recent calls, SMS Inbox or from the phonebooks. To go back to the first call, refer to "Toggling Between Calls" in this section. To combine two calls, refer to "Join Calls" in this section.

#### **Toggling Between Calls**

If two calls are in progress (one active and one on hold), press the "Swap" button on the Phone main screen. Only one call can be placed on hold at a time.

You can also push the Phone  button to toggle between the active and held phone call.




---


#### **Join Calls**

When two calls are in progress (one active and one on hold), press the "Join Calls" button on the Phone main screen to combine all calls into a Conference Call.

#### **Call Termination**

To end a call in progress, momentarily press the Phone "End"  button on the touchscreen or the Phone "End" button on the steering wheel. Only the active call(s) will be terminated and if there is a call on hold, it will become the new active call.

#### **Redial**

Press the "Redial" button on the touchscreen, or push the Phone  button and after the "Listening" prompt and the following beep, say "Redial."

The Uconnect Phone will call the last number that was dialed from your mobile phone.

#### **Call Continuation**

Call continuation is the progression of a phone call on the Uconnect Phone after the vehicle ignition key has been switched to OFF.

**NOTE:** The call will remain within the vehicle audio system until the phone becomes out of range for the Bluetooth connection. It is recommended to press the "transfer" button on the touchscreen when leaving the vehicle.

#### **Transfer Call To And From Mobile Phone**

The Uconnect Phone allows ongoing calls to be transferred from your mobile phone to the Uconnect Phone without terminating the call. To transfer an ongoing call from your connected mobile phone to the Uconnect Phone or vice versa, press the "Transfer" button on the Phone main screen.

---

**Connect Or Disconnect Link Between The Uconnect Phone And Mobile Phone**

If you would like to connect or disconnect the Bluetooth connection between a Uconnect Phone paired mobile phone and the Uconnect Phone, follow the instructions described in your mobile phone User's Manual.

**Voice Command**

For the best performance:

- Adjust the rearview mirror to provide at least ½ inch (1 cm) gap between the overhead console (if equipped) and the mirror.
- Always wait for the beep before speaking.

- Speak normally, without pausing, just as you would speak to a person sitting a few feet/meters away from you.

- Ensure that no one other than you is speaking during a voice command period.

Performance is maximized under:

- Low-To-Medium Blower Setting
- Low-To-Medium Vehicle Speed
- Low Road Noise
- Smooth Road Surface
- Fully Closed Windows
- Dry Weather Condition

---

**WARNING!**

**ALWAYS drive safely with your hands on the wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.**

Even though the system is designed for many languages and accents, the system may not always work for some.

**NOTE:** It is recommended that you do not store names in your favorites phonebook while the vehicle is in motion.

Phonebook (Mobile and Favorites) name recognition rate is optimized when the entries are not similar. You can say "O" (letter "O") for "0" (zero).

Even though international dialing for most number combinations is supported, some shortcut dialing number combinations may not be supported.

**Far End Audio Performance**

Audio quality is maximized under:

- Low-To-Medium Blower Setting
- Low-To-Medium Vehicle Speed
- Low Road Noise
- Smooth Road Surface
- Fully Closed Windows
- Dry Weather Conditions
- Operation From The Driver's Seat

---


Performance such as audio clarity, echo, and loudness to a large degree rely on the phone and network, and not the Uconnect Phone.

Echo at the far end can sometimes be reduced by lowering the in-vehicle audio volume.

In a convertible vehicle, system performance may be compromised with the convertible top down.

#### **Voice Text Reply**

Once your Uconnect system is paired with a compatible mobile device, the system can announce a new incoming text message, and read it to you over the vehicle audio system. You can reply to the message using Voice Recognition, by selecting, or saying one of the 18 pre-defined messages.

**Here's how:** Push the "Uconnect Phone" button  and wait for the beep, then say "reply." Uconnect will give the following prompt: "Please say the message you would like to send." Wait for the beep and say one of the pre-defined messages. (If you are not sure, you can say "help"). Uconnect will then read the pre-defined messages allowed. As soon as you hear the message you would like to send, you can interrupt the list of prompts by pushing the "Uconnect Phone" button and saying the phrase. Uconnect will confirm the message by reading it back to you. Then push the "Uconnect Phone" button and say "Send."

"Yes."	"I'm on my way."	"Are you there yet?"
"No."	"I'll be late."	"See you later."
"Call me."	"Thanks."	"I'm lost."
"Okay."	"Start without me."	"I need directions."
"I'll call you later."	"Where are you?"	"See you in <number> minutes."
"I can't talk right now."	"Stuck in traffic."	"I will be <number> minutes late."

Voice Texting Reply and Voice Texting features require a compatible mobile device enabled with Bluetooth Message Access Profile (MAP). Some smartphones do not currently support Bluetooth MAP. Visit [UconnectPhone.com](http://UconnectPhone.com) for system and device compatibility.

**Voice Texting (Must Be Registered With Uconnect Access And Have A Current Subscription, U.S. Residents Only)**

<b>WARNING!</b>
<b>ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.</b>

Want to dictate a personal message? Register with Uconnect Access to take advantage of a new, cloud-based Voice Texting service, an enhancement to Voice Text Reply.

---

Voice Texting allows you to compose a new text or reply to an incoming text message. Before you attempt to use the Voice Texting feature, check to ensure you have the following:

1. A Paired, Bluetooth enabled phone with the Message Access Profile (MAP). Not all Bluetooth enabled phones support MAP. Visit [UconnectPhone.com](http://UconnectPhone.com) for system and device compatibility information.
2. An active Uconnect Access trial or paid subscription. Press the "Apps" button on the touchscreen to begin the registration process.
3. Accept the Allow MAP profile request on your smart phone. (Please refer to device manufacturer instructions for details).

**To Send A Text Message:**

1. Push the UconnectPhone button.

2. Wait for the beep.

3. Say "Text."

4. Uconnect will prompt you "Say the phone number, or full name and phone type of the contact you want to send a message to."

5. Wait for the beep and say a contact that is in your phonebook, or a mobile phone number that you would like to send the message to.

6. Uconnect will prompt you "Please say the message that you would like to send" (If you do not hear this prompt, you may not have an active subscription with Uconnect Access).

7. Wait for the beep, and then dictate any message up to 140 characters. If you exceed 140 characters, you will hear the following prompt: "Message was too long; your message will be truncated."

8. Uconnect will then repeat the message back to you.
9. Uconnect will prompt you: To add to your message, say "Continue"; to delete the current message and start over, say "Start Over"; to send the current message, say "Send"; to hear the message again, say "Repeat."
10. If you are happy with your message and would like to send it, wait for the beep and say "Send."
11. Uconnect will then say "Sending your message."

<b>Sample Commands for Voice Text Reply and Voice Texting</b>	
<b>Example Command</b>	<b>Action</b>
"Text John Smith"	Send a message to specific contact in address book
"Text 123 - 456 - 7890"	Send 123 - 456 - 7890 a message from your phonebook
"Show messages"	See recent text messages listed by number on Uconnect screen
"Listen to/view (message number four, for example)"	Hear messages or read it on Uconnect screen
"Reply"	Send a voice text reply to a current message
"Forward text/message to John Smith"	Forward current text to specific contact in address book
"Forward text/message to 123 - 456 - 7890"	Forward current text to specific phone number

---

**Bluetooth Communication Link**

Mobile phones have been found to lose connection to the Uconnect Phone. When this happens, the connection can generally be re-established by switching the mobile phone OFF/ON. Your mobile phone is recommended to remain in Bluetooth ON mode.

**Power-Up**

After switching the ignition key from OFF to either the ON or ACC position, or after a language change, you must wait at least 15 seconds prior to using the system.

**General Information**

This device complies with Part 15 of the FCC rules and RSS 210 of Industry Canada. Operation is subject to the following conditions:

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

To access the Navigation system, press the 9Nav9 button on the touchscreen.





- Press "Where To?" to find or route to a destination.

- Press "View Map" to view the map.
- Press "Information" to view Traffic, Where Am I? and Trip Computer information.
- Press "Emergency" to search for Hospitals, Police and Fire Stations near your current location. You can also display your current location and save any Emergency facility location to your Favorites.
- Press "Stop" to stop a route.
- Press "Detour" to detour a route.

### Where To? – Main Menu



From the Nav Main Menu, press the “Where To?” button on the touchscreen and select one of the following methods to program a route guidance.

**NOTE:** Refer to the individual section of the chosen option for further information.

#### Address

Press this button on the touchscreen to search by a street address or a street name with house number.

#### Recent

Press this button on the touchscreen to access previously routed addresses or locations.

#### Point of Interest

Press this button on the touchscreen when you want to route to a point of interest. The Point of Interest (POI) database allows you to select a destination from a list of locations and public places, or points of interest.

---

**Favorites**

Press this button on the touchscreen to access previously saved addresses or locations.

**Intersection**

Press this button on the touchscreen to enter in two street names as a destination.

**Go Home**

Press this button on the touchscreen to program or confirm a route to the saved home address.

**Trips**

Press this button on the touchscreen to program a new trip or recall a saved trip.

**GEO Coordinates**

Press this button on the touchscreen to route to a GEO Coordinate. A geo coordinate is a coordinate used in

geography. You can determine a geo coordinate with the help of a handheld GPS receiver, a map, or the navigation system.

**Point on Map**

Press this button on the touchscreen to select a destination directly from the Map screen. By selecting a street segment or icon, you can quickly enter a destination without the need to input the city name or street.

**City Center**

Press this button on the touchscreen to route to a particular city. The navigation system will calculate a route with the destination at the center of the city.

**Trails**

Press the "Trails" button on the touchscreen and select the option to start trail recording to track the route you

are driving. Select the option to 9stop trail recording9 to end tracking. This gives you a point of reference to for a particular route if needed.

#### Closest City

Press this button on the touchscreen to route to a nearby city. The screen will display an alphabetical listing of nearby cities. The navigation system will calculate a route with the destination at the center of the nearby city.

#### Phone Number

Press this button on the touchscreen to route to a location or point of interest by the phone number.

**NOTE:** You can press the “back” arrow button on the touchscreen to return to the previous screen or the “X” button on the touchscreen to exit.

#### Where To? – Address

To enter a destination by Address, follow these steps:

1. While in the Nav Main Menu, press the “Where To?” button on the touchscreen, then press the “Address” button on the touchscreen.



2. Press "Enter City" or "Enter Street" to begin entering the address of your destination.



If you press "Enter City," you will have to enter and select/press the desired city name, followed by the desired street name then the house number.

If you press "Enter Street," you will have to enter and select/press the desired street name in the correct city and then you will have to enter the house number.

To change the state and/or country, press the "state, country" button on the touchscreen and follow the prompts to change the state and/or country.



Once the correct City, Street and Number has been entered, you will be asked to confirm your destination by pressing "OK."

3. Press the "Yes" button on the touchscreen to confirm your destination and begin your route.



If you are currently on a route guidance and you select Recent, the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

**NOTE:** You can press the "back arrow" button on the touchscreen to return to the previous screen or the "X" button on the touchscreen to exit.

#### Where To? – Recent

To route to a Recent destination, follow these steps:

1. While in the Nav Main Menu, press the "Where To?" button on the touchscreen, then press the "Recent" button on the touchscreen.



2. Press the button on the touchscreen with the name of the desired destination.



3. Confirm the route with "Yes" to start the route guidance.

To delete a destination from the list, press the "Trash Can Icon" button on the touchscreen.

To display the options for a destination press the "Options" button on the touchscreen that looks like a gear.



The following Options are available for each destination:



4

- Edit Name
- Add Phone Number
- Move Up in the list
- Move Down in the list
- Place Pin on the location (saves the spot on the list)



**NOTE:** You can press the “back arrow” button on the touchscreen to return to the previous screen or the “X” button on the touchscreen to exit.

#### Where To? – Point of Interest

To enter a destination by Point of Interest (POI), press the “Where To?” button from the Nav Main Menu, then press the “Point of Interest” button on the touchscreen.



The Point of Interest database allows you to select a destination from a list of locations and public places, or points of interest.

You have the following POIs to choose from:

- Gas Stations
- Restaurants
- Hotels/Motels
- ATM/Banking
- All POIs
- Spell POI Name



You can also change your POI search area, by pressing the “Change Search Area” button on the touchscreen. You will have the following options to change your search area:

- Around Me
- In a City

- Near Destination (only available during route guidance)
- Along Route (only available during route guidance)



4

**NOTE:** You can press the “back arrow” button on the touchscreen to return to the previous screen or the “X” button on the touchscreen to exit.

### POI – Gas Stations

To select a Gas Station POI, follow these steps:

1. While in the Nav Main Menu, press the “Where To?” button on the touchscreen, then press the “Point of Interest” button on the touchscreen.



2. Press the “Gas Stations” button on the touchscreen.



You can search for a gas station by the following categories, which are button tabs at the top of the screen.

- Name
- Distance

- Type
- ABC (Search)



3. Press the desired Gas Station and press "Yes" to confirm the destination.

If you are currently on a route guidance and you select a gas station, the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

**NOTE:** You can press the "back arrow" button on the touchscreen to return to the previous screen or the "X" button on the touchscreen to exit.

### POI – Restaurants

To select a Restaurant POI, follow these steps:

1. While in the Nav Main Menu, press the “Where To?” button on the touchscreen, then press the “Point of Interest” button on the touchscreen.



2. Press the “Restaurants” button on the touchscreen.



You can search for a restaurants by the following categories, which are button tabs at the top of the screen.

- Name
- Distance
- Type
- ABC (Search)

3. Press the desired Restaurant and press “Yes” to confirm the destination.

If you are currently on a route guidance and you select a Restaurant, the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

**NOTE:** You can press the “back arrow” button on the touchscreen to return to the previous screen or the “X” button on the touchscreen to exit.

#### **POI – Hotels/Motels**

To select a Hotel or Motel POI, follow these steps:

1. While in the Nav Main Menu, press the “Where To?” button on the touchscreen, press the “Point of Interest” button on the touchscreen.



4

2. Press the "Hotels/Motels" button on the touchscreen.



You can search for a hotel or motel by the following categories, which are button tabs at the top of the screen.

- Name
- Distance

- Type
- ABC (Search)

3. Press the desired hotel or motel and press "Yes" to confirm the destination.

If you are currently on a route guidance and you select a Hotel or Motel, the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

**NOTE:** You can press the "back arrow" button on the touchscreen to return to the previous screen or the "X" button on the touchscreen to exit.


### POI – ATM/Banking

To select a ATM or Bank POI, follow these steps:

1. While in the Nav Main Menu, press the “Where To?” button on the touchscreen, then press the “Point of Interest” button on the touchscreen.



2. Press the “ATM/Banking” button on the touchscreen.

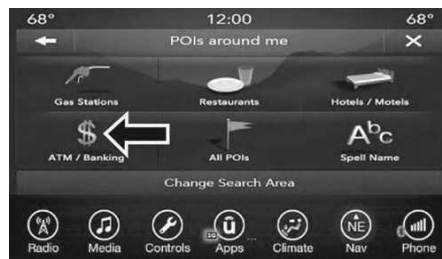

4

You can search for an ATM or Bank by the following categories, which are button tabs at the top of the screen.

- Name
- Distance
- Type
- ABC (Search)



3. Press the desired ATM or Bank and press "Yes" to confirm the destination.

If you are currently on a route guidance and you select an ATM or Bank POI, the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

**NOTE:** You can press the "back arrow" button on the touchscreen to return to the previous screen or the "X" button on the touchscreen to exit.

#### All POIs

To select a POI type, follow these steps:

1. While in the Nav Main Menu, press the "Where To?" button on the touchscreen, then press the "Point of Interest" button on the touchscreen.



2. Press "All POIs" button on the touchscreen.



You can search through the available POI categories to find your desired POI.

The available categories are:

- Airport
- ATM/Banking

- Automotive
- Coffee Shops
- Community
- Entertainment
- Gas Stations
- Health and Beauty
- Highway Exit
- Hospital
- Hotels/Motels
- Other
- Parking
- Recreation
- Restaurants
- Shopping
- Travel
- Truck



3. Select a category and then select a subcategory if necessary. Press the "ABC" button on the touchscreen to activate a keyboard with Alphabetic characters to search within the POI categories.

4. Press the desired POI and press "Yes" to confirm the destination.

If you are currently on a route guidance and you select a POI, the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

**NOTE:** You can press the "back arrow" button on the touchscreen to return to the previous screen or the "X" button on the touchscreen to exit.

### POI – Spell Name

To select for a specific POI, follow these steps:

1. While in the Nav Main Menu, press the “Where To?” button on the touchscreen, then press the “Point of Interest” button on the touchscreen.



2. Press the “Spell Name” button on the touchscreen.



4

3. A keyboard will appear on the screen. Type in the POI that you want to search and press the “List” button on the touchscreen to display available items.
4. Press the desired POI and press “Yes” to confirm the destination.

---

If you are currently on a route guidance and you select a POI, the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

**NOTE:** You can press the “back arrow” button on the touchscreen to return to the previous screen or the “X” button on the touchscreen to exit.

#### Where To? – Favorite Destinations

To route to a Favorite destination, follow these steps:

1. While in the Nav Main Menu, press the “Where To?” button on the touchscreen, then press the “Favorites” button on the touchscreen.



- 
2. Press the button on the touchscreen with the name of the desired favorite destination and confirm the route with Yes to start the route guidance.
  3. To delete a destination from the list, press the "Trash Can Icon" button on the touchscreen.
  4. To save a favorite destination, press the "Add Favorite" button on the touchscreen and follow the steps to route a destination.
  5. To display the options for a favorite destination press the "Options" button on the touchscreen that looks like a gear.

The following Options are available for each favorite destination:

- Edit Name
- Add Phone Number

If you are currently on a route guidance and you select a Favorite, the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

**NOTE:** You can press the "back arrow" button on the touchscreen to return to the previous screen or the "X" button on the touchscreen to exit.

#### **Where To? – Intersection**

To enter a destination by Intersection, follow these steps:

1. While in the Nav Main Menu, press the "Where To?" button on the touchscreen, then press the "Intersection" button on the touchscreen.



2. Press the "Enter City" button, to enter the desired city name.

**NOTE:** If the system automatically recognizes the city it will populate a list of recognized cities, if not press the "List" button to select from the available options.



3. Once the correct City has been selected, you will be asked to spell the desired street name, then enter the intersecting street.

**NOTE:** If the system automatically recognizes the street it will populate a list of recognized streets, if not press the "List" button to select from the available options.

4. Press the "Yes" button on the touchscreen to confirm your destination and begin your route.

If you are currently on a route guidance and you select a Intersection, the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

**NOTE:** You can press the "back arrow" button on the touchscreen to return to the previous screen or the "X" button on the touchscreen to exit.

#### Where To? – Go Home

To enter your Home Address, follow these steps:

1. While in the Nav Main Menu, press the "Where To?" button on the touchscreen then press the "Go Home" button on the touchscreen.





---

If there is no Home Address entered, press “Yes” to enter it now.

2. To set your Home Address choose one of the following options:

**NOTE:** Refer to the individual section of the chosen option for further information.

- Address
- Recent
- Point of Interest
- Favorites
- Intersection
- GEO Coordinates
- Point on Map
- City Center
- Closest Cities
- Phone Number

Once you have generated your Home Address, you will be asked to Save it.

3. Press the “Save” button on the touchscreen to confirm your destination and begin the route to your Home Address.
4. This address will be saved as your Home Address and it can be accessed by pressing the “Go Home” button in the Where To? Menu.

#### **Change/Delete Your Home Address**

To change or delete your current Home Address perform the following:

1. Press the “Go Home” button in the Where To? Menu.
2. Press the “Options” button at the bottom of the displayed map.

3. Press "Clear Home" and then press "Yes" to clear/delete your Home Address.
4. To enter in a new Home Address, follow the Where To? - Go Home procedure.

**NOTE:** You can press the "back arrow" button on the touchscreen to return to the previous screen or the "X" button on the touchscreen to exit.

#### Where To? – Trips

To route to a saved Trip, follow these steps:

1. While in the Nav Main Menu, press the "Where To?" button on the touchscreen then press the "Recent" button on the touchscreen.
2. Press the "Trips" button on the touchscreen.



4



3. Press the button on the touchscreen with the name of the desired Trip and press the first destination in the list.
4. Confirm the route by pressing "Yes" to start the route guidance.

To add a Trip, follow these steps:

1. Press the "Create new Trip" button on the touchscreen.
2. Type in the new Trip Name.
3. Press "Add Destination" to add destinations to your trip.
4. Choose from the following options to add a destination
  - Address
  - Recent
  - Point of Interest
  - Favorites
  - Intersection
  - GEO Coordinates
  - Point on Map

- 
- City Center
  - Closest Cities
  - Phone Number

**NOTE:** Refer to the individual section of the chosen option for further information.

5. Add more needed destinations to your trip.

**NOTE:** Each destination will be listed in order, with the last destination being the final destination.

6. Your new Trip will appear on the Trips list.

To delete a Trip from the list, press the "Trash Can Icon" button on the touchscreen.

To display the options for a trip press the "Options" button on the touchscreen that looks like a gear.

The following Options are available for each trip:

- Edit Name
- Move Up in the list
- Move Down in the list

**NOTE:** You can press the "back arrow" button on the touchscreen to return to the previous screen or the "X" button on the touchscreen to exit.

4

#### **Where To? – GEO Coordinate**

To route to a saved Trip, follow these steps:

1. While in the Nav Main Menu, press the "Where To?" button on the touchscreen then press the "GEO Coordinate" button on the touchscreen.



2. Enter the Latitude by typing in the numbers. Use the left and right arrows to select specific numbers in the location shown.



Press the "Format" button on the touchscreen to change the format of the Latitude/Longitude entry.

3. Press the "OK" button on the touchscreen.
4. Enter the Longitude by typing in the numbers. Use the left and right arrows to select specific numbers in the location shown.

5. Press "OK" to confirm the destination.

6. Press the "Yes" button on the touchscreen to confirm your destination and begin your route.

If you are currently on a route guidance and you select a Geo Coordinate, the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

**NOTE:** You can press the "back arrow" button on the touchscreen to return to the previous screen or the "X" button on the touchscreen to exit.

#### Where To? – Point on Map

To enter a destination by Point on Map, follow these steps:

1. While in the Nav Main Menu, press the "Where To?" button on the touchscreen then press the "Point on Map" button on the touchscreen.



4

2. Use the touchscreen to drag the center of the cross over the desired destination.



3. Either press the "address bar" at the top center of the screen to confirm your location, or press the "Details" button in the upper right corner to display the available locations near that point on the map.

4. Press the "Yes" button on the touchscreen to confirm your destination and begin your route.

If you are currently on a route guidance and you select a Point on Map, the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

**NOTE:** You can press the "back arrow" button on the touchscreen to return to the previous screen or the "X" button on the touchscreen to exit.

### Where To? – City Center

To enter a destination by City Center, follow these steps:

1. While in the Nav Main Menu, press the “Where To?” button on the touchscreen then press the “City Center” button on the touchscreen.



2. Enter the name of the City you would like to route to.



4

3. Press the desired city from the list.
4. Press the “Yes” button on the touchscreen to confirm your destination and begin your route.



---

If you are currently on a route guidance and you select a City Center, the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

**NOTE:** You can press the “back arrow” button on the touchscreen to return to the previous screen or the “X” button on the touchscreen to exit.

#### Where To? – Closest Cities

To enter a destination by Closest City, follow these steps:

1. While in the Nav Main Menu, press the “Where To?” button on the touchscreen then press the “Closest City” button on the touchscreen.



2. Press the desired city from the list.



3. Press the "Yes" button on the touchscreen to confirm your destination and begin your route.

If you are currently on a route guidance and you select a Closest City, the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

**NOTE:** You can press the "back arrow" button on the touchscreen to return to the previous screen or the "X" button on the touchscreen to exit.

### Where To? – Trails

When starting to drive a trail you want to record, follow these steps:

1. While in the Nav Main Menu, press the “Where To?” button on the touchscreen then press the “Trails” button on the touchscreen.



2. Press “Start Trail Recording.”



3. When you want to end the recording of a route, press “Stop Trail Recording.”

The trip you recorded will be added to the Recent Trails list.

### Where To? – Phone

To enter a destination by Phone number, follow these steps:

1. While in the Nav Main Menu, press the “Where To?” button on the touchscreen then press the “Phone Number” button on the touchscreen.
2. Enter the Phone Number of the destination you would like to route to.
3. Press the desired destination from the list.
4. Press the “Yes” button on the touchscreen to confirm your destination and begin your route.



If you are currently on a route guidance and you select a Phone number destination, the system will ask you to choose one of the following:

4

- Cancel previous route
- Add as first destination
- Add as last destination

**NOTE:** You can press the “back arrow” button on the touchscreen to return to the previous screen or the “X” button on the touchscreen to exit.

### Before Route Guidance

Before confirming the route with the "Yes" button on the touchscreen, it is possible to select options different from the default route settings.

- Options - Press the "Options" button on the touchscreen to display a list of options to alter your route. To make a selection press and release the desired setting until a check-mark appears.





- Avoid - Press the "Avoid" button on the touchscreen to choose road types to avoid during your route. To make a selection press and release the desired setting until a check-mark appears.



**NOTE:** Since toll roads, tunnels and ferries are built for the purpose of shortening travel distances, avoiding these road types may increase distance and travel time.

- Save - Press the "Save" button on the touchscreen to save the destination as a Favorite.

Press the "Yes" button on the touchscreen to confirm your destination and to start your route guidance.

**NOTE:** You can press the "back arrow" button on the touchscreen to return to the previous screen or the "X" button on the touchscreen to exit.

#### View Map – Main Menu

Press the "View Map" button from the Nav Main Menu to display a map of your current position.



With the map displayed you have the following features available:

**Menu**

Press this button on the touchscreen to return to the Nav Main Menu.

**Zoom In +/Zoom Out -**

Press the “Zoom In (+) or Zoom Out (-)” buttons on the touchscreen to change the zoom level. Roads with lower functional classification are not shown in higher zoom levels. (e.g. residential streets, lightly-traveled county roads.)

**Time of Arrival/Time to Destination/Distance (only during route guidance)**

**4**

Press the button in the upper right area of the screen to the display items available. Press the desired option button on the touchscreen.

- Time of Arrival
- Time to Destination
- Distance



---

**Turn List (only during route guidance)**

Press the area in the upper center part of the screen that displays your next turn to see a Turn List for your current route.

Press a turn in the displayed Turn List for the following options:

- Show on Map
- Avoid Street

**Options (only during route guidance)**

Press the "Options" button on the touchscreen to display the following options. Press the desired button on the touchscreen.

- *2D North Up/Map View 2D/Map View 3D (3D Available On 7AN)*

Press this button on the touchscreen to scroll between the three viewing options.

**· Settings**

Press this button on the touchscreen to view all the available settings. See *View Map - Settings* for more information.

**· Repeat**

Press this button on the touchscreen to repeat the current voice prompt.

**· Turn List**

Press this button on the touchscreen to view the turn list for the current route.

**· Stop Guidance**

Press this button on the touchscreen to stop route guidance.

#### Where Am I?

Press the area in the lower center part of the screen that displays your current location to view the Where Am I? view.

Where Am I? displays the address and GEO Coordinates of your current location.

- Press the "GPS" button on the touchscreen to view the GPS information.
- Press the "Save" button on the touchscreen to save the location in your Favorites.



4

You can press the "back" arrow button on the touchscreen to return to the previous screen or the "X" button on the touchscreen to exit.

### View Map – Settings

With the Map displayed, press the “Options” button on the touchscreen then press the “Settings” button on the touchscreen.



The following Map Settings are available:

- **Map Setup** – Press this button on the touchscreen to display items to customize how your map is viewed. Settings – Map Setup for more information.

- 
- **Speed Limit** – Press this button on the touchscreen to turn on/off speed limit warning announcements and to enter a pre-defined speed limit for your route.
  - **Guidance** – Press this button on the touchscreen to display items to customize your route guidance. Settings – Guidance Options for more information.
  - **Units – If Equipped** – Press this button on the touchscreen to change the units display. Press the desired button on the touchscreen.
    - U.S. (mile/feet)
    - Imperial (mile/yard)
    - Metric (meter)
  - **GPS (DMS)** – Press this button on the touchscreen to change the GPS display. Press the desired button on the touchscreen.
    - Decimal
    - DMS
    - DM
  - **Copy device information to USB? (If Equipped)** – Press this button on the touchscreen to copy your radio information to a USB jump drive through the available USB port.

### Settings – Map Setup

With the Map displayed, press the “Options” button on the touchscreen, then press the “Settings” button on the touchscreen and then the “Map Setup” button on the touchscreen.



The following Map Setup options are available:

#### Map View

Press this button on the touchscreen to change how the Map View is displayed. Press the desired button on the touchscreen.

- 
- 3D (3D Map View Is Only Available On Uconnect 7AN. Must Select 3D City Models Or 3D Landmarks For 3D Map View To Display.)
  - 2D

**Orientation**

Press this button on the touchscreen to change how the Map Orientation is displayed. Press the desired button on the touchscreen.

- North Up
- Heading Up

**Current Street**

Press this button on the touchscreen to turn on/off the current street display on the lower center of the Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

**Destination Information**

Press this button on the touchscreen to change the Destination Information that is displayed in the upper right corner of the Map View. Press the desired button on the touchscreen.

- Time of Arrival
- Time to Destination
- Distance

**AutoZoom**

Press this button on the touchscreen to change how the AutoZoom feature adjust the zoom level during guidance in Map View. Press the desired button on the touchscreen.

- Far
- Normal

- Near
- Off

#### **Vehicle Icon**

Press this button on the touchscreen to change the vehicle icon that is displayed while in Map View. Press Previous or Next to view the available icons. Press the back icon button on the touchscreen when you've made your selection.

#### **Show POI Icons**

Press this button on the touchscreen to show the selected Point of Interest icons while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

#### **POI Icon List**

Press this button on the touchscreen to display the available Point of Interest icons you would like displayed

while in Map View. Press and release the desired selection button on the touchscreen until a check-mark appears, showing the setting has been selected.

#### **TMC Incidents - If Equipped**

Press this button on the touchscreen to show Traffic Message Channel (TMC) Incidents while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

#### **Speed and Flow**

Press this button on the touchscreen to show the Speed and Flow of traffic while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

---

**3D City Models (Available On The Uconnect 7AN)**

Press this button on the touchscreen to display 3D city models while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

**3D Landmarks (Available On The Uconnect 7AN)**

Press this button on the touchscreen to display 3D landmarks while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected. Next, change Map View to 3D by selecting Navigation Options - Settings - Map Setup - Map View.

**Digital Terrain Model (7AN Only)**

Press this button on the touchscreen to display the areas terrain while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

**Park Areas**

Press this button on the touchscreen to display Park Areas while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

**Railroads**

Press this button on the touchscreen to display Railroad tracks while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

**City Areas**

Press this button on the touchscreen to display City Areas while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.



---

### River Names

Press this button on the touchscreen to display River Names while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

You can press the "back arrow" button on the touchscreen to return to the previous screen or the "X" button on the touchscreen to exit.

### Settings — Guidance

With the Map displayed, press the "Options" button on the touchscreen, then press the "Settings" button on the touchscreen and then the "Guidance" button on the touchscreen. You can also access this menu by pressing the "Settings" button in the lower right of the Nav Main Menu.

The following Guidance options are available.

- *Play Voice Guidance Prompts*

Press this button on the touchscreen to enable Voice Guidance Prompts during route guidance. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

- *Nav Volume Adjustment*

Press the "+" or "-" buttons on the touchscreen to adjust the Nav Voice Prompt Volume.

**NOTE:** If the NAV Volume Adjustment setting is set between level 0 and 11 it will default to level 12 on a vehicle restart, if the NAV Volume Adjustment setting is set between level 13 and 38 it will RETAIN the setting on a vehicle restart.

---

· *Lane Recommendation*

Press this button on the touchscreen to enable Lane Recommendation during route guidance. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

· *Junction View*

Press this button on the touchscreen to enable Junction View during route guidance. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

· *Navigation Turn-by-Turn Displayed In Cluster*

Press this button on the touchscreen to enable navigation turn-by-turn displayed in vehicles cluster during route guidance. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

· *TMC Route Mode (If Equipped)*

Press this button on the touchscreen to change how the Traffic Message Channel (TMC) Route Mode functions during route guidance. Select from:

- Automatic
- By Delay Time
- Manual
- Off

· *TMC Avoidance Types (If Equipped)*

Press this button on the touchscreen to display the available Traffic Message Channel (TMC) Avoidance Types you would like displayed while in route guidance. Press and release the desired selection button on the touchscreen until a check-mark appears, showing the setting has been selected.

· *Avoid*

Press the Avoid button on the touchscreen to choose road types to avoid during your route. To make a selection press and release the desired setting until a check-mark appears.

**NOTE:** You can press the “back arrow” button on the touchscreen to return to the previous screen or the “X” button on the touchscreen to exit.

From the Nav Main Menu, press the “Information” button on the touchscreen and select one of the following options to view additional information.

- Traffic
- Where Am I?
- Trip Computer



**Information – SiriusXM Traffic (U.S. MARKET 7AN ONLY)**

To select SiriusXM Traffic information, follow these steps:

1. While in the Nav Main Menu, press the “Information” button on the touchscreen.
2. Press the “Traffic” button on the touchscreen.



Traffic displays detailed traffic information, refer to SiriusXM Traffic in this section for further information.

#### Information – Where Am I?

To select “Where Am I?” information, follow these steps:

1. While in the Nav Main Menu, press the “Information” button on the touchscreen.
2. Press the “Where Am I?” button on the touchscreen.



4

Where Am I? displays the address and GEO Coordinates of your current location.

3. Press the "GPS" button on the touchscreen to view the GPS information.
4. Press the "Save" button on the touchscreen to save the location in your Favorites.

**NOTE:** You can press the "back arrow" button on the touchscreen to return to the previous screen or the "X" button on the touchscreen to exit.

#### **Information – Trip Computer**

To select "Trip Computer" information, follow these steps:

1. While in the Nav Main Menu, press the "Information" button on the touchscreen.
2. Press the "Trip Computer" button on the touchscreen.



Trip Computer displays the following trip information from your last trip:

- Travel Direction
- Distance to final Destination
- Vehicle Speed
- Distance Traveled
- Overall average speed

- Moving average speed
- Maximum speed reached
- Total time traveled
- Travel time spent moving
- Travel time spent stopped

**NOTE:** You can press the “back arrow” button on the touchscreen to return to the previous screen or the “X” button on the touchscreen to exit.

#### Emergency – Main Menu

From the Nav Main Menu, press the “Emergency” button on the touchscreen and press one of the following options to search and route to a specific location.

- Hospital – Search and route to a Hospital close to your current location

- Police – Search and route to a Police Station close to your current location
- Fire Department – Search and route a Fire Department close to your current location



4

Press the “Location” button on the touchscreen to display your exact current location.

Press the “Save” button on the touchscreen to save your current location in Favorites.

**NOTE:** You can press the “back arrow” button on the touchscreen to return to the previous screen or the “X” button on the touchscreen to exit.

#### **Emergency – Hospital**

To search for a Hospital close to your current location, follow these steps:

1. While in the Nav Main Menu, press the “Emergency” button on the touchscreen.



2. Press the “Hospital” button on the touchscreen.



You can search for a Hospital by the following categories, which are button tabs at the top of the screen.

- Name
- Distance
- ABC (Search)

**NOTE:** In case of emergency, please contact the facility to verify their availability before proceeding.

3. Press the desired Hospital and press "Yes" to confirm the destination.

If you are currently on a route guidance and you select a Hospital the system will ask you to choose one of the following:

**4**

- Cancel previous route
- Add as first destination
- Add as last destination

**NOTE:** You can press the "back arrow" button on the touchscreen to return to the previous screen or the "X" button on the touchscreen to exit.



### Emergency – Police

To search for a Police Station close to your current location, follow these steps:

1. While in the Nav Main Menu, press the “Emergency” button on the touchscreen.



2. Press the “Police” button on the touchscreen.



You can search for a Police Station by the following categories, which are button tabs at the top of the screen.

- Name
- Distance
- ABC (Search)

---

**NOTE:** In case of emergency, please contact the facility to verify their availability before proceeding.

3. Press the desired Police Station and press “Yes” to confirm the destination.

If you are currently on a route guidance and you select a Police Station the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

**NOTE:** You can press the “back arrow” button on the touchscreen to return to the previous screen or the “X” button on the touchscreen to exit.

#### Emergency – Fire Department


To search for a Fire Department close to your current location, follow these steps:

1. While in the Nav Main Menu, press the “Emergency” button on the touchscreen.



4

2. Press the "Fire Department" button on the touchscreen.

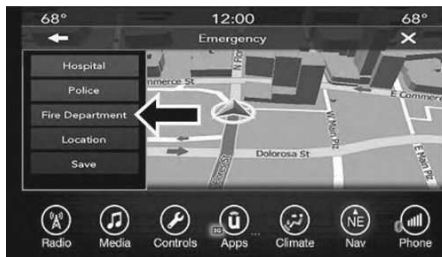

You can search for a Fire Department by the following categories, which are button tabs at the top of the screen.

- Name
- Distance

· ABC (Search)

**NOTE:** In case of emergency, please contact the facility to verify their availability before proceeding.

3. Press the desired Fire Department and press "Yes" to confirm the destination.

If you are currently on a route guidance and you select a Fire Department the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

**NOTE:** You can press the "back arrow" button on the touchscreen to return to the previous screen or the "X" button on the touchscreen to exit.

---

The map data available in your vehicle is the most up-to-date information that was available when your vehicle was built. Map data is updated periodically as map information changes. Follow the steps below if you wish to obtain an update for your vehicle.

1. Depending on the vehicle you own, please visit [www.Chrysler.com](http://www.Chrysler.com), [www.Jeep.com](http://www.Jeep.com), [www.Dodge.com](http://www.Dodge.com), [www.ramtrucks.com](http://www.ramtrucks.com), or [www.drivesrt.com](http://www.drivesrt.com) to obtain your map update. Click the "Owners" tab at the top of the page. At the bottom of the page (website footer) under "Multimedia Systems" select NAVTEQ Navigation Updates. Simply enter your information and place your order.

2. Or, visit [DriveUconnect.com](http://DriveUconnect.com) and follow these steps:
  - Under the "Help & Support" tab, select your vehicle brand. Click "NAVTEQ NAVIGATION UPDATES." Simply enter your information and place your order.

3. Or, if you wish, you can also visit your dealer or place a phone call to request your Map Update. US/CAN General Consumer Support:

888-628-6277

FCA US LLC Dealer Garmin Support:

877-628-4480

FCA US LLC Consumer FreshMaps


866-422-8171

---

Your Uconnect Theater is designed to give your family years of enjoyment.

There are multiple ways to interact with your Uconnect Theater system.

- Play your favorite CDs, DVDs or Blu-ray Discs
- Plug and play a variety of standard video games or devices into the HDMI port
- Listen to audio over the wireless headphones
- Plug and play a variety of devices into the Video USB port
- Plug in standard headphones to listen to audio

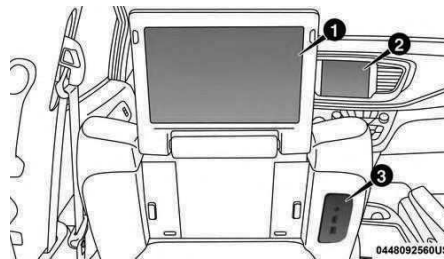

- 1 — Uconnect Theater Touchscreen
  - 2 — Uconnect Radio
  - 3 — Uconnect Theater Media Hub
-

---

There are three different ways to operate the features of the Uconnect Theater.


- The Remote Control
- The Touchscreen Radio
- The Individual Video Screens



You can access your Uconnect Theater system from the radio following the steps below.

1. Press the "Media" button.
2. Press the "Uconnect Theater" button icon.

**NOTE:** The Uconnect Theater icon may be dragged and dropped down to the personalized menu bar to create an App/shortcut. Refer to "Personalized Menu Bar" in this section for more information.

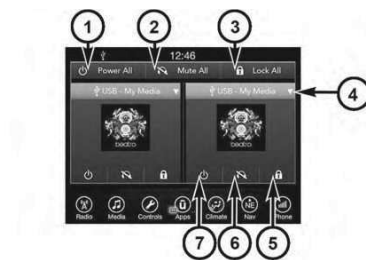

- |                           |                                 |
|---------------------------|---------------------------------|
| 1 – Power All             | 5 – Lock On/Off current screen  |
| 2 – Mute All              | 6 – Mute On/Off current screen  |
| 3 – Lock All              | 7 – Power On/Off current screen |
| 4 – Source Drop Down List |                                 |

Parents can control certain features of the system with the "Uconnect Theater Controls" screens, right from the Uconnect touchscreen radio. Options are:

- Change media sources
- Lock one or both screens
- Mute an individual screen or both screens
- Turn On/Off one or both screens
- Select APPS
- View media while gear selector is in Park



4

Press this button and use the "Listen In" feature to listen to audio through cabin speakers.

You can also access your Uconnect Theater system from the rear screens from the steps below.




- 
1. Lift screen upward, the system will automatically power on.

**NOTE:** A message asking if you would like to pair a remote will pop up if one has not already been paired to the system.


2. If "YES" is selected to Pair a Remote, Pairing will immediately start.
3. If "NO" is selected, the Uconnect Theater home screen will pop up.

**NOTE:**

- There will be a touchscreen notification message when pairing is successful. Repeat the above steps to pair the second remote.
- If remote is ever non-operational, try pairing remote.

When watching a video source, pushing "Settings"  icon on the touchscreen activates the Settings menu. These settings control the appearance of the video on the screen. The factory default settings are already set for optimum viewing, so there is no need to change these settings under normal circumstances.

To change the settings, use one of the touchscreens. To reset all values back to the original settings, select the "Reset to Defaults" then select "YES."

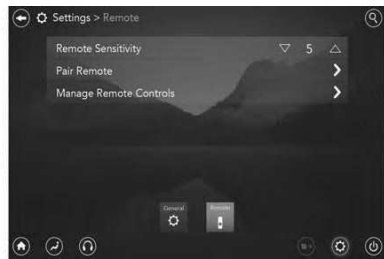

If the remote needs to be paired to your Uconnect Theater system, follow the procedure below:

1. Press the "Settings"  icon on the touchscreen.

2. Press the "Remote" button on the touchscreen in the settings menu.
3. Select "Pair Remote" and follow the on screen instructions to complete the pairing process.

**NOTE:**

- There will be a touchscreen notification message when pairing is successful/unsuccessful. Repeat the above steps to pair the second remote.
- If remote is ever non-operational, try pairing remote.
- The system can accommodate up to 10 paired remote controls.

4

In events such as updating the Uconnect Theater software, or taking a remote to another vehicle, the remote

---

will need to be unpaired from your Uconnect Theater system. To unpair the remote, follow the procedure below:

1. Select "Manage Remote Controls" from the Remote section of 9Settings and follow the on screen instructions to complete the unpairing process.
2. Push and hold the "Screen", "Down Arrow", and "Play/Pause" buttons for 5 seconds, or until the remote screen indicator light flashes.
3. Once complete, the remote will be ready to pair again.

**NOTE:** There will be a touchscreen notification message when unpairing is successful. Repeat the above steps to unpair a second remote.




1007093761US

- 1 – Available Sources Screen 1  
2 – USB Source Playing Screen 2
-

---





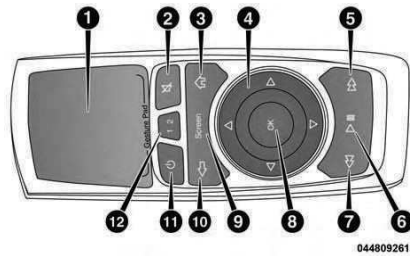


Users can select content for each screen from the radio by choosing desired content from drop down menu.

**NOTE:** Use the "View Screen" function to pull content from one screen to the other in a single press of a button. Doing this however will disable and gray out certain player controls on the screen viewing the other screen's content.



4


1. Gesture Pad — Control mouse pointer position in this area to move and select items on the touchscreen, functions similar to a mouse.

- 
2. Mute Button — Mutes headphone audio.
  3. Home Button — Push to access "Sources".
  4. Arrow Buttons — Push the arrow     buttons to highlight an item or scroll through menus.
  5. Fast Forward Button  — Push and hold to fast forward through the current audio track or video chapter. Push once to skip to the next track.
  6. Play/Pause Button  — Begin/resume or pause display.
  7. Fast Rewind Button  — Push and hold to fast rewind through the current audio track or video chapter. Push once to revert back to the previous track.
  8. OK Button — Push to select the highlighted option in a menu.
  9. Screen Selector Button — Push the screen selector to toggle between screen 1 (Driver Side), or screen 2 (Passenger Side).
  10. Back Button — Push to exit out of menus or return to previous screen.
  11. Power Button — Turns the screen and wireless headphone transmitter for the selected Channel on or off.
  12. Screen Indicator — Indicates which screen (1 or 2) is being controlled by the remote control when a button is pushed.


### Replacing The Remote Control Batteries

The remote control requires two AAA batteries for operation. To replace the batteries:

1. Locate the battery compartment on the back of the remote, then slide the battery cover downward.
2. Replace the batteries, making sure to orient them according to the polarity diagram shown.
3. Replace the battery compartment cover.

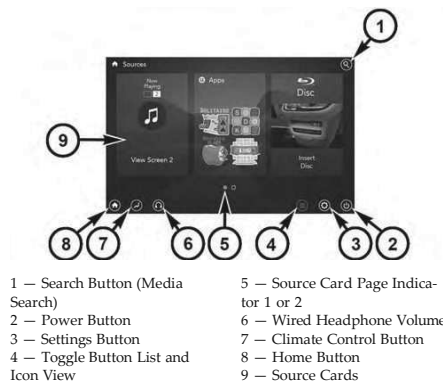

- |                                      |                                       |
|--------------------------------------|---------------------------------------|
| 1 — Search Button (Media Search)     | 5 — Source Card Page Indicator 1 or 2 |
| 2 — Power Button                     | 6 — Wired Headphone Volume            |
| 3 — Settings Button                  | 7 — Climate Control Button            |
| 4 — Toggle Button List and Icon View | 8 — Home Button                       |
|                                      | 9 — Source Cards                      |

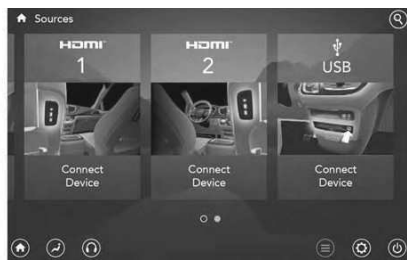

You can choose sources such as HDMI, USB, Apps, or Blu-ray. You may also view content of the opposite screen in one step by choosing the “View Screen” source card.

**NOTE:**

- Source card order can be changed by pressing the Settings button on the touchscreen and scrolling down to **Source Card Order**.
- Use the “View Screen” function to pull content from one screen to the other. Doing this however will disable and gray out certain player controls.

**General Settings**

To change source card order, select “Source Card Reorder”, then press and hold source card on the touchscreen, and drag and drop in desired order.

---

You can also adjust the following below and more.

- Brightness
- Media port lighting on and off
- Clock on and off


**NOTE:** System information can also be displayed under General Settings.

**Remote Settings**

Under this setting, you can access the following:

- Manage Remotes
- Remote sensitivity (**This adjusts the speed and sensitivity of cursor on screen when using gesture pad**)

The DVD/Blu-ray Disc player is located under the radio controls in the instrument panel.

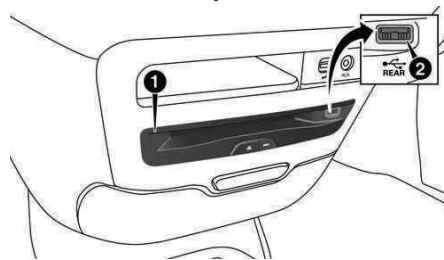

- 1 — Disc Player (Rear)
- 2 — Rear Video USB Port





### Using The Touchscreen Radio



**NOTE:** Control functions apply to individual screen selected displayed on touchscreen.

#### 1. Power

Press to turn "selected Screen" On/Off.

---

2. **Mute**

Mute rear headphones for selected source for the current ignition cycle. Pressing mute again will unmute rear headphones.

3. **Lock**

Press to enable/disable Remote Control functions and Touchscreen Controls for the selected source.

4. **View**

Select this button to full screen video if vehicle is not moving. Button is disabled when not viewing a video source or when the vehicle is in motion.

1. Insert a Blu-ray disc or DVD disc into the disc player with the label facing up. Or insert a USB drive into rear Video USB port.

2. Press the "Uconnect Theater" button on the touchscreen. Refer to "Accessing The System From The Uconnect Radio" Within this section for further information.

3. Select Disc or USB from desired screen (1 or 2).

**NOTE:** To play a DVD/Blu-ray disc on both screens simultaneously, select disc from both screen drop downs.

4

4. Press "Play" button.

To view a Blu-ray disc on the radio select the 'View' button while in the selected screen controls, then select the Disc source from drop down menu.

**NOTE:** Viewing a Blu-ray disc on the radio screen is not available in all states/provinces, and the vehicle must be stopped, and the gear selector must be in the PARK position for vehicles with automatic transmission.


The four colored buttons (red, green, blue, yellow) are designed for use with certain Blu-ray disc movie titles to access particular features or software on the disc. See the documentation provided with your Blu-ray disc movie to see if these buttons can be used.



0101093795US

1 – Red Button  
2 – Green Button

3 – Blue Button  
4 – Yellow Button

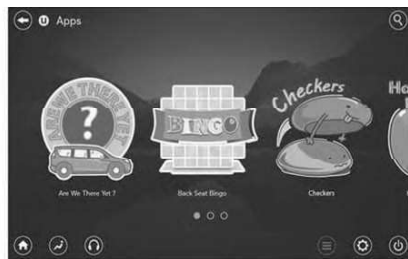

4

Select the Apps source card to play pre-loaded games. Pressing the "Help" button teaches users how to play each game. Pick from games:

- Back Seat Bingo
- Checkers
- Hanging Fruit

- License Plate Game
- MathFlashCards
- Solitaire
- Sudoku
- Tic Tac Toe

**NOTE:** To exit a game, push "Exit Button" than "Back Arrow," or "Home Button" on the touchscreen.




---

#### Are We There Yet?

When a navigation route has been set from the Uconnect radio the second row passengers can use “Are We There Yet?” for an animated screen showing distance and time remaining on navigation routes as well as the estimated time of arrival with pop-up notifications. Notifications and frequency can be set up for route information while in other Uconnect Theater screens too.

**NOTE:** Route notifications will pop-up at the bottom of the screen in the center.

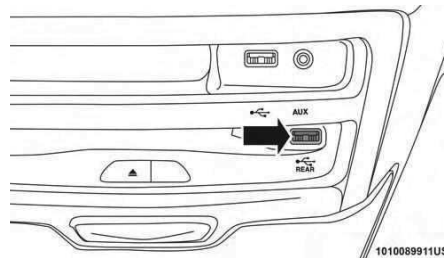

Plug in a jump drive, iPhone, iPod or mass storage device and play your favorite music or movies.


---

**NOTE:** To view USB media on the rear theater screens, insert a USB jump drive into the port on the DVD/Blu-ray disc player. The USB jump drive port is located under the radio controls in the instrument panel.



Use the search feature to find your music faster.

Connect the video game console to the HDMI 1 or 2 ports, located behind the first row seat.

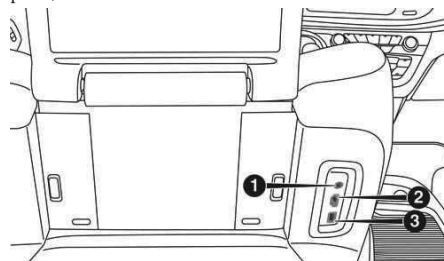

- 1 — AUX Jack (Headphone Output Only)
- 2 — HDMI Port
- 3 — USB Port (Charge Only)

---

**NOTE:** Certain high-end video games will exceed the power limit of the vehicle's Power Inverter. Refer to "Power Inverter" in "Getting To Know Your Vehicle" in this guide for further information.

The headphones receive two separate channels of audio using an infrared transmitter from the video screen.

If no audio is heard after increasing the volume control, verify that the screen is turned on, the channel is not muted and the headphone channel selector button is on the desired channel. If audio is still not heard, check that fully charged AAA batteries are installed in the headphones.



0448003394

- 1 – Power ON/OFF Button
- 2 – Volume Control
- 3 – Channel Selection Button

4

---


The headphone power indicator and controls are located on the right ear cup.



---

**NOTE:** Uconnect Theater must be turned on before sound can be heard from the headphones. To conserve battery life, the headphones will automatically turn off approximately three minutes after the rear video system is turned off.

#### Changing the Audio Mode for Headphones

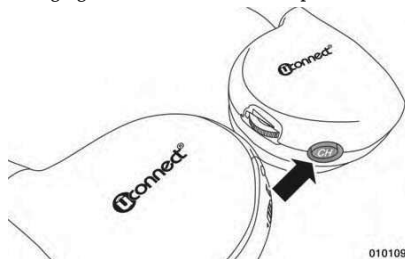

1. Ensure the remote control and the headphones are on the same channel.
2. Push the Home button on the remote control.
3. When the Home menu appears on screen, use the arrow buttons on the remote control to navigate to the available modes and push the OK button to select the new mode or use the touchpad at the top of the remote control.

#### Replacing The Headphone Batteries

Each set of headphones requires two AAA batteries for operation. To replace the batteries:

1. Locate the battery compartment on the left ear cup of the headphones, and then slide the battery cover downward.
2. Replace the batteries, making sure to orient them according to the polarity diagram shown.

---

3. Replace the battery compartment cover.

**Delphi Automotive Stereo Headphone Lifetime Limited Warranty**

**Who Does This Warranty Cover?** This warranty covers the initial user or purchaser (9you9 or 9your9) of this particular Unwired Technology LLC (9Unwired9) wireless headphone (9Product9). The warranty is not transferable.

**How Long Does the Coverage Last?** This warranty lasts as long as you own the Product.

**What Does This Warranty Cover?** Except as specified below, this warranty covers any Product that in normal use is defective in workmanship or materials.

**What Does This Warranty Not Cover?** This warranty does not cover any damage or defect that results from misuse, abuse or modification of the Product other than by Delphi Automotive. Foam earpieces, which will wear

over time through normal use, are specifically not covered (replacement foam is available for a nominal charge). DELPHI AUTOMOTIVE IS NOT LIABLE FOR ANY INJURIES OR DAMAGES TO PERSONS OR PROPERTY RESULTING FROM THE USE OF, OR ANY FAILURE OR DEFECT IN, THE PRODUCT, NOR IS DELPHI AUTOMOTIVE LIABLE FOR ANY GENERAL, SPECIAL, DIRECT, INDIRECT, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY, PUNITIVE OR OTHER DAMAGES OF ANY KIND OR NATURE WHATSOEVER. Some states and jurisdictions may not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights. You may also have other rights, which vary from jurisdiction to jurisdiction.

---

**What Will Delphi Automotive Do?** Delphi Automotive, at its option, will repair or replace any defective Product. Delphi Automotive reserves the right to replace any discontinued Product with a comparable model. THIS WARRANTY IS THE SOLE WARRANTY FOR THIS PRODUCT, SETS FORTH YOUR EXCLUSIVE REMEDY REGARDING DEFECTIVE PRODUCTS, AND IS IN LIEU OF ALL OTHER WARRANTIES (EXPRESS OR IMPLIED), INCLUDING ANY WARRANTY FOR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

If you have any questions or comments regarding your Delphi Automotive wireless headphones, please phone 1-888-293-3332.

You may register your Delphi Automotive wireless headphones by phone at 1-888-293-3332.

When listening to a CD Audio or CD Data disc, pushing the remote control's arrow buttons will navigate the cursor on the rear touchscreen for whichever touchscreen is selected.


**NOTE:** Inserting a disc into the player will "auto play" the disc if already in the 9Disc9 source menu on the rear screens.

To listen to only audio portion of the channel with the screen closed:

- Set the audio to the desired source and channel.
- Close the video screen.

- 
- When the screen is reopened, the video screen will automatically turn back on and show the appropriate display menu or media.

If the screen is closed and there is no audio heard, verify that the headphones are turned on (the ON indicator is illuminated) and the headphone selector switch is on the desired channel. If the headphones are turned on, push the remote control's power button to turn audio on. If audio is still not heard, check that fully charged batteries are installed in the headphones.

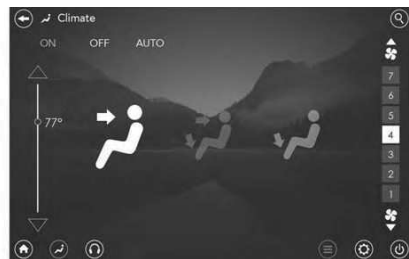

4

The rear climate controls can also be controlled using the Uconnect Theater system. Refer to "Climate Controls" in "Getting To Know Your Vehicle" for further information.

---

Many BD and DVD discs are coded by geographic region. These region codes must match in order for the disc to play. If the region code for the BD or DVD disc does not match the region code for the Blu-ray Disc player, the disc will not play. USA and Canada are set for BD : code A / DVD : code 1.

#### **Recorded Discs**

The Blu-ray Disc player will play CD-R and CD-RW discs recorded in CD-Audio or Video-CD format, or as a CD-ROM containing MP3, AAC or WMA files. The player will also play DVD-Video content recorded to a DVD-R or DVD-RW disc. DVD-ROM discs (either pressed or recorded) are not supported. Compressed audio and DivX recorded on DVD is playable.

If you record a disc using a personal computer, there may be cases where the Blu-ray Disc player may not be able to play some or the entire disc, even if it is recorded in a

compatible format and is playable on other players. To help avoid playback problems, use the following guidelines when recording discs.

- Open sessions are ignored. Only sessions that are closed are playable.
- For multi-session CDs that contain only multiple CD-Audio sessions, the player will renumber the tracks so each track number is unique.
- For CD Data (or CD-ROM) discs, always use the ISO-9660 (Level 1 or Level 2), Joliet, or Romeo format. Other formats (such as HFS, or others) are not supported.
- The player recognizes a maximum of 2000 files and 255 folders (includes the ROOT folder) per CD-R and CD-RW disc.
- Mixed media recordable DVD formats will only play the Video\_TS portion of the disc.

---

If you are still having trouble writing a disc that is playable in the Blu-ray Disc player, check with the disc recording software publisher for more information about burning playable discs.

The recommended method for labeling recordable discs (CD-R, CD-RW, and DVD-R) is with a permanent marker. Do not use adhesive labels as they may separate from the disc, become stuck, and cause permanent damage to the DVD player.

#### **Compressed Audio Files (MP3, WMA and AAC)**

The Blu-ray Disc player is capable of playing MP3 (MPEG-1 Audio Layer 3), WMA (Windows Media Audio) files and AAC (Advanced Audio Coding) from a CD Data disc (usually a CD-R or CD-RW) or DVD Data disc (usually a DVD-R or DVD-RW).

- The Blu-ray Disc player always uses the file extension to determine the audio format, so MP3 files must always end with the extension “.mp3” or “.MP3” and

WMA files must always end with the extension “.wma” or “.WMA” and AAC files must always end with the extension “.aac” or “.AAC” or “.m4a”. To prevent incorrect playback, do not use these extensions for any other types of files.

- For MP3 files, only version 1 ID3 tag data (such as artist name, track title, album, etc.) are supported.
- Any file that is copy protected (such as those downloaded from many online music stores) will not play. The Blu-ray player will automatically skip the file and begin playing the next available file.
- Other compression formats such as MP3 Pro, Ogg Vorbis, and ATRAC3 will not play. The Blu-ray player will automatically skip the file and begin playing the next available file.

- 
- If you are creating your own files, the recommended fixed bit rate for MP3 files is between 32 and 320Kbps and the recommended fixed bit rate for WMA files is between 16 and 192Kbps. Variable bit rates are also supported. For both formats, the recommended sample rate is either 44.1kHz or 48kHz.
  - To change the current file, use the remote control "Seek Forward" or "Seek Back" buttons to return to the start of the current or previous file.
  - AAC (MPEG-4 AAC, Low Complexity Profile) support.
  - AAC HE v1 (AAC High Efficiency v1 aka. AAC/MPEG4v2 AAC+) support.
  - HE-AAC v1, v2 support.

#### **Disc Errors**

If the Blu-ray Disc player is unable to read the disc, a 9Disc Error9 message is displayed on the rear screen and Radio displays. A dirty, damaged, or incompatible disc format are all potential causes for a 9Disc Error9 message.

If a disc has a damaged track which results in audible or visible errors that persists for two seconds, the Blu-ray Disc player will attempt to continue playing the disc by skipping forward one to three seconds at a time. If the end of the disc is reached, the Blu-ray Disc player will return to the beginning of the disc and attempt to play the start of the first track.

The Blu-ray Disc player may shut down during extremely hot conditions, such as when the vehicle's interior temperature is above 140° F (60.0° C). When this occurs, the player will display 9High Temp9 and will shut

---

off the Rear Seat displays until a safe temperature is reached. This shutdown is necessary to protect the optics of the Blu-ray Disc player.

#### Open Source Software

The software built into this product, are composed of multiple software components, and there are the copyrights of our company or third parties in each software component. Also, in this product, the following open source software has been installed.

- The licensed software for our company is based on GNU GENERAL PUBLIC LICENSE V2.0 (GPL).
- The licensed software for our company is based on GNU LESSER GENERAL PUBLIC LICENSE V2.1 (LGPL).
- The software which has the copyrights of a third party and is distributed as free software.

Please refer the contract details which are disclosed in following website, for example, concerning these above software. <http://www.gnu.org/licenses/old-licenses/gpl-2.0-standalone.html>, <http://www.gnu.org/licenses/lgpl-2.1-standalone.html>, <http://www.freetype.org/FTL.TXT>.

You have the right of acquisition, modification, and distribution of the source code of the GPL/LGPL software. These are distributed in the hope that it will be useful by itself. However, including the absence of an implied warranty on the suitability for a particular purpose or merchantability, the warranty of any kind will not be made. You may download Source Code from the indicating URL by the pressed button of "Open Source Software" on the Setup Menu. Also, please refrain from contact about the contents of the source code of open source. The source code of the software in which there are the copyrights of our company or third parties, is not subject to distribution.



kernel 2.6.16.29	FreeType 2.2.2.1	gcc sh4eb 3.4.5	glibc 2.3.5	boot_ loader sh-ipl+g 1.00
libgcc_s- 3.4.5	bash- 3.0-31	busybox 1.00	MAKE DEV 1.1.0	module- init-tools 3.1.0
libterm- cap 2.0.8	mtd- utils 20050619	initscripts 8.11.1-1	libstdc+ +3.4.5-10	libiconv 1.11
coreutils 6.9	dosfstools 2.10-3	directfb 1.0.0-rc1	kxml 1.21	binutils- sh4eb 2.16.91.0.2
v2lin 0.1	-	-	-	-

#### Dolby

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

#### dts

Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS 2.0 Channel and the DTS logos are trademarks of DTS, Inc. Product includes software. DTS, Inc. All Rights Reserved. For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0 Channel is a trademark of DTS, Inc. DTS, Inc. All Rights Reserved.

---

**DVD**

The DVD logo is a trademark of DVD Format/Logo Licensing Corporation. The DVD logo is a trademark of DVD Format/Logo Licensing Corporation registered in the U.S., Japan and other countries.

**BDA**

Blu-ray Disc, Blu-ray, BD-Live, BONUSVIEW, AVCREC and the logos are trademarks of the Blu-ray Disc Association.

**AVCHD**

AVCHD and the AVCHD logo are trademarks of Panasonic Corporation and Sony Corporation.

**BD-J**

Java is a registered trademark of Oracle and/or its affiliates.

**MPEG**

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD (AVC VIDEO) AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA](http://WWW.MPEGLA).

**DivX**

This DivX Certified device has passed rigorous testing to ensure it plays DivX video. To play purchased DivX movies, first register your device at [vod.divx.com](http://vod.divx.com). Find

---

your registration code in the DivX VOD section of your device setup menu. DivX, DivX Certified and associated logos are trademarks of DivX, LLC and are used under license.

**Cinavia**

9Cinavia Notice This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted. More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at <http://www.cinavia.com>. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA. "This product incorporates proprietary technology under license from Verance Corporation and is protected by U.S. Patent

7,369,677 and other U.S. and worldwide patents issued and pending as well as copyright and trade secret protection for certain aspects of such technology. Cinavia is a trademark of Verance Corporation. Copyright 2004-2010 Verance Corporation. All rights reserved by Verance. Reverse engineering or disassembly is prohibited."

<b>CAUTION!</b>
-----------------

<b>Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.</b>
--

The operation is subject to the following two conditions:

1. This device may not cause harmful interference.

---

2. This device must accept any interference that may be received including interference that may cause undesired operation.

**Don't drive through traffic. Drive around it.**

Avoid congestion before you reach it. By enhancing your vehicle's navigation system with the ability to see detailed traffic information, you can pinpoint traffic incidents, determine average traffic speed and estimate travel time along your route. Since the service is integrated with a vehicle's navigation system, SiriusXM Traffic can help drivers pick the fastest route based on traffic conditions.

1. Detailed information on traffic speed, accidents, construction, and road closings.

2. Traffic information from multiple sources, including police and emergency services, cameras and road sensors.

3. Coast-to-coast delivery of traffic information.

4. View conditions for points along your route and beyond.


4

In addition to delivering over 160 channels of the best sports, entertainment, talk, and commercial-free music, SiriusXM offers premium data services that work in conjunction with compatible navigation systems. SiriusXM Travel Link brings a wealth of useful information into your vehicle and right to your fingertips.

• Weather — Check variety of local and national weather information from radar maps to current and five day forecast.

- 
- Fuel Prices — Check local gas and diesel prices in your area and route to the station of your choice.
  - Sports Scores — In-game and final scores as well as weekly schedules.
  - Movie Listings — Check local movie theatres and listings in your area and route to the theater of your choice.

SiriusXM Travel Link feature is completely integrated into your vehicle. A few minutes after you start your vehicle, Travel Link information arrives and updates in the background. You can access the information whenever you like, with no waiting.

- To access SiriusXM Travel Link, press the “Apps ” button on the touchscreen, then the SiriusXM Travel Link button on the touchscreen.

**NOTE:**

- SiriusXM Travel Link requires a subscription, sold separately after the five year trial subscription included with your vehicle purchase.
- SiriusXM Travel Link is only available in the continental United States.

If your vehicle is equipped with this feature and within cellular range, you may be able to connect to Roadside Assistance, Uconnect Care and Vehicle Care by pressing the “Assist” button on the Rearview Mirror of your vehicle. To the extent any such calls incur additional costs, you are responsible for them. If Roadside Assistance is provided to your vehicle, you agree to be responsible for any additional roadside assistance service costs that you may incur.

---

To provide Uconnect Services to you, we may record and monitor your conversations with Roadside Assistance, Uconnect Care or Vehicle Care, whether such conversations are initiated through the Uconnect Services in your vehicle, or via a landline or mobile telephone, and may share information obtained through such recording and monitoring in accordance with regulatory requirements. You acknowledge, agree and consent to any recording, monitoring or sharing of information obtained through any such call recordings.

The 9-1-1 Call system is an embedded phone system that allows you to connect to a 9-1-1 operator in an emergency. You can choose to press the "9-1-1 Call" button on the Rearview Mirror to contact a 9-1-1 operator.

#### **9-1-1 Call Operating Instructions**

1. Push the "9-1-1 Call" button on the Rearview Mirror;

**NOTE:** In case the 9-1-1 Call button is pushed in error, there will be a 10 second delay before the 9-1-1 Call system initiates a call to a 9-1-1 operator. To cancel the 9-1-1 Call connection, push the "9-1-1 Call" button on the Rearview Mirror or press the "cancellation" button on the Phone Screen. Termination of the 9-1-1 Call will turn the green LED light on the Rearview Mirror off.

2. The LED light on the Rearview Mirror will turn green once a connection to a 9-1-1 operator has been made.
3. Once a connection between the vehicle and a 9-1-1 operator is made, the 9-1-1 Call system may transmit the following important vehicle information to a 9-1-1 operator:
  - Indication that the occupant placed a 9-1-1 Call.
  - The vehicle brand.
  - The last known GPS coordinates of the vehicle – if equipped.

- 
4. You should be able to speak with the 9-1-1 operator through the vehicle audio system to determine if additional help is needed.

**WARNING!**

**ALWAYS obey traffic laws and pay attention to the road. Some Uconnect Access services, including 9-1-1 and Assist, will NOT work without an operable 1X (voice/data) or 3G (data) network connection.**

**NOTE:**

- Your vehicle may be transmitting data as authorized by the subscriber.
  - Once a connection is made between the vehicle's 9-1-1 Call system and the 9-1-1 operator, the 9-1-1 operator may be able to open a voice connection with the vehicle to determine if additional help is needed. Once the 9-1-1 operator opens a voice connection with the vehicle's 9-1-1 Call system, the operator should be able to speak with you or other vehicle occupants and hear sounds occurring in the vehicle. The vehicle's 9-1-1 Call system will attempt to remain connected with the 9-1-1 operator until the 9-1-1 operator terminates the connection.
5. The 9-1-1 operator may attempt to contact appropriate emergency responders and provide them with important vehicle information and GPS coordinates.

**WARNING!**

- If anyone in the vehicle could be in danger (e.g., fire or smoke is visible, dangerous road conditions or location), do not wait for voice contact from a 9-1-1 operator. All occupants should exit the vehicle immediately and move to a safe location.
- Never place anything on or near the vehicle's operable 1X (voice/data) or 3G(data) network and GPS antennas. You could prevent operable 1X (voice/data) or 3G(data) network and GPS signal reception, which can prevent your vehicle from placing an emergency call. An operable 1X (voice/data) or 3G(data) network and GPS signal reception is required for the 9-1-1 Call system to function properly.

*(Continued)*

**WARNING! (Continued)**

- The 9-1-1 Call system is embedded into the vehicle's electrical system. Do not add aftermarket electrical equipment to the vehicle's electrical system. This may prevent your vehicle from sending a signal to initiate an emergency call. To avoid interference that can cause the 9-1-1 Call system to fail, never add aftermarket equipment (e.g., two-way mobile radio, CB radio, data recorder, etc.) to your vehicle's electrical system or modify the antennas on your vehicle. **IF YOUR VEHICLE LOSES BATTERY POWER FOR ANY REASON (INCLUDING DURING OR AFTER AN ACCIDENT), THE UCONNECT FEATURES, APPS AND SERVICES, AMONG OTHERS, WILL NOT OPERATE.**

*(Continued)*



**WARNING! (Continued)**

- **Modifications to any part of the 9-1-1 Call system could cause the air bag system to fail when you need it. You could be injured if the air bag system is not there to help protect you.**

**9-1-1 Call System Limitations**

Vehicles sold in Canada and Mexico DO NOT have 9-1-1 Call system capabilities.

9-1-1 or other emergency line operators in Canada and Mexico may not answer or respond to 9-1-1 system calls.

If the 9-1-1 Call system detects a malfunction, any of the following may occur at the time the malfunction is detected, and at the beginning of each ignition cycle:

- The Rearview Mirror light will continuously be illuminated red.

- The Phone Screen will display the following message "Vehicle phone requires service. Please contact your dealer."

- An In-Vehicle Audio message will state "Vehicle phone requires service. Please contact your dealer."

**WARNING!**

- **Ignoring the Rearview Mirror light could mean you will not have 9-1-1 Call services. If the Rearview Mirror light is illuminated, have an authorized dealer service the 9-1-1 Call system immediately.**
- **The Occupant Restraint Control module turns on the air bag Warning Light on the instrument panel if a malfunction in any part of the system is detected. If the Air Bag Warning Light is illuminated, have an authorized dealer service the Occupant Restraint Control system immediately.**

Even if the 9-1-1 Call system is fully functional, factors beyond FCA US LLC's control may prevent or stop 9-1-1 Call system operation. These include, but are not limited to, the following factors:

- Delayed accessories mode is active.
- The ignition key is in OFF position.
- The vehicle's electrical systems are not intact.
- The 9-1-1 Call system software and/or hardware are damaged during a crash.
- The vehicle battery loses power or becomes disconnected during a vehicle crash.
- 1X (voice/data) or 3G (data) network and/or Global Positioning Satellite signals are unavailable or obstructed.
- Equipment malfunction at the 9-1-1 operator facility.

- Operator error by the 9-1-1 operator.
- 1X (voice/data) or 3G (data) network congestion.
- Weather.
- Buildings, structures, geographic terrain, or tunnels.

**WARNING!**

**ALWAYS obey traffic laws and pay attention to the road. Some Uconnect Access services, including 9-1-1 and Assist, will NOT work without an operable 1X (voice/data) or 3G (data) network connection.**

---

**NOTE:**

- Your vehicle may be transmitting data as authorized by the subscriber.
- Never place anything on or near the vehicle's 1X (voice/data) or 3G (data) and GPS antennas. You could prevent 1X (voice/data) or 3G (data) and GPS signal reception, which can prevent your vehicle from placing an emergency call. An operable 1X (voice/data) or 3G (data) network connection and a GPS signal is required for the 9-1-1 Call system to function properly.

**General Information**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

---

If your vehicle is equipped with Remote Service Features,  
for more information, refer to [moparownerconnect.com](http://moparownerconnect.com)  
or for U.S. residents call:

1-855-792-4241

For Canadian residents call:

1-855-209-8317



---

## UCONNECT SETTINGS

### **CONTENTS**

---

m Uconnect 7 Settings .....	254
-----------------------------	-----



1 — Uconnect Buttons On The Touchscreen  
2 — Uconnect Buttons On The Faceplate

Press the "Apps" button on the touchscreen, then press the "Settings" button on the touchscreen to display the menu setting screen. In this mode, the Uconnect system allows you to access all of your programmable features.

**NOTE:**

- Only one touchscreen area may be selected at a time.
- Depending on the vehicles options, available feature settings may vary.

When making a selection, press the button on the touchscreen to enter the desired mode. Once in the desired mode, press and release the preferred setting until a check-mark appears next to the setting, showing that setting has been selected. Once the setting is complete, either press the Back Arrow button on the touchscreen to return to the previous menu, or press the "X" button on

---

the touchscreen to close out of the settings screen. Pressing the Up or Down Arrow button on the right side of the screen will allow you to toggle up or down through the available settings.

Refer to "Uconnect Settings" in the Owner's Manual on the DVD for further information.





---

## VOICE RECOGNITION QUICK TIPS


### CONTENTS

m UCONNECT 7A/7AN VOICE RECOGNITION	
QUICK TIPS .....	258
□ Introducing Uconnect .....	258
□ Get Started.....	258
□ Basic Voice Commands.....	260
□ Radio .....	260
□ Media .....	261
□ Phone.....	262
□ VoiceTextReply .....	263
□ Climate.....	265
□ Navigation .....	265
□ Uconnect Access .....	266
□ Register .....	268
□ Vehicle Health Alert.....	268
□ Mobile App .....	268
□ Voice Texting .....	270
□ Yelp.....	271
□ SiriusXM Travel Link .....	273
□ Siri Eyes Free – If Equipped.....	274
□ General Information.....	277
□ Additional Information .....	278

Start using Uconnect Voice Recognition with these helpful quick tips. It provides the key Voice Commands and tips you need to know to control your Uconnect 7A or 7AN systems.




---

If you see the  icon on your touchscreen, you have the Uconnect 7AN system. If not, you have a Uconnect 7A system.




All you need to control your Uconnect system with your voice are the buttons on your steering wheel.

1. Visit [UconnectPhone.com](http://UconnectPhone.com) to check mobile device and feature compatibility and to find phone pairing instructions.
2. Reduce background noise. Wind and passenger conversations are examples of noise that may impact recognition.


- 
3. Speak clearly at a normal pace and volume while facing straight ahead. The microphone is positioned on the rearview mirror and aimed at the driver.
  4. Each time you give a Voice Command, you must first push either the VR or Phone button, wait until **after** the beep, then say your Voice Command.
  5. You can interrupt the help message or system prompts by pushing the VR or Phone button and saying a Voice Command from current category.

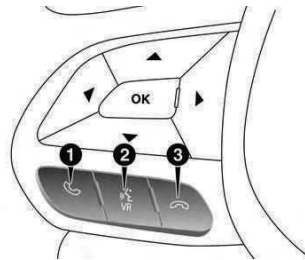

6

- 
- 1 – Phone Pick up Button  Push To Initiate Or To Answer A Phone Call, Send Or Receive A Text
  - 2 – Voice Recognition Button  Push To Begin Radio, Media, Navigation, Apps And Climate Functions
  - 3 – Phone Hang Up Button  Push To End Call
-

The basic Voice Commands below can be given at any point while using your Uconnect system.


Push the VR button . After the beep, say{

- **Cancel** to stop a current voice session
- **Help** to hear a list of suggested Voice Commands
- **Repeat** to listen to the system prompts again

Notice the visual cues that inform you of your voice recognition system's status. Cues appear above the radio icon on the touchscreen.



Use your voice to quickly get to the AM, FM or SiriusXM Satellite Radio stations you would like to hear. (Subscription or included SiriusXM Satellite Radio trial required.)

Push the VR button . After the beep, say{

- **Tune to ninety-five-point-five FM**


---

· **Tune to Satellite Channel Hits 1**

**TIP:** At any time, if you are not sure of what to say or want to learn a Voice Command, push the VR button and say "Help." The system will provide you with a list of commands.



Uconnect offers connections via USB, SD, Bluetooth and auxiliary ports. Voice operation is only available for connected USB and iPod devices. (Remote CD player optional and not available on all vehicles.)


Push the VR button . After the beep, say one of the following commands and follow the prompts to switch your media source or choose an artist.

- **Change source** to Bluetooth
- **Change source** to iPod
- **Change source** to USB
- **Play artist** Beethoven; **Play album** Greatest Hits; **Play song** Moonlight Sonata; **Play genre** Classical


**TIP:** Press the Browse button on the touchscreen to see all of the music on your iPod or USB device. Your Voice Command must match **exactly** how the artist, album, song and genre information is displayed.




Making and answering hands-free phone calls is easy with Uconnect. When the "phonebook" button is illuminated on your touchscreen, your system is ready. Check [UconnectPhone.com](http://UconnectPhone.com) for mobile phone compatibility and pairing instructions.


Push the Phone button . After the beep, say one of the following commands{

- **Call** John Smith
- **Dial** 123-456-7890 and follow the system prompts
- **Redial** (call previous outgoing phone number)
- **Call back** (call previous incoming phone number)

You can send "tones" to remove the need of typing into the keypad when joining a conference call which requires a code. Push the Phone button , after the beep, say "Send" followed by the desired tones; e.g. 49275#.

**TIP:** When providing a Voice Command, push the Phone button  and say "Call," then pronounce the name **exactly** as it appears in your phone book. When a contact has multiple phone numbers, you can say "Call John Smith work."



Uconnect will announce **incoming** text messages. Push the Phone button  and say **Listen**. (Must have compatible mobile phone paired to Uconnect system.)

1. Once an incoming text message is read to you, push the Phone button . After the beep, say: "**Reply**."
2. Listen to the Uconnect prompts. After the beep, repeat one of the pre-defined messages and follow the system prompts.

PRE-DEFINED VOICE TEXT REPLY RESPONSES		
Yes.	Stuck in traffic.	See you later.
No.	Start without me.	I'll be late.



PRE-DEFINED VOICE TEXT REPLY RESPONSES		
Okay.	Where are you?	I will be <number> minutes late.
Call me.	Are you there yet?	
I'll call you later.	I need directions.	See you in <number> minutes.
I'm on my way.	Can't talk right now.	
I'm lost.		Thanks.

**TIP:** Your mobile phone must have the full implementation of the **Message Access Profile (MAP)** to take advantage of this feature. For details about MAP, visit [UconnectPhone.com](http://UconnectPhone.com).

Apple iPhone iOS 6 or later supports reading **incoming** text messages only. To enable this feature on your Apple iPhone, follow these 4 simple steps:



0415076965

#### iPhone Notification Setting

- 1 – Select “Settings”
- 2 – Select “Bluetooth”
- 3 – Select the (i) for the paired vehicle
- 4 – Turn on “Show Notifications”

**TIP:** Voice Text Reply is not compatible with iPhone, but if your vehicle is equipped with Siri Eyes Free, you can use your voice to send a text message.

Too hot? Too cold? Adjust vehicle temperatures hands-free and keep everyone comfortable while you keep moving ahead. (If vehicle is equipped with climate control.)


Push the VR button . After the beep, say one of the following commands{


- **Set driver temperature to 70 degrees**
- **Set passenger temperature to 70 degrees**

**TIP:** Voice Command for Climate may only be used to adjust the interior temperature of your vehicle. Voice Command will not work to adjust the heated seats or steering wheel. (If equipped.)



The Uconnect navigation feature helps you save time and become more productive when you know exactly how to get to where you want to go. (Navigation is optional on the Uconnect 7A system. See your dealer to activate navigation at any time.)

1. To enter a destination, push the VR button . After the beep, say{
  - For the 7A Uconnect System, say...“Enter state”
  - For the 7AN Uconnect System, say...“Navigate to 800 Chrysler Drive Auburn Hills, Michigan”
2. Then follow the system prompts.

**TIP:** To start a POI search, push the VR button . After the beep, say “ **Find nearest** coffee shop.”



**WARNING!**

**ALWAYS** obey traffic laws and pay attention to the road. Some Uconnect Access services, including 9-1-1


*(Continued)*

**WARNING! (Continued)**  
and Assist, will NOT work without an operable 1X (voice/data) or 3G (data) network connection.

**NOTE:** Your vehicle may be transmitting data as authorized by the subscriber.

An included trial and/or subscription is required to take advantage of the Uconnect Access services in the next section of this guide. To register with Uconnect Access, press the Apps button on the 7-inch touchscreen to get started.

**NOTE:** Uconnect Access is available only on equipped vehicles purchased within the continental United States, Alaska and Hawaii. Services can only be used where coverage is available; see coverage map for details.


 9-1-1 Call

 Security Alarm Notification


 Remote Door Lock/Unlock

 Stolen Vehicle Assistance


 Remote Vehicle Start\*\* 

Remote Horn and Lights 

Yelp Search

 Voice Texting

 Roadside Assistance

Call  Wi-Fi Hotspot\*\*\*

Vehicle Health Reports\*\*

Vehicle Health Alert\*\*


\*\*If vehicle is equipped.

\*\*\*Extra charges apply.

---

To unlock the full potential of Uconnect Access in your vehicle, you first need to register with Uconnect Access.

1. Push the ASSIST button on your rearview mirror.

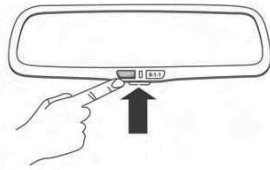

1101092925US

2. Press the "UconnectCare" button on the touchscreen.

3. A helpful Uconnect Care Agent will register your vehicle and handle all of the details.

**Signing up is easy!** Simply follow the steps above. Or, press the "Apps" button on the touchscreen to "Register By Web" to complete the process using your smartphone or computer.

For further information please visit [www.driveuconnect.com](http://www.driveuconnect.com)

Your vehicle will send you an email alert if it senses a problem under the hood with one of your vehicles key systems. For further information go to the Mopar Owner Connect website [moparownerconnect.com](http://moparownerconnect.com).

You're only a few steps away from using remote commands and playing your favorite music in your car.



**Mobile App**

To link your internet radio accounts:


1. Download the Uconnect Access App to your mobile device.
2. Press the Via Mobile icon on the navigation bar at the bottom of the app.

0307077996

3. Press the app you'd like to connect to your vehicle.
4. Enter your login information for the selected app and press Link.
5. Next time you're in your vehicle, enable Bluetooth, pair your phone and select the Via Mobile app you want to play from the Uconnect touchscreen to stream your personalized music.


**NOTE:**

- You can also complete this process on the web. Simply visit [moparownerconnect.com](http://moparownerconnect.com) log in and click Set Up Via Mobile Profile (under Quick Links).
- Once you download the app to your compatible mobile device, you will also be able to start your vehicle and lock/unlock its doors from virtually anywhere.

- 
1. To send a message, push the Phone button . After the beep, say the following command: **“Send message to John Smith.”**
  2. Listen to the prompt. After the beep, dictate the message you would like to send. Wait for Uconnect to process your message.
  3. The Uconnect system will repeat your message and provide a variety of options to add to, delete, send or hear the message again. After the beep, tell Uconnect what you'd like to do. For instance, if you're happy with your message, after the beep, say: **“Send.”**

You must be registered with Uconnect Access and have a compatible MAP – enabled smartphone to use your voice to send a personalized text message. For details about MAP, visit [UconnectPhone.com](http://UconnectPhone.com).

Apple iPhone iOS6 or later supports reading **incoming** text messages only, but if your vehicle is equipped with Siri Eyes Free, you can use your voice to send a text message. To enable this feature on your Apple iPhone, follow these 4 simple steps:

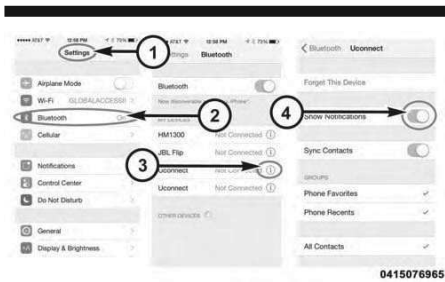

**iPhone Notification Setting**

- 1 — Select "Settings"
- 2 — Select "Bluetooth"
- 3 — Select the (i) for the paired vehicle
- 4 — Turn on "Show Notifications"


**TIP:**

- Voice Texting is not compatible with iPhone, but if your vehicle is equipped with Siri Eyes Free, you can use your voice to send a text message.
- Messages are limited to 140 characters.
- The Messaging button on the touchscreen must be illuminated to use the feature.

Once registered with Uconnect Access, you can use your voice to search for the most popular places or things around you.

1. Press the "Apps" button on the touchscreen.
2. Press the "Yelp" button on the touchscreen.



3. Once the YELP home screen appears on the touchscreen, push the VR button , then say: "YELP search."

4. Listen to the system prompts and after the beep, tell Uconnect the place or business that you'd like Uconnect to find.

**TIP:** Once you perform a search, you can reorganize the results by selecting either the Best Match, Rating or Distance tab on the top of the touchscreen display.



Need to find a gas station, view local movie listings, check a sports score or the 5 - day weather forecast? SiriusXM Travel Link is a suite of services that brings a wealth of information right to your Uconnect 7AN system. (Not available for 7A system.)

Push the VR button . After the beep, say one of the following commands{

- **Show fuel prices**
- **Show 5 - day weather forecast**
- **Show extended weather**

**TIP:** Traffic alerts are not accessible with Voice Command.



Siri lets you use your voice to send text messages, select media, place phone calls and much more. Siri uses your natural language to understand what you mean and will respond back to confirm your requests. The system is designed to keep your eyes on the road and your hands on the wheel by letting Siri help you perform useful tasks.

To enable Siri push and hold, then release the Uconnect Voice Recognition (VR) button on the steering wheel. After you hear a double beep you can ask Siri to play podcasts and music, get directions, read text messages and many other useful requests.



#### Getting Started


Ensure Siri is enabled on your iPhone.



1. Pair your Siri enabled device to the vehicles sound system. Refer to "Uconnect Phone" in "Uconnect 7A/7AN" for a detailed pairing procedure.



1 — Select Settings on your iPhone  
2 — Select General

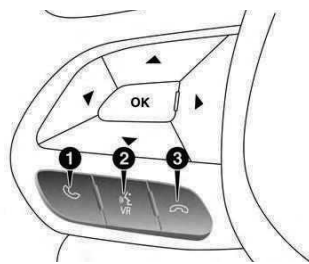3 — Select Siri  
4 — Enable Siri



Voice Recognition/Siri Buttons

- 1 – Phone Pick up Button
- 2 – Voice Recognition/Siri Eyes Free Button
- 3 – Phone Hang Up Button

**NOTE:** A **push and release** of the  button will start normal embedded VR functions. The **push and hold, then release** of the  button will start Siri functions.

2. After the double beep, begin speaking to Siri.

Examples of Siri commands and questions:

- 9Play Rolling Stones9
- 9Send text message to John9
- 9Read text message from Sarah9
- 9Take me to the nearest coffee shop9

**NOTE:**

- Speak clearly at a normal pace and volume while facing straight ahead to ensure your command is understood.
- Siri is available on iPhone 4S and later.



This device complies with FCC rules Part 15 and Industry Canada RSS-210. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.

2. This device must accept any interference that may be received including interference that may cause undesired operation.

**NOTE:**

- The transmitter has been tested and it complies with FCC and IC rules. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.
- The term IC before the certification/registration number only signifies that Industry Canada technical specifications were met.

6

· **Power operation**

- The Radio is fed by the vehicle's battery. The system operates at 14Vdc nominal voltage, minimum of 9Vdc and a maximum of 16Vdc.

· **Material**

- The Radio's case is Aluminum.

**Installation**

It is recommended that the system has an external current protection with a maximum 8A fuse once is installed in the vehicle.

---

© 2015 FCA US LLC. All rights reserved. Mopar and Uconnect are registered trademarks and Mopar Owner Connect is a trademark of FCA US LLC. Android is a trademark of Google Inc. SiriusXM and all related marks and logos are trademarks of SiriusXM Radio Inc. Yelp, Yelp logo, Yelp burst and related marks are registered trademarks of Yelp.

For Uconnect system support, call: 1-877-855-8400 (24 hours a day 7 days a week) or visit [DriveUconnect.com](http://DriveUconnect.com).

Uconnect Access services support, call: 1-855-792-4241  
Please have your Uconnect Security PIN ready when you call.

