## **HANDSET:**

## 1. PORTABLE RF MODULE

SEPARATED RX ANTENNA AND TX ANTENNA TO TRANSMIT THE RF SIGNAL. THE WIRING ANTENNA IS SOLDERED ON THE RF MODULE.

## 1) RX RART

THE RECEIVER FRONT-END CONTAINS A BAND PASS FILTER, AND RF LOW NOISE AMPLIFIER, ACTIVE TRANSISTOR MIXER, CERAMIC FILTER AND 10.73MHz "IF" AMPLIFTER.

ALSO IT INCLUDES BUFFER AMPLIFIERS OR THE GENERATION OF LOCAL OSCILLATOR POWER.

THIS FRONT-END RECEIVERS AND RF SIGNAL FROM THE ANTENNA. AND RF SIGNALS WITHIN THIS FREQUENCY RANGE IS  $5803.019 \text{MHz} \sim 516.019 \text{MHz}$  PASS THROUGH RF AMP (Q1) AND BAND PASS FILTER..

AFTER PASSING THROUGH THE BAND PASS FILTER, THE SIGNAL IS MIXED WITHIN 1'ST LOCAL FREQUENCY FROM VOLTAGE CONTROLLED OSCILLATOR. THE SIGNAL IS AMPLIFIED ON THE IF AMP TRANSISTOR (Q3) AND THE SIGNAL PASS THROUGH THE CERANIC FILTER (10.73MHz) AFTER THE IF SIGNAL PASS THE MCF FILTER, THE SIGNAL ENTER BY THE FM IF (INTERMEDIATE FREQUENCY) IC. AND THE SIGNAL IS MIXED IN THE FM IF IC (3361). THE SIGNAL PASS THROUGH THE LC FILTER. THE OUTPUT SIGNAL IN THE FM IF IC STREAMS FROM THE AF-OUT TERMINAL OF THE CONNECTOR 1 TO THE PORTABLE.

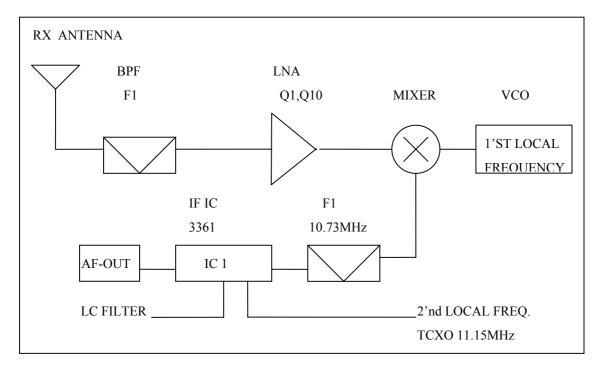


FIG.3

## 2) TX PART

THE SIGNAL IS MADE TO THE PORTABLE, ENTER BY THE AF-IN TERMINAL OF THE CONNECTOR.

THE SIGNAL SEND THE MOD TERMINAL OF THE TX VCO.

THE SIGNAL IS MIXED IN THE TX VCO MIXING THE RF SIGNAL, THE RF SIGNAL ADJUST THE TRIMMER CAPACITOR VC1.

THE RF SIGNAL ENTER BY THE TRANSMISSION POWER AMP TRANSISTOR (Q5,7). ENTER BY THE BAND PASS FILTER.

THE RF SIGNAL PASS THROUGH THE BAND PASS FILTER, TO WARDS THE ANT. THE LAST TRANSMISSION RF SIGNAL IS  $2468 \text{MHz} \sim 2479.7 \text{MHz}$ .

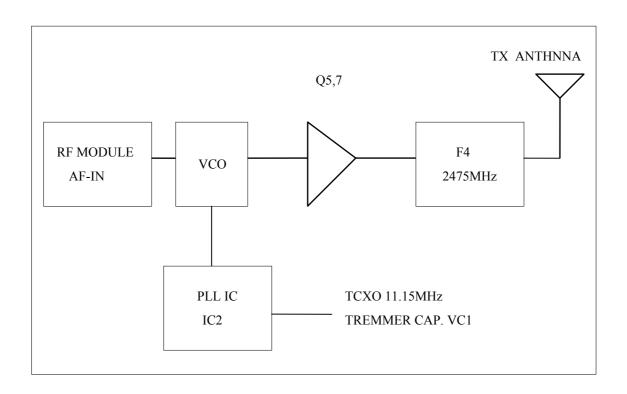


FIG. 4

The demodulated signal, resulting from Double Super Heterodyne system, which appears at output Pin no.3 of CON1 is connected to IC4 Pin no.16 Expander input. The audio output from IC4 Pin no.19 is finally amplified by Q2 and A.C coupled to the Receiver unit with HAC compatibility.

The demodulated data code from CON1 Pin no.3 is fed to Q4,Q3. Q3 is connected to (DATA IN) Pin no.13 of IC3.

Voice signal from C-MIC is coupled to Pin no.8 of IC4. The voice signal is compressed by

IC4 and output Pin no.1 is connected to Pin no.10 of CON1 for modulation.

Pin no.23 of IC3 is the output port for data code that should be transmitted to the base unit. This data code is connected to the Pin no.10 of CON1 for modulation.

During the charging, it is detected by IC3 Pin no.7.

Key board operation is monitored by Pin no.14~18, 28~30 of IC3.

Key Tone from Pin no.31 of IC3 drives the BUZZER, and the ringing from Pin no.9 of IC3 drives the BUZZER.

5.8G(40CH) FREQ

HANDY(IF 10.73M)		BASE(IF 10.73M)		
СН	TX VCO	RX VCO	TX VCO	RX VCO
1	2468	5813. 749	5803. 019	2457. 27
2	2468.3	5814. 082333	5803. 352333	2457. 57
3	2468.6	5814. 415667	5803. 685667	2457.87
4	2468.9	5814.749	5804.019	2458. 17
5	2469. 2	5815. 082333	5804. 352333	2458. 47
6	2469.5	5815. 415667	5804. 685667	2458. 77
7	2469.8	5815.749	5805. 019	2459. 07
8	2470. 1	5816. 082333	5805. 352333	2459. 37
9	2470. 4	5816. 415667	5805. 685667	2459. 7
10	2470. 7	5816.749	5806. 019	2459. 97
11	2471	5817. 082333	5806. 352333	2460. 27
12	2471.3	5817. 415667	5806. 685667	2460. 57
13	2471.6	5817.749	5807. 019	2460. 87
14	2471.9	5818. 082333	5807. 352333	2461. 17
15	2472. 2	5818. 415667	5807. 685667	2461. 47
16	2472. 5	5818.749	5808. 019	2461.77
17	2472.8	5819. 082333	5808. 352333	2462. 07
18	2473. 1	5819, 415667	5808. 685667	2462. 37
19	2473. 4	5819.749	5809.019	2462. 67
20	2473. 7	5820. 082333	5809. 352333	2462. 97
21	2474	5820. 415667	5809. 685667	2463. 27
22	2474. 3	5820.749	5810. 019	2463. 57
23	2474. 6	5821. 082333	5810. 352333	2463.87
24	2474. 9	5821, 415667	5810. 685667	2464. 17
25	2475. 2	5821.749	5811.019	2464. 47
26	2475. 5	5822. 082333	5811. 352333	2464, 77
_27	2475.8	5822. 415667	5811. 685667	2465. 07
28	2476. 1	5822.749	5812.019	2465. 37
29	2476. 4	5823. 082333	5812. 352333	2465. 67
30	2476. 7	5823. 415667	5812. 685667	2465. 97
31	2477	5823.749	5813.019	2466. 27
32	2477. 3	5824. 082333	5813, 352333	2466. 57
33	2477.6	5824. 415667	5813. 685667	2466.87
34	2477.9	5824.749	5814. 019	2467.17
35	2478. 2	5825. 082333	5814. 352333	2467. 47
36	2478. 5	5825. 415667	5814. 685667	2467.77
37	2478.8	5825.749	5815, 019	2468.07
38	2479. 1	5826. 082333	5815. 352333	2468. 37
39	2479. 4	5826. 415667	5815, 685667	2468.67
40	2479. 7	5826.749	5816.019	2468. 97