


Setting up a static IP or PPPoE connection (cont.)

PPPoE

If your Internet connection requires a PPPoE connection, select **PPPoE (Username/Password)** from the dropdown box. Fill in the settings according to your Internet service provider's instructions. When you are finished, click **Save Settings** to save your changes.

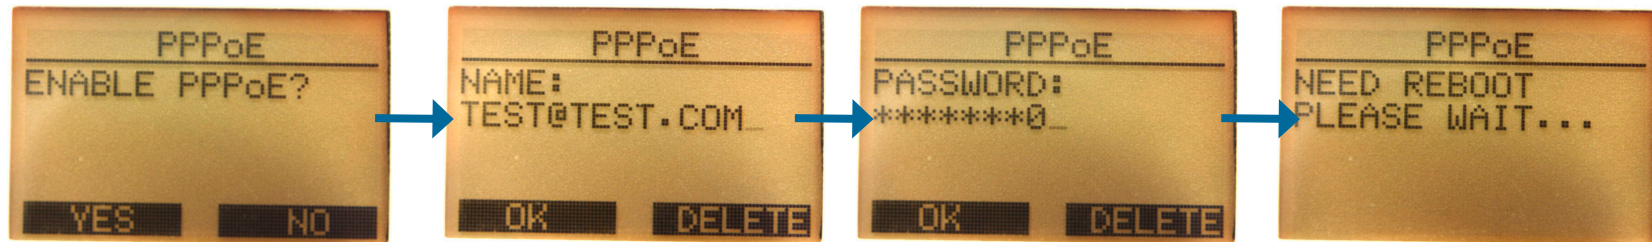

Note: The settings shown are for illustration purposes only. Consult your Internet service provider for the appropriate settings to use.

Getting Started

This section will guide you through the major functions of your DHA-130 Dual-Mode IP/DECT Phone, such as making and receiving calls, setting up a call conference, and managing your handset's phonebook.

Basic handset controls

To make a call, switch to the line you wish to use with the **Mode** button, then type in the number you wish to call and press the **Call** button. You can also press the **Call** button first, then type in the number you wish to call.

Pressing the Mode button switches between your regular phone line (**P**) and your D-Life line (**i**).

- P** Regular phone line - you can make phone calls over your regular phone line like you normally do.
- i** D-Life line - you can call another D-Life user by entering their D-Life 8-digit number. You can also call a regular phone number, including long distance or international numbers, by entering it. Note that calls made to regular phone numbers will use your D-Life credits according to the current D-Life Out rate.*

*For the current D-Life Out rate, please refer to the d-life.com website.



D-Life calling

D-Life calls are made up of two types of calls - D-Life calls and D-Life Out calls.

D-Life calls: D-Life calls are calls to other D-Life members. These calls are free, and can be made any time, for as long as you want, no matter where the D-Life member is, allowing you to make free long distance and international calls through D-Life service. To make a D-Life call, switch to **(i)** mode, dial the 8-digit D-Life number you want to call, and press the Call key.

Switch to **(i)** mode + (8-digit D-Life number) + Call key


D-Life Out: D-Life Out calls are VoIP calls made to a regular PSTN phone number, such as a home or business phone number, or to a mobile phone. These calls use your D-Life credits according to the current D-Life Out rate, which you can find on the d-life.com website. To make a D-Life Out call, switch to **(i)** mode, dial the number you wish to call including the country code and area code, and press the Call key.

Switch to **(i)** mode + (+country code + area code + phone number) + Call key

- Examples:
- to make a D-Life call to 87654321, enter 87654321.
 - to make a D-Life Out call to (123) 456-7890 in the US, enter +11234567890.

Note: To enter a “+” symbol, hold the 0 key until the + symbol appears.

Note: You can also make calls by pressing the Call key first, then entering the number you wish to call.

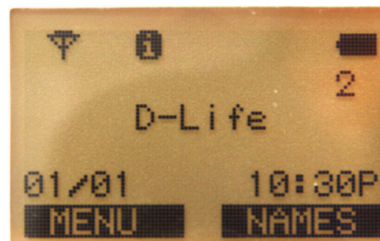


Regular calling

You can also make regular phone calls through your existing phone line with the DHA-130. The DHA-130 gives you access to your phone line just like a traditional cordless phone. All charges and related fees for these calls are handled through your existing phone service.

To make a regular phone call, switch to (P) mode, and dial the number you wish to call as you would on a regular phone.

Switch to (P) mode + (Phone number) + Call key

Note: You can also make calls by pressing the Call key first, then entering the number you wish to call.

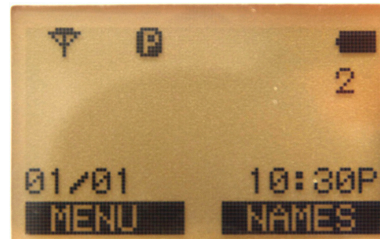

Redialing a call

To redial the last number dialed from your handset, press the Call button, then press the right soft key to **REDIAL** the last call made from the handset.



Receiving calls

When your phone has an incoming call, it will ring and flash the Call LED at the top right of the handset. Depending on whether the incoming call is a regular phone call or a D-Life call, the display will show [i] to indicate an incoming D-Life call, or [p] to indicate an incoming call from your regular phone line. The D-Life number or phone number of the incoming call will also be displayed*.

You can answer the call by pressing the Call key or the left soft key. You can silence the ringer by pressing the right soft key. If you do not answer the call, it will be logged in your **MISSED CALLS** list, and the Call LED will flash to let you know you have missed a call. After checking your **MISSED CALLS** list, the Call LED will stop flashing.



You can turn off your incoming call ringer for all calls by holding the * key until the silent mode icon appears on your handset display. If your ringer is silenced, the handset's Call LED will flash and show the call information on the display. To turn off silent mode, press and hold the * key until the silent mode icon disappears.

Note: To display the number of incoming phone calls, your telephone service must support Caller ID. This service may not be included with your regular phone service - check with your service provider for details.

During a call

During a call, you can do the following:

Change Volume: You can increase or decrease the volume of the call by pressing the directional pad up or down.


Mute: You can mute the microphone by pressing the right soft key. You can unmute by pressing the right soft key again.

Speakerphone: You can toggle the speakerphone function of the handset on and off by pressing the left soft key to access the **OPTIONS** screen, then selecting **SPEAKER**.

Hold Line: You can place the call on hold by pressing the left soft key to enter the **OPTIONS** menu, then selecting **HOLD LINE**. While on hold, the party on the other end of the call will hear music to let them know that they are on hold. If the call is on hold for more than one minute, your handset will give you a callback ring to remind you that you still have an active call. If the callback ring is not answered after 30 seconds, the call will automatically disconnect.

Using the Phonebook

You can store phone numbers in the built-in phonebook by entering them manually, or after dialing or receiving a call. To enter the phonebook, press the right soft key (**NAMES**). Here, you can select from the handset's local phonebook and the D-Life phonebook. You can quickly access the handset's phonebook by pressing down on the directional pad, or you can access the D-Life phonebook by pressing up on the directional pad. The Handset phonebook is stored on the handset, is not shared with any other handsets. The D-Life phonebook is managed on the d-life.com website, and is shared with other handsets connected to the same base station.

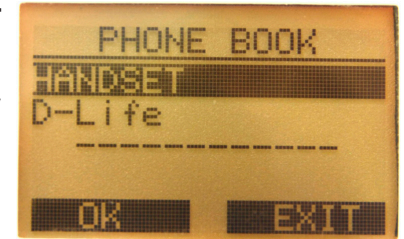

Select **VIEW RECORD** to view entries in your phonebook. You can view more information about an entry by highlighting it and pressing the left soft key to enter the **DETAILS** screen.



Using the Phonebook

Select **NEW ENTRY** to create a new contact in your phonebook. Enter your contact's name, number, whether you wish the number to be dialed as a PSTN number or as a D-Life VoIP number, and what melody you want to play when that person calls you. If you want to always call a contact through D-Life service, such as a long distance or international number, mark the number as a VoIP number.



Note: You can enter text by using the keypad, pressing each key until you reach the letter you wish to enter. The 1 key adds a space, and the # key will toggle between uppercase and lowercase letters. You can also enter other symbols, as shown by the tables below:

Uppercase letters

Key	Characters											
0	0	.	,	:	;	?	!	@	"	'	`	%
1	space	1	\$	£	€	¥	{	}	§	ı	ı	
2	A	B	C	2	Á	À	Ä	Æ	Ç			
3	D	E	F	3	Đ	É	È	Δ				
4	G	H	I	4	Í	Ì	Γ					
5	J	K	L	5	Λ	Κ						
6	M	N	O	6	Ñ	Ó	Ò	Ö	Ø	Ω		
7	P	Q	R	S	7	Β						
8	T	U	V	8	Ú	Ù	⊕	≡	Π	Φ	Ψ	
9	W	X	Y	Z	9	[]	\	^		~	
*	*	#	+	-	_	=	()	<	>	/	&

Lowercase letters

Key	Characters											
0	0	.	,	:	;	?	!	@	"	'	`	%
1	space	1	\$	£	€	¥	{	}	§	ı	ı	
2	a	b	c	2	á	À	ä	æ	ç			
3	d	e	f	3	Đ	É	È	Δ				
4	g	h	i	4	Í	Ì	Γ					
5	j	k	l	5	Λ	Κ						
6	m	n	o	6	ñ	Ó	Ò	Ö	Ø	Ω		
7	p	q	r	s	7	Β						
8	t	u	v	8	Ú	Ù	⊕	≡	Π	Φ	Ψ	
9	w	x	y	z	9	[]	\	^		~	
*	*	#	+	-	_	=	()	<	>	/	&