


GH6322天线布局分布示意图



主频	2G Network	850/900/1800/1900
	3G Network	B1/2/4/5/8
	4G Network	B1/2/3/4/5/7/8/12/13/17/20/28/38/40/41/66

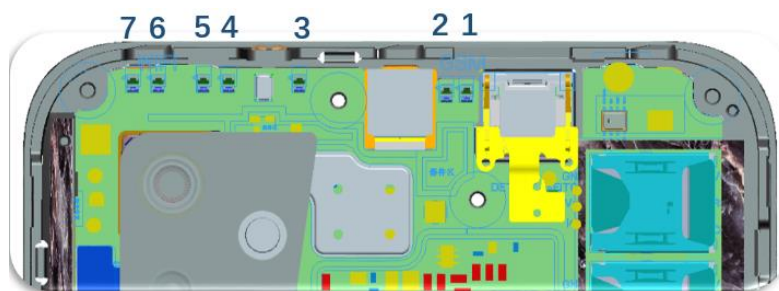

ANT3
WIFI_5G
WIFI_5G TRX(a/n/ac)

ANT4
GPS+WIFI_2.4G+BT
1.GPS L1
2.WIFI_2.4G TRX(b/g/n)
3.BT TRX

ANT1	1	2	3
	GND	馈点	Tuner
ANT2	8	9	10
	Tuner	馈点	GND
ANT3	4	5	
	馈点	GND	
ANT4	6	7	
	GND	馈点	

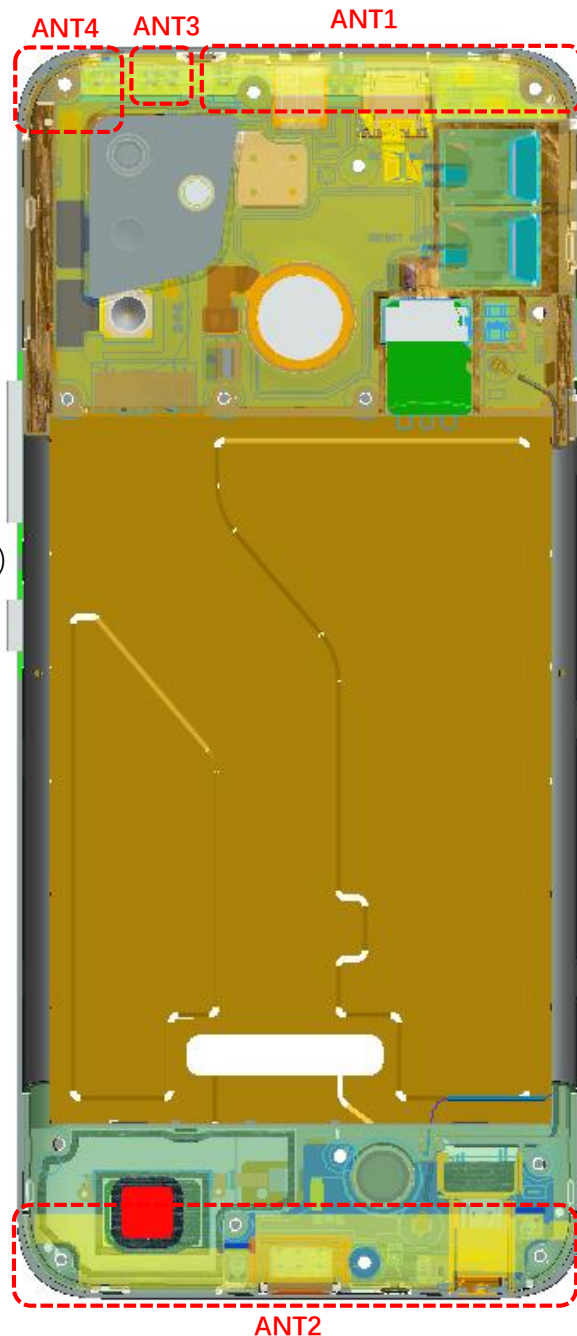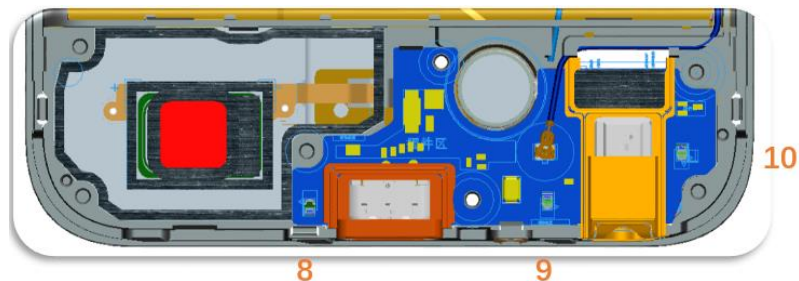


ANT1
LB TRX+MHB DRX
1.LB TRX
2G:GSM850/900
3G:WCDMA B5/B8
4G:LTE B5/B8/B12/B13/B17/B20/B28
2.MHB DRX
2G:GSM1800/1900
3G:WCDMA B1/B2/B4
4G:LTE B1/B2/B3/B4/B7/B38/B40/B41/B66

LB	Low Band	低频	5/8/12/13/17/20/28
MHB	Middle Band	中高频	1/2/3/4/7/38/40/41
TRX	发射/主集接收TX/PRX		
DRX	分集接收		工模设置DRX

ANT2
MHB TRX+LB DRX
1.MHB TRX
2G:GSM1800/1900
3G:WCDMA B1/B2/B4
4G:LTE B1/B2/B3/B4/B7/B38/B40/B41/B66
2.LB DRX
2G:GSM850/900
3G:WCDMA B5/B8
4G:LTE B5/B8/B12/B13/B17/B20/B28

4in1_antenna

up_antenna

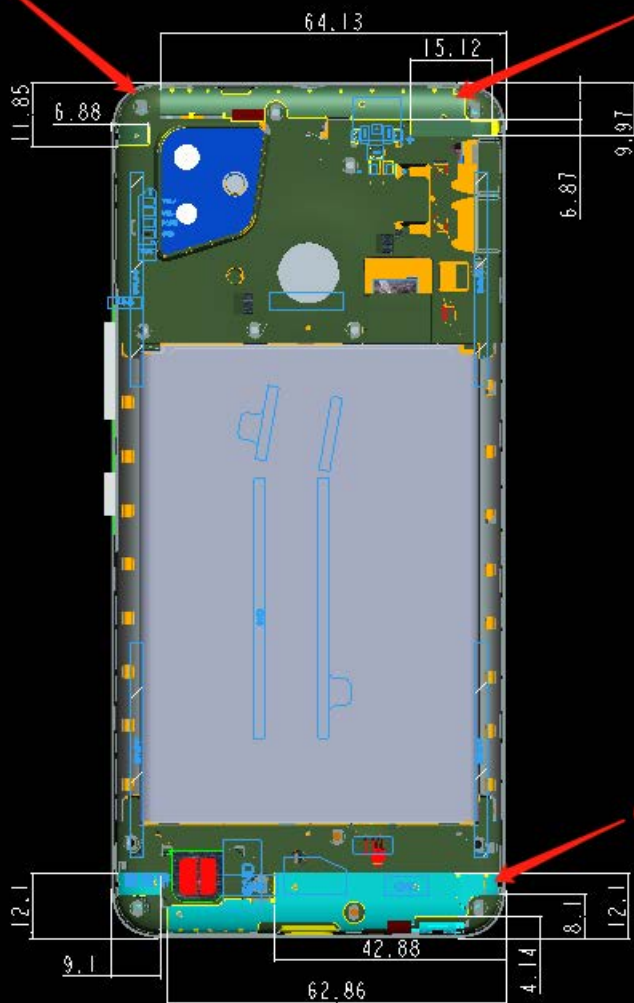

down_antenna