

Column 2 Product Name is product specific. See table for text. (13 pt Arial **Bold Italic**).

“Model / Type:”
Same for all products.
(9 pt Arial **Bold**).

Column 3 Model/TYPE is product specific. See table for text. (10 pt Arial)

“Serial Number:” Same for all products. (9 pt Arial **Bold**)

Barcode is based on Sonicwall serial number assignment. (Code 128, Human readable at the bottom, 9 pt Arial).


Authentication Code is automatically generated by code within the label application and is based on the serial number (8 pt Arial).

Column 5 FCC ID: is product specific. See table for text. (5 pt Arial **Bold**).

“Assembly:” Same for all products. (9 pt Arial **Bold**).

Assembly number is product specific. See BOM for correct system assembly number (9 pt Arial).

Column 6 IC ID product specific. See table for text. (5 pt Arial)

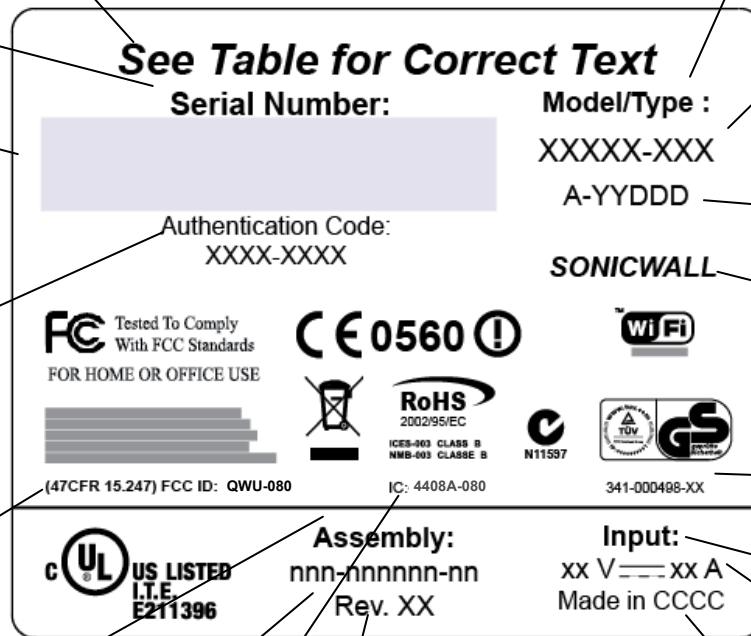

Factory and Date Code: (9 pt Arial) Reference 234-000308-00 Tab layers for correct text placement.

X = Refer to 105-000048-00 for the factory code to be printed.

YYDDD = Refer to 105-000048-00

“SONICWALL” (9 pt Arial **Bold Italic**). Same for all products

Column 1 Label Part Number is product specific. See table for text. (4.5 pt Arial)

“Input:” Same for all products. (9 pt Arial **Bold**)

Column 4 Input Voltage is product specific. Text & graphics must be printed as shown in table. (9 pt Arial)

Column 7 Country of Manufacture is product specific. (8 pt Arial)

Rev. XX. “XX” is to be replaced with the assembly revision. (9 pt Arial).

* The combination of label material, ribbon (ink), and printing process must be UL recognized to category PGJ12.

SONICWALL CONFIDENTIAL		
SONICWALL		
Printing Instruction TAB SILVER LABEL GENERIC 3.36 x 2.81 in. REG GRP L		
Size A	341-000498-01	Rev B
DATE 2009-01-28 RL		SHEET 2 OF 3