



Bluetooth® Mobile Phone Kit Owner's Manual





Thank you for purchasing a Mazda *Bluetooth* mobile phone kit. Before using the Mazda *Bluetooth* mobile phone kit, thoroughly read this manual and follow the instructions on how to operate this product.

Contents

Overview	04
Introduction 05	- 06
Bluetooth Wireless Technology	05
Mobile Phone Functionality	05
Further Information	05
Definitions	06
Bluetooth Microphone	06
Vehicle Audio System	06
Setting Up Your Mobile Phone 06	- 07
Pairing	06
Pairing Multiple Mobile Phones	07
Connecting Your Mobile Phone (After Initial Pairing)	07
Phone Functions 08	-09
Dialling Using Your Mobile Handset	08
Voice Dialling	08
Answering/Receiving a Call	08
Rejecting a Call	08
Ending a Call	09
Redialling Last Number	09
Private Mode	09
Cancelling Bluetooth Connection	09
Streaming A2DP Audio	0-12
A2DP via Mobile Phone	10
Connecting/Pairing	10
Functions	10
A2DP via Mazda Bluetooth Audio Transmitter	10
Connecting/Pairing	11
Functions	12
	11



Contents - Continued

System Reset	12
Troubleshooting 13	- 14
Phone	13
A2DP	14
Technical Specifications	15
FCC Notice	15
Further Information Contact	16



Overview

Initial Phone Pairing

- 1. Turn key to accessories.
- 2. Hold Blue tooth button pressed for 4 seconds.
- 3. Activate Bluetooth on phone and search for Bluetooth device.
- 4. Select device 'MAZDA'
- 5. Key password: '0000'

Connecting Phone

Automatic - Activate Bluetooth on phone and turn car on.

Manual - Turn car on, then activate *Bluetooth* on phone and press *Bluetooth* button once.

Incoming Call

Answer-Press Bluetooth button once.

Reject-Press and Hold Bluetooth button for 3 seconds.

Making a Call

Voice dial-Press Bluetooth button once.

Redial - Press Bluetooth button twice.

During a Call

Activate Private Mode - Press and hold Bluetooth button for 3 seconds.

Deactivate Private Mode - Press Bluetooth button once.

Activate Call Hold - Press Bluetooth button twice.

Deactivate Call Hold - Press Bluetooth button twice.

End Call - Press Bluetooth button once.



Introduction

Your *Bluetooth* mobile phone kit allows you to answer incoming calls on your mobile phone without looking at or touching your mobile phone. Your *Bluetooth* voice capable mobile phone needs to only be inside the vehicle for it to connect to the *Bluetooth* mobile phone kit.

Bluetooth Wireless Technology

Bluetooth devices communicate using radio waves. The Bluetooth mobile phone kit is specifically designed for mobile phones that support Bluetooth wireless technology. The Bluetooth mobile phone kit can be used with devices that support the hands-free profile. "Profile" in this instance means a set of Bluetooth commands that your mobile phone uses for controlling your Bluetooth mobile phone kit.

Your Bluetooth mobile phone and Bluetooth mobile phone kit do not need to be in a line of sight. For example, your mobile may be in your bag whilst connected to the Bluetooth mobile phone kit. The two devices need to be within a maximum of 10 metres of each other.

Mobile Phone Functionality

Mobile phones differ in their method of menu navigation. Furthermore, software releases of mobile phones with the same design can vary significantly. Therefore, please carefully read the operating guidelines of your mobile phone. Specifically take note of the functions relating to the topics 'Bluetooth', 'Hands-Free' and 'Headset Mode'.

The capacity of your mobile phone's battery can quickly decrease when the *Bluetooth* function is active. If you do not want to use the *Bluetooth* function (i.e. when leaving your vehicle for an extended period) then deactivate this function on your mobile phone.

Some functions described in this owners manual may not be available on your mobile phone.

Further Information

Refer to your mobile phone's owners manual, mobile phone retailer or mobile phone service provider for information that relates specifically to your mobile phone. If you have any questions concerning the installation or operation of your *Bluetooth* mobile phone kit, please contact your Authorised Mazda Dealer.



Definitions

Paired: The mobile phone handset is set up to communicate with the *Bluetooth* mobile phone kit.


Connected: The mobile phone handset is currently linked with the *Bluetooth* mobile phone kit. The functions on the *Bluetooth* mobile phone kit are active.

HF: Hands Free profile, used to transmit *Bluetooth* call data from a phone to the *Bluetooht* kit.

AVRCP: Audio/Video Remote Control Profile, used to navigate through music features such as Play/Pause/Next/previous.

A2DP: Advanced Audio Distribution Profile, used to transmit stereo music data from a *Bluetooth* device to the *Bluetooth* kit.

Bluetooth Microphone

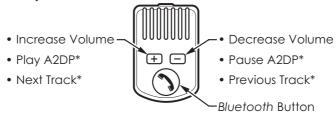

* Function in A2DP mode

Vehicle Audio System

The vehicle's audio system volume is automatically muted when you make or receive a call. The voice of the caller is heard through the audio system and the volume of the *Bluetooth* mobile phone kit can be adjusted using the microphone during a phone call.

Setting Up Your Mobile Phone

Pairing

The connection between your *Bluetooth* capable mobile phone and the *Bluetooth* mobile phone kit can be established as follows:

1. Switch on your mobile phone.

Note: If Mazda *Bluetooth* Audio Transmitter is connected to iPod, disconnect Transmitter from iPod.

- 2. Switch on the ignition.
- 3. Press and Hold the Bluetooth button for 4 seconds.



- 4. Perform the following steps on your mobile phone:
 - a. Enter the Bluetooth menu.
 - b. Activate the Bluetooth function.
 - c. Search for Bluetooth devices.
 - d. Select the device labelled 'MAZDA'.
 - e. Enter the following PIN: 0000. This establishes the connection between your mobile phone and the *Bluetooth* mobile phone kit.
 - f. Set the mobile phone to accept *Bluetooth* connection requests automatically without your permission.

If it is not possible to establish a connection, refer to Troubleshooting.

Pairing Multiple Mobile Phones

The *Bluetooth* mobile phone kit can be paired with up to seven mobile phones, but can only be connected to one mobile phone at a time.

When the ignition is turned on, the *Bluetooth* mobile phone kit searches for the most recently paired mobile phone. If this phone is not found, the *Bluetooth* mobile phone kit will continue searching for the next most recently paired mobile phone until a connection is made.

Connecting Your Mobile Phone (After Initial Pairing)

To connect your mobile phone to the Bluetooth mobile phone kit:

- 1. Move your mobile phone to within 10 metres of the *Bluetooth* mobile phone kit, preferably inside the vehicle.
- 2. Ensure that your mobile phone is switched on and the *Bluetooth* function on your mobile phone is enabled.

Note: Ensure iPod dongle is not connected to iPod.

- 3. Switch on the ignition. Ensure the radio is switched ON.
- 4. The *Bluetooth* mobile phone kit will search for the last paired phone, followed by the next recently paired phone, until a connection is made.

Note: If there are multiple phones in the vehicle which have been previously paired to the system, you must disconnect the currently paired phone before you can use the second phone in the vehicle. Follow the standard pairing procedure to connect the second phone.



Phone Functions

Dialling Using Your Mobile Phone Handset

When the *Bluetooth* mobile phone kit is connected to your mobile phone, you can make calls using your mobile phone handset.



It is dangerous and may be illegal to use a hand-held mobile phone when you are driving. Always pull over to the side of the road (when safe to do so) before answering or making a call with a hand-held mobile phone.

Voice Dialling

If you wish to use the voice dial functions of your mobile phone (provided that your mobile phone is capable), entries for dialling phone numbers with voice dialling may have to be pre-recorded. These voice commands can then be called via the *Bluetooth* mobile phone kit with the active *Bluetooth* connection. To configure voice dialling on your mobile phone, refer to your mobile phone's owner's manual.

To voice dial:

- 1. Ensure that there is no call in progress.
- 2. Press the *Bluetooth* button once. A tone will be heard indicating readiness to accept voice input.
- 3. Speak into microphone.
- 4. The *Bluetooth* mobile phone kit plays back the voice tag and dials the corresponding phone number.

Answering / Receiving a Call

To answer an incoming call:

Press the Bluetooth button once.



It is dangerous and may be illegal to use a hand-held mobile phone when you are driving. Always pull over to the side of the road (when safe to do so) before answering or making a call with a hand-held mobile phone.

Rejecting a Call

If you do not wish to answer a call:

1. Press and hold the *Bluetooth* button until the ring tone stops.



Ending a Call

To end a call:

1. Press the Bluetooth button once.

Redialling Last Number

To redial the last number dialled:

- 1. Ensure that there is no call in progress.
- 2. Press the Bluetooth button twice.

Private Mode

Private Mode transfers the call from hands-free to the mobile phone handset.

To activate Private Mode:

- 1. Press and hold the Bluetooth button for three seconds.
- 2. Continue the call on the mobile phone handset.



It is dangerous and may be illegal to use a hand-held mobile phone when you are driving. Always pull over to the side of the road (when safe to do so) before answering or making a call with a hand-held mobile phone.

Cancelling Bluetooth Connection

The Bluetooth connection is automatically disconnected when:

1. You move your mobile phone outside of the reception range of the *Bluetooth* mobile phone kit. (approximately 10 metres)

OR

2. The ignition switch is turned off and the system is not on a call.

OR

3. The mobile phone is switched off.



Streaming A2DP Audio

The Bluetooth kit can stream audio music from an A2DP device via your stereo.

A2DP via Mobile Phone

Given that your mobile phone is enabled with A2DP *Bluetooth* Profile, you will be able to stream the music via the *Bluetooth* kit to your stereo.

Note: The radio has to be set to AUX mode in order for the music to be heard.

Connecting/Pairing

Given a mobile phone is enabled with A2DP it will pair and connect automatically after the phone has previously been paired and connected.

See 'Setting up your mobile phone' section.

Functions

Using your mobile phone, open the music player and select the desired song you want to play. The music will be heard through the stereo.



It is dangerous and may be illegal to use a hand-held mobile phone when you are driving. Always pull over to the side of the road (when safe to do so) before answering or making a call with a hand-held mobile phone.

All functionality can be done through the mobile phone. If AVRCP *Bluetooth* Profile is available on the phone the following functions can be done through the microphone:

Previous Track - Short Press '-' button on Bluetooth microphone.

Next track - Short Press '+' button on Bluetooth microphone.

Pause - Long Press '-' button on Bluetooth microphone.

Play - Long Press '+' button on Bluetooth microphone.

Note: Connecting any other media device to the vehicle AUX IN jack will deactivate A2DP streaming.

A2DP via Mazda Bluetooth Audio Transmitter

Given you have a Mazda Bluetooth Audio Transmitter you will be able to stream the music from your iPod via the Bluetooth kit to your stereo.

Note: The radio has to be set to AUX mode in order for the music to be heard.





Connecting/Pairing

Note: If connecting both a mobile phone and the Mazda *Bluetooth* Audio Transmitter to the *Bluetooth* kit, it is recommended that the phone is connected first.

When using a phone which can enable/disable *Bluetooth* profiles (such as Blackberry) manually disable Audio Source (A2DP) and AV Remote Control target (AVRCP) profiles when using the iPod Adaptor.

When the Mazda *Bluetooth* Audio Transmitter is not connected to the iPod:

- 1. Switch on ignition.
- 2. Plug the Mazda Bluetooth Audio Transmitter into the iPod to begin the pairing and connecting process.
- 3. While searching, the light on the adaptor will flash quickly. Once connected the light will flash twice per second.

When Mazda Bluetooth Audio Transmitter is connected to iPod:

- 1. Switch ignition on.
- 2. Turn iPod on by pressing any button on the iPod.
- 3. Press the play button once to begin the pairing and connecting process.
- 4. While searching, the light on the adaptor will flash quickly. Once connected the light will flash twice per second.



It is dangerous and may be illegal to use a hand-held mobile phone when you are driving. Always pull over to the side of the road (when safe to do so) before answering or making a call with a hand-held mobile phone.



Functions

All functionality can be done through the iPod itself however the following functions can also be done through the microphone:

Previous Track - Short Press '-' button on Bluetooth microphone.

Next track - Short Press '+' button on Bluetooth microphone.

Pause - Long Press '-' button on Bluetooth microphone.

Play - Long Press '+' button on Bluetooth microphone.

The radio has to be set to AUX mode in order for the music to be heard.

Note: Connecting any other media device to the vehicle AUX IN jack will deactivate A2DP streaming.

When using Partially Compatible Nokia phones together with the Mazda Bluetooth Audio Transmitter, the phone's Bluetooth connection may be lost when keypad tones or error tones are sounded. It is recommended to disable any tones and limit the phone usage while connected to the Bluetooth kit. To reconnect manually, enable the connection via the handset.

System Reset

If the *Bluetooth* Mobile Phone Kit is experiencing issues with operation or connection, you can perform a System Reset to restore it to the factory settings.

- 1. Switch on the ignition. Ensure the radio is switched ON.
- 2. Hold the Bluetooth button for 12 seconds.
- 3. At 10 seconds, the radio will 'mute'. At 12 seconds, the radio will 'mute' again confirming the reset is complete.

Note: It is also recommended to delete any *Bluetooth* connections from your mobile phone and connect to the device again. Refer to 'Setting Up Your Mobile Phone (Pairing)' on page 6 of this manual and your mobile phone's owner's manual.



Troubleshooting - Phone

Problem	Cause and Solution
Mobile phone will not pair up with the Bluetooth mobile phone kit.	1. Ignition is turned off. Turn on the ignition.
	 Already connected to another paired mobile phone. Switch off other paired mobile phone(s) in the vehicle.
	The mobile phone is not supported. Refer to your Authorised Mazda Dealer for phone compatibility list.
Mobile phone will not connect to the <i>Bluetooth</i> mobile phone kit.	1. Ignition is turned off. Turn on the ignition.
	2. Mobile phone is not paired to the <i>Bluetooth</i> mobile phone kit. Follow the instructions to pair the mobile phone to the <i>Bluetooth</i> mobile phone kit.
	Automatic connection not set on the mobile phone. Follow your mobile phone owners handbook to ensure that authorised connection is enabled for the Bluetooth carkit.
	Bluetooth kit may have frozen up. Kit needs to be reset, follow instructions to perform a System Reset
Voice dialling does not work.	Mobile phone voice dialling is not available on your mobile phone. Check your mobile phone owners handbook.
	No voice tags saved to your mobile phone. Refer to your mobile phone owners handbook.
	3. Mobile phone is not fully compatible with the Bluetooth car kit. Refer to your Authorised Mazda Dealer for phone Compatibility list.
Incoming call does not initiate an audible alert.	Check the incoming call alert is not deactivated in the mobile phone settings.
	2. Check the mobile phone is not set to 'silent' mode.
Redial does not work.	Your mobile phone has no last redialled numbers. Make the initial call from the mobile phone handset.
	2. This feature is not enabled on your mobile phone.
	3. Mobile phone is not fully compatible with the Bluetooth car kit. Refer to your Authorised Mazda Dealer for phone compatibility list.
An echo is present.	Bluetooth system volume is too loud. Turn down the volume on the Bluetooth system during the call.
Problem is still Present.	Refer to your Authorised Mazda Dealer, or call Lumen Australia on (03) 87871000 for further information.



Troubleshooting - A2DP

Problem	Cause and Solution
Cannot pair or connect Mazda Bluetooth Audio Transmitter to Bluetooth Kit.	 Ignition is turned off. Turn on the ignition. Mazda Bluetooth Audio Transmitter pairing time expired. Reset Mazda Bluetooth Audio Transmitter by disconnecting it from the iPod and repeat pairing procedure. Another A2DP device is already connected to the Bluetooth kit. Hold down the '-' button on the microphone until a tone is heard. Redo pairing procedure. iPod battery low. Connect the charging cable. Redo pairing procedure.
No iPod/Mobile A2DP audio can be heard.	 Ignition is turned off. Turn on the ignition. Volume is on mute or set to low. Adjust volume on vehicle's audio system. iPod battery low. Connect the charging cable. Redo pairing procedure. Mazda Bluetooth Audio Transmitter is not connected to Bluetooth kit, re-connect Transmitter. Radio is not set to Auxiliary input. Set radio to Auxiliary input. iPod is paused. Press play button. Another media device is connected to the vehicle AUX IN jack. Remove any plug from vehicle AUX IN jack.
No iPod functionality through Bluetooth Kit. Cannot adjust volume from	 Bluetooth phone is connected and active/in call. iPod functionality is not present when phone is active/in call. Bluetooth remote control profile is connected to phone instead of dongle. Hold the '-' button down on the microphone until a tone is heard. Redo pairing procedure. Volume from Mazda Bluetooth Audio Transmitter is
iPod Problem is still present.	fixed. Adjust volume from vehicle's audio system. Refer to your Authorised Mazda Dealer, or call Lumen Australia on (03) 87871000 for further information.



Technical Specifications

- Bluetooth 1.2 wireless technology, hands free system.
- Wireless radio connection with the mobile phone.
- Full duplex hands-free conversation with echo cancellation.
- Background noise reduction.
- Voice recognition dialling (if supported by the mobile phone).
- Automatic muting of the carradio system when a call is active.
- Operating button integrated with the vehicle styling.
- Manual number dial.
- Last number redial (if supported by the mobile phone).
- · Private mode.
- Pairing of multiple phones (connection of one mobile phone at a time).
- Profiles enabled HF, A2DP, AVRCP.

FCC Notice

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

To comply with FCC RF exposure compliance requirements, a separation distance of at least 20 cm must be maintained between the antenna of this device and all persons.





 $Refer to your {\it Maz} da \, Dealer for further information.$

Please note that all information, illustrations and specifications in this Handbook are based on the latest product information available at the time of printing. Mazda reserves the right to make any changes at any time without notice and without incurring any obligation.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Mazda is under licence. Other trademarks and trade names are those of their respective owners.

iPod is a trademark of Apple Inc., registered in the US and other countries.

COPYRIGHT Mazda 2009

Reproduction in whole or part prohibited without written approval of Mazda Australia. Pty. Ltd.