

**ReGo**  
**XTR-5 Satellite Radio**  
**Owners Manual**  
**(DRAFT rev.21)**

June 8, 2005

**XACT Communication**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the Manufacturer for compliance could void the user's authority to operate the equipment.

**NOTE!** Use only the appropriate accessories or input devices with your receiver. Use only the 12v Vehicle Adapter that is provided with the kit. It is important that you do not modify it in any way since this will result in damaging your equipment and void the warranty.

## COPYRIGHT / TRADEMARKS

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, whether electronic, mechanical, photocopying, recording or otherwise without the prior writing of the publisher.



is a registered trademark of SIRIUS® Satellite Radio. To activate your Satellite Radio Receiver or for latest news and questions regarding SIRIUS® Satellite Radio service visit [sirius.com](http://sirius.com) or call 1-888-539-SIRIUS (7474).

## SAFETY PRECAUTIONS

### **Warning**

Follow these notifications to avoid any traffic accidents or personal injury:

1. Installation must be performed according to this user guide.
2. Do not install the device where it may obstruct your view through the windshield or of your vehicle's indicator displays.
3. Do not install the device where it may hinder the function of safety devices such as an airbag. Doing so may prevent the airbag from functioning properly in the event of an accident.
4. The installation and usage suggestions contained in this user guide are subject to any restrictions or limitations that may be imposed by applicable law. The purchaser should check applicable law for any restrictions or limitations before installing and/or operating this device.
5. Failure to follow these safety instructions and warnings may result in a severe accident.

### **Danger**

Be aware of the following precautions to prevent fire and avoid personal injury:

1. To avoid short circuits, never put or leave any metallic objects (coins, tools, etc.) inside the device.
2. If the device emits smoke or strange smells, turn the power off immediately and contact your dealer.
3. Do not drop the device or subject it to strong shocks.
4. If the LCD display becomes damaged or broken, do not touch the liquid crystal fluid. The fluid may be dangerous to your health or even fatal. If the liquid crystal fluid contacts your body or clothing, immediately wash it off with soap and water.

### **Caution**

Do not operate this device in a way that might divert your attention from driving safely. As a driver, you are responsible for safely operating your vehicle in accordance with traffic safety laws at all times.

### **Note**

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE  
CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS  
COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

## TABLE OF CONTENTS (Needs to Be Updated)

- Introduction** Page 3
- Product Overview Page 3
- Package Contents Page 3
- Components Guide** Page 4
- ReGo SIRIUS®Radio Page 4
- Wireless Remote Control Page 5
- Getting Started** Page 6
  - Mounting Your ReGo Satellite Radio at Home Page 6
  - Mounting Your ReGo Satellite Radio in a Vehicle Page 6
  - Activating Your SIRIUS® Subscription Page 7
- Basic Operations** Page 10
  - Tuning to Different Entertainment Categories Page 10
- Searching for Music** Page 11
  - Searching For Music By Channel Page 11
  - Searching For Music By Artist/Composer Page 11
  - Searching For Music By Song Page 12
  - Direct Tuning Page 12
  - Presetting Channels Page 13

Searching for a Preset Channel/Artist/Song Page 14  
S-Seek Function Memo (Memory Search) Button Page 15  
Performing S-Seek Function Page 16  
**Menu Options Settings** Page 18  
**Basic Setting Procedure** Page 18  
SIRIUS®ID Page 18  
Display Settings Page 19  
FM Transmitter Page 20  
Channel Add/Skip Page 21  
Lock Options Page 21  
Audio Level Page 23  
Antenna Aiming Page 24  
SIRIUS®Satellite Map Page 24  
Memory Options Page 25  
**Time Features** Page 26  
Clock Page 27  
Format Page 27  
Time Zone Page 27  
  
Daylight Saving Time Page 28  
Alarm Clock Page 28  
Time Page 28  
Program Alert Page 29  
Program Day/Time Page 29  
Channel Selection Page 30  
Auto Shutdown Page 30

Sleep Mode Page 31  
Factory Default Page 31  
Display Messages Page 33  
Problem Solving Page 35  
Warranty Page 36

## INTRODUCTION

### Product Overview

Thank you for purchasing this product! Your new plug and play XACT ReGo Satellite Radio is specifically designed to mount in a vehicle or indoor/outdoor location.


In the event that any item is missing or if you find any mismatch or damage, promptly contact your dealer.

Your Xact ReGo Satellite Radio Receiver must be used in conjunction with any one of the following Xact Kits, such as the Universal kit, Home kit or Boom Box as required by your specific needs.

- Xact Vehicle Kit: Model Number XS\_\_\_\_
- Xact Home Kit: Model Number XS\_\_\_\_
- Xact Portable Boom Box: Model Number XS\_\_\_\_

The easiest way to activate your Satellite Radio Receiver is to log on to [sirius.com](http://sirius.com). You may also call 1-888-539-SIRIUS (7474).

**COMPONENTS GUIDE**  
**XACT ReGo Satellite Radio and MP3 Player**

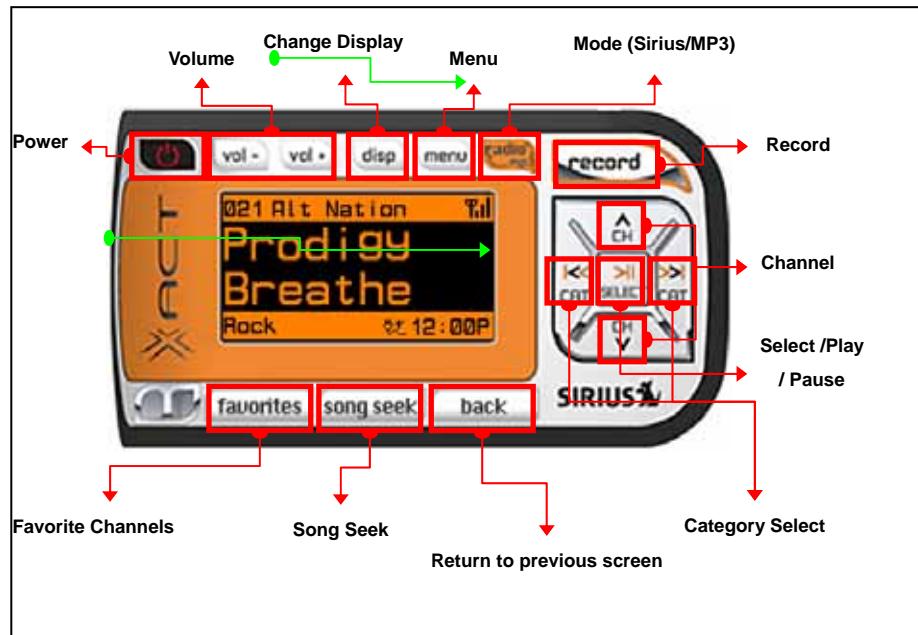

## COMPONENTS GUIDE

### Wireless Remote Control

The wireless remote control packed with your plug and play XACT ReGo satellite radio mirrors the operations of your plug and play XACT ReGo satellite radio receiver from a remote location.

**REMOTE PICTURE HERE**

## **GETTING STARTED**

### **Mounting Your XACT ReGo Satellite Radio at Home**

Find an appropriate location near your stereo receiver to install your plug and play satellite

radio receiver.

### Mounting Your XACT ReGo Satellite Radio in a Vehicle

Find an accessible location in your vehicle to install your plug and play satellite radio receiver; usually, this is the dashboard.

-  Do not mount your device where it may obstruct your view through the windshield or your view of your vehicle's indicator displays.
-  Do not mount your device where it may impede your access to the vehicle's controls.
-  Do not mount your device where it may hinder the function of safety devices, such as an airbag. Doing so may prevent the airbag from functioning accordingly in the event of an accident.
-  Mount your satellite radio where it can be easily reached.
-  The device must be directly in line-of-sight of the remote controller.
-  If you're not going to operate your vehicle for an extended period of time (e.g. parking garage while on vacation) unplug your ReGo Satellite Radio from the cradle or remove the cigarette lighter adapter.

**NOTE!** Do not modify or alter in any way the wires or connections especially to the 12v vehicle adapter. Doing so will prevent the protection provided in the circuitry from functioning properly and result in damaging your receiver. This will void your warranty

### Activating Your SIRIUS® Subscription

Before beginning to use your new device, you must first register with the SIRIUS® Satellite Radio service.

There are two ways to activate the SIRIUS® Satellite Radio Service:

1. Visit [sirius.com](http://sirius.com) and click activate, then follow the on-screen instructions.
2. Call SIRIUS® at 1-866-845-7474. A representative will help you activate your SIRIUS® Satellite Radio Service.

**Note:** Make sure to have your identification number accessible when calling SIRIUS®.


### Make Note of Your Identification Number

Activating your SIRIUS® Satellite Radio Service:

1. Press MENU to enter the Menu Options Screen and Highlight the Sirius Logo.



2. Press the SELECT button to display your Receivers 12-digit SIRIUS® ID Number (ESN).

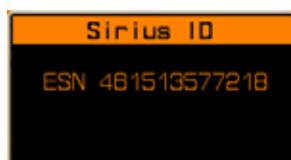

### USING THE VEHICLE KIT INSTALLATION

**NOTE!** Use only the appropriate accessories or input devices with your receiver. Use only the 12v Vehicle Adapter that is provided with the kit. It is important that you do not modify it in any way since this will result in damaging your equipment and void the warranty.

Line Drawings Here

**IF YOU HAVE PURCHASED A Boom Box KIT**

-12-

Line Drawings Here

## BASIC OPERATIONS

After your SIRIUS® subscription is activated, the Normal (default) Operation screen will be displayed.



### Tuning to Different Entertainment Channels and Categories

1. Press the CAT << >> buttons to scroll through music and entertainment categories. The first channel in the selected category will be displayed.



2. Press the CH UP / DN buttons to change the channel within the selected category.

3. You can also change channels by entering the channel list mode. Press the SELECT button to

enter channel list mode to preview a list of channels in the selected category. Use the CH UP/DN buttons to move the cursor to the desired channel then press the SELECT button.

Insert Channel List Mode Picture Here

4. You can direct tune to any channel using the remote control. Enter the desired channel number using the remote control 0 – 9 key pad.

### Setting the Headphone Volume Level

1. Press the [Vol+], [Vol-] buttons to change the headphone volume level. The Headphone Volume level display will change indicating the volume level.



### Changing the Display Text Size


1. Press the [DISP] button to toggle the display text size.



### Storing Your Favorite Channels

Using the FAVORITES button you can store your Favorite channels in any of the SIRIUS® Categories.

1. To save a Favorite channel press and hold the [FAVORITES] button to enter the Favorites Edit Mode.
2. Find your Favorite channel using the CAT << >> buttons to scroll through music and entertainment categories and the CH UP/DN buttons to scroll through the channels in the selected category.
3. To store your Favorite channel press the SELECT button. A Happy Face ☺ icon is displayed next to the selected Favorite channel. You can store as many channels as you like using this method.
4. To exit the Favorites Edit mode, press the BACK button.

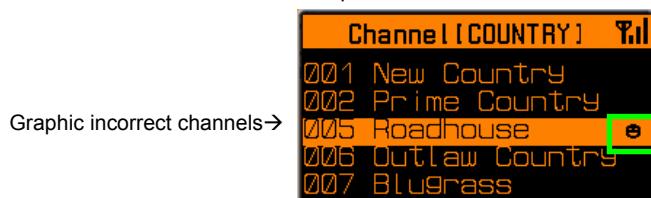


5. To delete a Favorite channel from your list, perform steps 1 and 2 above and highlight the channel to be removed. Press the SELECT button and the Happy Face ☺ icon disappears.

6. To exit the Favorites Edit mode, press the BACK button.

Note: Deleting the channel from your Favorite list does not remove the channel from your Sirius subscription.

### Using Favorites Mode

1. To access your Favorite channels, enter the Favorites tuning mode by pressing the FAVORITES button.
2. Then select the desired channel from the Favorite list using the CAT << >> buttons to scroll through music and entertainment categories and the CH UP/DN buttons to scroll through the channels in the selected category.
3. Highlight the desired channel and press the SELECT button. The Happy Face ☺ icon is displayed on the Normal (Default) screen indicating Favorites mode is active.
4. To tune to your Favorite stored channels, use the CAT << >> and CH UP/DN buttons.
5. To exit Favorite mode, press the FAVORITES button.

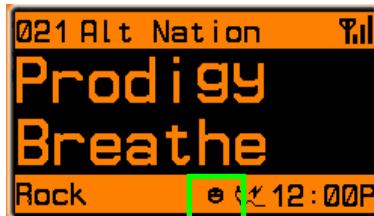

### Song Seek

The Song Seek feature will store the currently playing song information in memory and your satellite radio automatically checks to see if the song is playing on any other channel and alerts you. You can store up to 50 songs.

1. Press the SONG SEEK button to store the currently playing song data. A message appears confirming the song information has been stored.



2. When your satellite receiver finds a song playing on another channel that matches one of your stored songs, an alert message is displayed and an audible alert is heard. If you want to listen to the song on the indicated channel press the SELECT button. If you wish to continue listening to the current channel, no action is required and the alert message will automatically disappear after 5 seconds.



#### What If You Have Already Recorded the Same Artist/Song?

Your satellite radio automatically checks your recorded data information and compares it with the newly selected program. If the newly selected program has already been recorded, to avoid duplication no entry will be made.

Add Already Stored Picture Here

### Editing Your Stored Song List

You can easily delete individual songs or all the stored songs from memory.

1. To access the Song Seek Edit menu, press and hold the SONG SEEK button.
2. Select LIST if you want to edit individual songs. Select CLEAR ALL if you want to delete all songs in memory.



#### Edit List

To delete a stored song from the list, highlight the song using the CH UP/DN button and press SELECT.



A confirmation screen will appear. To delete the song select YES. To keep the song select NO.



**Clear All**

To delete all the stored songs from memory, select YES. To keep the song list select NO.



### Storing SIRIUS® Content

Your ReGo has the ability to store over 4 hours of SIRIUS® content. You can store a single song or store an entire program.

#### Storing a Single Song

To store a single song that is currently playing, press the RECORD button. Recording will start immediately and the Recording Icon ® will appear in the display. A recording progress bar is displayed indicating recording progress and remaining memory space. The time remaining indicator displays the remaining record time. Recording stops automatically when the song ends.



#### Continuous Recording

To continuously record a channel that is currently playing, press and hold the RECORD button. A confirmation screen will be displayed. To continuously record the currently tuned channel highlight

YES with the cursor and press SELECT.

Add the Continuous Record Pop Up Menu Here

Recording will start immediately and the Recording Icon  will appear in the display. A recording progress bar is displayed indicating recording progress and remaining memory space. The time remaining indicator displays the remaining record time. To stop recording, press the RECORD button.



### Setting Menu Options

The MENU features allow you to personalize the operation of your ReGo Satellite Receiver. To enter


the menu mode, press the MENU button.

#### Sirius ID

1. Press MENU to enter the Menu Options Screen and highlight the Sirius Logo.



2. Press the SELECT button to display your Receivers 12-digit SIRIUS® ID Number (ESN).

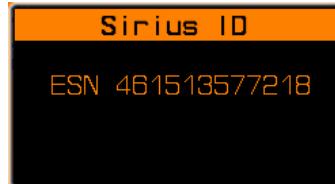

#### Display Settings

To enter the display setting menu, highlight the DISPLAY SETTINGS icon using the CAT << >>

buttons and press the SELECT button.



#### Brightness Control

To change the display brightness, highlight Brightness Control using the CH $\wedge$  $\vee$  buttons then press the SELECT button.



To increase or decrease the display brightness press the << CAT >> buttons. When the desired brightness level is set, press the SELECT button to store the setting.




### Contrast Control

To change the display contrast, highlight Contrast Control using the CH $\wedge$  $\vee$  buttons then press the SELECT button.




To increase or decrease the display Contrast press the << CAT >> buttons. When the desired brightness level is set, press the SELECT button to store the setting.

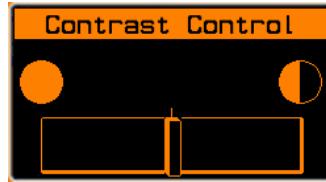

### Invert Color

To invert the color in the display, highlight Invert Colors using the CH $\wedge$  $\vee$  buttons.

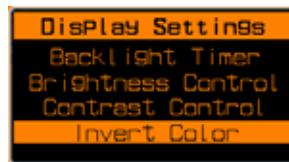

Press the SELECT button to invert the display color. To revert back to the original setting press SELECT again. Press the BACK button to exit.




#### Backlight Timer

To maximize battery life when using your ReGo Satellite Receiver in portable mode, use the backlight timer settings to configure the amount of time the display remains on.

To change the display on time in portable mode, highlight Backlight Timer using the CH $\wedge\vee$  buttons then press the SELECT button.



To set the display backlight on time, highlight the desired time and press the SELECT button. The star icon indicates the selected time.

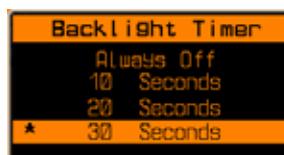

. Note: The Backlight Timer feature only operates when using the battery.

### Channel Skip / Parental Lock

Your ReGo Satellite Receiver has the ability to skip and lock out certain channels. To enter the Channel Skip / Parental Lock menu, highlight the CHANNEL SKIP/LOCK icon using the CAT <> buttons and press the SELECT button.




#### Channel Skip

To enter the Channel Skip menu, highlight Channel Skip using the CH  $\wedge \vee$  buttons then press the SELECT button.



Use the << CAT >> and CH<sup>▲</sup><sup>▼</sup> buttons to navigate to the desired channel(s). Highlight the desired channel and press the SELECT button. The selected skipped channel displays the skip icon. Press SELECT again to remove the icon. Press the BACK button to return to the Channel Skip / Lock menu.

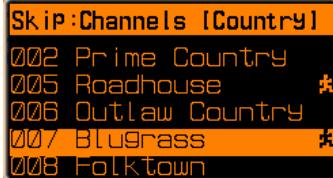

#### Parental Lock

Access to particular channels can be set with codes. When you tune to these particular channels, your receiver will require you to enter the 4-digit access code. To enter the Parental Lock menu, highlight Parental Lock using the CH<sup>▲</sup><sup>▼</sup> buttons then press the SELECT button.



The following adjustments can be made:

- Lock/Unlock

- Edit Code



#### Lock/Unlock

When using Lock/Unlock for the first time, you are asked to type in the 3-digit code that is used to Lock/Unlock the channel access. Press the "0" button four times to enter the default Access Code: 000



Thereafter, each time you enter this mode, a channel list will be displayed and the currently playing channel will be highlighted. Press the << CAT >> and CH UP/DN buttons to select a channel you want to lock, and then press the SELECT button to confirm the setting. The "Lock" icon pops up next to the channel.



### Edit Code

You may change the access password (default code: 000) to your personal code. To enter the Edit Code menu, highlight Edit Code using the CH  $\wedge$   $\vee$  buttons then press the SELECT button.



After entering this mode, press the CH UP/DN buttons to enter the number and the << CAT >> buttons to move to the next digit. Enter the current 3-digit access code (3-digit default code: 000 or your previously entered current code) and press SELECT. The "New Code" message pops up.



Enter the numbers for your new access code by using the CH UP/DN buttons to enter the number and the << CAT >> buttons to move to the next digit. Press SELECT. The confirmation screen will then be displayed.



Enter the numbers for your new access code again by using the CH UP/DN buttons to enter the number and the << CAT >> buttons to move to the next digit. Press SELECT. Your new access code is now saved.



Once the channel configuration is done, press the [select] button to select the channel number. Once it is done properly, there will be a lock icon appearing on the right side of channel name.

Factory Default

To restore the ReGo Satellite Receiver factory default settings, highlight the FACTORY DEFAULT icon using the << CAT >> buttons and press the SELECT button.

Icons are in the wrong order →



Select "YES" to confirm. Select NO to exit.

Note: All custom settings and all stored Sirius content will be deleted.



Items revert to their original factory settings as follows:

Display Dimming to 50%

Display Contrast to 50%  
FM Transmitter to “On”  
Frequency to 88.1MHz  
Audio Output Level to 50%  
Access to all skipped streams restored  
12-Hour Clock Format  
Eastern time zone  
Daylight savings time observed  
Alarm Off  
Alarm Time 12:00pm  
Program Alert Time 12:00pm  
Program Alert Day Monday  
Program Alert Channel Number (current)  
Continuous Record Off  
Auto Shutdown Off  
Sleep Mode Off  
Default Font Size/Type “XXX” (will confirm)  
Backlight Timer 10 Seconds  
Invert Color to Black Screen  
All skipped channels will become “un-skipped”  
All locked channels remain locked  
All Favorite Teams will be cleared

#### Favorite Teams


You can select your favorite sports team and ReGo will automatically alert you when your favorite team is playing. When a match is found, the Game Alert screen is displayed, followed by tuning

information for that game. See the Favorite Team setting in the Menu Display Options section for information on setting your favorite team.

To enter your Favorite Team, highlight the Favorite Team icon using the CAT << >> buttons and press the SELECT button.



Using the CH UP/DN buttons, highlight the desired League and press SELECT.

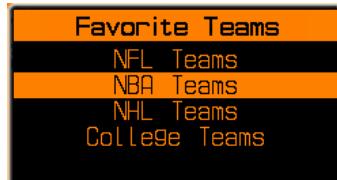

Using the CH UP/DN buttons, highlight the desired Team and press SELECT. The ✓ icon appears indicating the selected team. You can select multiple teams. Press SELECT again to deselect the team. Press BACK to exit.



### Antenna Aiming

**Note:** This adjustment setting is required only when you use your device at home. This way, you can assure optimum reception when mounting your SIRIUS® antenna.

To enter the Antenna Aiming mode highlight the Antenna Aiming icon using the CAT << >> buttons and then press the SELECT button.



Upon entering the Antenna Aiming mode, two 10-segment horizontal bar graphs are displayed. One is labeled "SAT" (satellite signal strength) and the other "TER" (terrestrial signal strength). The current

setting is indicated on the bar graphs. Move the antenna in a location according to the SIRIUS® Satellite Map placement indicated below which provides the strongest signal indication.



### SIRIUS® Satellite Map

Due to the paths of SIRIUS® satellites over the US, the best location for the antenna in your home depends on where you live. Use the map below as a general placement guideline.



### Time Features

To enter the Time Features mode highlight the Time Features icon using the CAT << >> buttons and then press the SELECT button.




The following adjustments can be made:

- Clock
- Alarm Clock
- Program Alert
- Auto Shutdown
- Sleep Mode

#### **Clock**

This option enables you to set up the time to be displayed on the screen. Time is kept directly by the SIRIUS® satellite and is transmitted in GMT FORMAT.

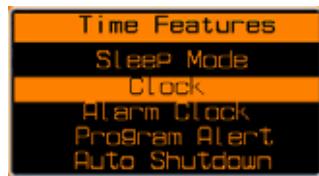

To set the time display 12 or 24 hour format, highlight the 12 or 24 hr Format and press the SELECT button.



Highlight the desired time format and press the SELECT button. The “star” icon indicates the currently selected format. Press the BACK button to exit.



To set the time zone, highlight the time zone and press the SELECT button.



Highlight the desired Time Zone and press the SELECT button. The “star” icon indicates the currently selected Time Zone. Press the BACK button to exit.



If you observe Daylight Savings Time, highlight Daylight Savings and press the SELECT button. Go Satellite Receiver to automatically update the clock. To set Daylight Savings Time, highlight Daylight Savings and press the SELECT button.



Highlight the desired selection and press the SELECT button. The “star” icon indicates the current selection. Press the BACK button to exit.



#### Alarm Clock

You can set your ReGo Satellite Receiver to turn on at a selected time. To set the Alarm Clock, highlight Alarm Clock then press the SELECT button.



Press the CH UP/DN button to select either the “On” or “Off”(default) setting, then press the SELECT button to confirm the setting and display the Alarm Time Set Screen.



Enter the alarm time using the CH UP/DN buttons to enter the number and the << CAT >> buttons to move to the next digit. Set AM or PM then press the SELECT button to store and return to the menu.



#### Program Alert

This option allows your ReGo plug and play satellite radio to tune itself to a pre-selected channel at a pre-selected time.

**Note:** To use your programmed setting, make sure to set "Program Alert" to "Program Alert On".

The following settings can be made in this sub-menu screen:

- Program Time/Day (default-12:00 PM - Monday)
- Channel Selection (default-Currently Playing Channel)
- Program Alert On / Off (default-Off)

To enter the sub-menu, highlight Program Alert and then press the SELECT button.



**Program Alert On/Off**


Press the CH UP/DN buttons to select either the "On" or "Off" setting. Press the SELECT button to confirm the setting.



**Channel Selection:** Press the << CAT >> and CH UP/DN buttons to scroll through the categories and channel list and highlight the desired channel. Press the SELECT button to confirm the setting.

**Set Time**

Enter the alert time using the CH UP/DN buttons to enter the number and the << CAT >> buttons to move to the next digit. Set AM or PM then press the SELECT button to store.

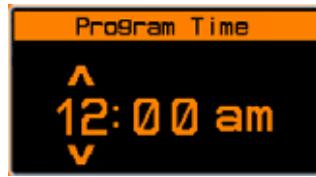

#### **Set Day**


Press the CH UP/DN buttons to navigate the day: Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, Daily or Sunday. Press the SELECT button to confirm the setting.



#### **Continuous Record On / Off**

If you would like to record the Sirius program press the CH UP/DN buttons to select either the "On" or "Off" setting. Press the SELECT button to confirm the setting.

Note: Setting to "On" will record the program for later listening. Selecting "Off" will not record the program. Your program alert feature works whether you choose to record the program or not.

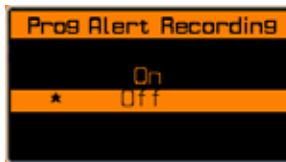

#### Set Record Time

Enter the record stop time using the CH UP/DN buttons to enter the number and the << CAT >> buttons to move to the next digit. Set AM or PM then press the SELECT button to store.



Note: if you enter a time that is before the program start time an alert message will appear.


#### End Time is Before Start Time Display Here

#### Auto Shutdown

This option will automatically turn your satellite radio off after an hour of inactivity. An audible tone will sound one minute before your device turns off.



Press the CH UP/DN buttons to select the "Enabled" or "Disabled" setting. Press the SELECT button to confirm the setting.

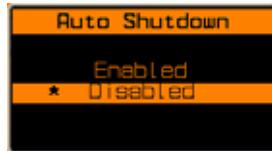


#### Sleep Mode


When entering this mode, you can program your ReGo satellite radio to shutdown after a pre-selected period of time.

The following adjustments can be made:

- Off (default)
- 15 min.
- 30 min.
- 45 min.
- 60 min.

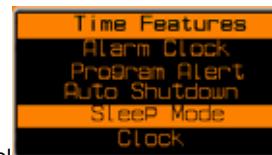

Press the CH UP/DN buttons to select the time. Press the SELECT button to confirm the setting. Your ReGo satellite radio receiver will now turn off after the selected time has passed. If "Off" is selected, the Sleep Mode will be canceled.

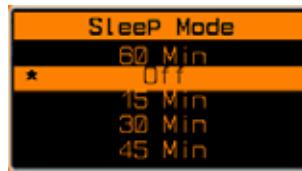

### FM Transmitter

This option allows your ReGo plug and play satellite radio to transmit music to your car or home FM radio. To enter the FM Transmitter menu highlight the FM Transmitter icon using the CAT << >> buttons and then press the SELECT button.



Press the CH UP/DN buttons to select the FM On/Off. Press the SELECT button to confirm the setting.



#### FM Transmitter On/Off

Press the CH UP/DN buttons and select "On" to turn the FM Transmitter "On" and press the SELECT button to confirm the setting. To turn the FM Transmitter "Off" select "Off" and press the SELECT

button to confirm the setting.



#### FM Frequency Setting

Press the CH UP/DN buttons and highlight "On" to turn the FM Transmitter "On" and press the SELECT button to confirm the setting. To turn the FM Transmitter "Off" highlight "Off" and press the SELECT button to confirm the setting.



#### Frequency Selection


Select a frequency that is not being used by an FM Broadcaster in your area. Using the CH UP/DN buttons to change number and the << CAT >> buttons to move to the next digit. Press the SELECT button to store the setting.



### **3.3. Setup Menu in MP3 MODE**

### 3.3.1. Display Setting

Press the [**||<< CAT**], [**||>> CAT**] buttons and Press the [select] button to enter the “Display Setting”.

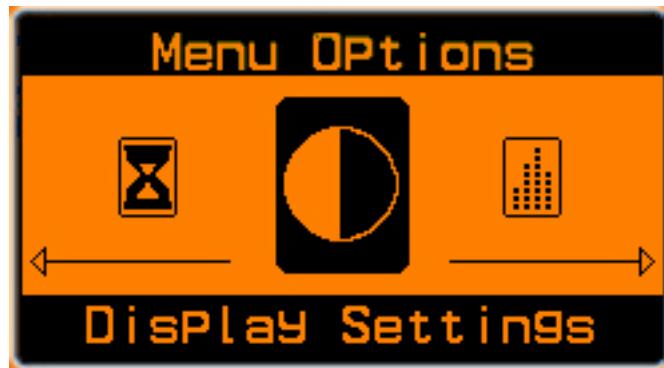

**Backlight Timer:** Press the [**CH**], [**CH**] buttons to move the highlighted cursor. Select “Backlight Timer” and press the [**CH**], [**CH**] buttons to move the highlighted cursor. Press the [Select] button to select item.

## Display Settings

- Backlight Timer
- Brightness Control
- Contrast Control
- Invert Color

### Backlight Timer

- Always Off
- \* 10 Second
- 20 Seconds
- 30 Seconds

**Brightness Control:** Press the [ CH], [ CH] buttons to move the highlighted cursor. Select the “Brightness Control” and press the [ |<< CAT], [ |>> CAT] buttons to move the bar.






**Contrast Control:** Press the [ CH], [ CH] buttons to move the highlighted cursor. Select the “Contrast Control” and press the [ |<< CAT], [ |>> CAT] buttons to move the bar.

## Display Settings

- Backlight Timer
- Brightness Control
- Contrast Control
- Invert Color

## Contrast Control

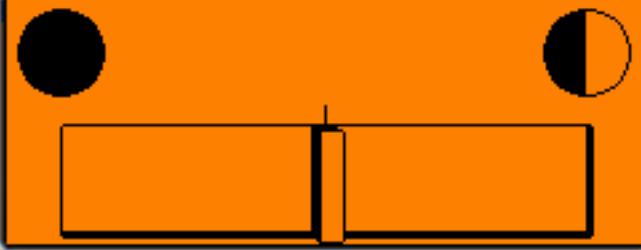

**Invert Colors:** Press the [ CH], [ CH] buttons to move the highlighted cursor. Display invert colors to select “invert Colors”.






### 3.3.2. EQ Setting


Press the [I<< CAT], [I>> CAT] buttons and Press the [select] button to enter the “EQ Setting”. Press the [ CH1], [ CH1] buttons to move the highlighted cursor then press [Select] to have one of the preset EQ settings to be activated There are 5 preset EQ( Normal/Classic/Ultra Bass/Rock/Jazz) and one custom mode. The “Custom” mode allows you to change the variable frequencies. Press the [ CH1], [ CH1] buttons to move the bar for up and down and the [I<<

**CAT1**, **[|> CAT]** button to move right and left. Press the [Select] button to confirm.


Note: EQ function is only available in mp3 mode.

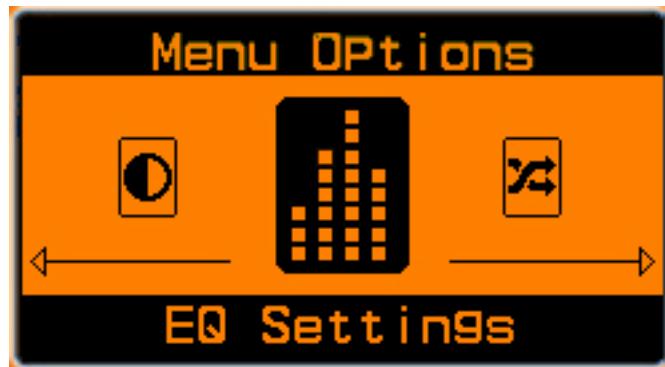

→ Select "EQ Setting"

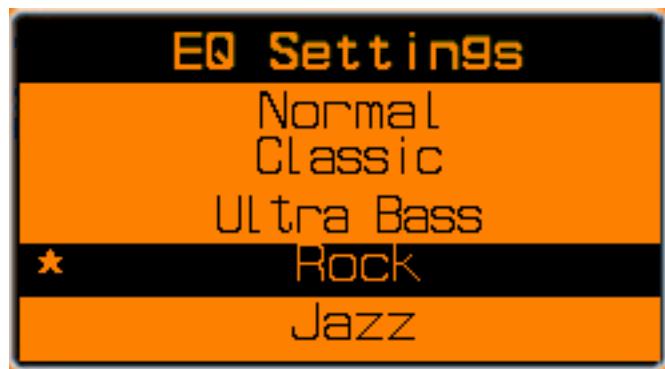

→ Select Item

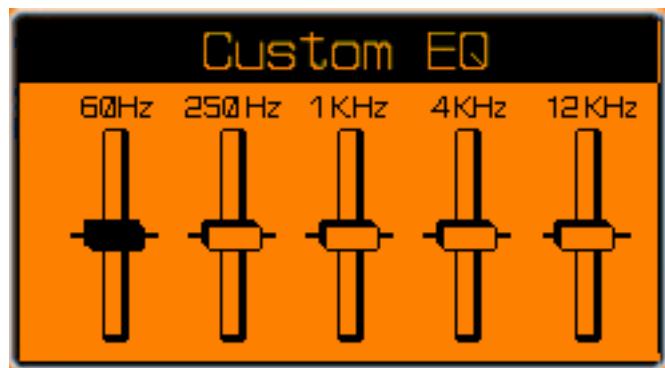

→③ custom EQ Control

### 3.3.3. Play Option


Press the **[|<< CAT], [|>> CAT]** buttons and Press the **[select]** button to enter the “Play Option”. And then select Item. There are 3 types of play options you can choose (Shuffle/Repeat/Intro).





### 3.3.4. Time Features

Press the [||<< CAT], [||>> CAT] buttons and Press the [select] button to enter the "Time Features".

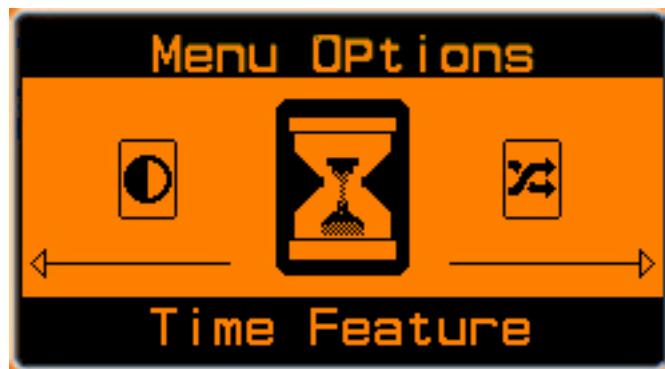

**Auto Shutdown:** This is the function to shutdown the unit automatically when there is no key input for an hour. Press the [ CH], [ CH] buttons to move the highlighted cursor. Select “Auto Shutdown”. And then select “Enabled”

Note: Once activated, Rego will turn itself off when there is no key input from user for an hour.

## Time Features


Auto Shutdown  
Sleep Mode

### Auto Shutdown

Enabled  
★ Disabled

**Sleep Mode:** This is the function to shutdown the unit automatically after certain time defied by user. Press the [ CH], [ CH] buttons to move the highlighted cursor. Select “Sleep Mode”. And then select the preferred time of your choice.



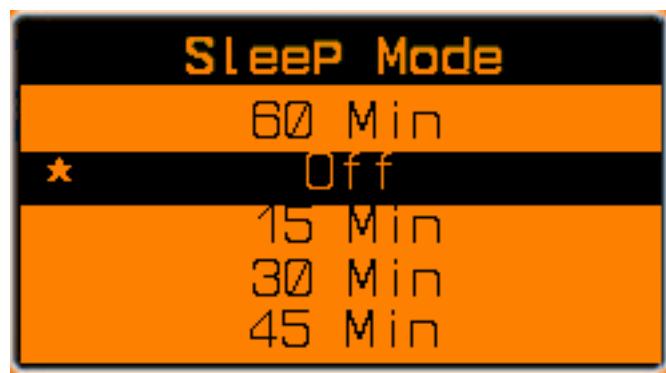

## DISPLAY MESSAGES

### Acquiring Signal

When the audio signal is lost, a pop-up window with the message "Acquiring Signal" is displayed until the signal is recovered.

**"Acquiring Signal" Display Here**

### Antenna Not Detected

When no antenna is detected and the signal is lost, a pop-up window with the message "Antenna Not Detected" is displayed until an antenna is detected and the signal is acquired.

**"Antenna Not Detected" Display Here**

### Updating Channels

When a GCI (Global Control Information) update from the SIRIUS® broadcast system is detected, a pop-up window with the message "Updating Channels X% Completed" is displayed until the GCI update is complete.

**"Updating Channels X% Completed" Display Here**

## Subscription Updated

When a subscription update (PSV) from the SIRIUS® broadcast system is detected, a pop-up window with the message "Subscription Updated Press Any Key to Continue" is displayed for at least 3 seconds.

["Subscription Updated Press Any Key to Continue" Display Here](#)

## PROBLEM SOLVING

### Problem Solving Section

For your assistance, we have listed a few common problems below.

#### **The Satellite Receiver does not work.**

Please check the Power Cables. Make sure you have contacted SIRIUS® to activate your Satellite Radio subscription 1-888-539-SIRIUS (7474).

#### **I have no sound from my Satellite Receiver.**

Check the audio cables and make sure they are plugged in correctly.

Check the FM Transmitter Setting and make sure that your FM radio is set to the correct channel.

#### **The LCD displays Acquiring Signal.**

When the Satellite Signal is lost, a pop-up window with the message "Acquiring Signal" is displayed until the signal is recovered. Move the antenna to a better location.

#### **The LCD Displays Antenna not Detected.**

When no antenna is detected and the signal is lost, a pop-up window with the message "Antenna Not Detected" is displayed until an antenna is detected and the signal is acquired. Make sure the antenna is securely plugged into the antenna jack.

**Reception is weak or the audio has static and is unclear.**

Check that the satellite antenna is connected and not faulty. Change the location of the Antenna making sure it is away from obstructions.

**Warranty Information**

**XACT Communication**

One-Year Limited Warranty

This limited warranty sets forth all **XACT Communication** responsibilities regarding your product.

There are no other expressed or implied warranties from **XACT Communication**.

**Warranty Service Provided**

If you purchased the product new from a retail vendor, **XACT Communication** warrants the equipment against defects in material and workmanship for a period of one (1) year from the original date of purchase. This warranty is in lieu of all other express warranties. This warranty begins when you purchase the product and continues for one (1) year unless you sell or rent the unit, in which case the warranty stops.

**XACT Communication** disclaims any implied warranty, including the warranty of merchantability and the warranty of fitness for a particular purpose, as of the date of one year from your original purchase of the product.

**XACT Communication** assumes no responsibility for any special, incidental, or consequential damages. This warranty gives you specific legal rights and you may have other rights which vary from state to state. Some states do not allow the exclusion or limitations of special, incidental, or consequential damages or limitations on how long a warranty lasts, so the above exclusion or limitation may not apply to you.

**Warranty Service Not Provided**

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification, or the affixing of any attachment not provided by **XACT Communication** with the equipment, and/or loss of parts. This warranty is voided in the event any unauthorized person opens, alters, or repairs the product. All **XACT Communication** equipment being returned for repair must be suitably packaged.

**What To Do for Warranty Service**

During the first thirty (30) days, a defective product is eligible for over-the-counter exchange at the retailer from whom it was purchased. After thirty (30) days, the defective product should be returned to the authorized service center. Please allow a minimum of 2-3 weeks for the return of your product. For the shipping address of the authorized service center, call one of the telephone numbers given below.

Your product will be repaired or replaced if examination by the service center determines the product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier prior to repair. A product received with missing parts or with damage due to abuse, inadequate packing or some other noncompliance with this limited warranty will be returned to you C.O.D., freight collect.

**NOTE:** A product received which was not made by **XACT Communication** or which is not defective as determined by our test procedures will not be repaired and will be returned to you C.O.D., freight collect.

**To Obtain Warranty Service**

- Provide proof of the date of purchase within the package.
- Prepay all shipping costs to the authorized service center.
- Include a return shipping address within the package.

Please retain your sales receipt, the carton, the packing materials, and the printed material. The original carton is the best shipping container for the Product should you have to return it.

**For your reference:**

Model Number\_\_\_\_\_

ESN Number\_\_\_\_\_

S/N Number\_\_\_\_\_

Date of Purchase\_\_\_\_\_

Name of Dealer\_\_\_\_\_

**XACT Communication Customer Service Telephone Number:**

**1-866-466-XACT (9228)**

**OUTSIDE THE U.S.A. AND CANADA CALL: 1-212-481-7950**

**Visit us on the Web: [www.getxact.com](http://www.getxact.com)**