

A large, vertical, red decorative shape on the left side of the page, resembling a stylized letter 'C' or a curved bar.

Audio-Mate Stereo Headset With Transmitter

User Manual





Contents


1. Introduction	
2. BOX Package	
3. Getting Started	
3.1 Preparation	
3.2 Pairing Headset & Audio Transmitter.....	
3.3 How To Use Headset & Audio Transmitter.....	
3.4 Current Support Phone List.....	
3.5 The Power Source of the Devices.....	
3.5.1 Audio Transmitter Power Source.....	
3.5.2 Bluetooth Headset Power.....	
4. Versatile Applications	
5. Warning	

1. Introduction

Audio-mate Stereo Headset



Transmitter

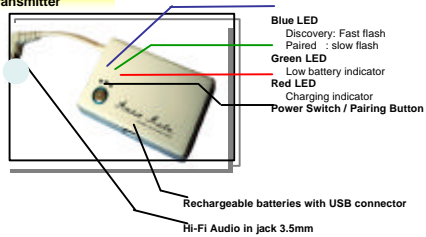

2. Package

1. Audio-Mate stereo Headset *1
2. Audio Transmitter *1
3. USB Charger Cable *1
4. Manual *1




a. Stereo Headset *1



b. Audio Transmitter * 1



c. USB Charger cable *1

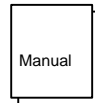

d. Manual *1

Safety information

1. Don't use the headset phone and transmitter inside hospitals , airplanes or in the vicinity of other emergency systems.
2. Keep away from the strong radio system, to ensure the signal quality.
3. Continuous listening of music at a high volume may cause damage to your ears.
4. Never use the Bluetooth Headphones whilst driving.

3. Getting Started

3.1 Preparation

-Audio-Mate Headset


1. Please make sure the battery power of headset and the TX is sufficient .
2. If the power is low, following scenarios happen:
 - (1) The headset starts to reset automatically.
 - (2) You can constantly hear breaks on the audio link.
 - (3) You can't connect the headset to the TX or Dongle after several tries.
3. Please charge the headset when you see the low power condition. When the battery is begin charged, the charging LED indicator of the headset will show red light constantly.
4. When the battery is full , the light of headset or TX will be shut off automatically.

- Transmitter

- Plug AC Adapter into the DC jack of the Transmitter
- Plug the AC Adapter's plug into the outlet.
- The LED indication is **Green** when charging the Transmitter.
- The LED indications turns **off** After the battery is fully charged.
- Remove the AC Adapter from Transmitter.

3.2 Pairing Audio-Mate Headset & Bluetooth Audio Transmitter

1. Turning on the Audio-Mate Headset Power-On Switch, the Power-On LED will start **rapid flashing** that is into standby mode for pairing.
2. To start Audio Transmitter by pushing down **(about 5s)** the Audio Transmitter Power-On Button continuously until **LED1 flashing (Blue)** ; Transmitter is into the pairing mode .
3. which is about 5-10 seconds to complete the pairing process.
4. To complete the pairing process; always check below:
 - a. Audio Transmitter: When Power-On LED Light changes to a steady flashing mode which is about 1 time per second that means the pairing operation is finished.
 - b. Bluetooth Headset: When finishing the pairing process; the Power-On LED will stop flashing and remains on.

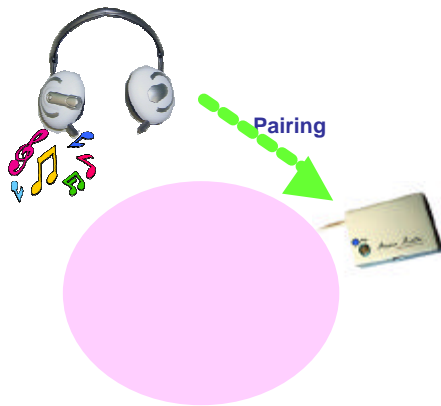

3.3 How To Use Bluetooth Headset & Bluetooth Audio Transmitter

1. To Enable the Bluetooth Function with Your Entertainment Device

- After pairing the Bluetooth Headset and the Audio Transmitter, simply connect the Audio Transmitter to the Entertainment Device via the standard Audio Jack of the Audio Transmitter.
- To use Home Entertainment Devices that do not provide Audio In interface: use an Audio Jack to standard RCA cable and then connect it to the Device to enable its Bluetooth function.

2. Listening Mobile Phone

- Please follow the below steps to connect your mobile phone with the Bluetooth Headset:
If you wish to use Handsfree function to answer the mobile phone while music playing, please do pair your mobile phone and headset before pairing transmitter and headset.
- Auto sound notify when your mobile phone call in. Push straight inwards to pick up the incoming call & push it again to hang up & recover the music at the same time. Some mobile phone may terminate the music source while answering the phone call; under such circumstance, reconnect to the music source.

3.4 Current Support Phone List:

Nokia
3650/3660/6230/6600/6820/7610/6310i/N-Gage/7610/6670/6670b/9300/6630
Future : 7710/9500

Motorola
V600 /V500 /V525 /V80 /A630 /V620 /E550 /V535 /V545 /V550 /V600/A768/V3/E398
V710 CDMA 2000 Phone/V3/V330
Future : A780/E680/V547/Matta/V400/V635/A925/A835/E815/M1000/A1010/V2000/MPX200
/MPX100/A860/i603

Sony Ericsson
T68i/T610/T630/Z600*/P800/P900/T610/Z600/S700/S700c/K750/V800/W800/S700/P900
Future : K700

Siemens
U15/SX1

Panasonic
EB-X70/FJ505
Future : X700

Fujitsu
F900i/FJ505

BlackBerry
7100i

Toshiba
e8xx/W21T/A5504T

Samsung
SPH-V6900
Future : SGH-D500/SGH-620/SHG-880/SPH-G1000/SCH-G1000/SGH/Z140/ZGH-D600/SGH-800

PalmOne
Treo650

LG
Future : PM325

Dopod
565/575/585

Attention :

- If you want to use this function for mobile phone talk and listen, please check the mobile phone has Bluetooth headset function before.
- Mobile phone makers may have different to pairing procedure between headset and mobile phone.
- About the pairing procedure between headset and mobile phone , please check the function by your mobile phone users manual.

3.5 The Power Source of the Devices

3.5.1 Audio Transmitter Power Source

Audio Transmitter contains an internal rechargeable battery. When battery low, the Battery LED Indication light will be on and when the battery full, the LED will go out. To fit versatile purposes of using it indoor or on the go, it provides 2 different power charging methods as listed below:

a. USB A-to-B Charging Cable

Use provided USB A-to-B Cable, plug USB type B into Audio Transmitter
Plug USB type A connector into USB port on Notebook or PC Device.
The Charging LED Light will flash while it is on charging status.
When the battery full, the LED will go out.

b. AC to DC adapter charge

Please use provided AC to DC adapter for charging the power.
Plug AC to DC adapter into AC connector at where the power source is available.
Plug the mini USB side connector into transmitter charge port.
The Charging LED Light will flash while it is on charging status.
When the battery full, the LED will get to snuff.

3.5.2 Bluetooth Headset Power

Bluetooth Stereo Headset contains an internal rechargeable battery. When battery low. Please charging the power. it provides 2 different power charging methods as listed below:

a. USB 3.5mm to USB Charging Cable

Use provided USB A-to-B Cable, plug USB type B into Audio Transmitter
Plug USB type A connector into USB port on Notebook or PC Device.
The Charging LED Light will flash while it is on charging status.
When the battery full, the LED will go out.

b. AC to DC adapter charge

Please use provided AC to DC adapter for charging the power.
Plug AC to DC adapter into AC connector at where the power source is available.
Plug the mini USB side connector into transmitter charge port.
The Charging LED Light will flash while it is on charging status.
When the battery full, the LED will get to snuff.

Attention :

Please always uses maker provided charging accessories as the others may have the potential risk to damage the Device.

Please DO NOT charge the power while the transmitter is operating.

4. Versatile Applications



5. Warning

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Caution
注意!

依據 低功率電波輻射性電機管理辦法

第十二條

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。