


Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5755 MHz

## Horizontal

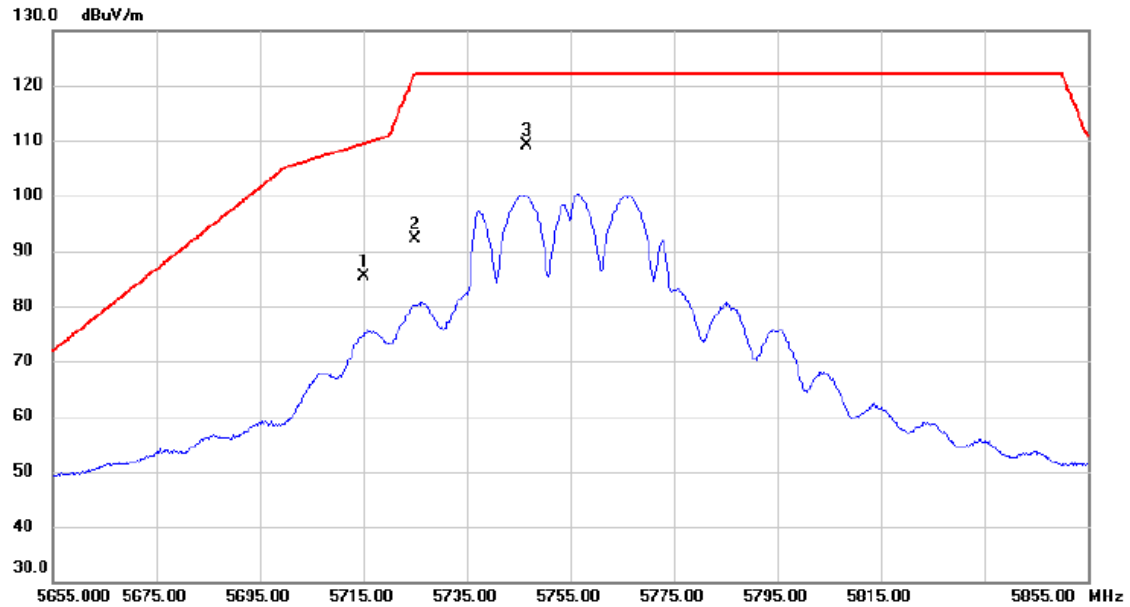

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5715.000	68.91	16.49	85.40	109.40	-24.00	peak	
2		5725.000	75.72	16.51	92.23	122.20	-29.97	peak	
3	*	5746.600	92.55	16.55	109.10	122.20	-13.10	peak	


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5755 MHz

## Vertical

80 dBuV/m

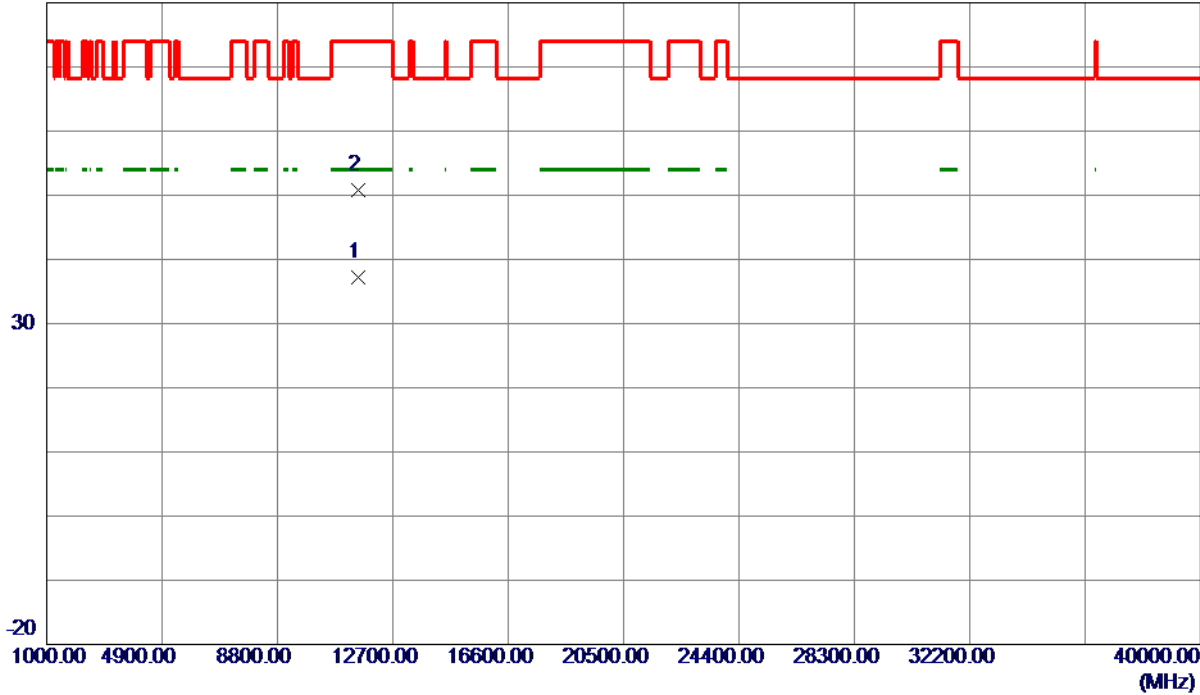

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	11511.3550	20.03	17.20	37.23	54.00	-16.77	AVG	
2	11511.4400	33.57	17.20	50.77	74.00	-23.23	Peak	


### REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5755 MHz

## Horizontal

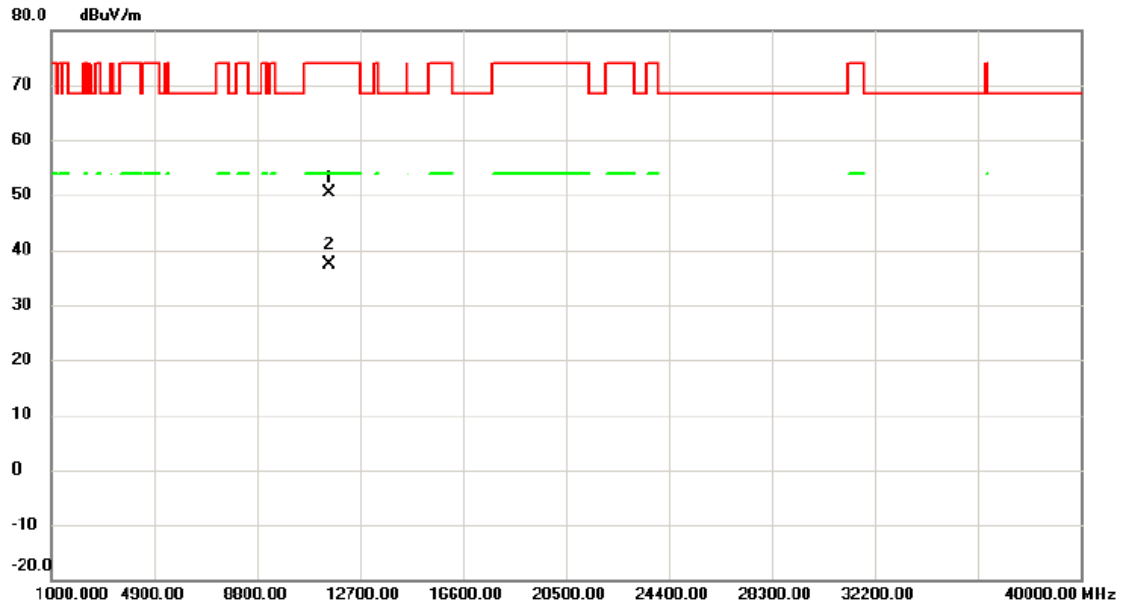


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		11509.670	33.29	17.20	50.49	74.00	-23.51	peak	
2	*	11511.122	20.11	17.20	37.31	54.00	-16.69	AVG	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

## Vertical

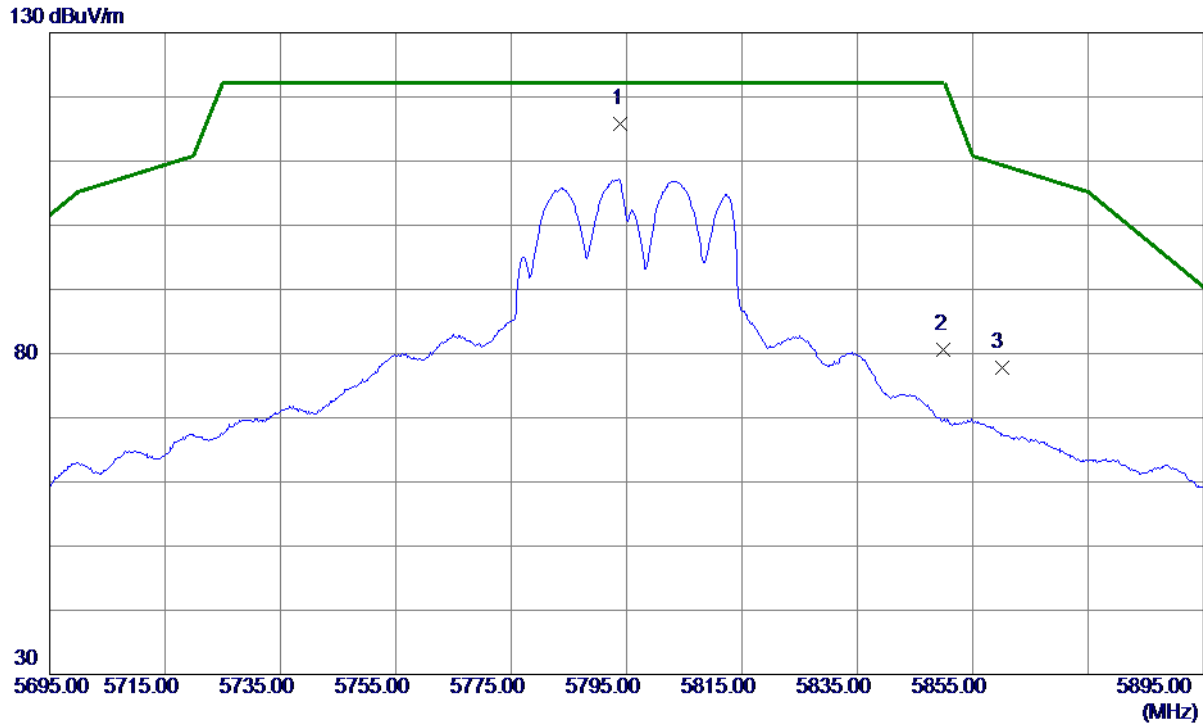

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5794.0000	99.14	16.65	115.79	122.20	-6.41	Peak	
2	5850.0000	63.88	16.76	80.64	122.20	-41.56	Peak	
3	5860.0000	61.09	16.78	77.87	109.40	-31.53	Peak	


### REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

## Horizontal

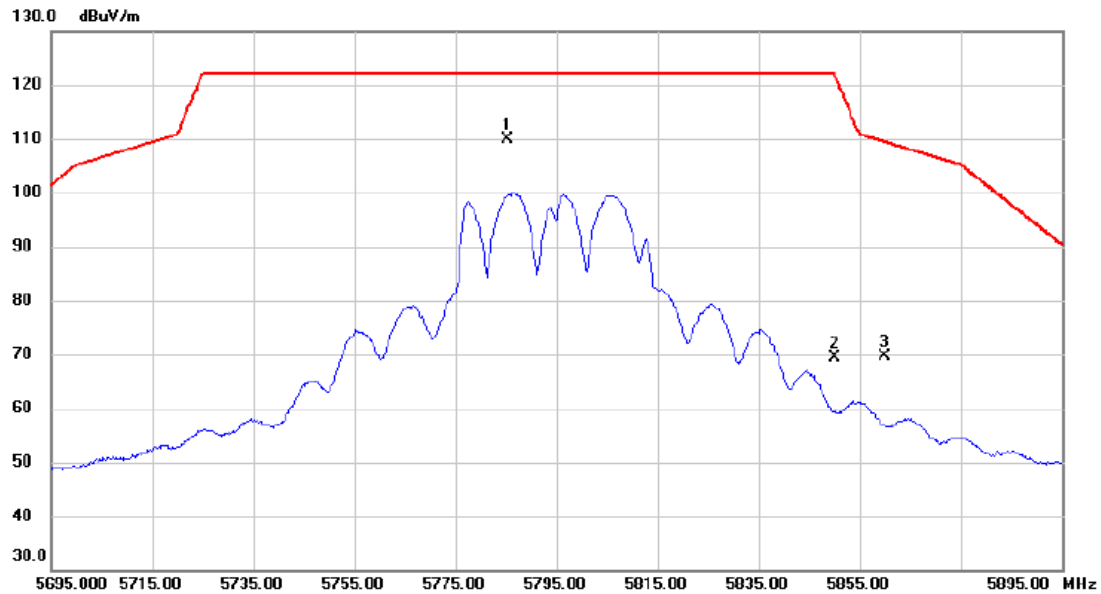

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5785.400	93.28	16.63	109.91	122.20	-12.29	peak	
2		5850.000	52.68	16.76	69.44	122.20	-52.76	peak	
3		5860.000	52.77	16.79	69.56	109.40	-39.84	peak	


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

## Vertical

80 dBuV/m

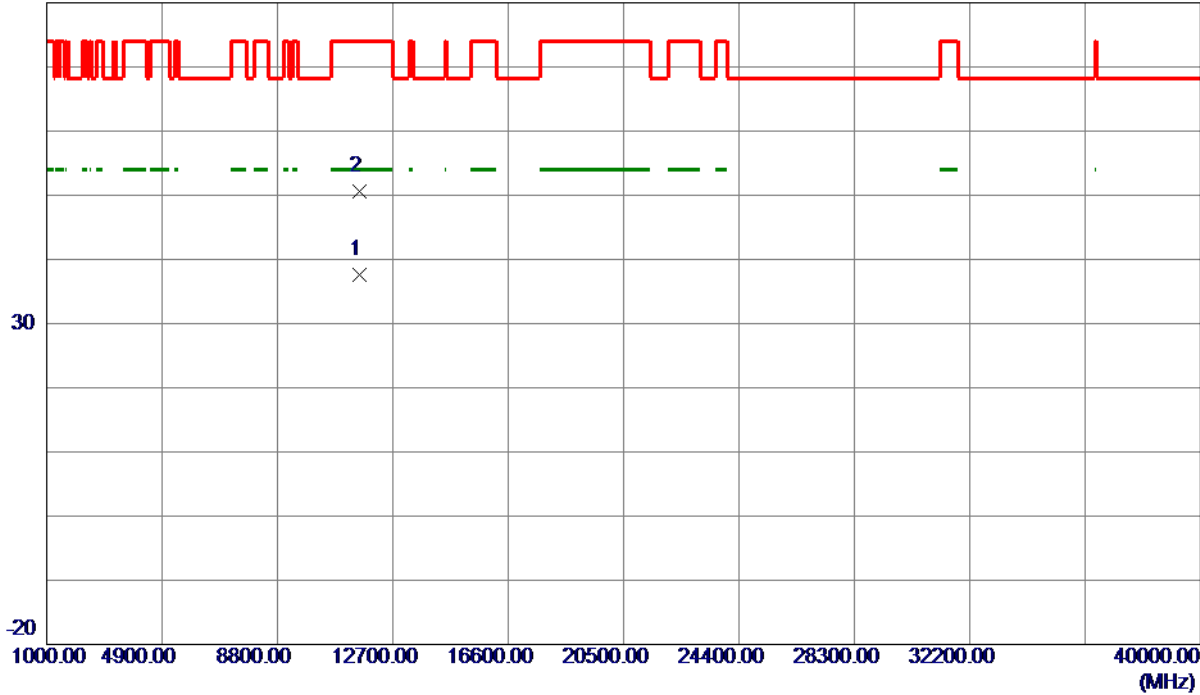

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	11588.1350	20.27	17.27	37.54	54.00	-16.46	AVG	
2	11588.2330	33.29	17.27	50.56	74.00	-23.44	Peak	


### REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

## Horizontal

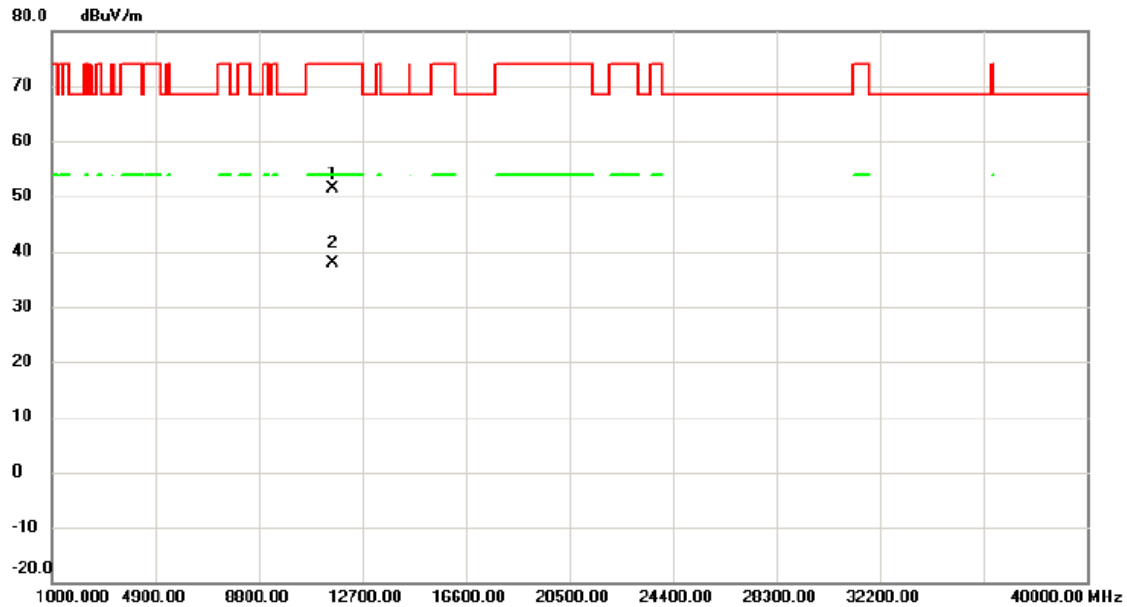

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		11588.952	34.18	17.28	51.46	74.00	-22.54	peak	
2	*	11589.048	20.55	17.28	37.83	54.00	-16.17	AVG	


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

## Vertical

130 dBuV/m

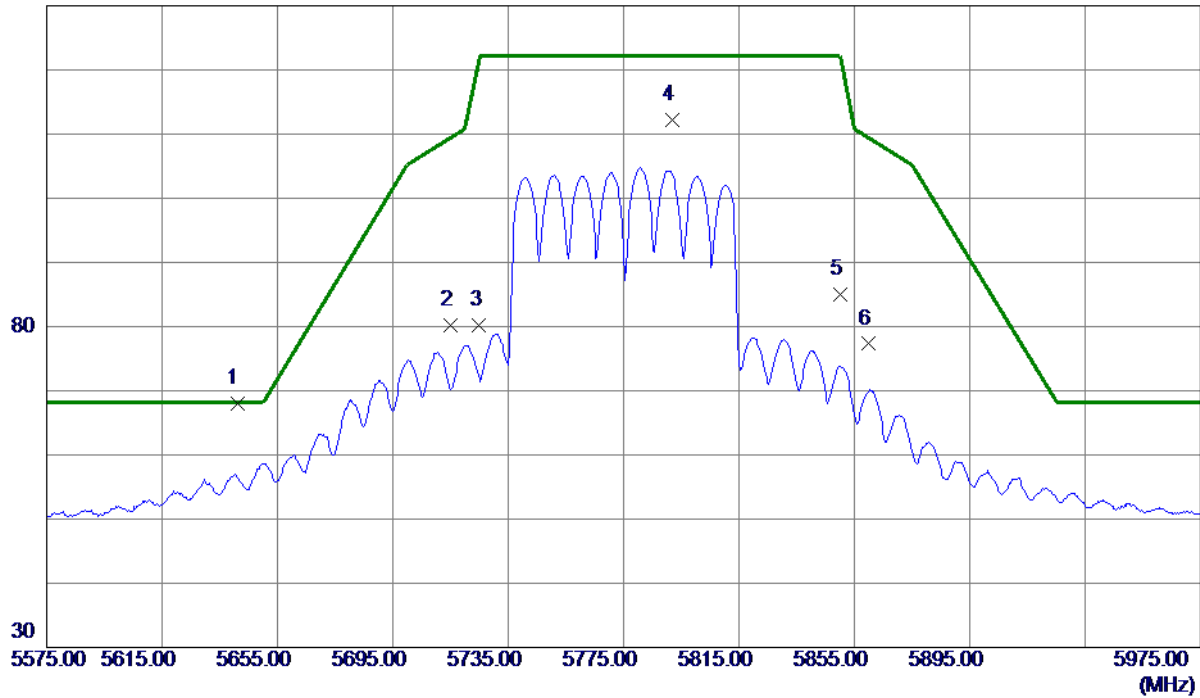

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5641.0000	51.60	16.35	67.95	68.20	-0.25	Peak	
2	5715.0000	63.78	16.49	80.27	109.40	-29.13	Peak	
3	5725.0000	63.67	16.51	80.18	122.20	-42.02	Peak	
4	5791.8000	95.59	16.65	112.24	122.20	-9.96	Peak	
5	5850.0000	68.17	16.76	84.93	122.20	-37.27	Peak	
6	5860.0000	60.52	16.78	77.30	109.40	-32.10	Peak	

### REMARKS:


(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.



Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

## Horizontal

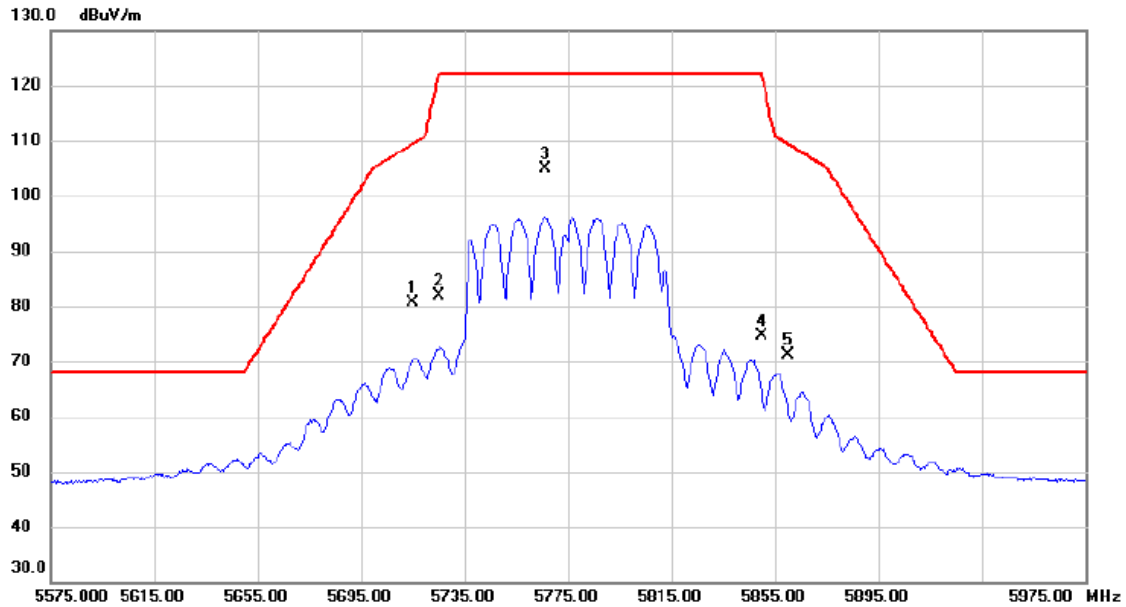

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		5715.000	64.16	16.49	80.65	109.40	-28.75	peak	
2		5725.000	65.27	16.51	81.78	122.20	-40.42	peak	
3	*	5766.200	88.28	16.59	104.87	122.20	-17.33	peak	
4		5850.000	57.80	16.76	74.56	122.20	-47.64	peak	
5		5860.000	54.38	16.79	71.17	109.40	-38.23	peak	


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

## Vertical

80 dBuV/m

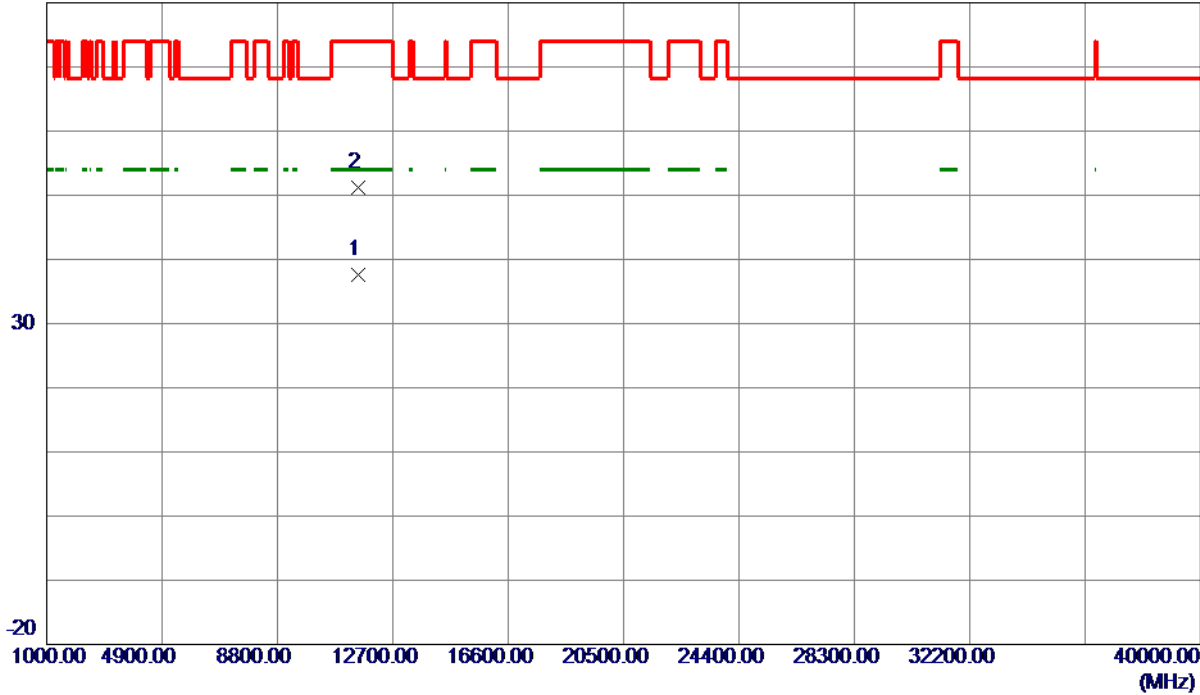

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	11548.0550	20.33	17.23	37.56	54.00	-16.44	AVG	
2	11549.6220	33.89	17.24	51.13	74.00	-22.87	Peak	


### REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

## Horizontal

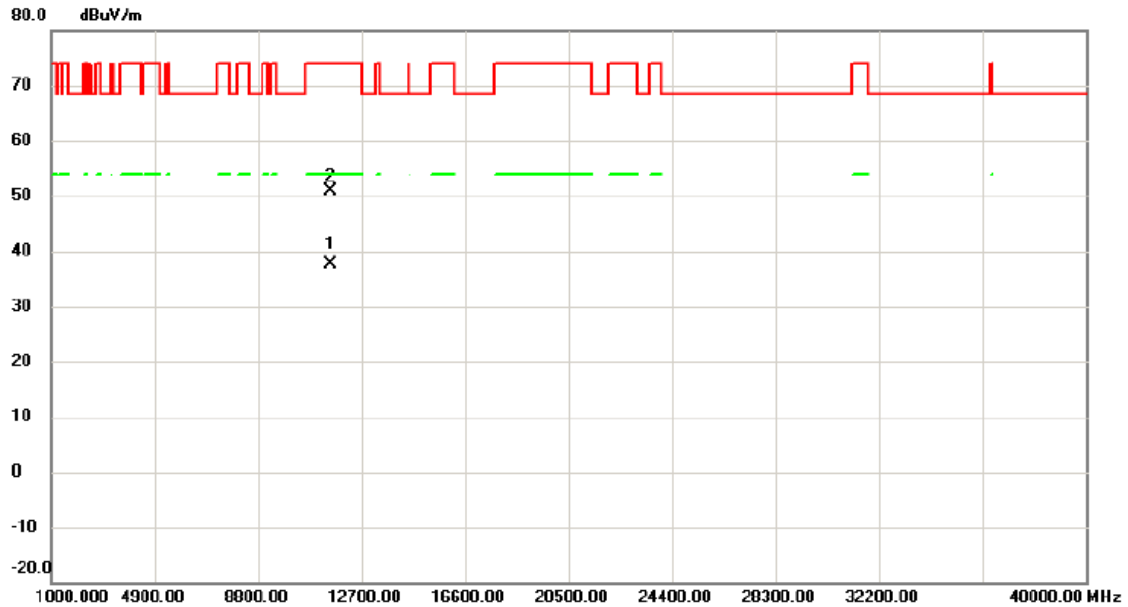


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	11548.955	20.39	17.23	37.62	54.00	-16.38	AVG	
2		11550.505	33.55	17.24	50.79	74.00	-23.21	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5180 MHz

## Vertical

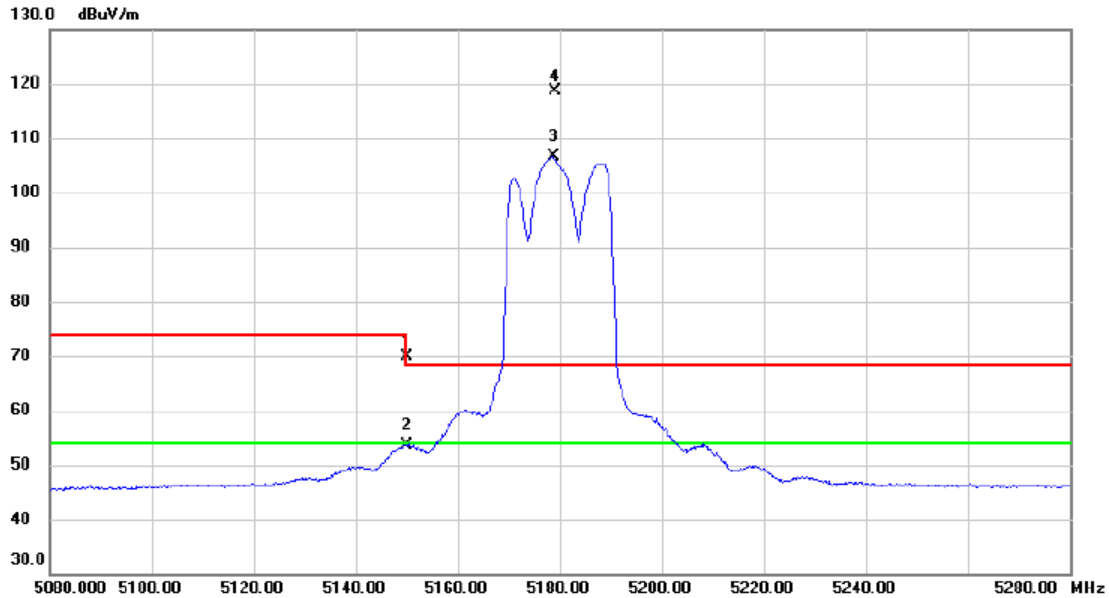


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		5150.000	54.66	15.26	69.92	74.00	-4.08	peak	
2		5150.000	38.33	15.26	53.59	54.00	-0.41	AVG	
3	*	5178.800	91.37	15.33	106.70	54.00	52.70	AVG	No Limit
4	X	5179.200	103.25	15.33	118.58	68.30	50.28	peak	No Limit

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5180 MHz

## Horizontal

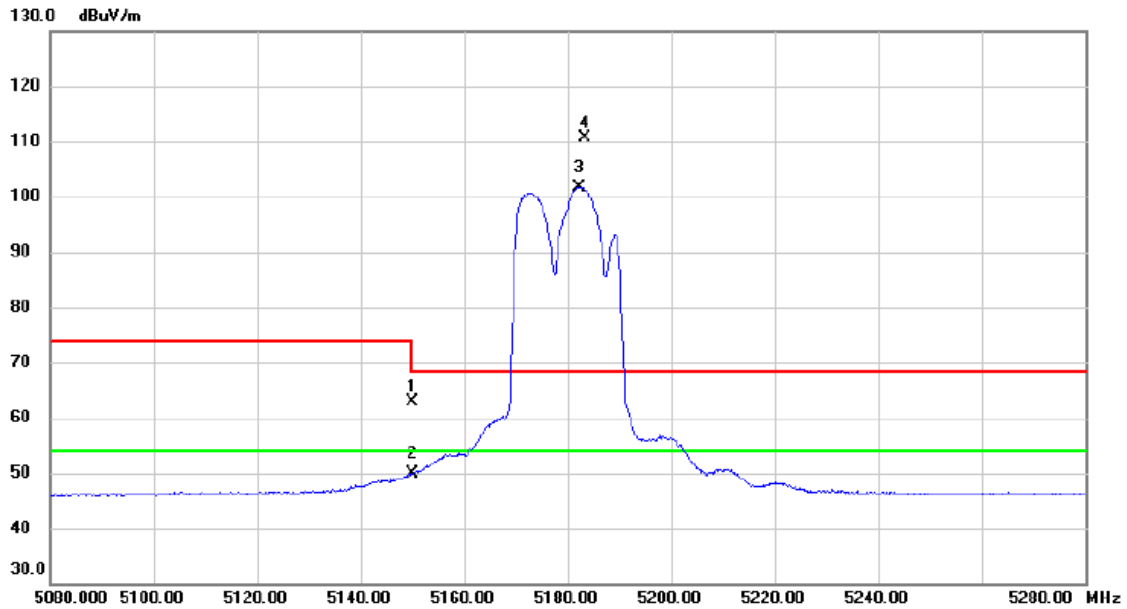


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		5150.000	47.67	15.26	62.93	74.00	-11.07	peak	
2		5150.000	34.52	15.26	49.78	54.00	-4.22	AVG	
3	*	5182.200	86.38	15.34	101.72	54.00	47.72	AVG	No Limit
4	X	5183.400	95.41	15.34	110.75	68.30	42.45	peak	No Limit

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5180 MHz

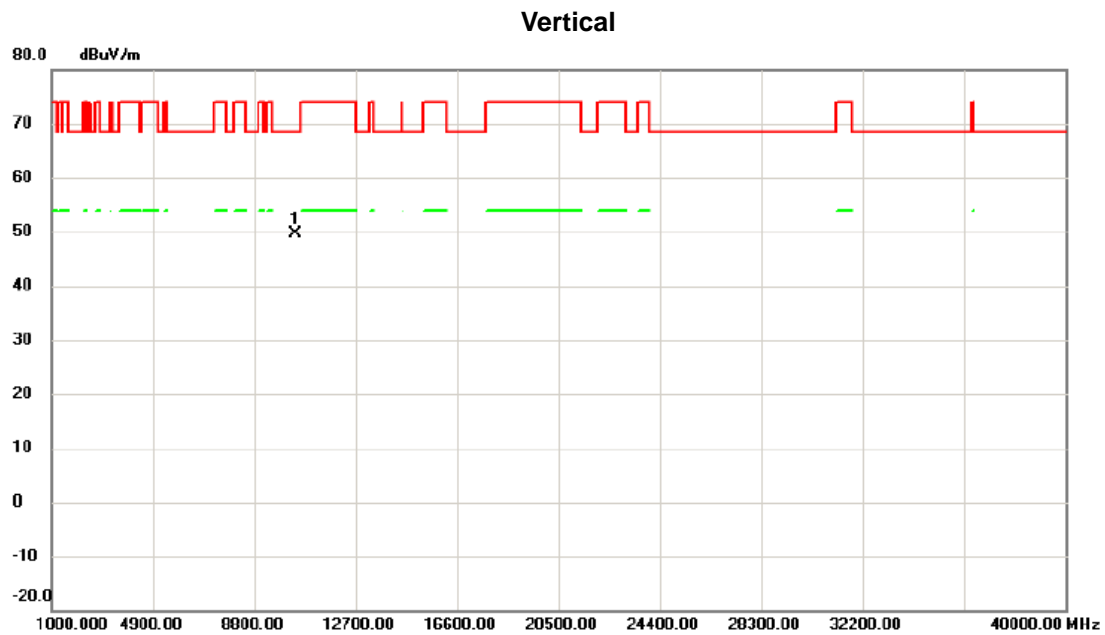


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10361.577	34.54	15.11	49.65	68.30	-18.65	peak	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5180 MHz

## Horizontal

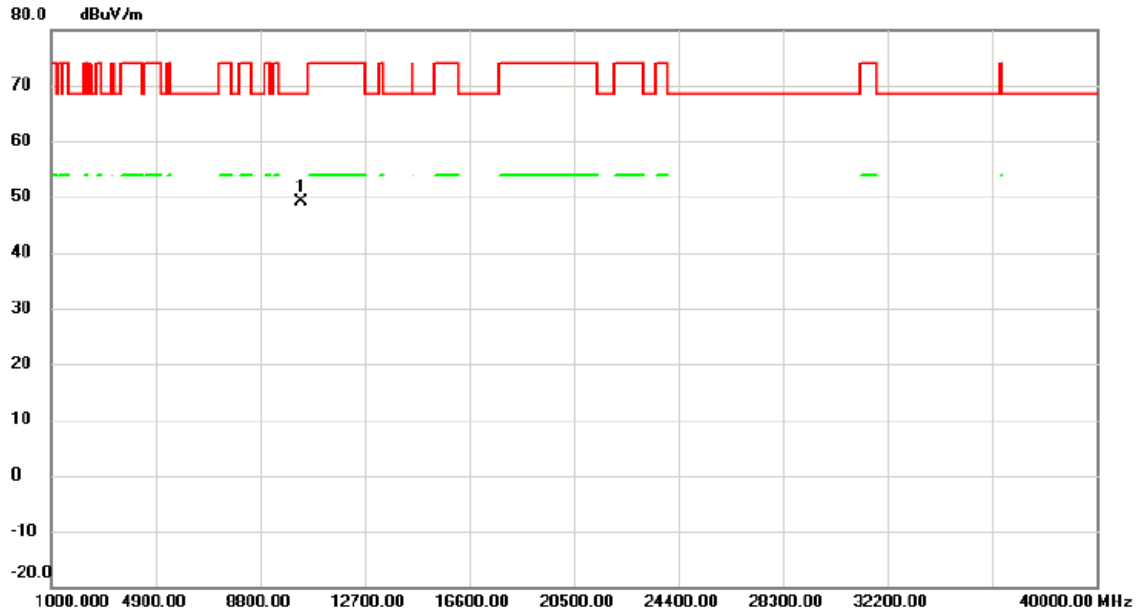


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10358.295	33.96	15.11	49.07	68.30	-19.23	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5200 MHz

## Vertical

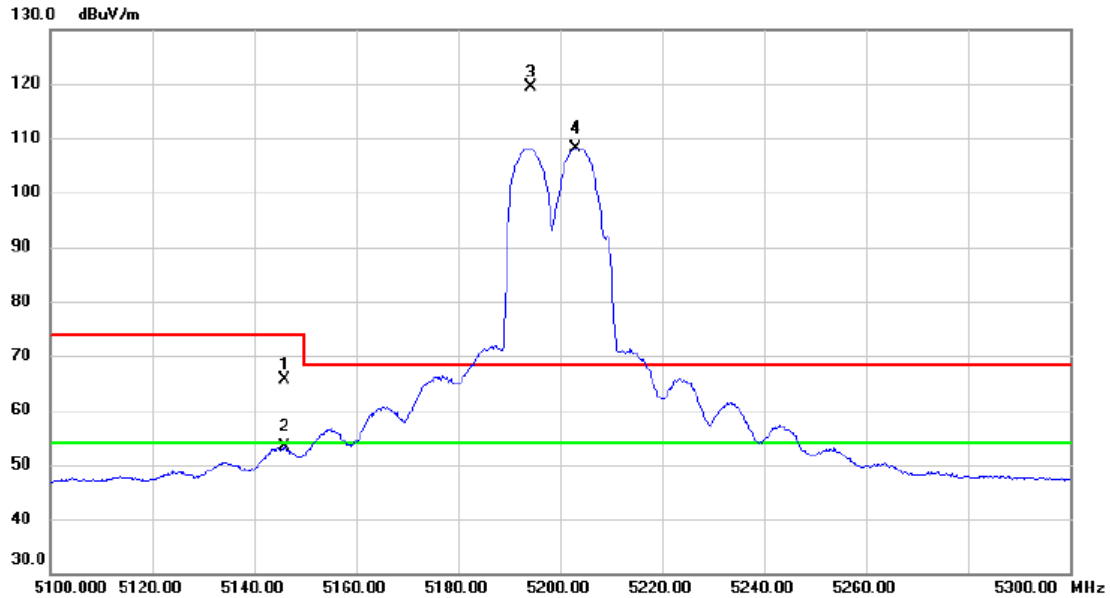

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5146.000	50.27	15.25	65.52	74.00	-8.48	peak	
2		5146.000	38.14	15.25	53.39	54.00	-0.61	AVG	
3	X	5194.200	104.07	15.36	119.43	68.30	51.13	peak	No Limit
4	*	5203.200	92.84	15.39	108.23	54.00	54.23	AVG	No Limit


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.



Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5200 MHz

## Horizontal

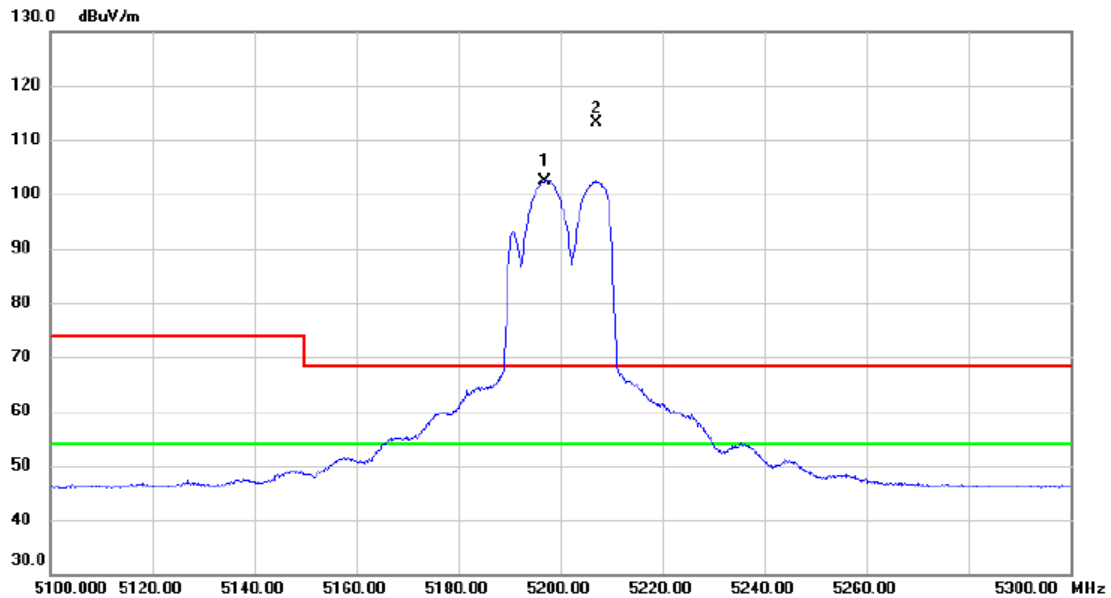


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	5197.000	87.12	15.37	102.49	54.00	48.49	AVG	No Limit
2	X	5207.000	97.81	15.39	113.20	68.30	44.90	peak	No Limit

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5200 MHz

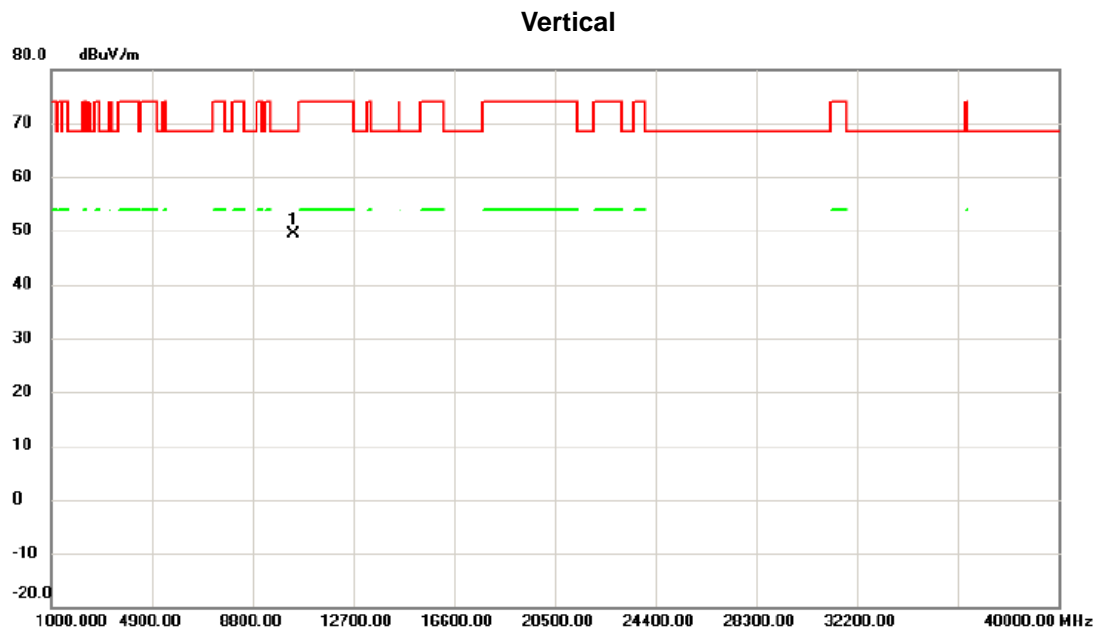


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10398.343	34.23	15.17	49.40	68.30	-18.90	peak	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5200 MHz

## Horizontal

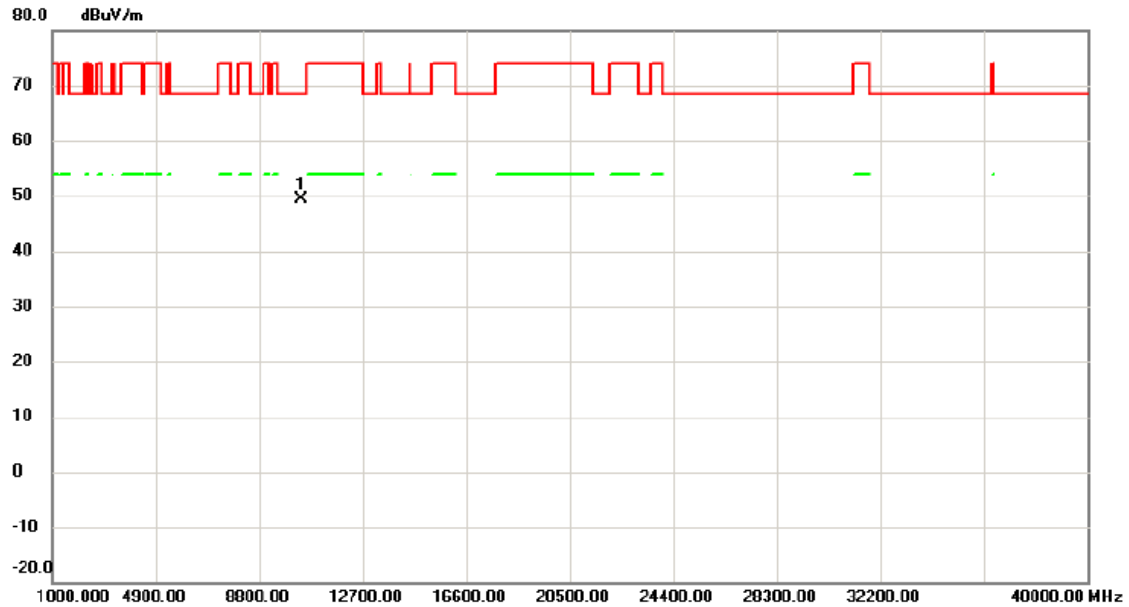


No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10399.380	34.09	15.17	49.26	68.30	-19.04	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5240 MHz

## Vertical

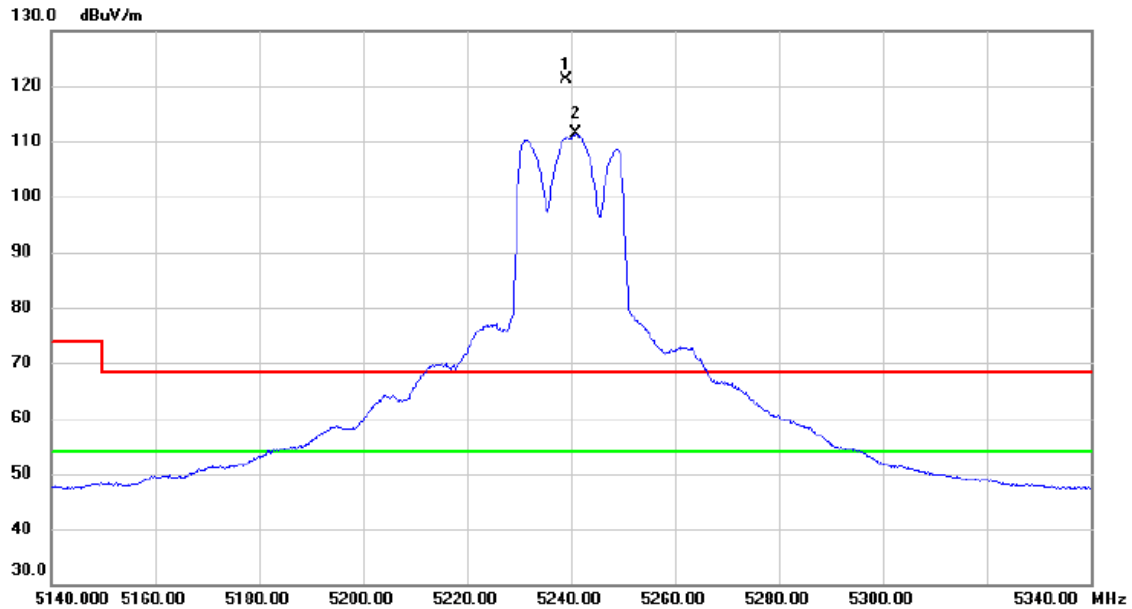


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	X	5239.000	105.54	15.47	121.01	68.30	52.71	peak	No Limit
2	*	5241.000	95.89	15.47	111.36	54.00	57.36	AVG	No Limit

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5240 MHz

## Horizontal

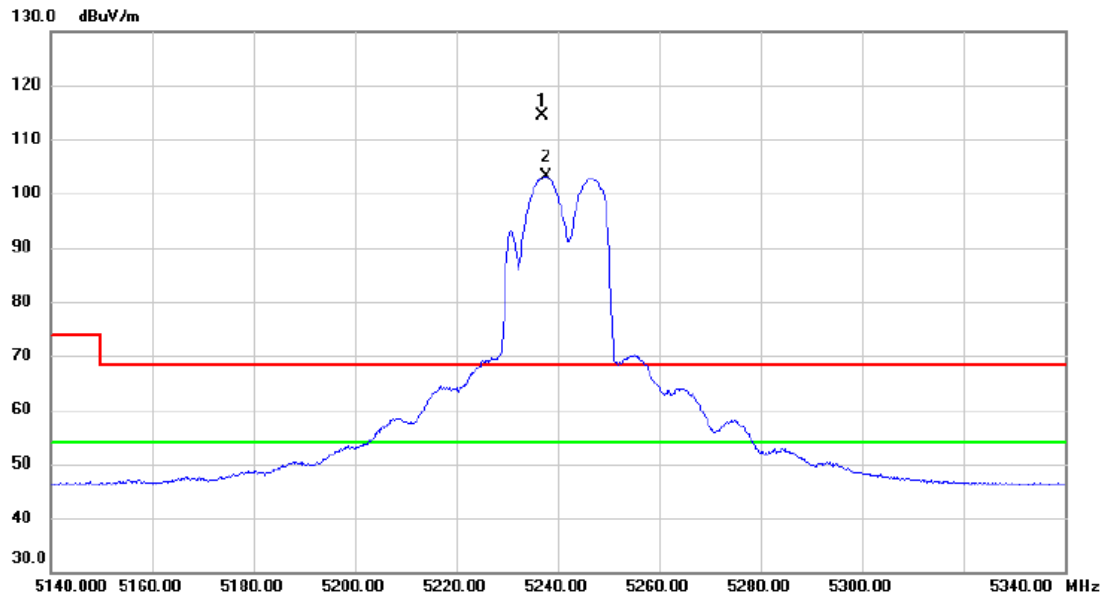


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	X	5237.000	98.92	15.47	114.39	68.30	46.09	peak	No Limit
2	*	5237.600	87.73	15.47	103.20	54.00	49.20	AVG	No Limit

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5240 MHz

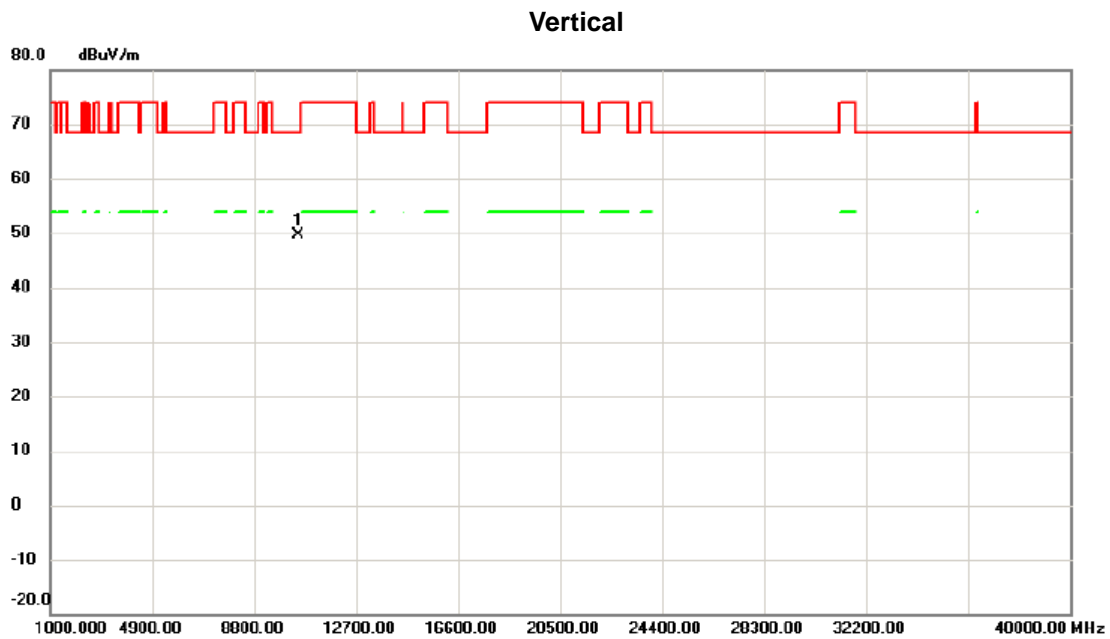


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10482.150	34.24	15.29	49.53	68.30	-18.77	peak	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5240 MHz

## Horizontal

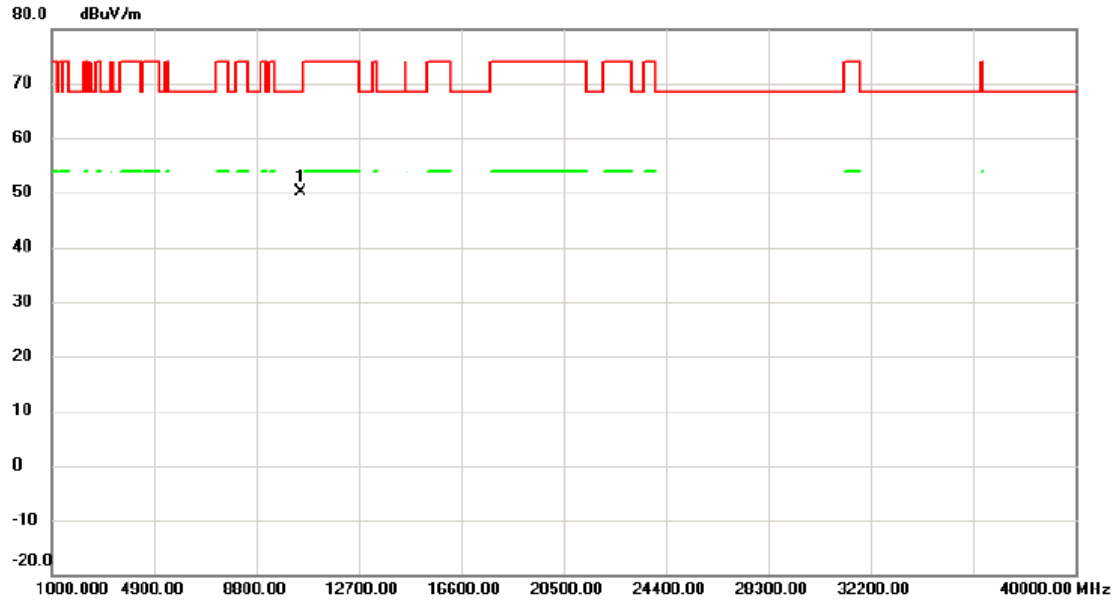


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10481.500	34.77	15.29	50.06	68.30	-18.24	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5190 MHz

## Vertical

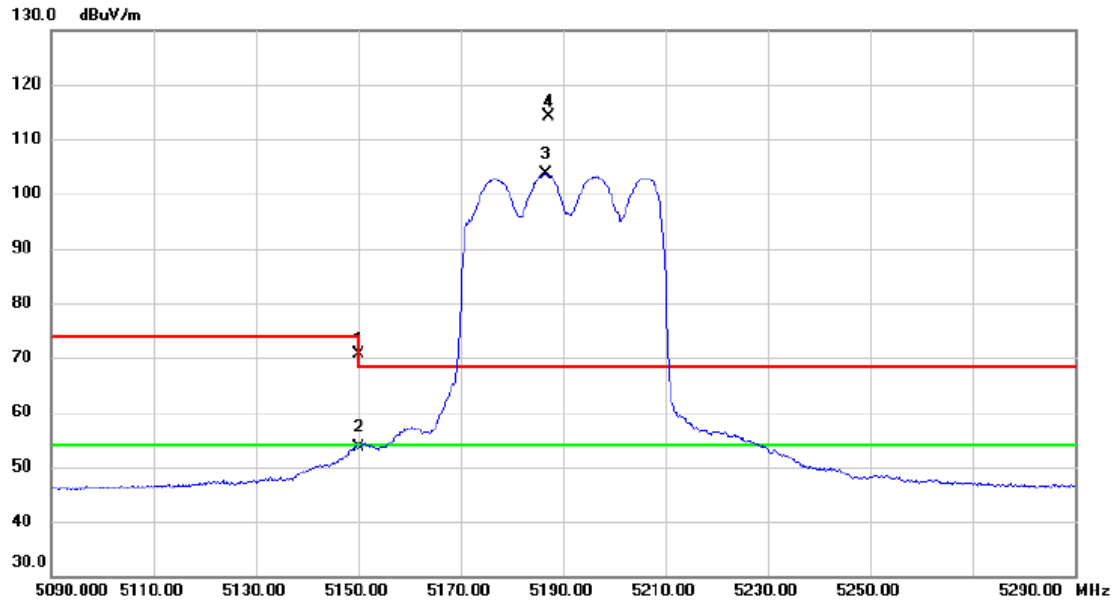

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	55.41	15.26	70.67	74.00	-3.33	peak	
2		5150.000	38.47	15.26	53.73	54.00	-0.27	AVG	
3	*	5186.600	88.32	15.35	103.67	54.00	49.67	AVG	No Limit
4	X	5187.200	98.86	15.35	114.21	68.30	45.91	peak	No Limit


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.



Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5190 MHz

## Horizontal

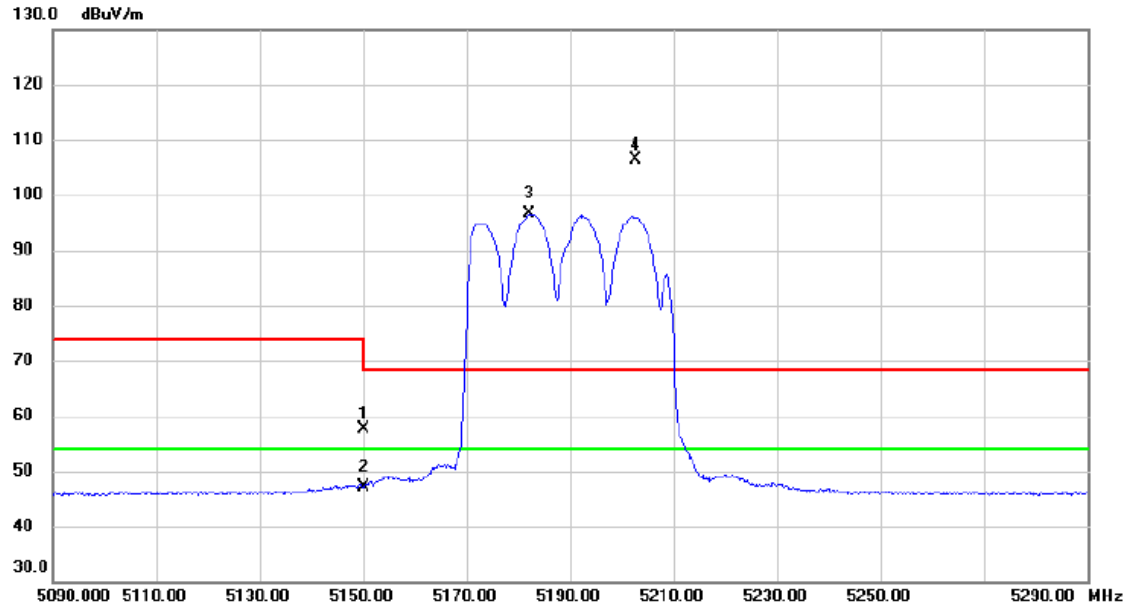


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	42.42	15.26	57.68	74.00	-16.32	peak	
2		5150.000	31.98	15.26	47.24	54.00	-6.76	AVG	
3	*	5182.000	81.19	15.34	96.53	54.00	42.53	AVG	No Limit
4	X	5202.600	91.10	15.38	106.48	68.30	38.18	peak	No Limit

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5190 MHz

## Vertical

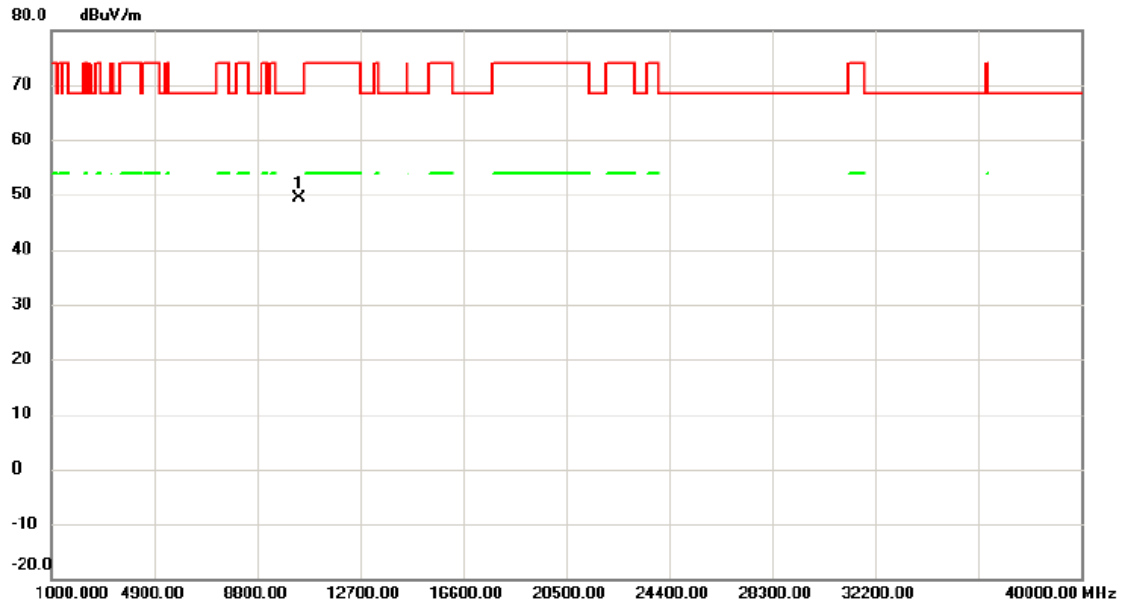


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	10381.410	34.22	15.14	49.36	68.30	-18.94	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5190 MHz

## Horizontal

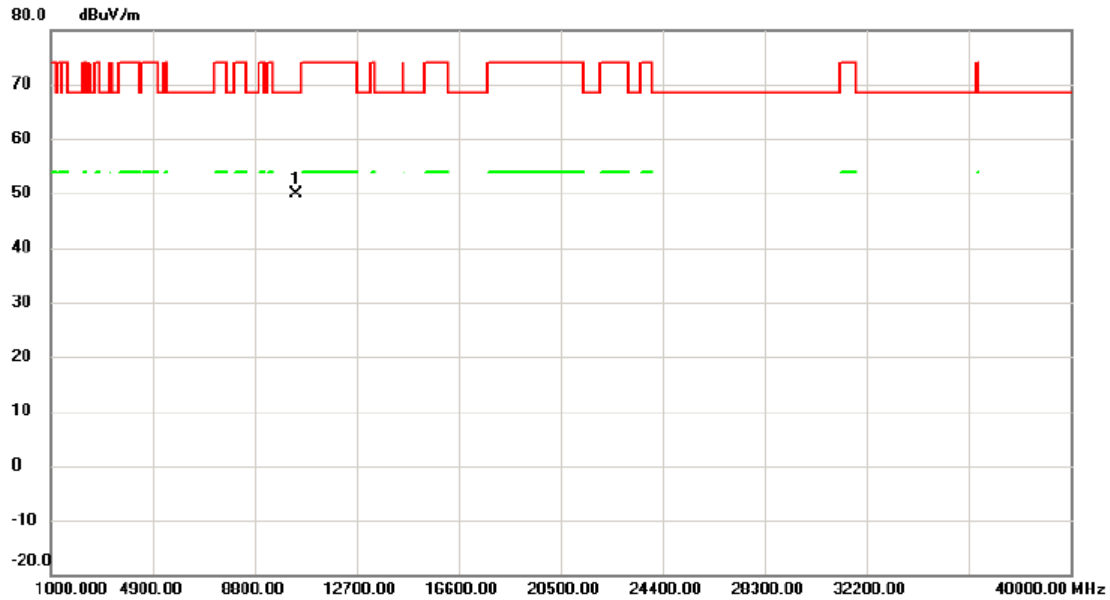


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10379.590	34.86	15.13	49.99	68.30	-18.31	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5230 MHz

## Vertical

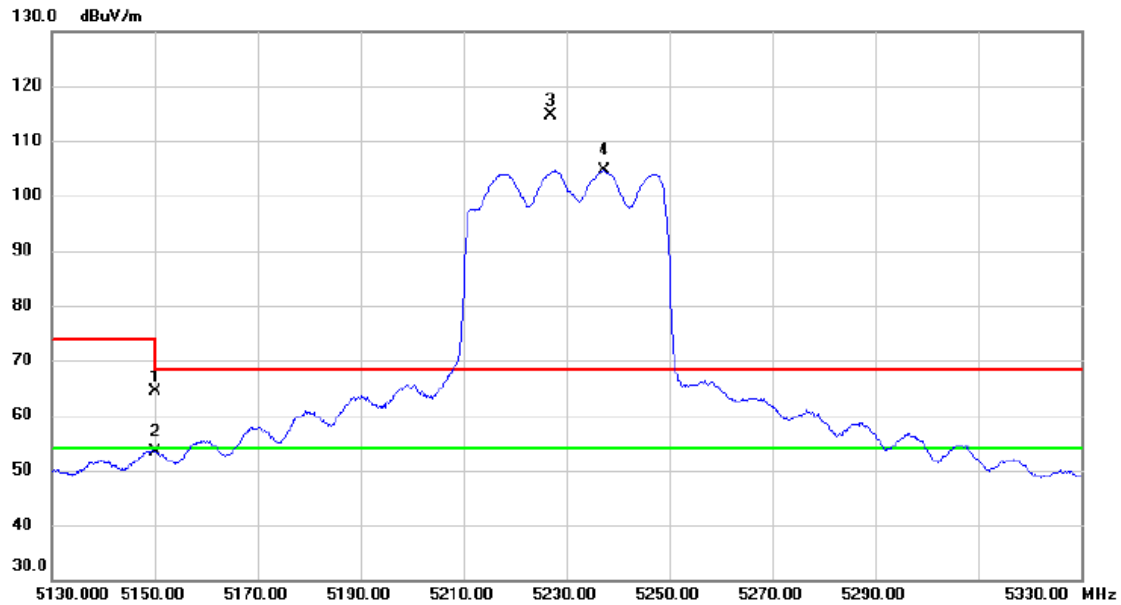


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	49.20	15.26	64.46	74.00	-9.54	peak	
2		5150.000	38.12	15.26	53.38	54.00	-0.62	AVG	
3	X	5227.000	99.14	15.44	114.58	68.30	46.28	peak	No Limit
4	*	5237.400	89.13	15.47	104.60	54.00	50.60	AVG	No Limit

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5230 MHz

## Horizontal

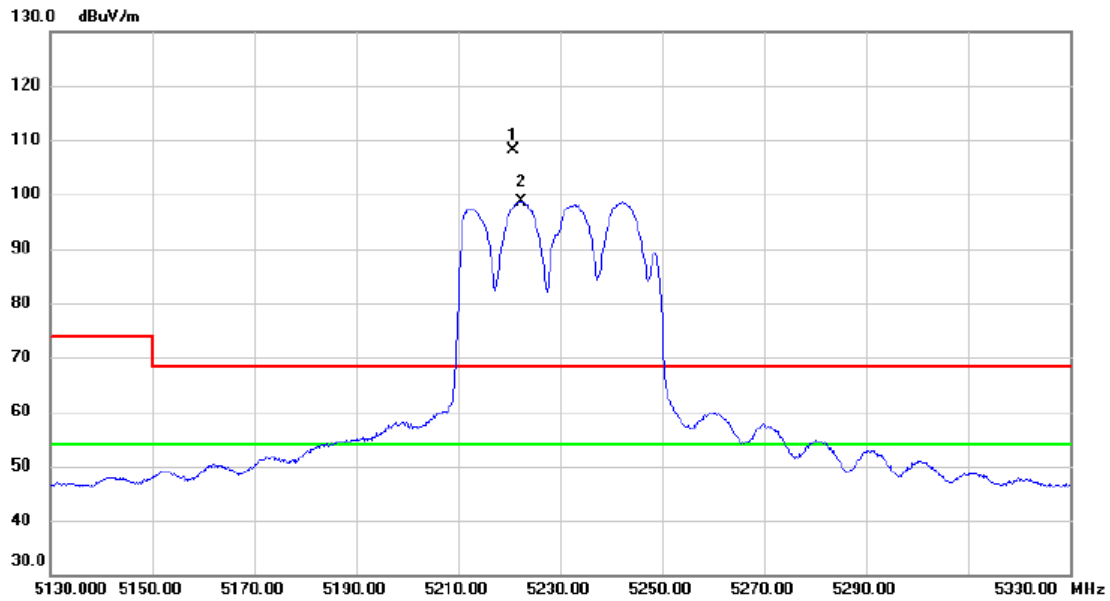


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	X	5220.800	92.79	15.43	108.22	68.30	39.92	peak	No Limit
2	*	5222.400	83.31	15.43	98.74	54.00	44.74	AVG	No Limit

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5230 MHz

## Vertical

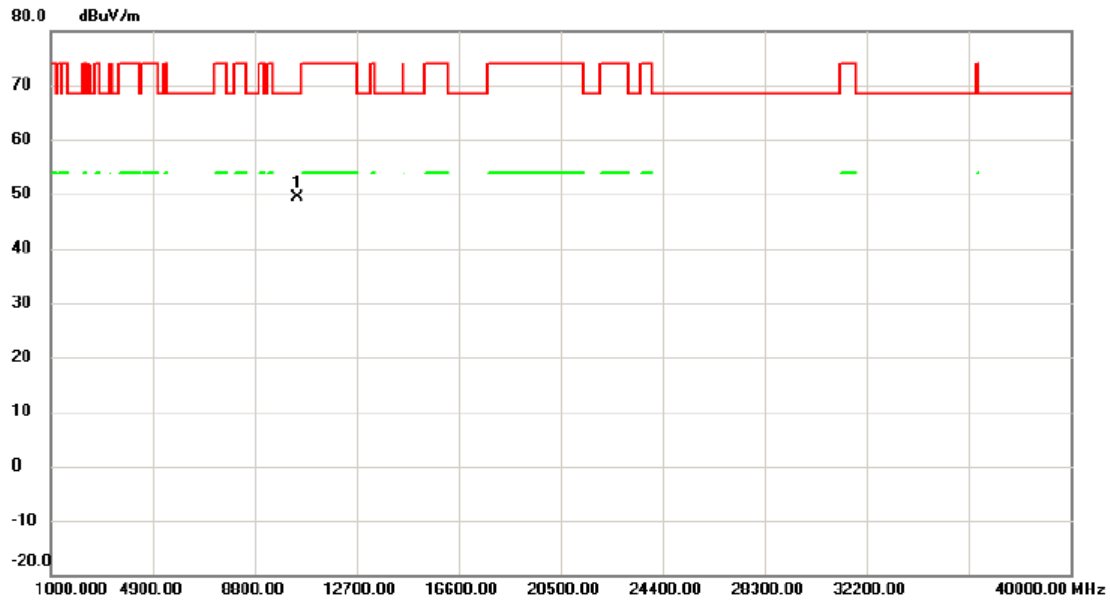


No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10460.420	34.22	15.26	49.48	68.30	-18.82	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5230 MHz

## Horizontal

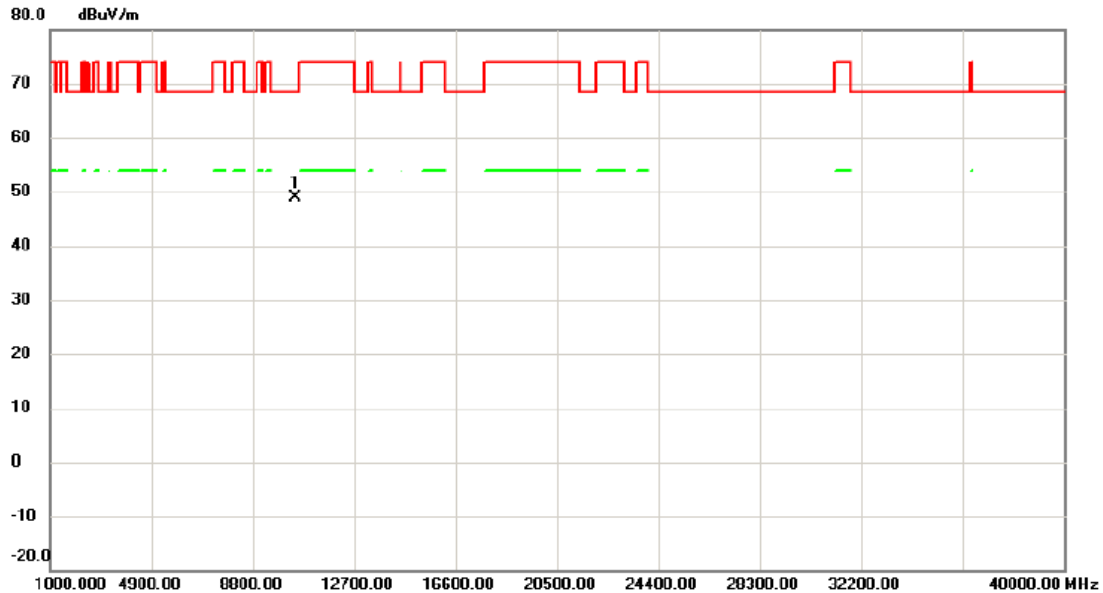


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10459.915	33.60	15.26	48.86	68.30	-19.44	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE80) Mode 5210 MHz

## Vertical

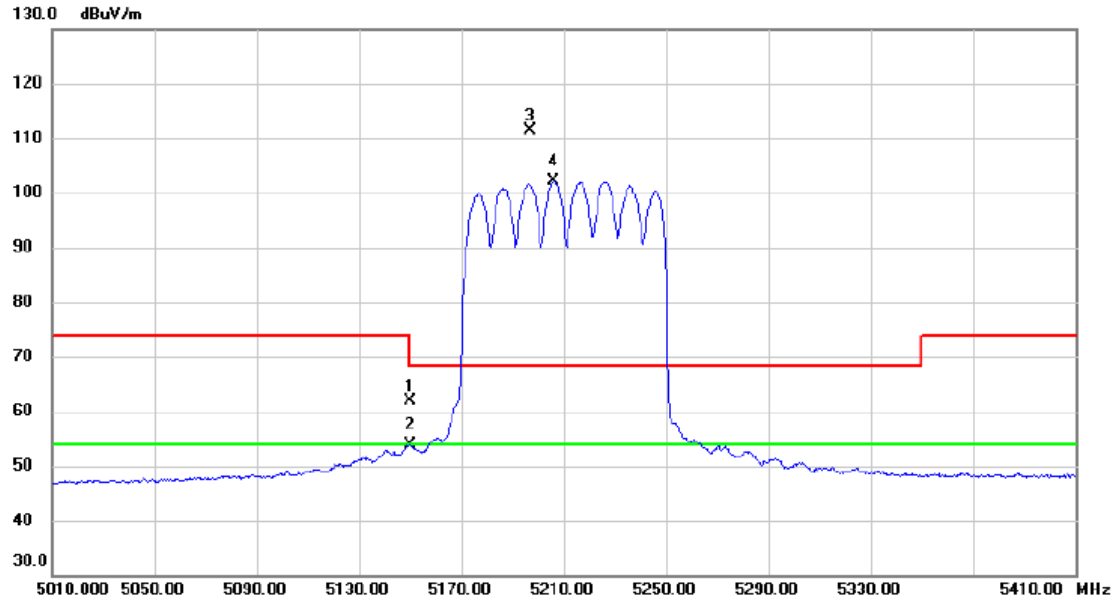

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	46.65	15.26	61.91	74.00	-12.09	peak	
2		5150.000	38.54	15.26	53.80	54.00	-0.20	AVG	
3	X	5196.800	95.96	15.37	111.33	68.30	43.03	peak	No Limit
4	*	5206.000	86.65	15.39	102.04	54.00	48.04	AVG	No Limit


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.



Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE80) Mode 5210 MHz

## Horizontal

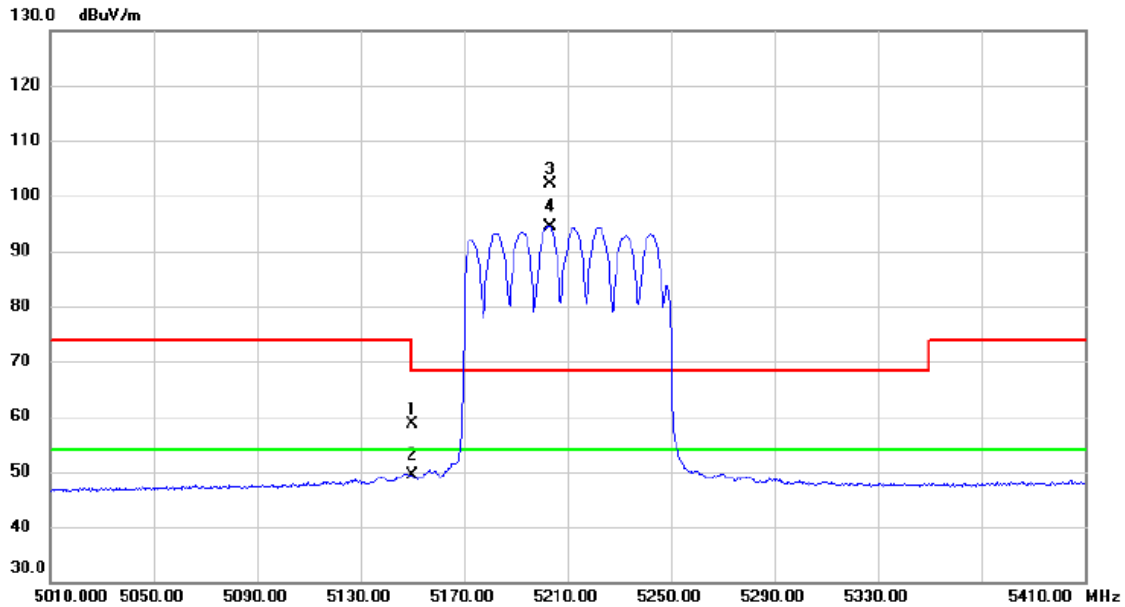


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	43.28	15.26	58.54	74.00	-15.46	peak	
2		5150.000	34.04	15.26	49.30	54.00	-4.70	AVG	
3	X	5203.200	86.85	15.39	102.24	68.30	33.94	peak	No Limit
4	*	5203.200	78.99	15.39	94.38	54.00	40.38	AVG	No Limit

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE80) Mode 5210MHz

## Vertical

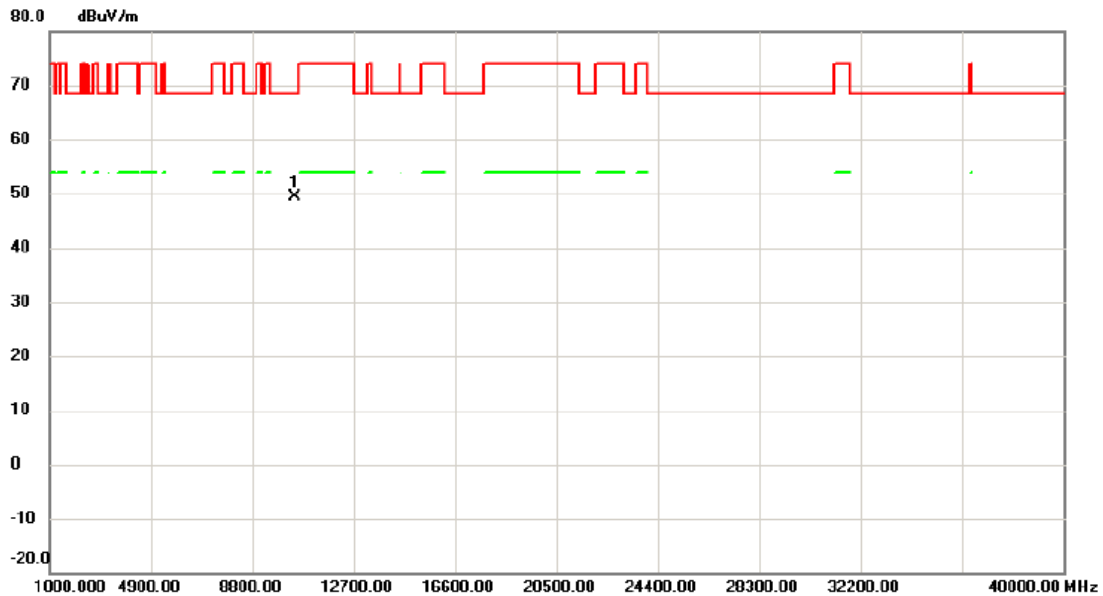


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	10419.138	34.06	15.21	49.27	68.30	-19.03	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE80) Mode 5210 MHz

## Horizontal

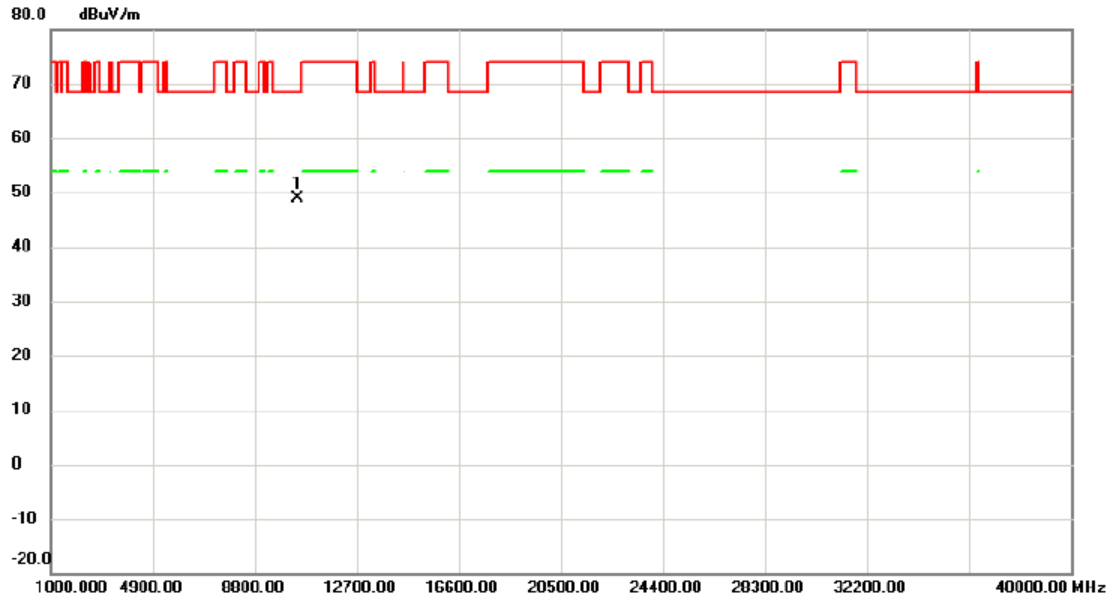


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10419.382	33.62	15.21	48.83	68.30	-19.47	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5745 MHz

## Vertical

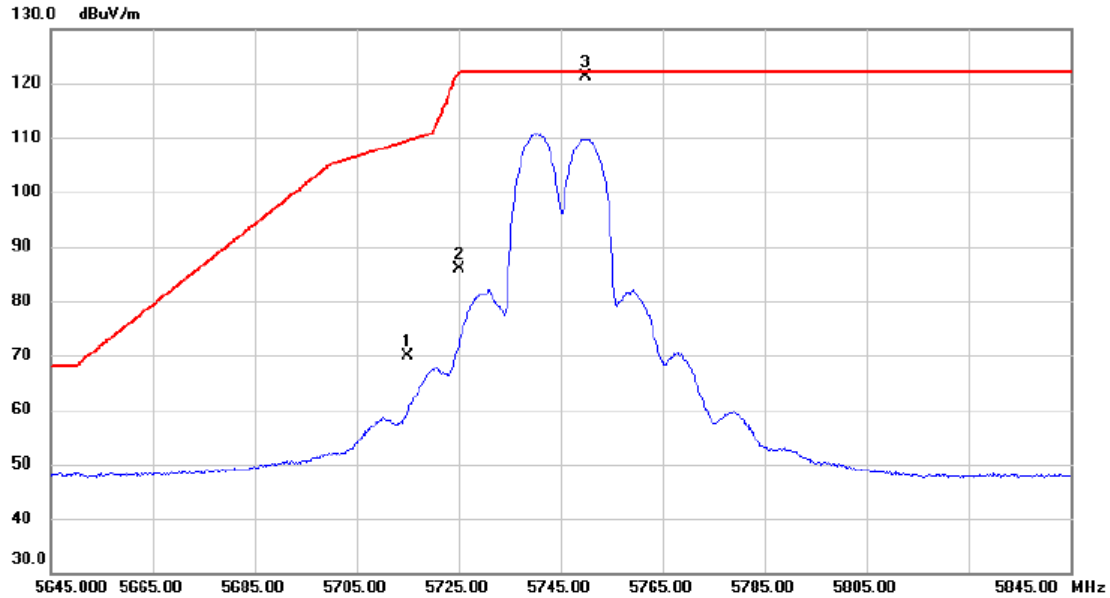

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5715.000	53.33	16.49	69.82	109.40	-39.58	peak	
2		5725.000	69.28	16.51	85.79	122.20	-36.41	peak	
3	*	5749.800	104.63	16.56	121.19	122.20	-1.01	peak	


### REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5745 MHz

## Horizontal

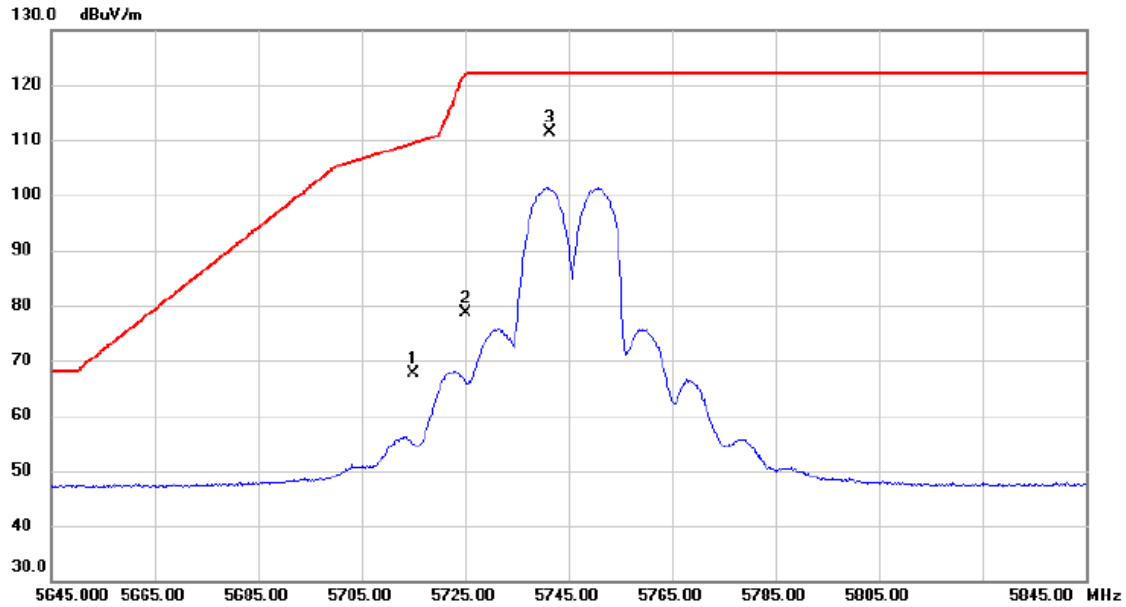


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5715.000	51.17	16.49	67.66	109.40	-41.74	peak	
2		5725.000	62.08	16.51	78.59	122.20	-43.61	peak	
3	*	5741.400	94.75	16.54	111.29	122.20	-10.91	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5745 MHz

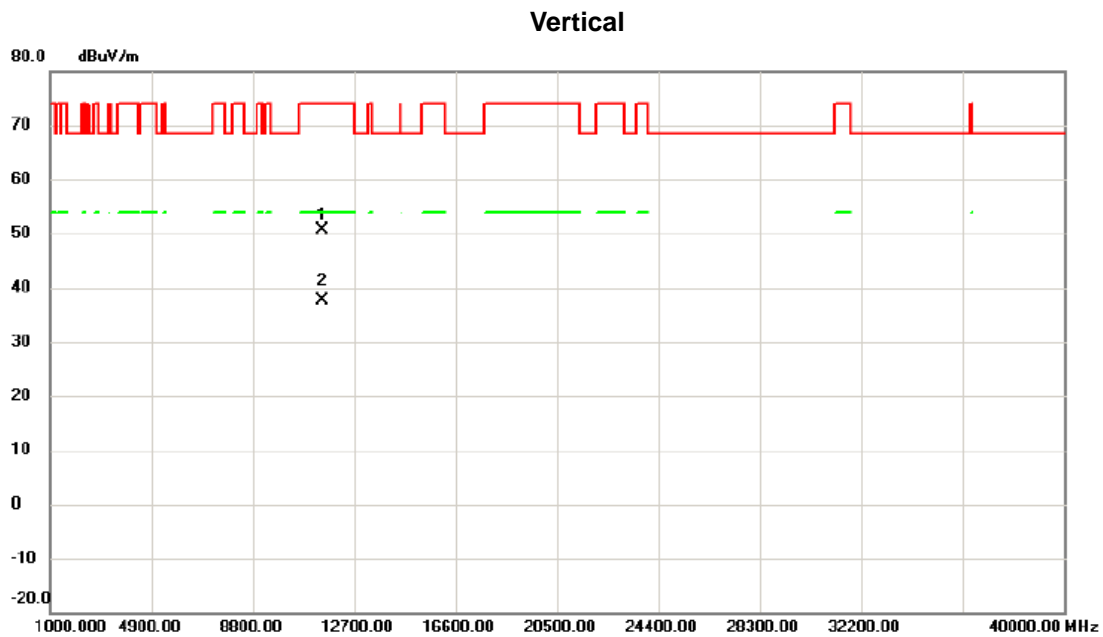


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		11489.496	33.37	17.16	50.53	74.00	-23.47	peak	
2	*	11489.621	20.51	17.16	37.67	54.00	-16.33	AVG	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5745 MHz

## Horizontal

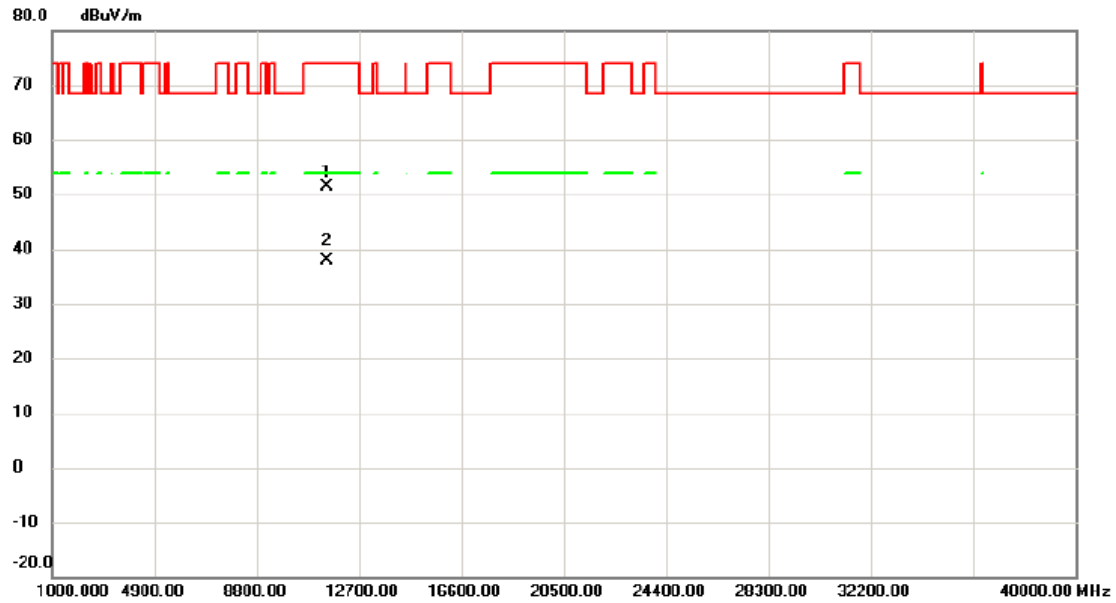


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		11489.861	34.11	17.16	51.27	74.00	-22.73	peak	
2	*	11489.935	20.65	17.16	37.81	54.00	-16.19	AVG	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5785 MHz

## Vertical

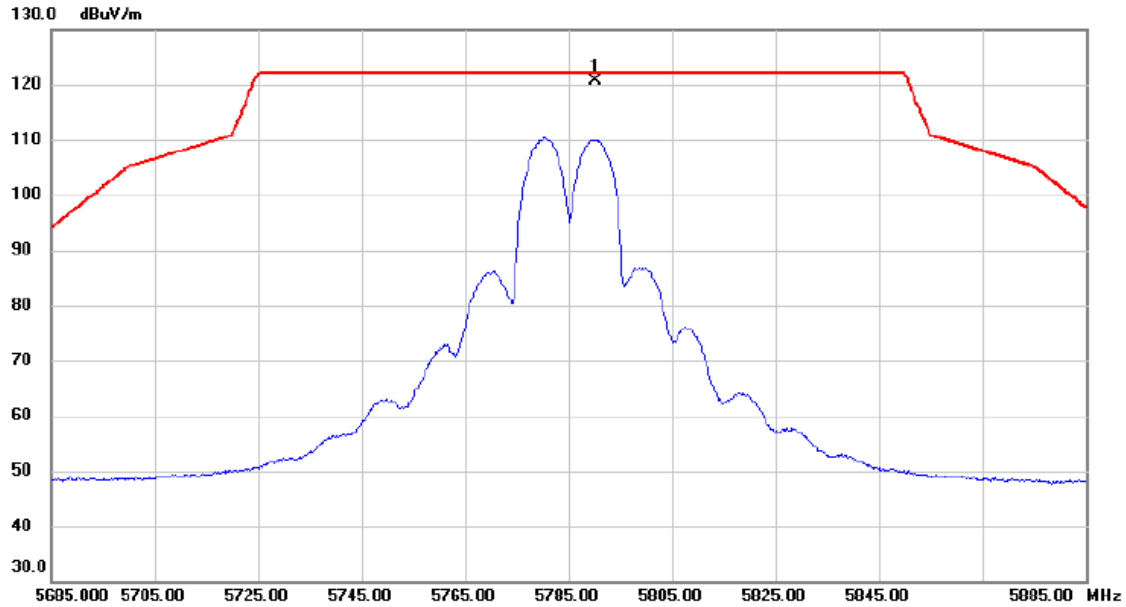

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	5790.200	104.09	16.64	120.73	122.20	-1.47	peak	


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.



Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5785 MHz

## Horizontal

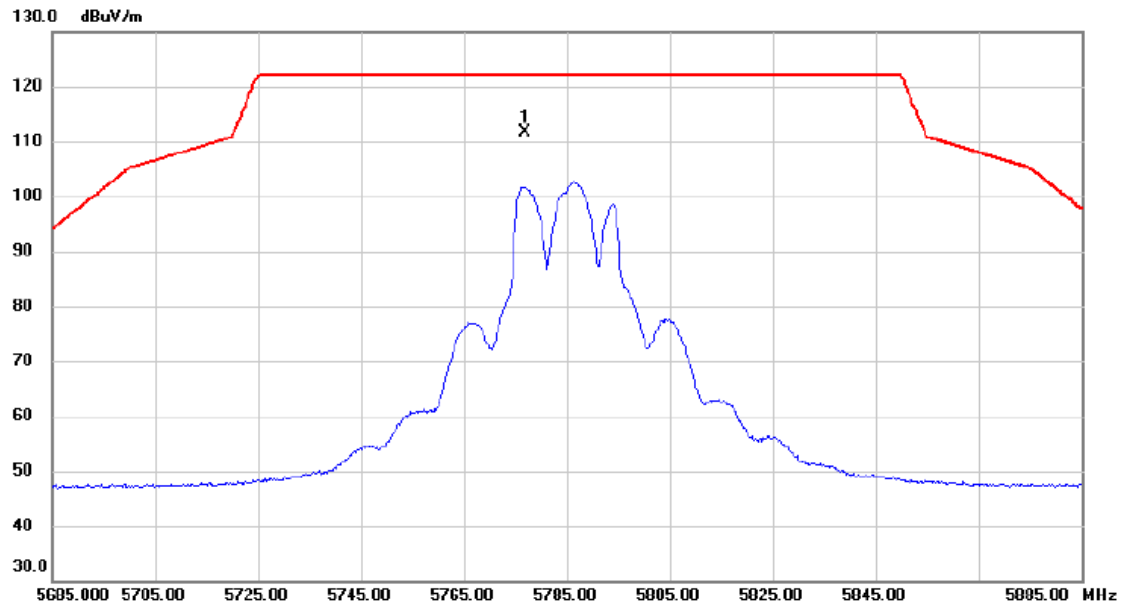


No. Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5776.800	95.14	16.61	111.75	122.20	-10.45	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5785 MHz

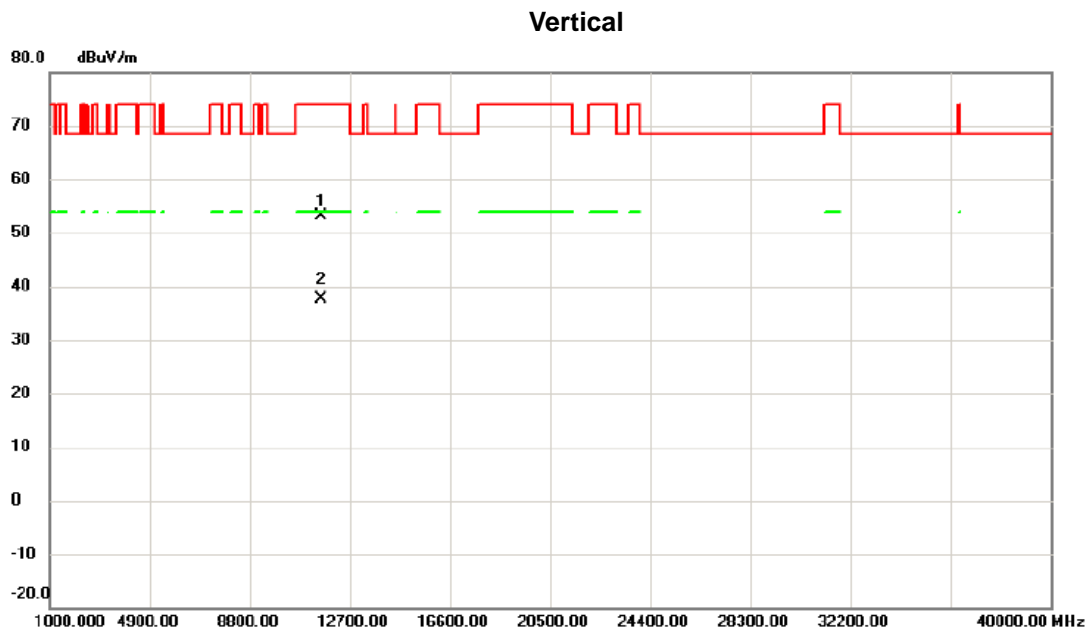


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		11569.636	35.86	17.25	53.11	74.00	-20.89	peak	
2	*	11570.770	20.26	17.25	37.51	54.00	-16.49	AVG	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5785 MHz

## Horizontal

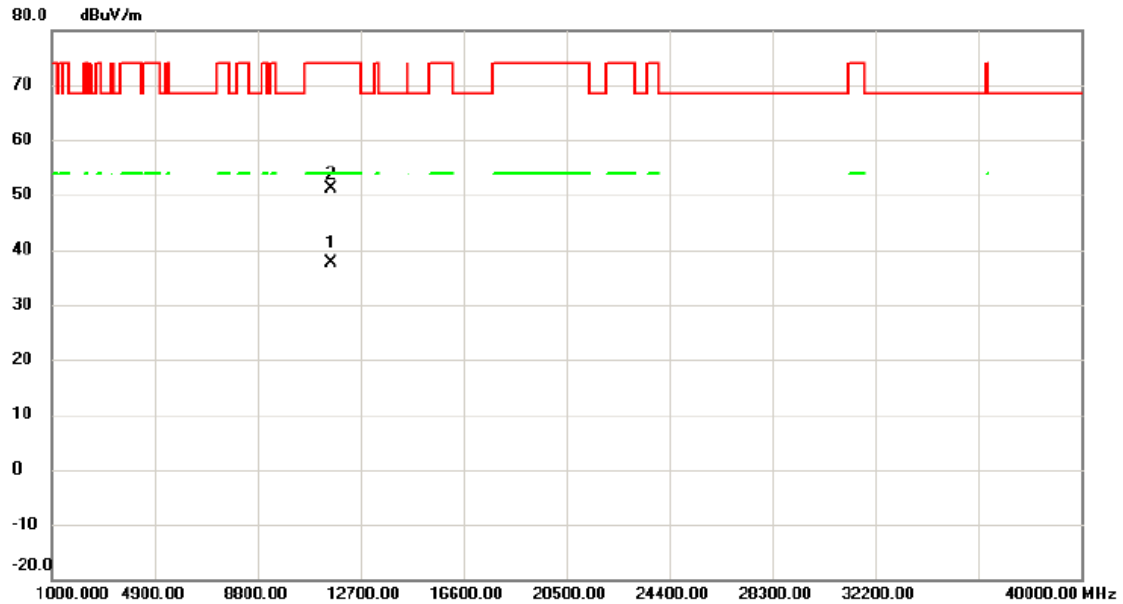


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	11570.205	20.32	17.25	37.57	54.00	-16.43	AVG	
2		11570.764	33.84	17.25	51.09	74.00	-22.91	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5825 MHz

## Vertical

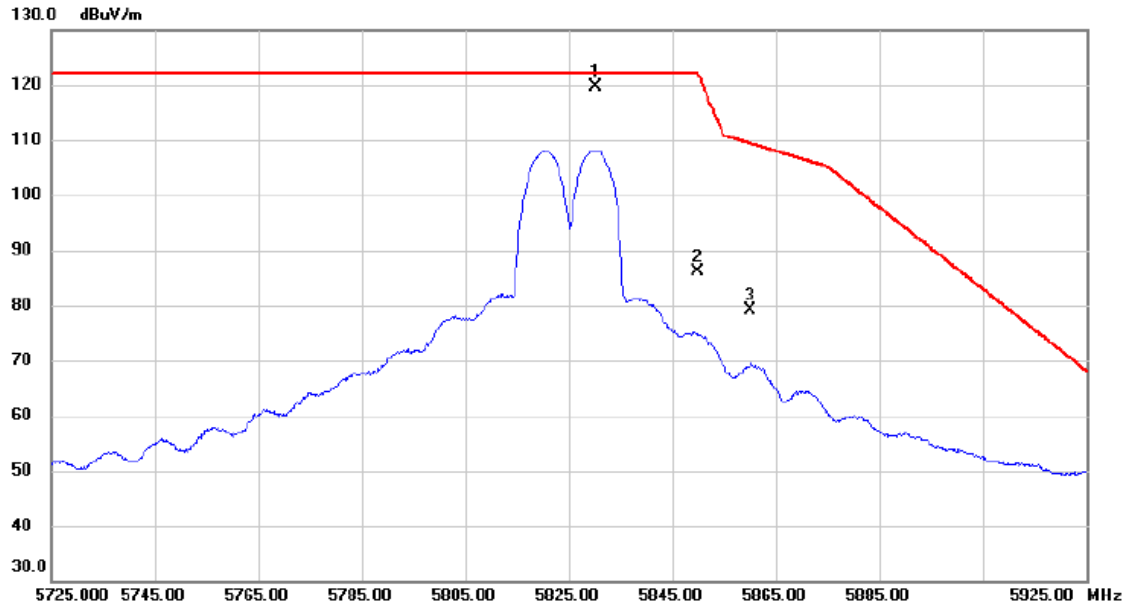


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5830.200	102.97	16.73	119.70	122.20	-2.50	peak	
2		5850.000	69.29	16.76	86.05	122.20	-36.15	peak	
3		5860.000	62.39	16.79	79.18	109.40	-30.22	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5825 MHz

## Horizontal

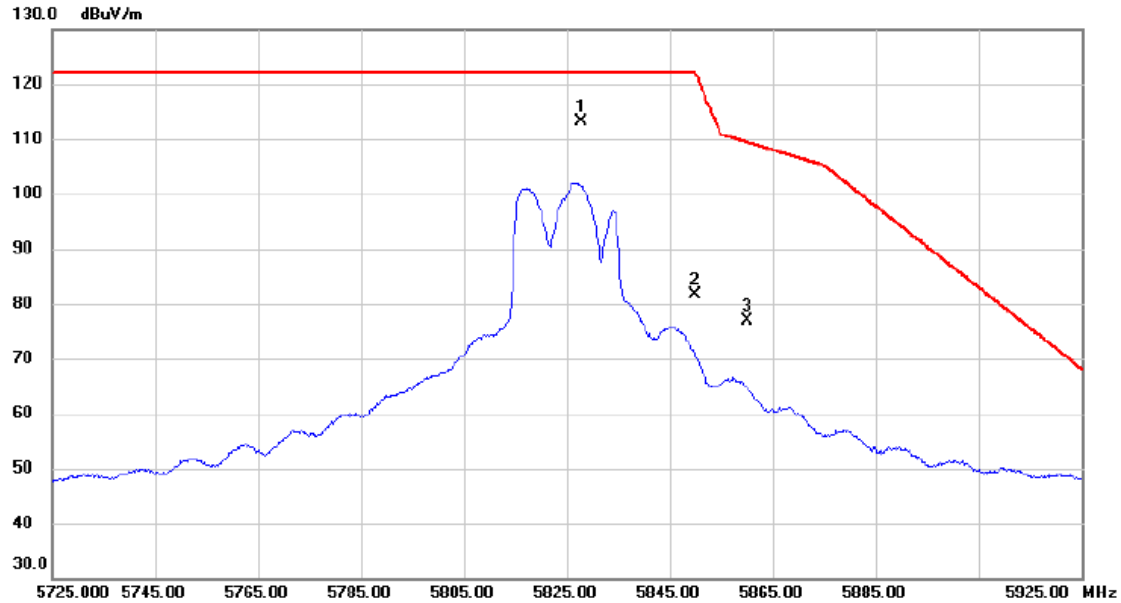


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	5827.800	96.52	16.72	113.24	122.20	-8.96	peak	
2		5850.000	64.77	16.76	81.53	122.20	-40.67	peak	
3		5860.000	60.01	16.79	76.80	109.40	-32.60	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5825 MHz

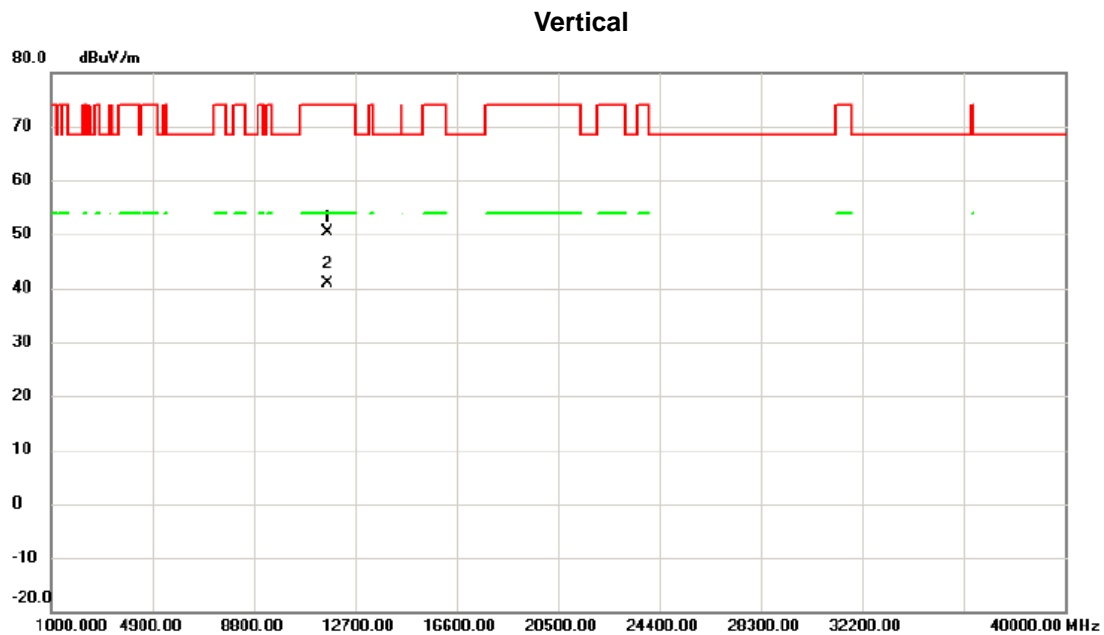


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		11649.385	32.95	17.32	50.27	74.00	-23.73	peak	
2	*	11651.192	23.64	17.33	40.97	54.00	-13.03	AVG	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5825 MHz

## Horizontal

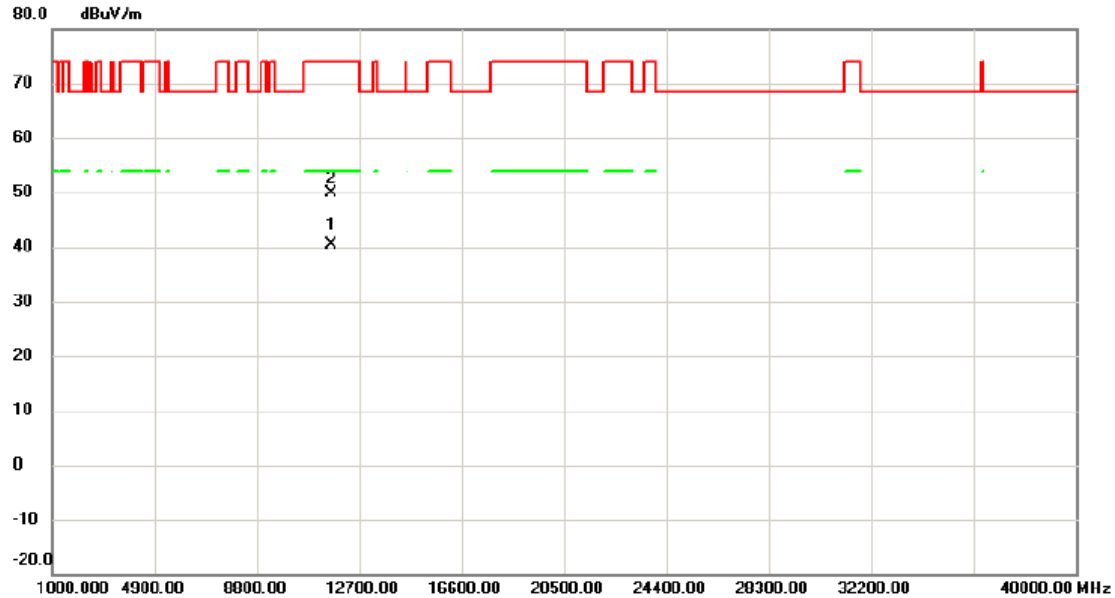


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	11649.805	23.08	17.32	40.40	54.00	-13.60	AVG	
2		11651.577	32.43	17.33	49.76	74.00	-24.24	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE40) Mode 5755 MHz

## Vertical

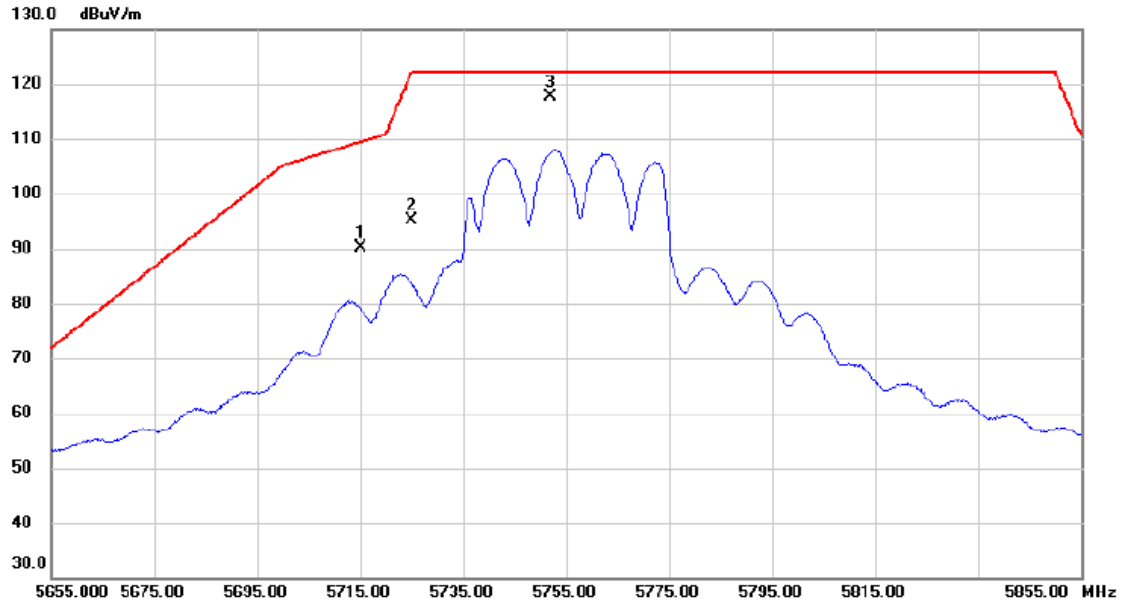

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5715.000	73.61	16.49	90.10	109.40	-19.30	peak	
2		5725.000	78.64	16.51	95.15	122.20	-27.05	peak	
3	*	5751.800	100.96	16.56	117.52	122.20	-4.68	peak	


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.



Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE40) Mode 5755 MHz

## Horizontal

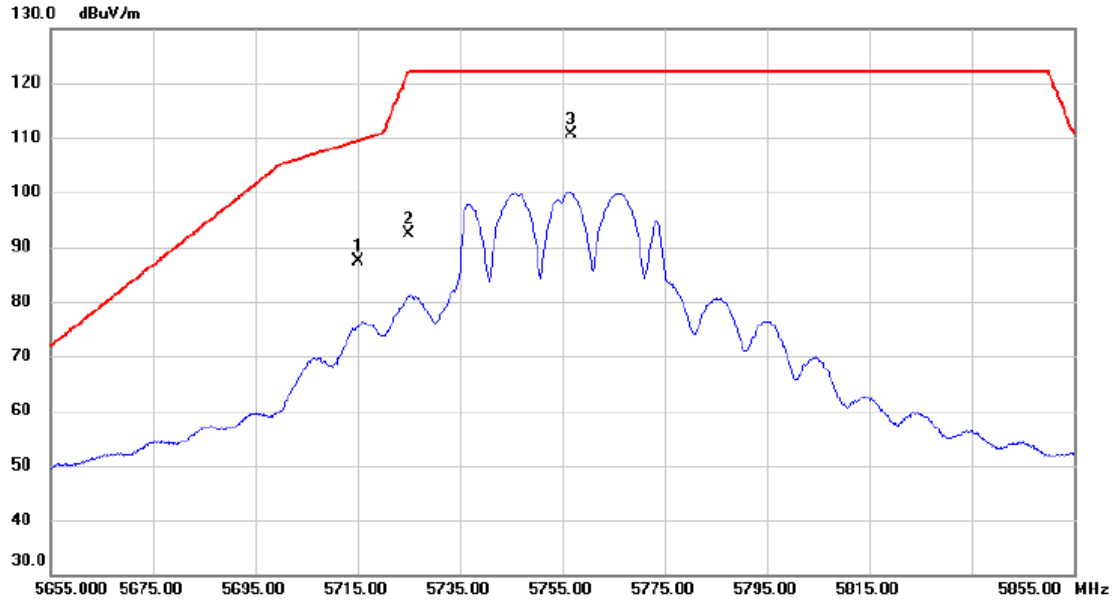


No. Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.000	70.92	16.49	87.41	109.40	-21.99	peak	
2	5725.000	75.99	16.51	92.50	122.20	-29.70	peak	
3 *	5756.800	94.08	16.58	110.66	122.20	-11.54	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE40) Mode 5755MHz

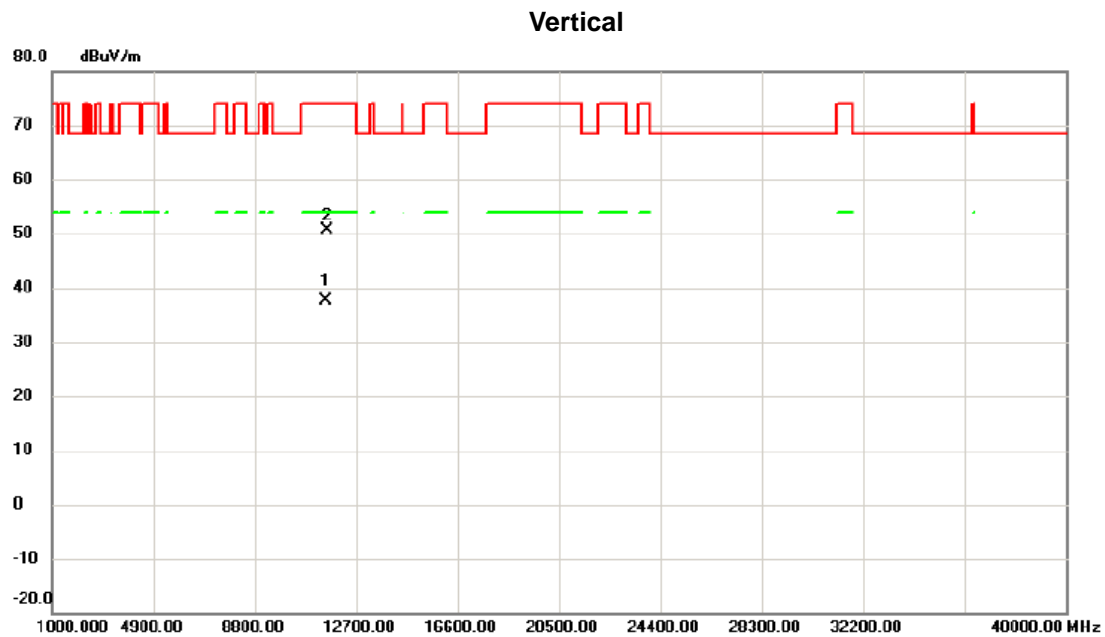


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	11508.360	20.52	17.20	37.72	54.00	-16.28	AVG	
2		11589.770	33.47	17.28	50.75	74.00	-23.25	peak	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE40) Mode 5755 MHz

## Horizontal

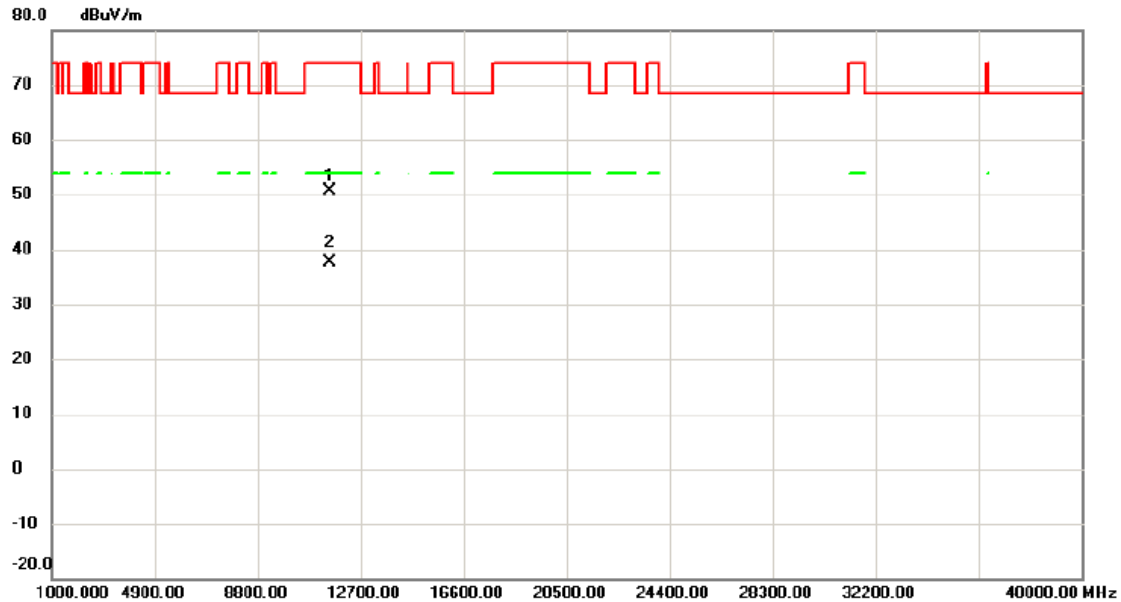


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		11507.698	33.51	17.19	50.70	74.00	-23.30	peak	
2	*	11509.405	20.43	17.20	37.63	54.00	-16.37	AVG	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE40) Mode 5795 MHz

## Vertical

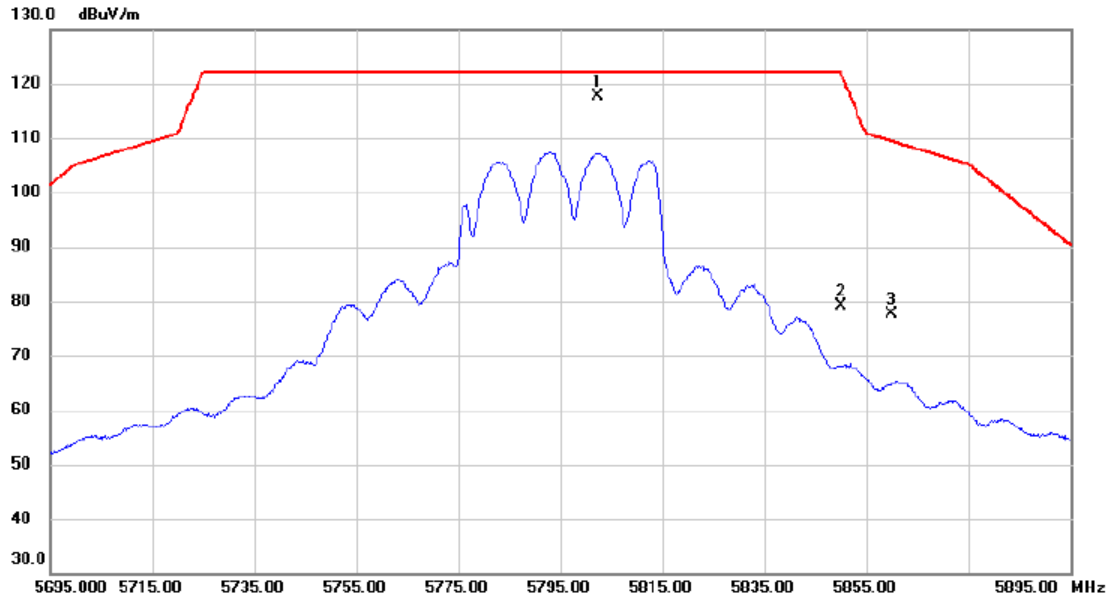


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5802.400	100.84	16.67	117.51	122.20	-4.69	peak	
2		5850.000	62.40	16.76	79.16	122.20	-43.04	peak	
3		5860.000	60.92	16.79	77.71	109.40	-31.69	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE40) Mode 5795 MHz

## Horizontal

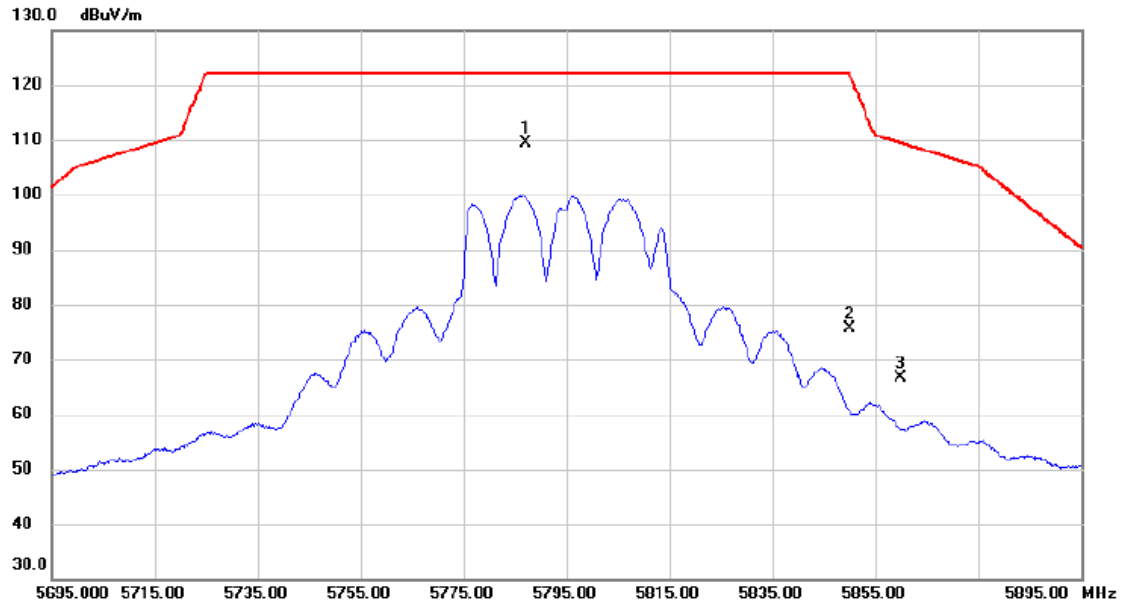


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5787.000	92.67	16.64	109.31	122.20	-12.89	peak	
2		5850.000	58.76	16.76	75.52	122.20	-46.68	peak	
3		5860.000	49.80	16.79	66.59	109.40	-42.81	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE40) Mode 5795MHz

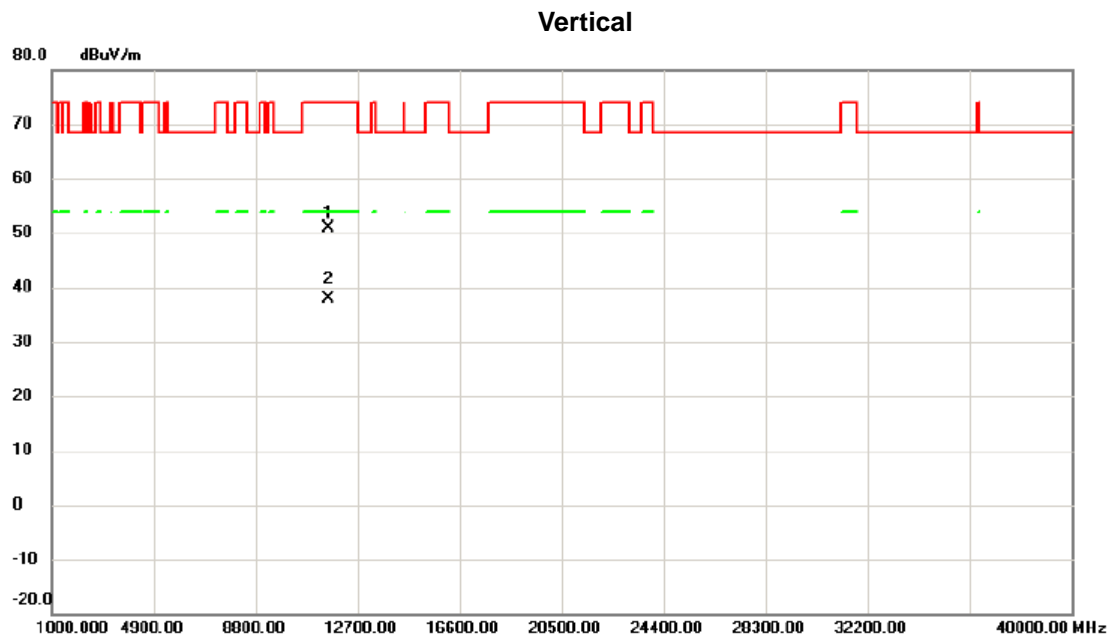


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		11589.995	33.60	17.28	50.88	74.00	-23.12	peak	
2	*	11590.855	20.48	17.28	37.76	54.00	-16.24	AVG	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE40) Mode 5795 MHz

## Horizontal

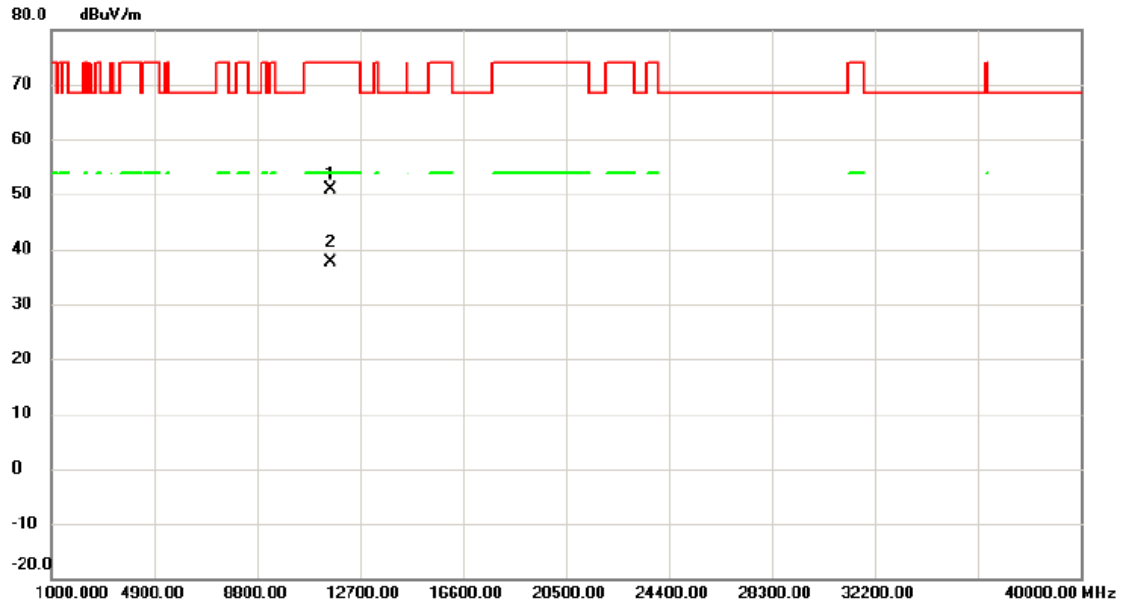


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		11589.755	33.53	17.28	50.81	74.00	-23.19	peak	
2	*	11589.897	20.28	17.28	37.56	54.00	-16.44	AVG	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE80) Mode 5775MHz

## Vertical

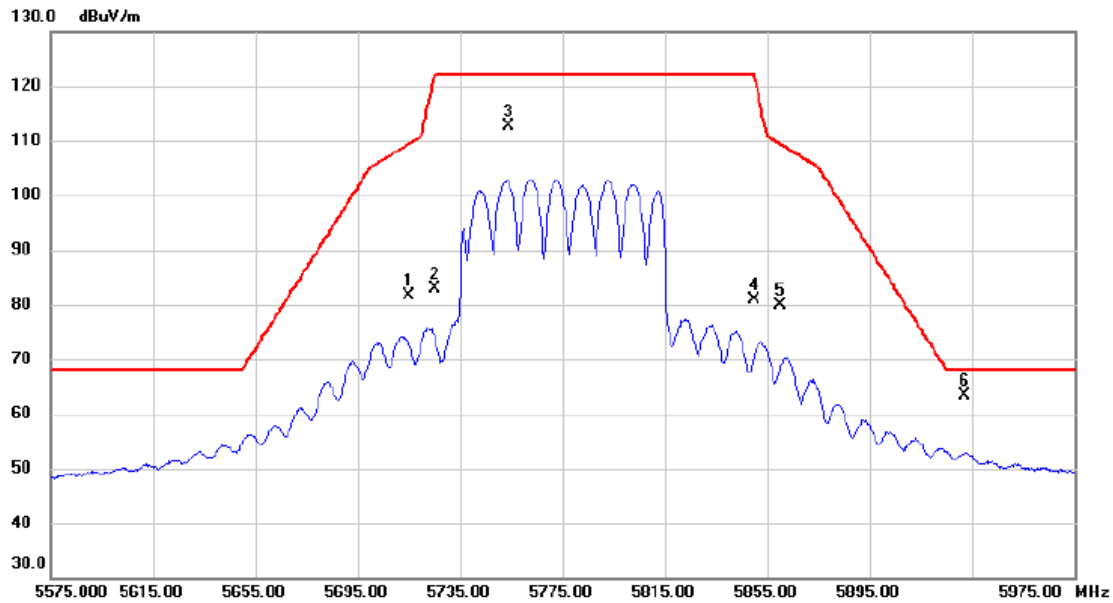

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		5715.000	65.09	16.49	81.58	109.40	-27.82	peak	
2		5725.000	66.49	16.51	83.00	122.20	-39.20	peak	
3		5753.800	96.00	16.57	112.57	122.20	-9.63	peak	
4		5850.000	64.08	16.76	80.84	122.20	-41.36	peak	
5		5860.000	63.13	16.79	79.92	109.40	-29.48	peak	
6	*	5932.200	46.46	16.92	63.38	68.20	-4.82	peak	

### REMARKS:


(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.



Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE80) Mode 5775MHz

## Horizontal

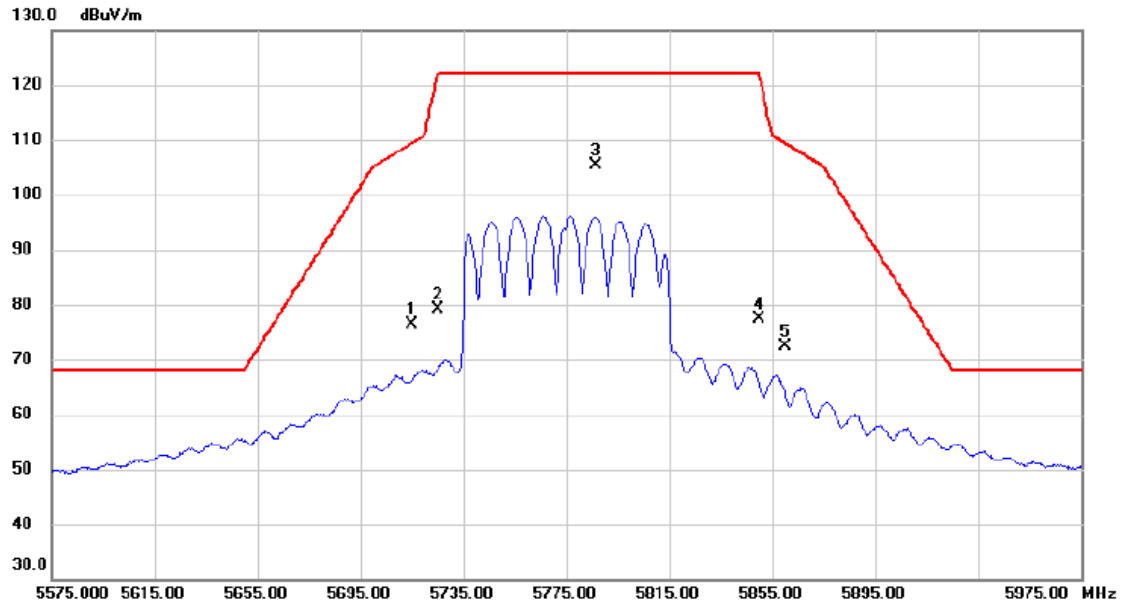


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		5715.000	59.86	16.49	76.35	109.40	-33.05	peak	
2		5725.000	62.63	16.51	79.14	122.20	-43.06	peak	
3	*	5786.600	88.74	16.64	105.38	122.20	-16.82	peak	
4		5850.000	60.51	16.76	77.27	122.20	-44.93	peak	
5		5860.000	55.64	16.79	72.43	109.40	-36.97	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE80) Mode 5775Hz

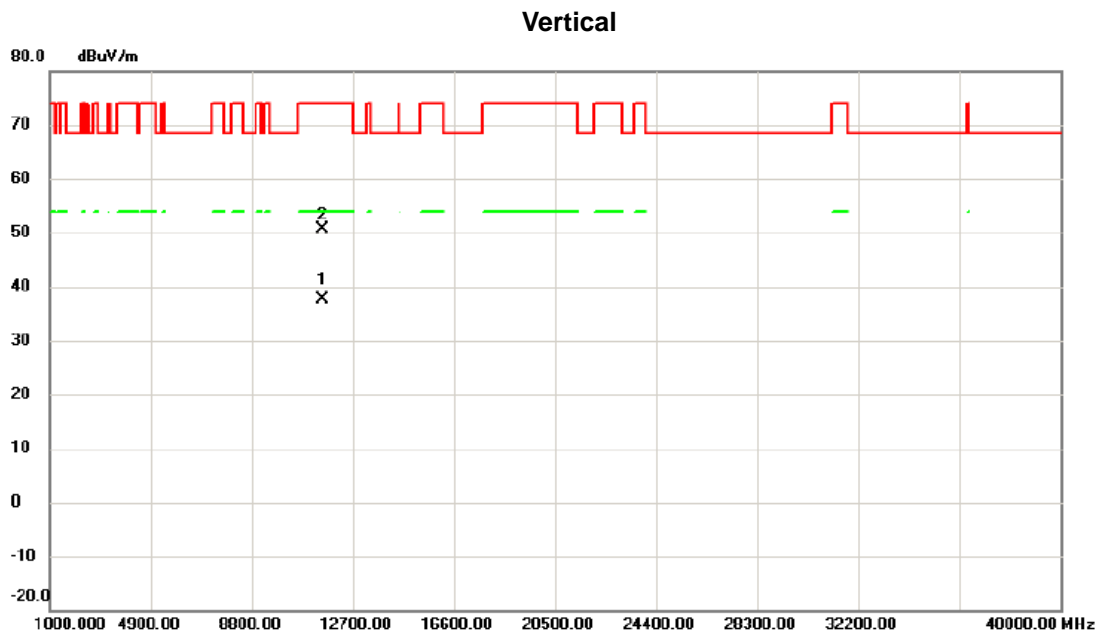


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	11547.930	20.38	17.23	37.61	54.00	-16.39	AVG	
2		11552.007	33.27	17.24	50.51	74.00	-23.49	peak	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE80) Mode 5775MHz

## Horizontal

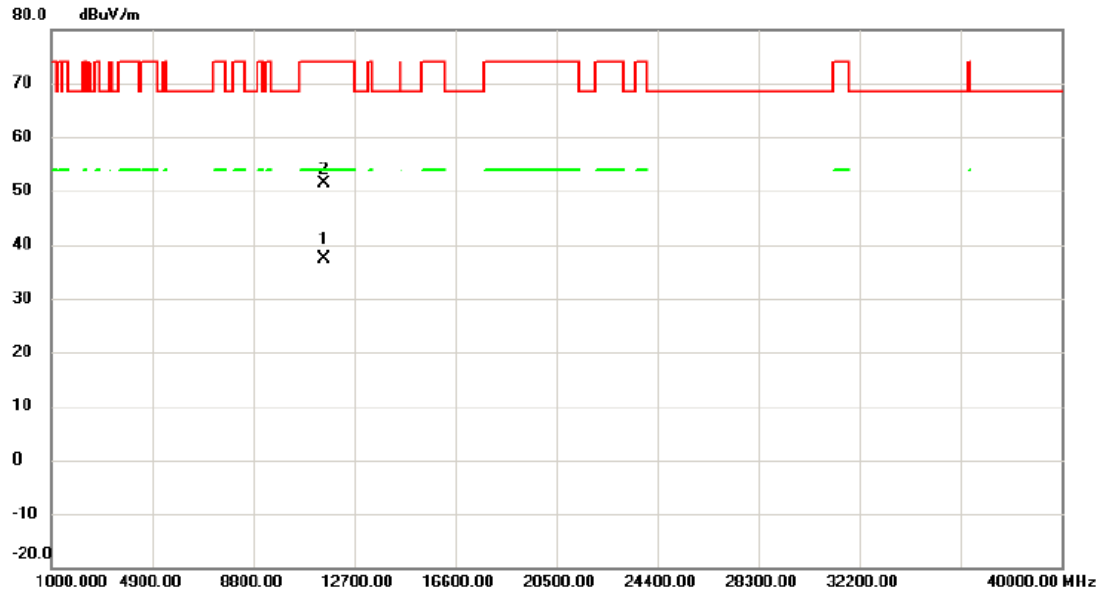

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	11548.767	20.20	17.23	37.43	54.00	-16.57	AVG	
2		11549.403	34.06	17.23	51.29	74.00	-22.71	peak	


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

## Beamforming

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5180 MHz

### Vertical

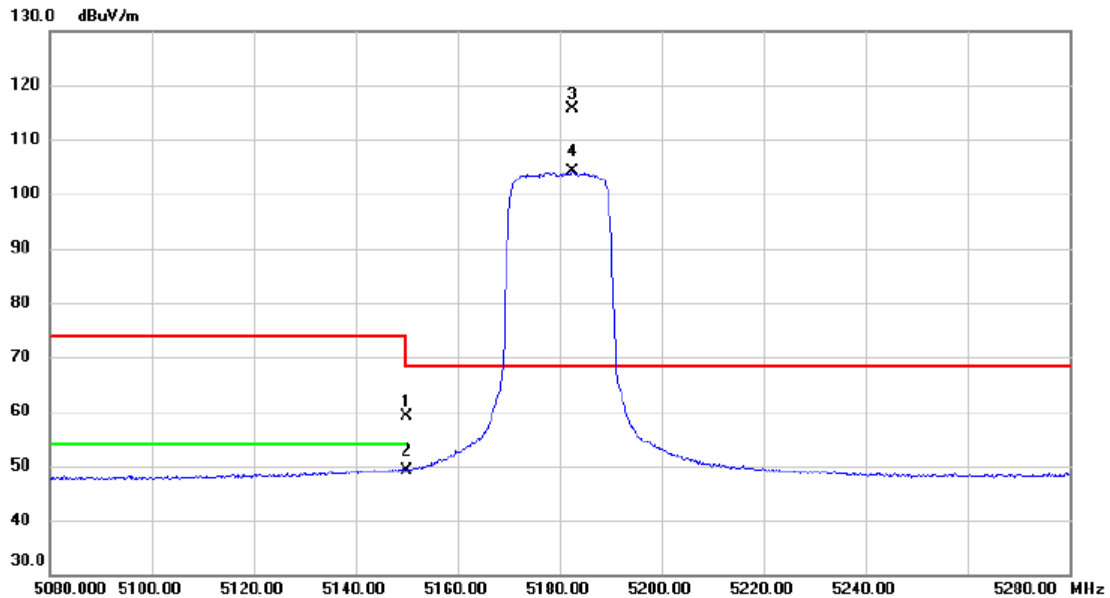


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	40.29	18.95	59.24	74.00	-14.76	peak	
2		5150.000	30.27	18.95	49.22	54.00	-4.78	AVG	
3	*	5182.600	96.71	19.03	115.74	68.30	47.44	peak	No Limit
4	X	5182.600	85.12	19.03	104.15	68.30	35.85	AVG	No Limit

#### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5180 MHz

## Horizontal

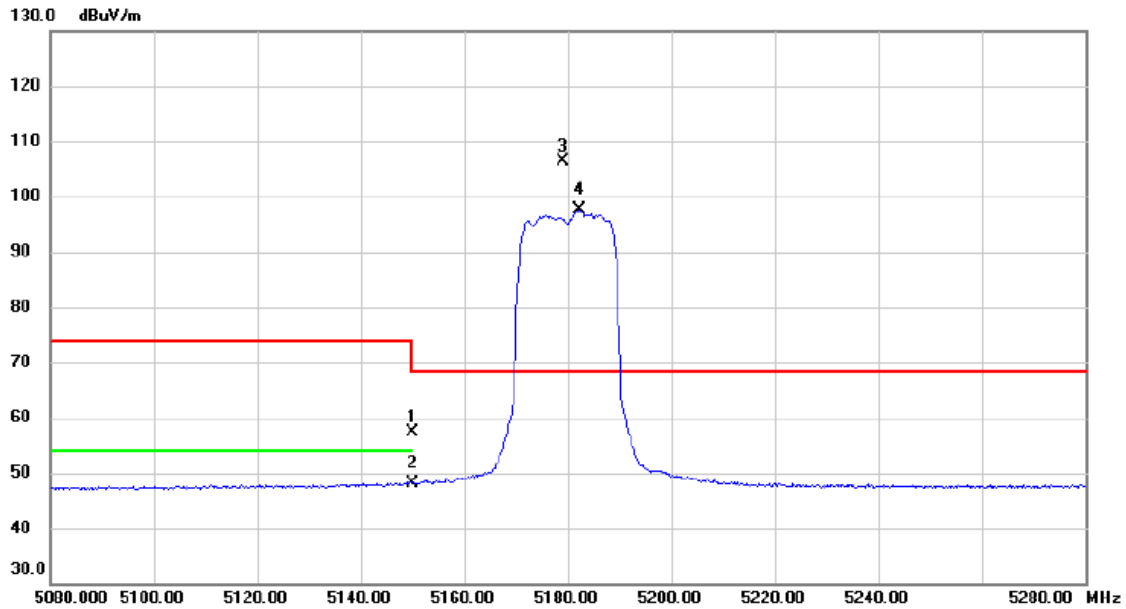

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	38.40	18.95	57.35	74.00	-16.65	peak	
2		5150.000	29.16	18.95	48.11	54.00	-5.89	AVG	
3	*	5179.100	87.46	19.03	106.49	68.30	38.19	peak	No Limit
4	X	5182.200	78.55	19.03	97.58	68.30	29.28	AVG	No Limit


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5180 MHz

## Vertical

80 dBuV/m

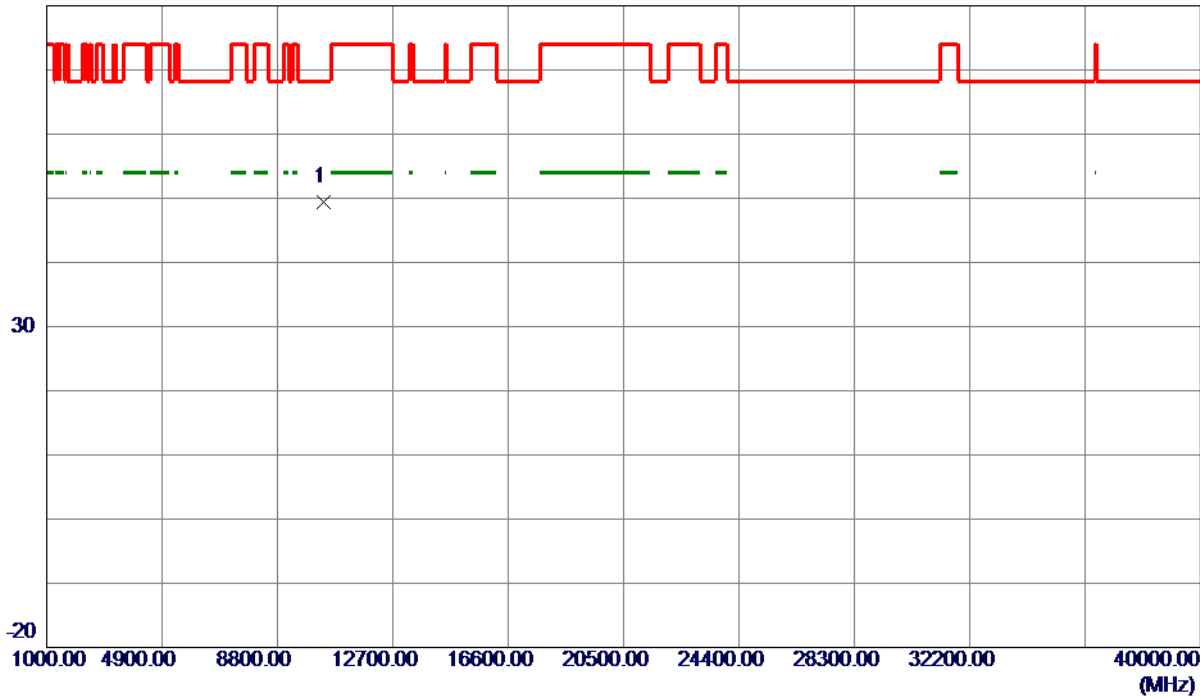


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10360.2550	34.32	15.11	49.43	68.30	-18.87	Peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5180 MHz

## Horizontal

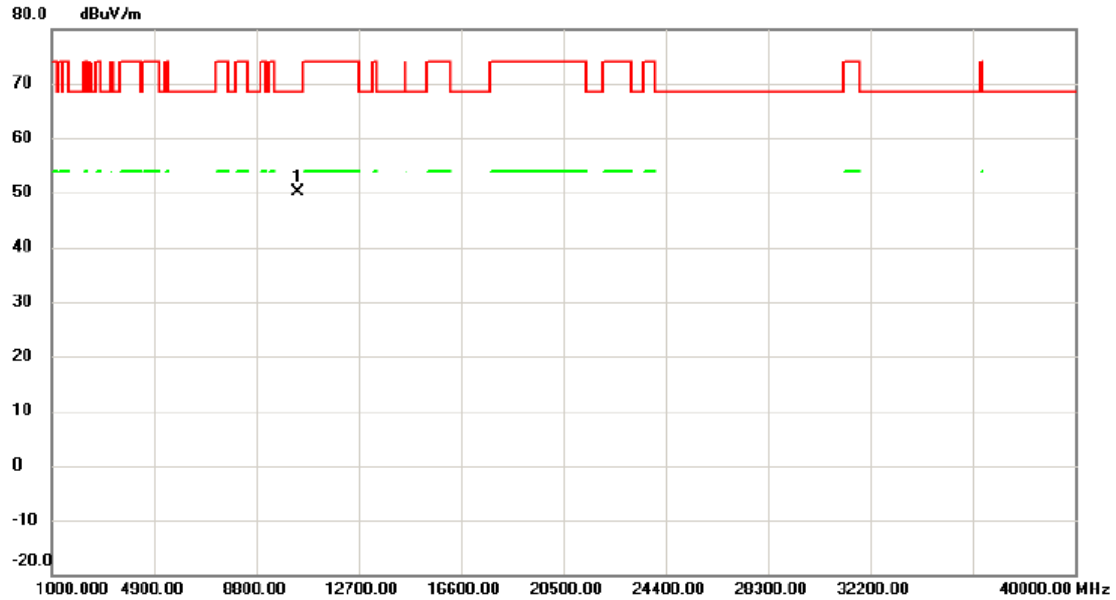


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10360.265	34.90	15.11	50.01	68.30	-18.29	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5200 MHz

## Vertical

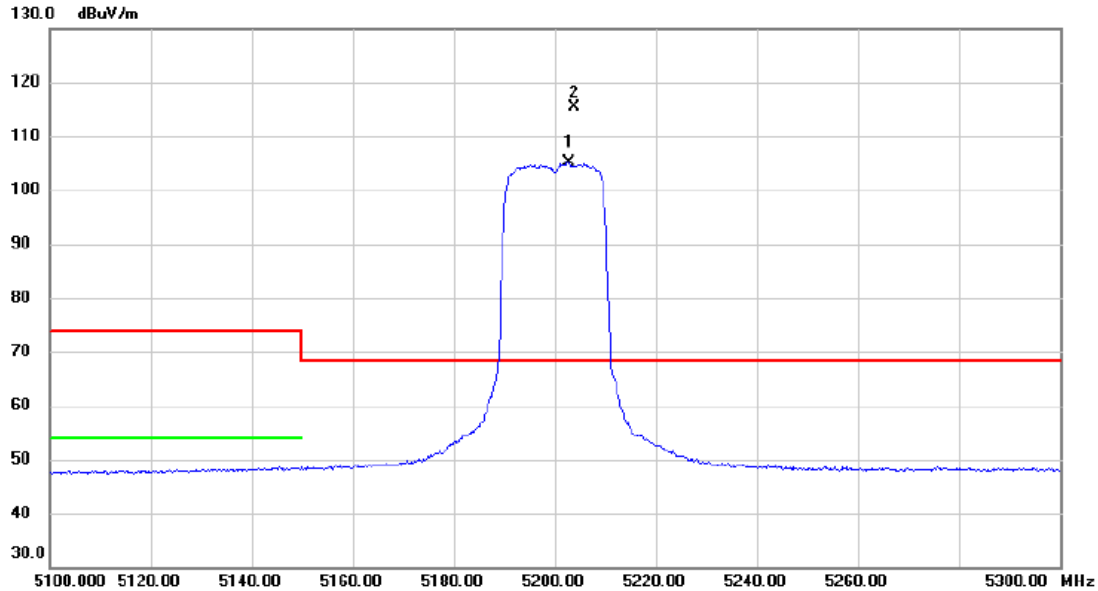

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	X	5202.700	85.95	19.08	105.03	68.30	36.73	AVG	No Limit
2	*	5203.900	96.36	19.08	115.44	68.30	47.14	peak	No Limit


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.



Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5200 MHz

## Horizontal

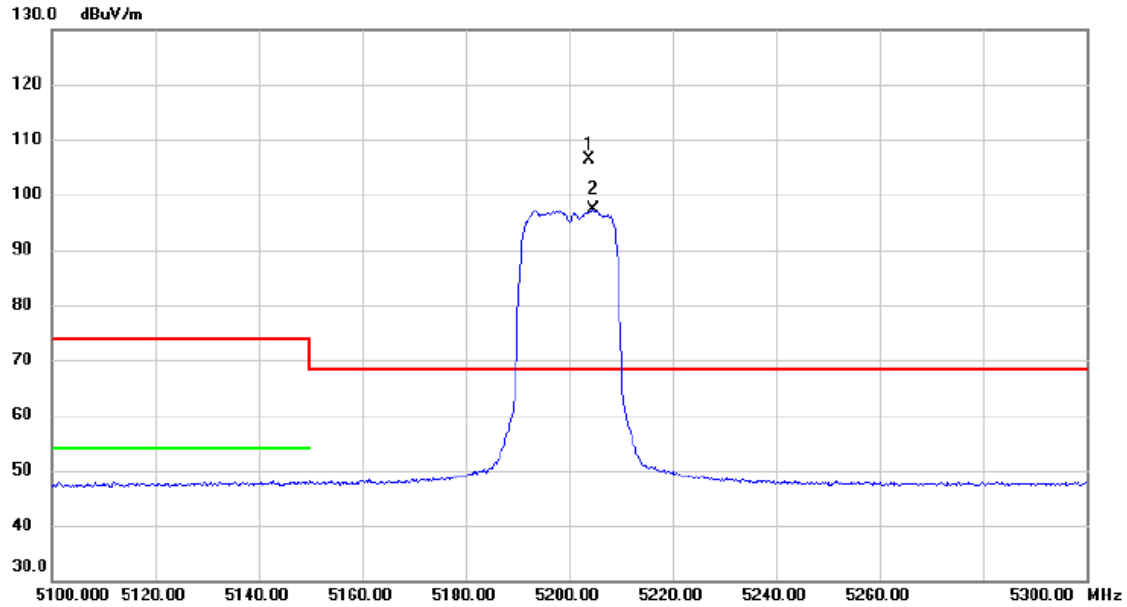

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	5203.900	87.29	19.08	106.37	68.30	38.07	peak	No Limit
2	X	5204.700	78.18	19.09	97.27	68.30	28.97	AVG	No Limit


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5200 MHz

## Vertical

80 dBuV/m

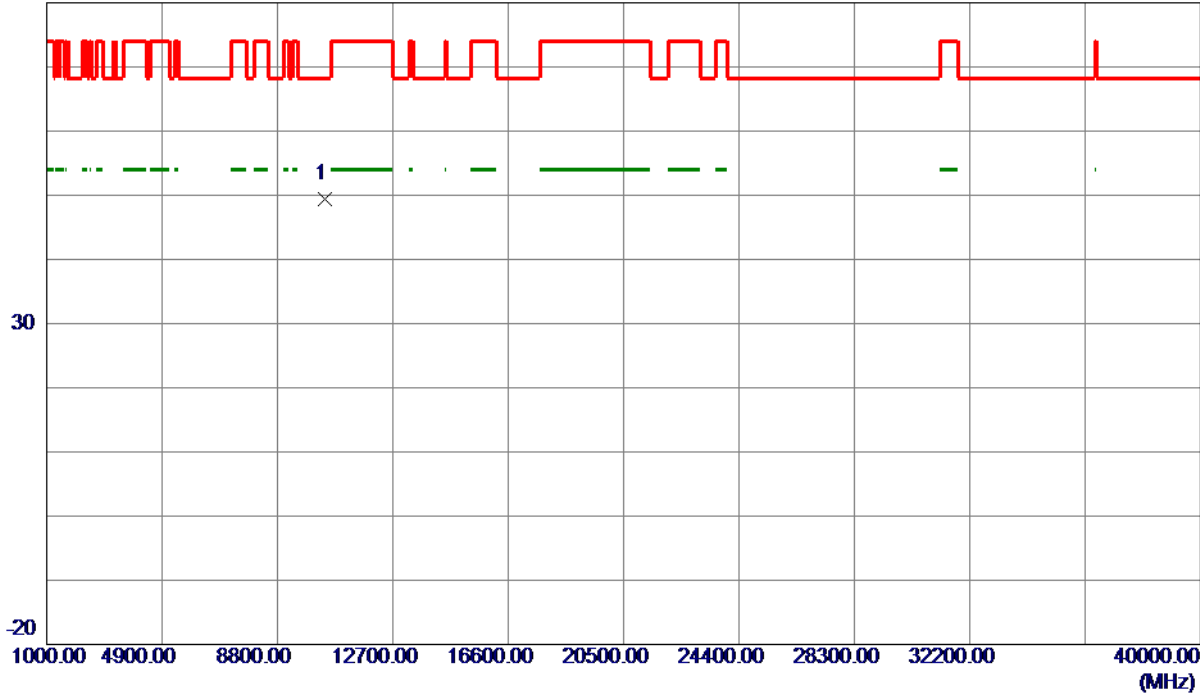


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10400.2460	34.20	15.17	49.37	68.30	-18.93	Peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5200 MHz

## Horizontal

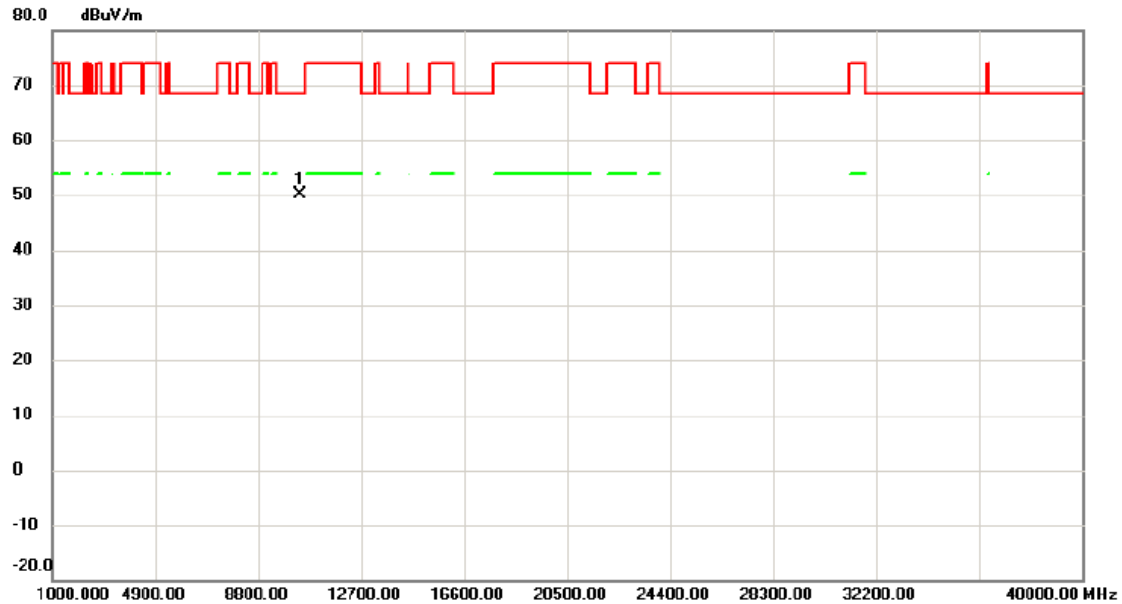


No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin	
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector Comment
1	*	10399.544	34.94	15.17	50.11	68.30	-18.19	peak

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz

## Vertical

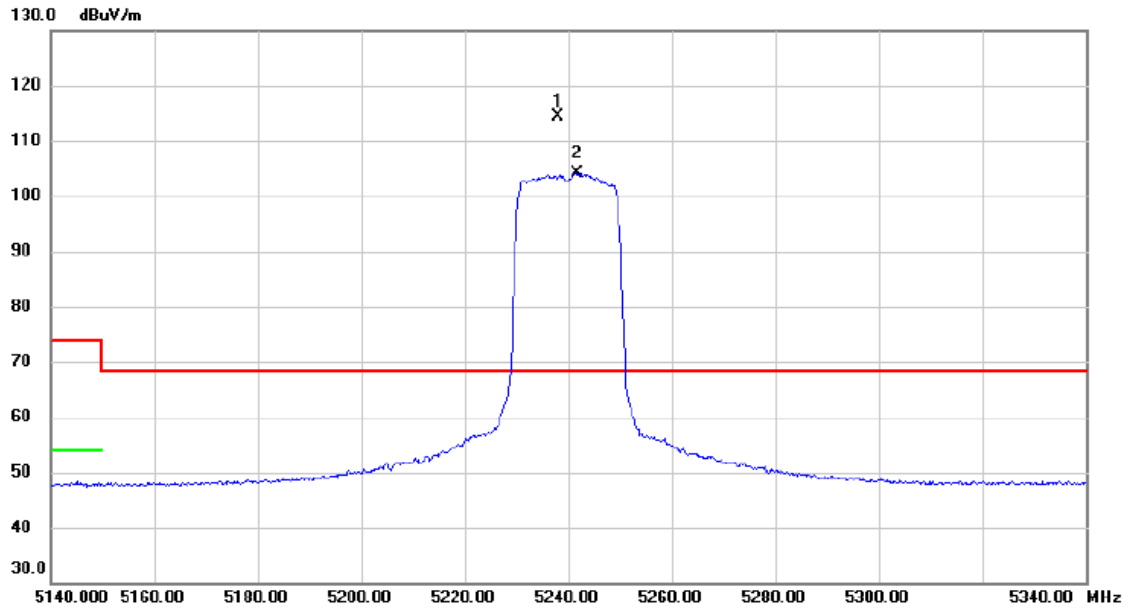


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5237.900	95.17	19.18	114.35	68.30	46.05	peak	No Limit
2	X	5241.600	85.02	19.18	104.20	68.30	35.90	AVG	No Limit

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz

## Horizontal

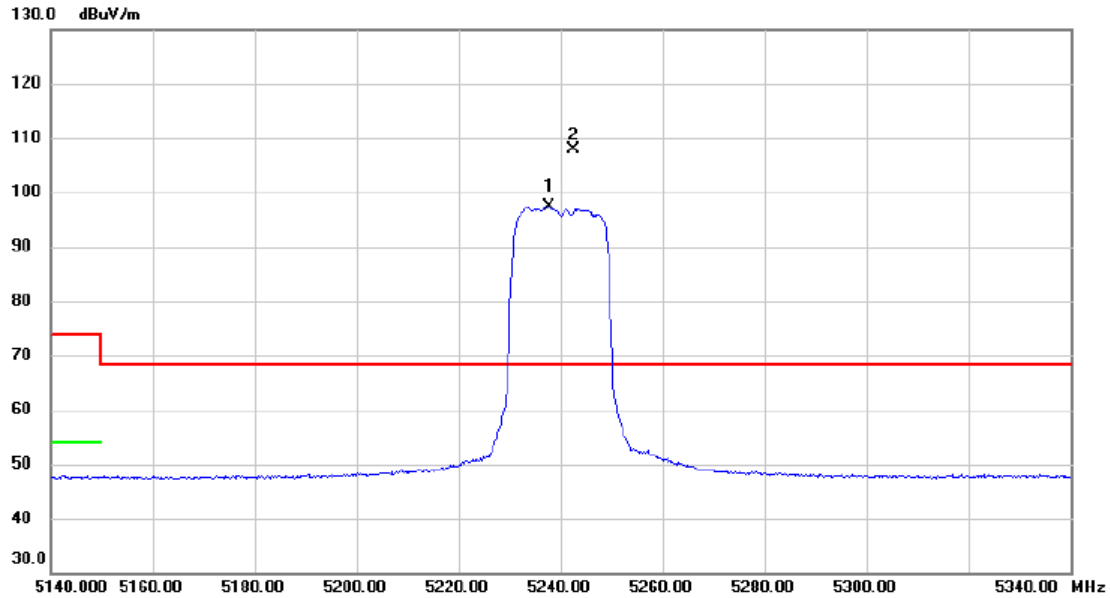

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	X	5237.600	78.30	19.18	97.48	68.30	29.18	AVG	No Limit
2	*	5242.600	88.61	19.18	107.79	68.30	39.49	peak	No Limit


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz

## Vertical

80 dBuV/m

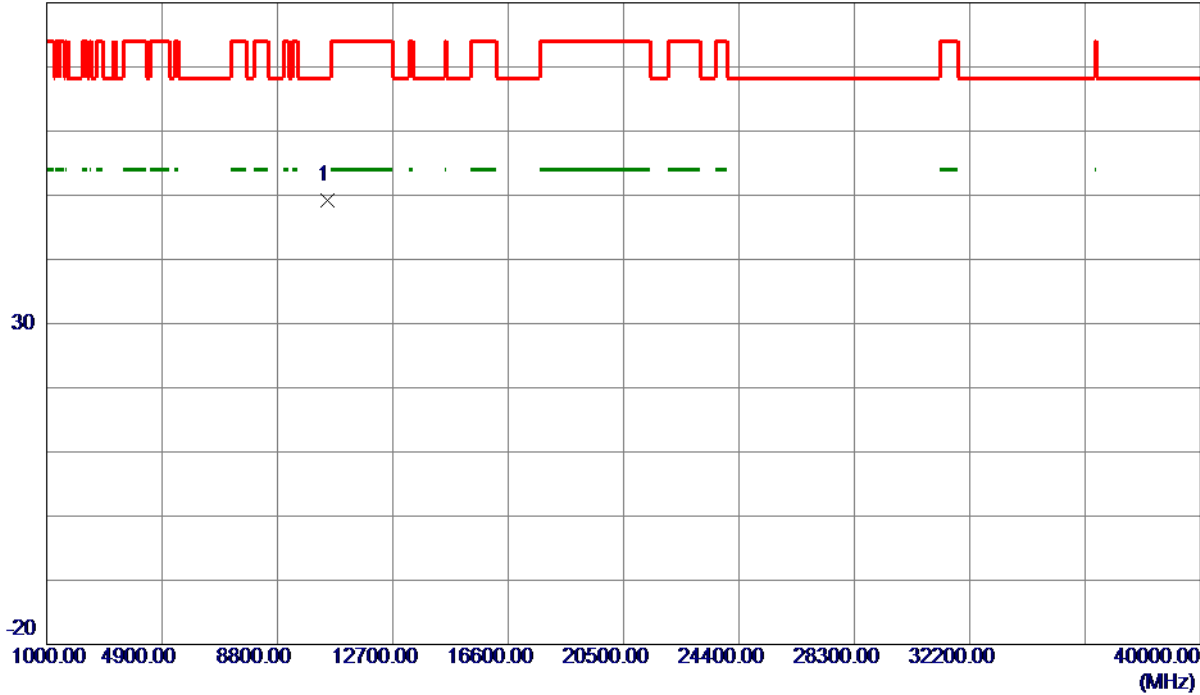


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10479.7699	33.89	15.29	49.18	68.30	-19.12	Peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz

## Horizontal

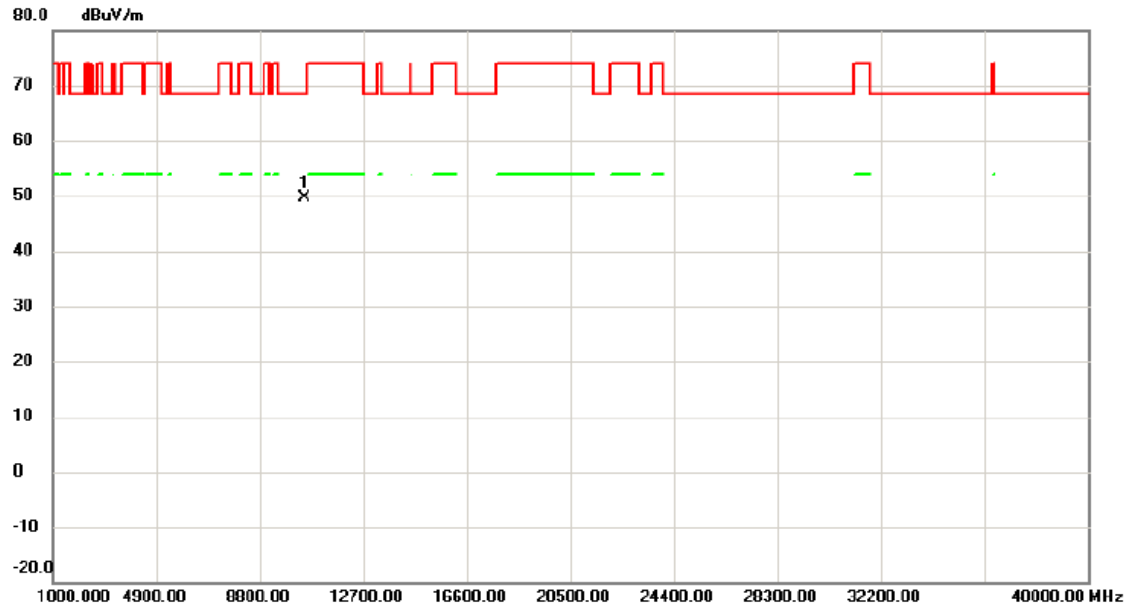


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10479.616	34.43	15.28	49.71	68.30	-18.59	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5190 MHz

## Vertical

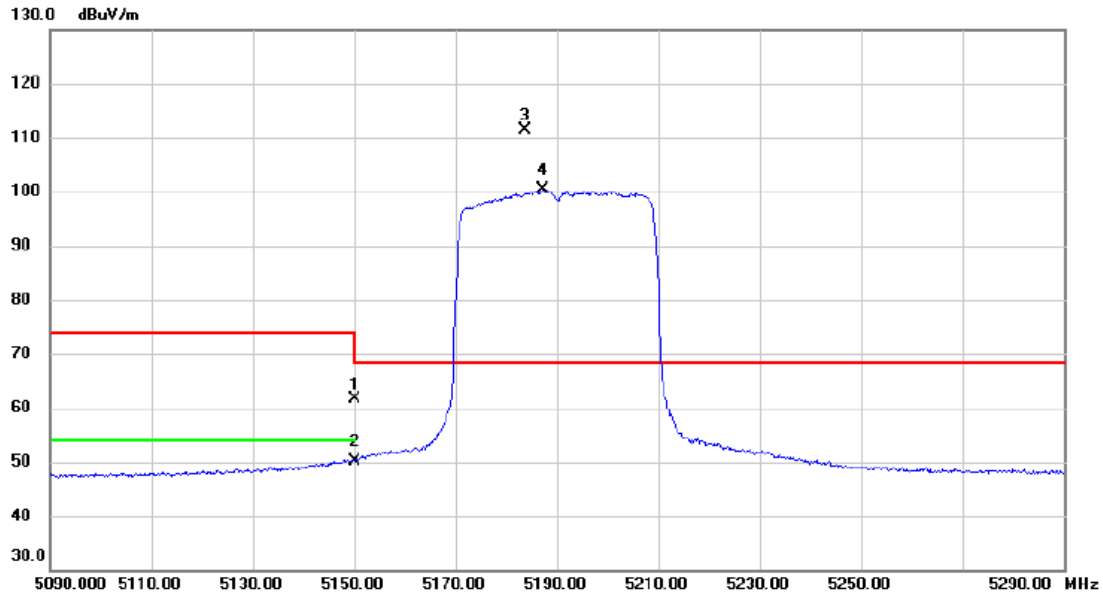

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	42.57	18.95	61.52	74.00	-12.48	peak	
2		5150.000	31.18	18.95	50.13	54.00	-3.87	AVG	
3	*	5183.700	92.46	19.03	111.49	68.30	43.19	peak	No Limit
4	X	5187.200	81.38	19.05	100.43	68.30	32.13	AVG	No Limit


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.



Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5190 MHz

## Horizontal

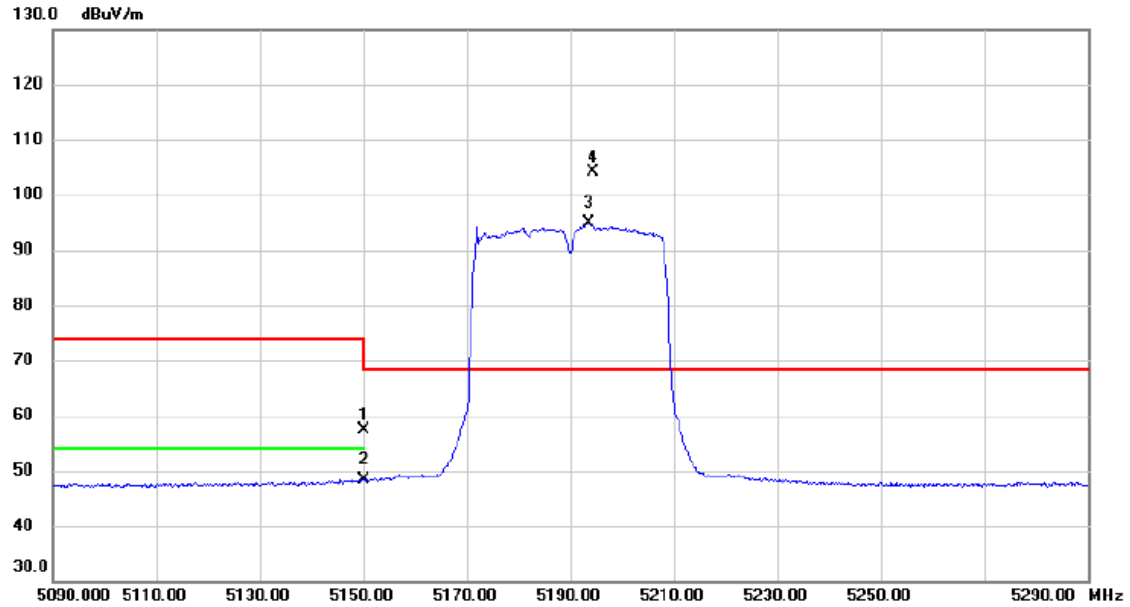

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	38.44	18.95	57.39	74.00	-16.61	peak	
2		5150.000	29.48	18.95	48.43	54.00	-5.57	AVG	
3	X	5193.500	75.86	19.06	94.92	68.30	26.62	AVG	No Limit
4	*	5194.400	85.18	19.06	104.24	68.30	35.94	peak	No Limit


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5190 MHz

## Vertical

80 dBuV/m

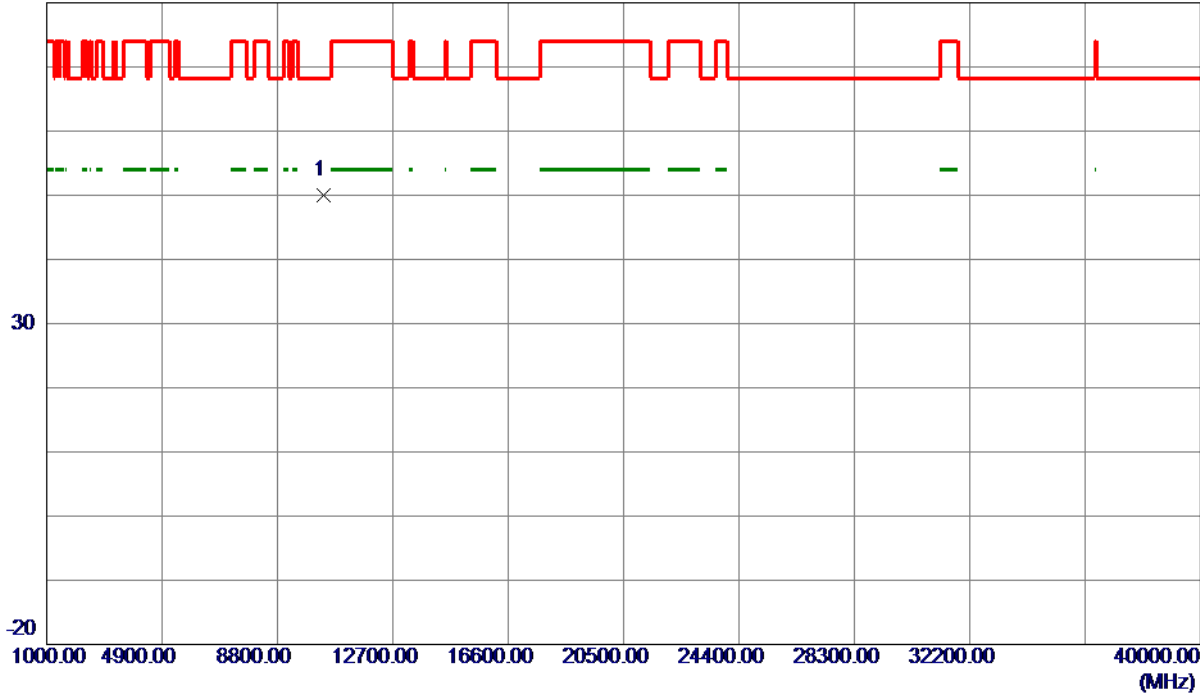


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10380.2850	34.90	15.14	50.04	68.30	-18.26	Peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5190 MHz

## Horizontal

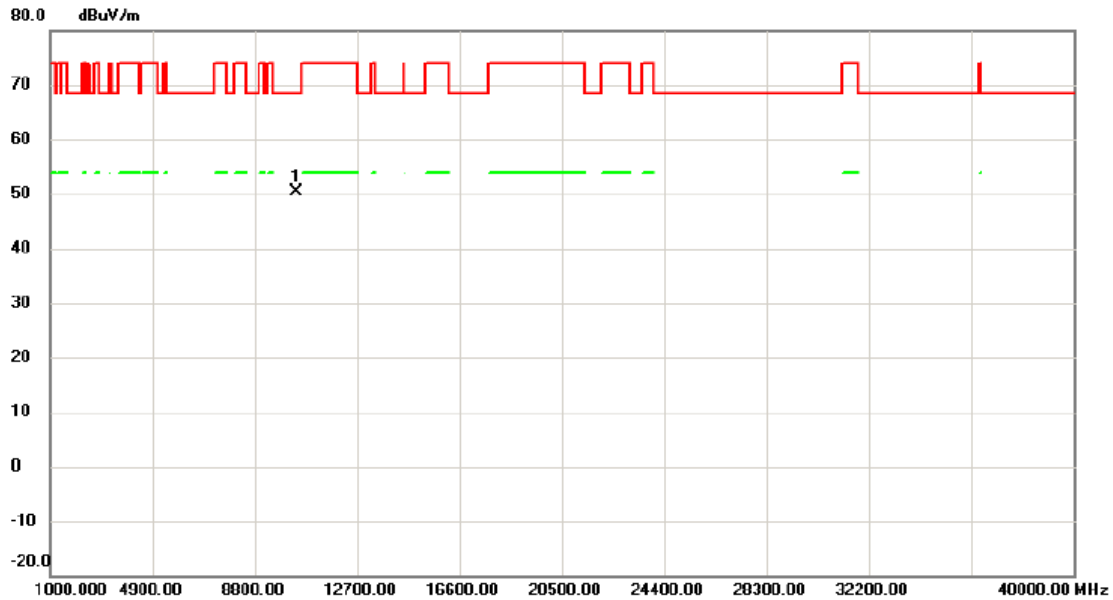


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10379.573	35.26	15.13	50.39	68.30	-17.91	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

## Vertical

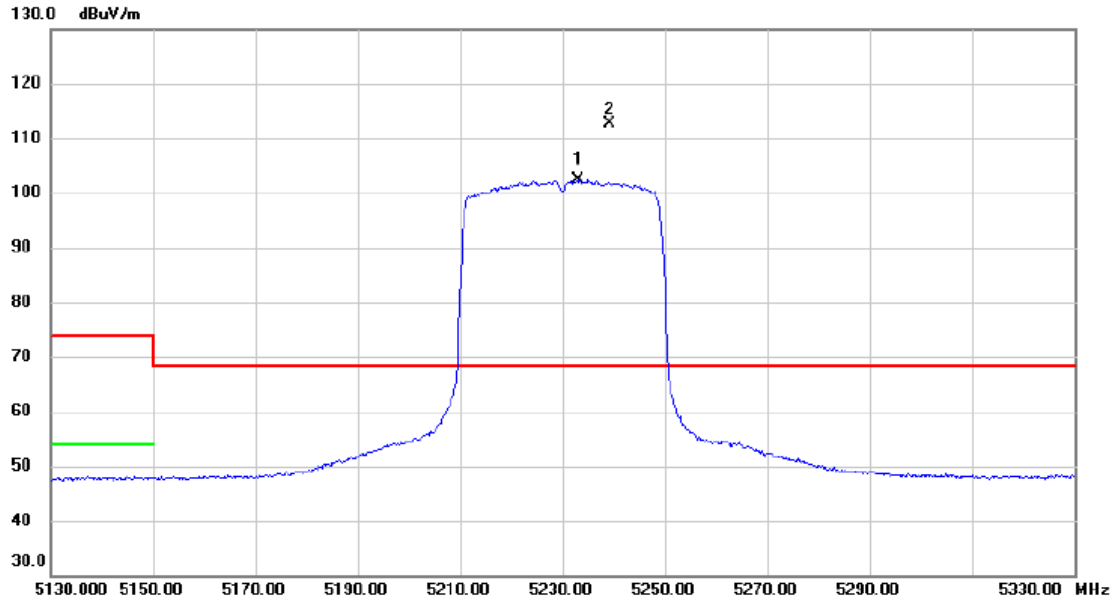


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	X	5233.100	83.25	19.16	102.41	68.30	34.11	AVG	No Limit
2	*	5239.100	93.34	19.18	112.52	68.30	44.22	peak	No Limit

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

## Horizontal

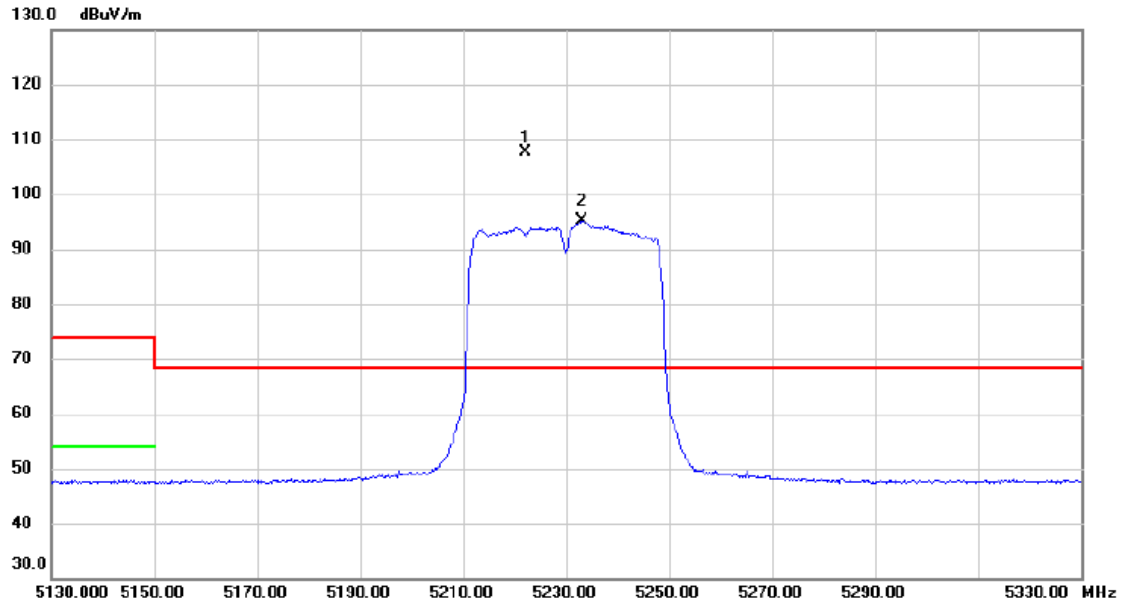

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5222.200	88.51	19.13	107.64	68.30	39.34	peak	No Limit
2	X	5233.000	76.04	19.16	95.20	68.30	26.90	AVG	No Limit


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

## Vertical

80 dBuV/m

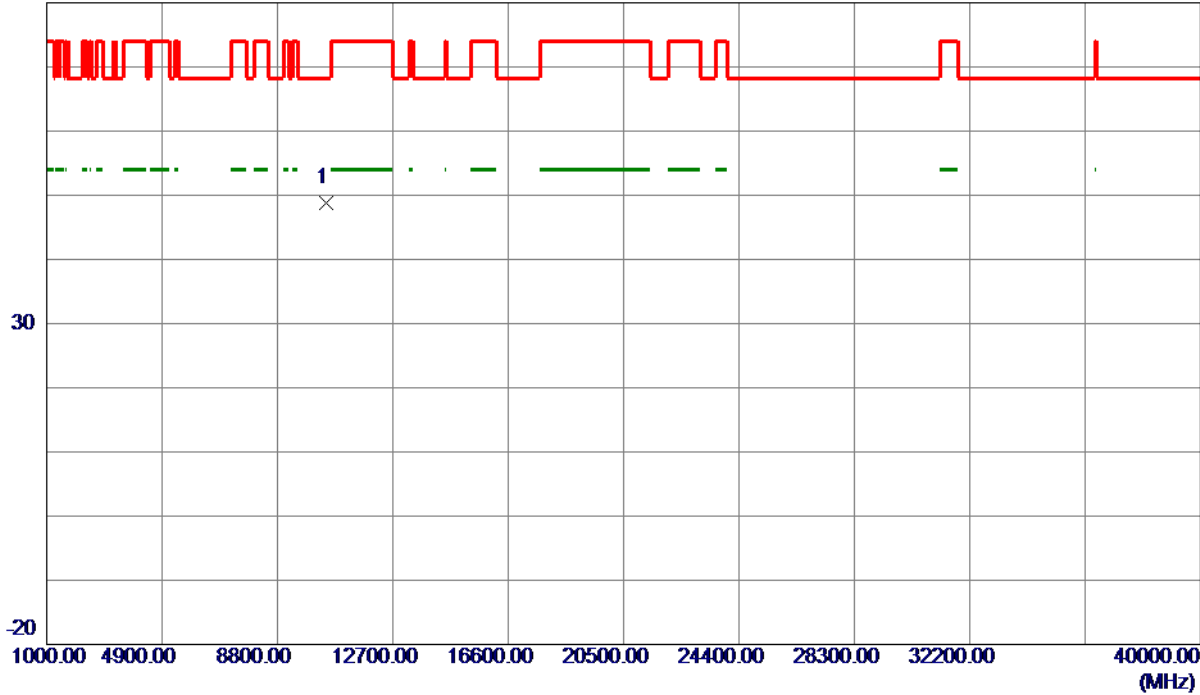


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10459.8060	33.55	15.26	48.81	68.30	-19.49	Peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz

## Horizontal

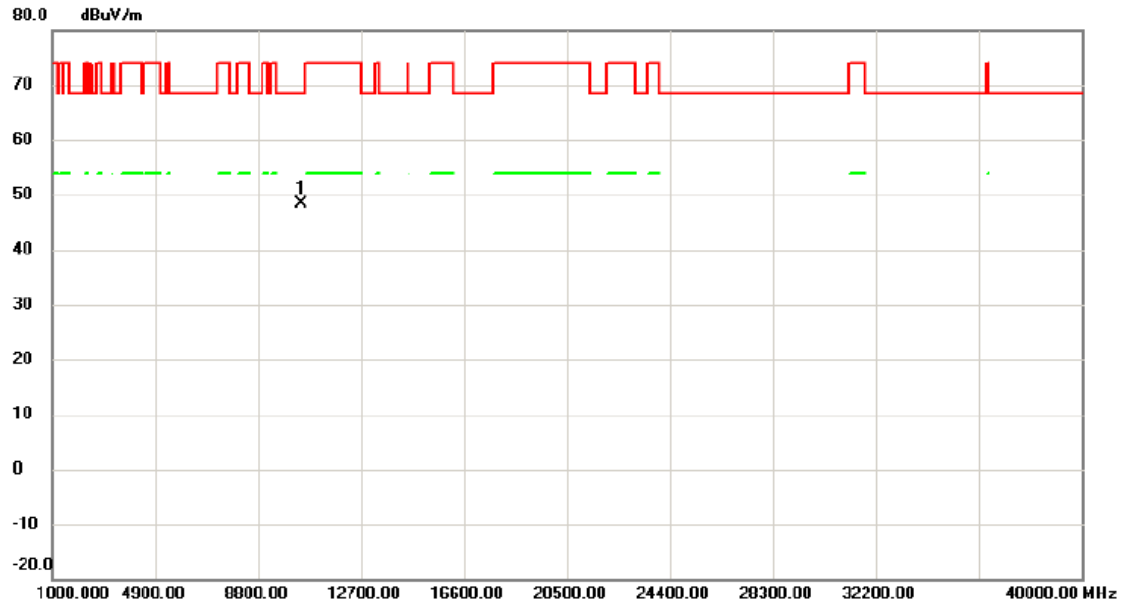


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10460.068	33.19	15.26	48.45	68.30	-19.85	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

## Vertical

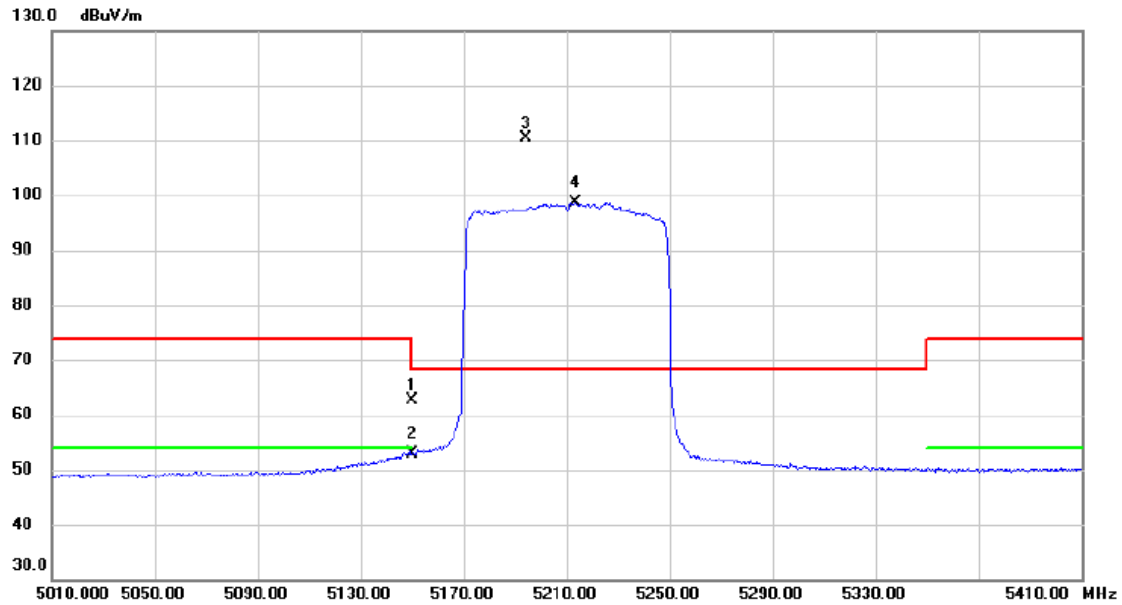

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		5150.000	43.76	18.95	62.71	74.00	-11.29	peak	
2		5150.000	33.96	18.95	52.91	54.00	-1.09	AVG	
3	*	5194.200	91.28	19.06	110.34	68.30	42.04	peak	No Limit
4	X	5213.400	79.55	19.11	98.66	68.30	30.36	AVG	No Limit


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.



Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

## Horizontal

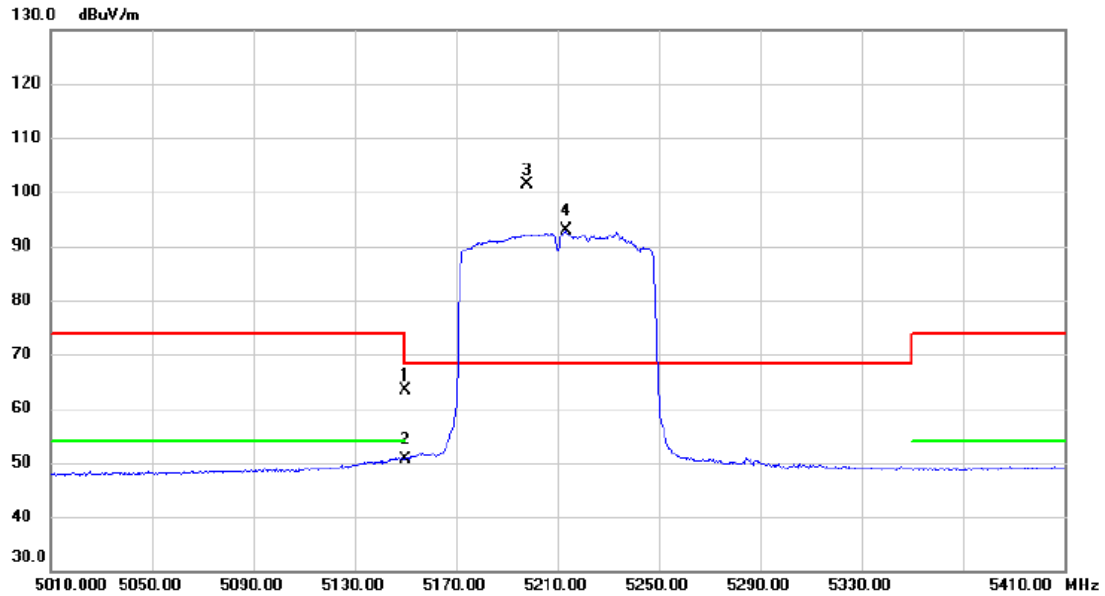

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		5150.000	44.47	18.95	63.42	74.00	-10.58	peak	
2		5150.000	31.76	18.95	50.71	54.00	-3.29	AVG	
3	*	5198.000	82.39	19.07	101.46	68.30	33.16	peak	No Limit
4	X	5213.400	73.85	19.11	92.96	68.30	24.66	AVG	No Limit

### REMARKS:


(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

## Vertical

80 dBuV/m

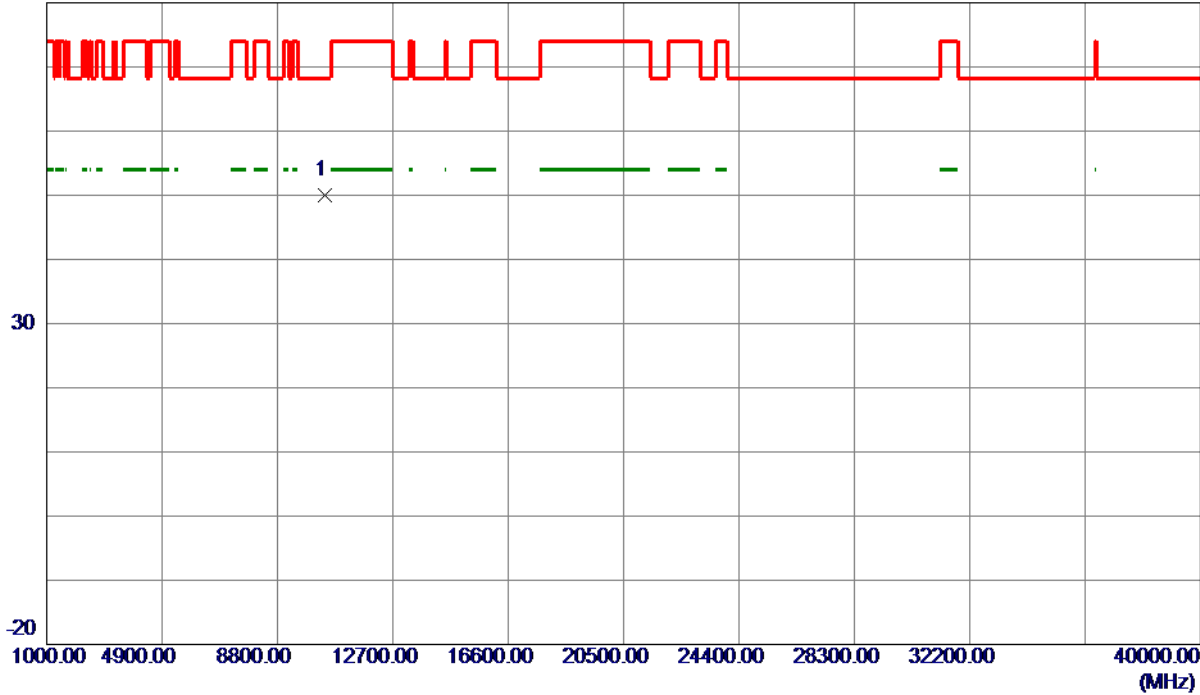


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10419.6890	34.73	15.20	49.93	68.30	-18.37	Peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz

## Horizontal

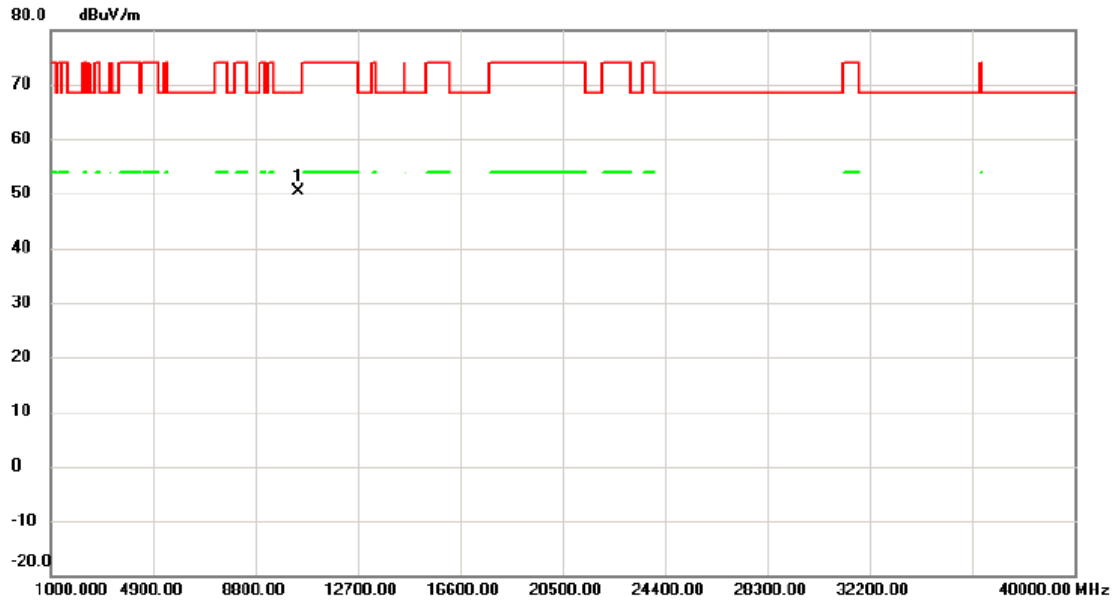


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10420.287	35.21	15.21	50.42	68.30	-17.88	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5745 MHz

## Vertical

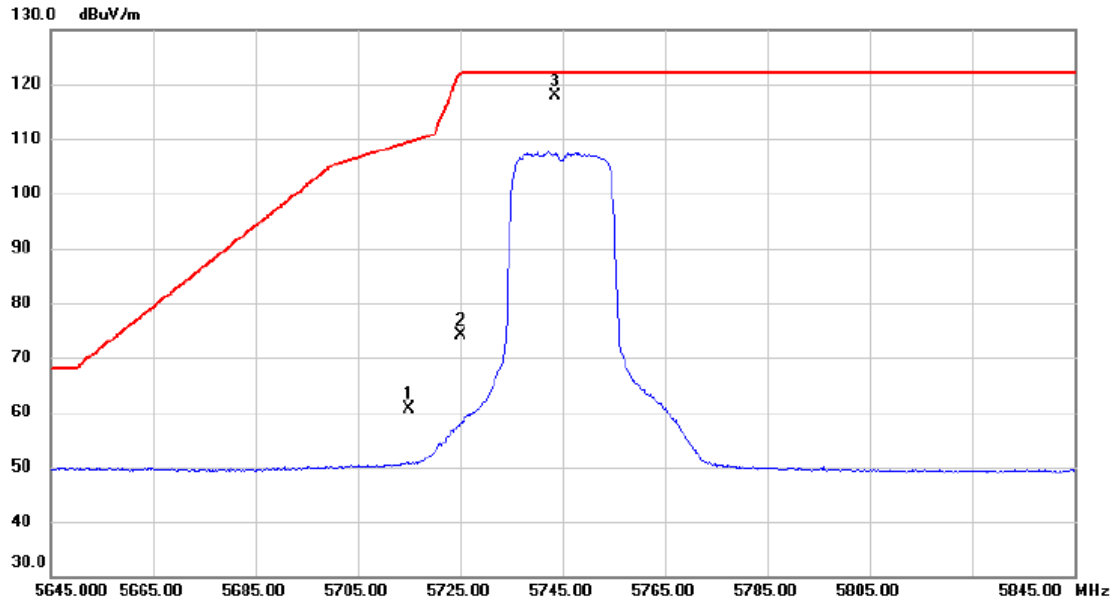


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5715.000	40.72	20.02	60.74	109.40	-48.66	peak	
2		5725.000	54.09	20.02	74.11	122.20	-48.09	peak	
3	*	5743.500	97.87	20.03	117.90	122.20	-4.30	peak	No Limit

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5745 MHz

## Horizontal

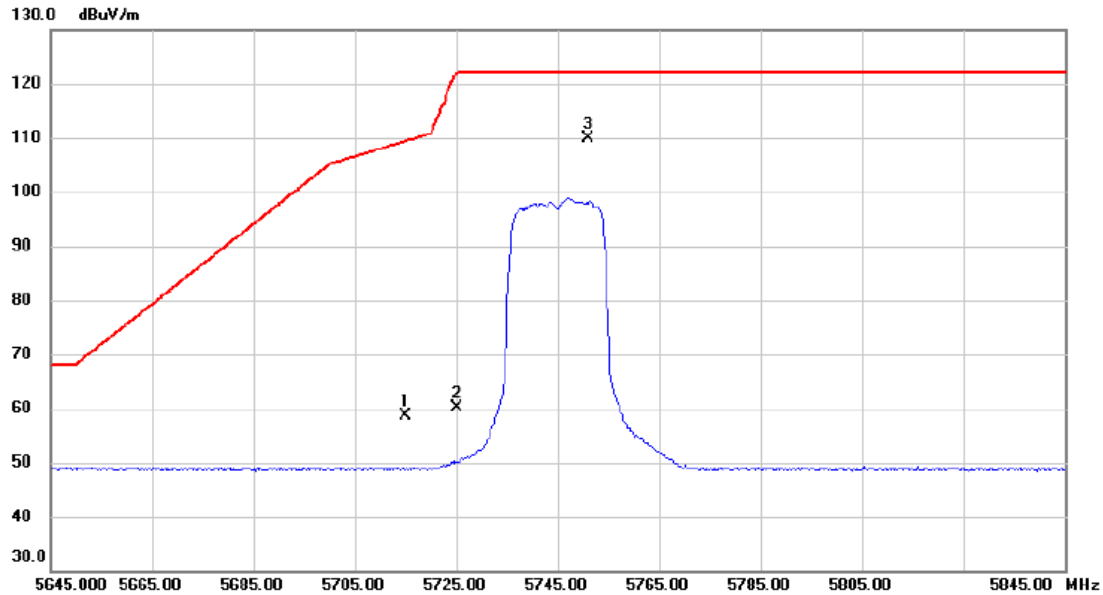

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5715.000	38.56	20.02	58.58	109.40	-50.82	peak	
2		5725.000	40.23	20.02	60.25	122.20	-61.95	peak	
3	*	5751.000	89.92	20.04	109.96	122.20	-12.24	peak	No Limit


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5745 MHz

## Vertical

80 dBuV/m

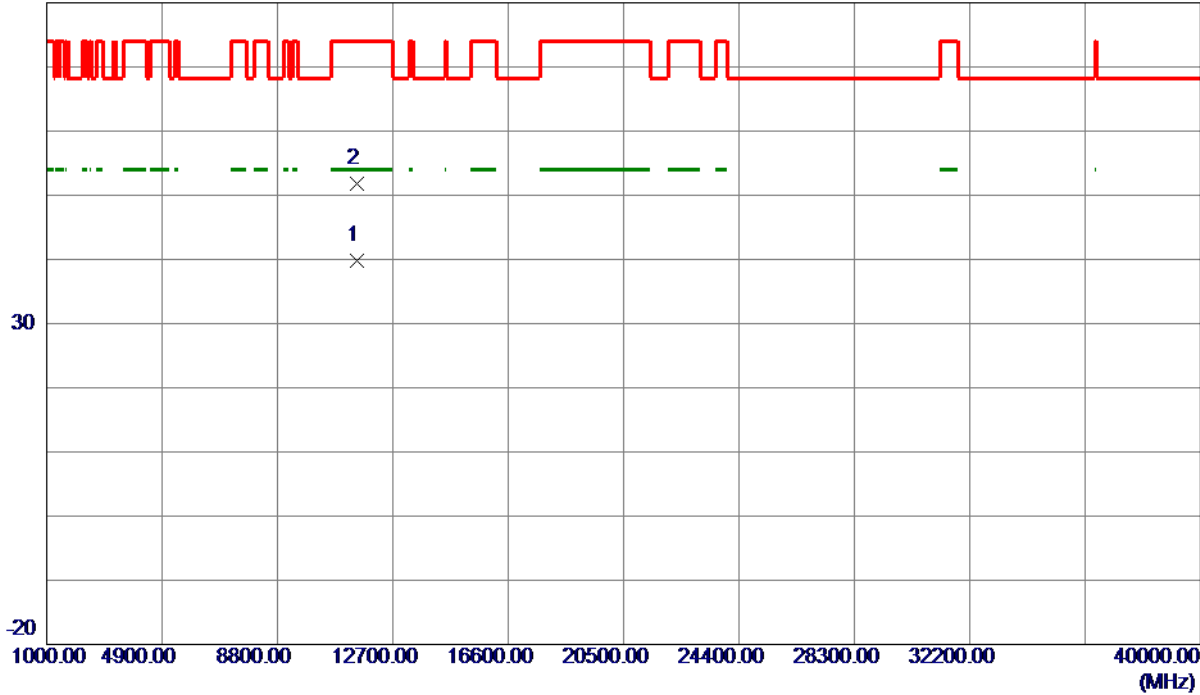

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	11489.9800	22.58	17.16	39.74	54.00	-14.26	AVG	
2	11490.1689	34.63	17.16	51.79	74.00	-22.21	Peak	


### REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5745 MHz

## Horizontal

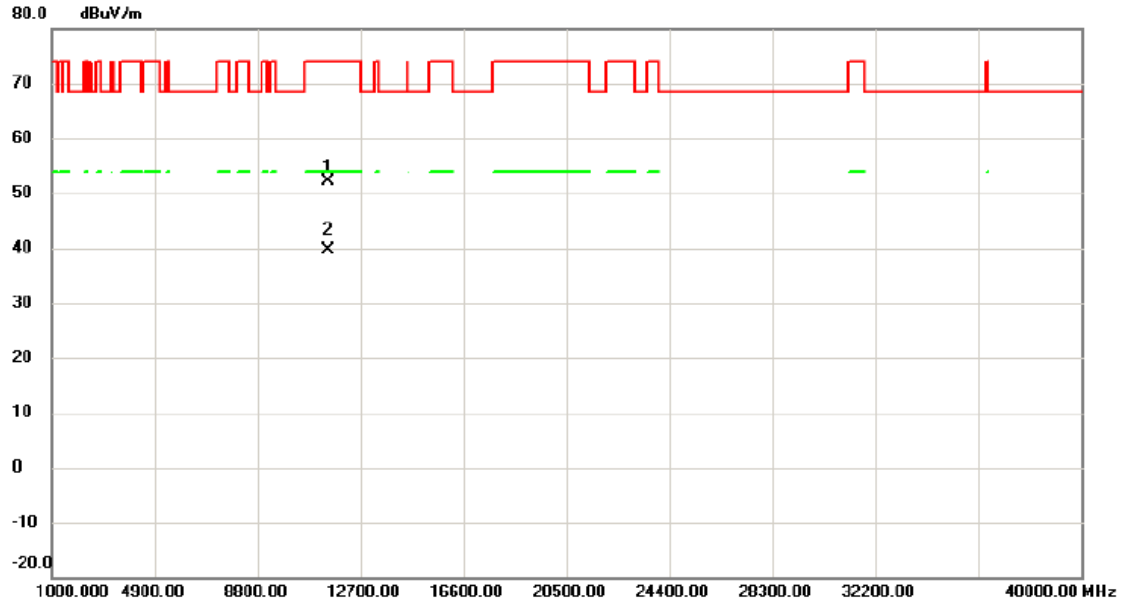


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		11489.769	34.99	17.16	52.15	74.00	-21.85	peak	
2	*	11489.900	22.52	17.16	39.68	54.00	-14.32	AVG	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5785 MHz

## Vertical

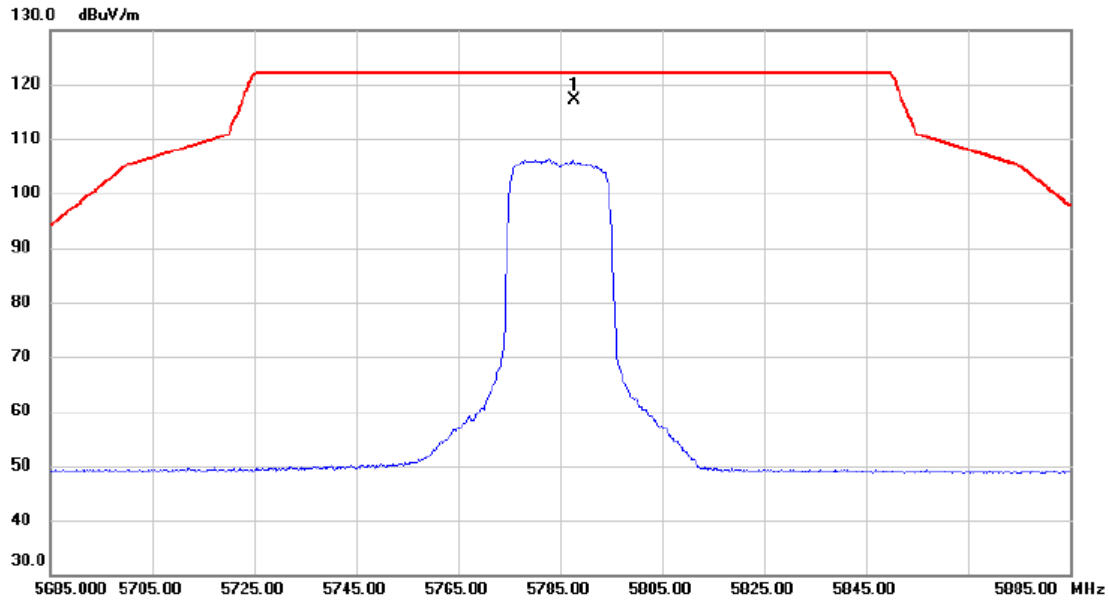

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	5787.900	96.97	20.06	117.03	122.20	-5.17	peak	No Limit


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.



Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5785 MHz

## Horizontal

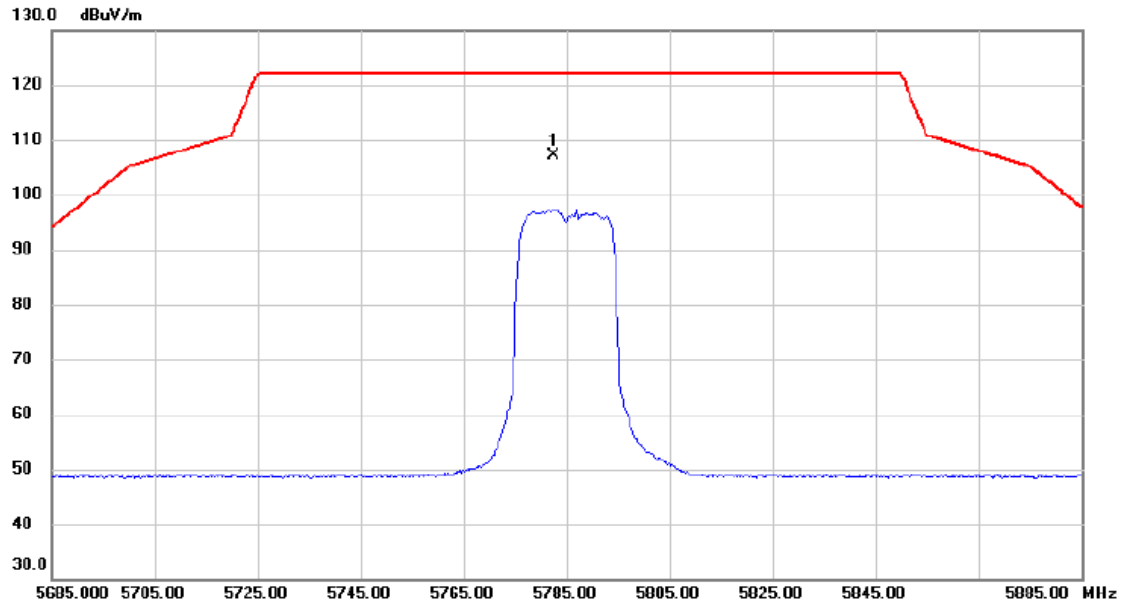

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	5782.400	87.10	20.06	107.16	122.20	-15.04	peak	No Limit


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5785 MHz

## Vertical

80 dBuV/m

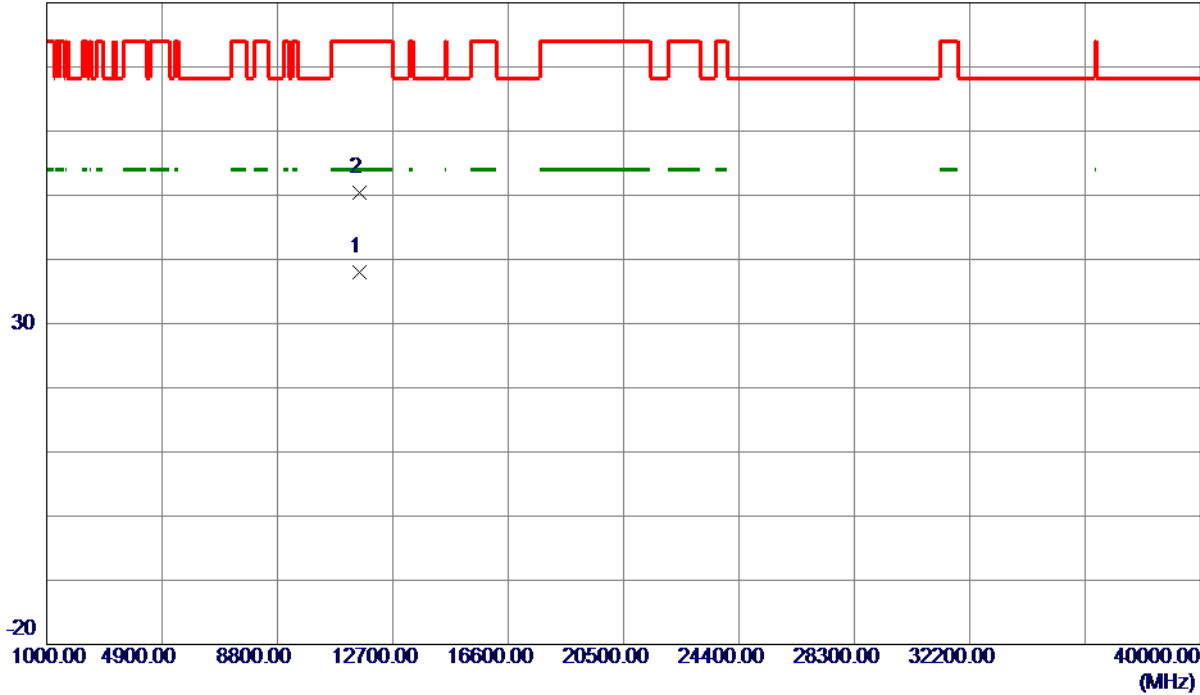

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	11569.8550	20.66	17.25	37.91	54.00	-16.09	AVG	
2	11570.7850	33.21	17.26	50.47	74.00	-23.53	Peak	


### REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5785 MHz

## Horizontal

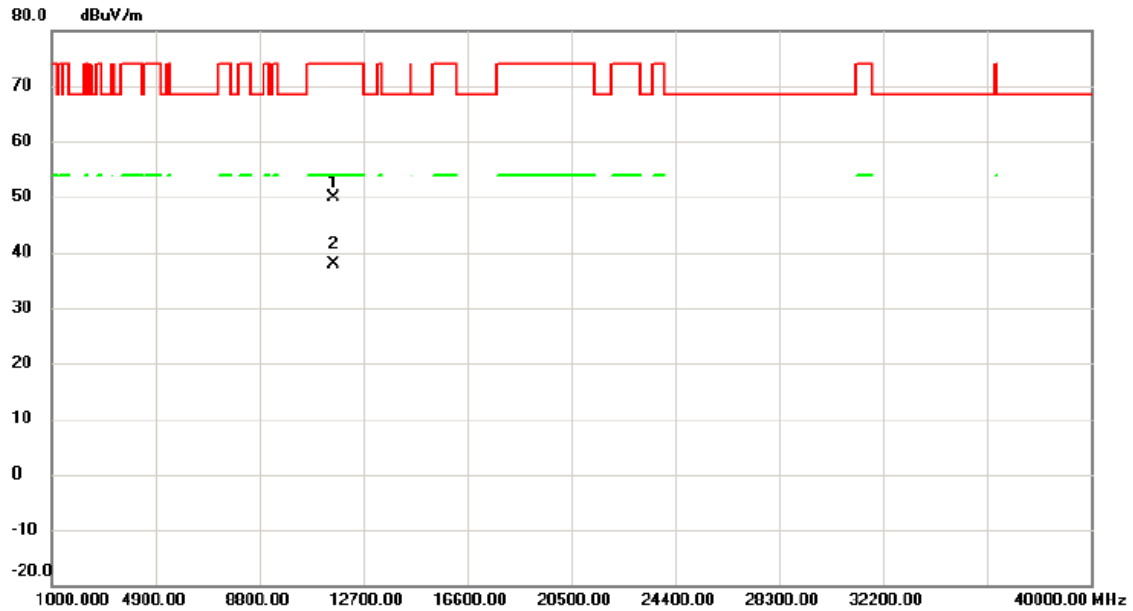


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		11569.505	32.52	17.25	49.77	74.00	-24.23	peak	
2	*	11569.545	20.53	17.25	37.78	54.00	-16.22	AVG	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5825 MHz

## Vertical

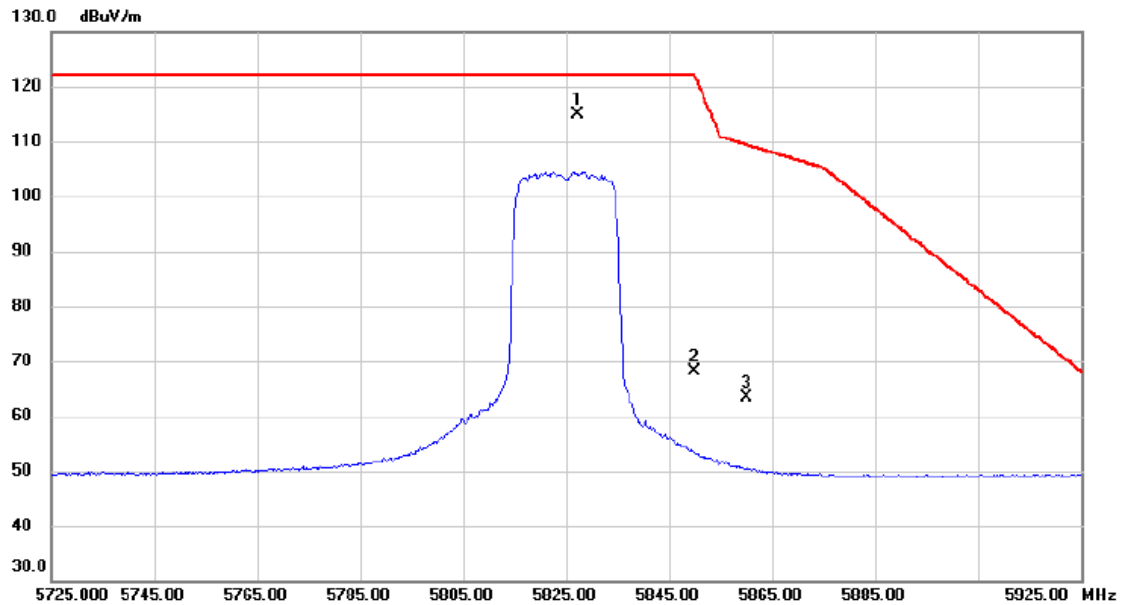


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5827.200	94.68	20.10	114.78	122.20	-7.42	peak	No Limit
2		5850.000	48.00	20.11	68.11	122.20	-54.09	peak	
3		5860.000	43.35	20.11	63.46	109.40	-45.94	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5825 MHz

## Horizontal

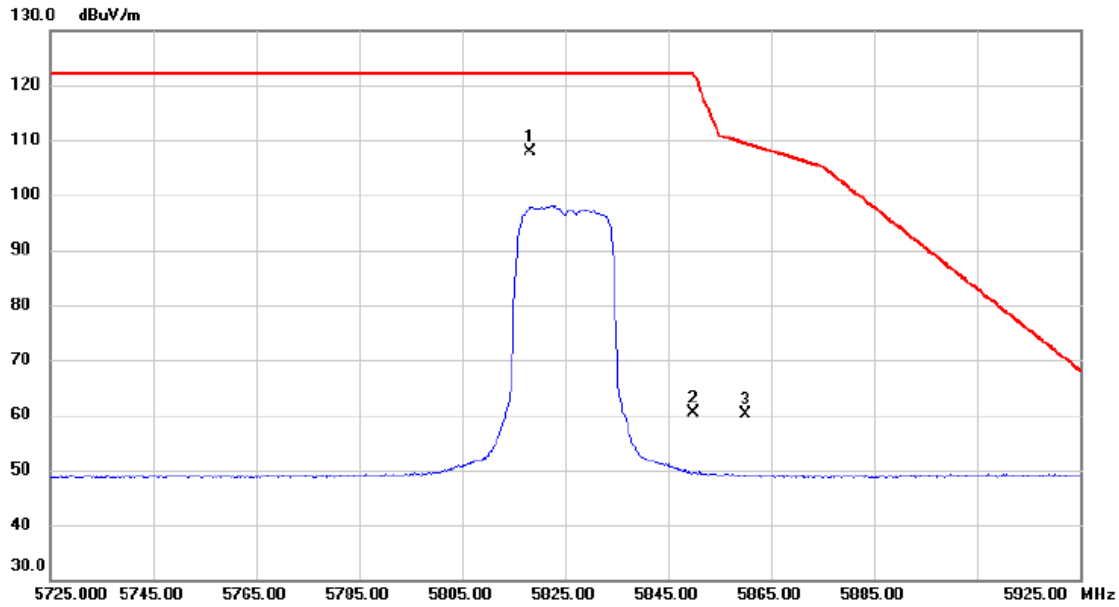

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5818.200	87.91	20.08	107.99	122.20	-14.21	peak	No Limit
2		5850.000	40.38	20.11	60.49	122.20	-61.71	peak	
3		5860.000	40.12	20.11	60.23	109.40	-49.17	peak	


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5825 MHz

## Vertical

80 dBuV/m

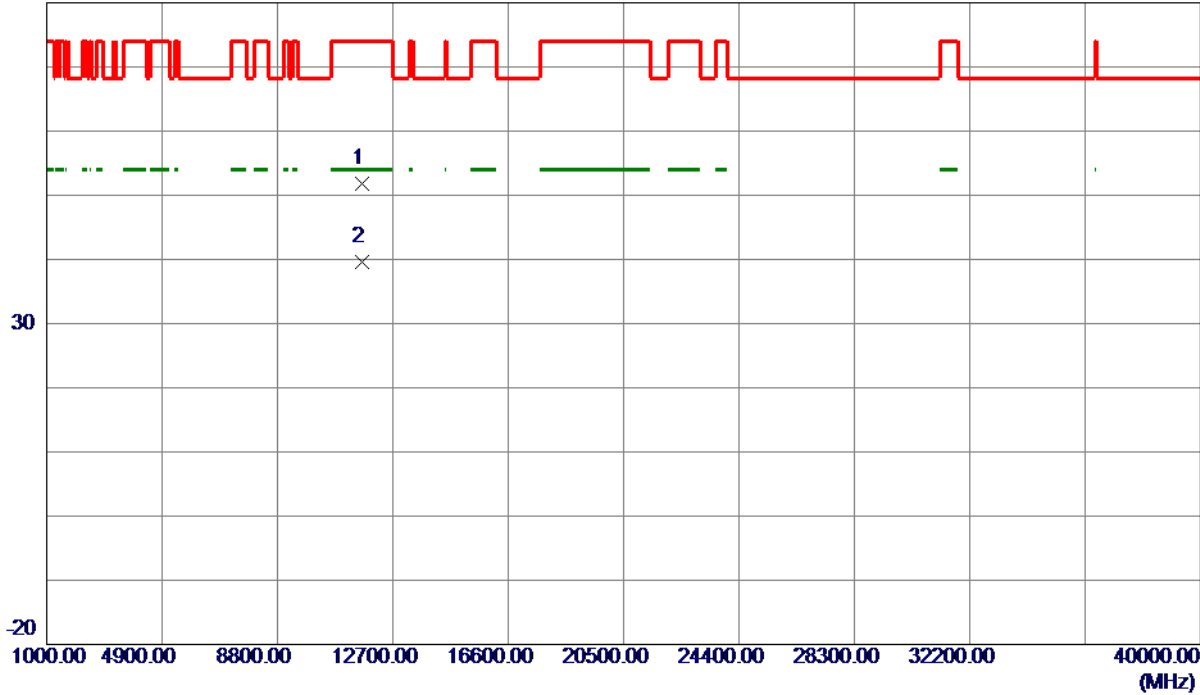

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	11649.7490	34.48	17.33	51.81	74.00	-22.19	Peak	
2 *	11650.0370	22.20	17.33	39.53	54.00	-14.47	AVG	


### REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT20) Mode 5825 MHz

## Horizontal

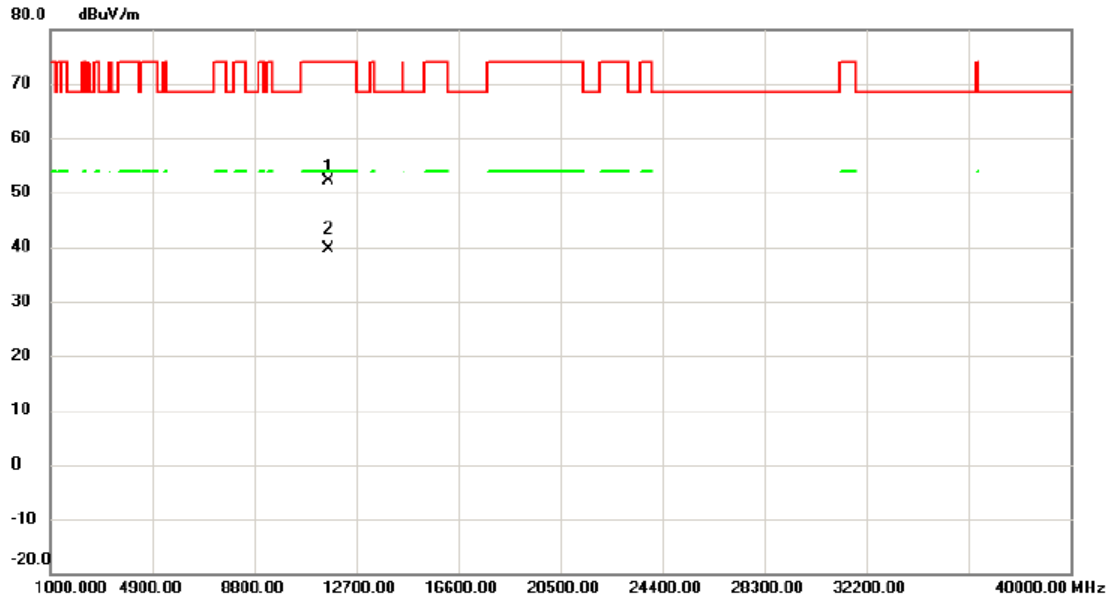


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		11649.179	34.91	17.32	52.23	74.00	-21.77	peak	
2	*	11649.973	22.23	17.32	39.55	54.00	-14.45	AVG	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5755 MHz

## Vertical

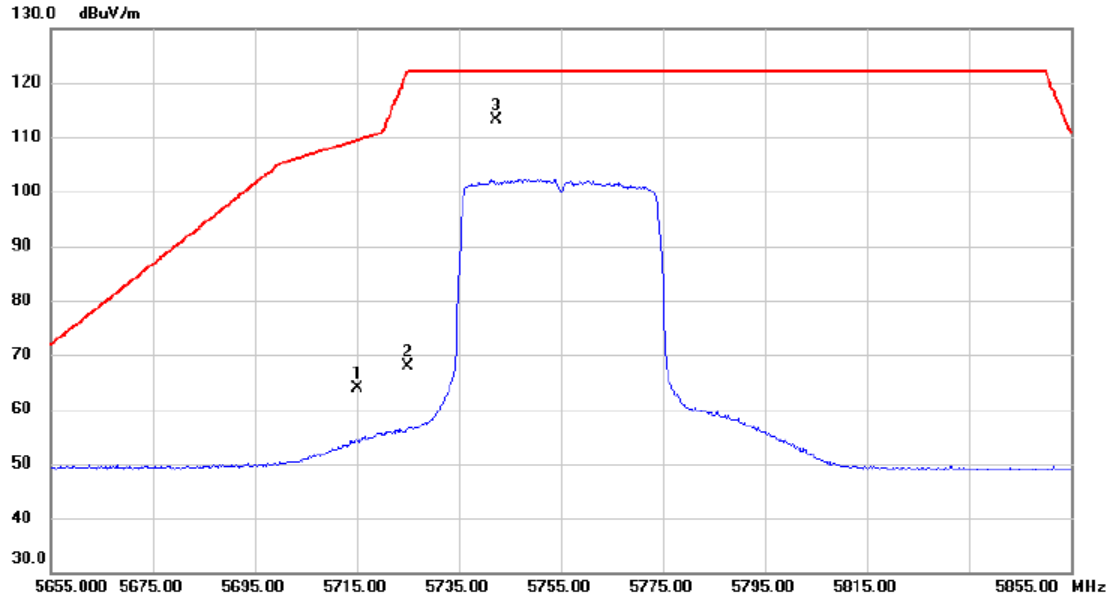

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5715.000	43.83	20.02	63.85	109.40	-45.55	peak	
2		5725.000	47.88	20.02	67.90	122.20	-54.30	peak	
3	*	5742.300	93.09	20.03	113.12	122.20	-9.08	peak	No Limit


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.



Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5755 MHz

## Horizontal

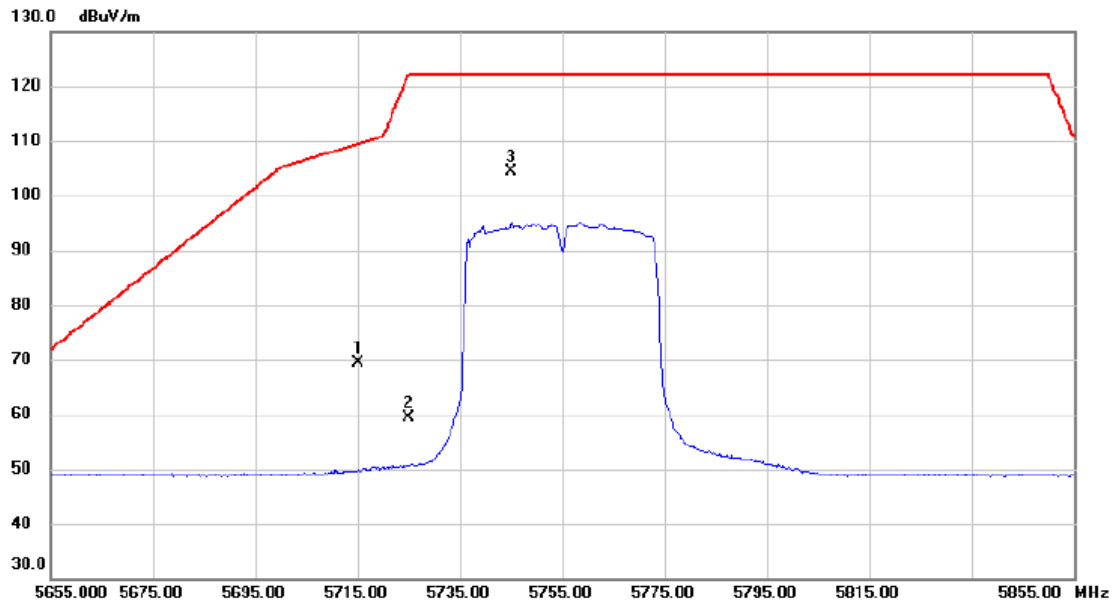

No. Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5715.000	49.24	20.02	69.26	109.40	-40.14	peak	
2	5725.000	39.32	20.02	59.34	122.20	-62.86	peak	
3 *	5744.900	84.41	20.04	104.45	122.20	-17.75	peak	No Limit


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5755 MHz

## Vertical

80 dBuV/m

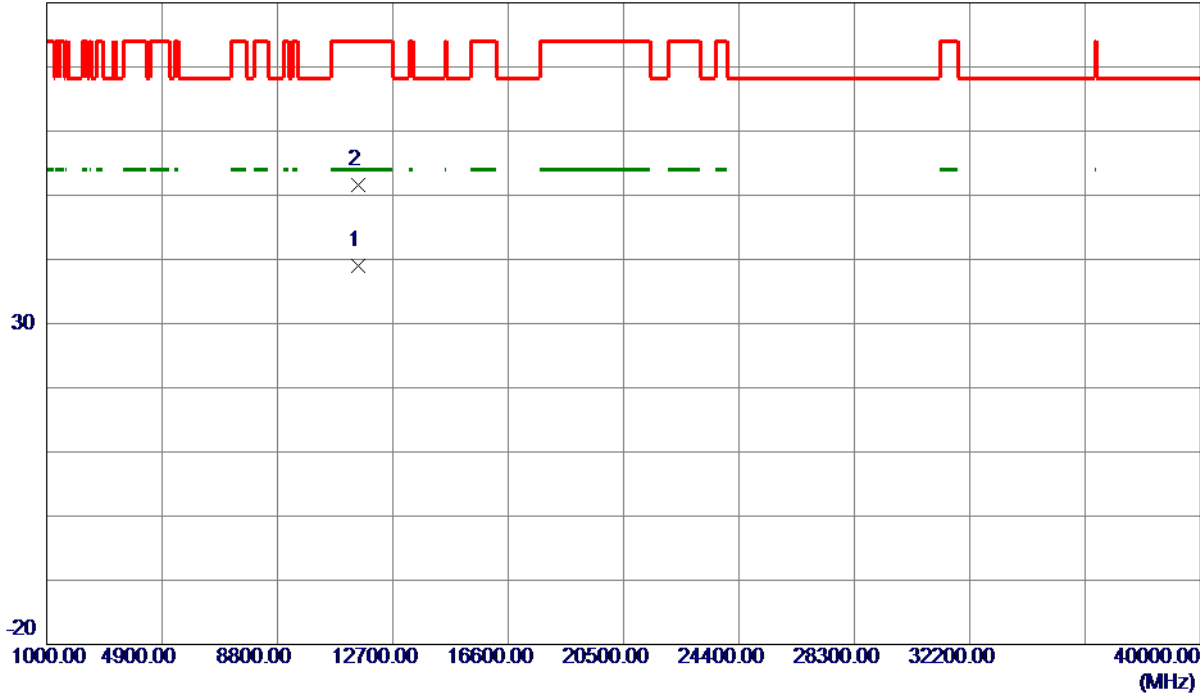

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	11509.9660	21.86	17.20	39.06	54.00	-14.94	AVG	
2	11510.0500	34.43	17.20	51.63	74.00	-22.37	Peak	


### REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5755 MHz

## Horizontal

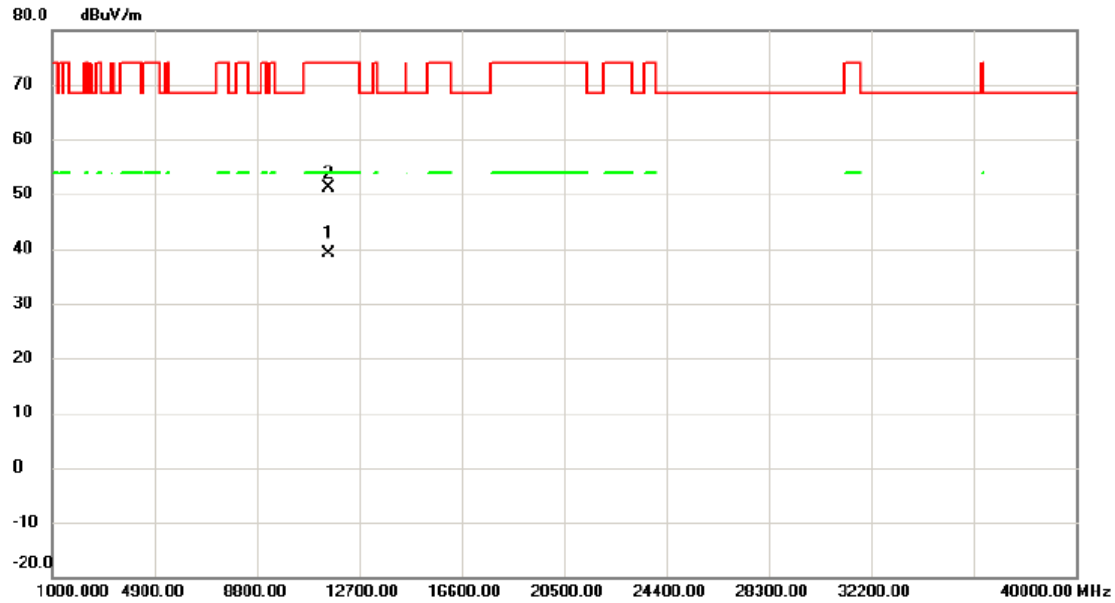


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	11509.982	21.95	17.20	39.15	54.00	-14.85	AVG	
2		11510.143	33.97	17.20	51.17	74.00	-22.83	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

## Vertical

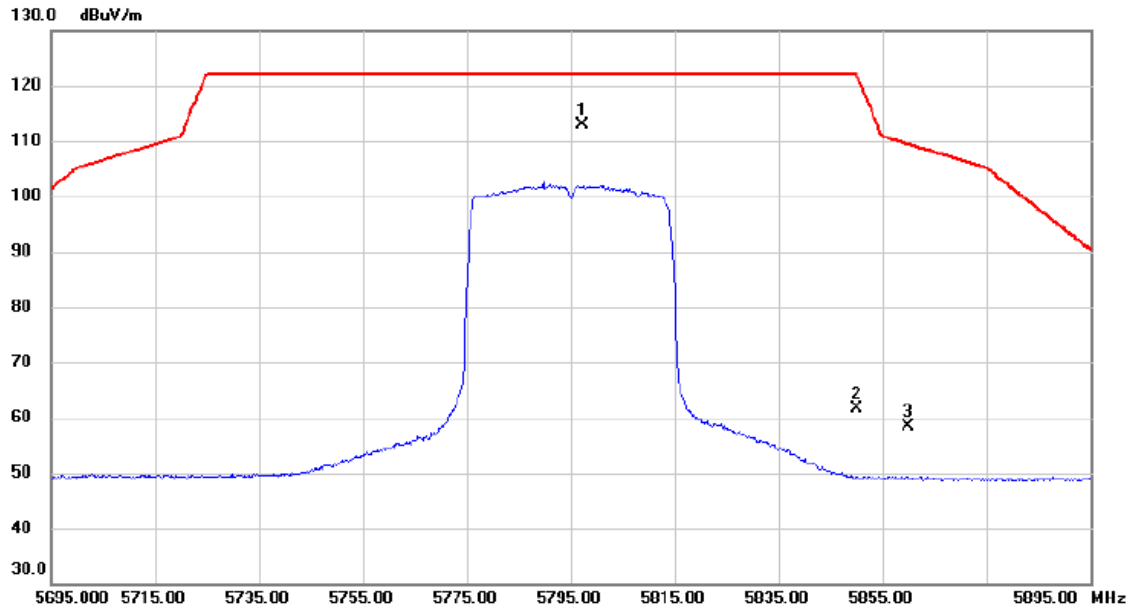


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5797.400	92.90	20.07	112.97	122.20	-9.23	peak	No Limit
2		5850.000	41.58	20.11	61.69	122.20	-60.51	peak	
3		5860.000	38.31	20.11	58.42	109.40	-50.98	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

## Horizontal

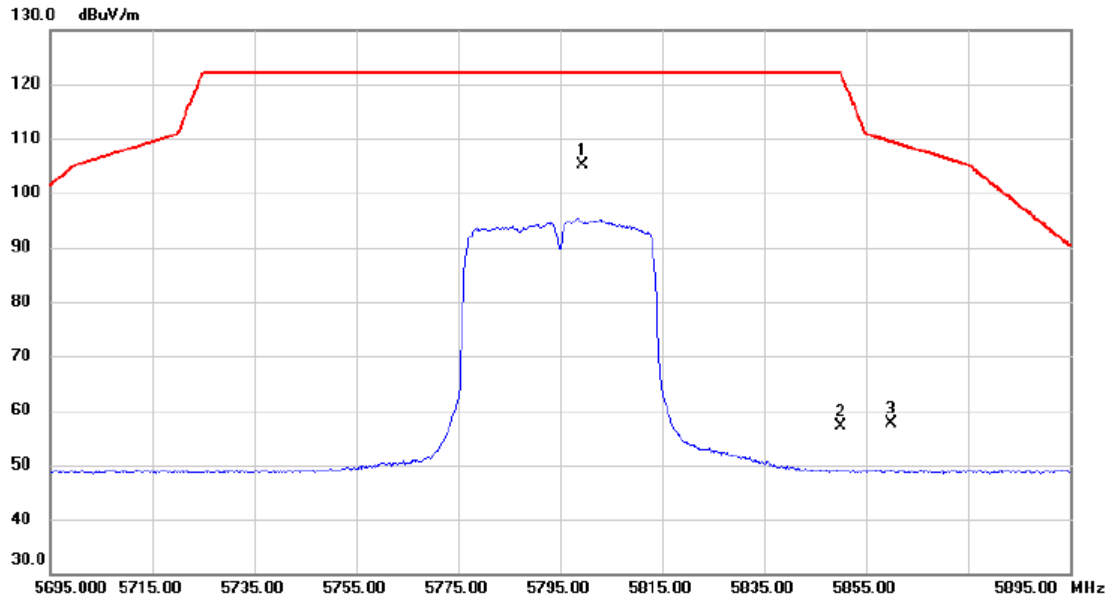

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5799.500	85.14	20.07	105.21	122.20	-16.99	peak	No Limit
2		5850.000	36.91	20.11	57.02	122.20	-65.18	peak	
3		5860.000	37.41	20.11	57.52	109.40	-51.88	peak	


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

## Vertical

80 dBuV/m

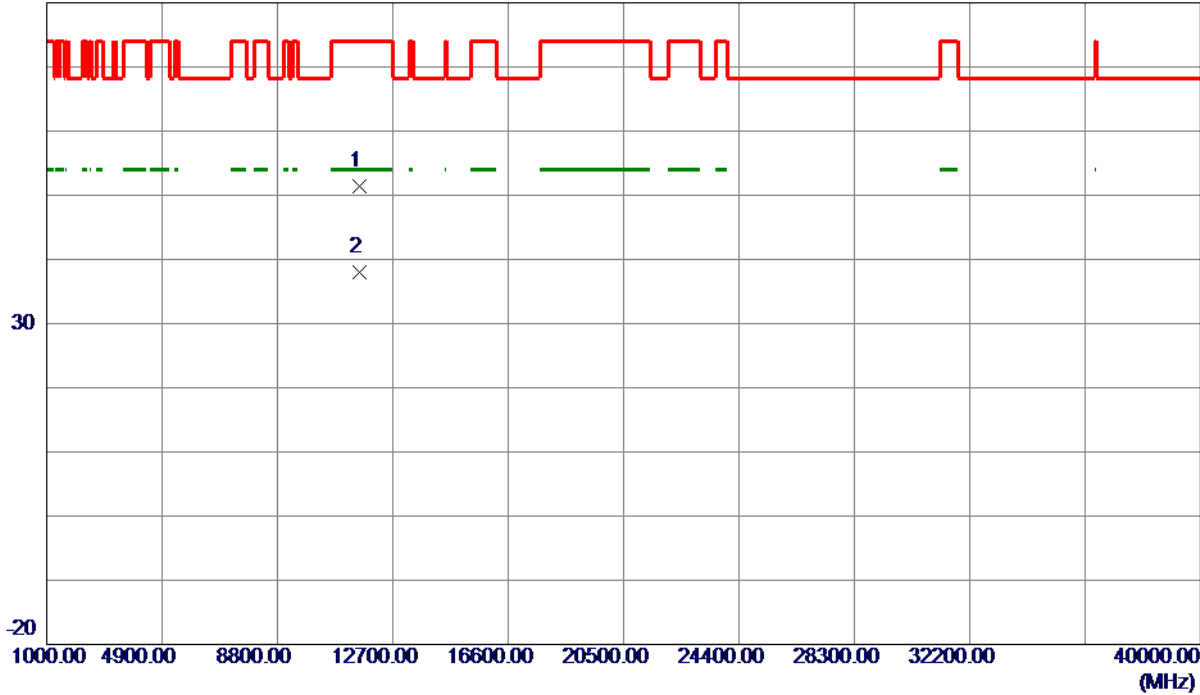

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	11589.1860	34.20	17.27	51.47	74.00	-22.53	Peak	
2 *	11589.8070	20.76	17.27	38.03	54.00	-15.97	AVG	


### REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT40) Mode 5795 MHz

## Horizontal

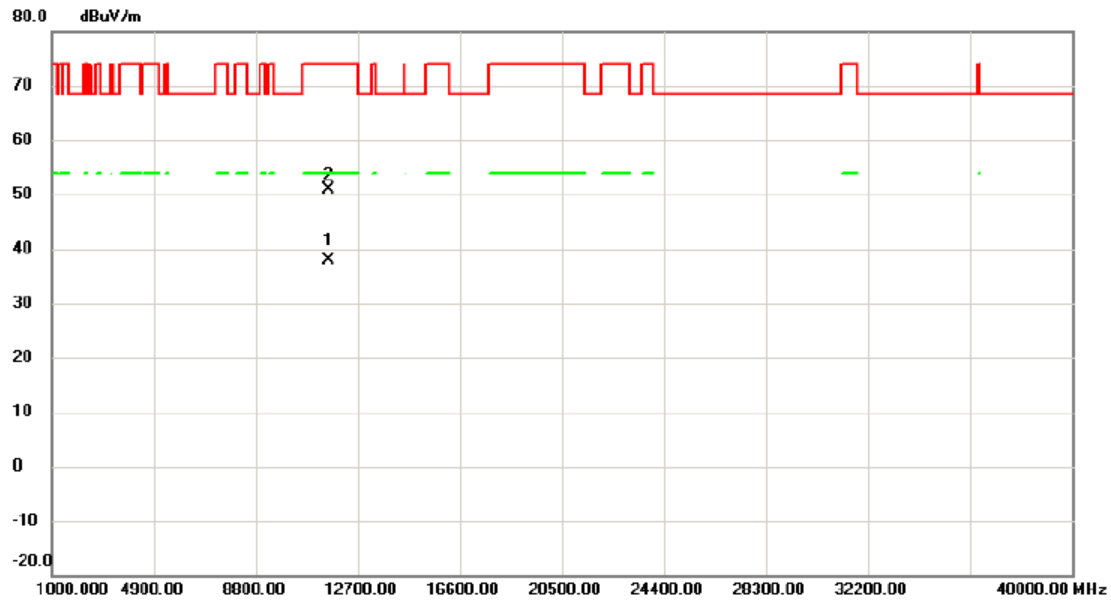


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	11589.849	20.70	17.28	37.98	54.00	-16.02	AVG	
2		11589.931	33.56	17.28	50.84	74.00	-23.16	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

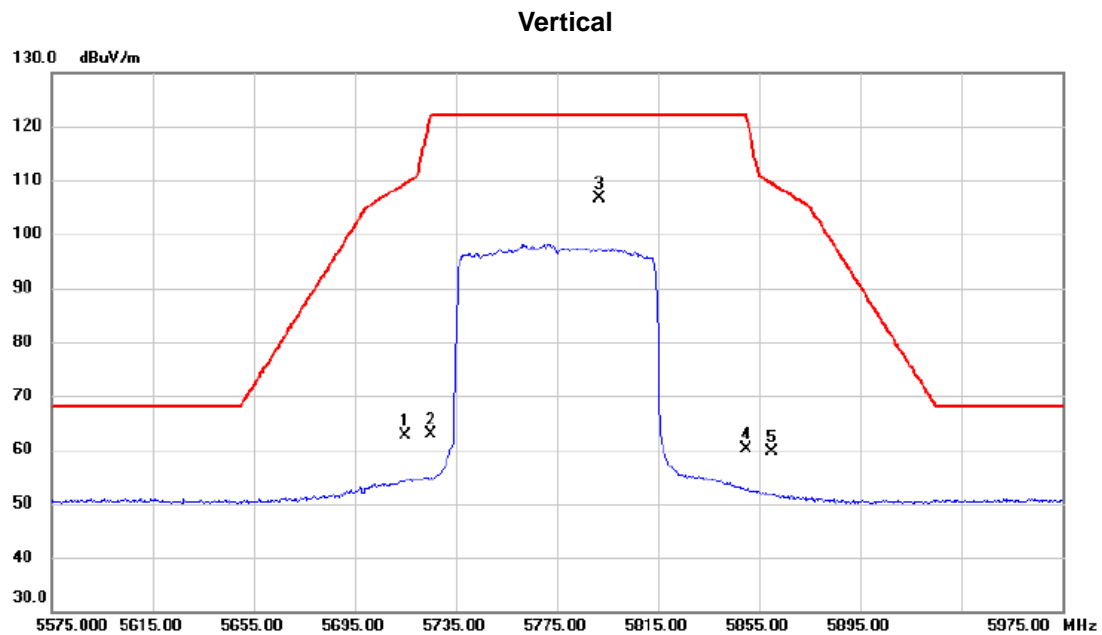

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5715.000	42.68	20.02	62.70	109.40	-46.70	peak	
2		5725.000	42.86	20.02	62.88	122.20	-59.32	peak	
3	*	5792.000	86.52	20.07	106.59	122.20	-15.61	peak	No Limit
4		5850.000	39.90	20.11	60.01	122.20	-62.19	peak	
5		5860.000	39.59	20.11	59.70	109.40	-49.70	peak	


## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.



Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

## Horizontal

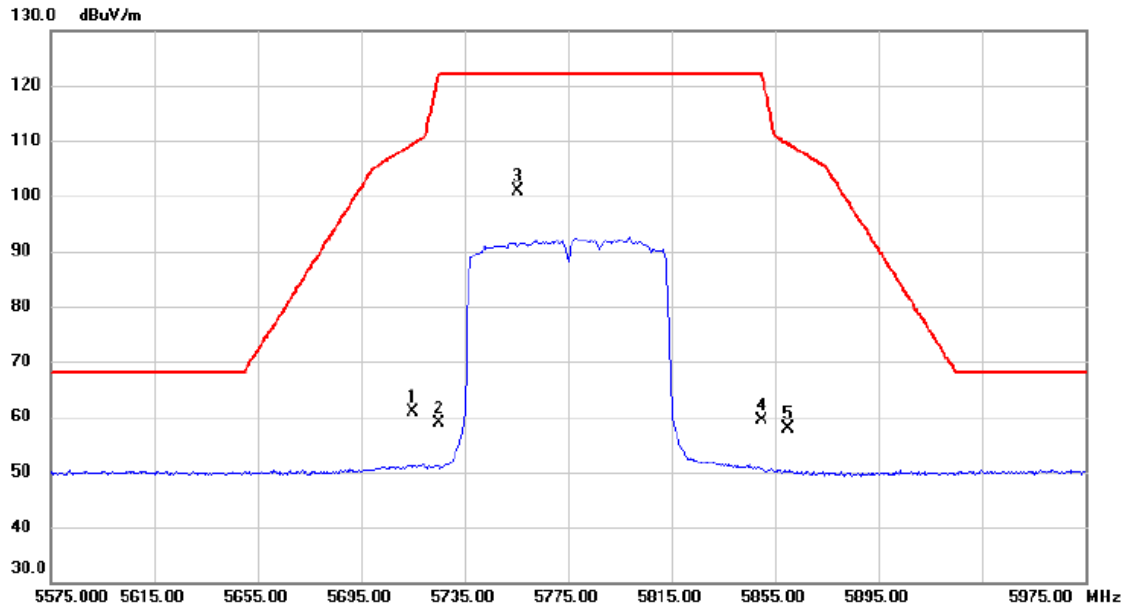

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5715.000	40.82	20.02	60.84	109.40	-48.56	peak	
2		5725.000	38.93	20.02	58.95	122.20	-63.25	peak	
3	*	5755.600	80.85	20.04	100.89	122.20	-21.31	peak	No Limit
4		5850.000	39.33	20.11	59.44	122.20	-62.76	peak	
5		5860.000	37.67	20.11	57.78	109.40	-51.62	peak	


### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

## Vertical

80 dBuV/m

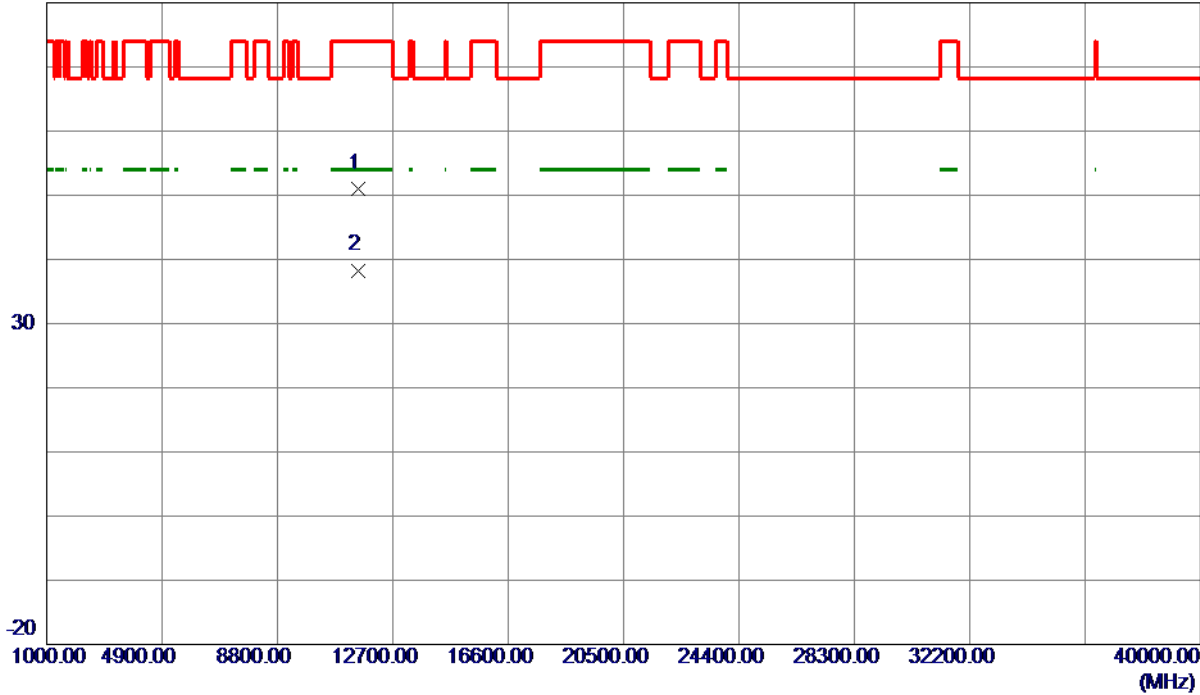

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	11549.5870	33.79	17.24	51.03	74.00	-22.97	Peak	
2 *	11549.7630	21.06	17.24	38.30	54.00	-15.70	AVG	


### REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AC (VHT80) Mode 5775 MHz

## Horizontal

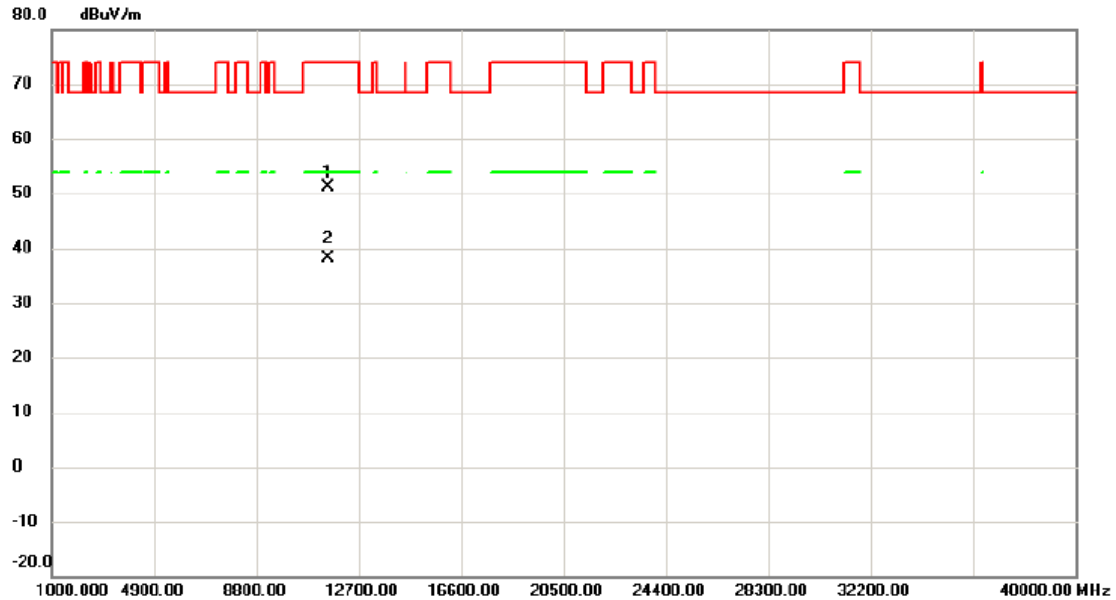


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		11549.246	34.02	17.23	51.25	74.00	-22.75	peak	
2	*	11549.784	21.00	17.23	38.23	54.00	-15.77	AVG	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5180 MHz

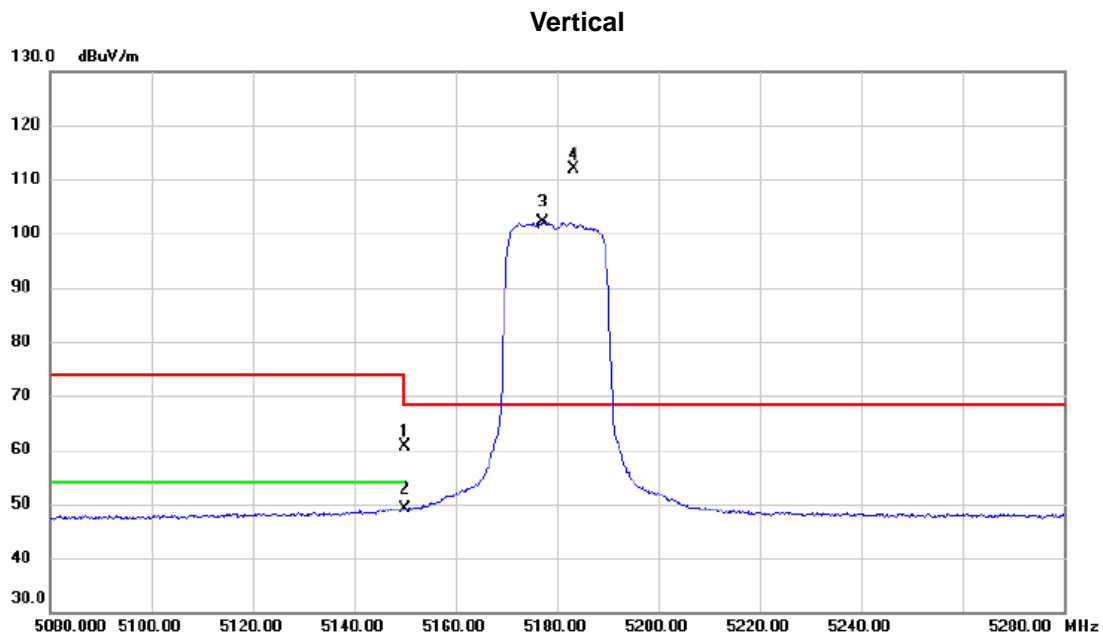


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	41.79	18.95	60.74	74.00	-13.26	peak	
2		5150.000	30.22	18.95	49.17	54.00	-4.83	AVG	
3	X	5177.100	83.00	19.02	102.02	68.30	33.72	AVG	No Limit
4	*	5183.400	92.85	19.03	111.88	68.30	43.58	peak	No Limit

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5180 MHz

## Horizontal

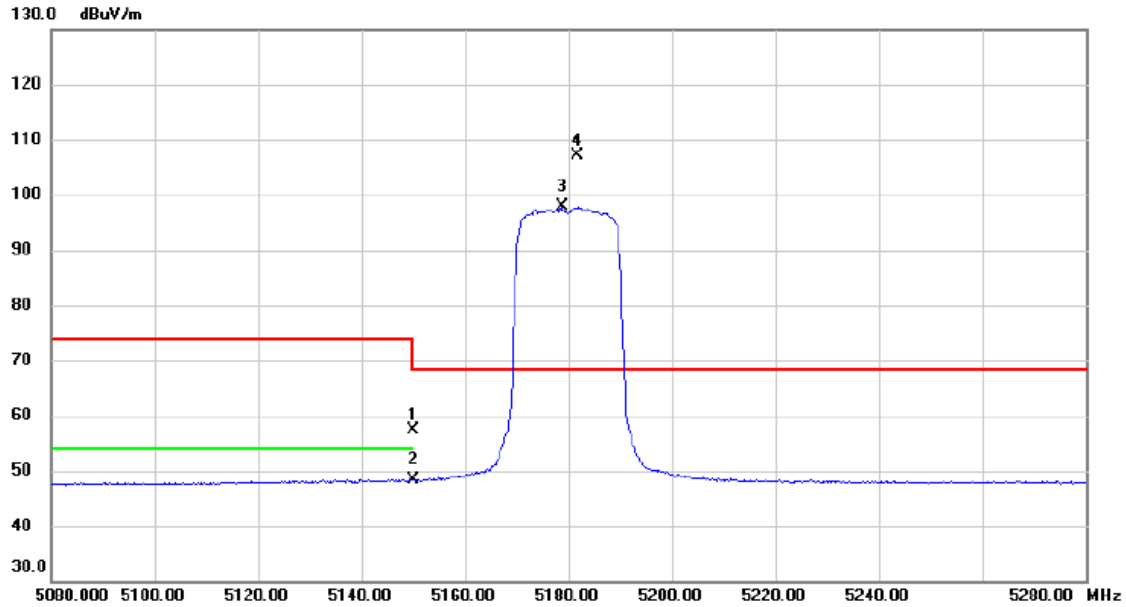


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		5150.000	38.44	18.95	57.39	74.00	-16.61	peak	
2		5150.000	29.31	18.95	48.26	54.00	-5.74	AVG	
3	X	5178.700	78.89	19.03	97.92	68.30	29.62	AVG	No Limit
4	*	5181.800	88.18	19.03	107.21	68.30	38.91	peak	No Limit

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5180 MHz

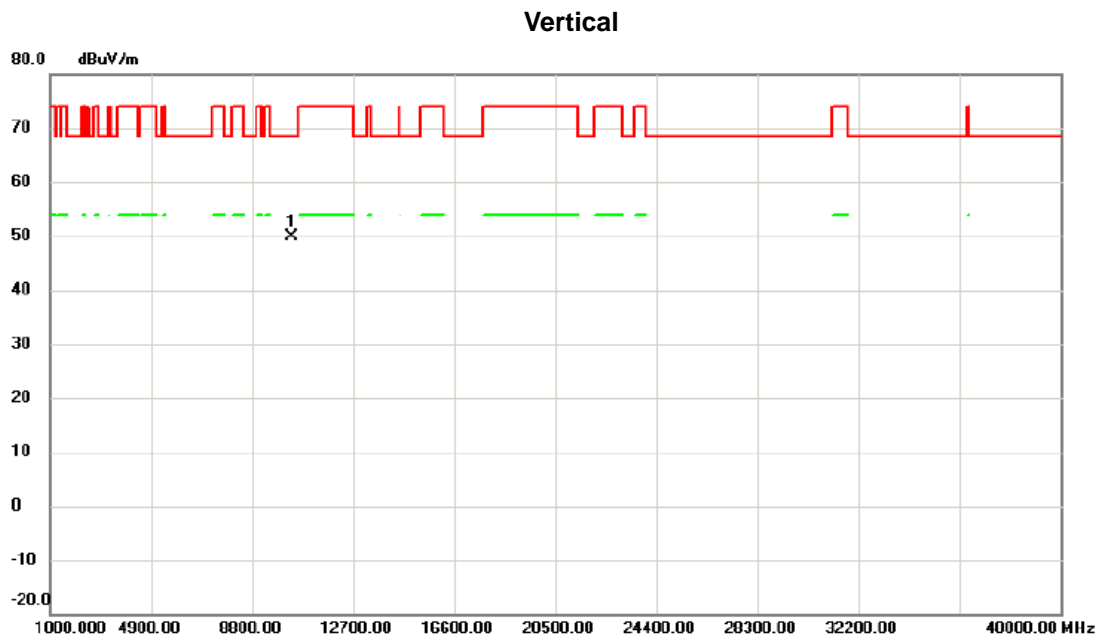


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10359.904	34.87	15.11	49.98	68.30	-18.32	peak	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5180 MHz

## Horizontal

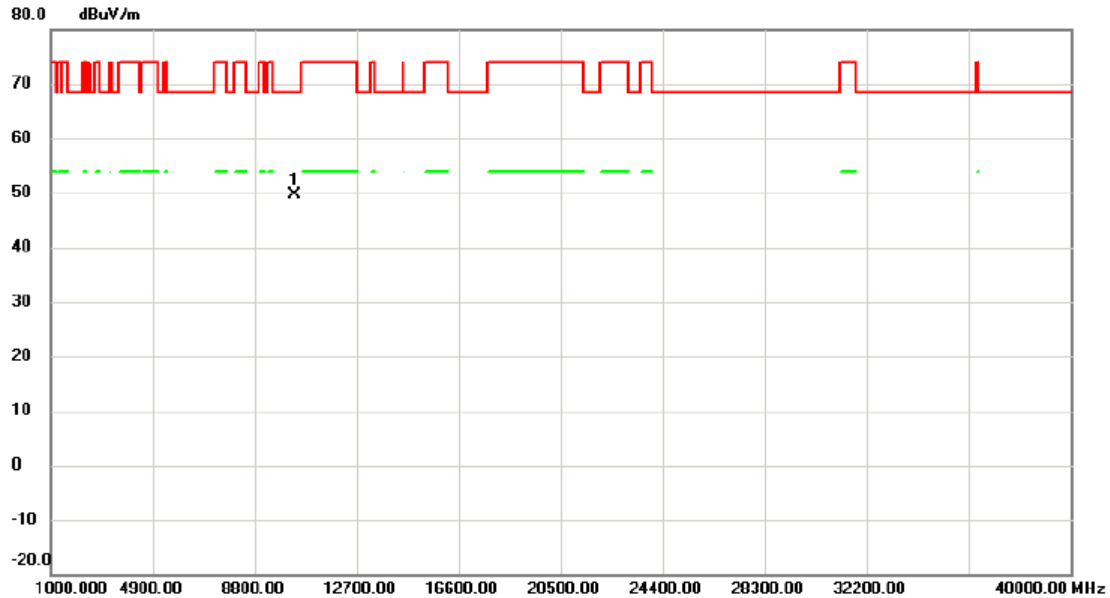


No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10359.887	34.47	15.11	49.58	68.30	-18.72	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5200 MHz

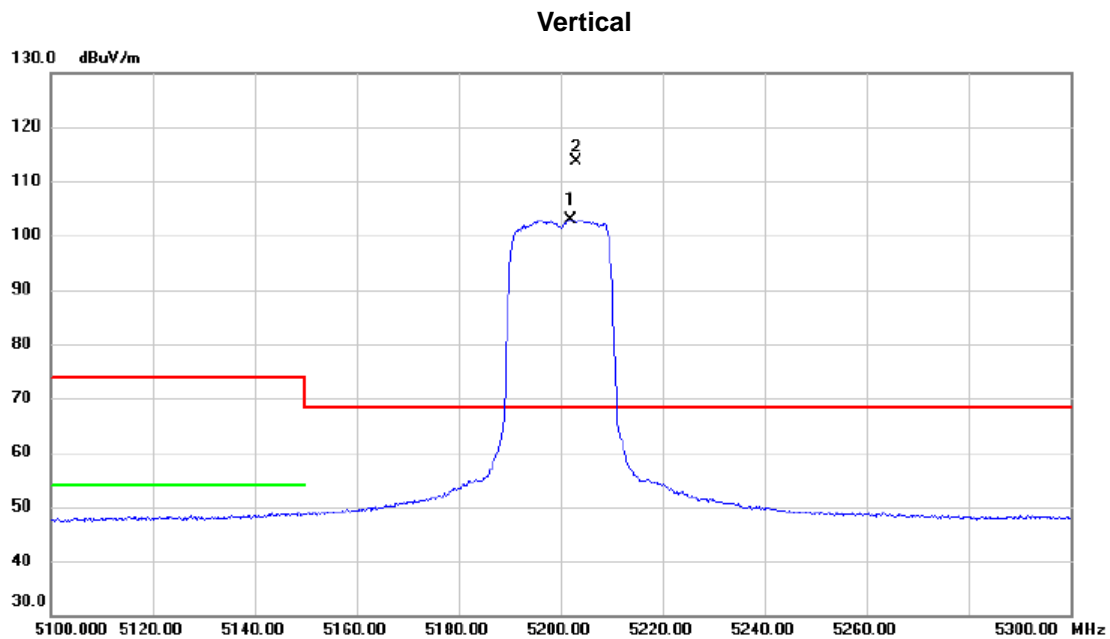

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	X	5202.100	83.83	19.08	102.91	68.30	34.61	AVG	No Limit
2	*	5203.200	94.51	19.08	113.59	68.30	45.29	peak	No Limit


## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.



Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5200 MHz

## Horizontal

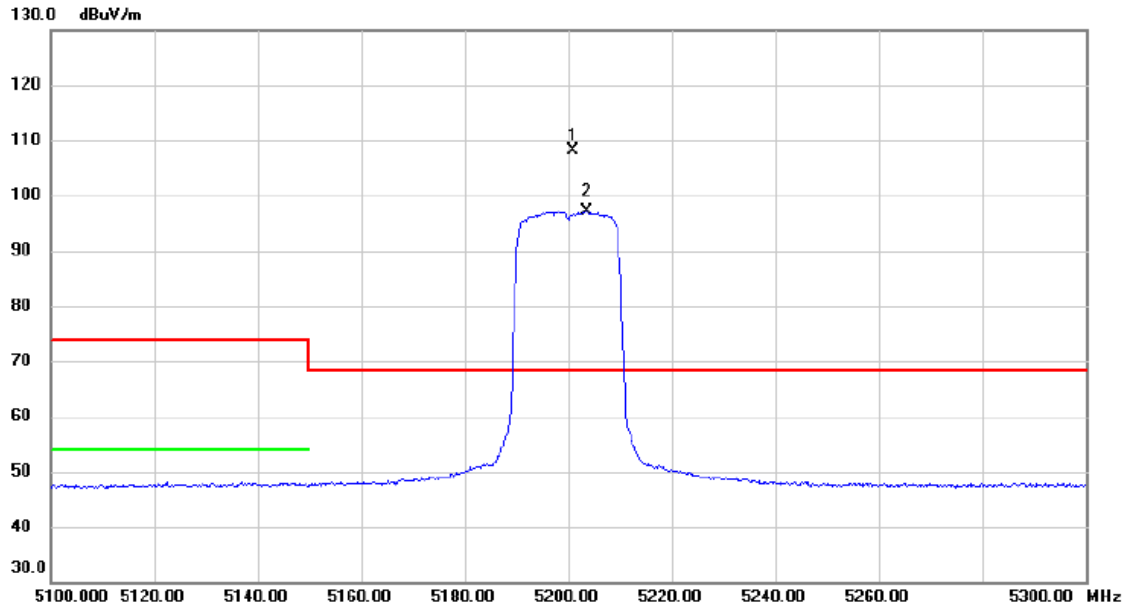


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5200.800	89.05	19.08	108.13	68.30	39.83	peak	No Limit
2	X	5203.500	78.05	19.08	97.13	68.30	28.83	AVG	No Limit

### REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5200 MHz

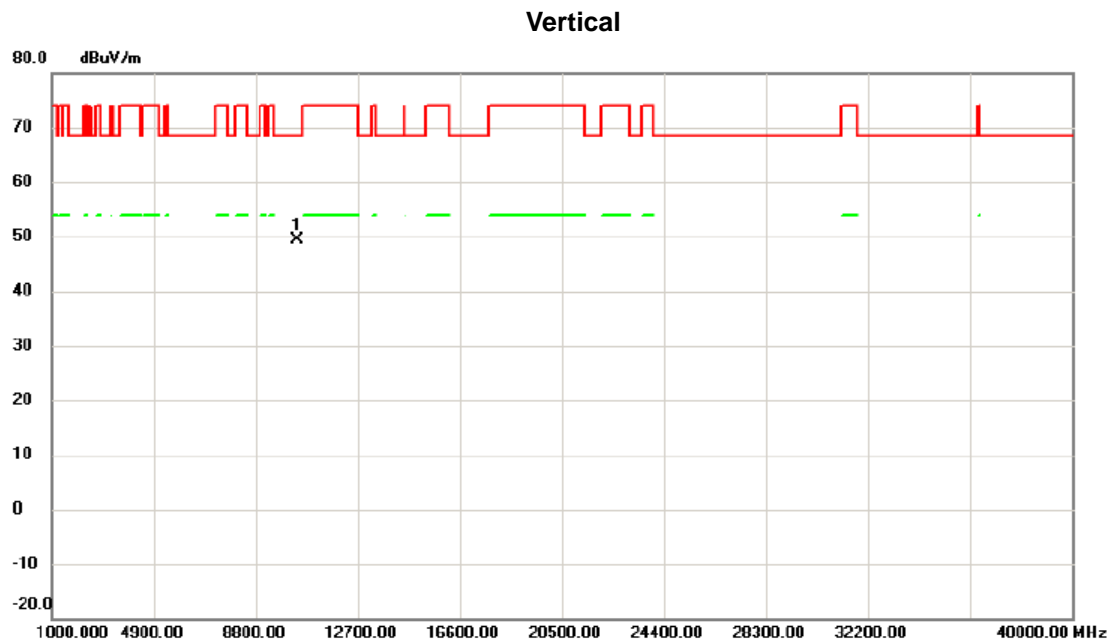


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10399.731	34.14	15.17	49.31	68.30	-18.99	peak	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5200 MHz

## Horizontal

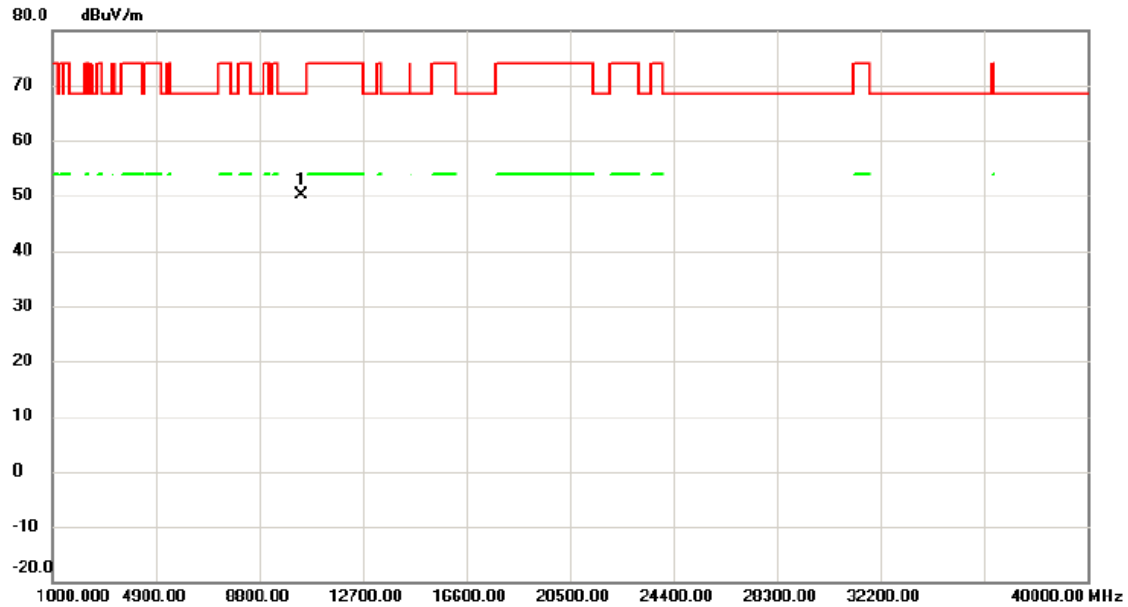


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10399.791	34.89	15.17	50.06	68.30	-18.24	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5240 MHz

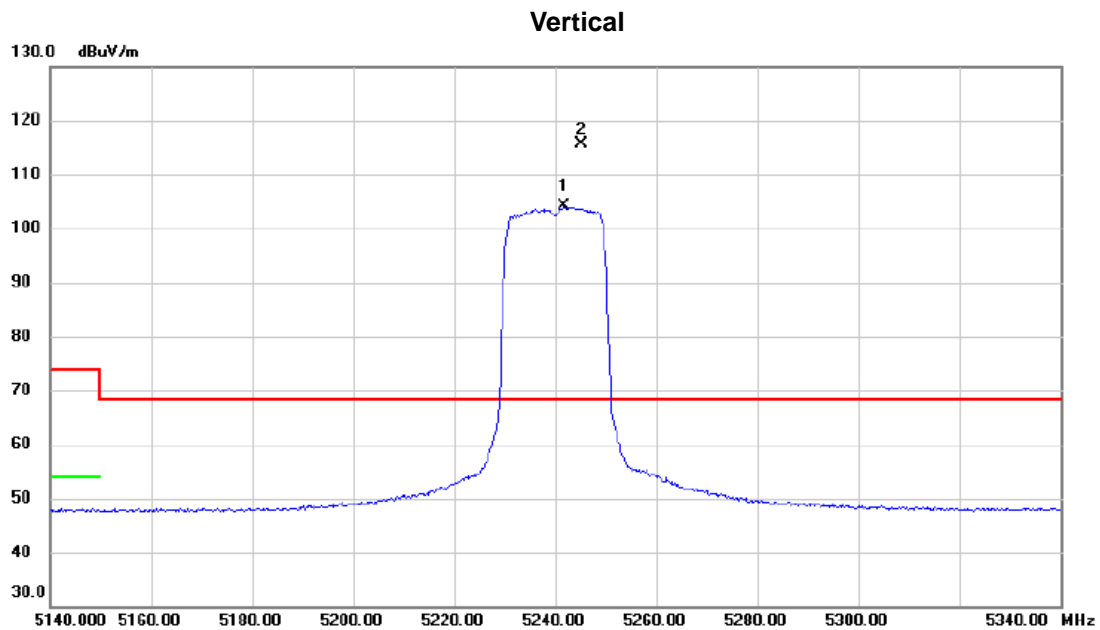


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	X	5241.800	84.83	19.18	104.01	68.30	35.71	AVG	No Limit
2	*	5245.300	96.47	19.20	115.67	68.30	47.37	peak	No Limit

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5240 MHz

## Horizontal

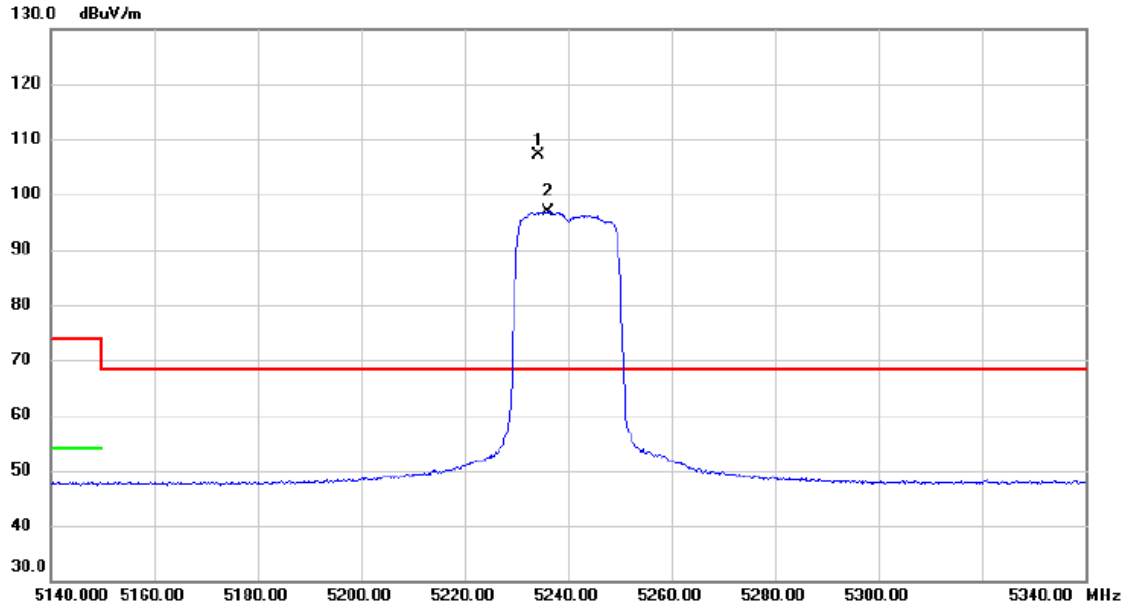


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	5234.200	88.04	19.16	107.20	68.30	38.90	peak	No Limit
2	X	5236.000	77.61	19.17	96.78	68.30	28.48	AVG	No Limit

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5240 MHz

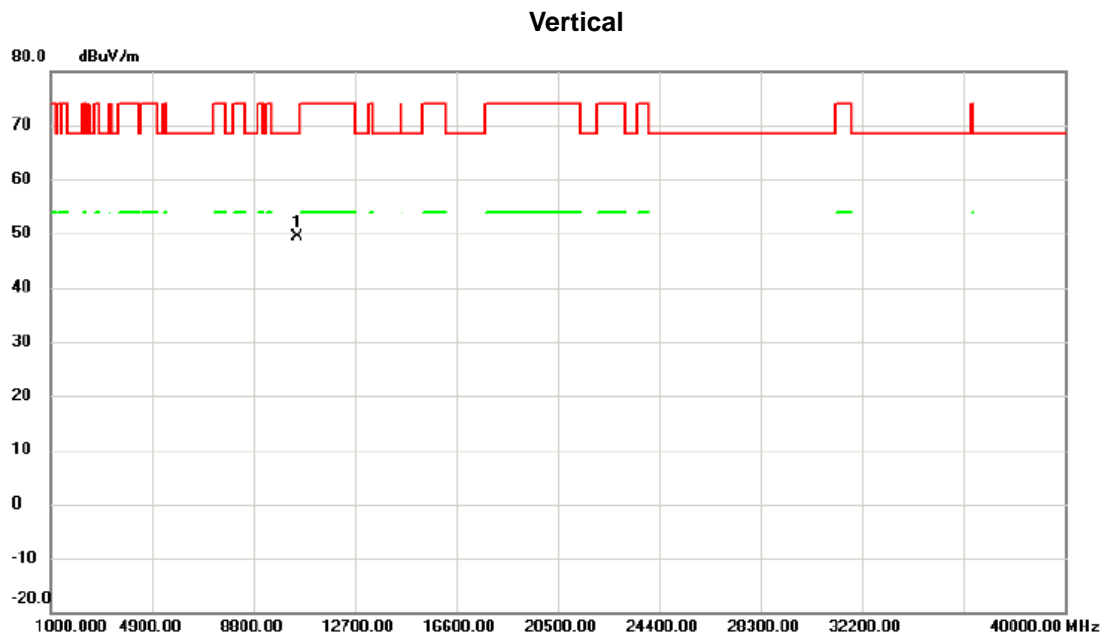


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10480.923	34.17	15.28	49.45	68.30	-18.85	peak	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5240 MHz

## Horizontal

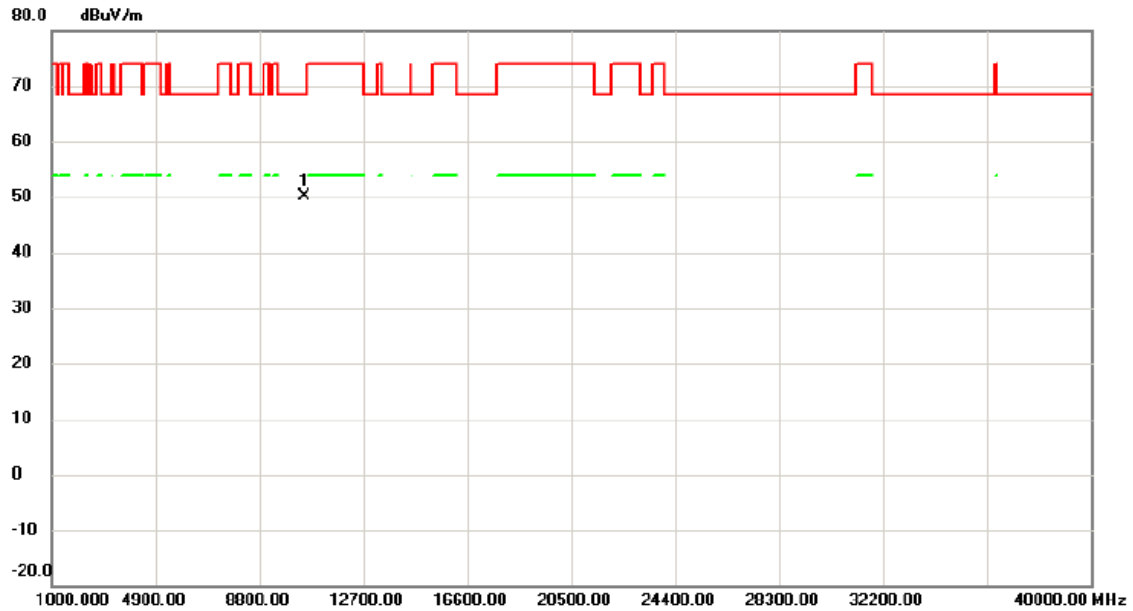


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10479.997	34.91	15.28	50.19	68.30	-18.11	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5190 MHz

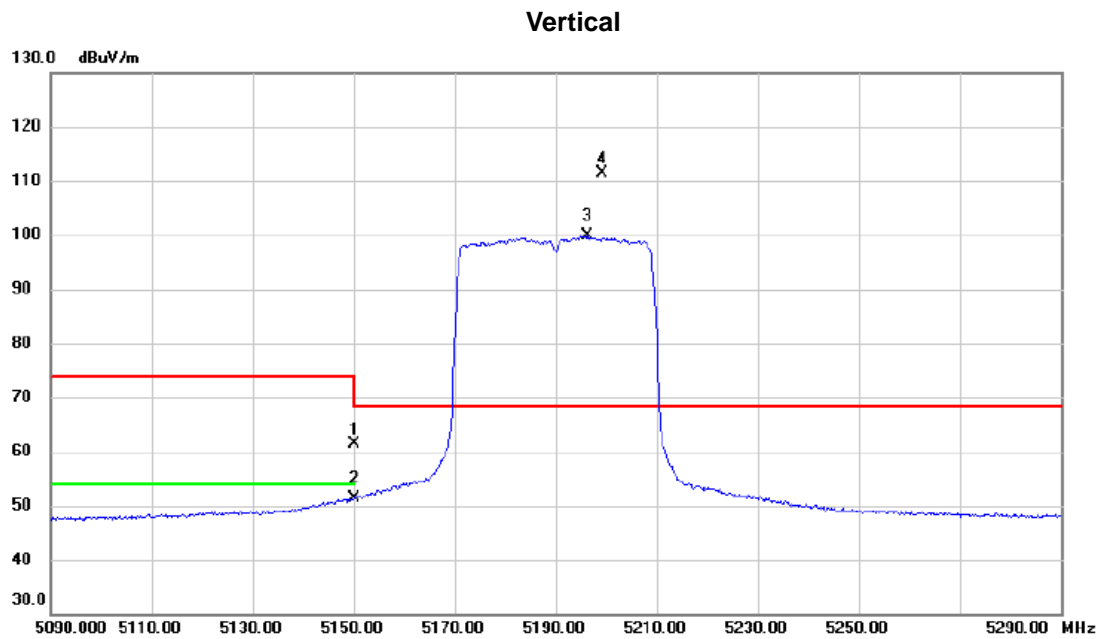

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	42.43	18.95	61.38	74.00	-12.62	peak	
2		5150.000	32.32	18.95	51.27	54.00	-2.73	AVG	
3	X	5196.200	80.78	19.07	99.85	68.30	31.55	AVG	No Limit
4	*	5199.100	92.42	19.08	111.50	68.30	43.20	peak	No Limit


## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.



Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5190 MHz

## Horizontal

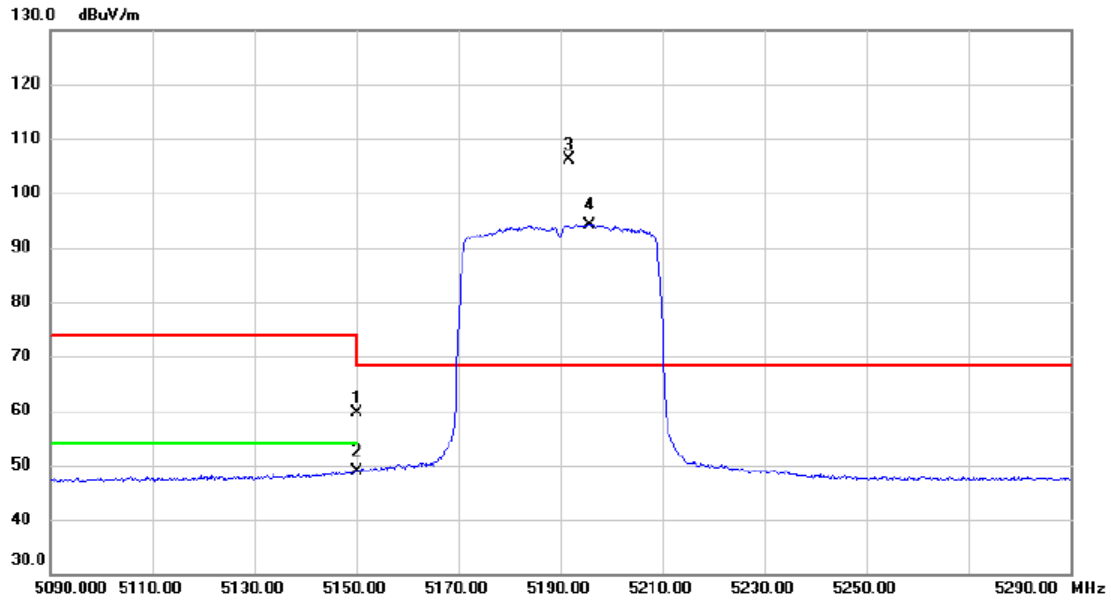


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	40.66	18.95	59.61	74.00	-14.39	peak	
2		5150.000	29.87	18.95	48.82	54.00	-5.18	AVG	
3	*	5191.600	87.01	19.06	106.07	68.30	37.77	peak	No Limit
4	X	5195.600	75.15	19.07	94.22	68.30	25.92	AVG	No Limit

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5190 MHz

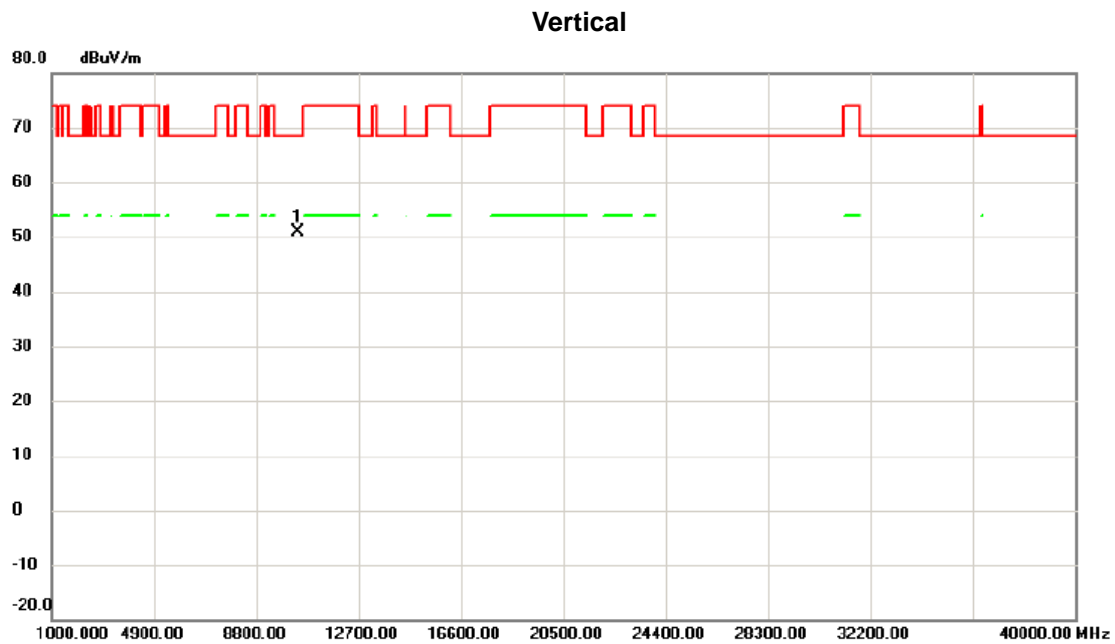


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10379.831	35.64	15.13	50.77	68.30	-17.53	peak	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5190 MHz

## Horizontal

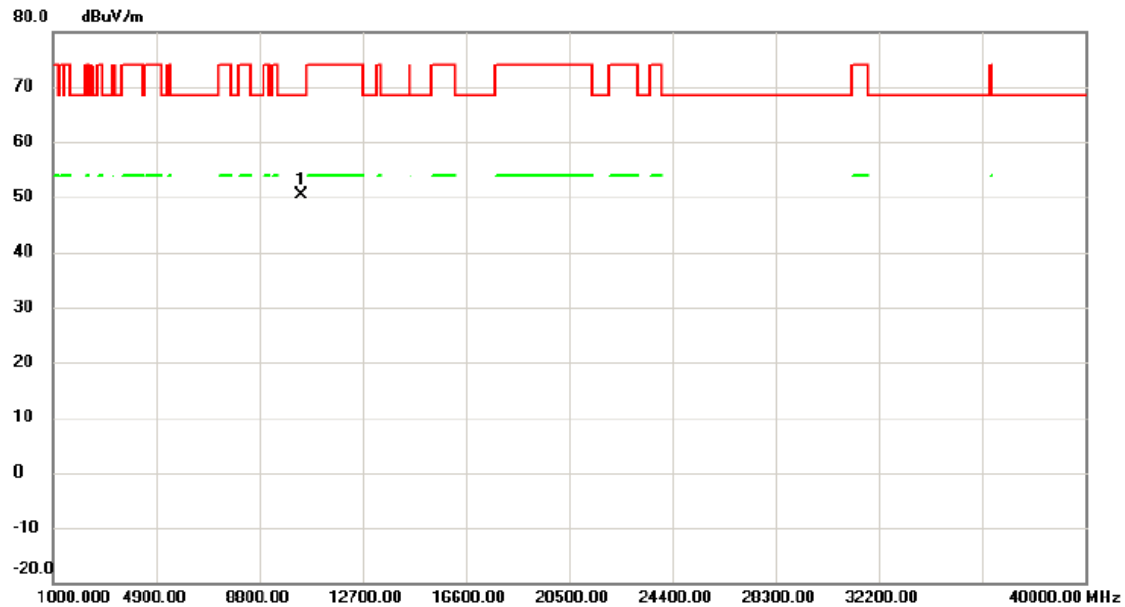


No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10380.250	35.16	15.13	50.29	68.30	-18.01	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5230 MHz

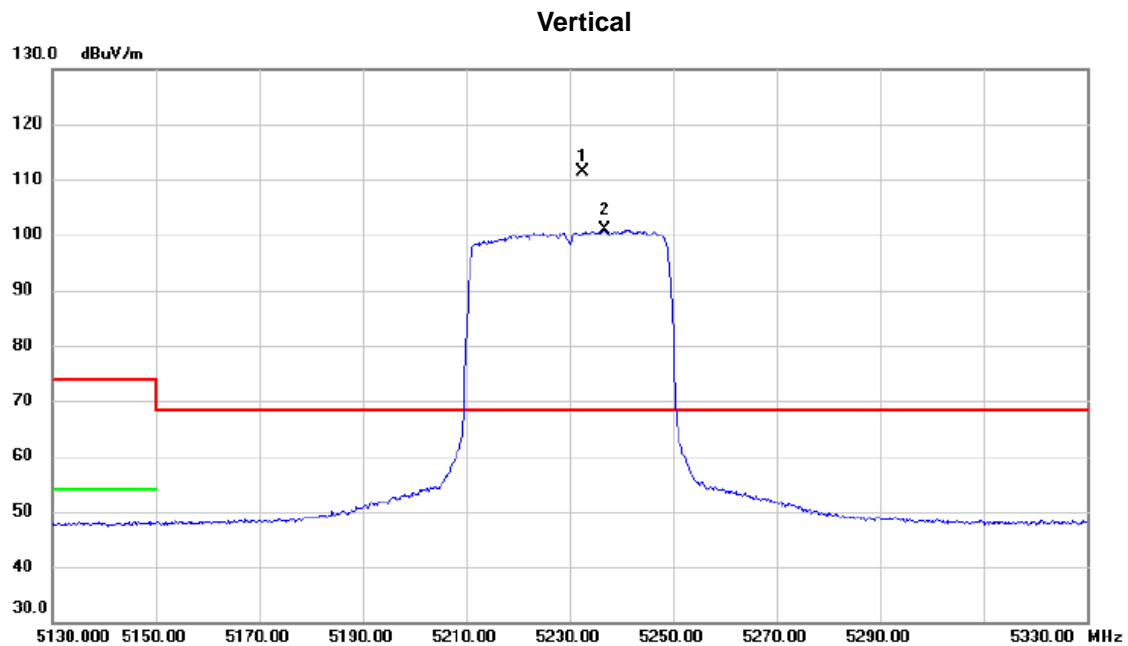


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	5232.600	92.10	19.16	111.26	68.30	42.96	peak	No Limit
2	X	5236.700	81.74	19.17	100.91	68.30	32.61	AVG	No Limit

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5230 MHz

## Horizontal

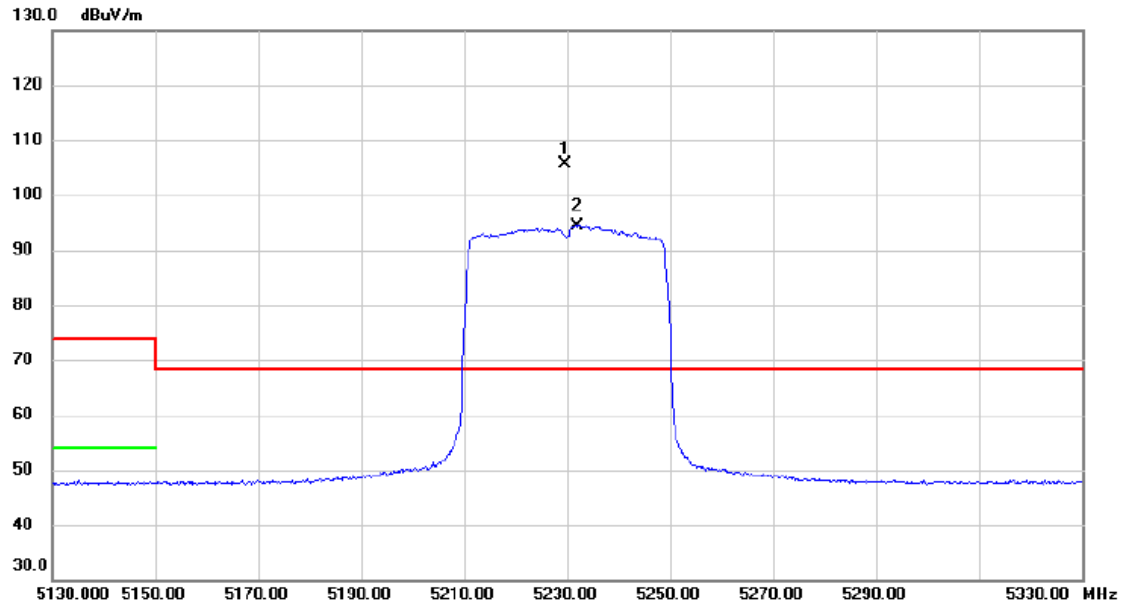


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5229.500	86.51	19.15	105.66	68.30	37.36	peak	No Limit
2	X	5232.100	75.28	19.16	94.44	68.30	26.14	AVG	No Limit

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5230 MHz

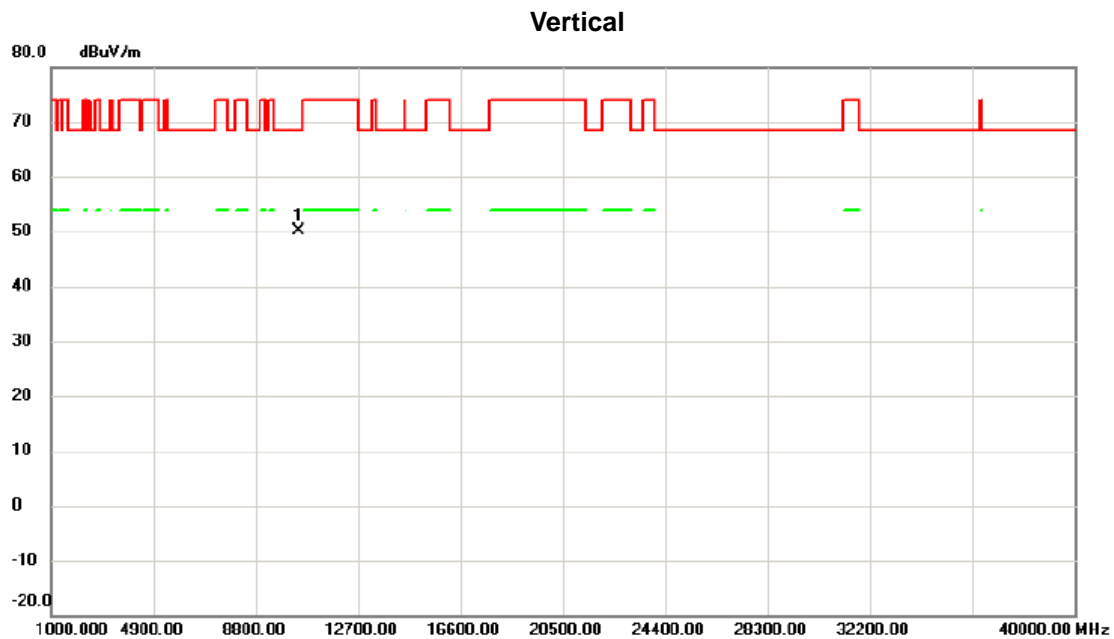


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10460.124	34.81	15.26	50.07	68.30	-18.23	peak	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5230 MHz

## Horizontal

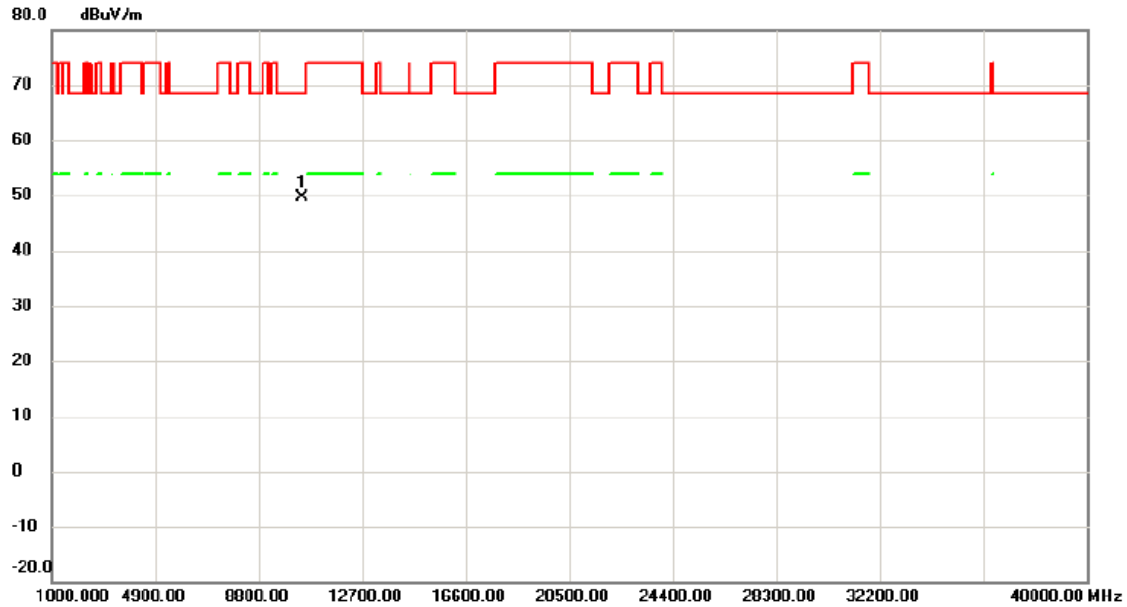


No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10459.944	34.48	15.26	49.74	68.30	-18.56	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE80) Mode 5210 MHz

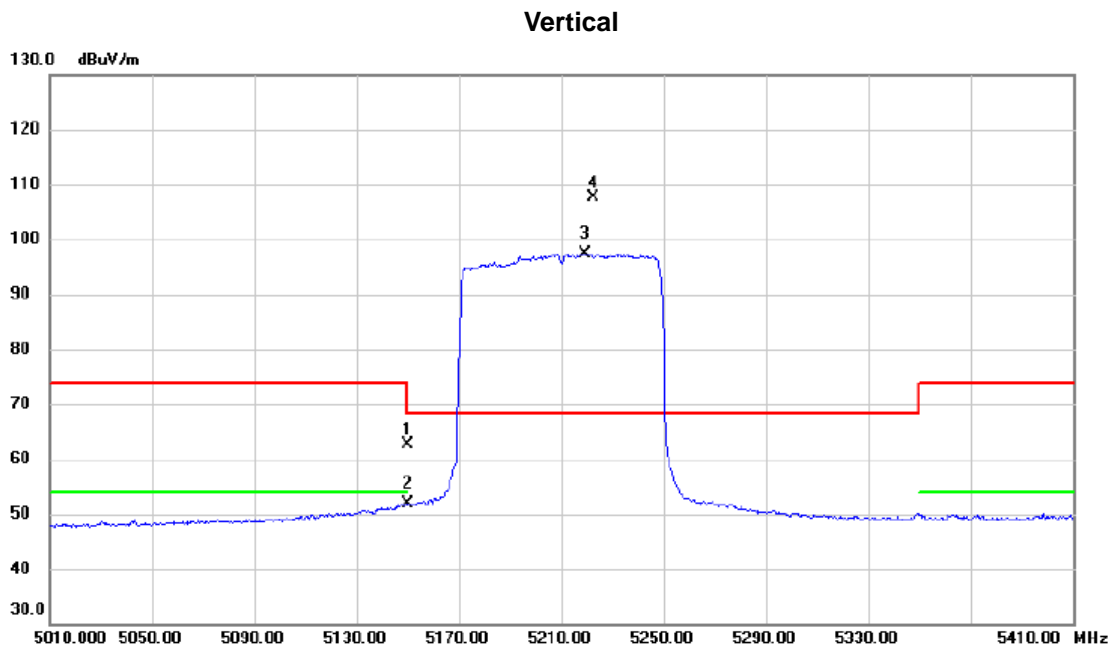

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		5150.000	43.66	18.95	62.61	74.00	-11.39	peak	
2		5150.000	32.82	18.95	51.77	54.00	-2.23	AVG	
3	X	5219.200	78.30	19.13	97.43	68.30	29.13	AVG	No Limit
4	*	5222.400	88.46	19.13	107.59	68.30	39.29	peak	No Limit


## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.



Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE80) Mode 5210 MHz

## Horizontal

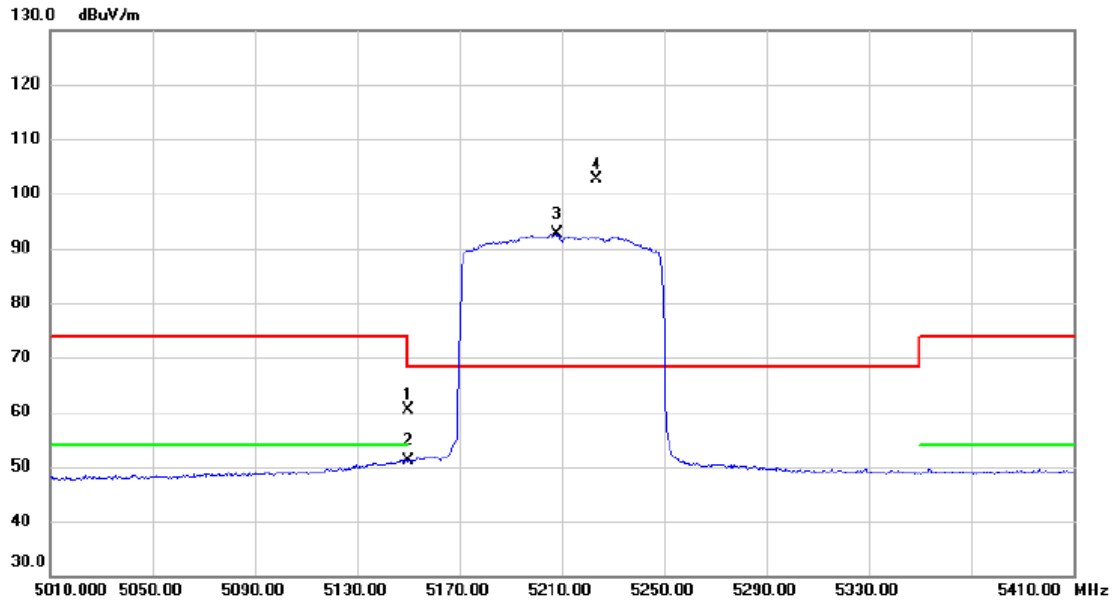


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	41.49	18.95	60.44	74.00	-13.56	peak	
2		5150.000	32.08	18.95	51.03	54.00	-2.97	AVG	
3	X	5208.000	73.55	19.10	92.65	68.30	24.35	AVG	No Limit
4	*	5223.400	83.51	19.13	102.64	68.30	34.34	peak	No Limit

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE80) Mode 5210 MHz

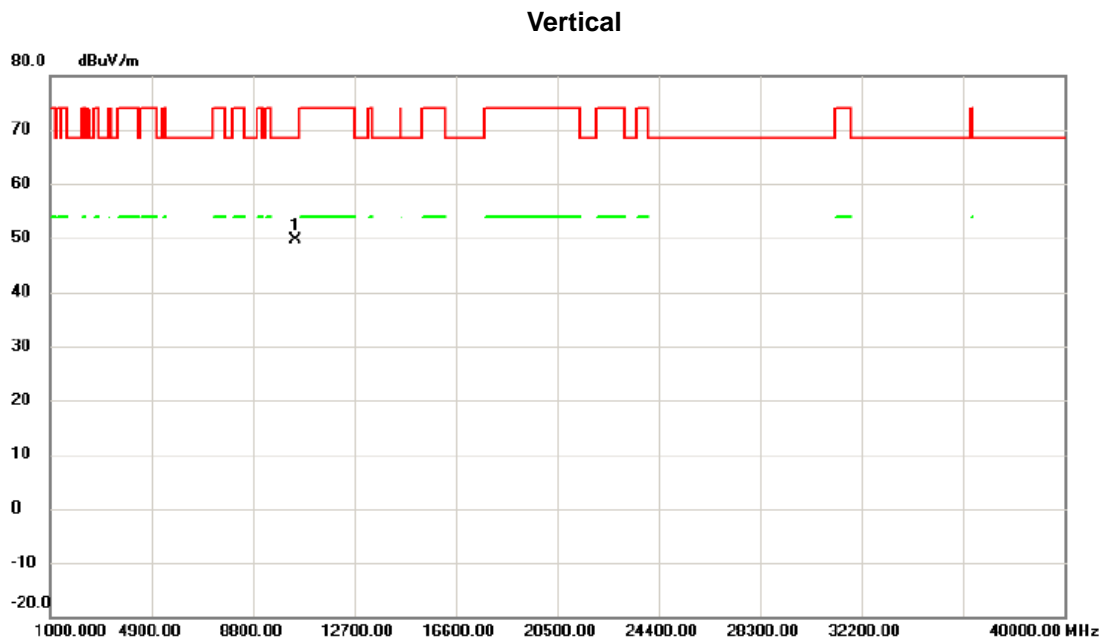


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin	
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector Comment
1	*	10420.119	34.50	15.21	49.71	68.30	-18.59	peak

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE80) Mode 5210 MHz

## Horizontal

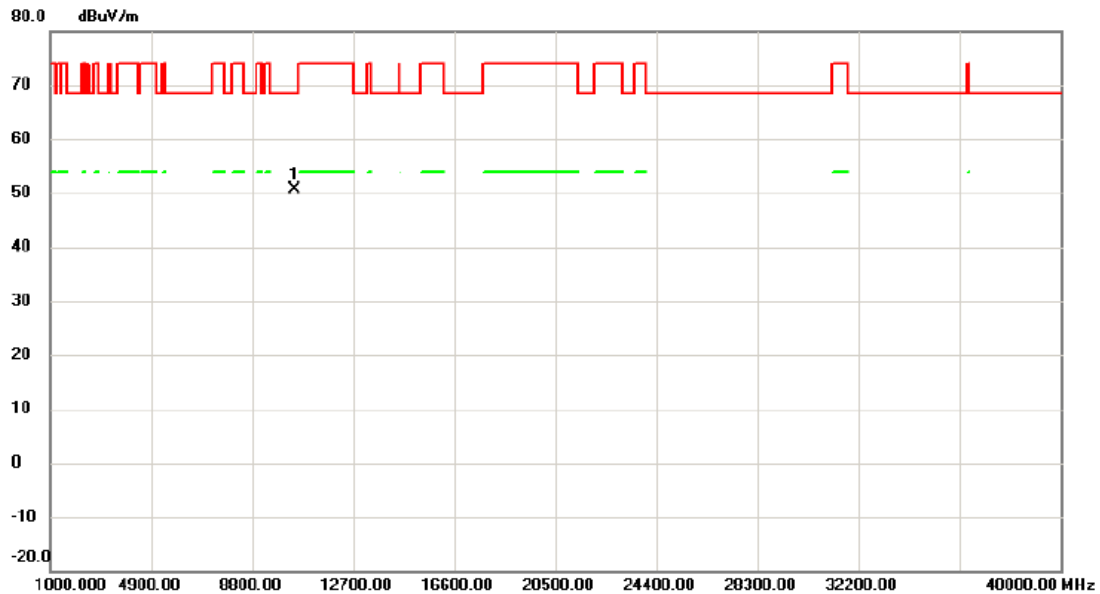


No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10419.917	35.30	15.21	50.51	68.30	-17.79	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5745 MHz

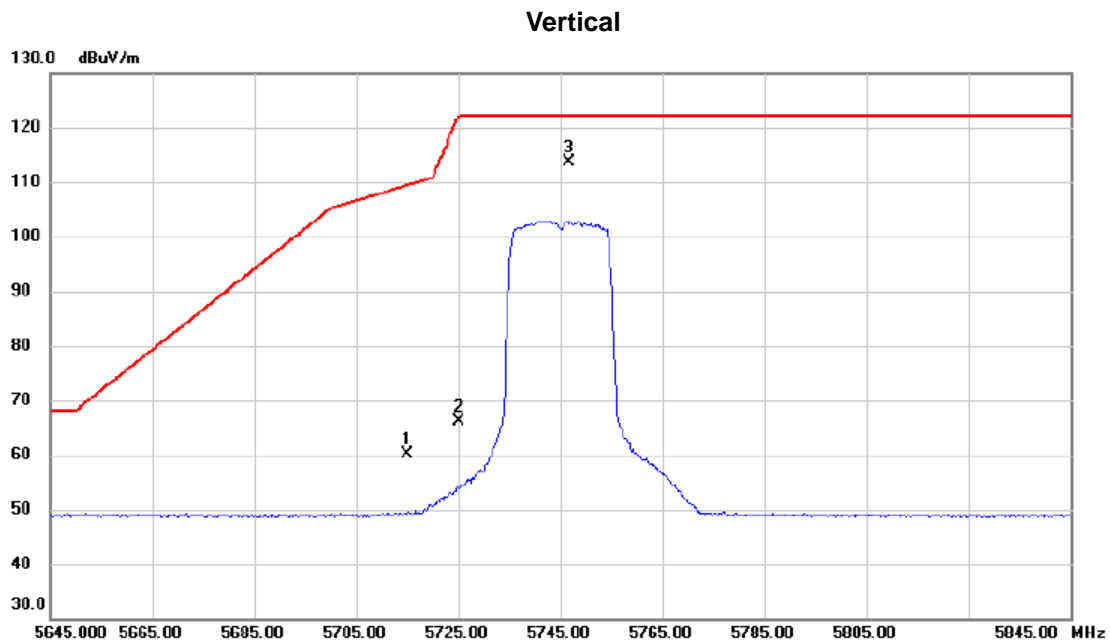


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		5715.000	40.23	20.02	60.25	109.40	-49.15	peak	
2		5725.000	46.21	20.02	66.23	122.20	-55.97	peak	
3	*	5746.800	93.63	20.04	113.67	122.20	-8.53	peak	No Limit

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5745 MHz

## Horizontal

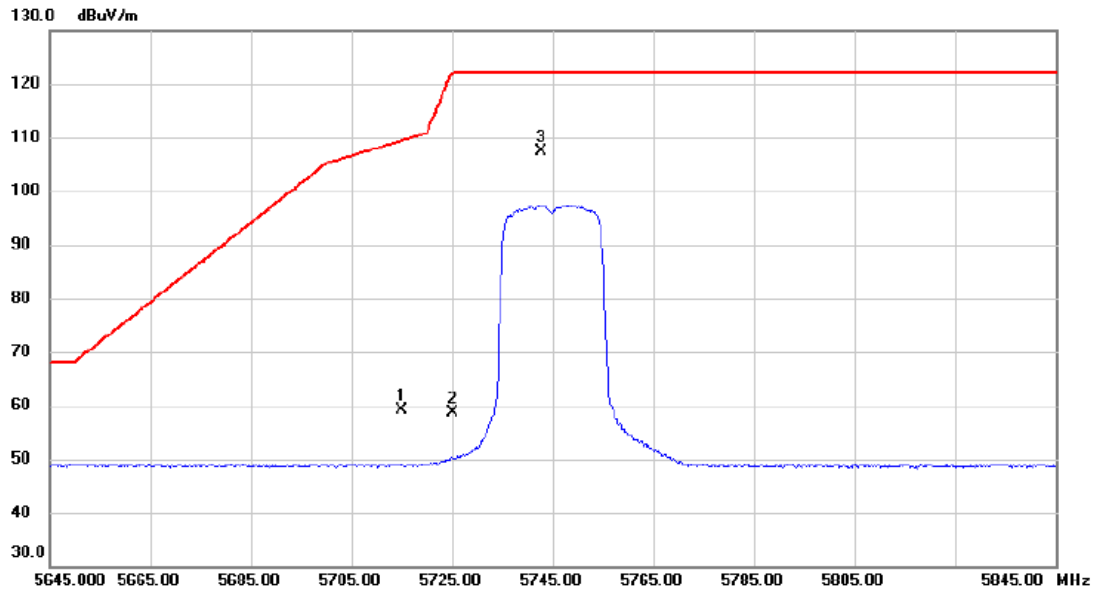


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5715.000	39.05	20.02	59.07	109.40	-50.33	peak	
2		5725.000	38.58	20.02	58.60	122.20	-63.60	peak	
3	*	5742.700	87.38	20.03	107.41	122.20	-14.79	peak	No Limit

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5745 MHz

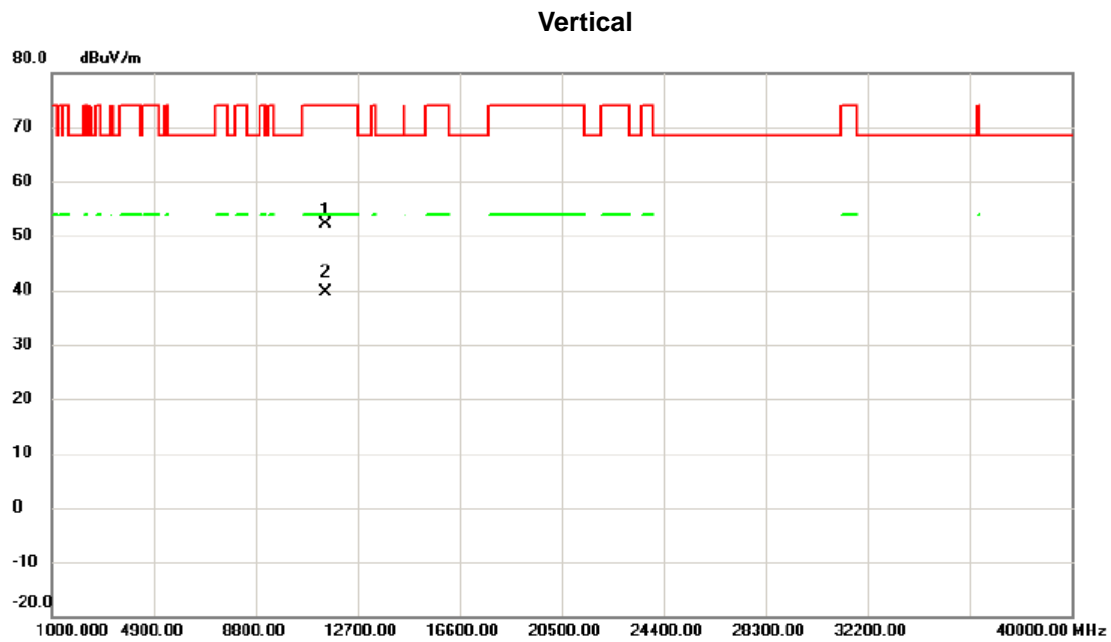


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		11489.670	34.97	17.16	52.13	74.00	-21.87	peak	
2	*	11490.092	22.36	17.16	39.52	54.00	-14.48	AVG	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5745 MHz

## Horizontal

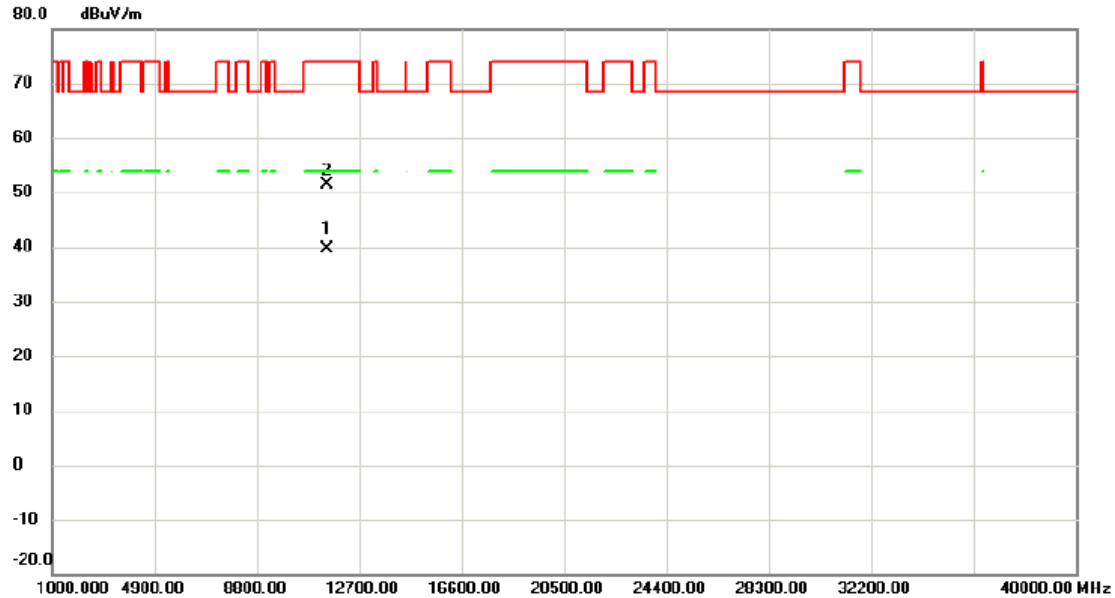


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	11490.048	22.44	17.16	39.60	54.00	-14.40	AVG	
2		11490.390	34.30	17.16	51.46	74.00	-22.54	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5785 MHz

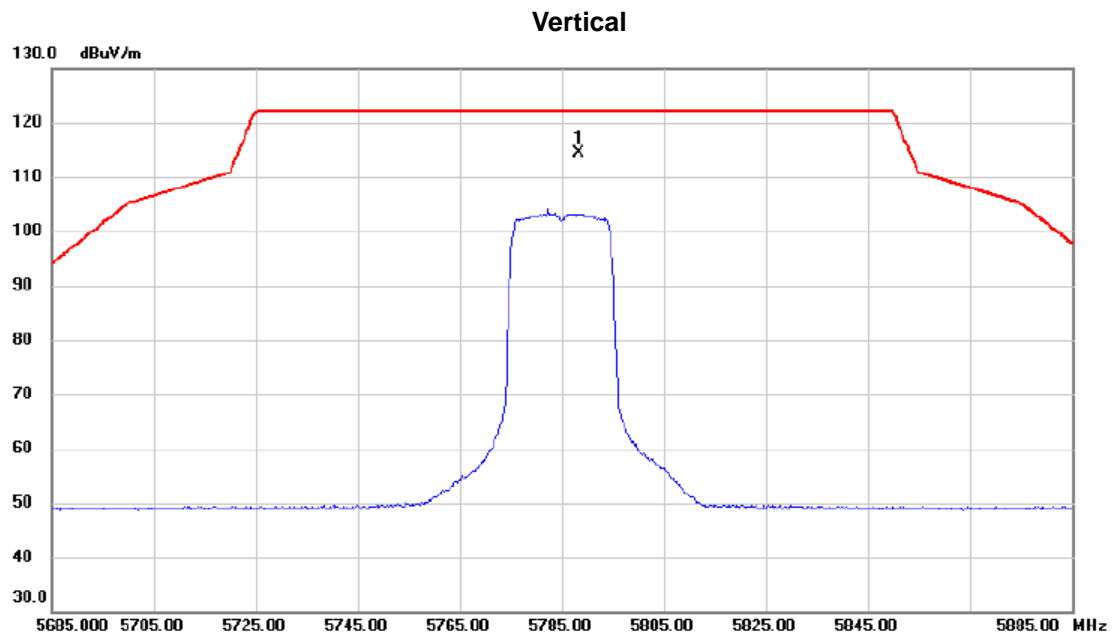

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	5788.400	94.30	20.06	114.36	122.20	-7.84	peak	No Limit


## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.



Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5785 MHz

## Horizontal

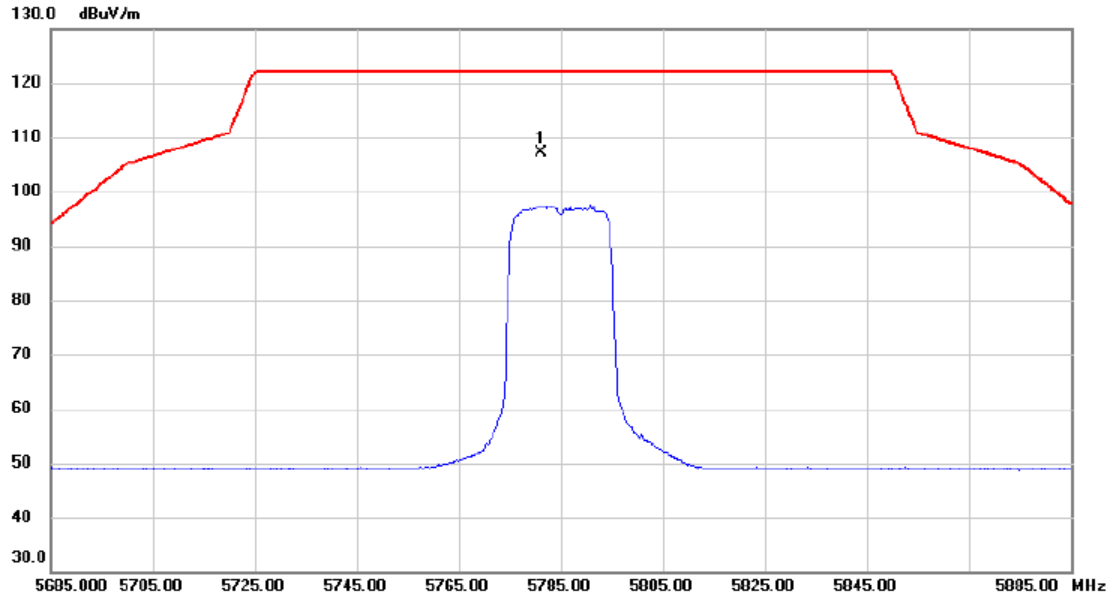


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	5781.100	87.06	20.06	107.12	122.20	-15.08	peak	No Limit

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5785 MHz

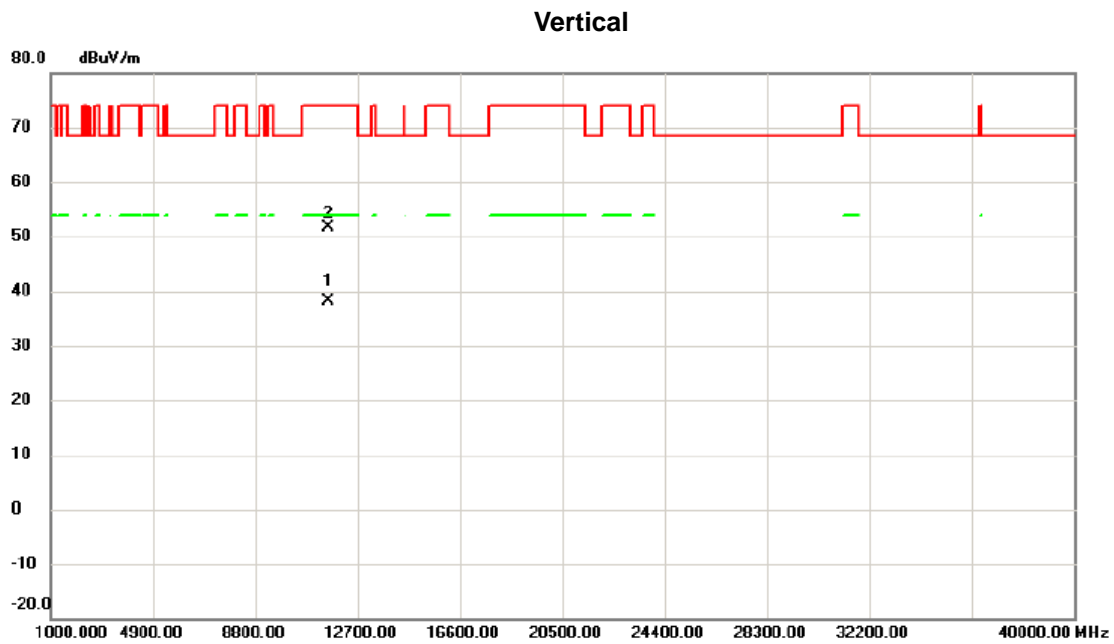


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	11569.622	20.79	17.25	38.04	54.00	-15.96	AVG	
2		11570.146	34.26	17.25	51.51	74.00	-22.49	peak	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5785 MHz

## Horizontal

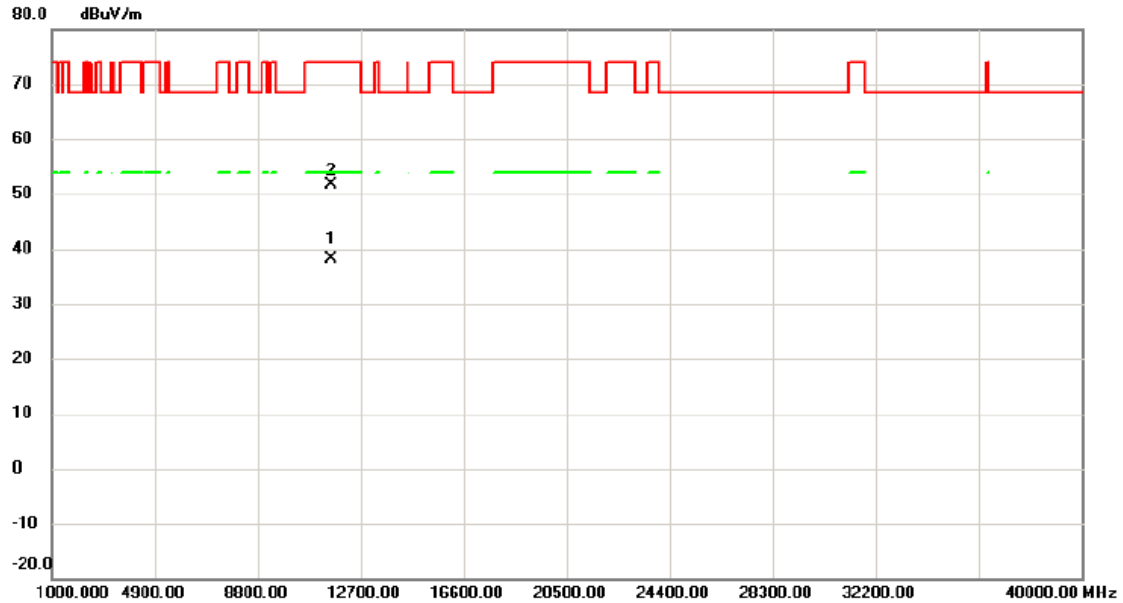


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	11570.128	20.95	17.25	38.20	54.00	-15.80	AVG	
2		11570.449	34.40	17.25	51.65	74.00	-22.35	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5825 MHz

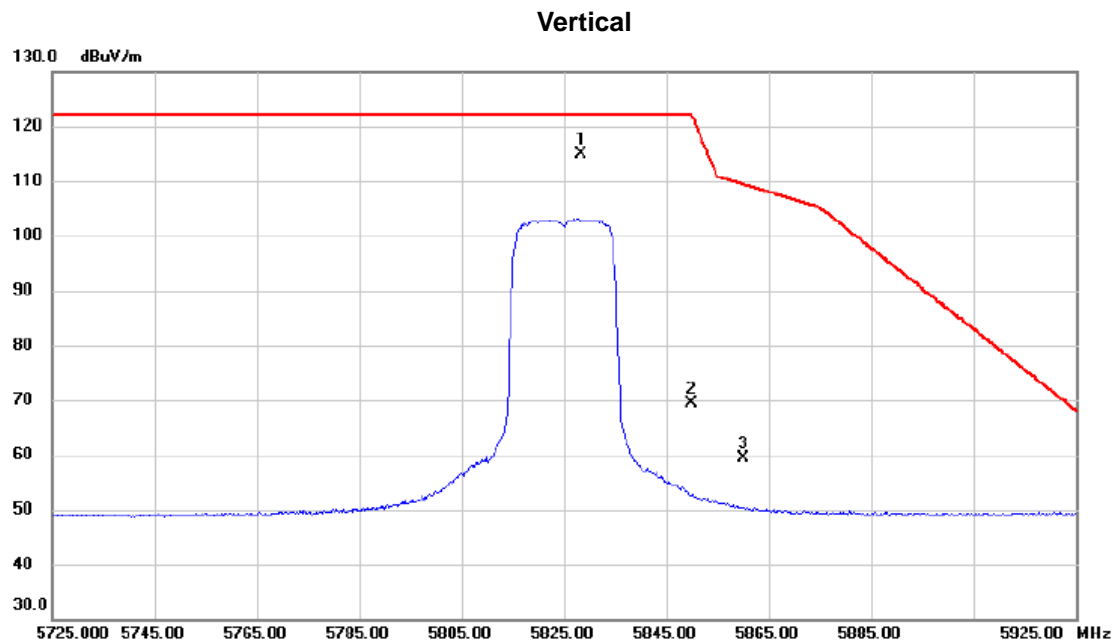


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5828.400	94.72	20.10	114.82	122.20	-7.38	peak	No Limit
2		5850.000	49.36	20.11	69.47	122.20	-52.73	peak	
3		5860.000	39.17	20.11	59.28	109.40	-50.12	peak	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5825 MHz

## Horizontal

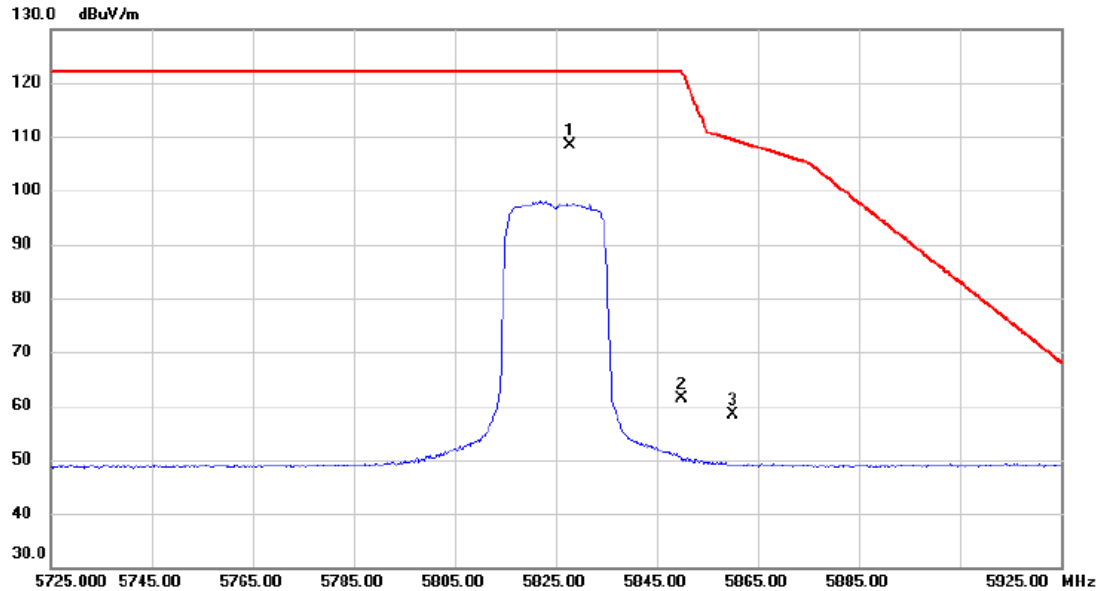


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5827.800	88.31	20.10	108.41	122.20	-13.79	peak	No Limit
2		5850.000	41.24	20.11	61.35	122.20	-60.85	peak	
3		5860.000	38.25	20.11	58.36	109.40	-51.04	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5825 MHz

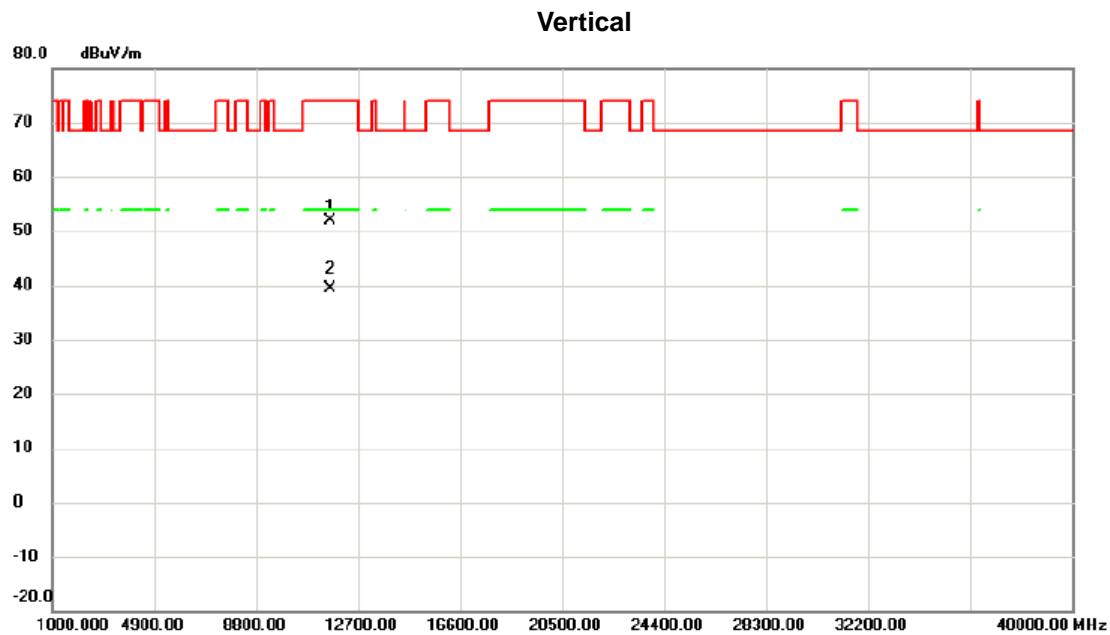


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		11649.928	34.60	17.32	51.92	74.00	-22.08	peak	
2	*	11649.986	22.08	17.32	39.40	54.00	-14.60	AVG	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE20) Mode 5825 MHz

## Horizontal

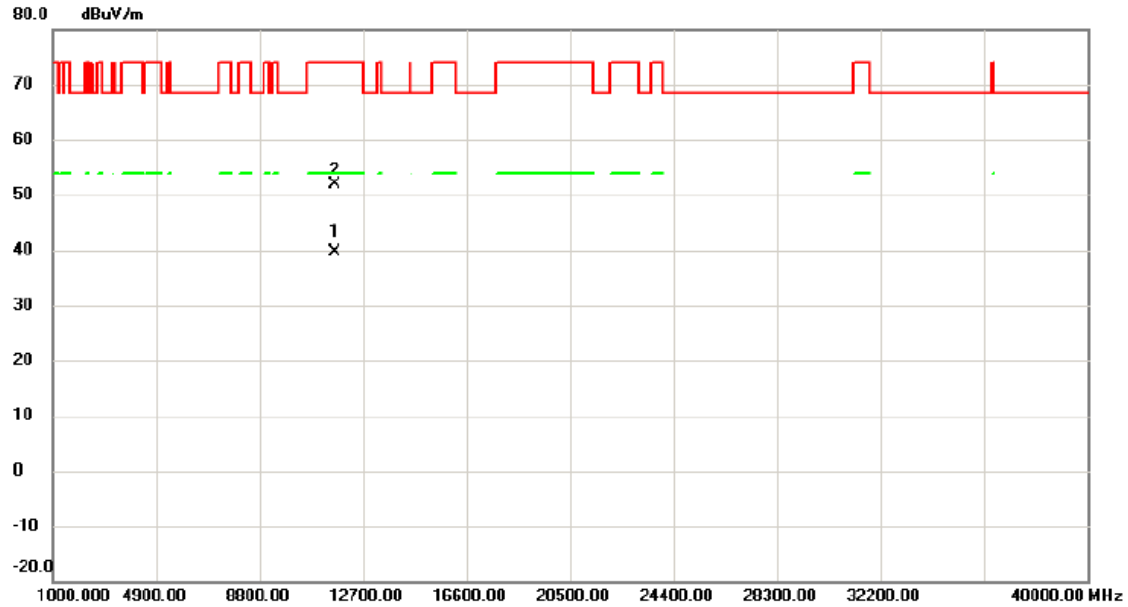


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	11649.860	22.22	17.32	39.54	54.00	-14.46	AVG	
2		11649.995	34.49	17.32	51.81	74.00	-22.19	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE40) Mode 5755 MHz

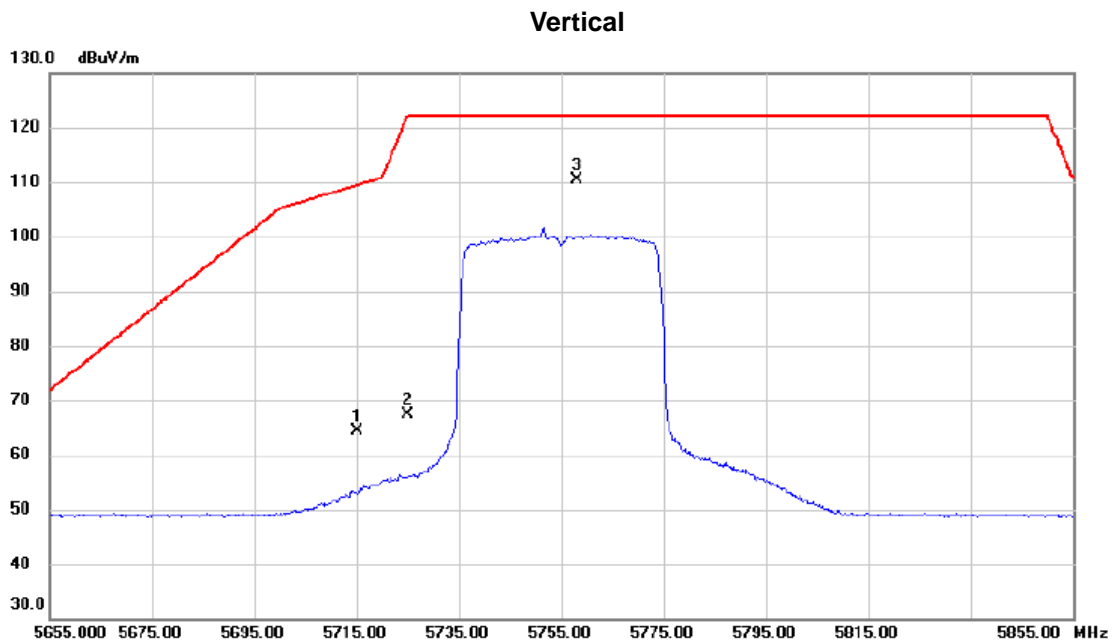

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5715.000	44.36	20.02	64.38	109.40	-45.02	peak	
2		5725.000	47.25	20.02	67.27	122.20	-54.93	peak	
3	*	5758.200	90.41	20.05	110.46	122.20	-11.74	peak	No Limit


## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.



Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE40) Mode 5755 MHz

## Horizontal

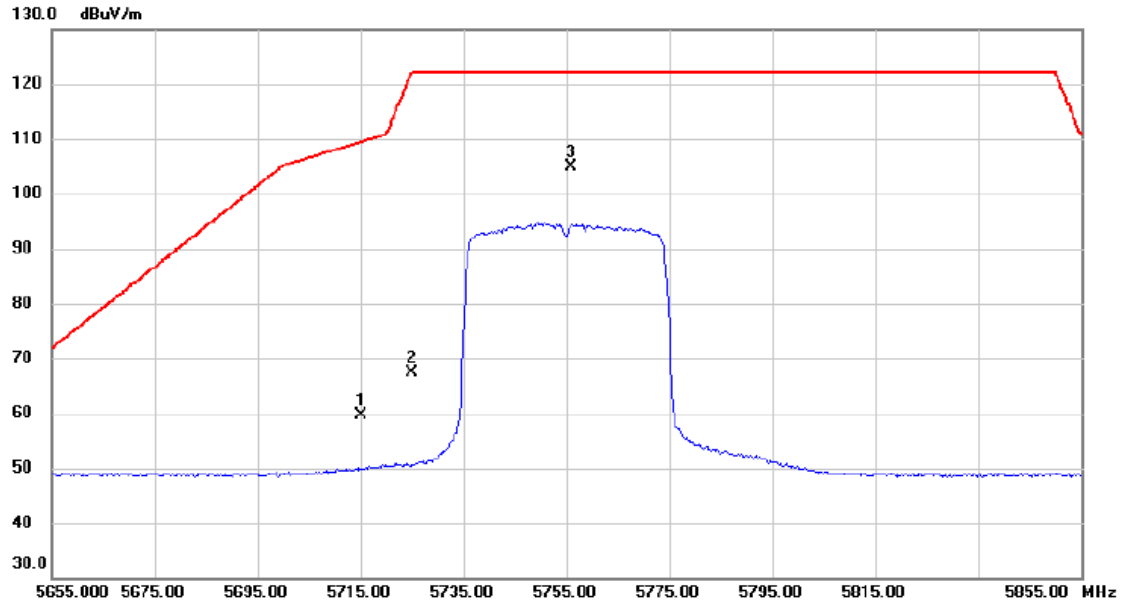


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5715.000	39.73	20.02	59.75	109.40	-49.65	peak	
2		5725.000	47.40	20.02	67.42	122.20	-54.78	peak	
3	*	5755.900	84.96	20.04	105.00	122.20	-17.20	peak	No Limit

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE40) Mode 5755 MHz

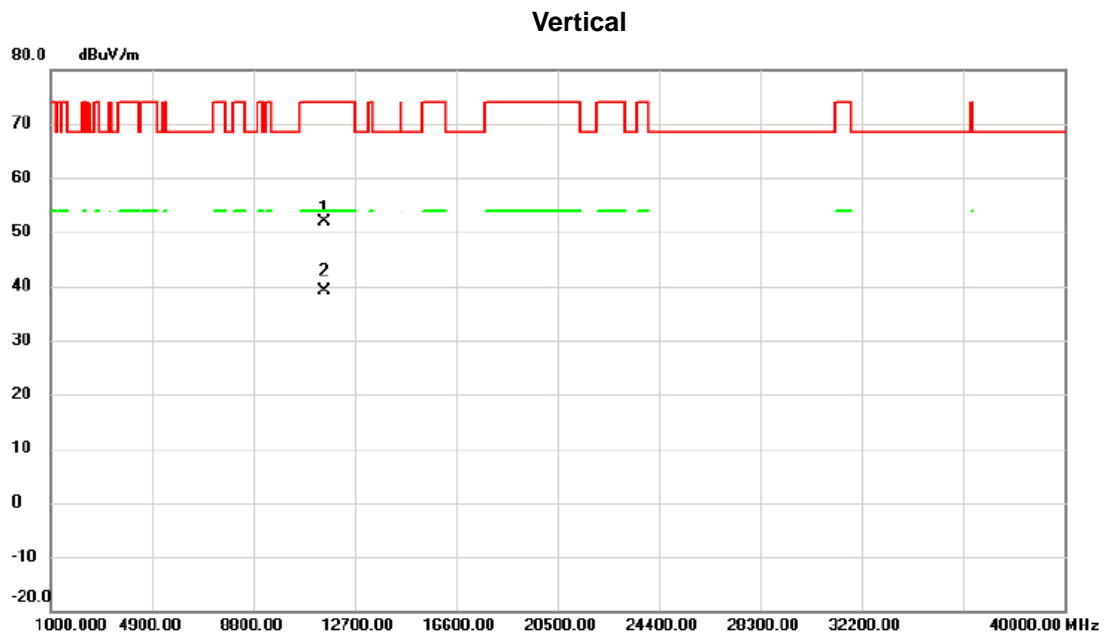


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		11509.415	34.75	17.20	51.95	74.00	-22.05	peak	
2	*	11509.793	21.99	17.20	39.19	54.00	-14.81	AVG	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE40) Mode 5755 MHz

## Horizontal

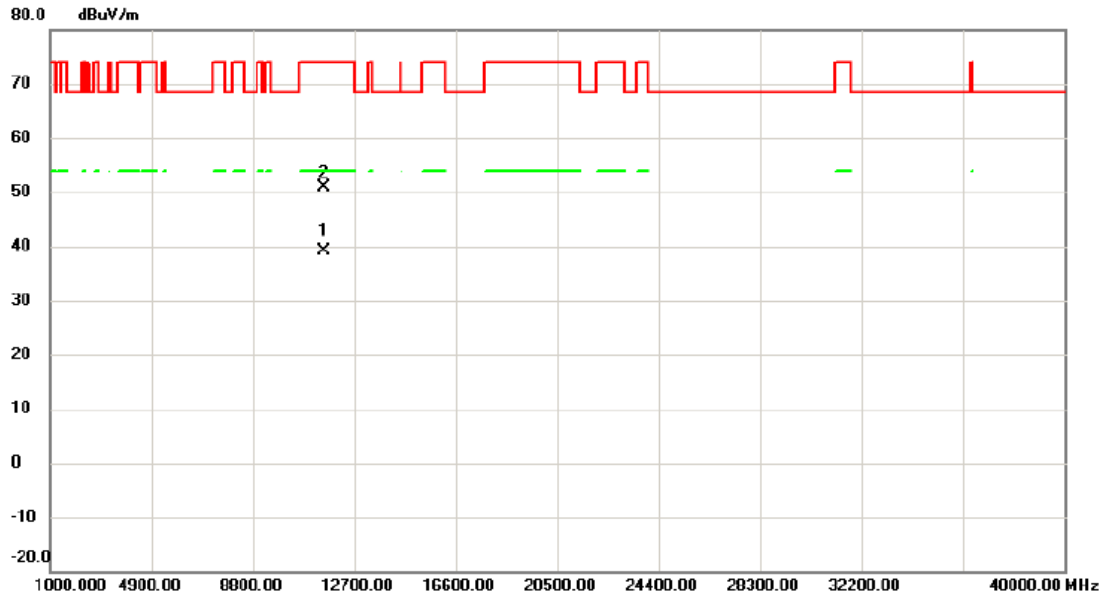


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	11509.988	21.85	17.20	39.05	54.00	-14.95	AVG	
2		11510.153	33.63	17.20	50.83	74.00	-23.17	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE40) Mode 5795 MHz

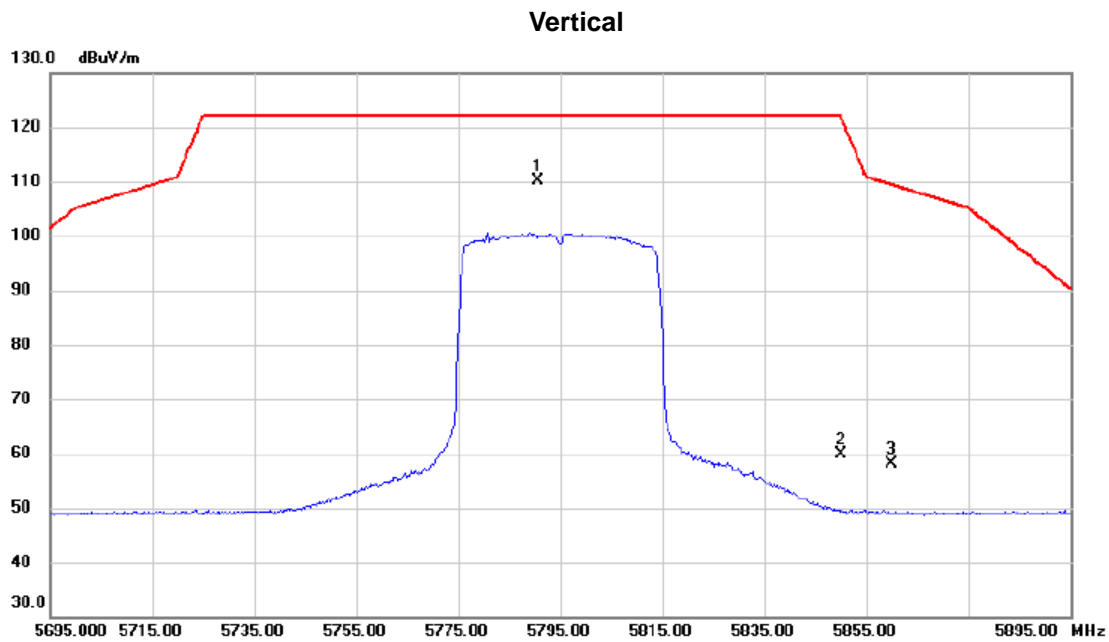


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	5790.500	90.18	20.07	110.25	122.20	-11.95	peak	No Limit
2		5850.000	39.75	20.11	59.86	122.20	-62.34	peak	
3		5860.000	38.12	20.11	58.23	109.40	-51.17	peak	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE40) Mode 5795 MHz

## Horizontal

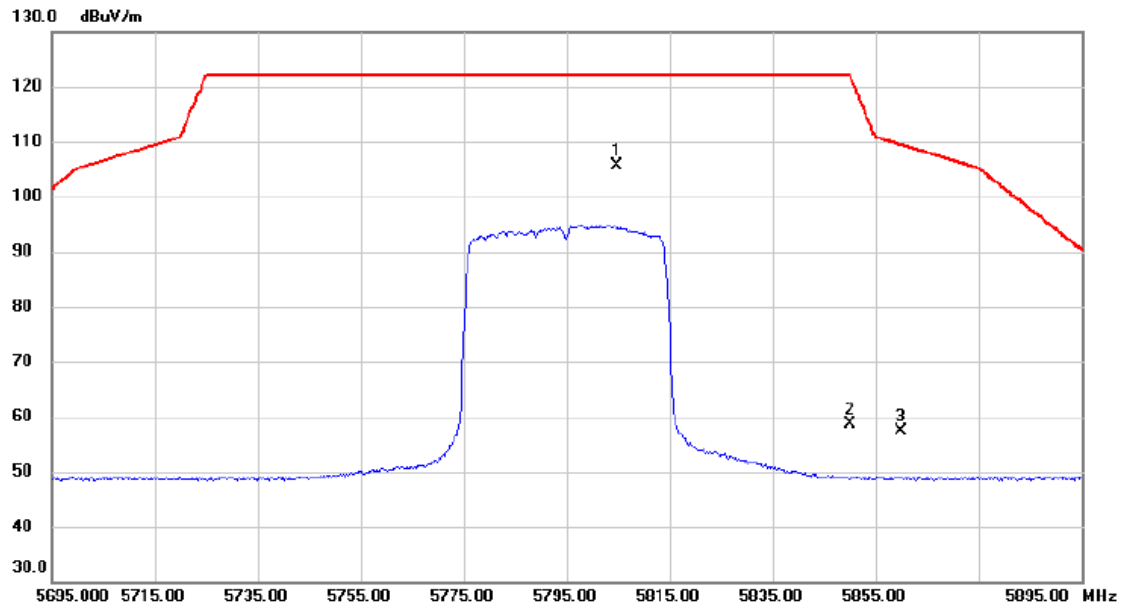


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5804.600	85.66	20.08	105.74	122.20	-16.46	peak	No Limit
2		5850.000	38.45	20.11	58.56	122.20	-63.64	peak	
3		5860.000	37.30	20.11	57.41	109.40	-51.99	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE40) Mode 5795 MHz

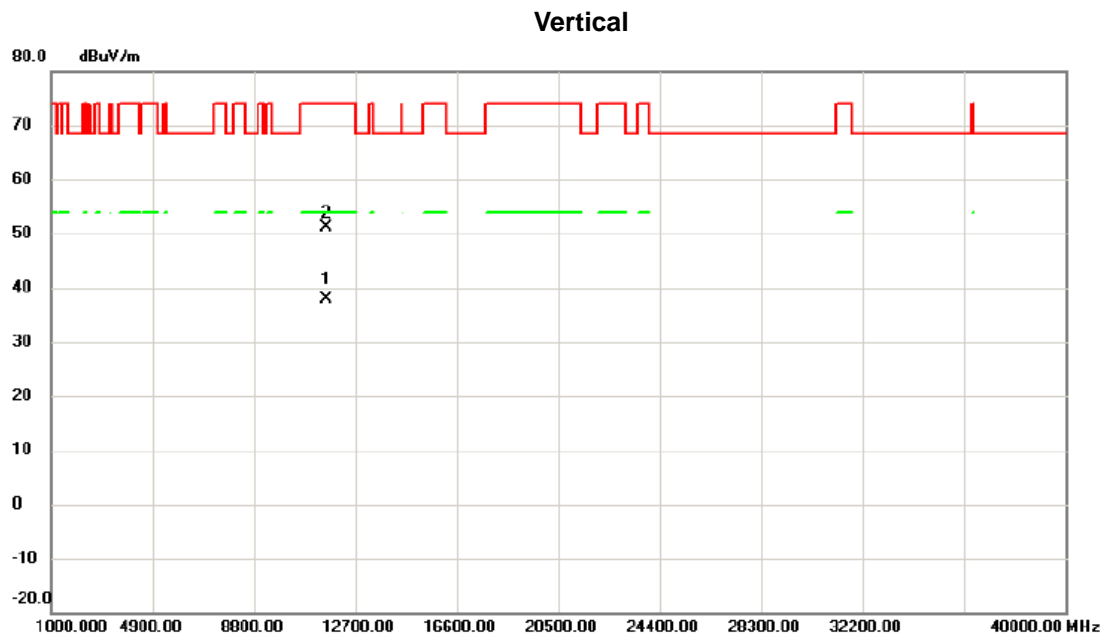


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	11589.508	20.61	17.28	37.89	54.00	-16.11	AVG	
2		11590.185	33.94	17.28	51.22	74.00	-22.78	peak	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE40) Mode 5795 MHz

## Horizontal

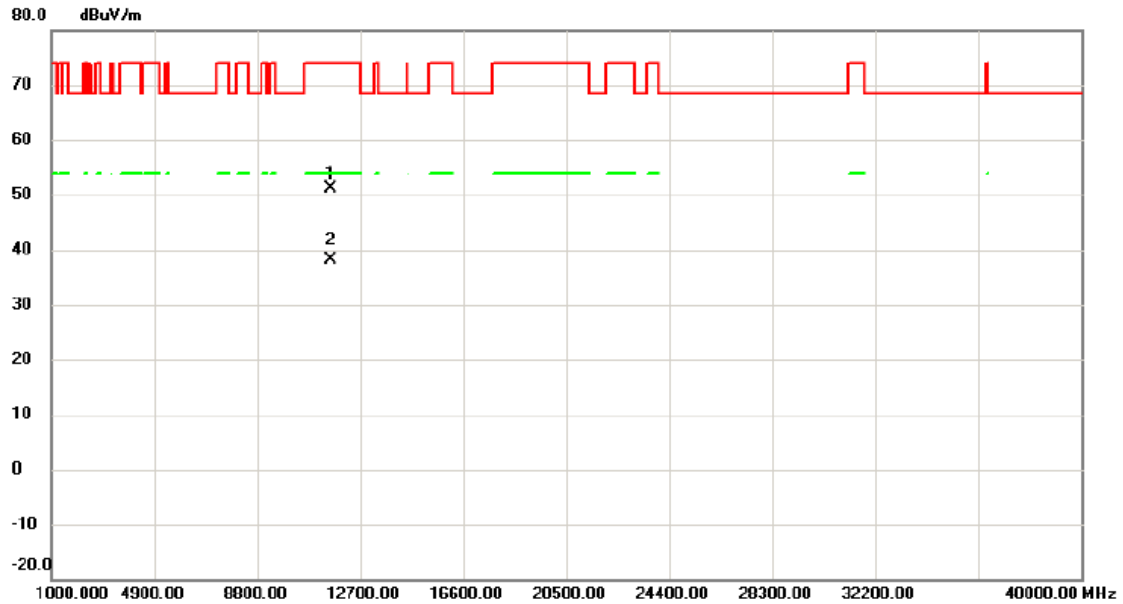


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		11589.363	33.79	17.28	51.07	74.00	-22.93	peak	
2	*	11589.729	20.82	17.28	38.10	54.00	-15.90	AVG	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE80) Mode 5775 MHz

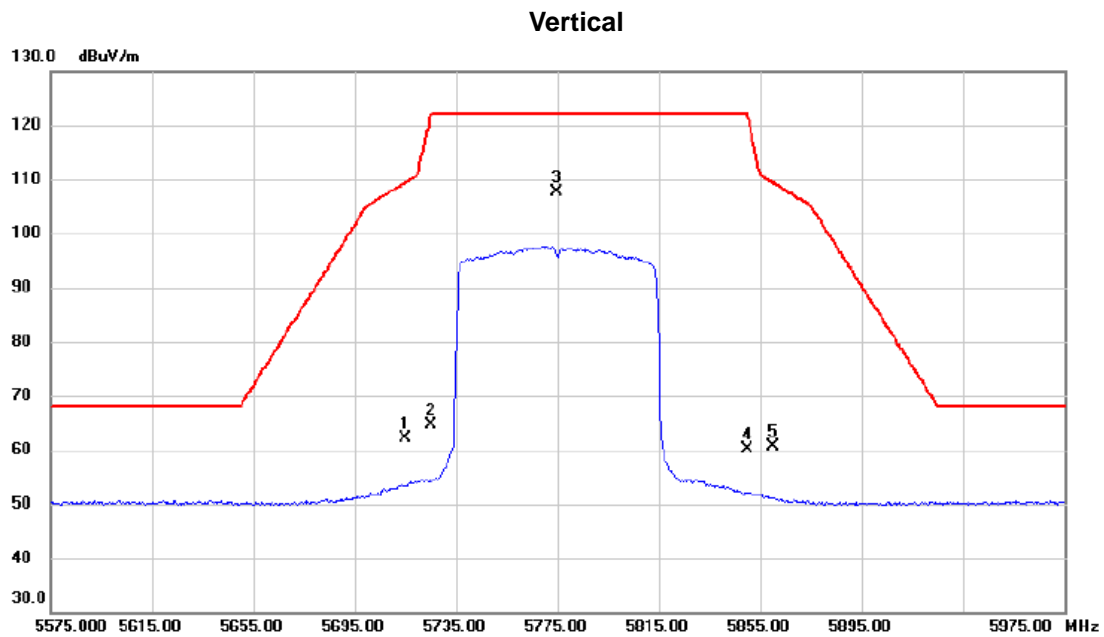

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5715.000	42.12	20.02	62.14	109.40	-47.26	peak	
2		5725.000	44.64	20.02	64.66	122.20	-57.54	peak	
3	*	5774.600	87.50	20.06	107.56	122.20	-14.64	peak	No Limit
4		5850.000	40.05	20.11	60.16	122.20	-62.04	peak	
5		5860.000	40.48	20.11	60.59	109.40	-48.81	peak	


## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.



Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE80) Mode 5775 MHz

## Horizontal

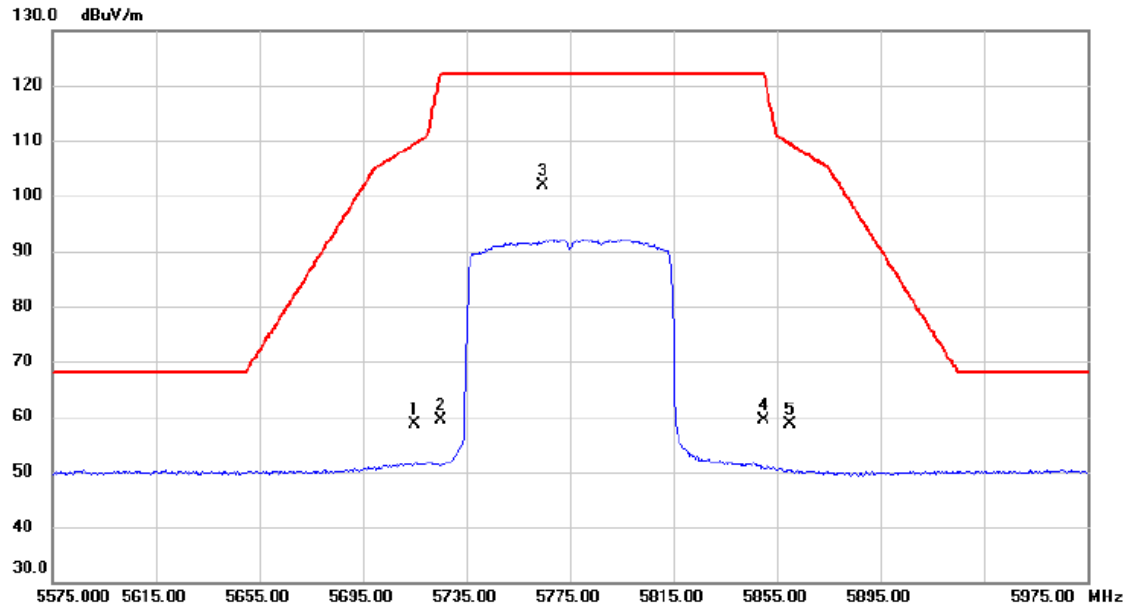


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5715.000	38.69	20.02	58.71	109.40	-50.69	peak	
2		5725.000	39.41	20.02	59.43	122.20	-62.77	peak	
3	*	5764.600	81.90	20.05	101.95	122.20	-20.25	peak	No Limit
4		5850.000	39.35	20.11	59.46	122.20	-62.74	peak	
5		5860.000	38.59	20.11	58.70	109.40	-50.70	peak	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE80) Mode 5775 MHz

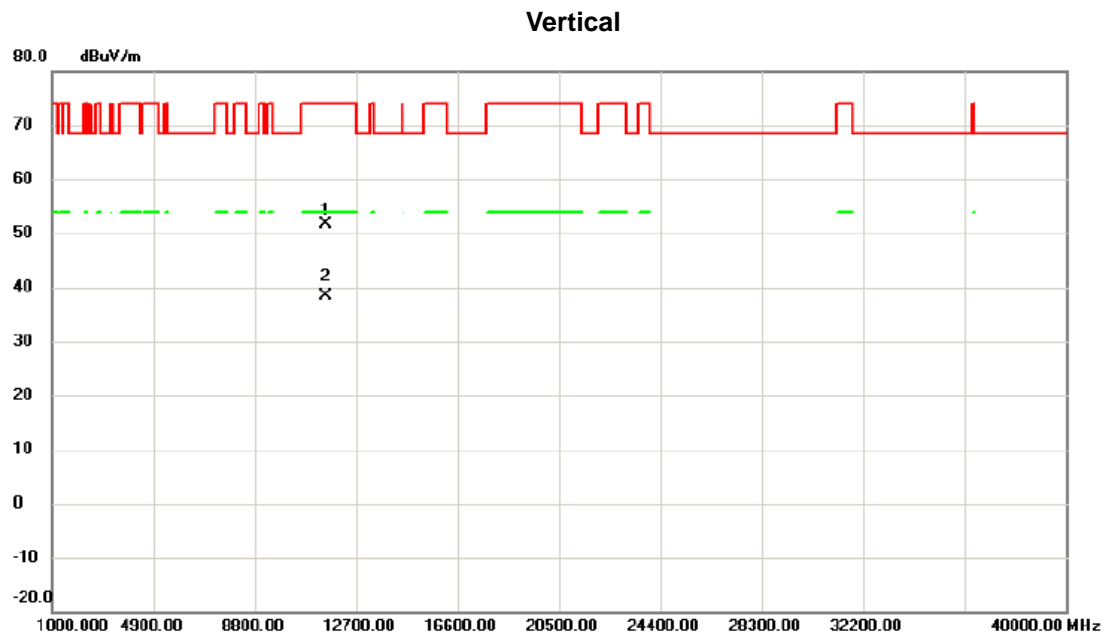


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		11549.971	34.32	17.23	51.55	74.00	-22.45	peak	
2	*	11549.987	21.23	17.23	38.46	54.00	-15.54	AVG	

## REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.  
(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-3_TX AX (HE80) Mode 5775 MHz

## Horizontal

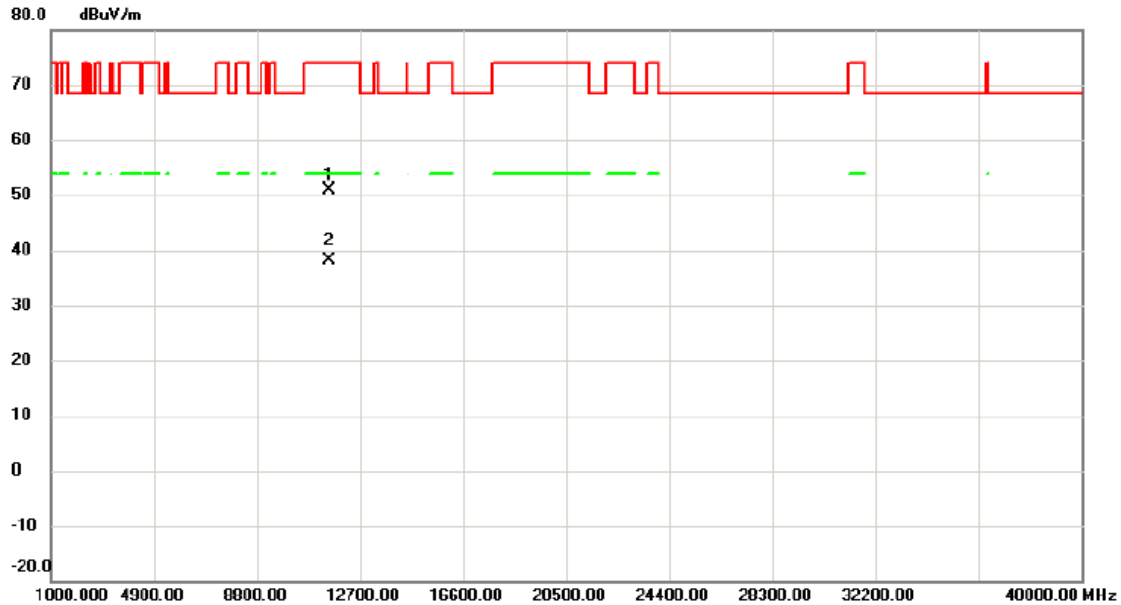

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		11549.062	33.58	17.23	50.81	74.00	-23.19	peak	
2	*	11549.913	20.91	17.23	38.14	54.00	-15.86	AVG	

### REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

## **APPENDIX E - BANDWIDTH**