

Table of Contents

1. About ONYX	3
2. Standard Accessories.....	5
3. Safety Guide	6
4. Product Views	8
5. Main Interface.....	11
6. Library.....	18
7. Reading.....	24
8. Shop.....	51
9. Note.....	54
10. Storage	69
11. Apps	71
12. Settings.....	87
13. FAQ	104
14. Specifications.....	105
15. Declaration	106

(Note: The E-books in the following illustration are not pre-stored)

1. About ONYX

BOOX is presented by Onyx International, which has a group of professionals who dedicate themselves in designing state-of-the-art reading terminal. The beauty of the BOOX is embodied in both its simplicity and its power. As we are going to show you, BOOX is an open and flexible platform for both consumers and content providers.

BOOX is powered by a 16-level grayscale e-ink screen that looks and feels like paper. Passive lighting and diffuse surface relax your eyes and reduce eye strain. By the hand-writing system, you can take notes while reading and sketch up ideas that happen to emerge. BOOX takes full advantage of new-generation e-ink screens: extremely low power consumption without reflection and backlight. Each full charge can sustain a few weeks' reading. By reducing paper consumption while providing a realistic paper-like reading experience, digital content helps to protect the environment without sacrificing convenience or lifestyle.

For content partners, we also provide support for custom formats and digital rights management solutions. All of our viewers have standard features such as layout management, font adjustment, full-text-search, zooming, and page

flow.

For a next-generation information device, connectivity is essential. The user can connect to the Internet by built-in Wi-Fi, 3G module or other add-on modules to download new content or surf the web. Customized for the e-ink screen, WebKit, the same software engine as some powerful desktop browsers such as Safari and Chrome, is the web browser of BOOX.

BOOX gives you a new reading experience.

2. Standard Accessories

(1) BOOX Max3	x1
(2) Stylus Pen	x1
(3) Type-C Cable	x1
(4) HDMI Cable	x1
(5) Quick Start Guide	x1
(6) Warranty Sheet	x1

Optional Accessories (purchased separately)

- (1) Adapter
- (2) Protective case

3. Safety Guide

Please read the Safety Guide carefully before you start to use the device.

Contact your BOOX retailer if you have any technical problem, or you can dial our official service line at 4008-400-014 or 4008-860-830.



Screen protection

The device is equipped with E-ink screen, which is very fragile. Please have no shocking, squeezing, pressing against the screen, or dropping the device from a higher place. If the screen is already broken, stop using it and contact the professional or other qualified staff to replace the screen for you. Please don't dismantle the device without our permission.



Standard accessories

Only the battery, adapter, and other accessories meeting our standard safety rules can be used for the device. For details, please refer to Product Specification. We will not be responsible for any damage caused by incompatible accessories.



Stay away from liquids

The device is not waterproof. Don't expose the device to a humid environment or use it in the rain. Please keep it away from any corrosive liquids.



Don't dismantle the device

Please don't dismantle the device in case of any damage.




Using environment


The using environment of the device is 0°C-50°C.

4. Product Views


Front View

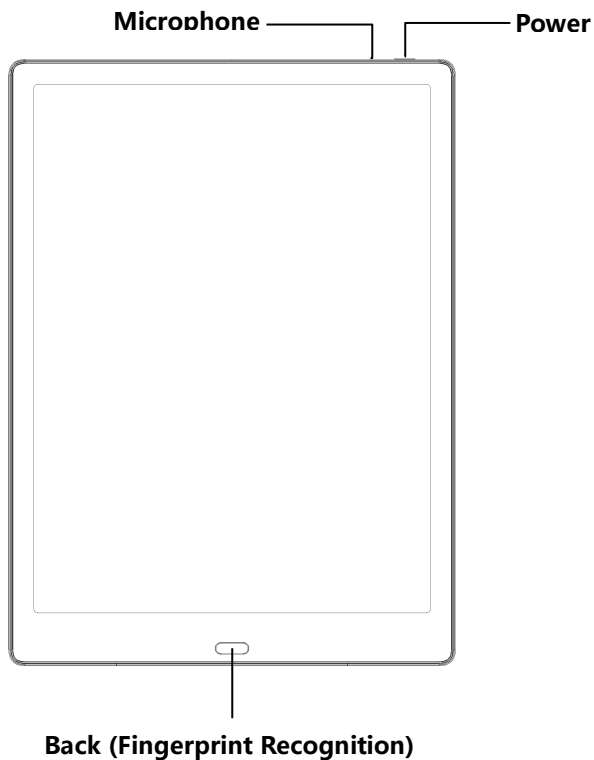

Back View

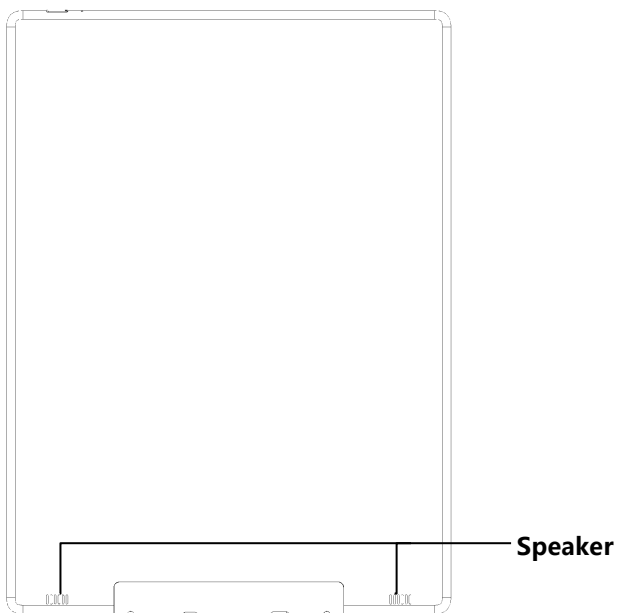

Bottom View

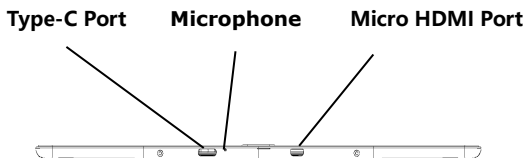

Button Function


<p>Power/ sleep Button</p>	<ul style="list-style-type: none"> ● Press the power button to turn on the device ● Long-press the power button for 2 secs, then select "Power off" in the menu to turn off the device ● Press the power button and release quickly to let the device goes into sleep mode ● Press it again to wake up ● Long-press for 10 secs to force shutdown
<p>Back Button</p>	<ul style="list-style-type: none"> ● Exit the current apps ● Exit the current view or dialog ● Go back to the previous directory ● Support fingerprint recognition
<p>Microphone</p>	<ul style="list-style-type: none"> ● Record voice ● Recognize speech
<p>Type-C Port</p>	<ul style="list-style-type: none"> ● Connect the device with PC to transfer data or charge device. ● Support Type-C earphone ● Support OTG USB drive
<p>HDMI Port</p>	<ul style="list-style-type: none"> ● Connect PC host with Max 3 through a HDMI cable, the Max 3 could be used as a monitor.

5. Main Interface

The main interface contains a status bar, content area, and function area.

The function area contains certain modules.

Double-click icons in function area can return to the main page of the specific module.

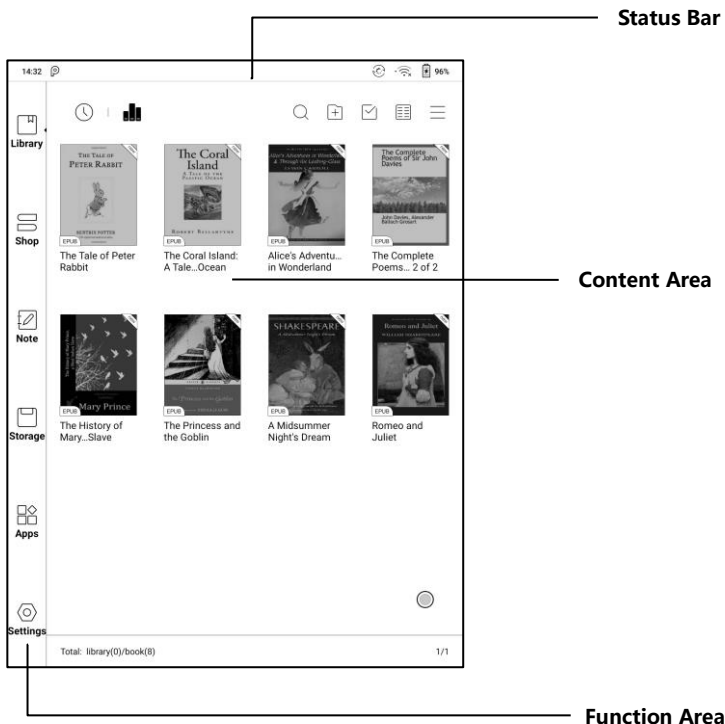

Status Bar



This section displays the current state of the device, including: Time, Notification, Refresh Mode, Wi-Fi Connection, Battery Usage. It is only for status indication.

Notification Interface

Click or pull down the Status Bar to expand a menu, which includes:

3 navigation buttons on Android OS: Back button, Home button, and

Overview button.


Function Management: Wi-Fi, Bluetooth, Rotation, Refresh Mode, Finger

Touch, etc. Further customize those frequent functions by pressing the “Edit” button.

Volume Adjustment: Easily adjust the media volume by moving the sliding control. Customize the notification sounds and adjust the volume of the alarm, notification and others.

Notifications: Turn on / off notifications for connecting USB, push notification from third-party apps, etc. Jump to the corresponding page by pressing the

specific notification.

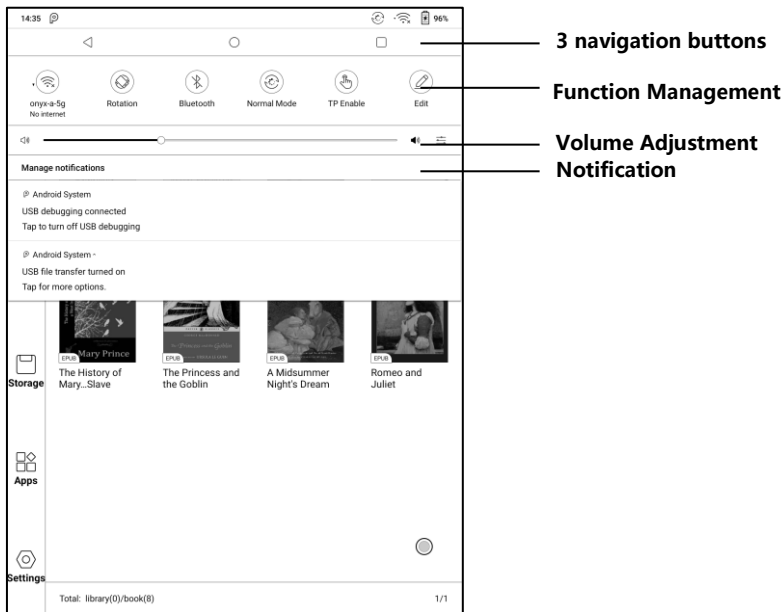

Multi-tasking switching

Clicking this icon, pop up the Android multi-task list to check the running applications in the background, one key to clear up all the applications to speed up the device.

Wi-Fi Setting


When using at the first time, you should enter into the Wi-Fi setting interface to get a accessible connection. Then click the icon to turn on/off the auto connection.

Bluetooth Setting

When using for the first time, you should enter into the Bluetooth setting interface to match a device you want. The matched earphone, page turner can be auto-connected by clicking the icon. Certain devices do not support auto connection after disconnected.

Rotation

Easily change the orientation of the screen by clicking the direction you want.

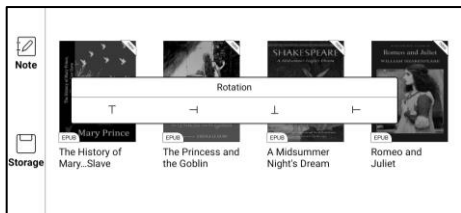

Refresh Mode

Four levels of refresh mode are available.

Normal Mode: good display effect, suitable for general text reading.

Speed Mode: with slight ghosting, suitable for quickly reading image and text.


A2 Mode: Ghosting may exist, suitable for scrolling pages with image and text.

X Mode: May cause serious loss of details, suitable for web pages and video.

Normal mode is the default mode; Speed mode is used while scrolling pages;

After selecting a new mode, to adjust the contrast could get a better effect;

Global Contrast works for all interfaces, and other contrast adjustment in App optimization may cause superimposed effect. It is recommended to only use one of them.

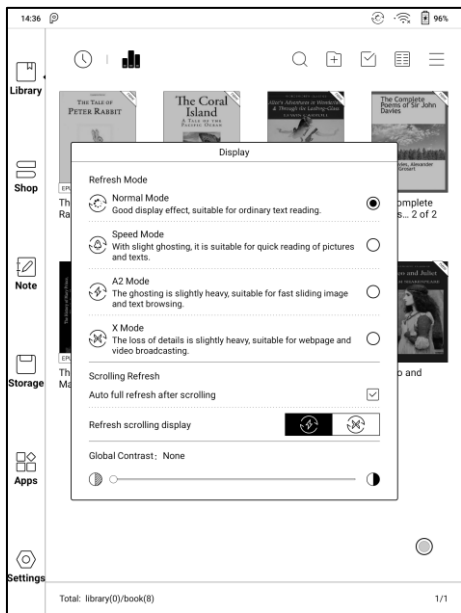

Hand Touch

For palm rejection, hand touch can be turned off (except for the status bar).

The default hand touch is on after reboot.

Edit

The icon in status drop-down menu can be adjusted, like add, remove, and re-order.

Function Area

The function area includes Library, Shop, Note, Storage, Apps, and Settings.

Content Area

The contents are sorted by time by default. The contents includes the following items.

Library

All books in supported format from internal storage are displayed here. The scanning path can be modified via Library Settings.

Shop

Enter into an online Ebook store. Users can view more book information and

make a purchase. Purchased books will be added to the list of Library.

Note

Users can create a new note here, create folders for sort management, and export note files to third-party apps.

Storage

All folders from internal storage will be displayed here. Users can manage documents and folders from the page.

Apps

All third-party apps are displayed here. Users are allowed to manage or optimize the apps.


Settings

The list of system settings help to manage the device.

6. Library

The library only displays E-book documents in supported formats in the storage. Book cover thumbnail is displayed by default. E-books are sorted by the creation time.


Tapping the toolbar icon on the top right of the library, users can Search, Create sub-library, Multi-select, Filter & Sort by, and Rebuild Library.

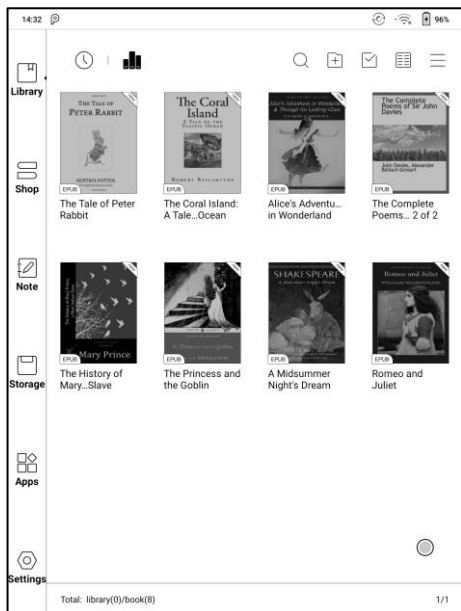

Library Display Switch


Click on these icons to switch the library display. By default, it auto-scans and loads all the supported documents in specified paths, sorted by a specified way.

Another one is to display the content based on the structure of storage. The icons change after clicking on it.

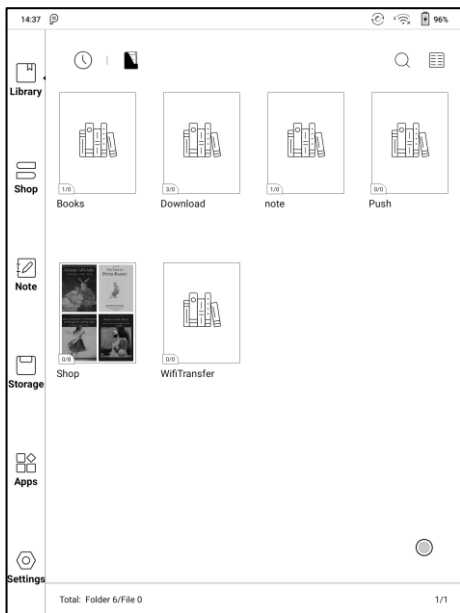

Filter & Sort

By default, it shows all books in descending order.

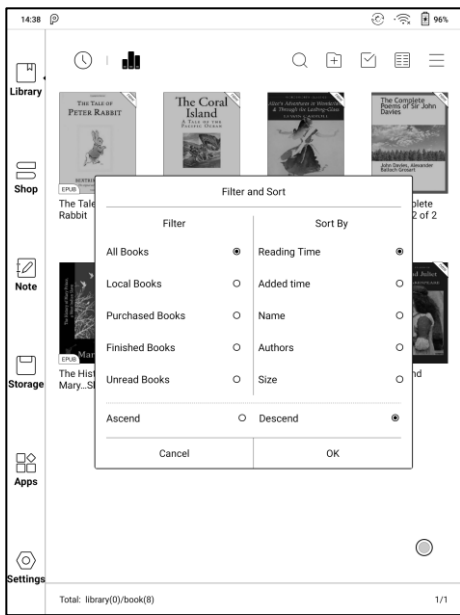


Refresh Library

“Refresh Library” gets all documents in supported formats scanned and rebuild library list. This function does not delete the reading history.

Create Sub-library

It helps to manage books by file manager.

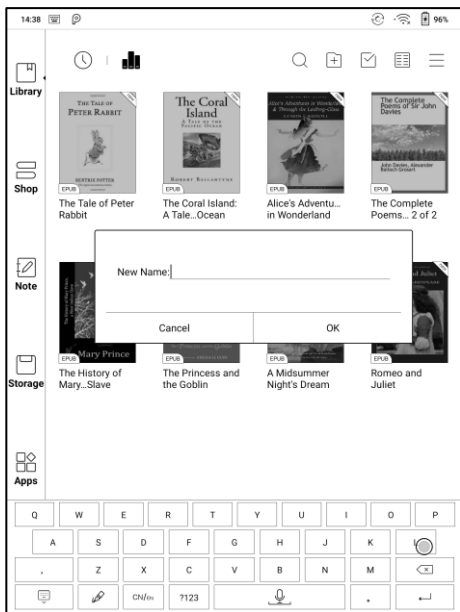

Library Settings


Users can set book file scanning path here. It only scan the specific folders (Books, Shop, WifiTransfer, Push).

Users can also select scan all folders but it would slow down the loading speed of Library.

Users can select showing books title or file name.

Sub-library Attribute


Long-press on sub-library cover to view more information about sub-library. To delete or rename sub-library are allowed. When deleting sub-library, the containing books will be moved to Library and will not be deleted with the sub-library.

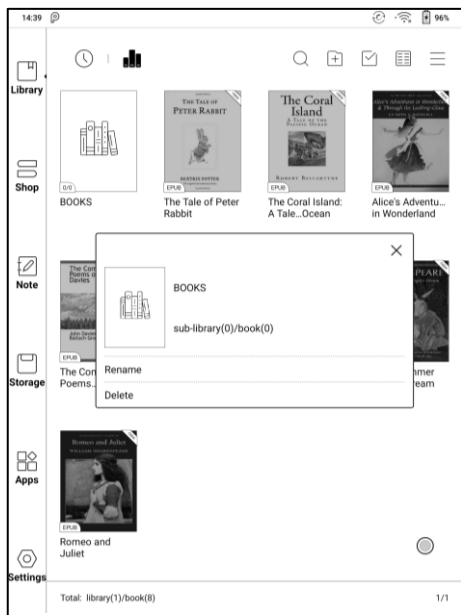

E-book Attribute

Long-press on book cover to view more information about E-book name, author, format, size, reading progress, book detail(only available for the E-books of Shop), open way, rename, move(to sub-library) and delete. One E-book only can be added to one Sub-library.

As for the books purchased from the Shop, is allowed to view book details by jumping to the Shop page.

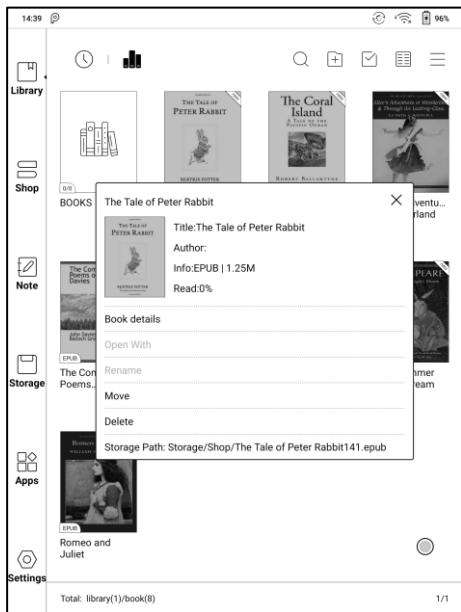


7. Reader

Tap any E-book cover to open an E-book. Full-screen reading without showing status bar is set by default.

To pull down from the top of the screen can call out the status bar.

To tap on the center of the screen can call out the menu bar for switch among different documents or other functions

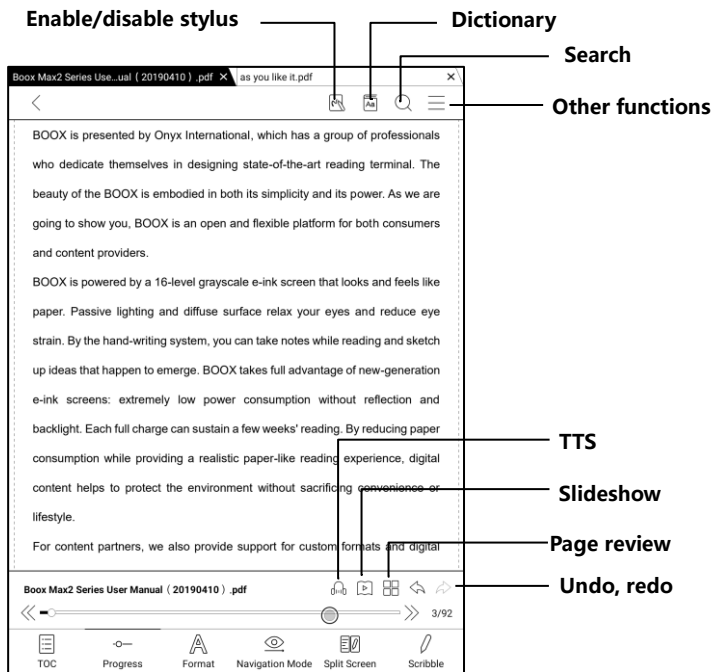

Word Menu


Long-press on the word to pop up dictionary dialog for look-ups.

English word recognition and look-ups are supported.

Through the drop-down list on the top right of the dialog, the dictionary can be switched to others.

Users can download and install the dictionary themselves. Put dictionary file on the path root directory\dicts\xxx (e.g Storage\dicts\English-French), or download dictionary online directly. Dictionary is available to use after being installed.


Tap on any position out of the dialog to exit the dialog.

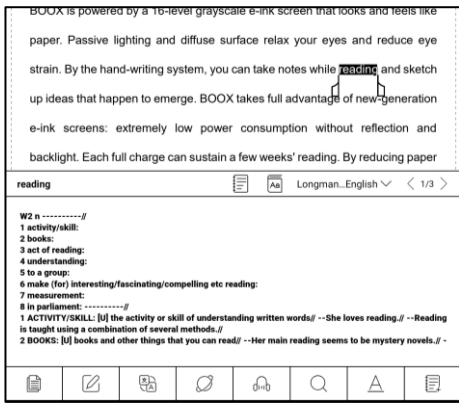

Long press on any word and drag to select the text you want to mark.

The highlight is set by default for selected text. Users can switch among highlight, underline and others, the color highlight can be in black or grey. The mark setting remains after a change. The marks before the change will not be affected.

Tap on any position out of the dialog to exit the dialog.

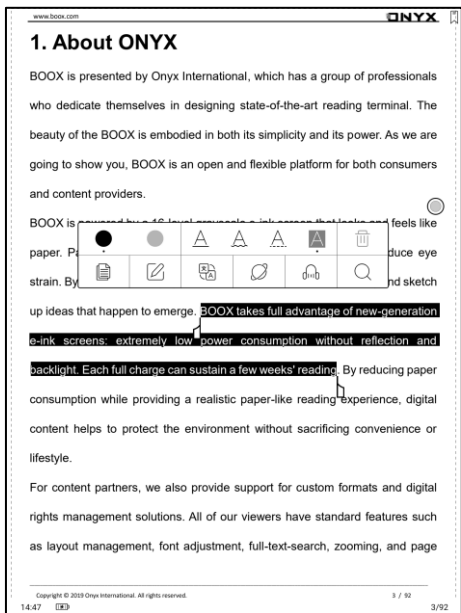

Choose "Annotation" to pop out a text box to add notes if needed.

Bottom Menu Bar (PDF format)


TOC, Progress, Format, Navigation Mode, and Scribble are included.

TOC

TOC contains Table of Content, Bookmark, Annotation, and Scribble.

TOC supports three-layer hierarchy. The current layer is underlined. Jump to the corresponding page when tapping any of the layers.

Tap on any position out of the TOC to exit.

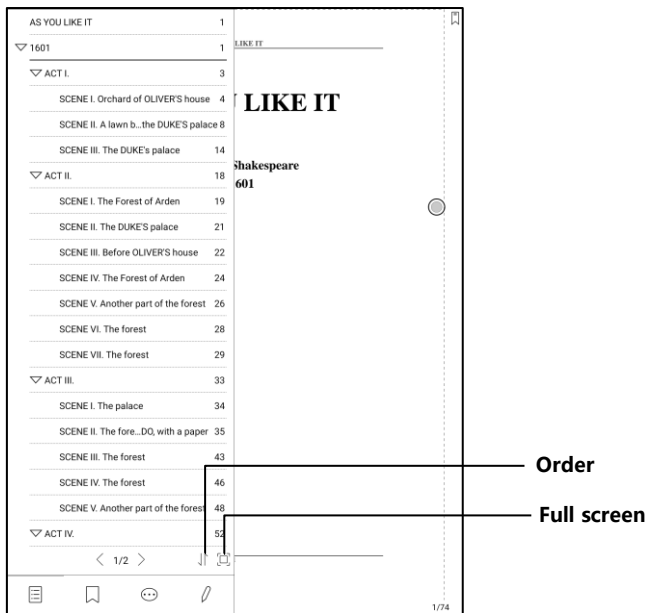

Bookmarks

Without calling out the menu, bookmark the reading page by simply tapping a tag on the top right corner of the screen. Tap it again to un-bookmark the page.

The bookmarks can be checked under the path of Doc-Bookmark, where users can delete bookmarks.

Jump to the corresponding page by tapping any of the bookmarks.

Annotation

All highlighted/underlined/annotated content would be listed under the page of Doc-Notes for further searching, editing and deleting.

Jump to the corresponding page/content by tapping any of the lists.

All contents on the Annotation page can be exported in txt format. Exported files are saved under the directory folder Storage\Note\`(same name as the source file)`.

Scribble

All scribble and sidenote can be viewed under the page of Doc-scribble for further searching and deleting.

Jump to the corresponding page by tapping any of the pages.


All scribble contents can be exported in Png format and saved under the same

directory folder Storage\Note\(same name as the source file).

Progress

It displays the chapter name (book name if no chapter), page progress, last/next chapter, page number, slideshow, undo, and redo.

Tap on the page number to enter a quick-flip interface. Click the page numbers again and input number to jump to the page directly.

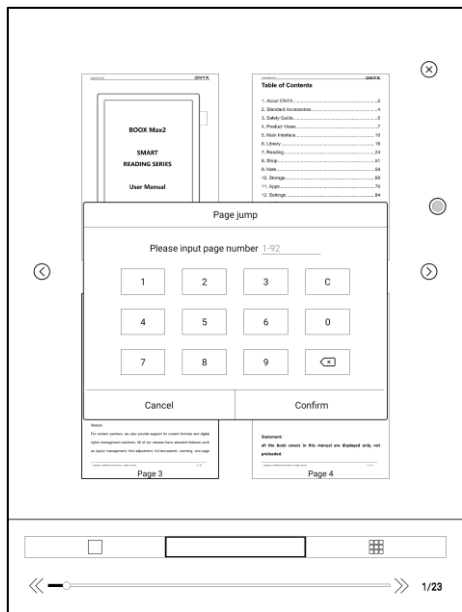

Format

Display, Contrast, and Reflow are included. This module is just available for the E-books in the formats of PDF\DJVU\CBR\CBZ.

Display

It contains Layout, Orientation, Zoom, Crop, and Margin.


Layout: Single page, double pages (only in landscape mode).

Orientation: Allowed to switch to four different orientations, the word orientation is the same as the orientation of “T”.


Crop: Auto-crop according to the margin set by users.

Margin: The empty space at the sides of book content for auto crop.

Zoom: Zoom in, zoom out, and partial zoom are supported. Users can also pinch fingers together or apart to zoom out or in on the reading pages.

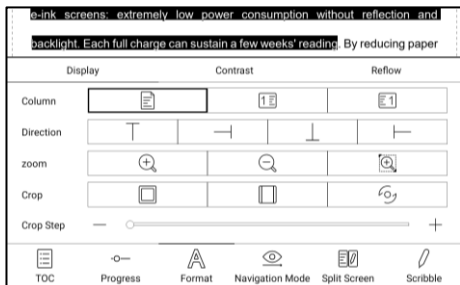


When zooming in until the whole page larger than the screen display, users can long press and drag to adjust the display area. Click on the screen to turn the sub-page. Click on the virtual buttons on the bottom right to turn the whole page.

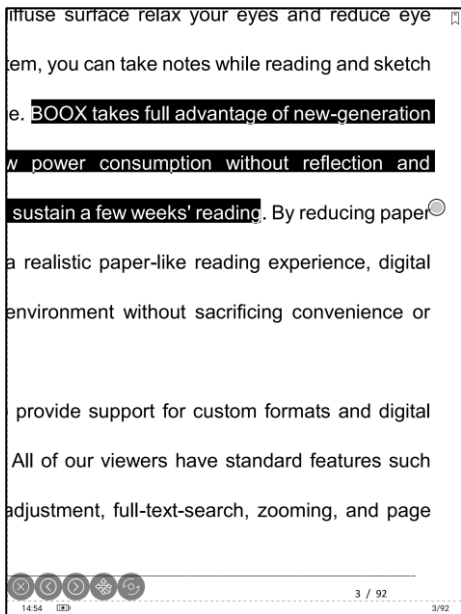

Contrast

Watermark, Sharpen, Image Contrast, Text Contrast, and Embolden are included. Certain functions are just available for scanned documents.

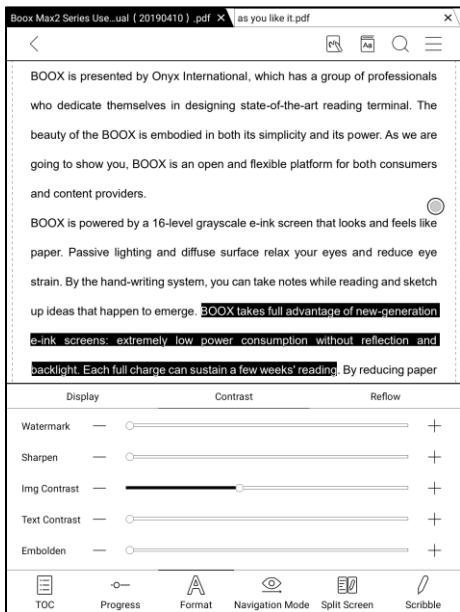


Reflow

Reflow is only available for PDF/DJVU/CBR/CBZ documents.

Reflow allows users to further customize the layout of documents including:

Line Spacing, Margin, Text Direction, Font Size, Columns, and Skew Correction (for italic documents).

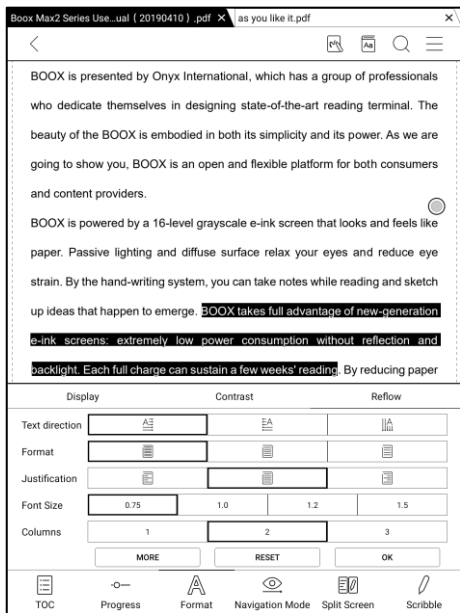


Navigation

Navigation allows users to have options of Reset, Comic Mode, Article Mode, and More Settings including Crop, Split, and Subpage Order.

Comic Mode: the screen will be divided into four subpages and the reading order is upper right – upper left – bottom right – bottom left.

Article Mode: the screen will be divided into four subpages and the reading order is upper left – bottom left – upper right – bottom right.

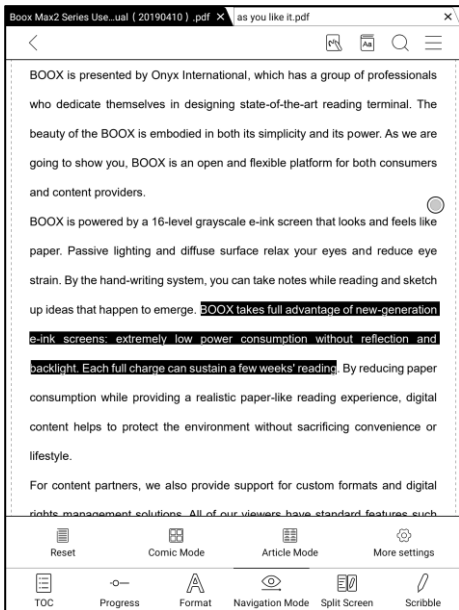


More settings

Manually adjust the settings of area cropping, page split, and subpage order.

Crop: Manually select the cropping area for single or double pages.

Split: Split the pages into specified subpages in different ways.


Order: Decide the initial position and reading order for subpages.

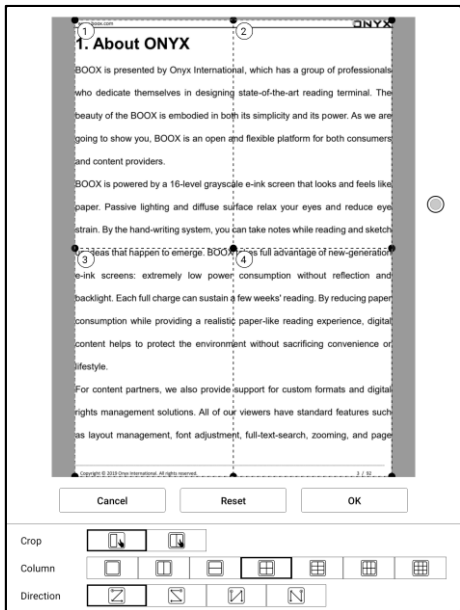

Split Screen

It allows to respectively open current document, two different documents, or one document & Note at the same time.


This function is only available in landscape mode, the later open document/Note will be appear at the right side. The sides can be swapped.

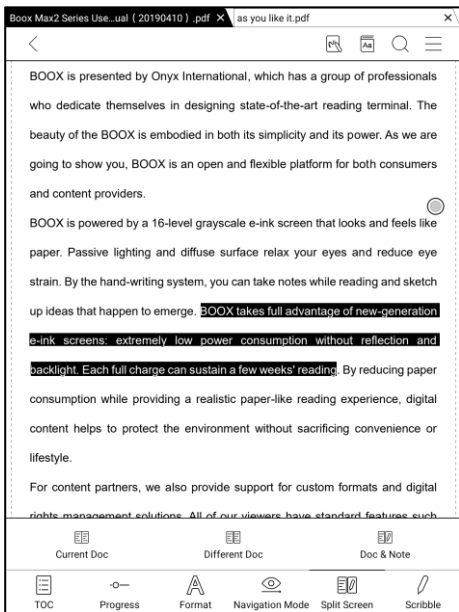

Current Doc (same doc)

The two documents are totally independent. Users can respectively turn pages and save them.

The scribble, highlight, annotation, bookmark would be synchronized to each other after page refresh.

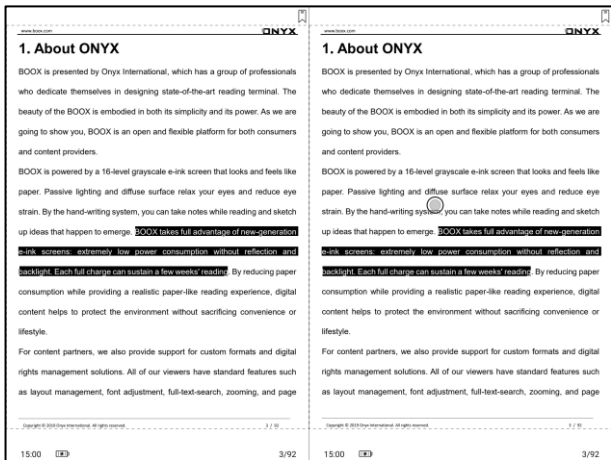

Different Docs

Choose a document different from the current document.

The screenshot shows the BOOX app interface. At the top, the URL 'www.boox.com' and the 'ONYX' logo are visible. The main content area displays the title '1. About ONYX' and the beginning of a paragraph: 'BOOX is presented by Onyx International, which has a group of professionals who dedicate themselves in designing state-of-the-art reading terminal. The beauty of the BOOX is embodied in both its simplicity and its power. As we are going to show you, BOOX is designed for consumers who want to read books and content on a portable device that is easy to carry and feels like a piece of paper. Passively, BOOX is powered by a high-resolution screen that reduces eye strain. By the way, BOOX is designed for the next generation of readers who want to read up ideas that are easy to read on a high-resolution screen with a backlight. BOOX is designed for consumption of content help you to read in a convenient lifestyle. For content partners, we also provide support for custom formats and digital rights management solutions. All of our viewers have standard features such as layout management, font adjustment, full-text-search, zooming, and page navigation. Copyright © 2019 Onyx International. All rights reserved. 3 / 92

An overlay menu titled 'Different Doc' is shown in the center. It has a back arrow and the text '< Storage/Books'. The menu lists several categories: 'Recently read', 'Storage', 'Books', 'Push', 'Download', 'note', 'Shop', and 'WifiTransfer'. Under the 'Books' category, three documents are listed: 'EN-book', 'as you like it.pdf', and 'Hamlet, Prince of Denmark.pdf'. A '1/1' indicator is at the bottom right of the menu.

At the bottom left of the app, there is a timestamp '15:00' and a battery icon. At the bottom right, there is a page number '3 / 92' and a refresh icon.

Similar to the Current Doc, these two documents can be respectively operated.

The display is also swappable. For PDF document, please try to swap them if part of them is not writable.


The screenshot displays the BOOX e-reader interface. On the left, a document titled "1. About ONYX" is visible. The text describes the device's features, including its 16-level grayscale e-ink screen, passive lighting system, and low power consumption. A settings menu is overlaid on the right side of the document, containing options for "Screen Refresh", "Swap", and "Settings". Below the document, there is a navigation bar with icons for "TOC", "Progress", "Format", and "Scribble". A progress indicator shows the current page as 3/92. On the right, a second document titled "HAMLET, PRINCE OF DENMARK" by William Shakespeare (1604) is displayed. The interface includes a top navigation bar with icons for back, home, search, and settings, and a bottom status bar showing the page number 15/01 and a refresh icon.

Doc & Note

Likewise, they are swappable.

And the Note will be created with a name same as the document. It associates with the document and can be edited in Note app.

Every document can only have an associated note. Changing the name of the note does not affect the association.

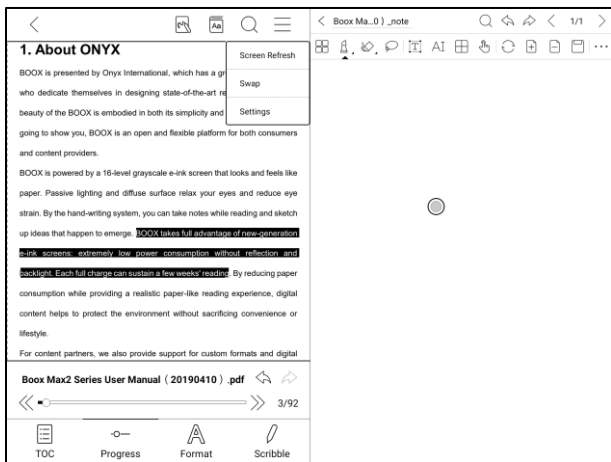


Scribble

Handwriting scribble is on by default. It can be turned on/off on the top menu bar.

The scribble could be called out by tapping on the bot menu bar Scribble.

The scribble content will be directly saved to the original documents, or exported to PDF. The scribble is not editable after export.

Scribble is NOT allowed after reflow.

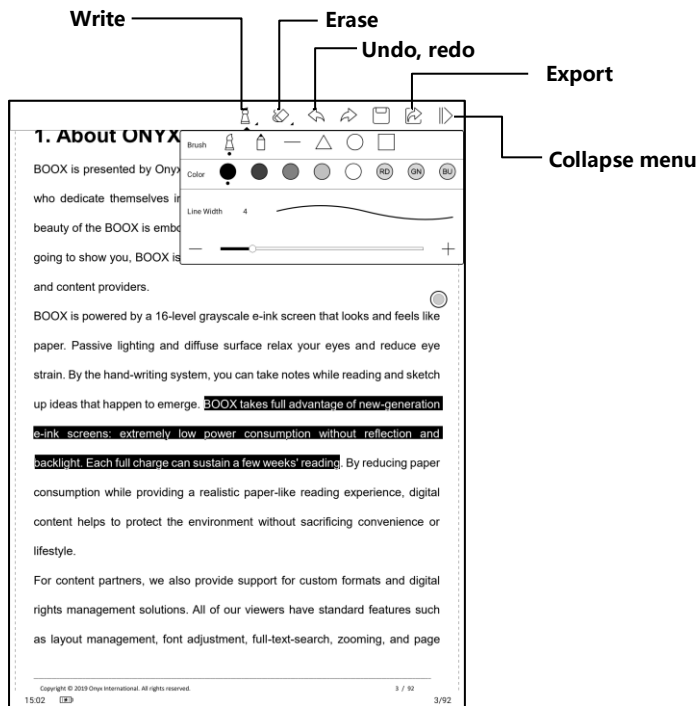

Write and Erase

Click on the brush and eraser icons for the writing and erasing functions.

Double-click them to expand the sub-menu.

In the state of stroke erasing, you need to switch to the brush for go on writing.

For the “erase all”, you do not need to switch back to the brush.

Color

Black, gray, and white strokes are shown as their authentic colors. Other colors are shown as black on devices, and as their original colors after being exported to PC.

Bottom Menu (other format)


TOC, Format, Progress and Split screen are included. It supports the formats of EPUB\TXT\MOBI\AZW3,etc.

Format

The settings include Font Face, Display and Spacing.

Loading font face in the directory Storage\fronts is supported.

The settings for font size, font face, contrast, bold, spacing work on all newly opened documents, but not work on the documents before settings.

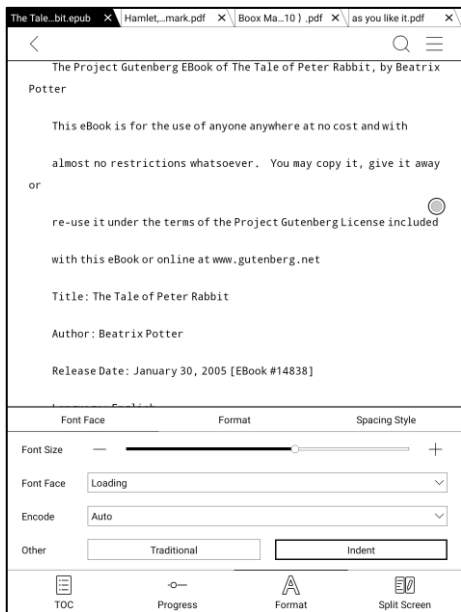


Screenshot

Diagonally tap on two corners of the screen to capture the screen in PNG format.

The function is only available on the reading page.

The screenshot will be saved to the local, or shared by scanning QR code. The save path is Storage\Screenshots.

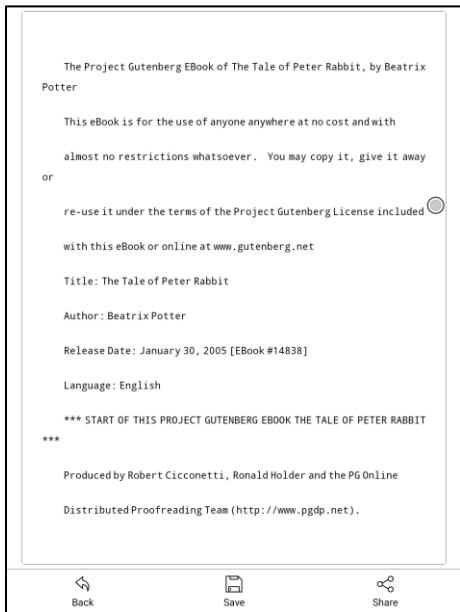


WeChat and browser scanning are supported for screenshot sharing.



Reader's Settings

There are Global Settings, Touch Settings, TTS Settings, Export Settings, Screenshot Settings, and Version Name.

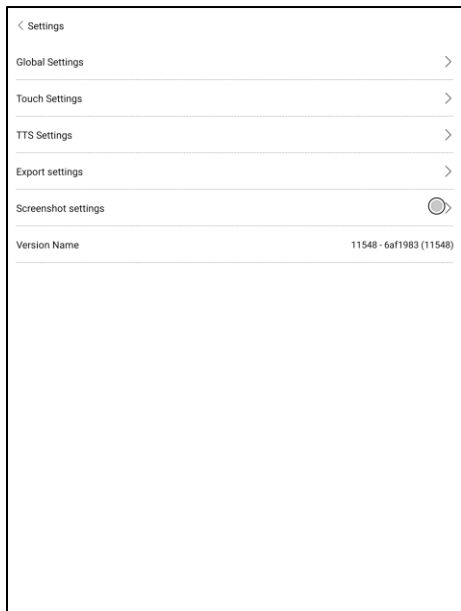


Global Settings

There are Enable page close reminder, Enable system status bar, Enable reader status bar, Enable multiple documents, Show file borderline, Show virtual buttons in zoom state, Show hyperlink, Show bookmark position, Enable pinch to scale, Apply certain options to all documents.


< Global Settings

Enable page close reminder	<input type="checkbox"/>
Enable reader status bar	<input checked="" type="checkbox"/>
Enable multiple documents	<input checked="" type="checkbox"/>
Show file borderline	<input checked="" type="checkbox"/>
Show page break line	<input checked="" type="checkbox"/>
Show hyperlink	<input checked="" type="checkbox"/>
Show bookmark location	<input checked="" type="checkbox"/>
Show book's title instead of file name	<input type="checkbox"/>
Enable pinch to scale	<input checked="" type="checkbox"/>
Some Format options are valid for all documents (Font , contrast , spacing style)	<input checked="" type="checkbox"/>
Position of virtual page-turning key	Bottom left



Touch Settings


Users are able to customize the touch settings for different areas. There are six default touch modes can be chosen and users can customize three more.

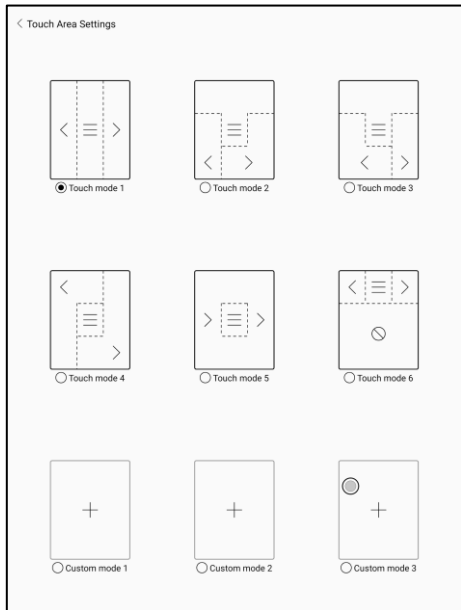

TTS Settings

The built-in Baidu TTS is set by default. English is supported. A network connection is required at first use.


Switching to third-party TTS system is allowed. The built-in TTS settings are not synchronized with the system TTS settings. The system TTS settings work on the third-party TTS by default.

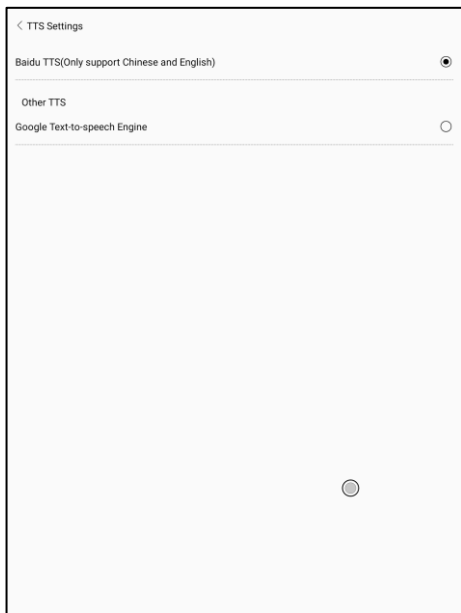

Export Settings


The default storage path is Storage\Note.

The export files can be also saved to the same directory as the source file.

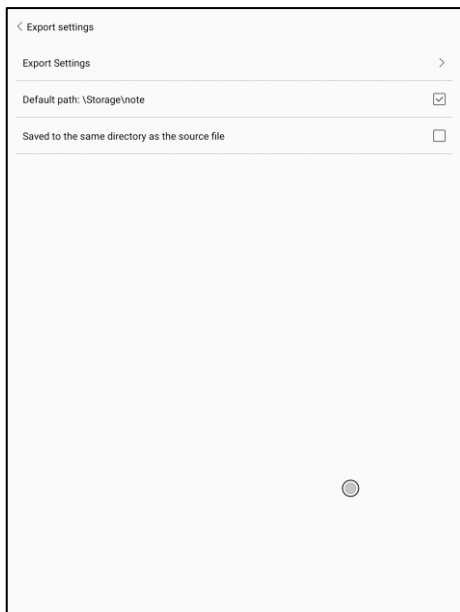


8. Shop

In the language of non-Chinese, the Shop is offering free publications E-books from the Internet.

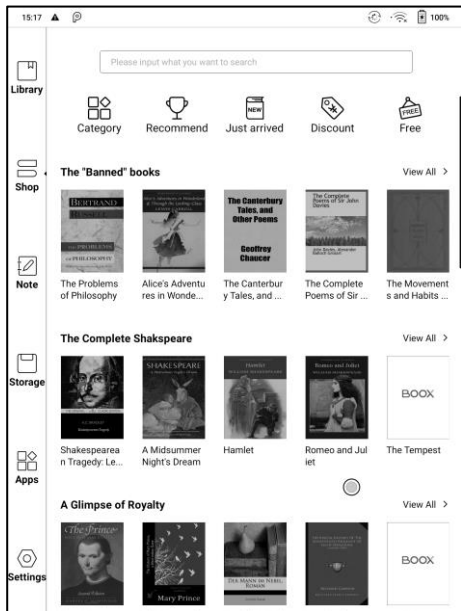


Category

Books can be screened according to different categories.

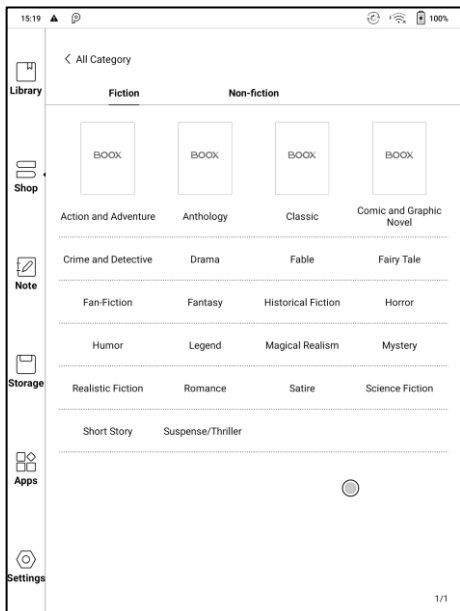

Book Detail

Click a book cover to open up book detail. The specific book information. Click “Full Edition Download” to download the book, then you can see this book cover in Library .

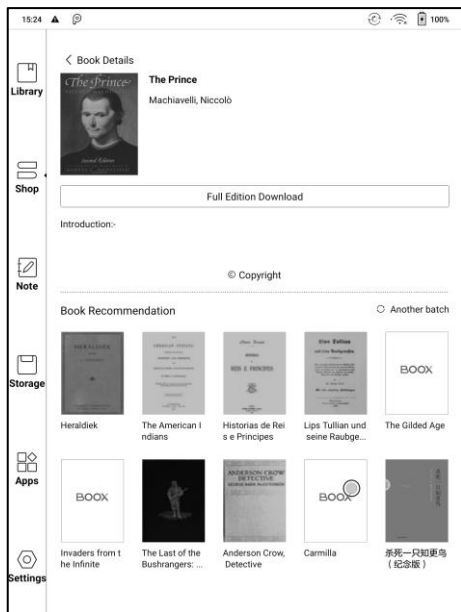


9. Note

Note List

The Note list includes general Note and associated Note.



Associate Note is that one auto-created by screen split function. To create new files and folders are allowed.

Users can create new files and folders here.

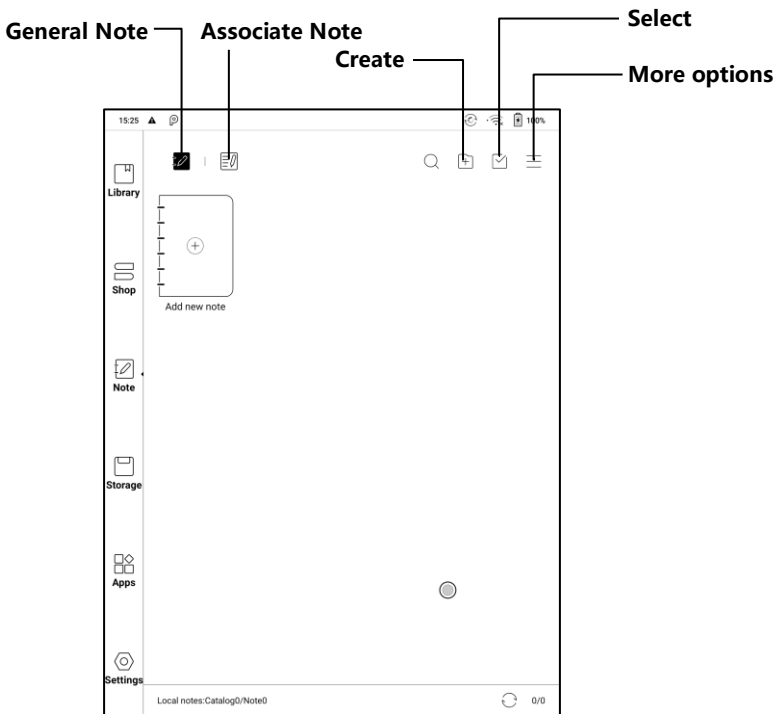

More Options

Users can select backup & recover, order, and settings.

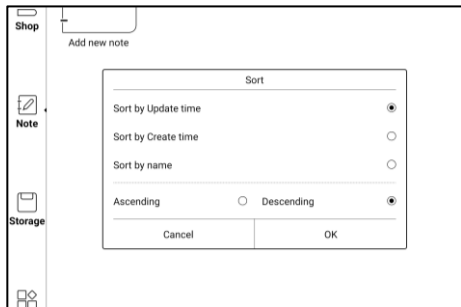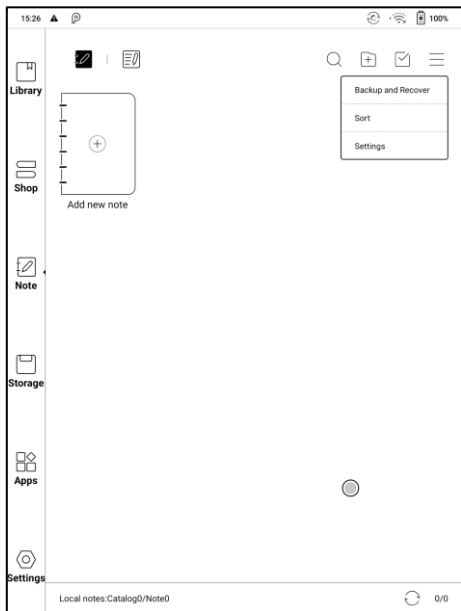

Backup and Recover

It supports backup and recover for handwritten documents in local or to the Cloud.

To delete backup files is allowed.

Note: The action Recover will recover the backup data, which will cover the current data. Please be careful.




Note's Settings

These are general settings for Stylus Calibration, Account Sync and Backup, AI recognition, Note password settings, Show Erasing Trace, Auto-turn on Wi-Fi to sync Notes, Auto-generate PDF documents after exiting Note, Auto refresh after lifting stylus.

If this device is bound with third-party accounts for file sync, and Wi-Fi is connected, the Note files will be auto-uploaded to the accounts with a PDF or PNG attachment.

If “auto-turn on Wi-Fi to sync Notes” is enabled for notes sync, the device will connect with Wi-Fi automatically and sync notes to the Cloud when exiting the Note app. If it is disabled, users need to sync to account manually by clicking an upload icon on book covers.

For the “Auto refresh after lifting stylus”, the display would refresh after users lift stylus away from the screen, making the strokes smoother.

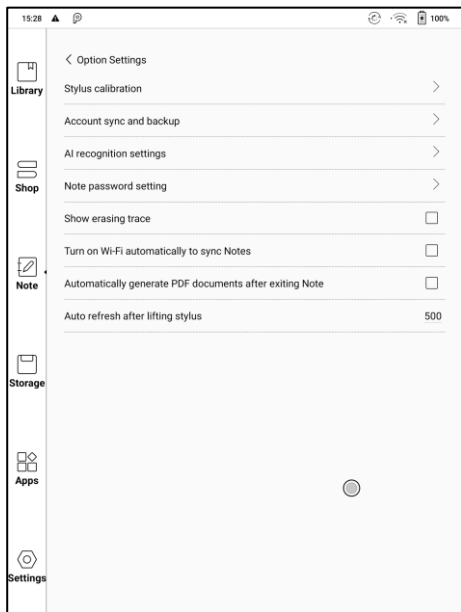


Note Password Settings

This password is only used for protecting files on the device, not encrypting files. So the password does not work out of the device. Now this function does not support multiple passwords for one file.

This function supports fingerprint password and specific password, which are available for all note files. Users can also set a specific password for a single file. To add, edit and remove password are allowed here.


The fingerprint password is the same as the system fingerprint. It need to be enabled before use.

The specific password can be different from the system password.

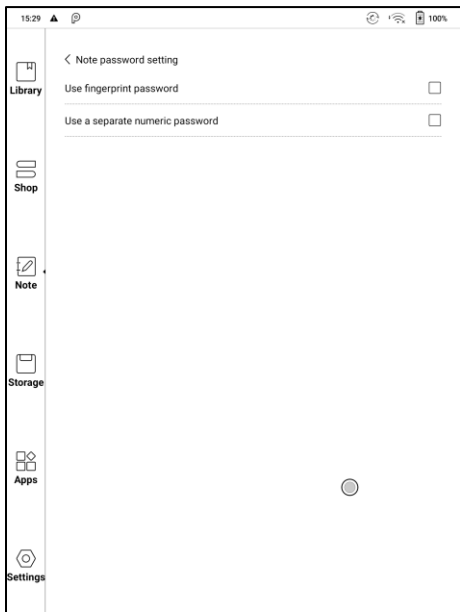

The note file has no cover thumbnail after locked.


Long-press the note file to remove and add password in the dialog.

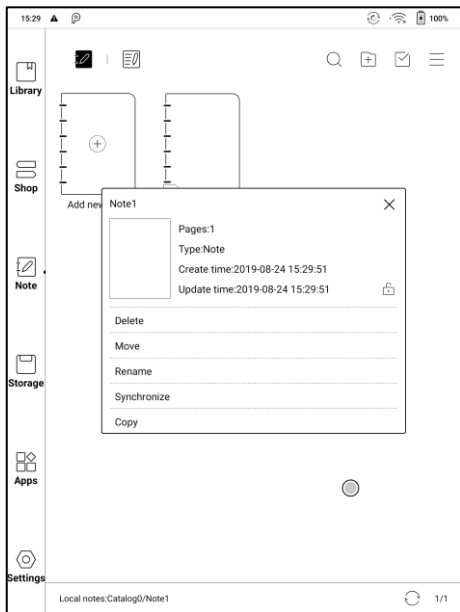

Scribble Interface


Files can be saved automatically and manually when to quit the Note.

Tap on the page number to jump to the specified page quickly.

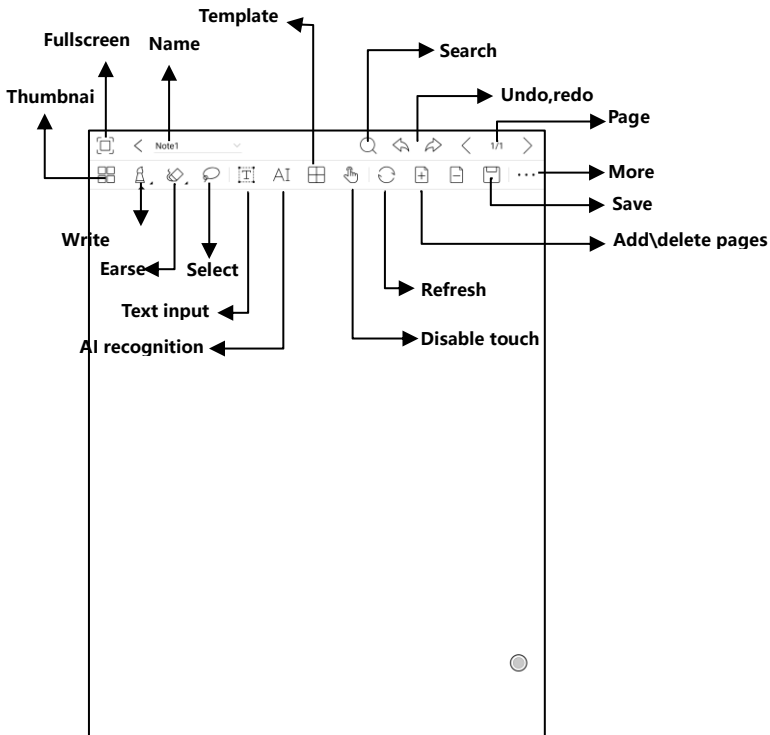

Custom Toolbar

Besides the default tools like scribble, erase, fullscreen, select, users can add, remove, adjust other tools on the toolbar.

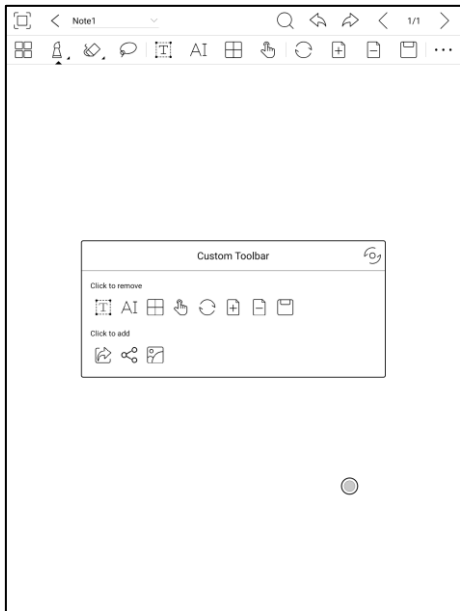

Write and Erase

Click on the brush icons for the writing and erasing functions. Double-click them to expand the sub-menu.


In the state of stroke erasing, you need to switch to the brush first and then

write.

For the “erase all”, you do not need to switch back to the brush.

Select


In the select mode, circle an area on the screen, then users can zoom, move, duplicate and remove the selected area.

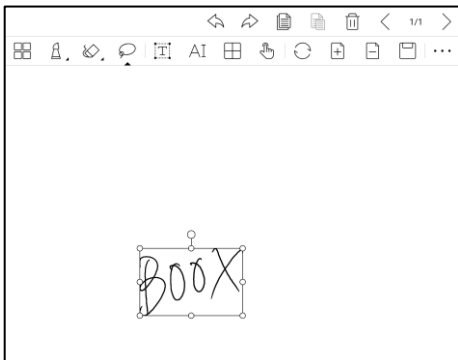

Text Input

Users are allowed to key in words on the note by a Bluetooth keyboard. The input box can be moved everywhere.

Users can adjust the font, line spacing, bolding, underline, italic, copy and delete.

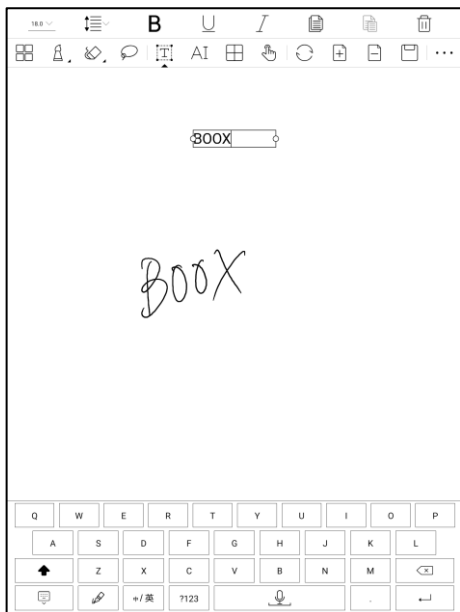

AI Recognition


Click the icon “AI” to switch to recognize the handwriting text. English is supported. To download the corresponding language package is required for other language recognition.

This function contains original recognition and reflow recognition.


Original recognition only does conversion but not changes the position of words, while reflow recognition reflows words after conversion. Users need to manually add space, line break and font size.

The text flows automatically after reflow. Users can manually make space, newline, and font size after that.

The accuracy of recognition depends on how normal the handwriting is.

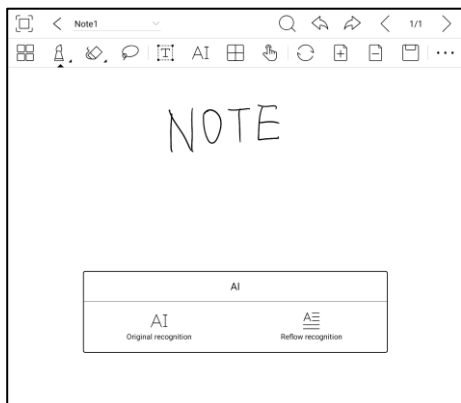

AI recognition works based on the handwriting. If the handwriting content changes, please re-enter the function to let it convert once again. For saving the converted content, please export it.

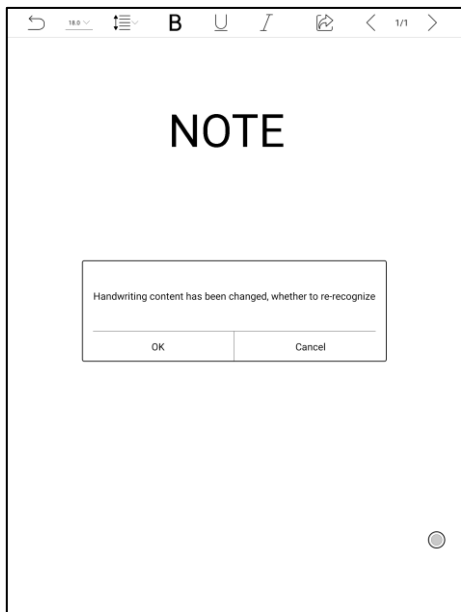

Template


It includes built-in templates, local templates and the Cloud templates.

The directory of the local templates is Storage\note Template.

The directory of the templates downloaded from the Cloud is


Storag\noteTemplate\cloud.

The built-in templates will be used if the local template are deleted.

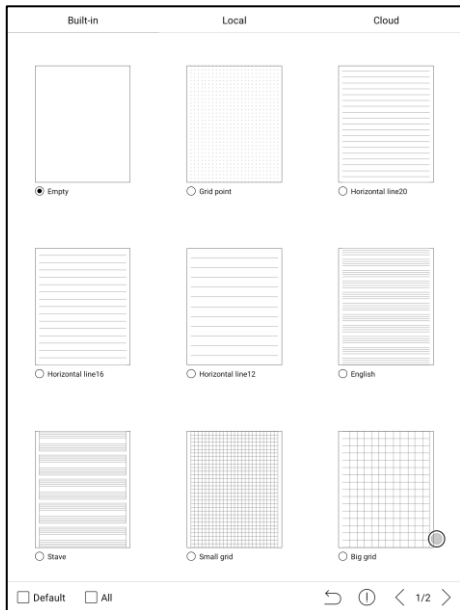

Insert Image

Users can remove, zoom, duplicate the images inserted from the local. Select the image and then edit.

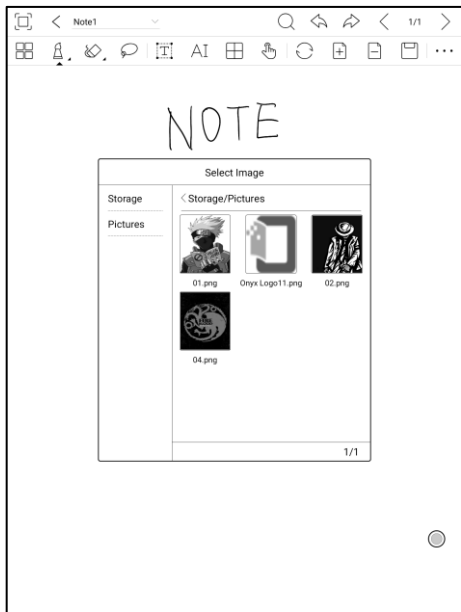

Share

Share all pages of a note in PDF format or current page in PNG format.

10. Storage


Storage displays all files from internal storage.

Files will be displayed in alphabetical order by default. It can be switched to file type, size, create time.

The files can be viewed in thumbnail or list. Multiple selections are allowed.

Users can customize shortcut for folders in storage and place it in the storage interface.

The way to make a shortcut: long press the folder > set a shortcut.

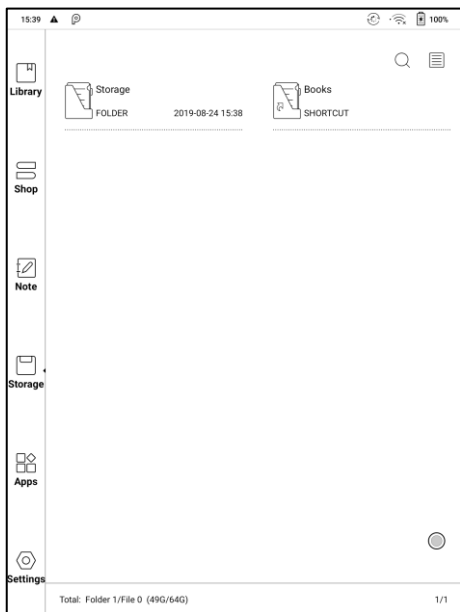


OTG

OTG is supported. Users can connect the device with USB drive through a Type-C cable. The device will detect USB drive afterwards.

The OTG feature would consume more power since it supply power to a USB drive.

It supports Type-C earphone but not TYPE-C transfer 3.5mm adapte earphone.

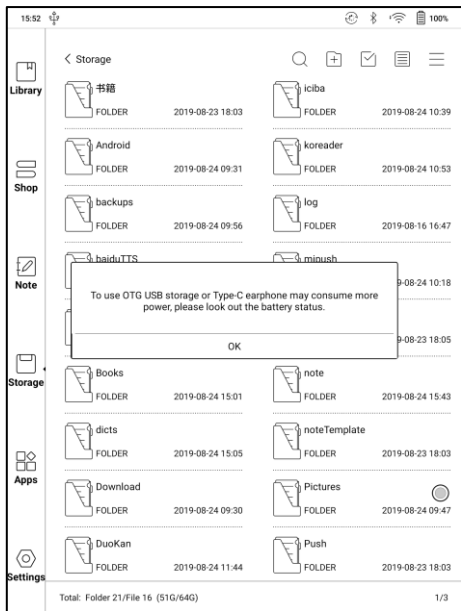


11. Apps

All installed apps are displayed in alphabetical order A-Z by default. Users can choose their preferred order.

Long press on each APP icon to pop up the Apps menu to delete or optimize.

Pre-installed apps on devices are not allowed to delete.

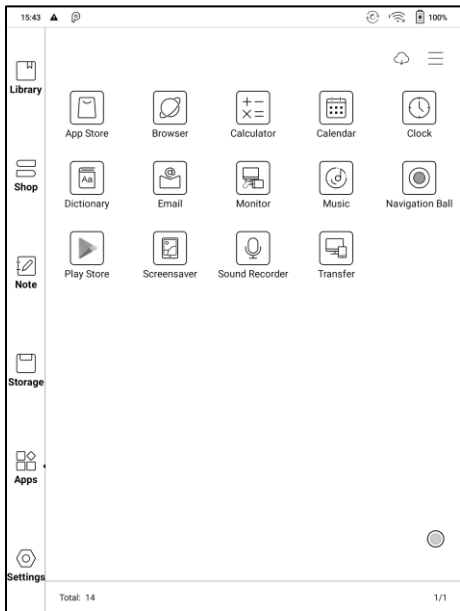


Navigation Ball


Navigation Ball is a circular ball that floats above all the apps on the screen. 5 buttons can be customized.

Single click on the ball to expand and collapse navigation menu.


It requires to turn off and on again after the new button settings.

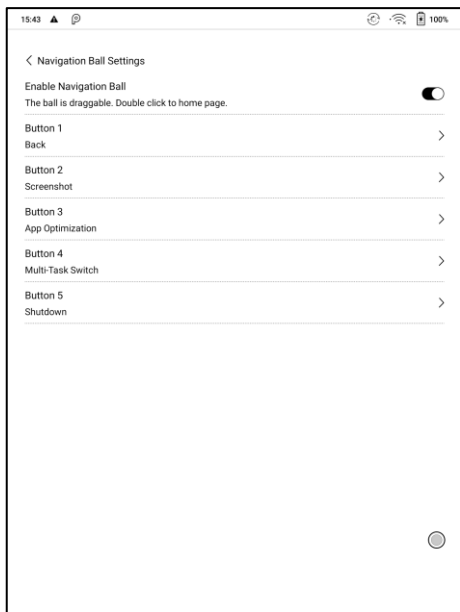

The 5 buttons can be set as multiple common functions including system operation, app switching, app optimization and so on.

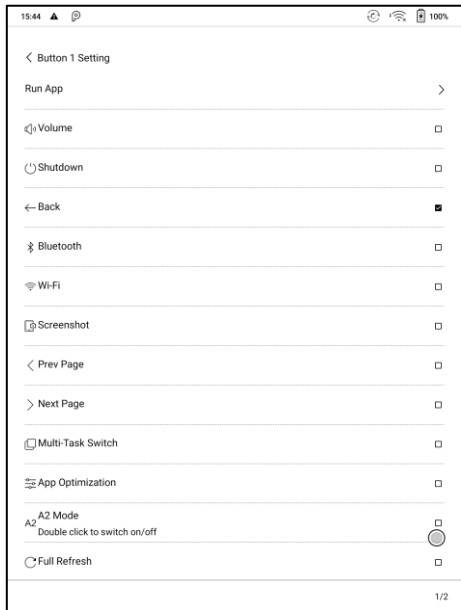


The app optimization can be called out in an app through the Navigation Ball, for real-time review after optimization.

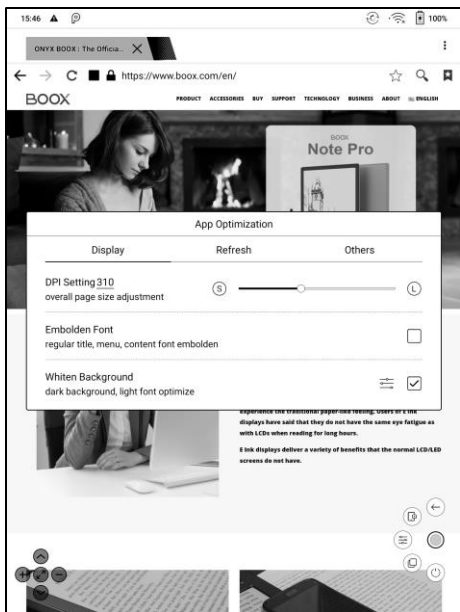

App Optimization

App optimization auto-runs after third-party apps installed. When you want to modify the parameters again, you can run the app and optimize it by Navigation Ball, or fetch a configuration from the Cloud.

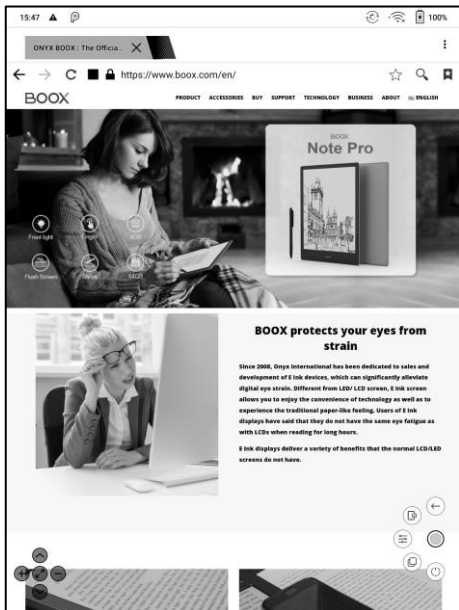


Third party applications can be optimized by several settings includes dpi, contrast, color filter, refresh mode, animation filter, etc. More optimization options will be provided later.

Dictionary

If users use dictionary apps the first time, to download dictionary package to local will be asked.


This function requires network connection.

Word pronunciation needs a dictionary file comes with voice files, currently TTS is not supported.

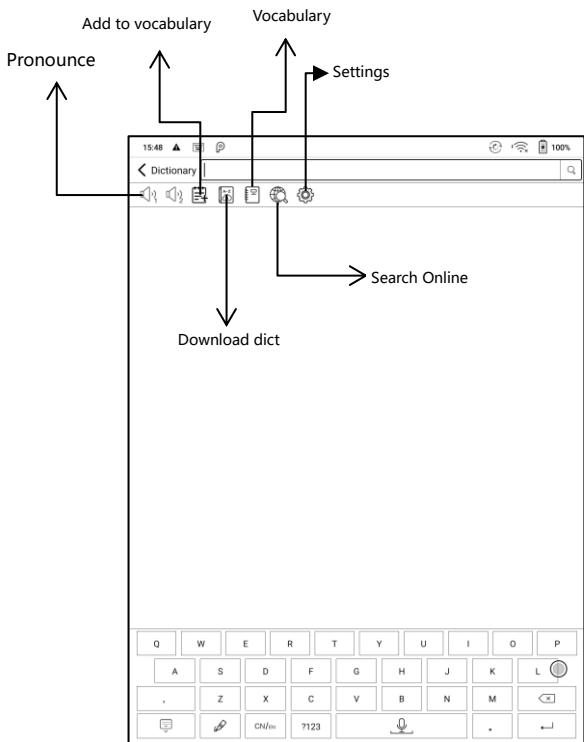

Users can install dictionaries themselves by putting the dictionary files to designated directory Storage\dicts\.

Please save the files under a folder, e.g. dicts\English-English Dictionary.

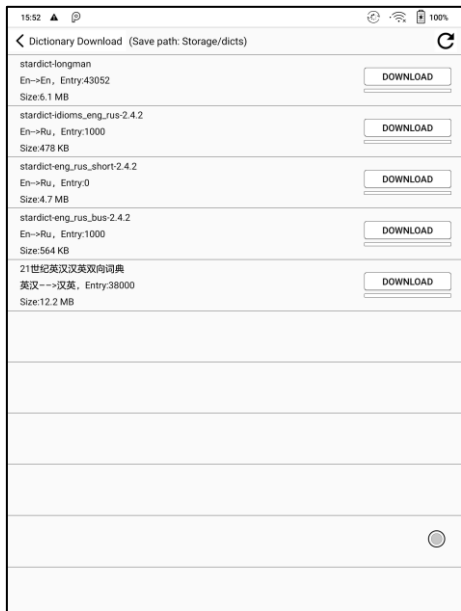

For the preferred dictionary settings, users can select up to 5 preferred dictionaries. Users will be asked to select again if the select number is less than 1 or more than 5.




After dictionaries are installed, users can look up new words in the search bar. Switch between different dictionaries by tapping a corresponding dictionary title on the bottom.

The search result is in terms of the related dictionary. If the word is unfound, try to use other dictionaries.

Looked-up words can be added to Vocabulary.

Users can divide the Vocabulary into groups. The words will be saved into the specified group once the group is selected.

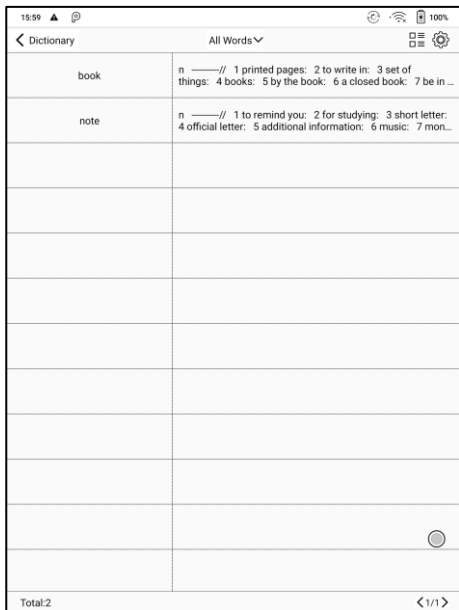

15:59 < Dictionary All Words ▾	
book	n ———// 1 printed pages: 2 to write in: 3 set of things: 4 books: 5 by the book: 6 a closed book: 7 be in ...
note	n ———// 1 to remind you: 2 for studying: 3 short letter: 4 official letter: 5 additional information: 6 music: 7 mon...
Total:2	< 1/1 >

Wi-Fi Transfer

This module contains Wi-Fi transfer and push.

Wi-Fi transfer allows to transfer ebooks to the device.



Please ensure that your PC or Android Phone and the device are in the uniform LAN, enter the provided IP address in a browser or scan the provided QR code to accomplish ebook transfer.



The ebooks are stored in a default path: \WifiTransfer.

Check the transfer list in “WIFI Transfer History”. You may delete the transfer history then the local files in the device would be deleted and vice versa.

Certain browsers may omits file suffix. This function does not support that kind of files. Please use other browsers (like UC, Chrome).

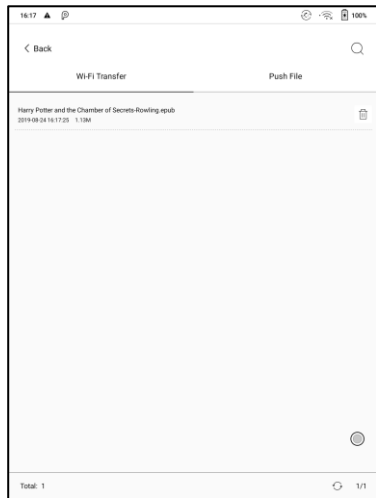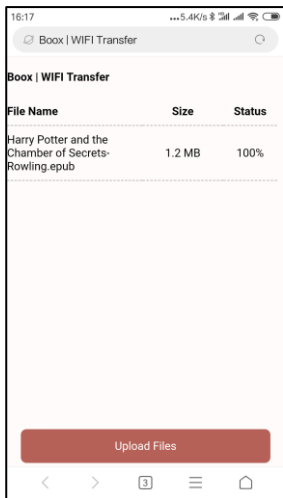

Push

Wi-Fi transfer allows to transfer files from PC to Boox device.

Website end address: send2boox.com


Transfer through the website auto-generates files in Epub.

To use it for the first time, you need to log in ONYX account and bind the Boox device with PC end. One account can bind with multiple devices. The size limit is 200M for every pushed file .




Push History

The history is ordered by time. To delete files in local is allowed. And you can also re-download them to the local from the Push History.

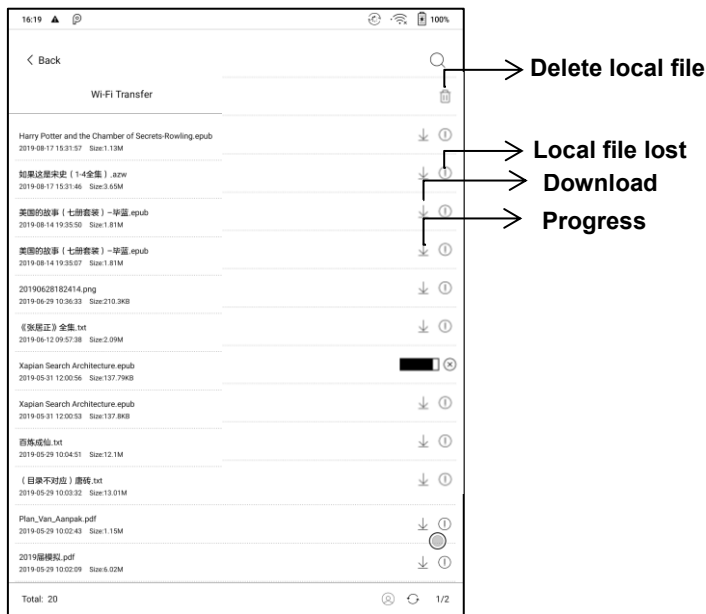


App Store (E-ink)

There are some usual third-party apps provided here. These apps are free versions from developers and their compatibility are not verified as full to the system. Paid apps download is not supported for now.

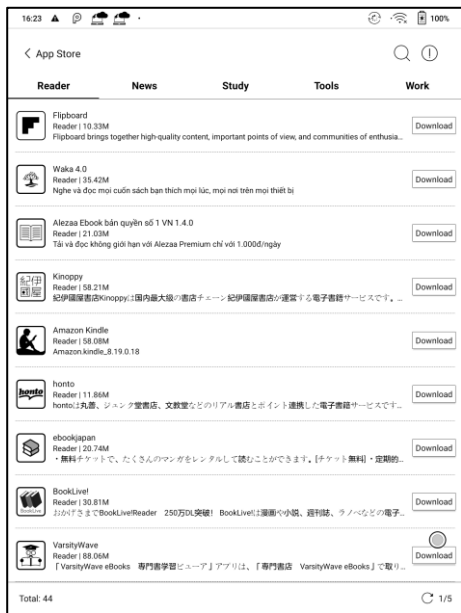

Monitor (secondary monitor)

Connected with a laptop or desktop with a HDMI cable, the device can be used as a secondary monitor. If it is not connected, the monitor app will notify to check the HDMI cable.

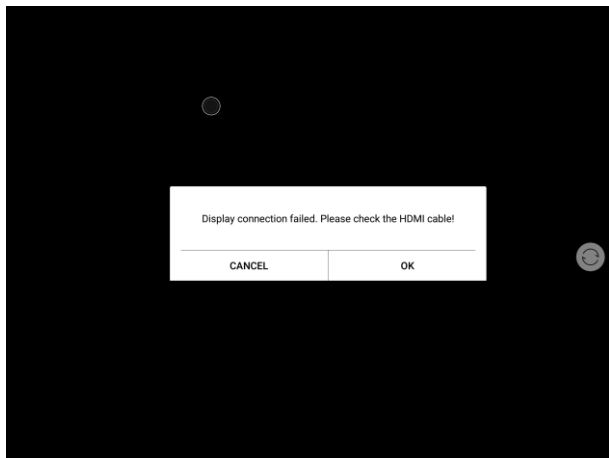

After connection, click any position of the device to activate the monitor. Open the monitor options on PC side and you can adjust the resolution of the device.


In the state of secondary monitor, the device is only user for monitor reading. Touch for operation do not work in this state.

It is recommended to charger during use since it consumes more power than usual in this state.

Click on the device to call out a monitor menu. Choose a refresh mode for different refresh rate and contrast depending on your needs. You can also do rotation and manual refresh here.


Text Mode: suitable for text reading. Full refresh occurs every 5 minutes. The refresh rate is adjustable.

A2 Mode, X Mode: Same as the refresh modes on system menu, but only for Monitor mode here .

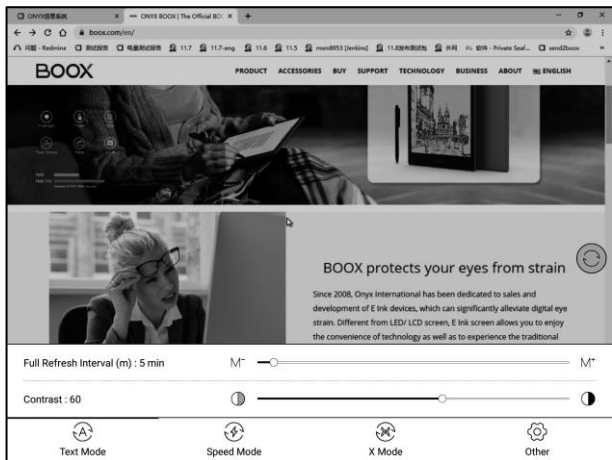

12. Settings

Model name, Android version, and Version are available on Settings. Users can click the image of the device for an online user manual and further manage settings of the whole device by clicking the below specific area.

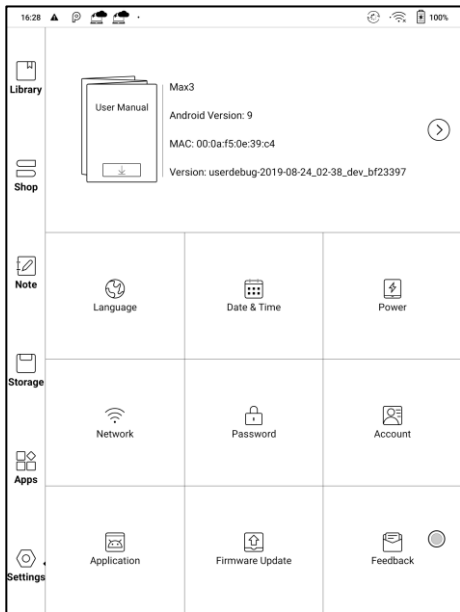


About Device

It contains model name, Android version, MAC address and firmware version.

Click the model number for more information, including Capacitive Touch Version, VCom, Other information, Factory Reset, etc.

Note: To run the function of factory reset would remove all of the user data.


Please make a data backup first.

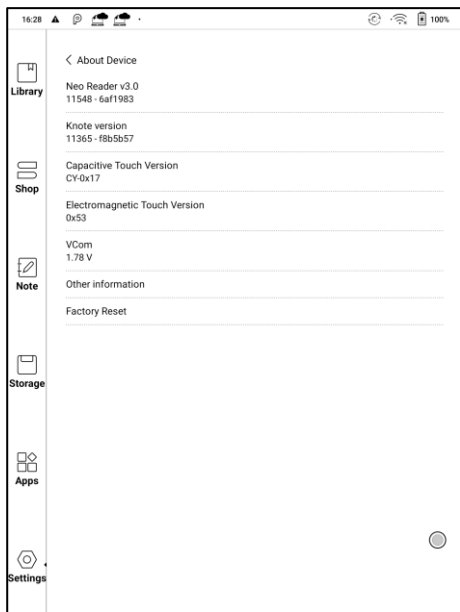

Language settings

Users can set system language, keyboard and input method and TTS on this page;


Users can set languages of the system and virtue keyboard. The system has an Android keyboard by default. Users can install third-party Apps for more input methods.

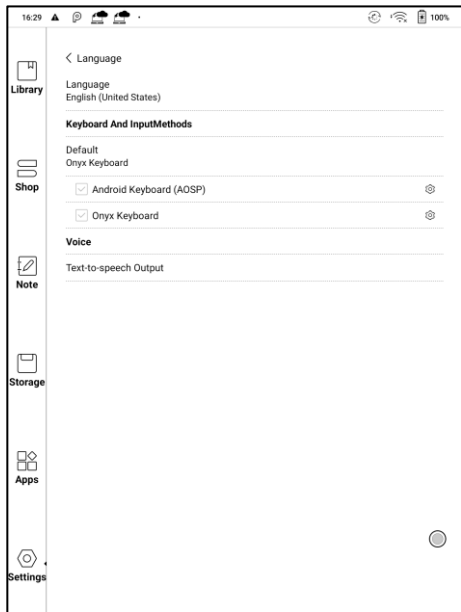

ONYX Keyboard

Typing, handwriting input and voice input are available for ONYX keyboard, and network connection is necessary for first time.

English is the default language of the handwriting input and users need to download the corresponding language package first if they want to use handwriting input for other languages.

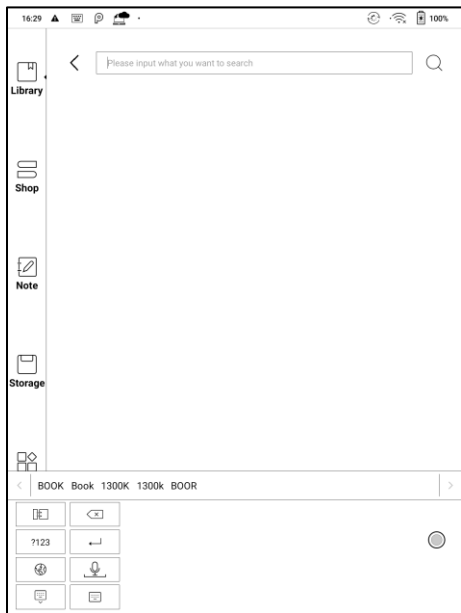


Handwriting Input Language Packages

Handwriting recognition package		
English (United States)		<input checked="" type="radio"/>
Chinese (China)		<input type="radio"/>
Chinese (China Hong Kong)	22.65M	↓
Chinese (China Taiwan)	24.19M	↓
English (United Kingdom)	8.46M	↓
English (Canada)	8.52M	↓
Russian (Russia)	8.17M	↓
Japanese (Japan)	16.38M	↓
Korean (South Korea)	15.95M	↓
French (Canada)	7.8M	↓
French (France)	8.14M	↓
German (Germany)	7.01M	↓
German (Austria)	5.87M	↓ <input type="radio"/>
Afrikaans (South Africa)	8.35M	↓

Total 59 1/5

Voice Input

Long press the Space button on the ONYX keyboard to enable the voice input first. Only English, Mandarin, Cantonese, and Sichuanese are supported.

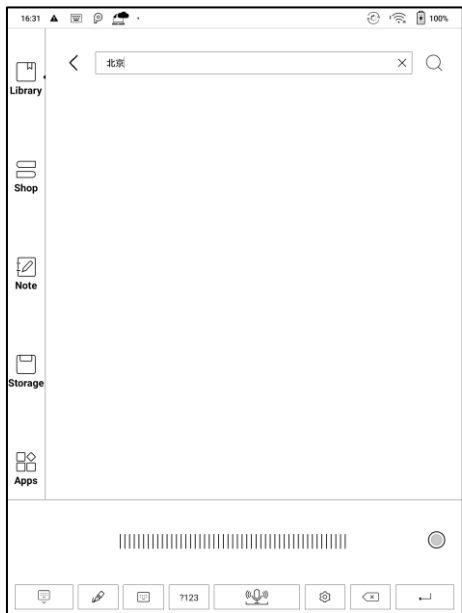

Date & Time

Users can choose either auto setting or manual setting for date and time. When the device is connected with internet, it will automatically set date and time according to local time zone. Manual setting requires to set time zone, date and time, and users can select their preferred time and date display format;

Power

Users can set screen auto sleep timeout, Power off timeout, network inactivity timeout, etc.

Network


This is for Wi-Fi \VPN\Bluetooth setting. When Wi-Fi is connected, users can browse webs and download books via the internet on the device.

Wi-Fi Settings

Slide Wi-Fi On, then available networks will be listed. Users can choose a network, then input password to connect with internet.

After Wi-Fi is connected successfully at the first time, the device will save Wi-Fi information automatically. Users only need to turn on Wi-Fi on notification bar if using the same WIFI next time.


Click the “+” button at the top right of the Wi-Fi page, users could manually connect to other network which is not listed, such as 802.1xEAP.

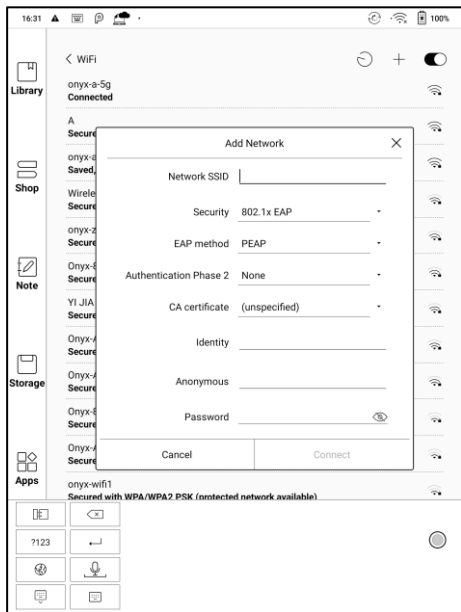

Bluetooth Settings

Turn on Bluetooth, you can search for nearby Bluetooth devices and then send connection requests.

Bluetooth needs to be paired before use. Currently only support the eReader to receive documents, send documents from Boox eReader to other devices is not supported.

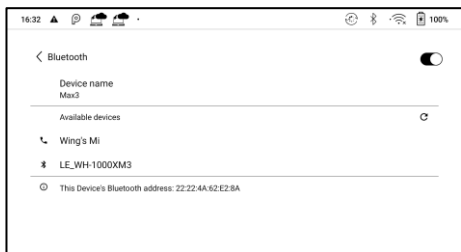

VPN Setting


- When the VPN is turned on for the first time, the system requires to set a password. This password needs to be used only for screen unlock or when the factory settings are restored.

Password

Lock screen password and fingerprint password are supported.

Lock screen password


Lock screen password requires 4-8 digital number.

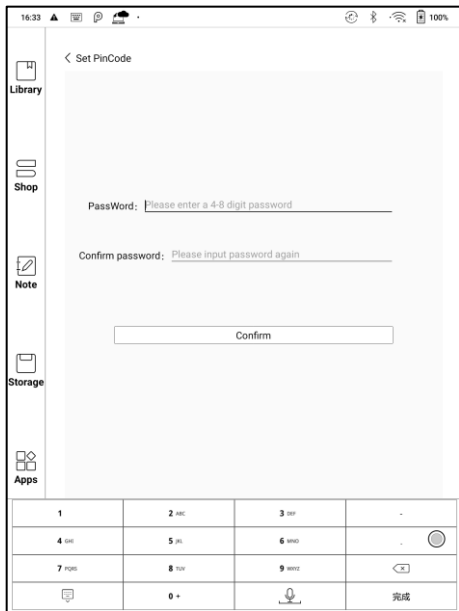

Fingerprint Password

Only after the lock screen password has been set successfully, the fingerprint password is available. A maximum of 5 fingerprint passwords could be set on the device.


Once the lock screen password has been removed, the fingerprint password would be deleted at the same time. Users need to reset the fingerprint password at the same time.

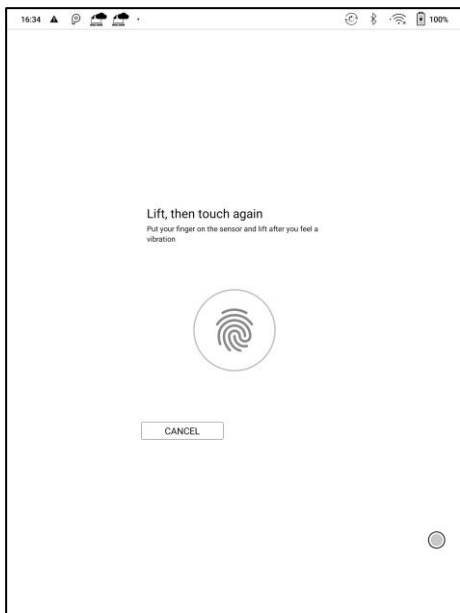

Reset Password


Users could reset password by logging in ONYX account via phone number or email. (Log in via WeChat is not supported to reset password)

It is not available to reset password without logging in ONYX account first.

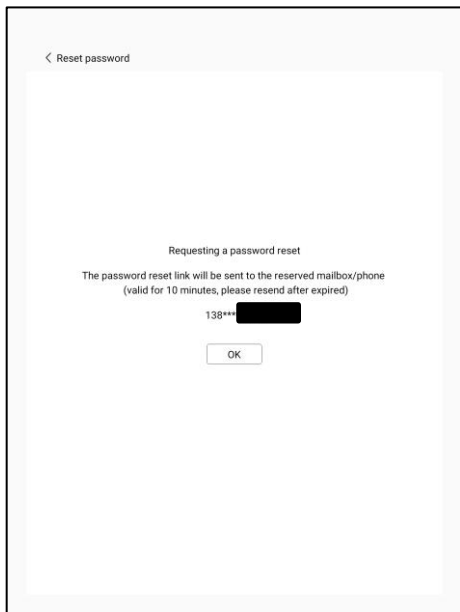


Account

System account settings, ONYX account, and other account can be managed here. Users could further manage their Google account, Exchange and other accounts via System Account Settings.

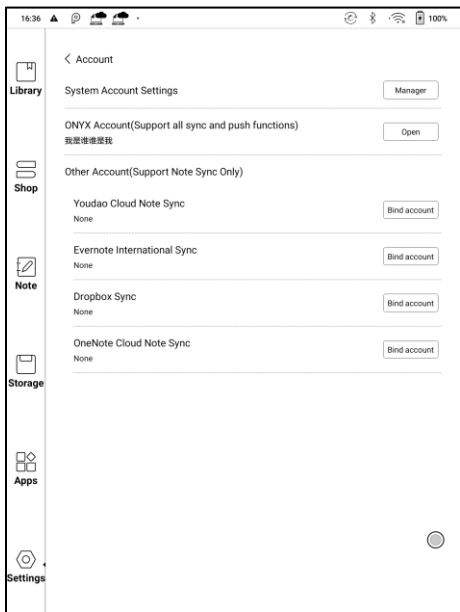


ONYX Account

Users could log in the ONYX account via phone number, email, and WeChat account on Boox devices or on send2boox.com. Users could back up and sync the notes among different devices with the ONYX account. Password reset is only available with the ONYX account logging in via phone number or email.

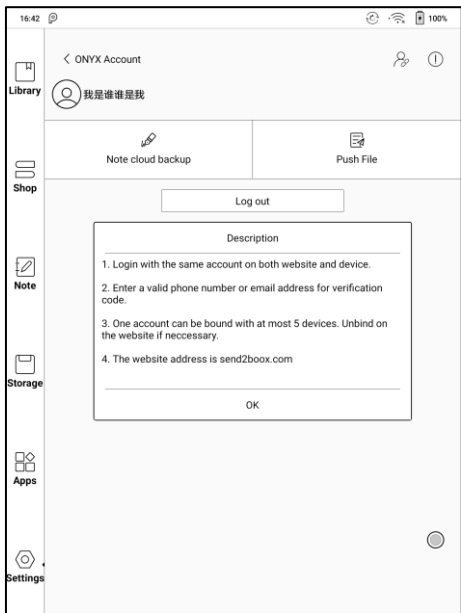


Three logging methods, phone number, email and WeChat account could be bound to each other. Users could unbind the phone number and email, but the WeChat account is not supported.

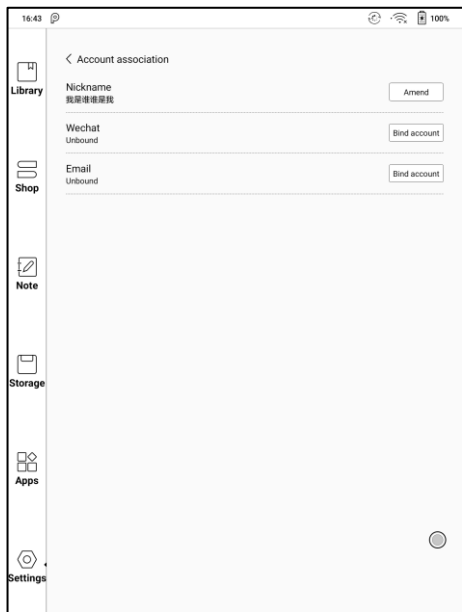

Application

Users can select whether to allow installing unknown source Apks, USB debugging, enable shop, enable Google Play, etc.

Users need to activate the Google Play Store first by going to Settings/ Apps/ Enable Google Play/ GSF ID with the Google account. After 5 minutes, you shall reboot your device and sign in to Google account again to use the Google Play Store.

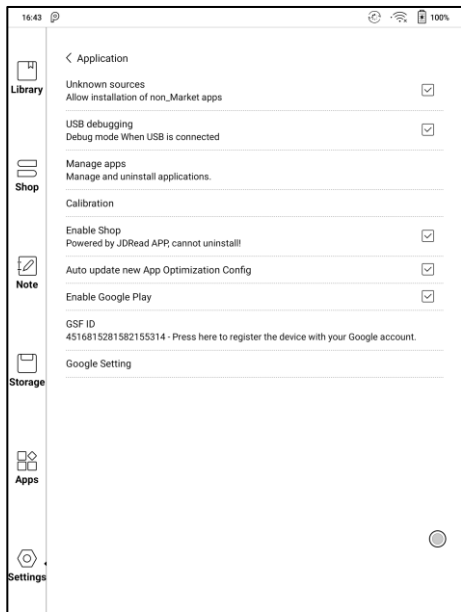

Firmware Update

Users can get the Model number, Android version, Build number and update check. Upgrade checks the local package first then online package with a network connection. Upgrade pause and breakpoint download are allowed. Please ensure the device has more than 30% power and sufficient capacity before the update.

Feedback

Welcome to submit any technical problem or advice to us.

This function collects system information for problem judgment. And Onyx shall never disclose users' device information.

13. FAQ

How to install a dictionary

The device supports dictionary formats of stardict\bgl\mdict. Users can download the dictionary packages online, copy to folder "Root Directory\dicts\ ". Dictionary is available to use after that when users are reading;

How to add fonts

Users can download fonts online, then copy the fonts to the folder /fonts; Users can select the installed fonts when reading.

How to update

Update locally

Download firmware update.upx from our official web. Copy the firmware to root directory of local storage. Go to settings –about – system update, click the button check update from local storage, and follow the instruction to update the device;

Update by OTA

Users can update the firmware online via OTA (Setting\About\System update). Please connect Wi-Fi when updating the device by OTA;

How to change screen saver/power off

Long press PNG format images to pop up menu, select "Set as screen saver", choose to replace the original standby or shutdown; Currently 3 standby images and 1 shutdown image are supported.

14. Specifications

	Max3
Processor	Octa 2.0 GHz
RAM	4G LPDDR3
OS	Android 9
Storage	64G
Screen	E-ink display with Regal refresh
Screen Size	13.3 inch
Resolution	2200*1650
Touch	Stylus + Capacitive touch
Front Light	Not support
Wireless	WIFI (2.4G+5G) + Bluetooth (4.1)
Battery	4300 mAh
Button	Back button (Finger Identification supported)
USB	Type-C (support USB OTG)
Others	Dual Mic, Dual Speaker, Micro HDMI (Secondary monitor supported)
Size	309.8x227.8x6.8mm
Weight	≤490 g (battery included)

Operating Temperature	0°C- 50°C
Book Formats	PDF, EPUB , TXT, DJVU, HTML, FB2, DOC, MOBI, CHM, etc.
Image Formats	PNG, JPG, BMP
Audio Formats	WAV , MP3
Apps	Third party APP installation is supported
Browser	Support
Language	Multi-language supported
File Directory	Support
Dictionary	Support
TTS	Support
Refreshment Mode	Four levels of refresh mode supported
DRM	Support
Firmware Update	Locally update and OTA update are available
Certification	CE, Rohs

15. Declaration

Onyx International Inc. reserves the right to modify the content of the Quick Start Guide and User Manual without further notice.

For more information, please visit our website at www.boox.com.

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.