





PSD NVNT ax40 242@61 5965MHz Ant1 MIMO




PSD NVNT ax40 242@61 5965MHz Ant2 MIMO

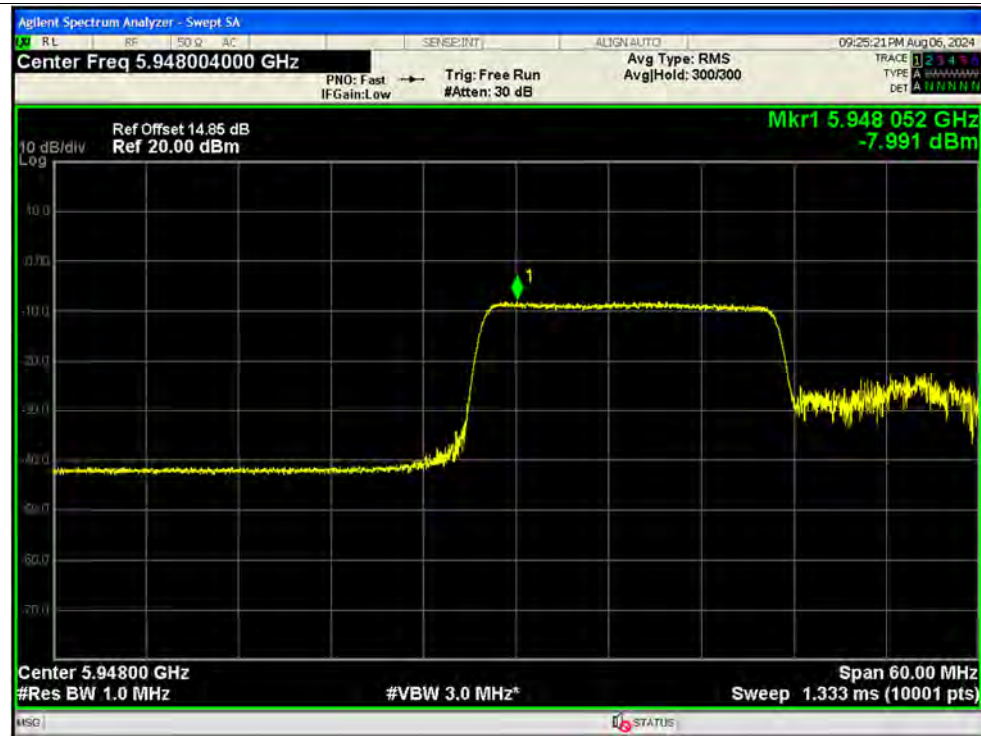


PSD NVNT ax80 26@0 5985MHz Ant1 SISO

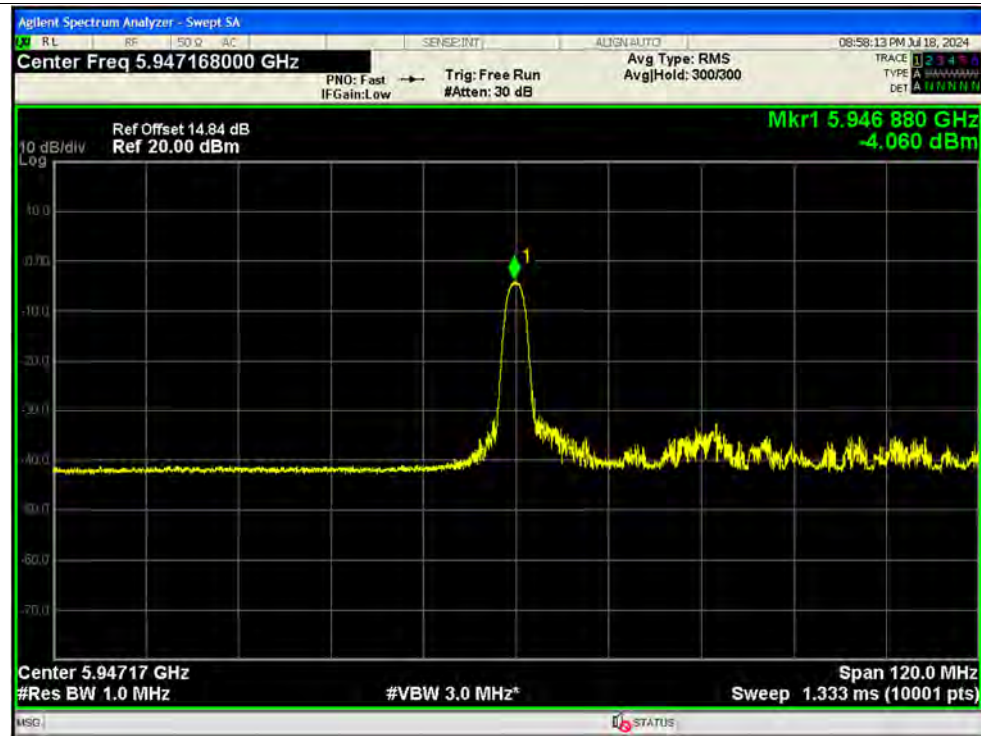


PSD NVNT ax80 26@0 5985MHz Ant2 SISO

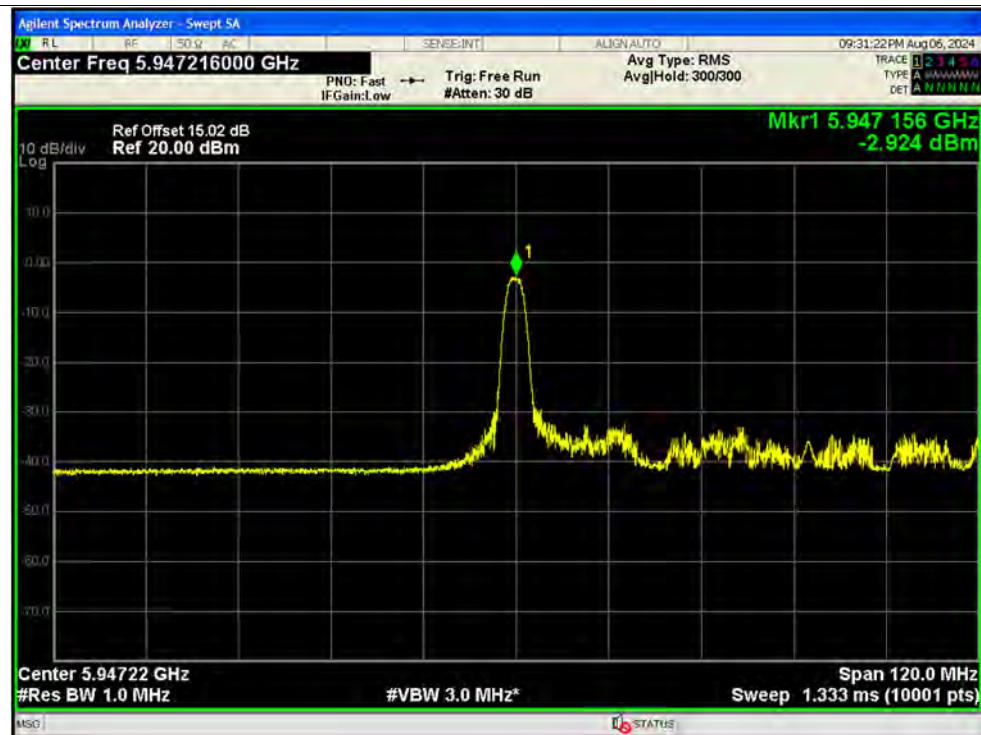


PSD NVNT ax80 26@0 5985MHz Ant1 MIMO

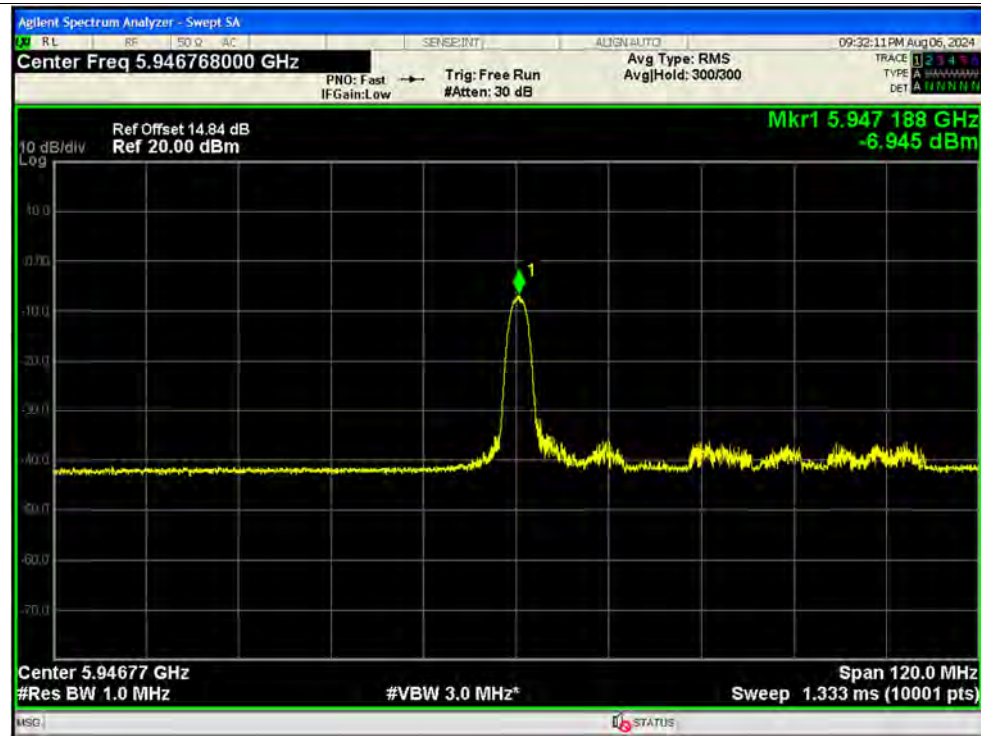


PSD NVNT ax80 26@0 5985MHz Ant2 MIMO

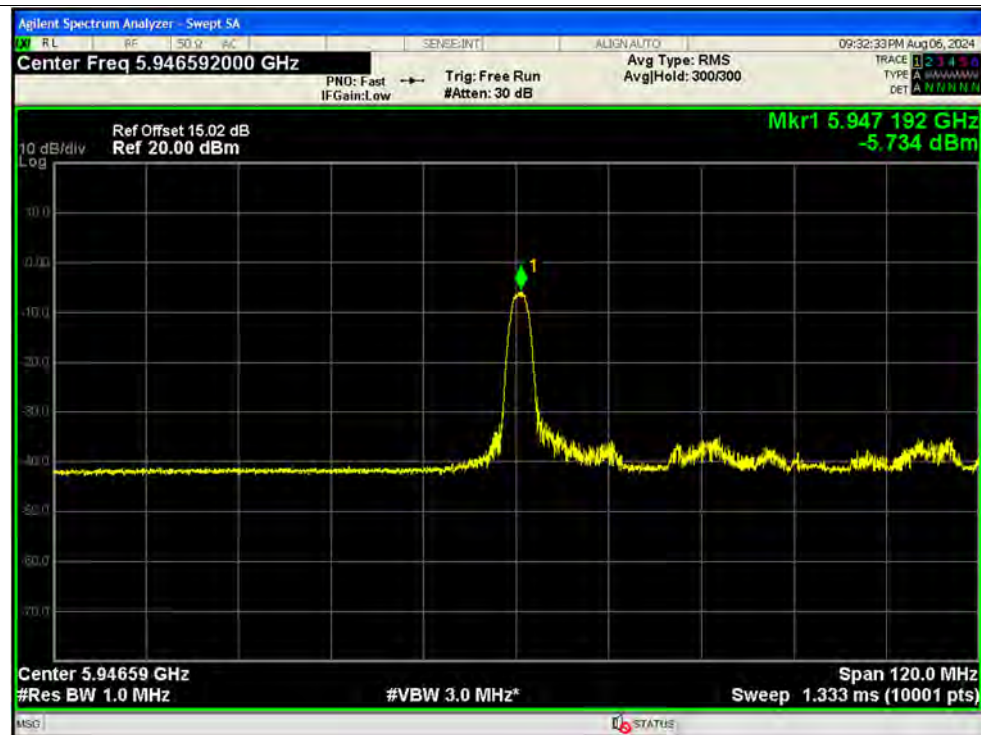


PSD NVNT ax80 52@37 5985MHz Ant1 SISO

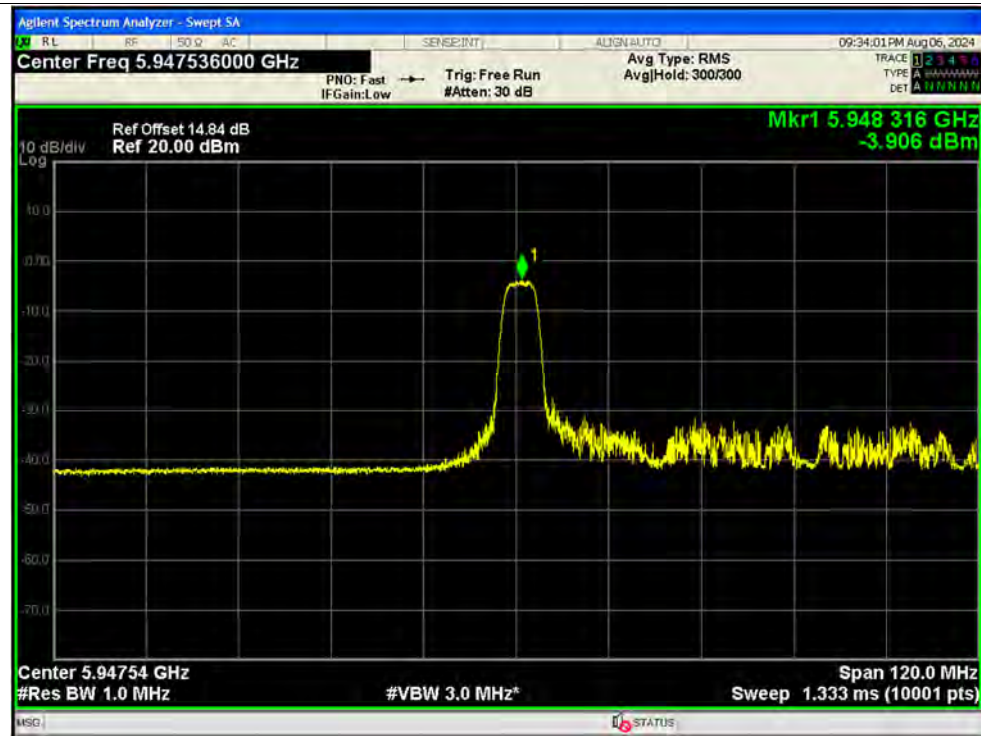


PSD NVNT ax80 52@37 5985MHz Ant2 SISO

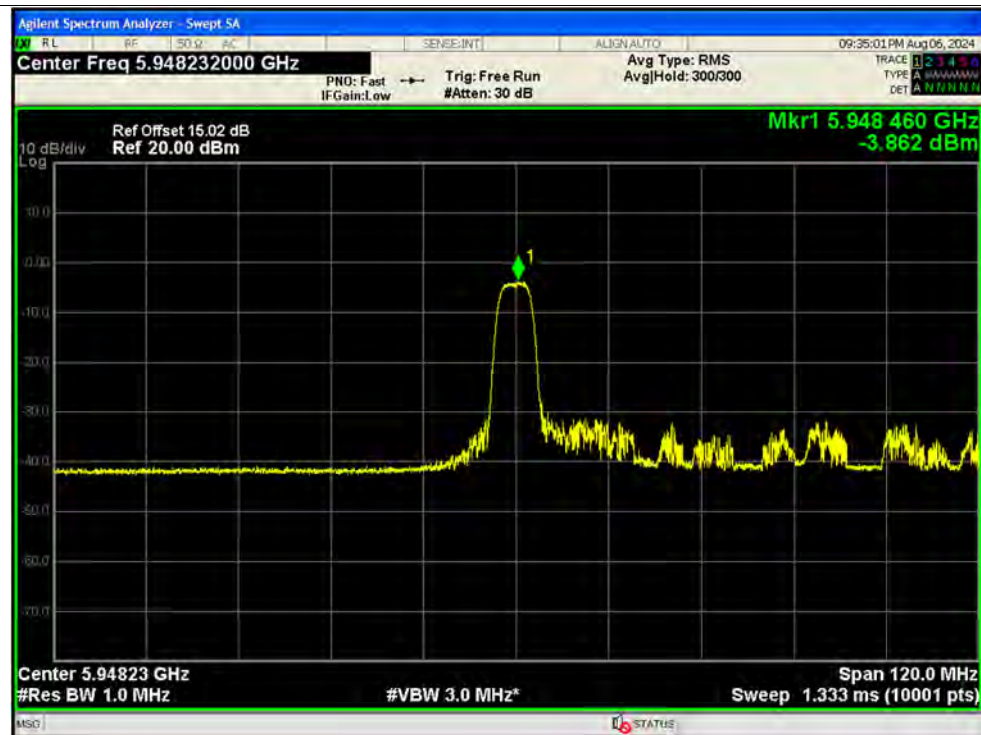


PSD NVNT ax80 52@37 5985MHz Ant1 MIMO

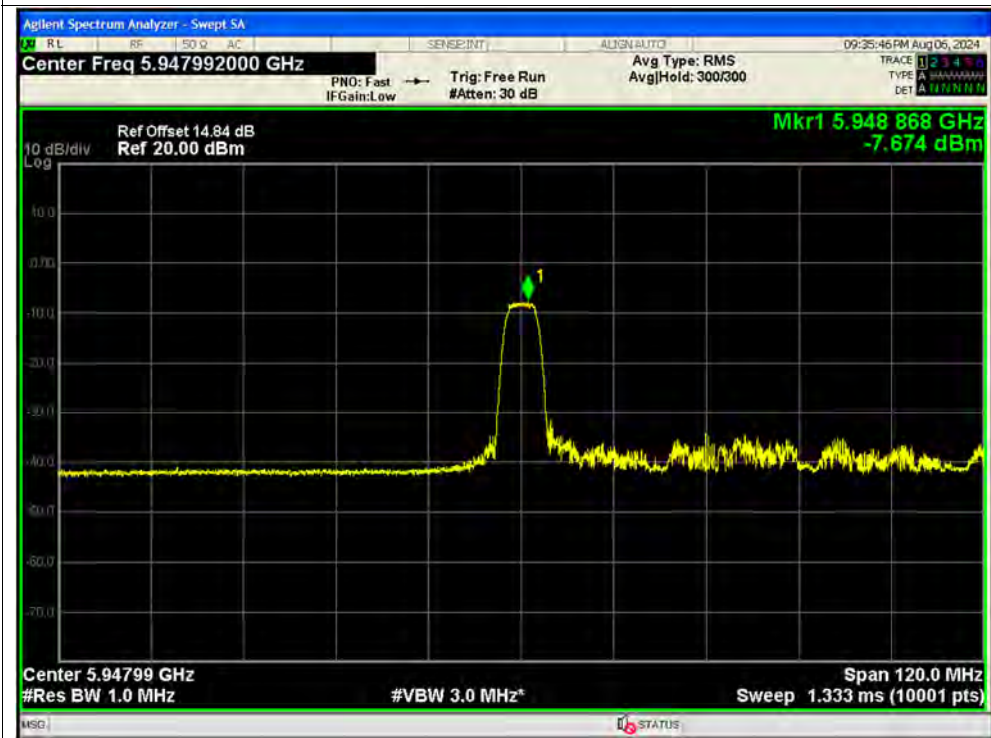


PSD NVNT ax80 52@37 5985MHz Ant2 MIMO

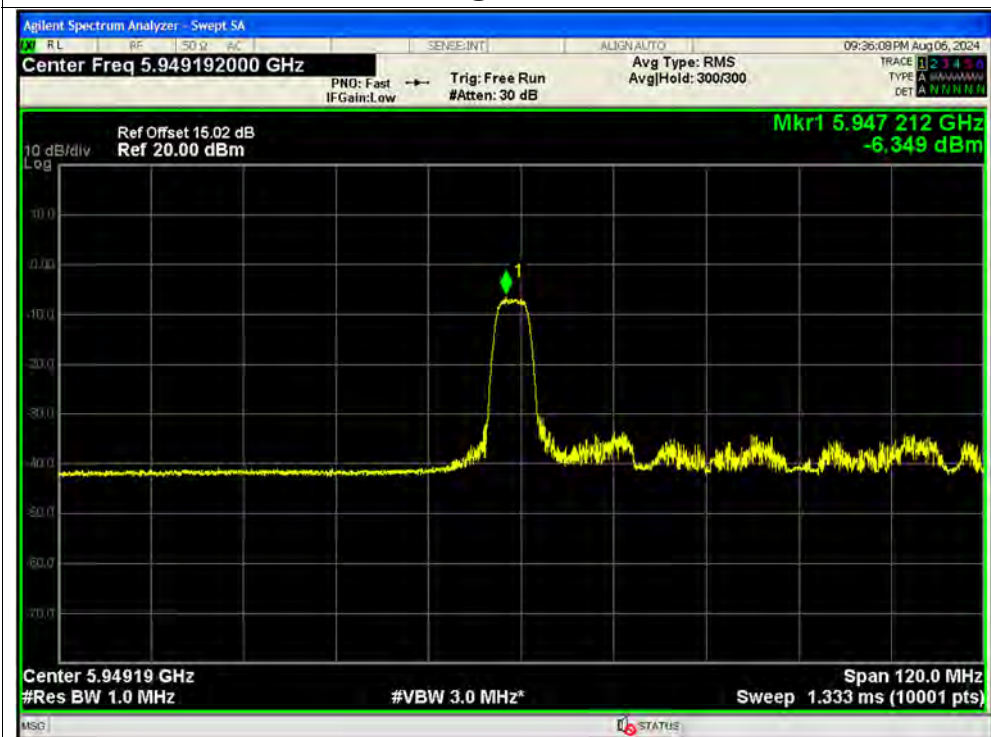

PSD NVNT ax80 106@53 5985MHz Ant1 SISO

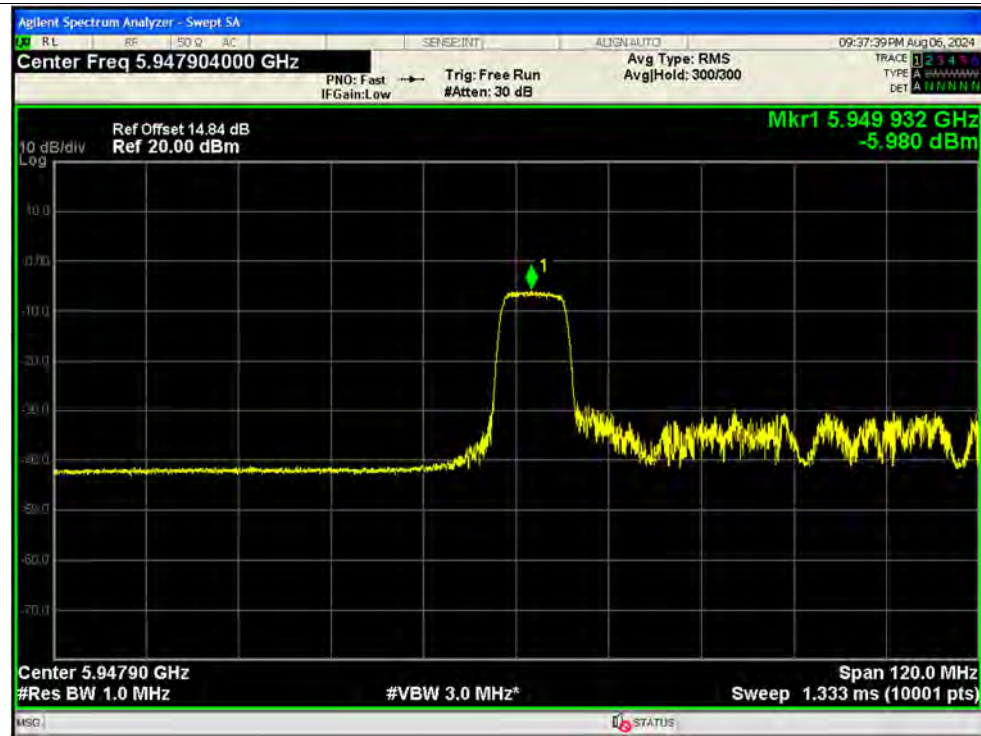


PSD NVNT ax80 106@53 5985MHz Ant2 SISO

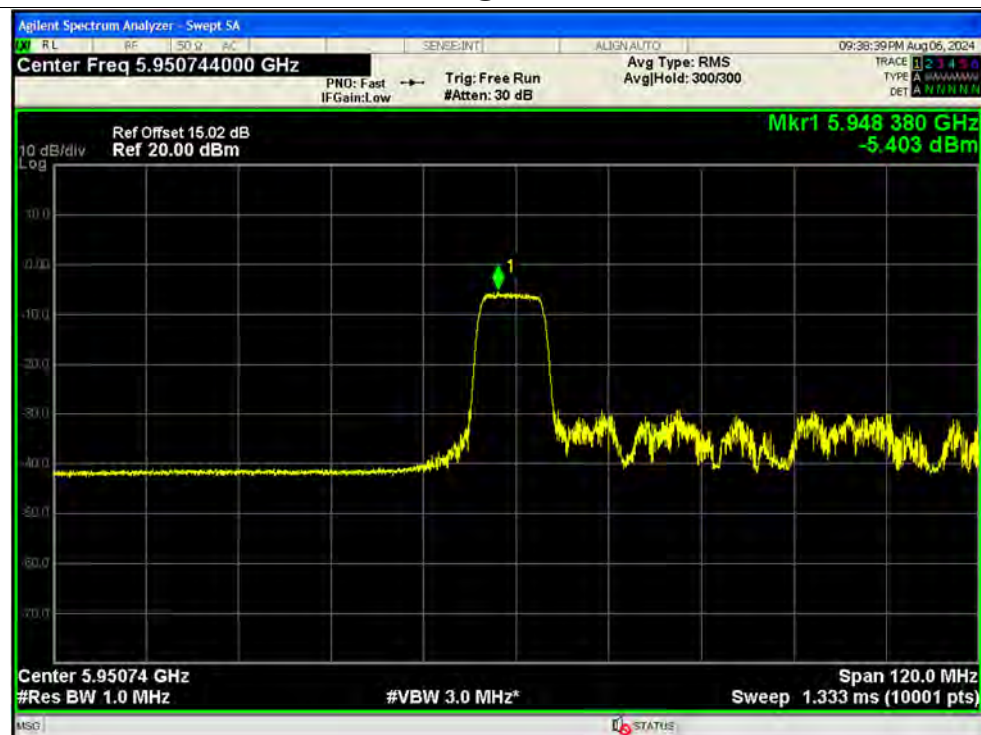




PSD NVNT ax80 106@53 5985MHz Ant1 MIMO

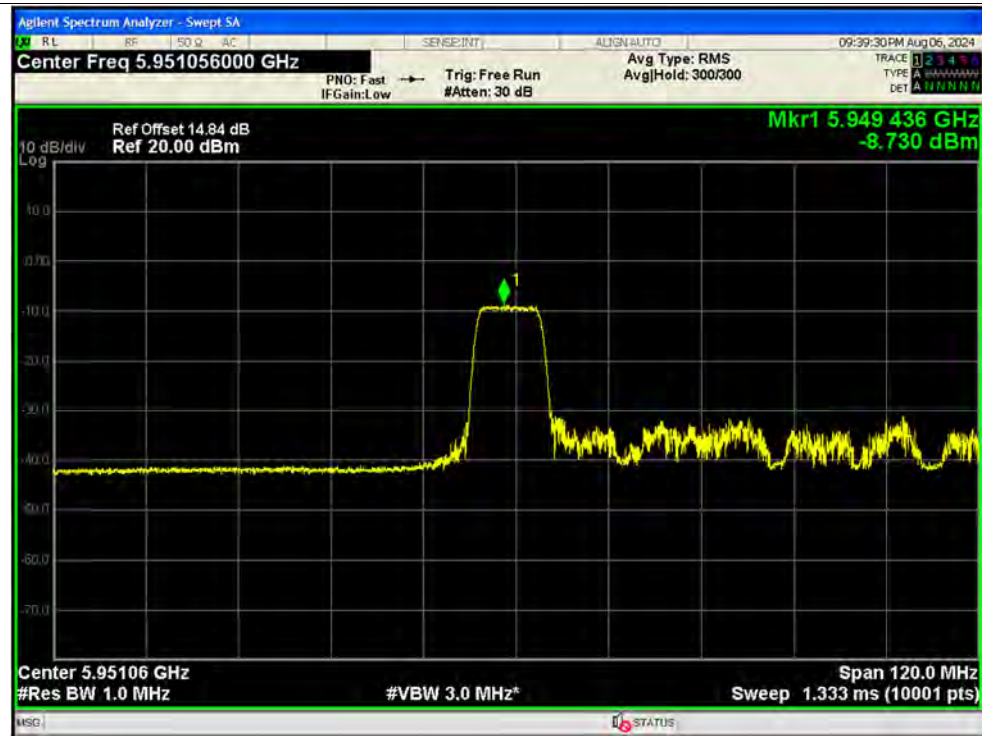

PSD NVNT ax80 106@53 5985MHz Ant2 MIMO

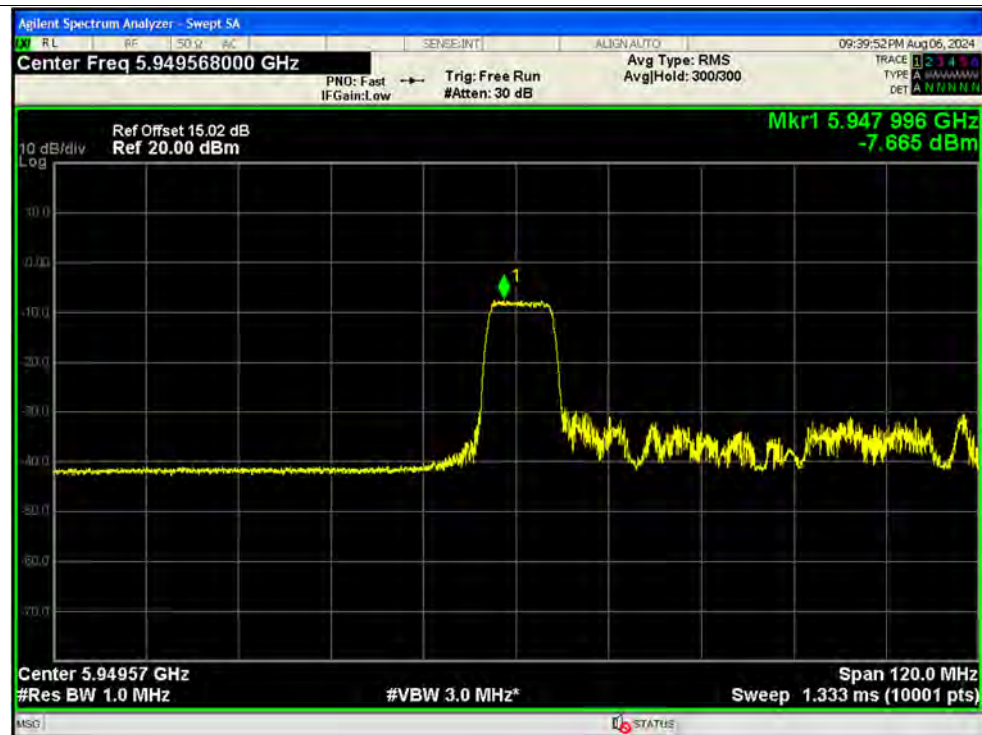

PSD NVNT ax80 242@61 5985MHz Ant1 SISO



PSD NVNT ax80 242@61 5985MHz Ant2 SISO





PSD NVNT ax80 242@61 5985MHz Ant1 MIMO



PSD NVNT ax80 242@61 5985MHz Ant2 MIMO



PSD NVNT ax80 484@65 5985MHz Ant1 SISO



PSD NVNT ax80 484@65 5985MHz Ant2 SISO




PSD NVNT ax80 484@65 5985MHz Ant1 MIMO




PSD NVNT ax80 484@65 5985MHz Ant2 MIMO




PSD NVNT ax160 26@0 6025MHz Ant1 SISO

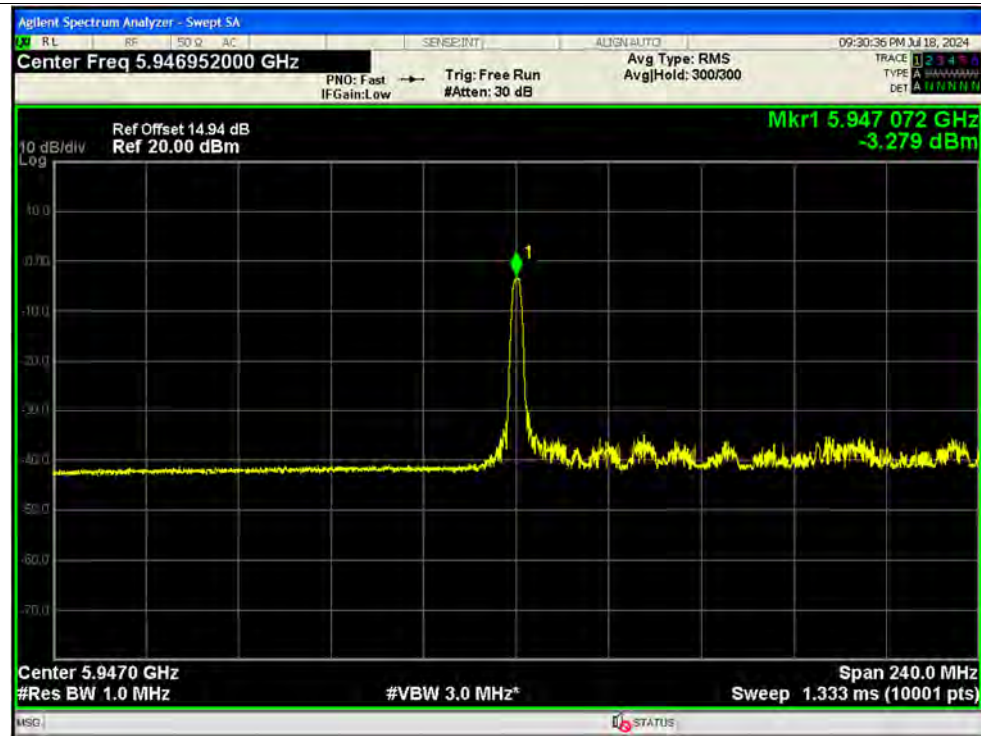


PSD NVNT ax160 26@0 6025MHz Ant2 SISO

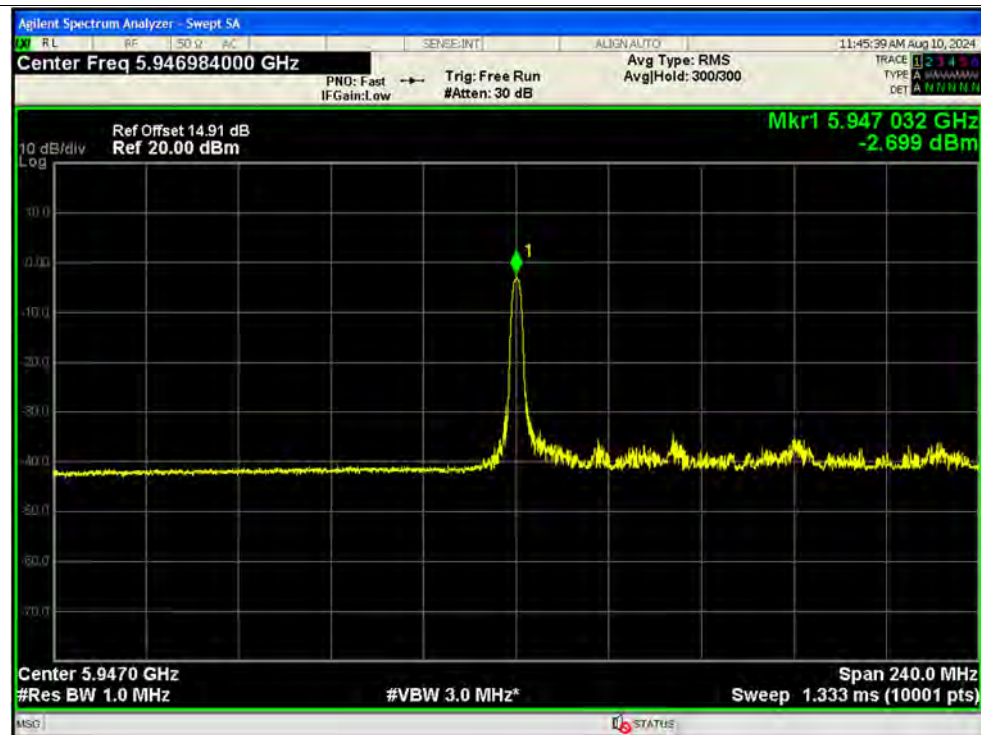


PSD NVNT ax160 26@0 6025MHz Ant1 MIMO

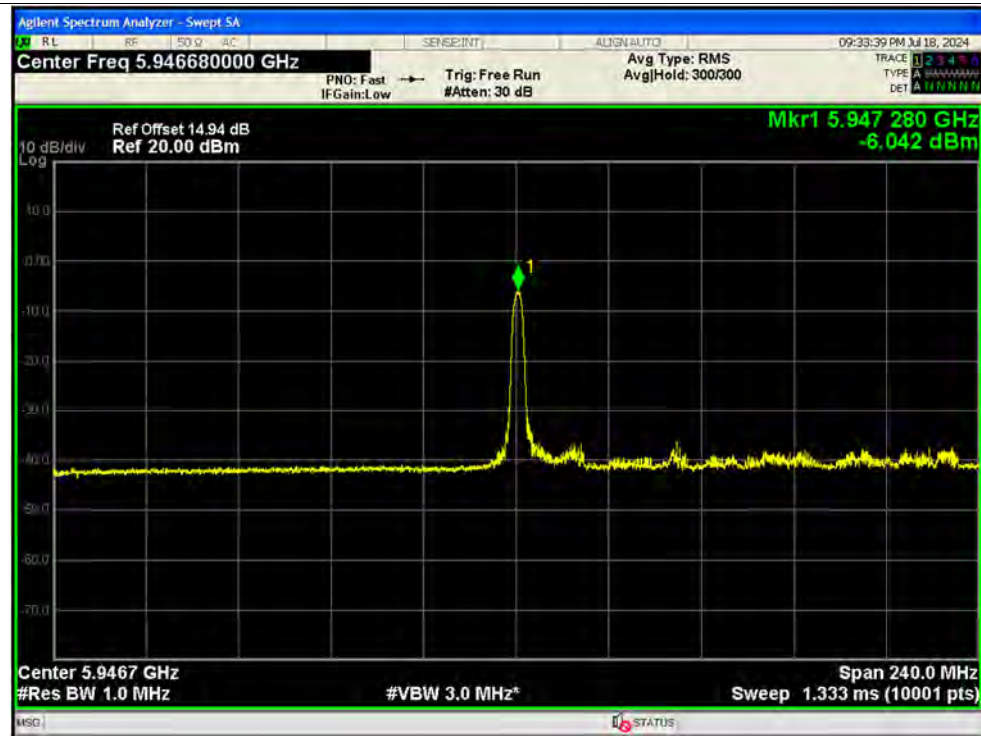


PSD NVNT ax160 26@0 6025MHz Ant2 MIMO

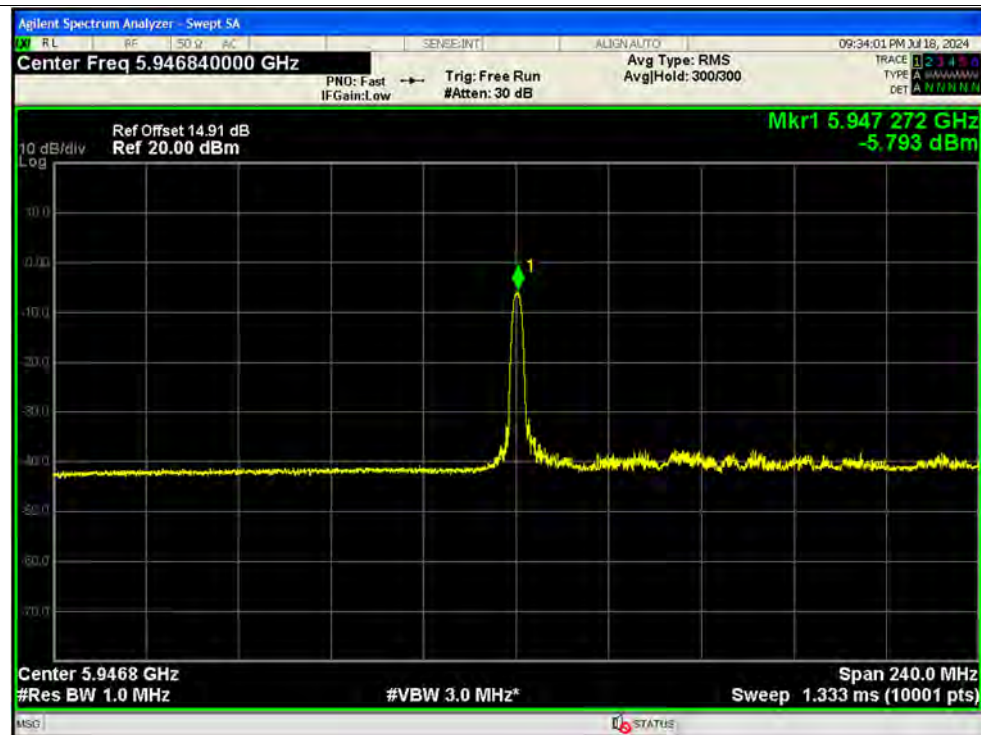


PSD NVNT ax160 52@74 6025MHz Ant1 SISO

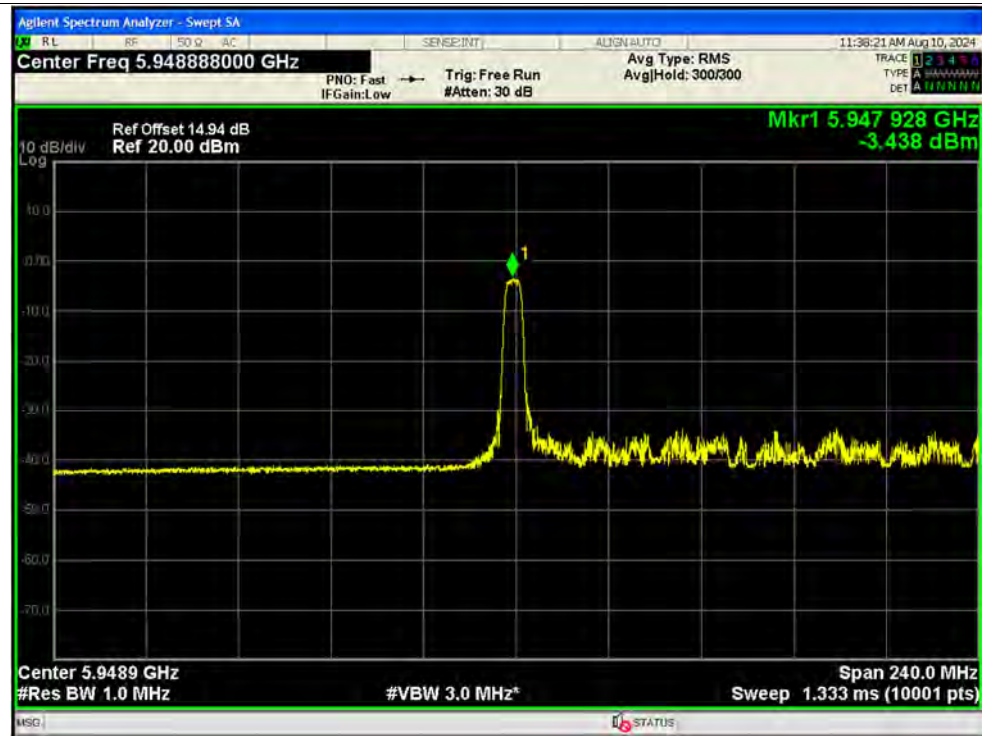


PSD NVNT ax160 52@74 6025MHz Ant2 SISO

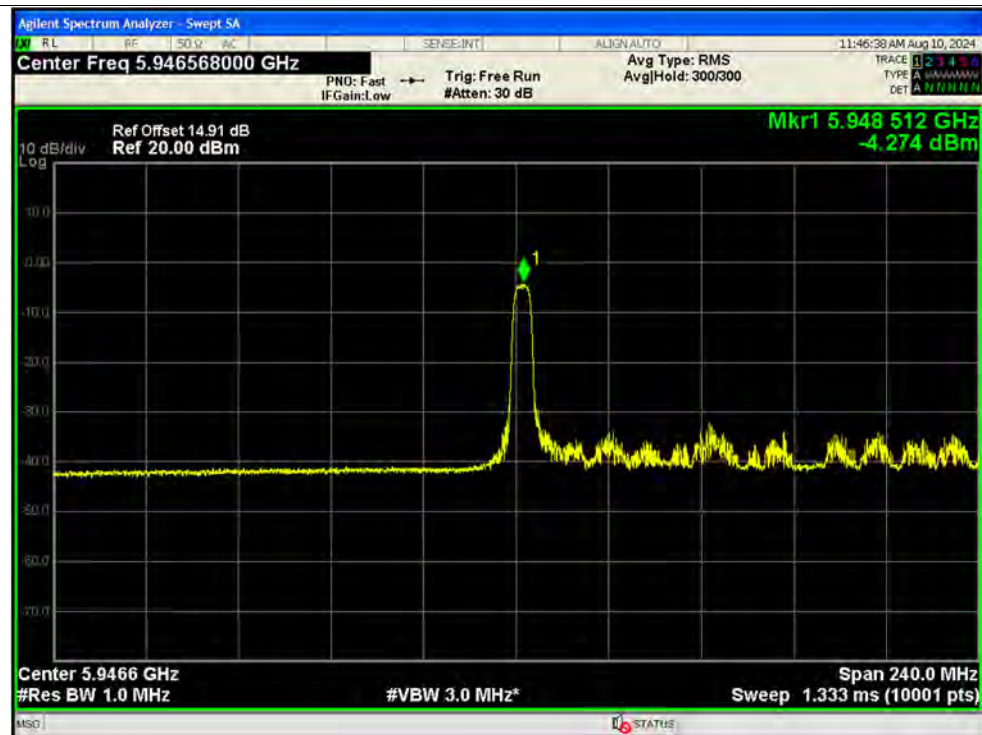


PSD NVNT ax160 52@74 6025MHz Ant1 MIMO

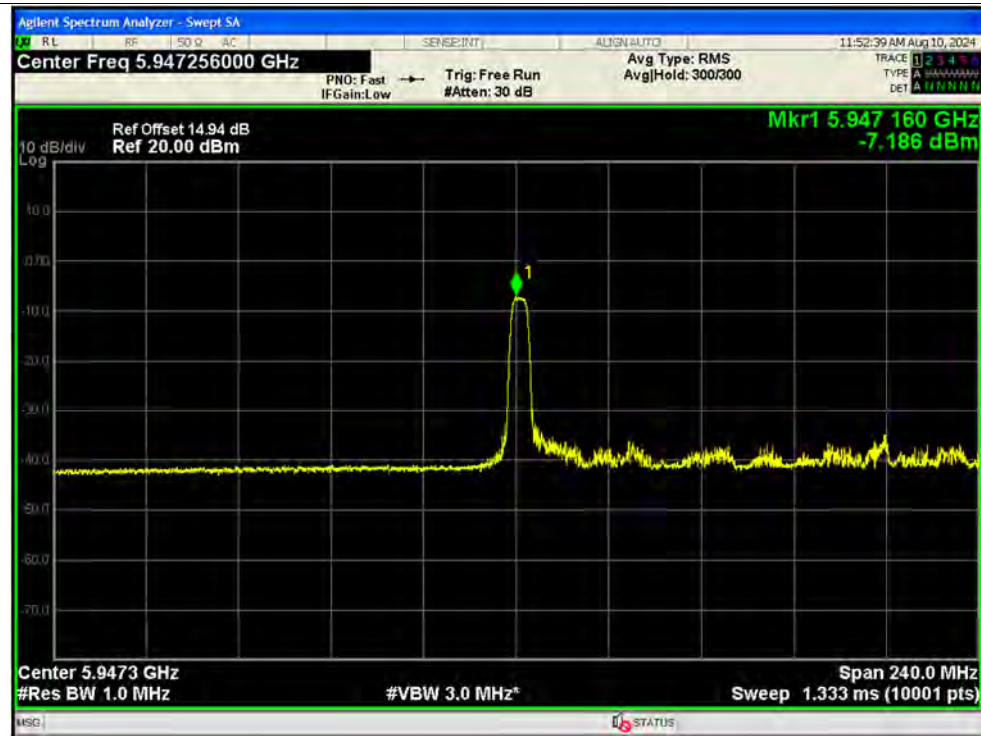


PSD NVNT ax160 52@74 6025MHz Ant2 MIMO

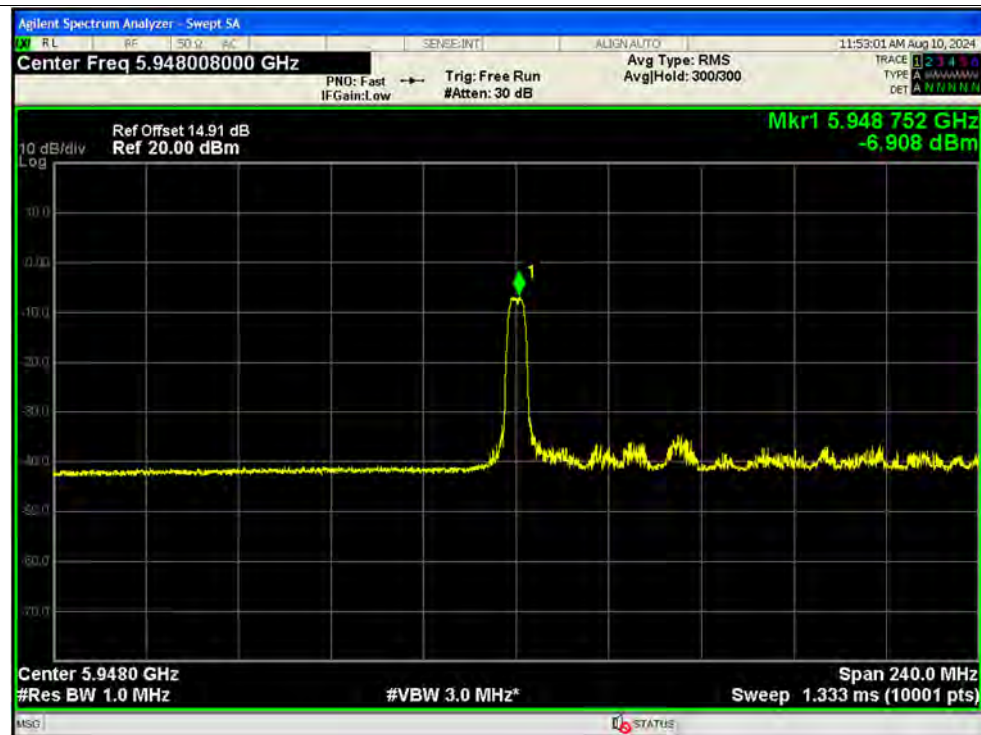


PSD NVNT ax160 106@106 6025MHz Ant1 SISO

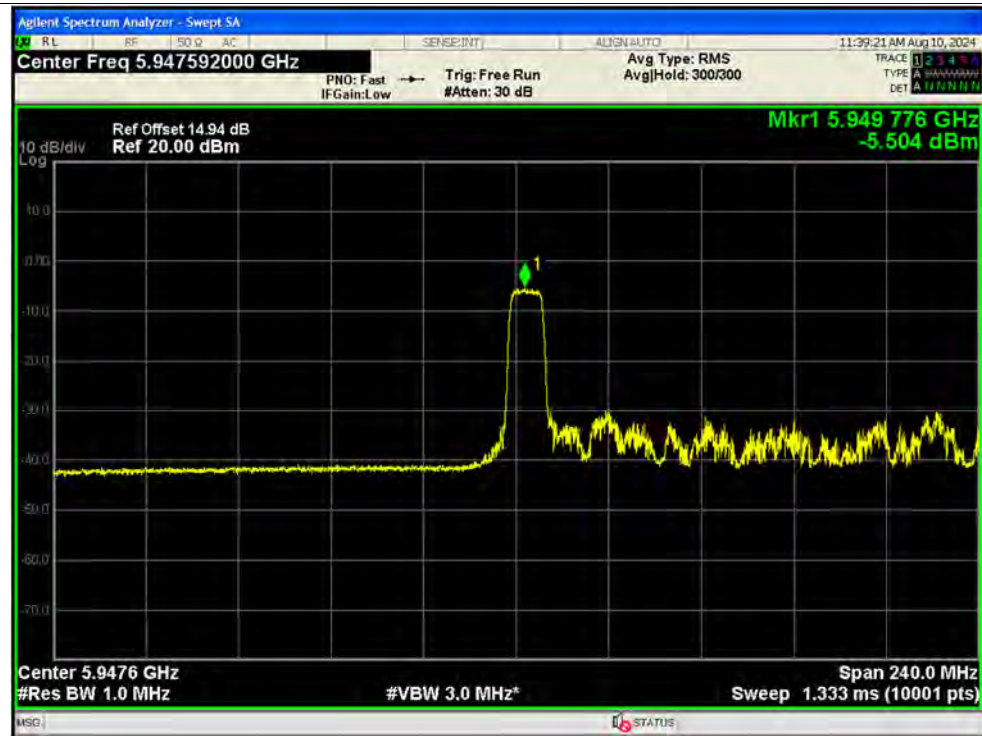


PSD NVNT ax160 106@106 6025MHz Ant2 SISO

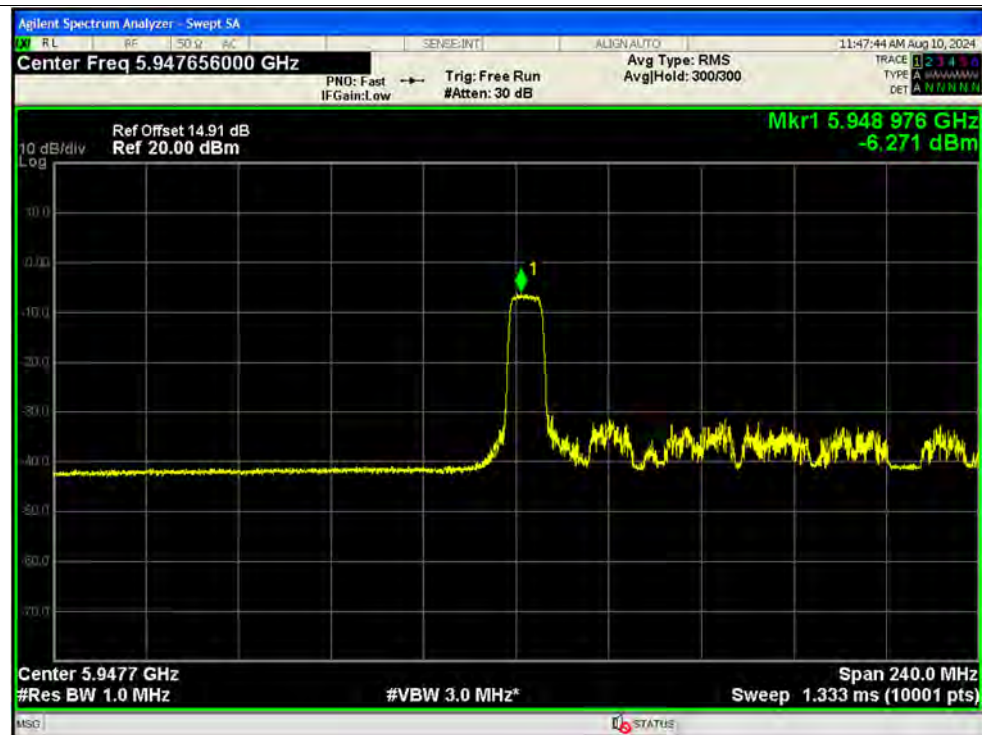


PSD NVNT ax160 106@106 6025MHz Ant1 MIMO

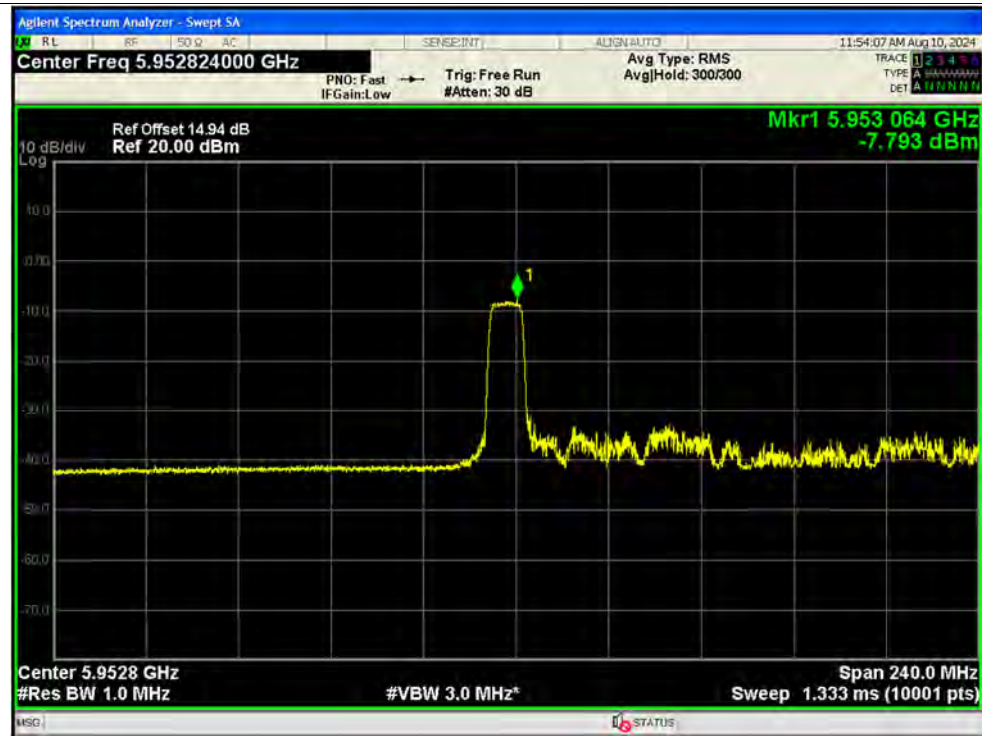

PSD NVNT ax160 106@106 6025MHz Ant2 MIMO

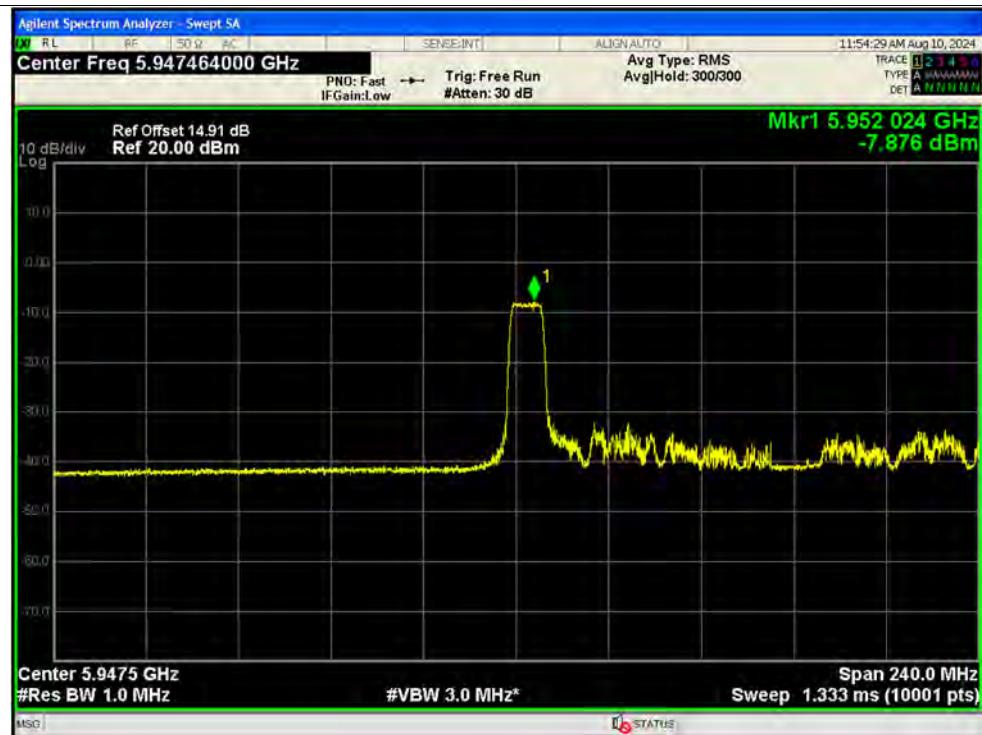

PSD NVNT ax160 242@122 6025MHz Ant1 SISO

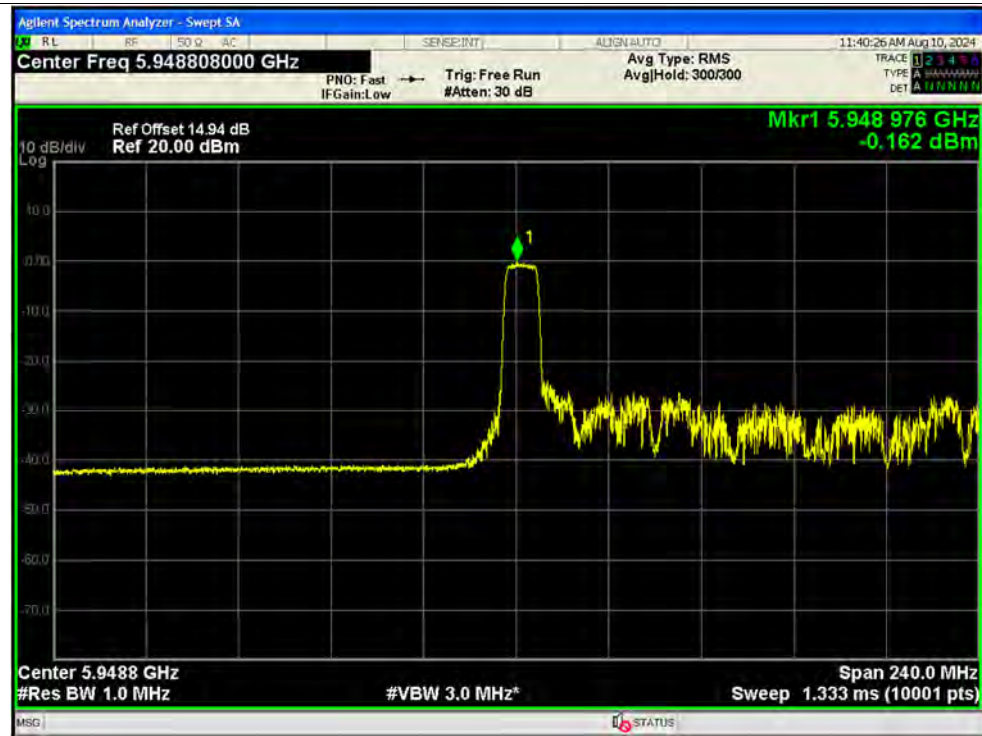

PSD NVNT ax160 242@122 6025MHz Ant2 SISO






PSD NVNT ax160 242@122 6025MHz Ant1 MIMO



PSD NVNT ax160 242@122 6025MHz Ant2 MIMO

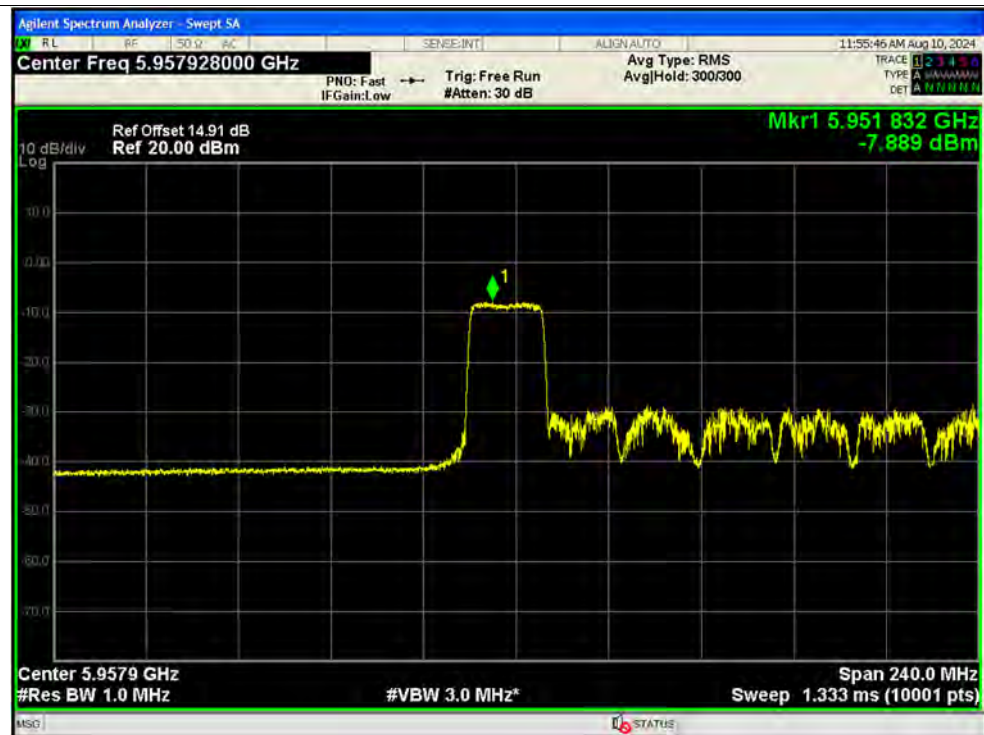




PSD NVNT ax160 484@130 6025MHz Ant1 SISO



PSD NVNT ax160 484@130 6025MHz Ant2 SISO



PSD NVNT ax160 484@130 6025MHz Ant1 MIMO

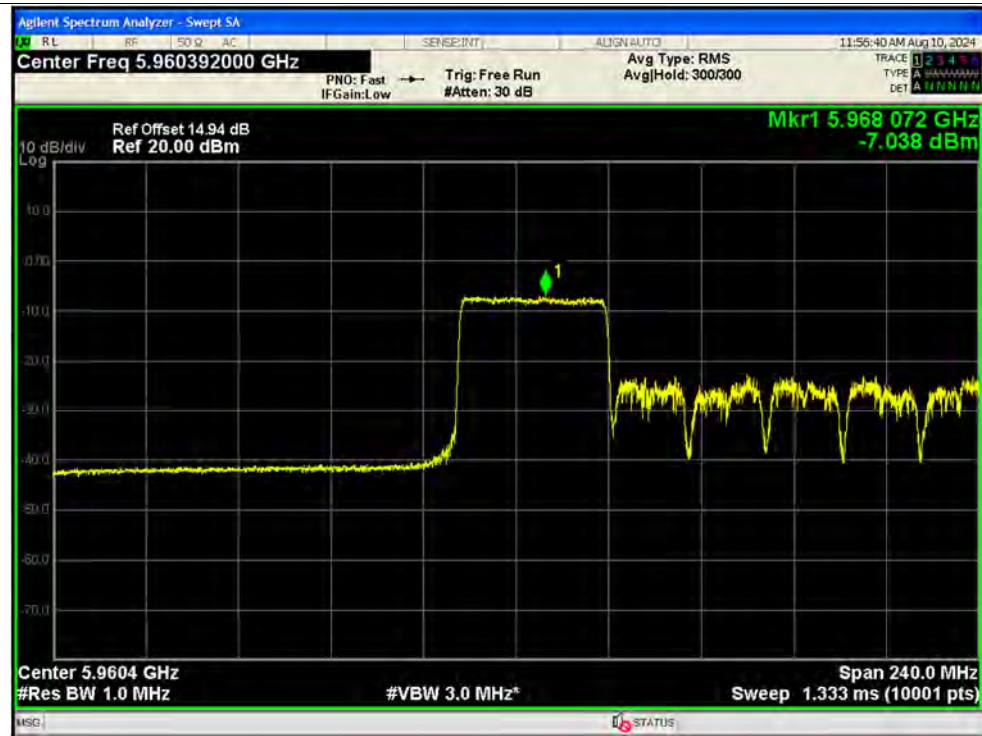

PSD NVNT ax160 484@130 6025MHz Ant2 MIMO




PSD NVNT ax160 966@134 6025MHz Ant1 SISO




PSD NVNT ax160 966@134 6025MHz Ant2 SISO



PSD NVNT ax160 966@134 6025MHz Ant1 MIMO

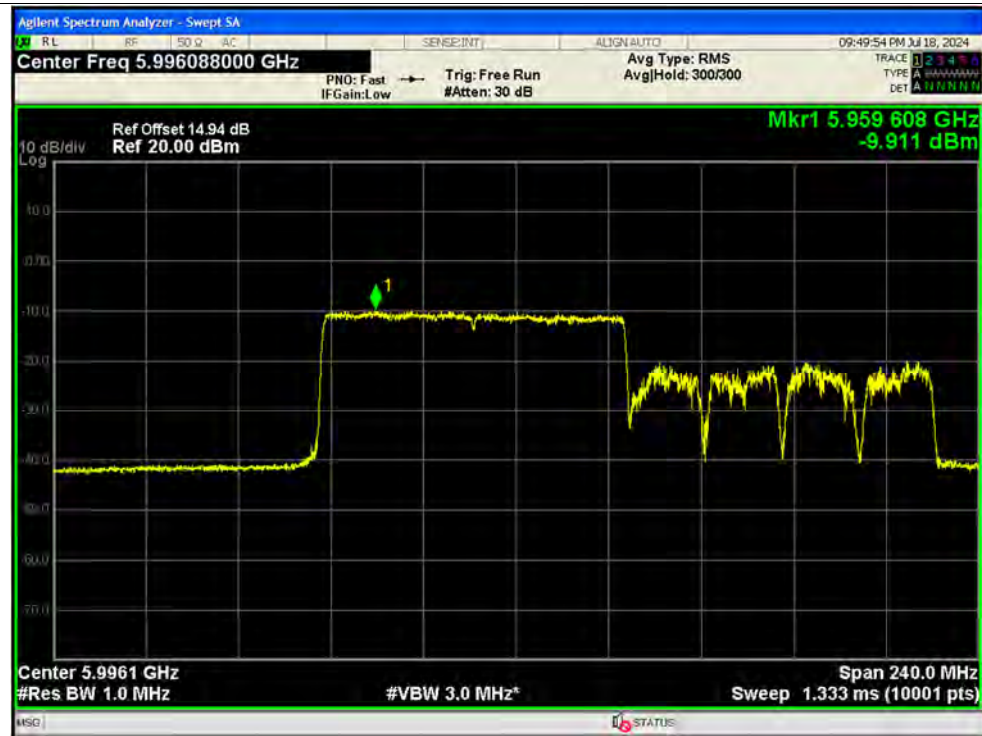

PSD NVNT ax160 966@134 6025MHz Ant2 MIMO

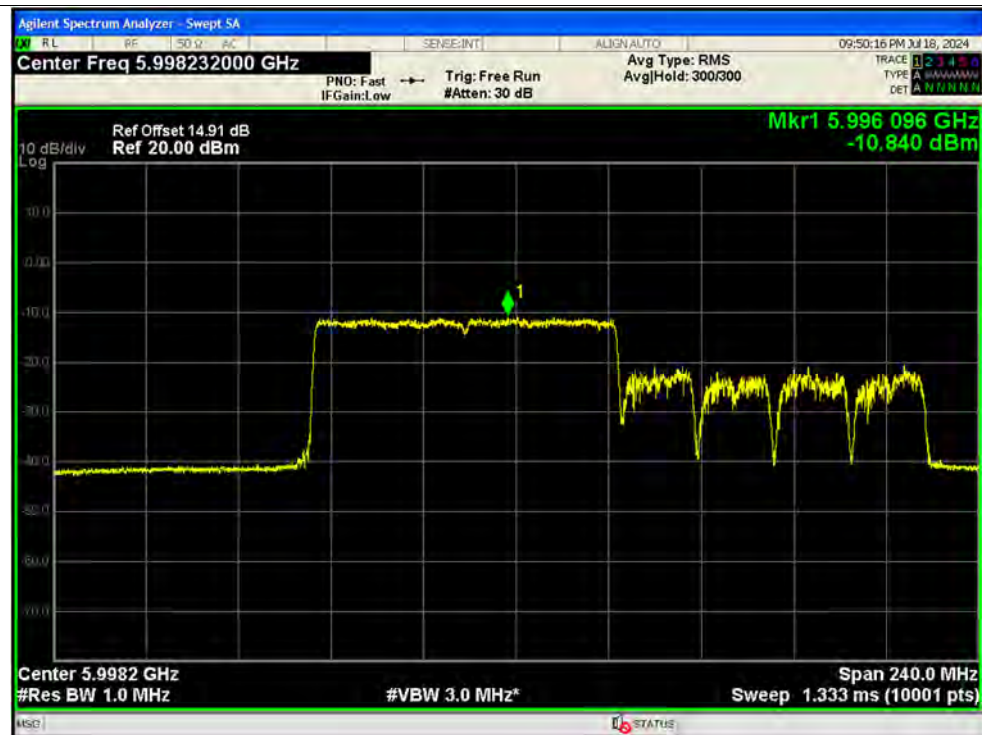

**A.5. Emission Mask**

Condition	Mode	Frequency (MHz)	Antenna	Sub Band	Worst EIB Frequency (MHz)	Level (dB)	Limit (dB)	Verdict
NVNT	ax20 SISO	5955	Ant1	Band1	5988.1	-48.34	-40	Pass
NVNT	ax20 SISO	6175	Ant1	Band1	6137.98	-47.3	-40	Pass
NVNT	ax20 SISO	6415	Ant1	Band1	6448.25	-48.83	-40	Pass
NVNT	ax20 SISO	6435	Ant1	Band1	6471.82	-48.32	-40	Pass
NVNT	ax20 SISO	6475	Ant1	Band1	6511.29	-48.52	-40	Pass
NVNT	ax20 SISO	6515	Ant1	Band1	6554.25	-48.04	-40	Pass
NVNT	ax20 SISO	6535	Ant1	Band1	6567.11	-47.97	-40	Pass
NVNT	ax20 SISO	6695	Ant1	Band1	6660.23	-47.56	-40	Pass
NVNT	ax20 SISO	6855	Ant1	Band1	6821.51	-48.75	-40	Pass
NVNT	ax20 SISO	6875	Ant1	Band1	6837.19	-48.87	-40	Pass
NVNT	ax20 SISO	6995	Ant1	Band1	6962.23	-49.35	-40	Pass
NVNT	ax20 SISO	7115	Ant1	Band1	7154.2	-50	-40	Pass
NVNT	ax20 SISO	5955	Ant2	Band1	5992.09	-48.57	-40	Pass
NVNT	ax20 SISO	6175	Ant2	Band1	6140.41	-47.93	-40	Pass
NVNT	ax20 SISO	6415	Ant2	Band1	6447.9	-49.07	-40	Pass
NVNT	ax20 SISO	6435	Ant2	Band1	6469.06	-48.97	-40	Pass
NVNT	ax20 SISO	6475	Ant2	Band1	6507.99	-49.01	-40	Pass



NVNT	ax20 SISO	6515	Ant2	Band1	6553.21	-48.99	-40	Pass
NVNT	ax20 SISO	6535	Ant2	Band1	6567.27	-49.12	-40	Pass
NVNT	ax20 SISO	6695	Ant2	Band1	6658.17	-48.3	-40	Pass
NVNT	ax20 SISO	6855	Ant2	Band1	6820.7	-50.5	-40	Pass
NVNT	ax20 SISO	6875	Ant2	Band1	6836.31	-50.91	-40	Pass
NVNT	ax20 SISO	6995	Ant2	Band1	7029.56	-51.08	-40	Pass
NVNT	ax20 SISO	7115	Ant2	Band1	7083	-51.7	-40	Pass
NVNT	ax40 SISO	5965	Ant1	Band1	6042.95	-45.46	-40	Pass
NVNT	ax40 SISO	6165	Ant1	Band1	6085.9	-44.95	-40	Pass
NVNT	ax40 SISO	6405	Ant1	Band1	6479.94	-46.51	-40	Pass
NVNT	ax40 SISO	6445	Ant1	Band1	6522.89	-45.98	-40	Pass
NVNT	ax40 SISO	6485	Ant1	Band1	6563.85	-45.88	-40	Pass
NVNT	ax40 SISO	6565	Ant1	Band1	6637.06	-45.58	-40	Pass
NVNT	ax40 SISO	6685	Ant1	Band1	6614.12	-45.41	-40	Pass
NVNT	ax40 SISO	6845	Ant1	Band1	6772.9	-45.84	-40	Pass
NVNT	ax40 SISO	6885	Ant1	Band1	6806.54	-46.34	-40	Pass
NVNT	ax40 SISO	6965	Ant1	Band1	7031.05	-46.89	-40	Pass
NVNT	ax40 SISO	7085	Ant1	Band1	7162.89	-47.21	-40	Pass
NVNT	ax40 SISO	5965	Ant2	Band1	6039.5	-45.28	-40	Pass
NVNT	ax40	6165	Ant2	Band1	6088.33	-45.09	-40	Pass




	SISO							
NVNT	ax40 SISO	6405	Ant2	Band1	6330.09	-46	-40	Pass
NVNT	ax40 SISO	6445	Ant2	Band1	6524.9	-45.76	-40	Pass
NVNT	ax40 SISO	6485	Ant2	Band1	6558.54	-45.94	-40	Pass
NVNT	ax40 SISO	6565	Ant2	Band1	6628.2	-45.84	-40	Pass
NVNT	ax40 SISO	6685	Ant2	Band1	6621.51	-45.77	-40	Pass
NVNT	ax40 SISO	6845	Ant2	Band1	6773.16	-47.07	-40	Pass
NVNT	ax40 SISO	6885	Ant2	Band1	6805.26	-47.64	-40	Pass
NVNT	ax40 SISO	6965	Ant2	Band1	6896.01	-48.19	-40	Pass
NVNT	ax40 SISO	7085	Ant2	Band1	7150.92	-49.05	-40	Pass
NVNT	ax80 SISO	5985	Ant1	Band1	6111.98	-42.48	-40	Pass
NVNT	ax80 SISO	6145	Ant1	Band1	6011.3	-42.28	-40	Pass
NVNT	ax80 SISO	6385	Ant1	Band1	6226.02	-42.98	-40	Pass
NVNT	ax80 SISO	6465	Ant1	Band1	6621.8	-42.49	-40	Pass
NVNT	ax80 SISO	6625	Ant1	Band1	6750.76	-42.23	-40	Pass
NVNT	ax80 SISO	6705	Ant1	Band1	6578.73	-42.77	-40	Pass
NVNT	ax80 SISO	6785	Ant1	Band1	6658.92	-42.79	-40	Pass
NVNT	ax80 SISO	6945	Ant1	Band1	6785.58	-42.97	-40	Pass
NVNT	ax80 SISO	7025	Ant1	Band1	6866.41	-43.76	-40	Pass
NVNT	ax80 SISO	5985	Ant2	Band1	6115.82	-42.64	-40	Pass




NVNT	ax80 SISO	6145	Ant2	Band1	6016.3	-42.45	-40	Pass
NVNT	ax80 SISO	6385	Ant2	Band1	6230.82	-43.1	-40	Pass
NVNT	ax80 SISO	6465	Ant2	Band1	6611.43	-42.67	-40	Pass
NVNT	ax80 SISO	6625	Ant2	Band1	6755.24	-42.82	-40	Pass
NVNT	ax80 SISO	6705	Ant2	Band1	6574.7	-43.23	-40	Pass
NVNT	ax80 SISO	6785	Ant2	Band1	6644.97	-43.94	-40	Pass
NVNT	ax80 SISO	6945	Ant2	Band1	6786.28	-44.38	-40	Pass
NVNT	ax80 SISO	7025	Ant2	Band1	7150.7	-45.86	-40	Pass
NVNT	ax160 SISO	6025	Ant1	Band1	5759.91	-44.38	-40	Pass
NVNT	ax160 SISO	6185	Ant1	Band1	5919.91	-43.9	-40	Pass
NVNT	ax160 SISO	6345	Ant1	Band1	6080.42	-43.43	-40	Pass
NVNT	ax160 SISO	6665	Ant1	Band1	6350.25	-40.89	-40	Pass
NVNT	ax160 SISO	6985	Ant1	Band1	6676.52	-43.92	-40	Pass
NVNT	ax160 SISO	6025	Ant2	Band1	5759.78	-44.12	-40	Pass
NVNT	ax160 SISO	6185	Ant2	Band1	5926.82	-44.11	-40	Pass
NVNT	ax160 SISO	6345	Ant2	Band1	6088.74	-43.38	-40	Pass
NVNT	ax160 SISO	6665	Ant2	Band1	6354.22	-45.52	-40	Pass
NVNT	ax160 SISO	6985	Ant2	Band1	6692.01	-45.2	-40	Pass

Test Graphs


Power spectral mask NVNT ax20 5955MHz SISO

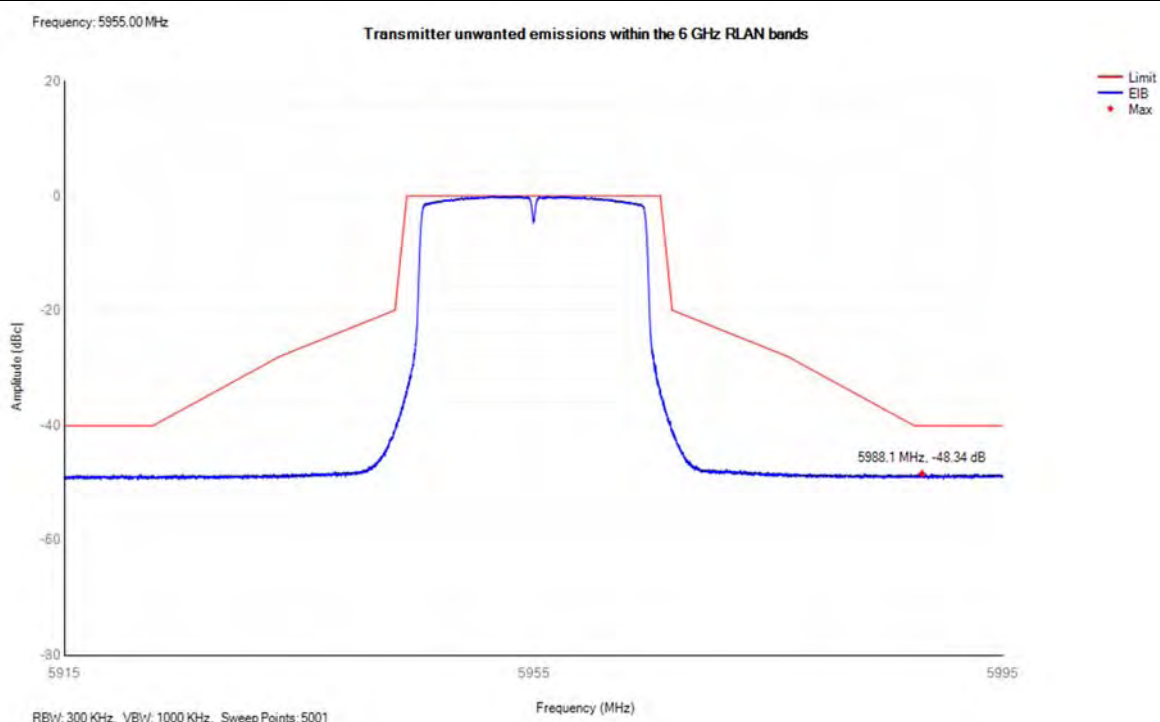


Power spectral mask NVNT ax20 6175MHz SISO

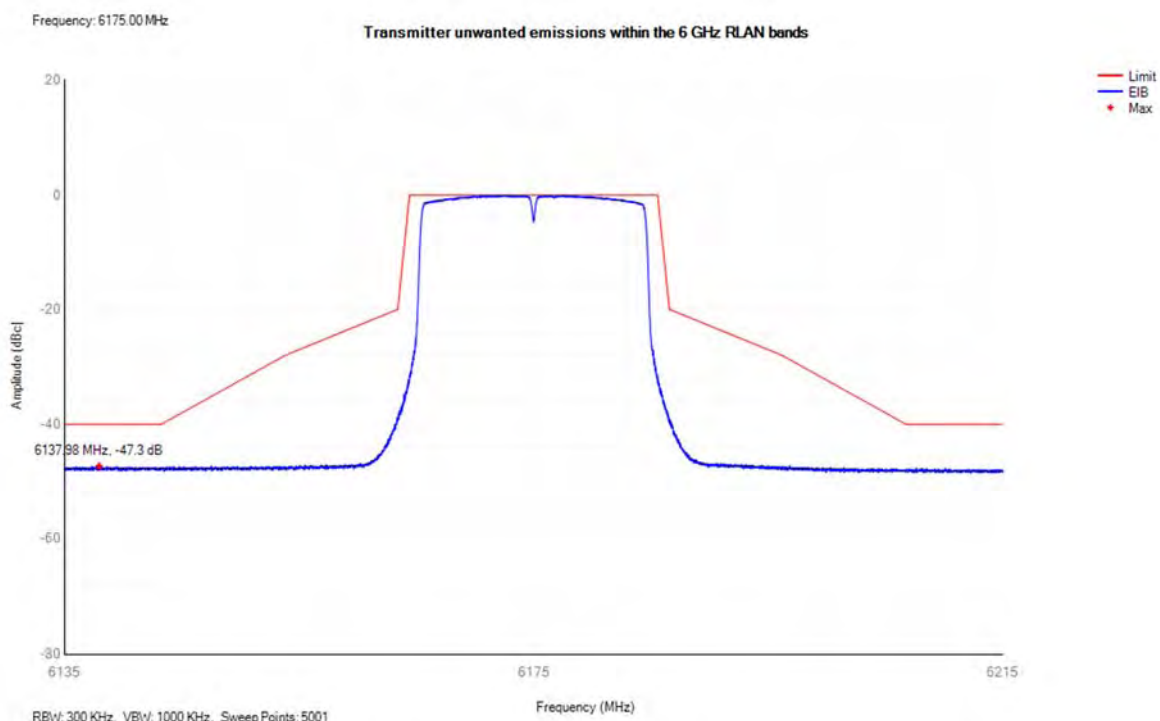


Power spectral mask NVNT ax20 6415MHz SISO

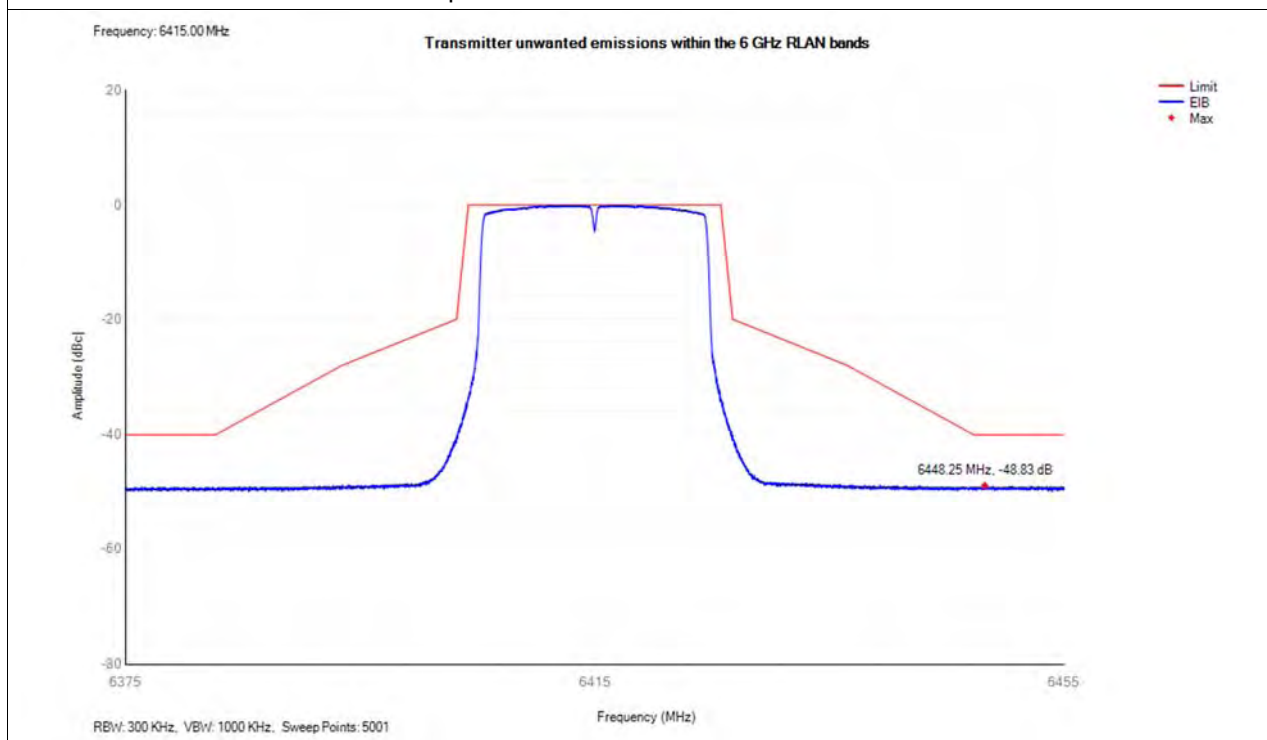


Power spectral mask NVNT ax20 6435MHz SISO

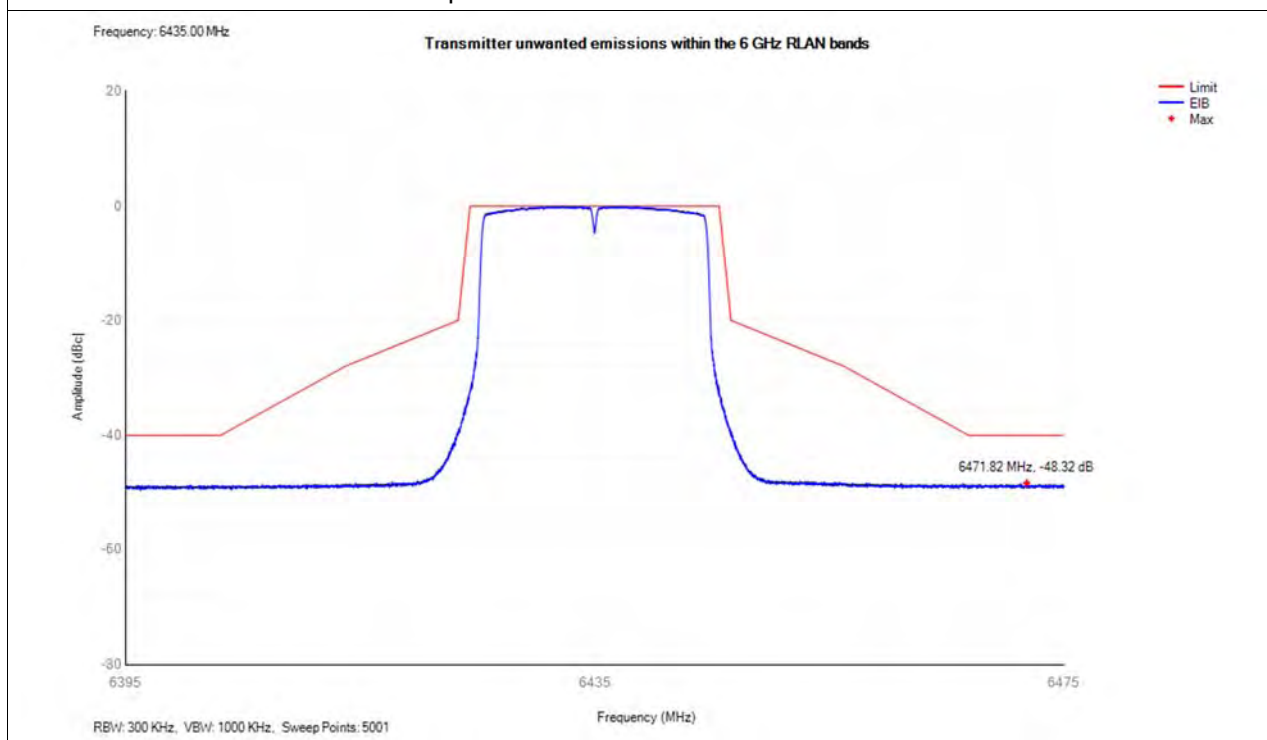


Power spectral mask NVNT ax20 6475MHz SISO

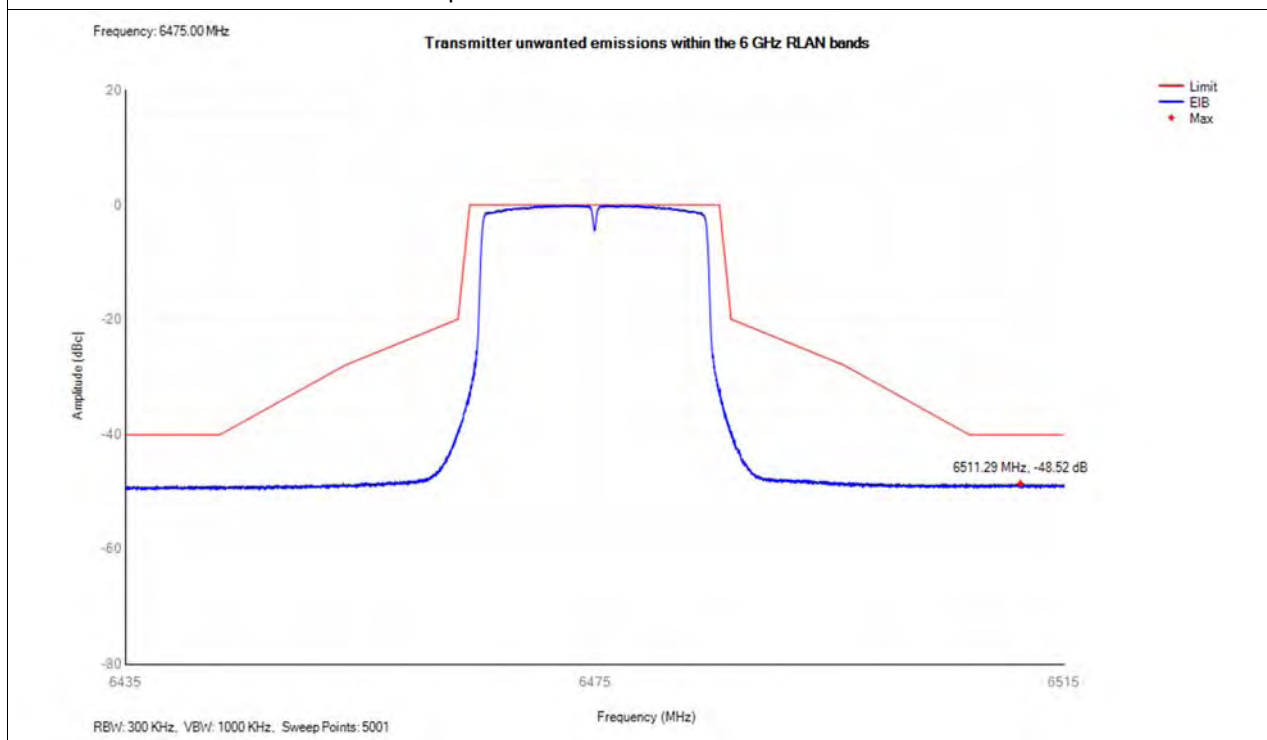


Power spectral mask NVNT ax20 6515MHz SISO

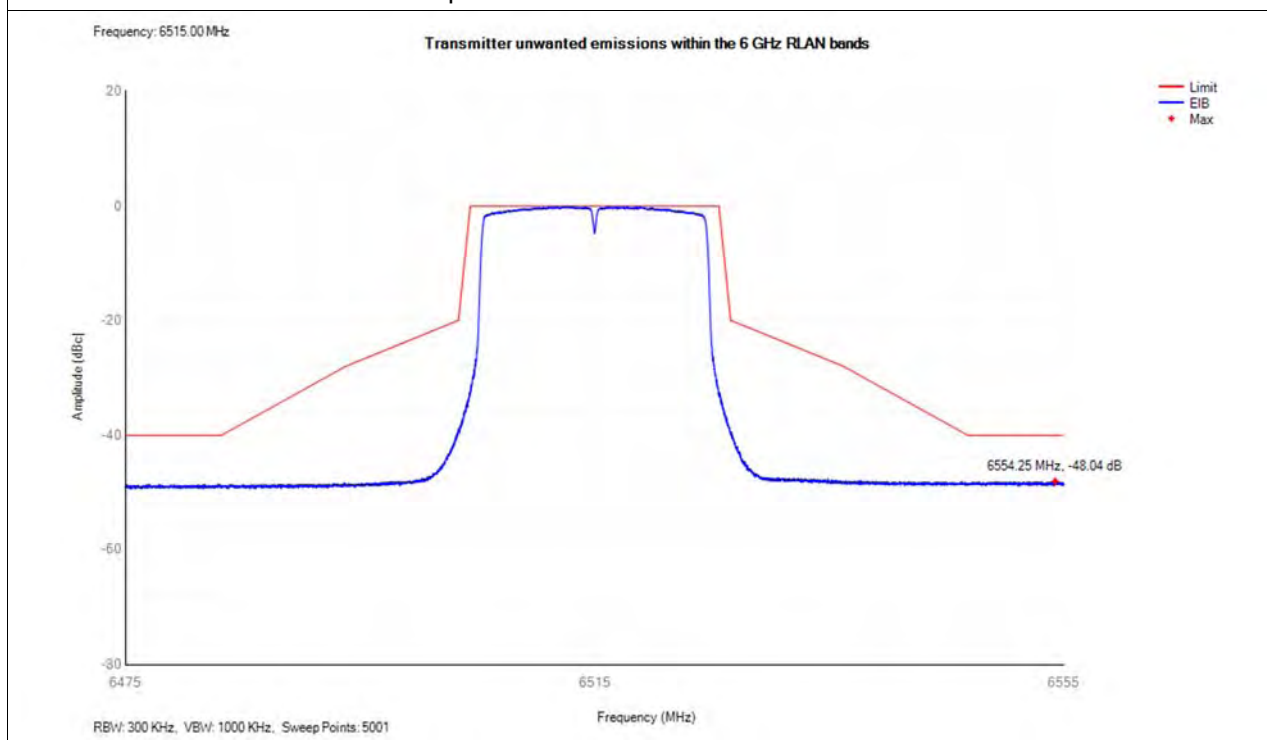


Power spectral mask NVNT ax20 6535MHz SISO

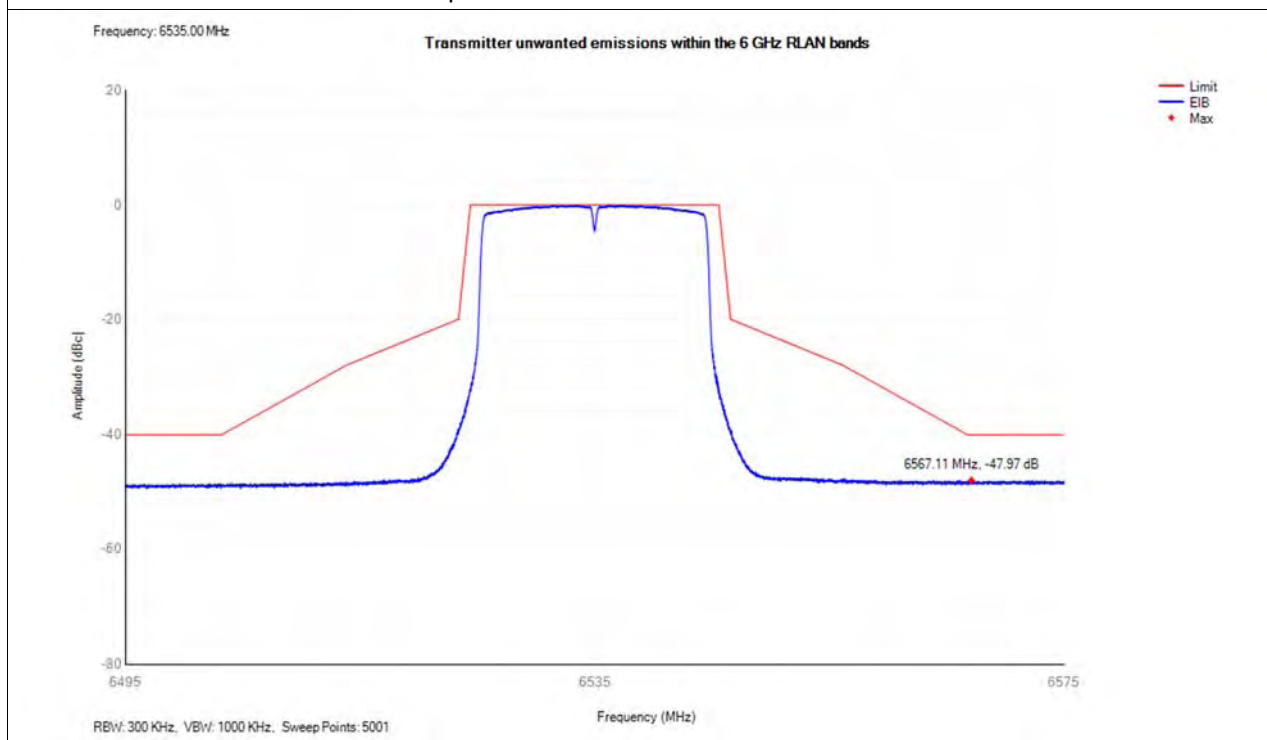


Power spectral mask NVNT ax20 6695MHz SISO

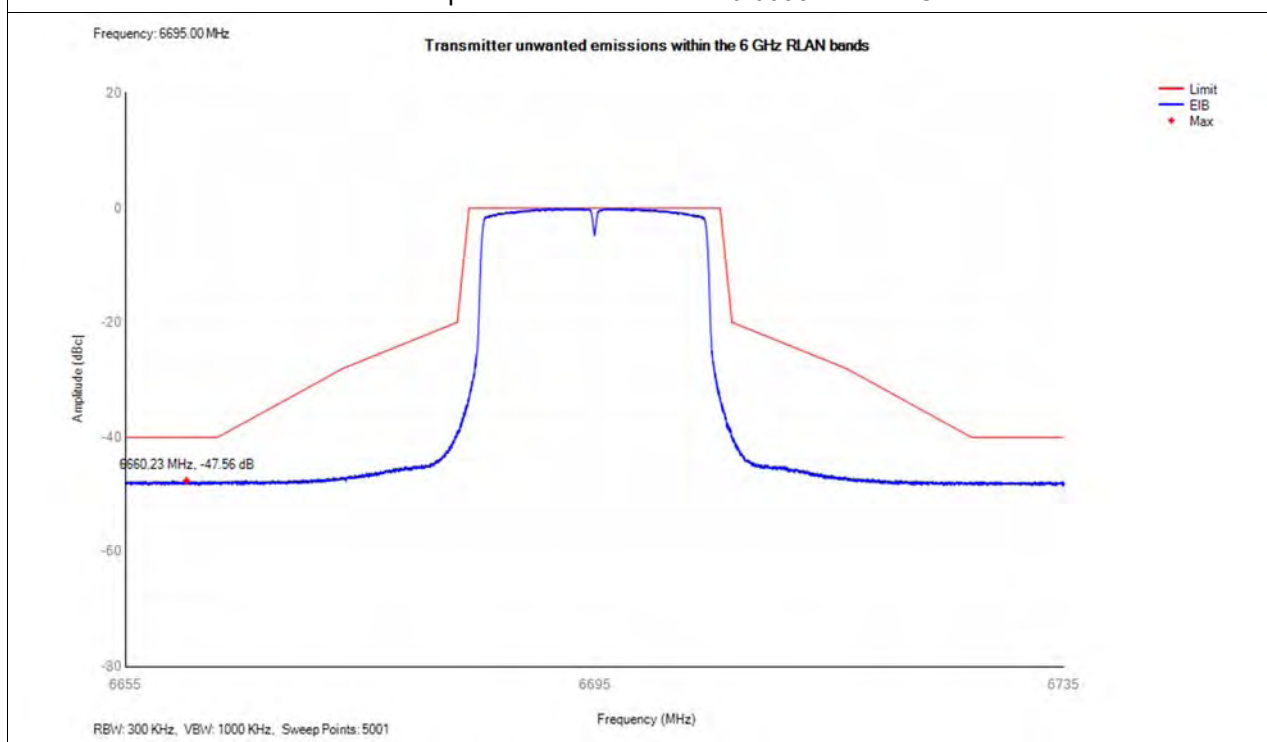


Power spectral mask NVNT ax20 6855MHz SISO

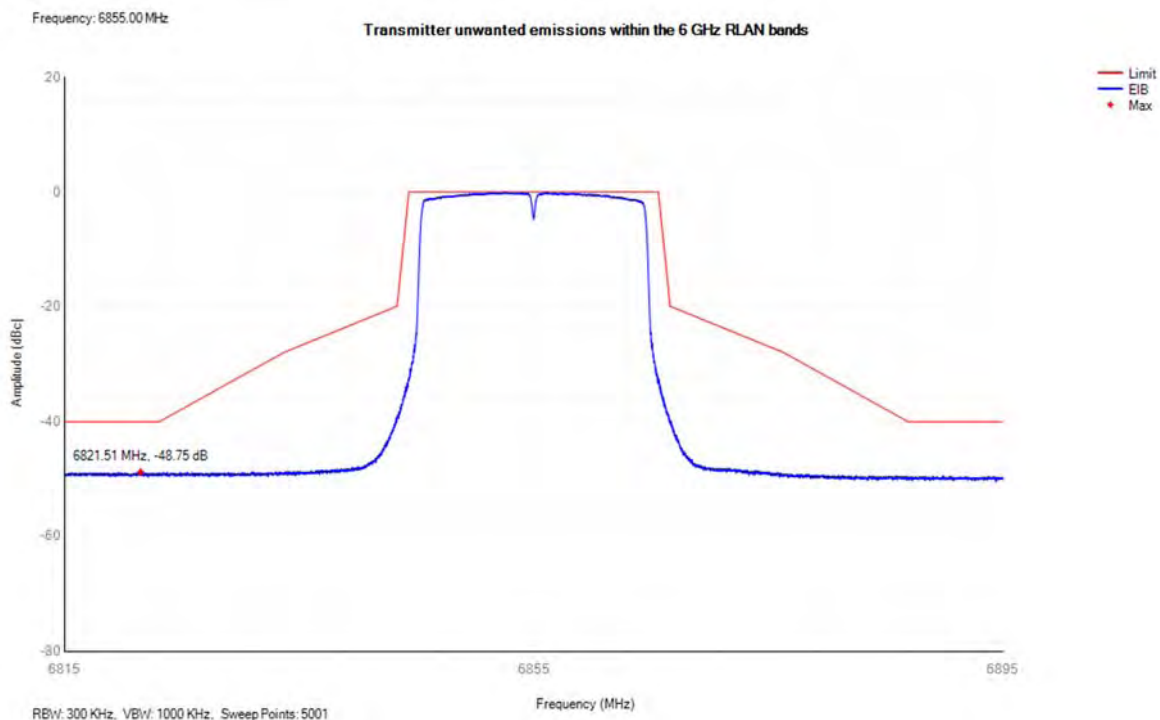


Power spectral mask NVNT ax20 6875MHz SISO

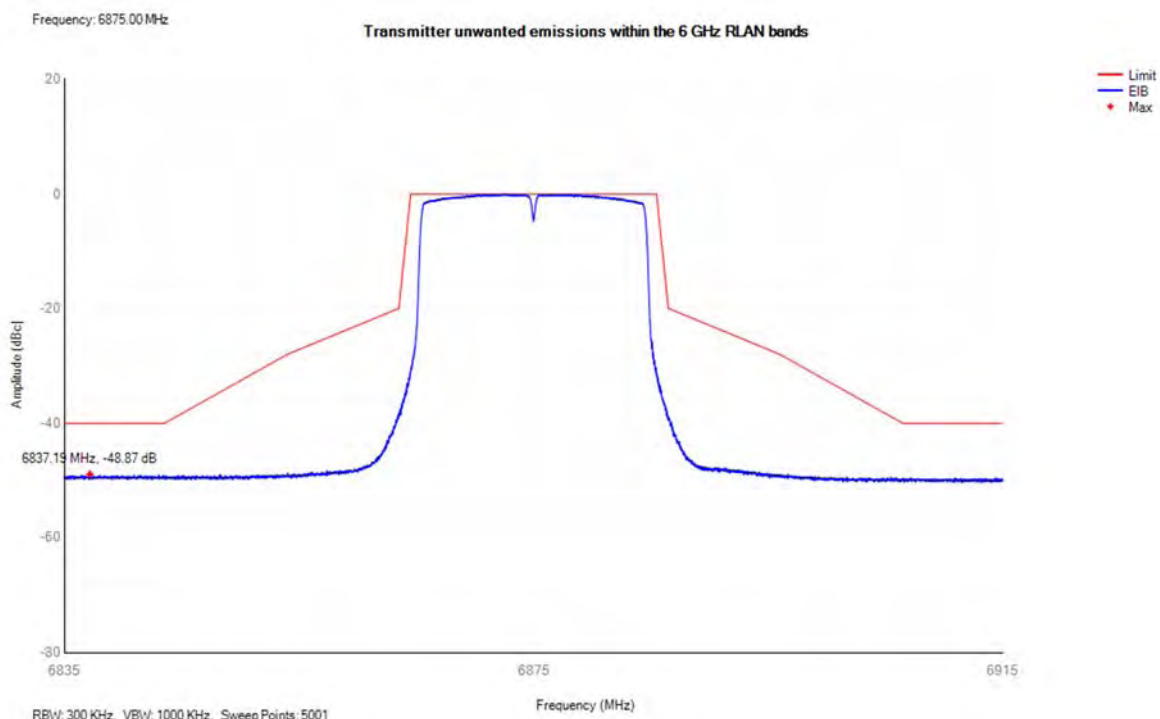


Power spectral mask NVNT ax20 6995MHz SISO

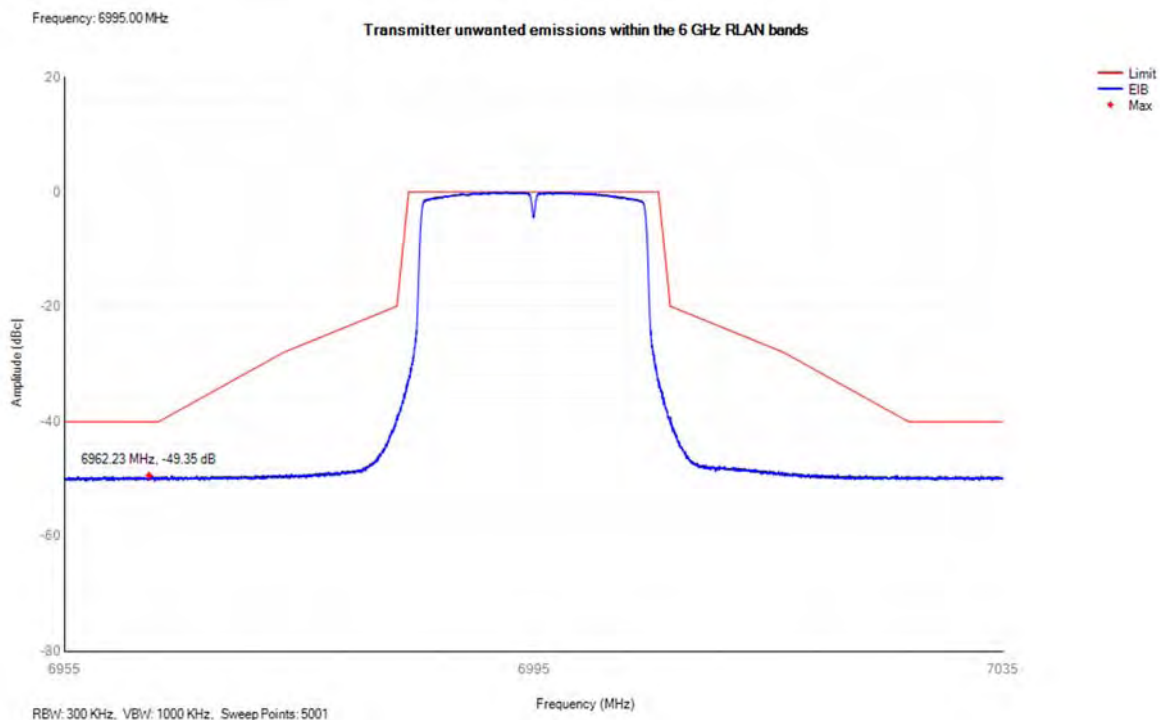


Power spectral mask NVNT ax20 7115MHz SISO

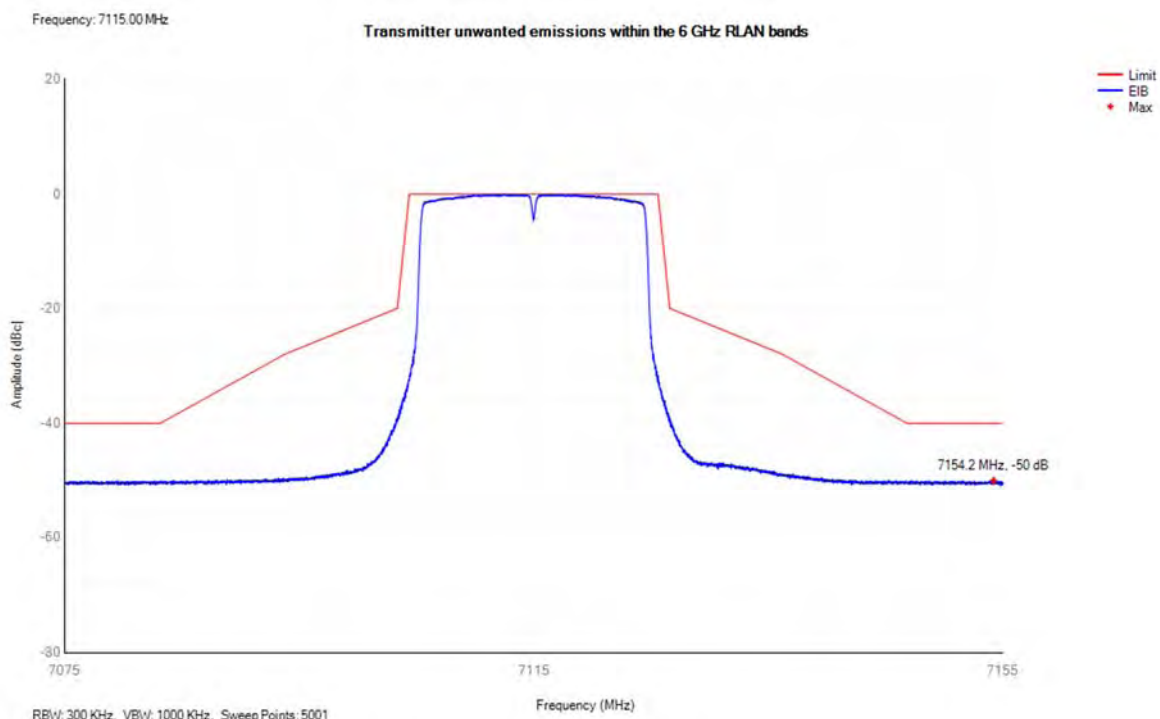


Power spectral mask NVNT ax20 5955MHz SISO

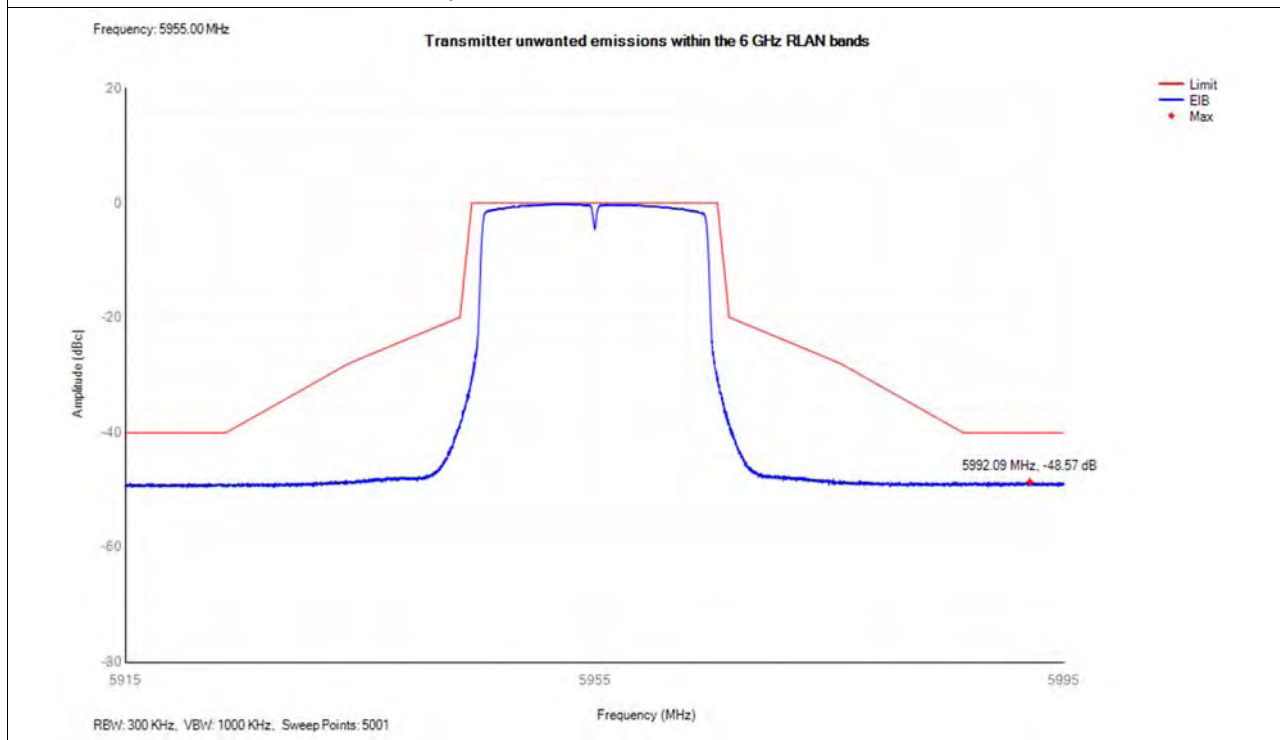


Power spectral mask NVNT ax20 6175MHz SISO

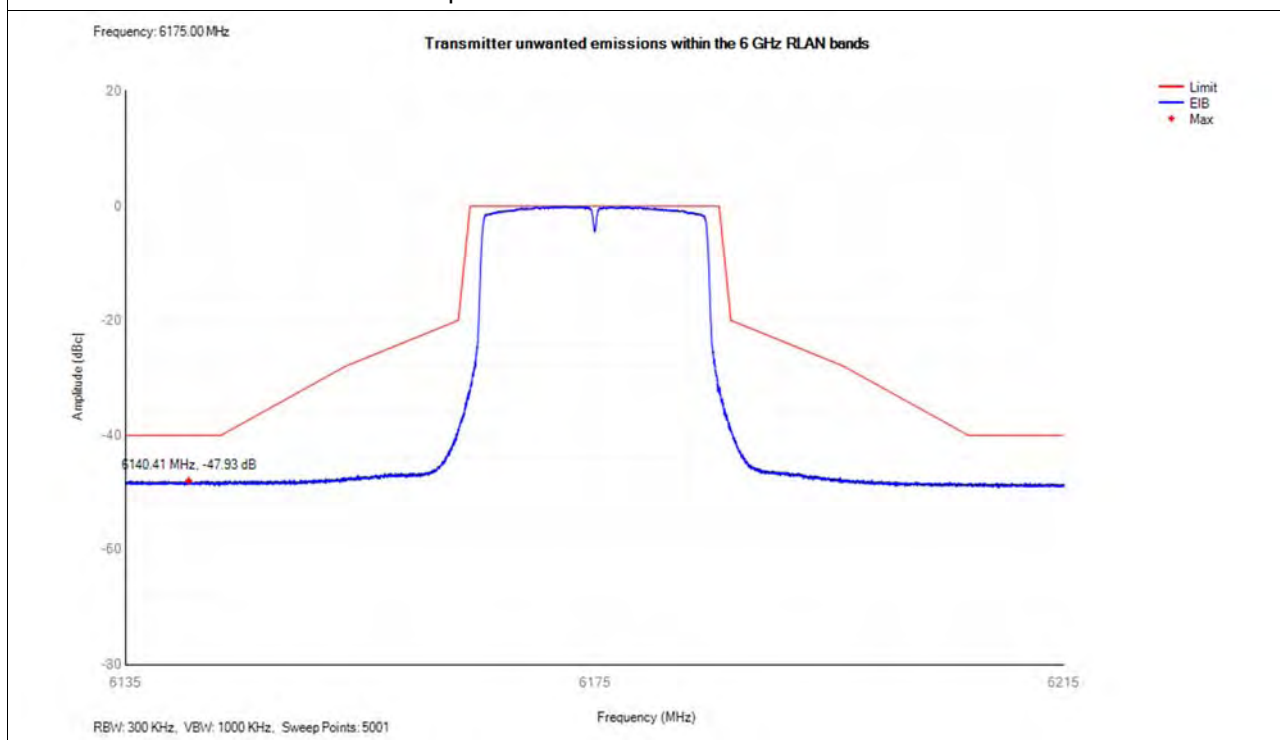


Power spectral mask NVNT ax20 6415MHz SISO

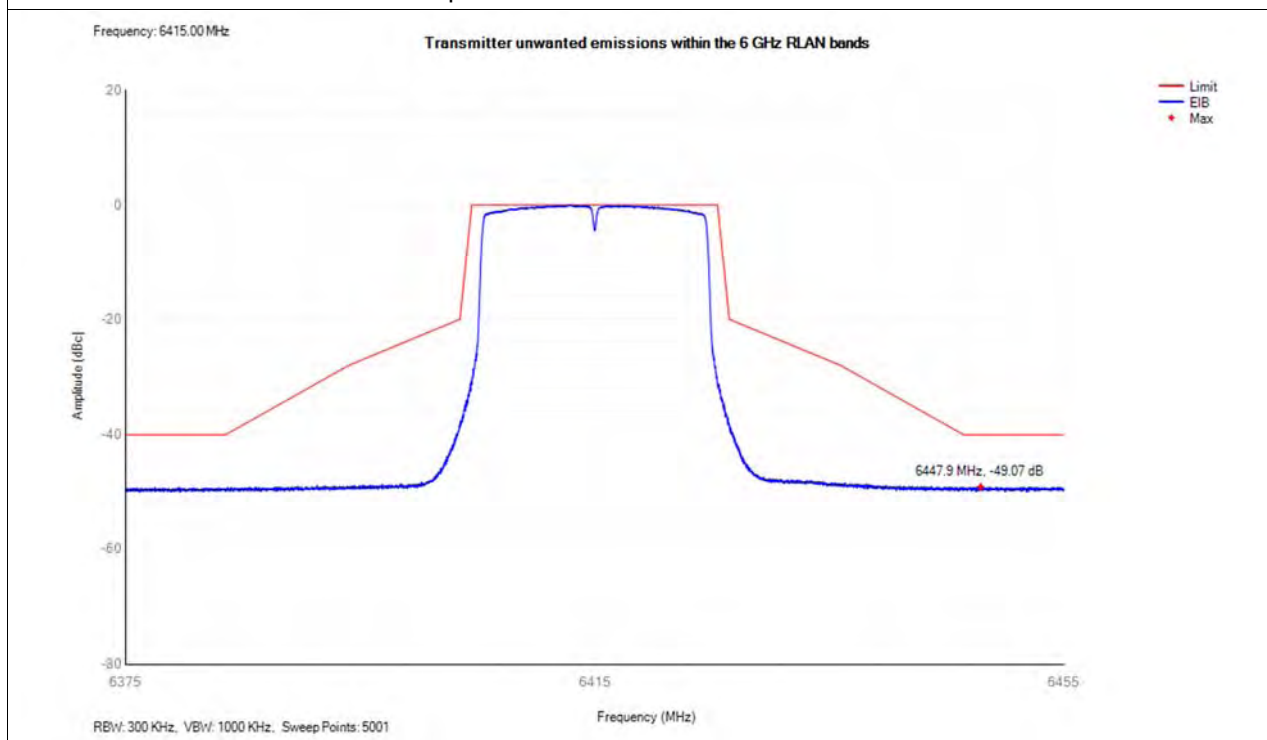


Power spectral mask NVNT ax20 6435MHz SISO

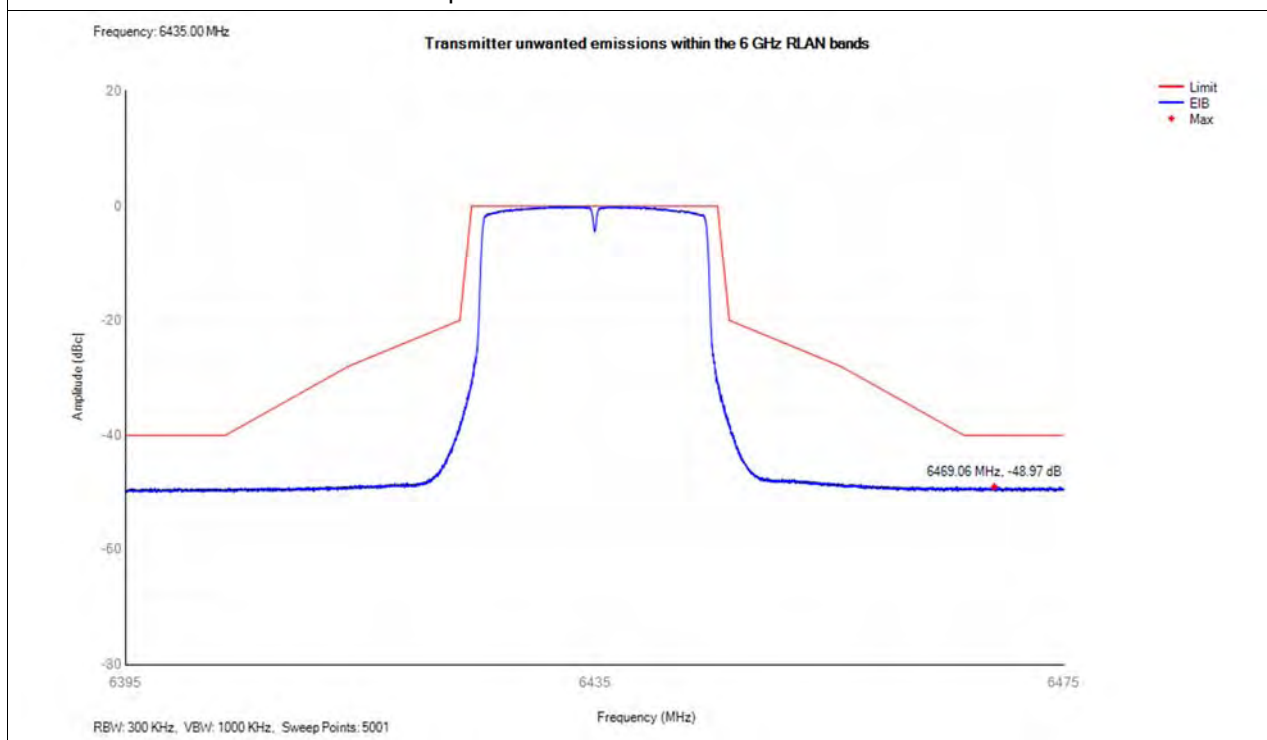


Power spectral mask NVNT ax20 6475MHz SISO

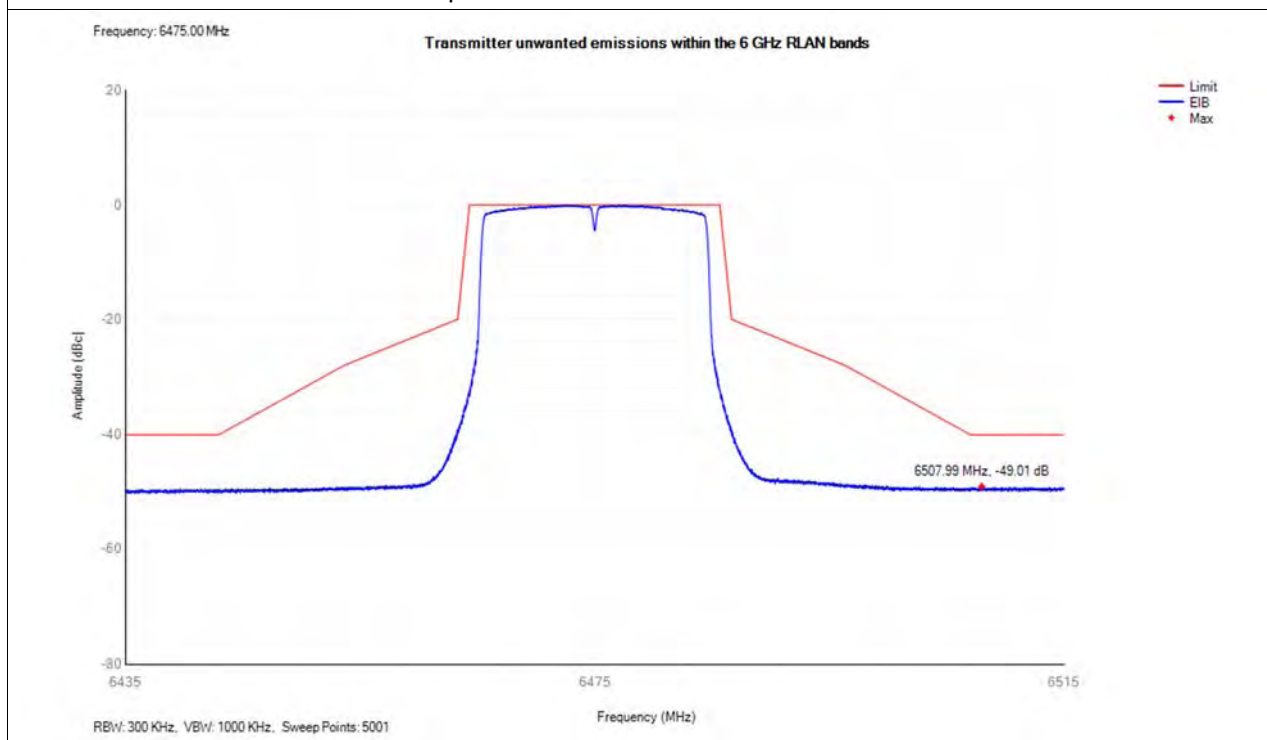


Power spectral mask NVNT ax20 6515MHz SISO

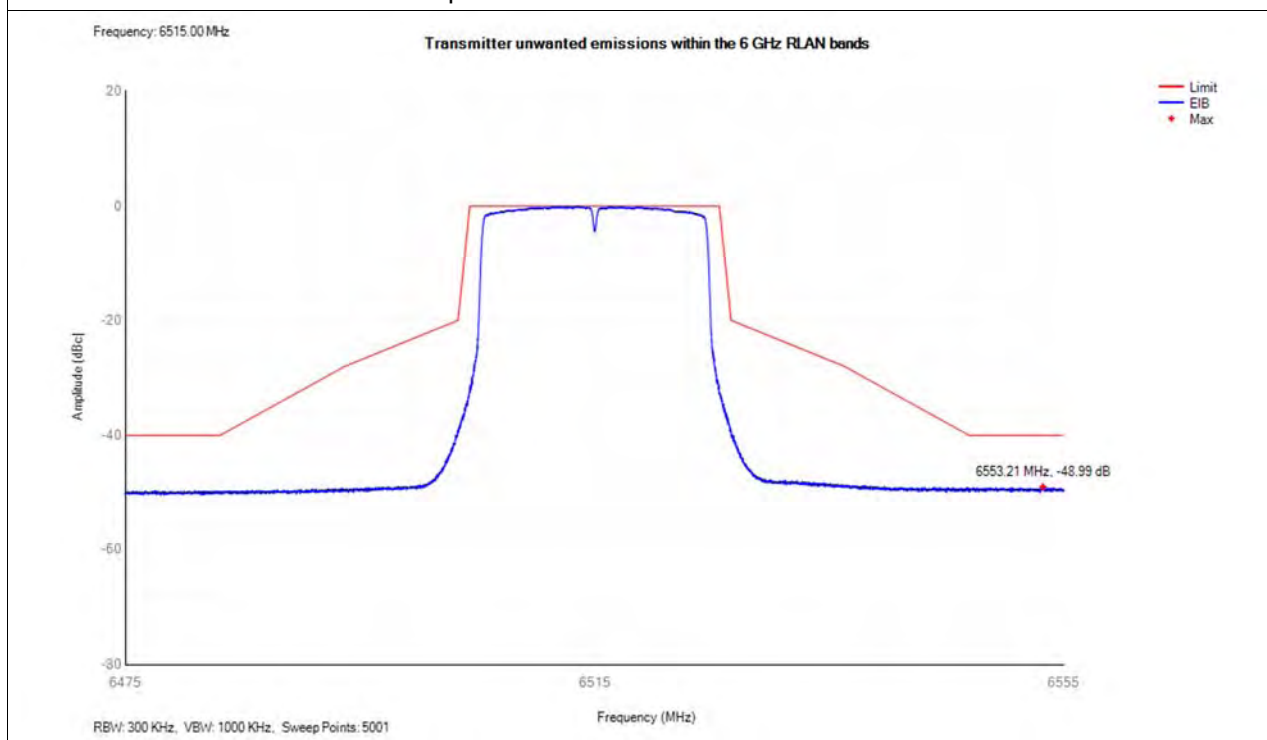


Power spectral mask NVNT ax20 6535MHz SISO

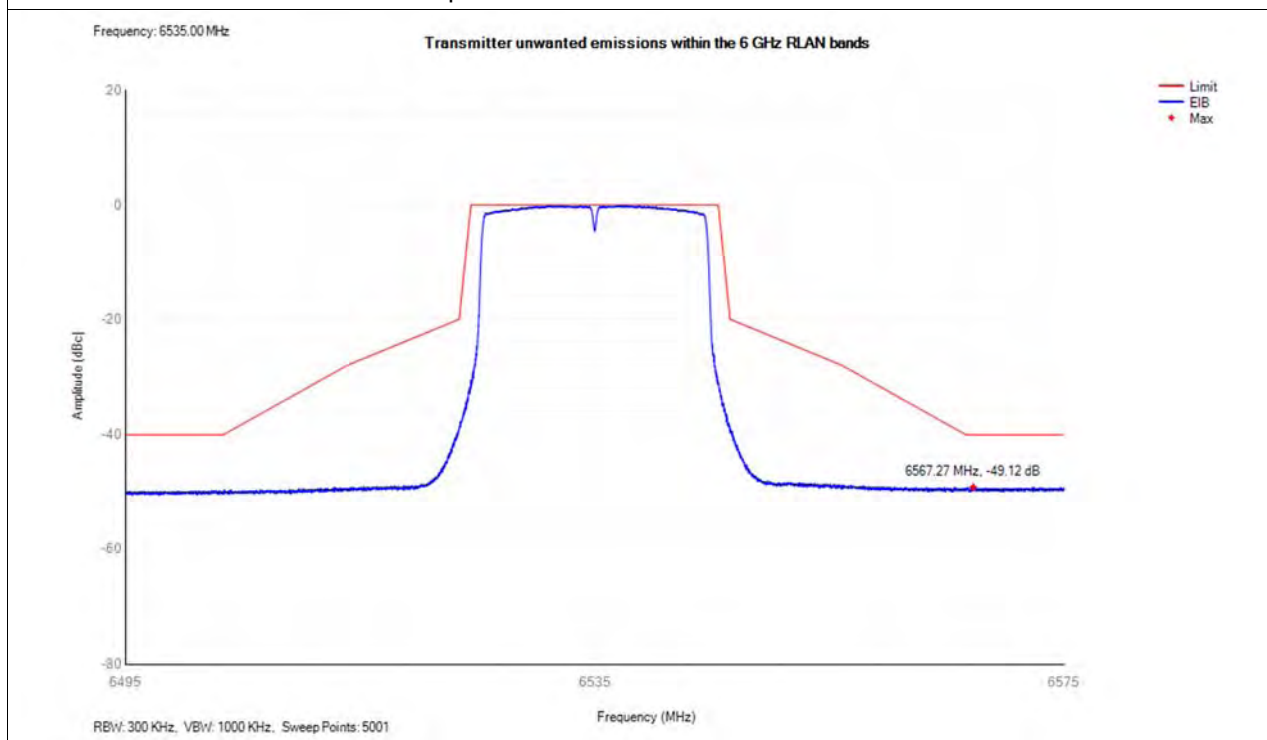


Power spectral mask NVNT ax20 6695MHz SISO

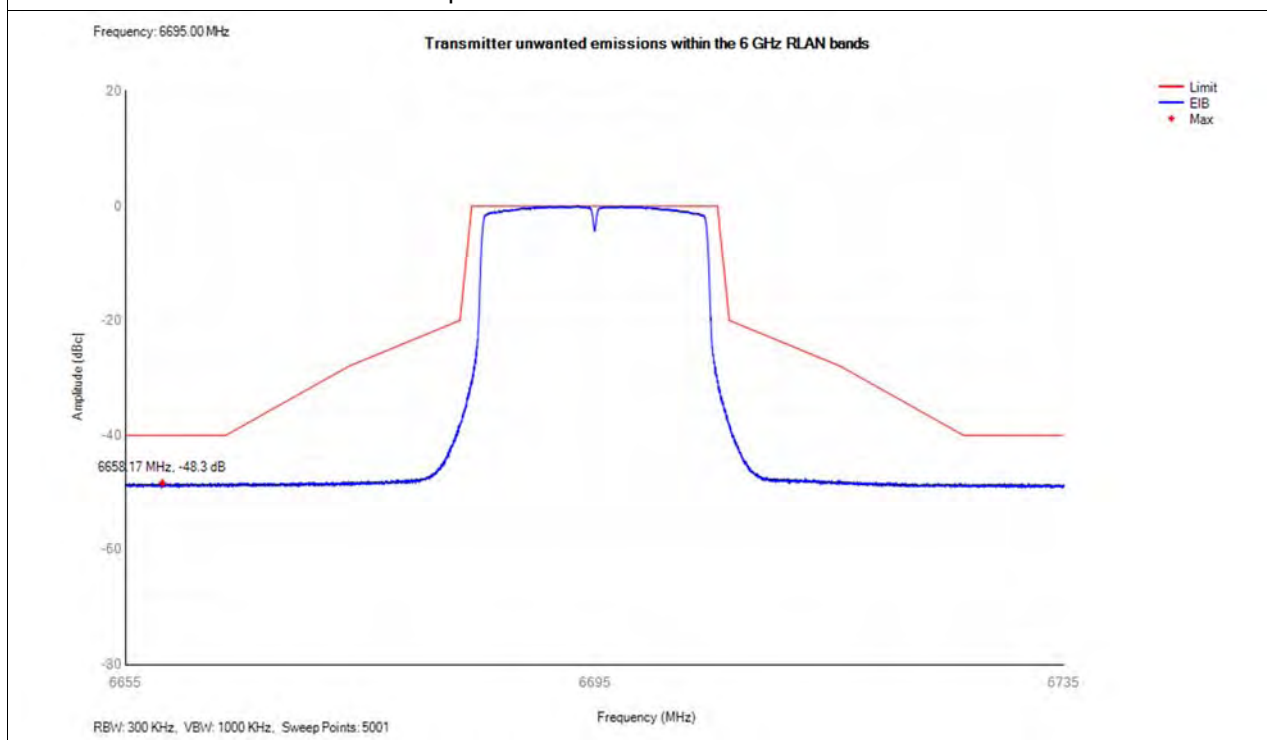


Power spectral mask NVNT ax20 6855MHz SISO

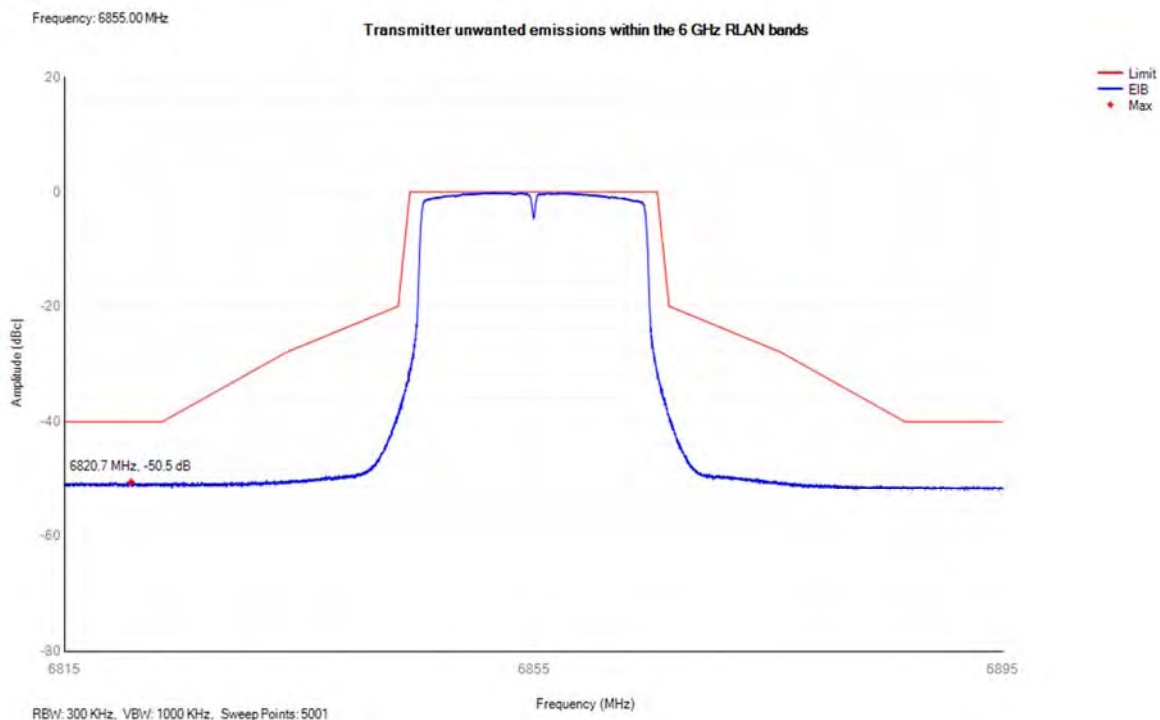


Power spectral mask NVNT ax20 6875MHz SISO

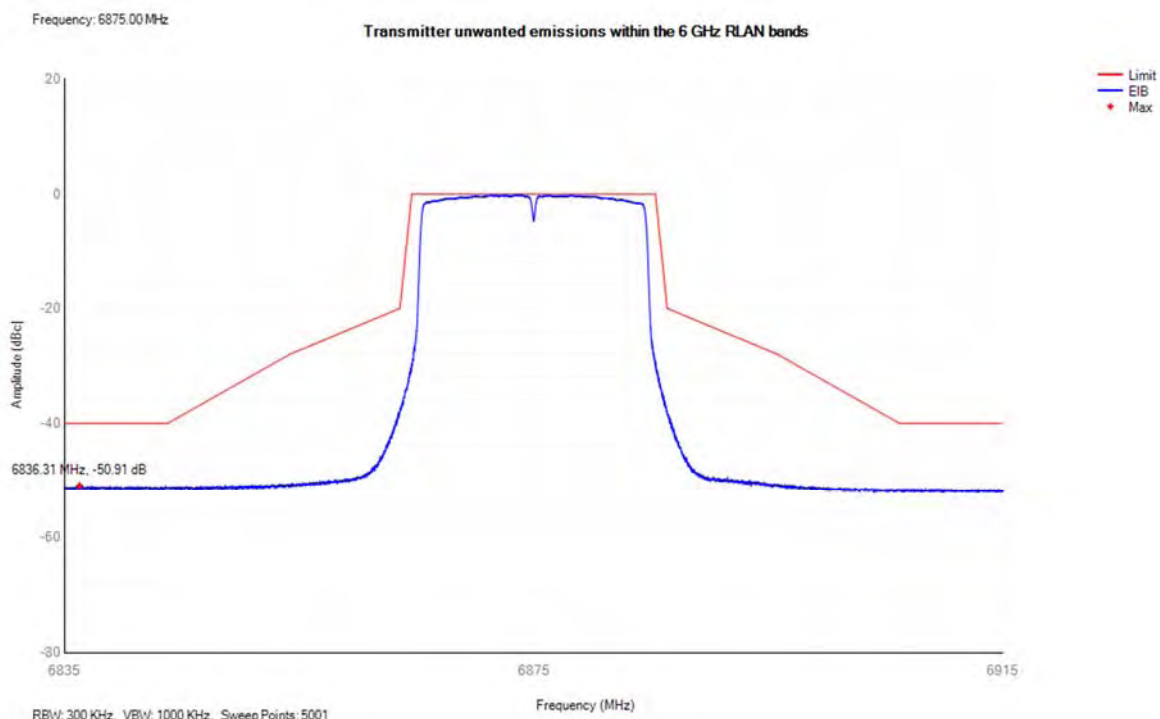


Power spectral mask NVNT ax20 6995MHz SISO

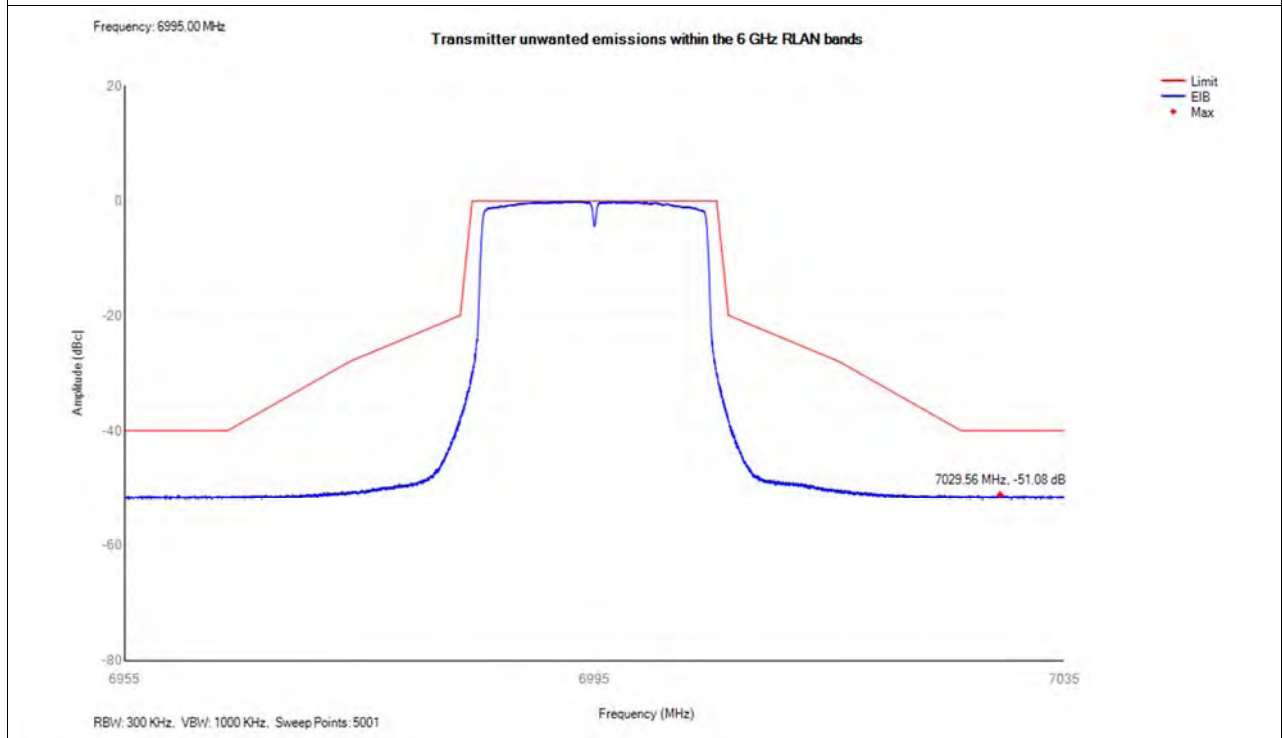


Power spectral mask NVNT ax20 7115MHz SISO

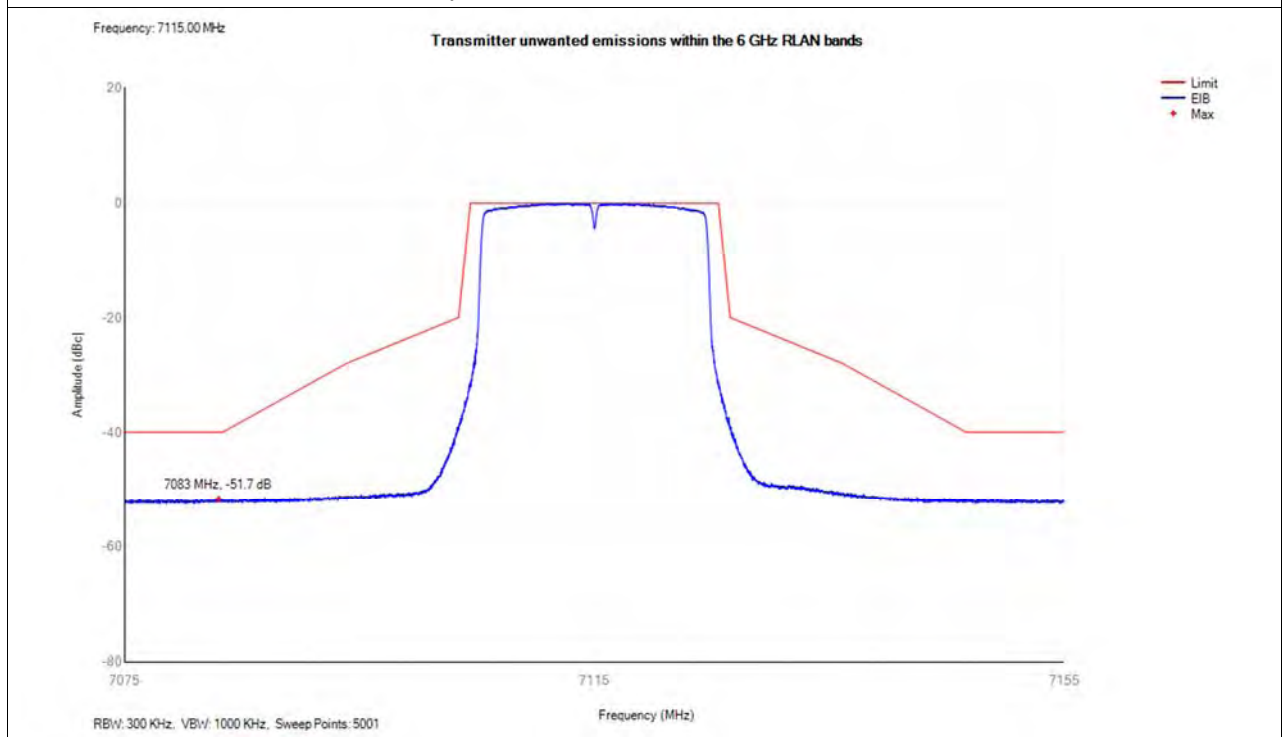


Power spectral mask NVNT ax40 5965MHz SISO

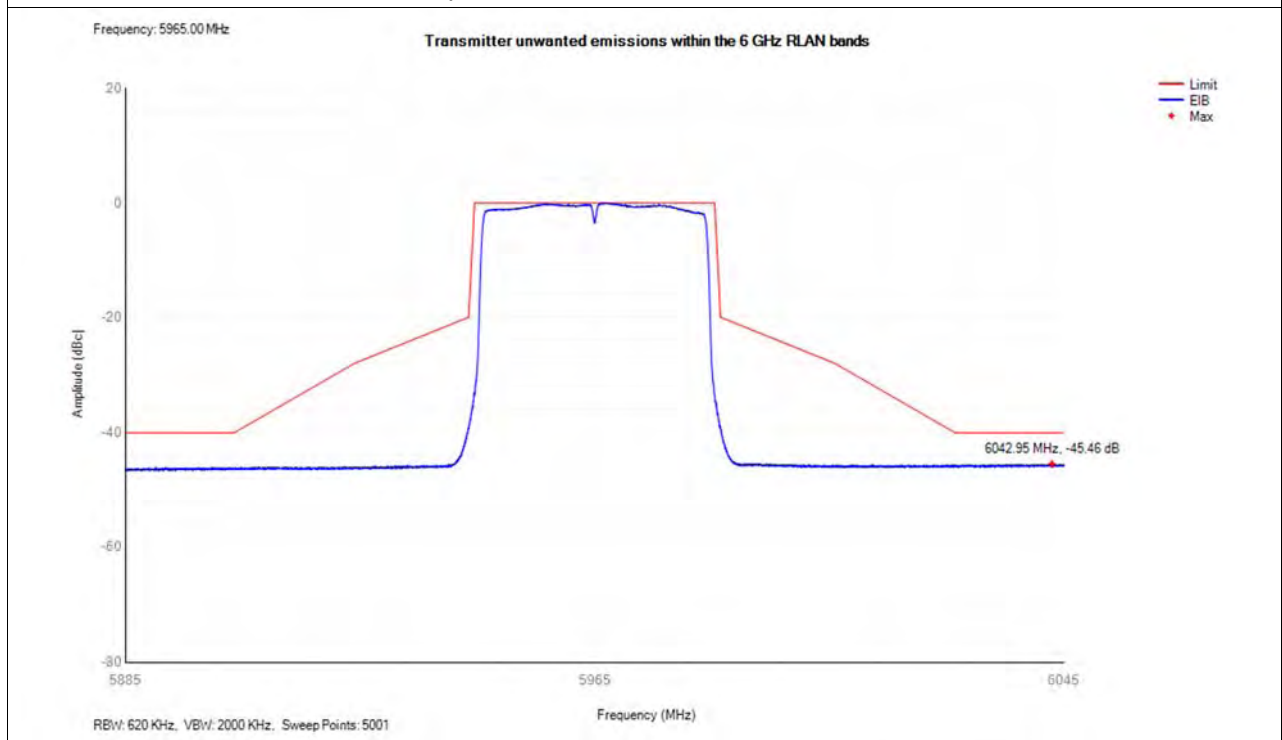


Power spectral mask NVNT ax40 6165MHz SISO

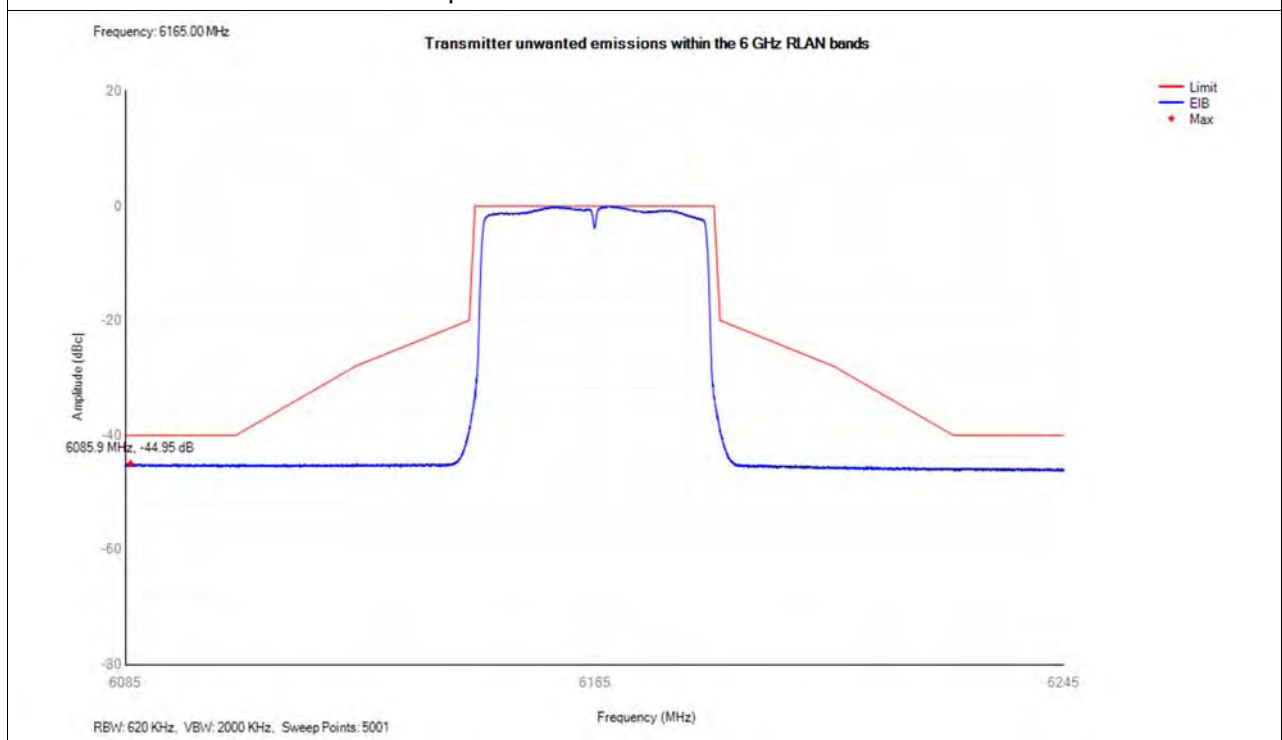


Power spectral mask NVNT ax40 6405MHz SISO

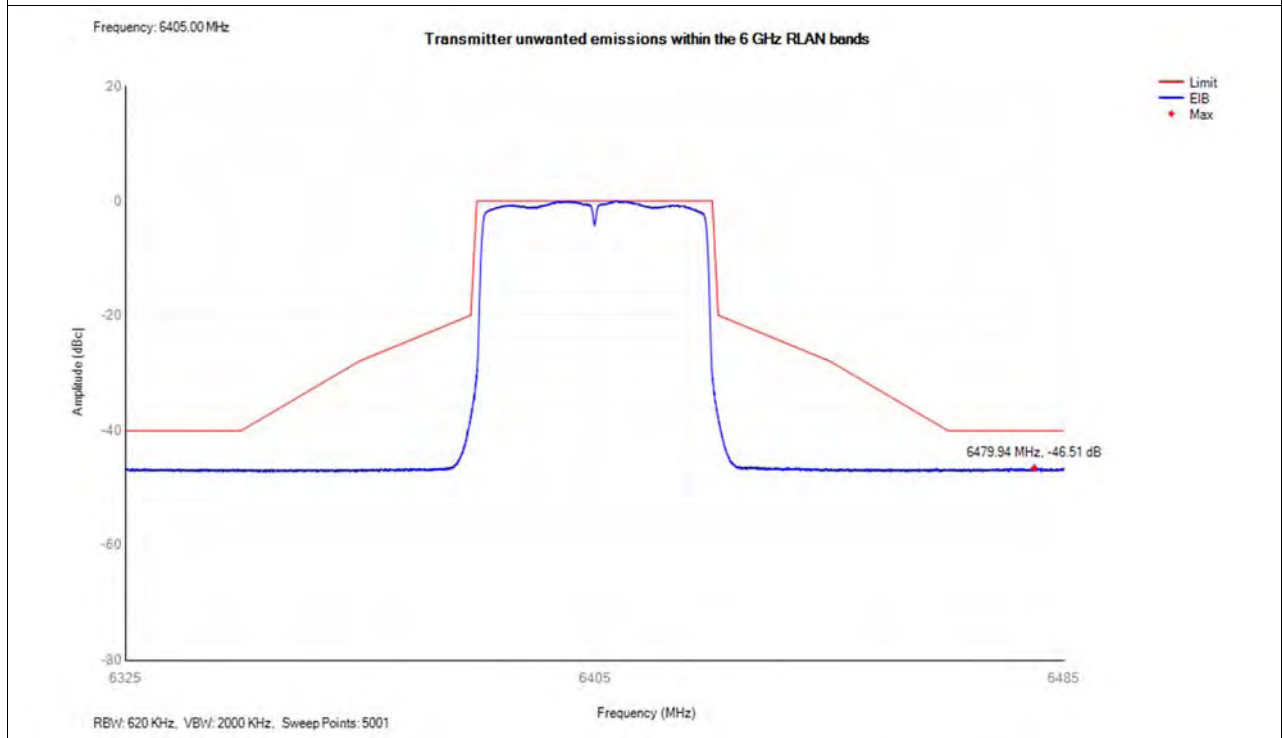


Power spectral mask NVNT ax40 6445MHz SISO

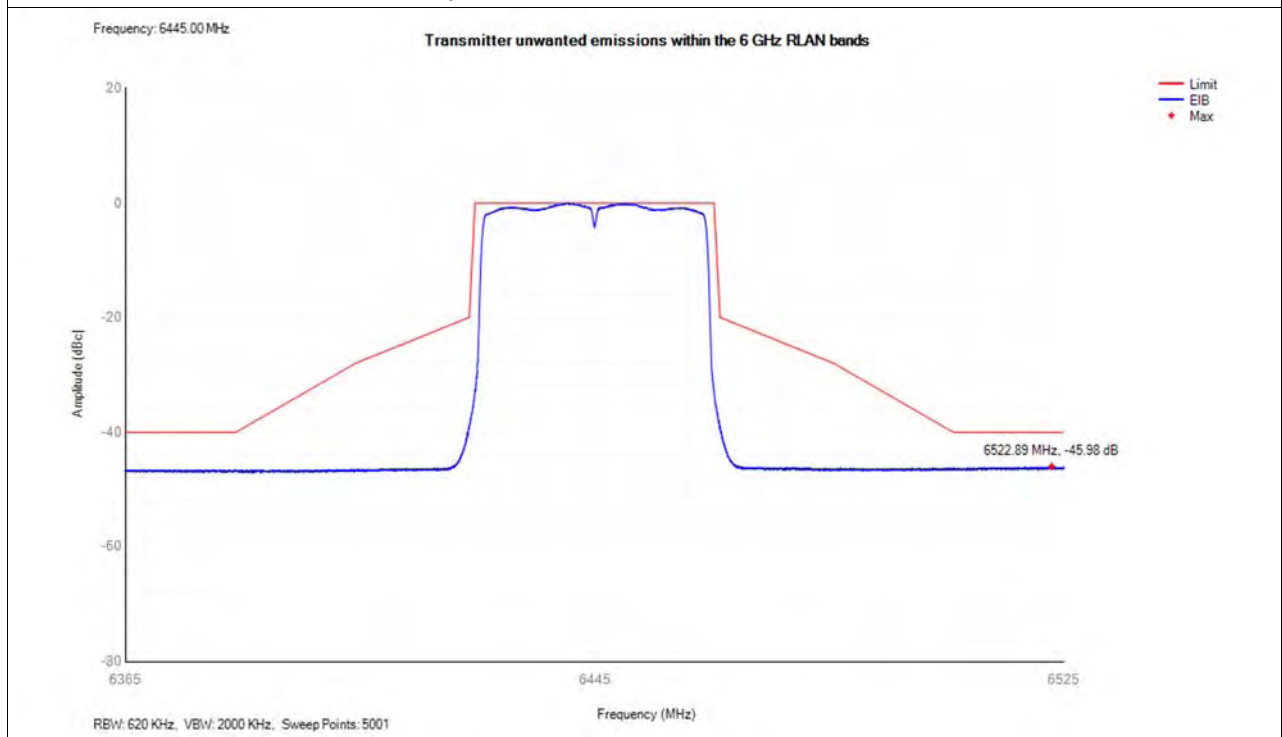


Power spectral mask NVNT ax40 6485MHz SISO

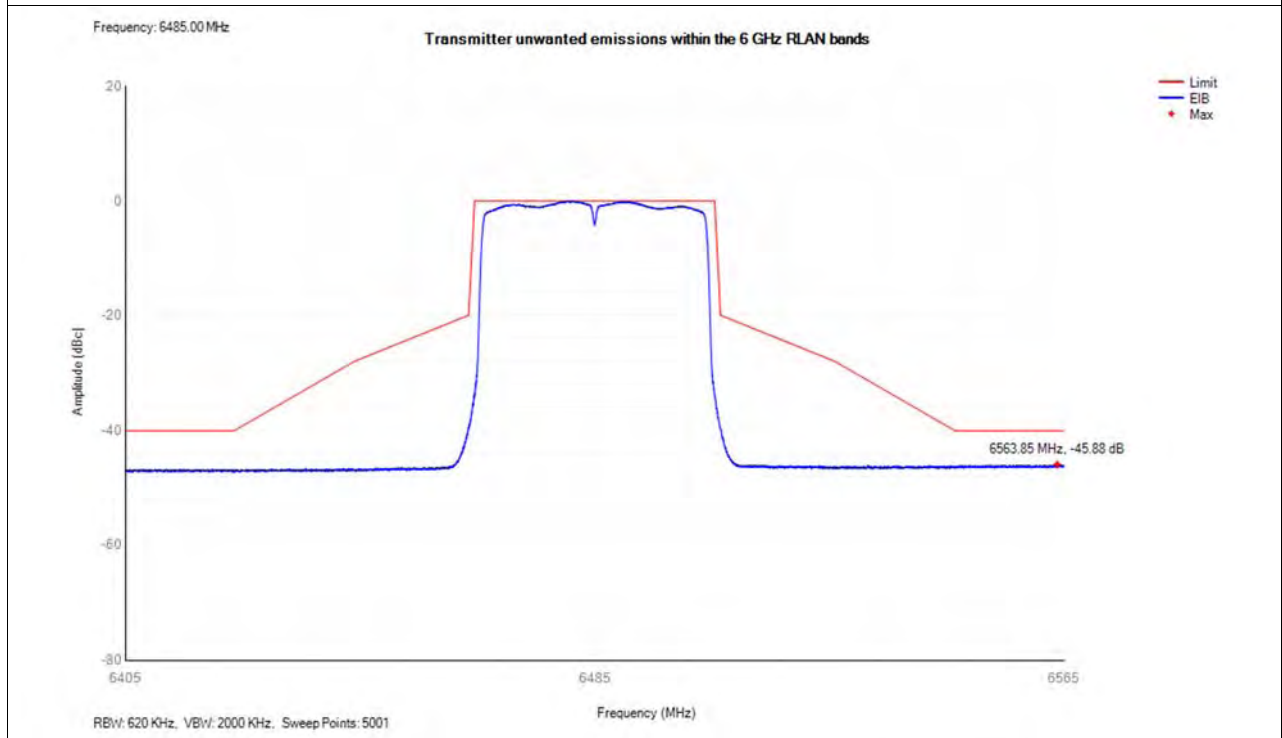


Power spectral mask NVNT ax40 6565MHz SISO

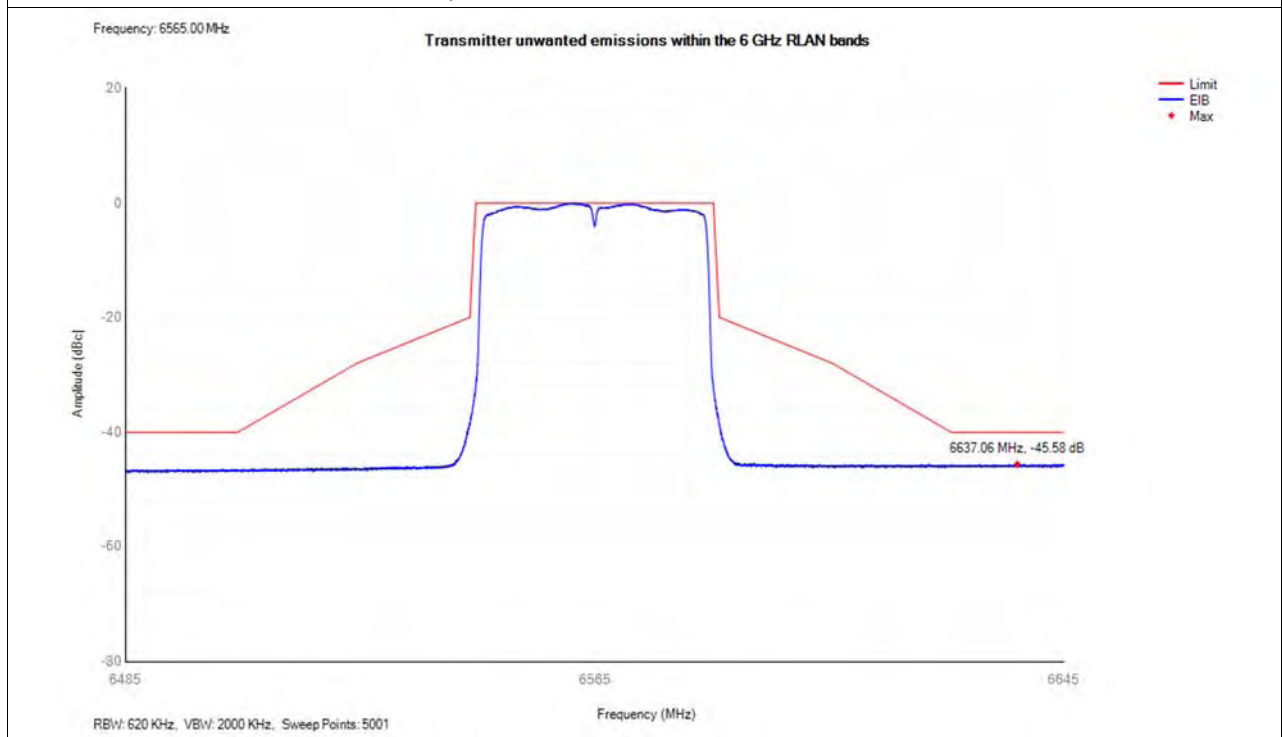


Power spectral mask NVNT ax40 6685MHz SISO

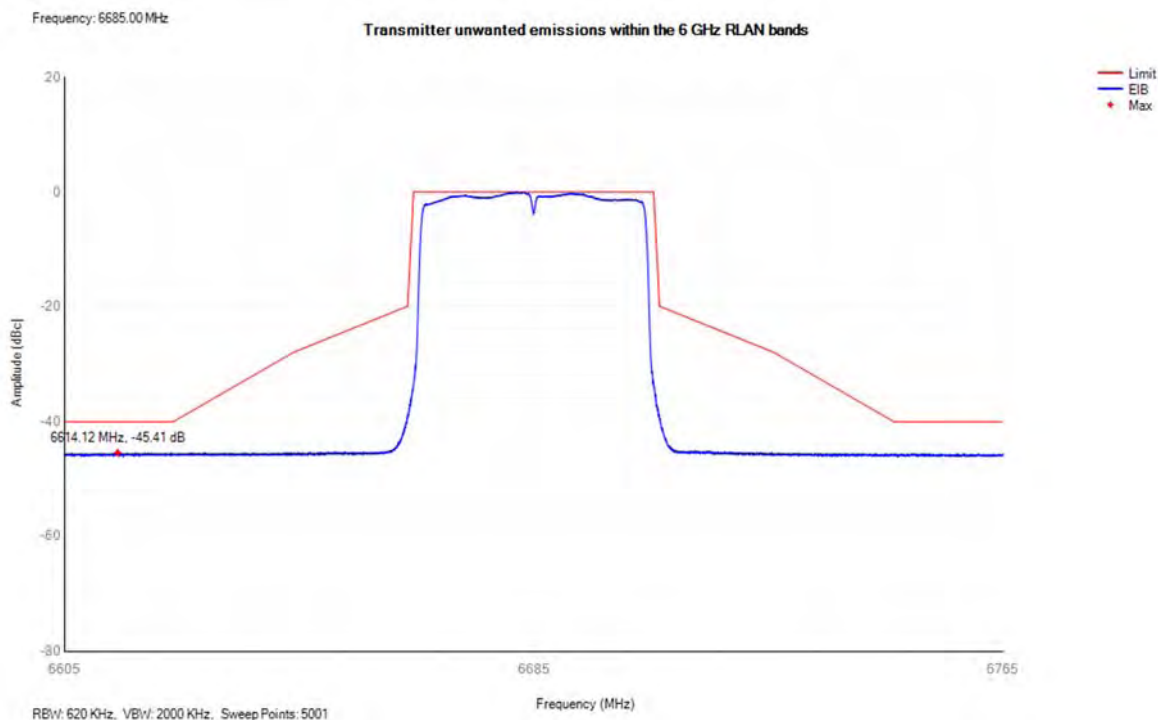


Power spectral mask NVNT ax40 6845MHz SISO

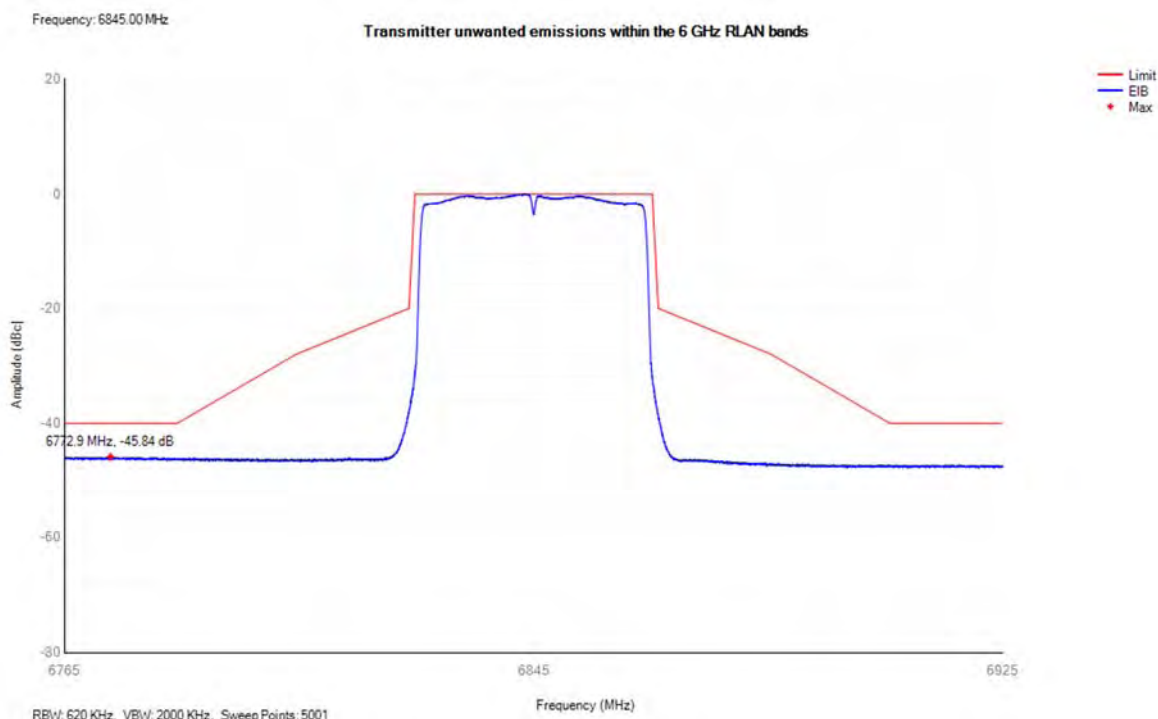


Power spectral mask NVNT ax40 6885MHz SISO

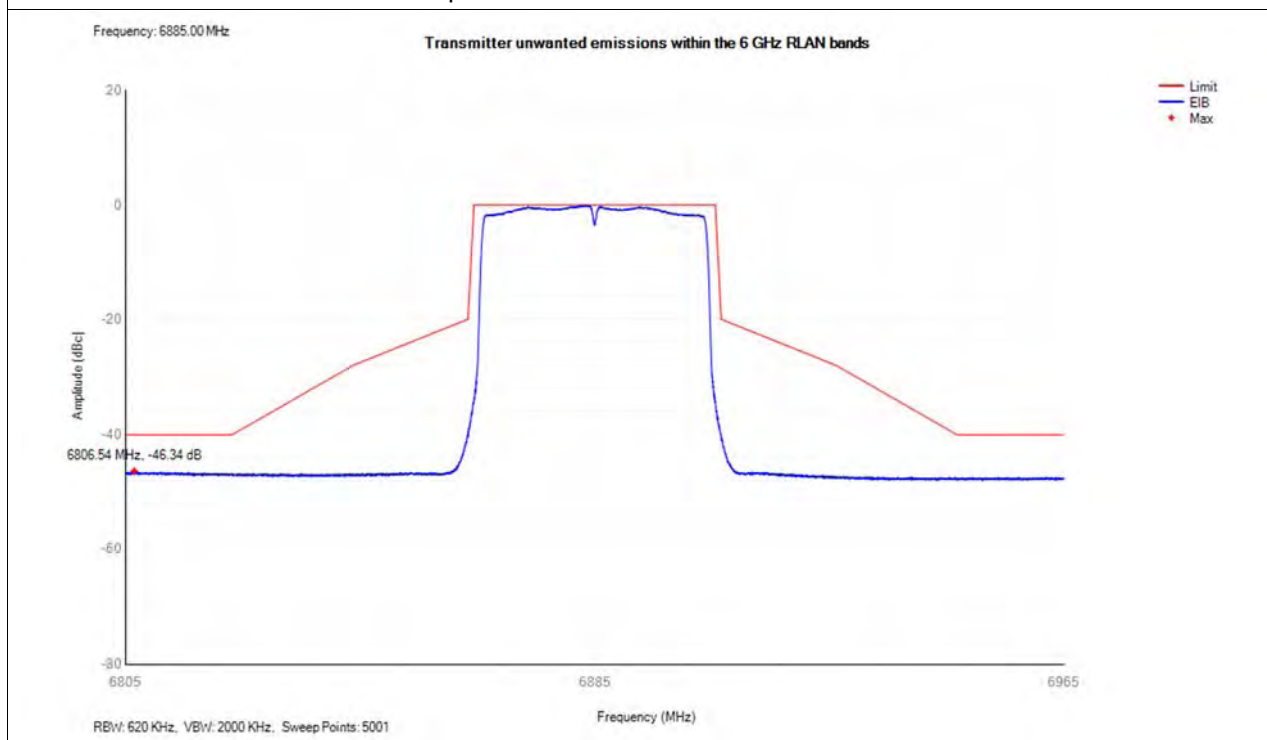


Power spectral mask NVNT ax40 6965MHz SISO

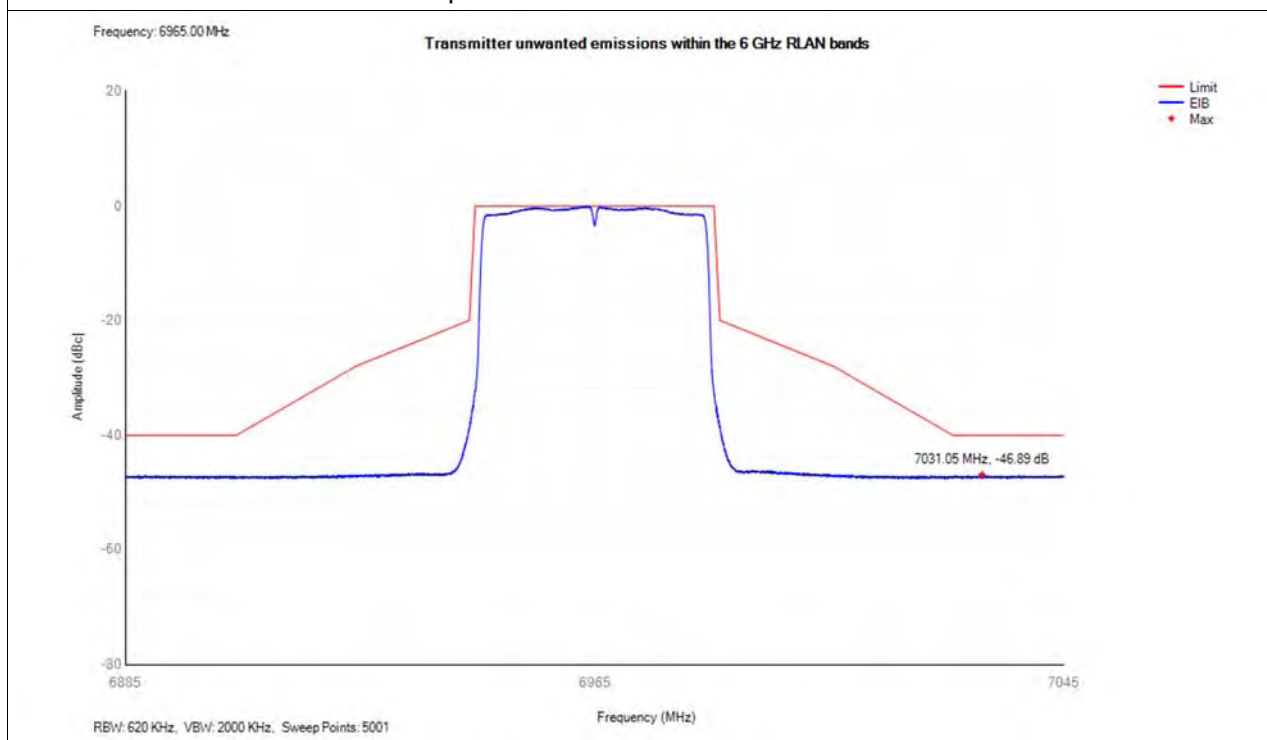


Power spectral mask NVNT ax40 7085MHz SISO

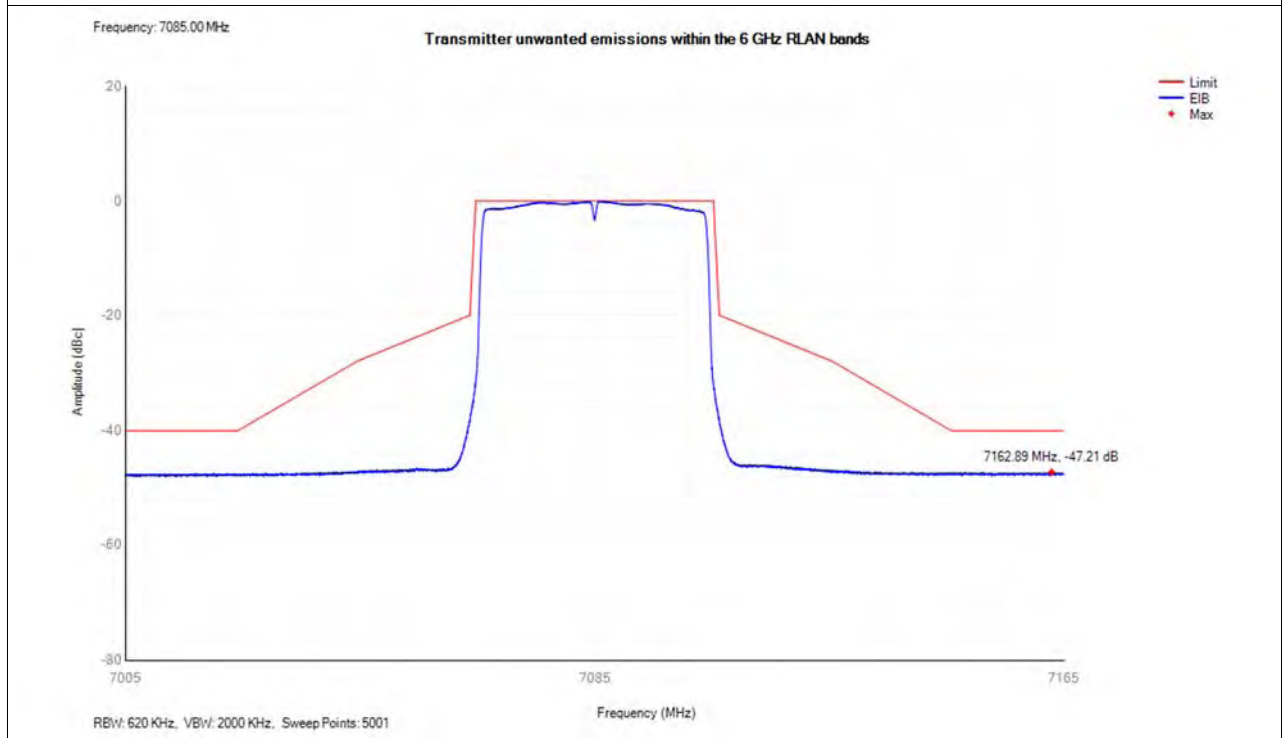


Power spectral mask NVNT ax40 5965MHz SISO

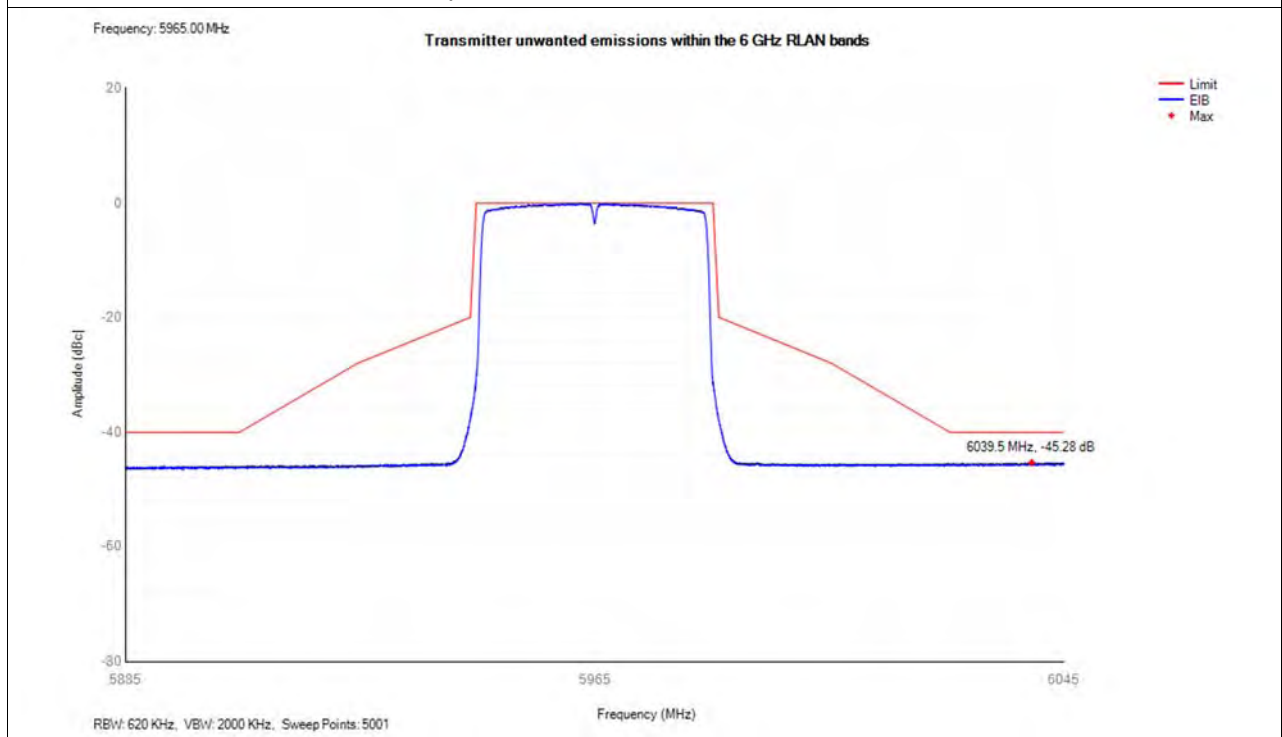


Power spectral mask NVNT ax40 6165MHz SISO

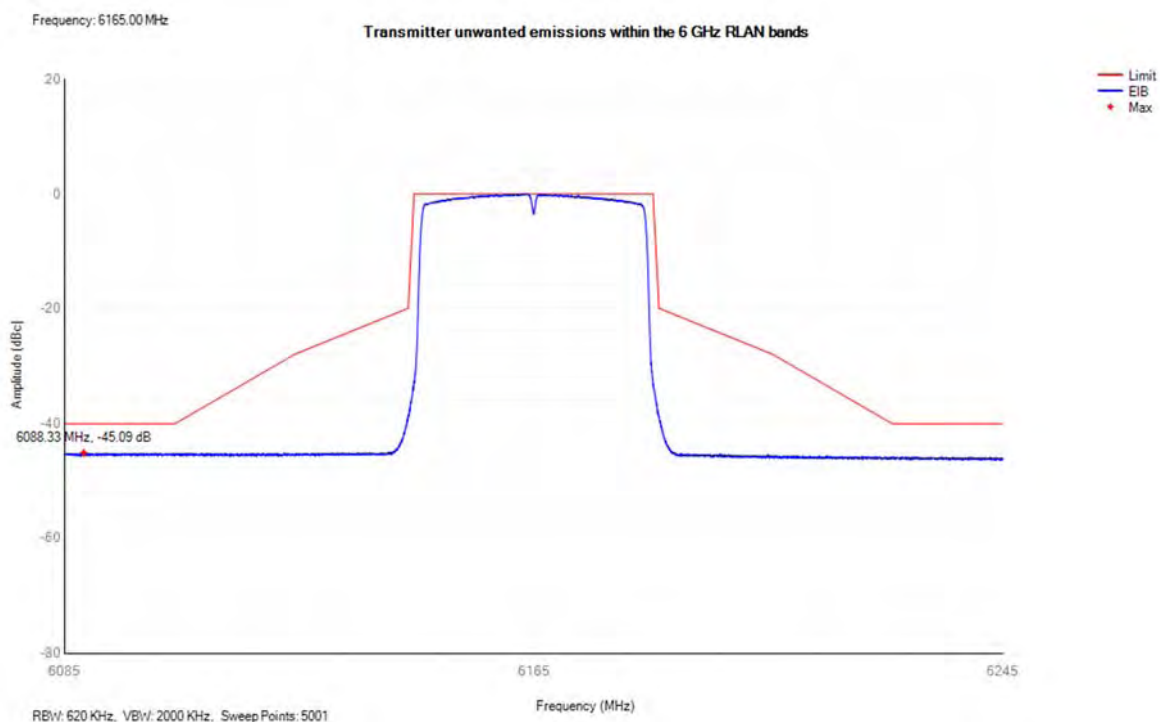


Power spectral mask NVNT ax40 6405MHz SISO

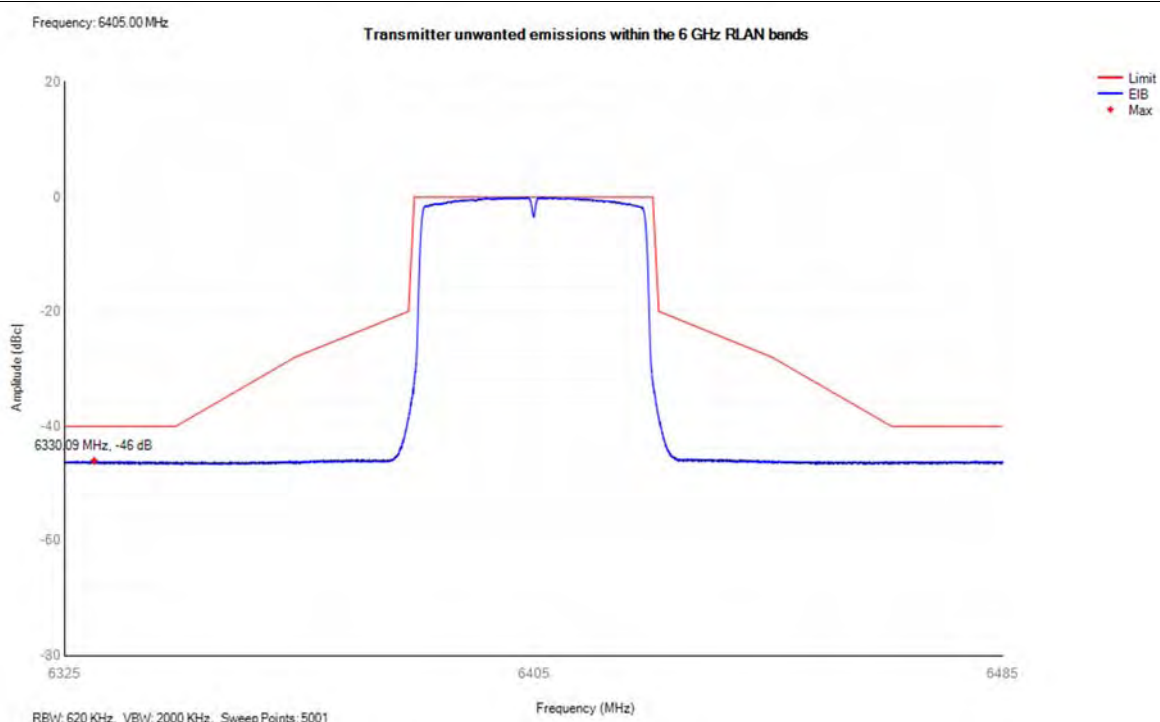


Power spectral mask NVNT ax40 6445MHz SISO

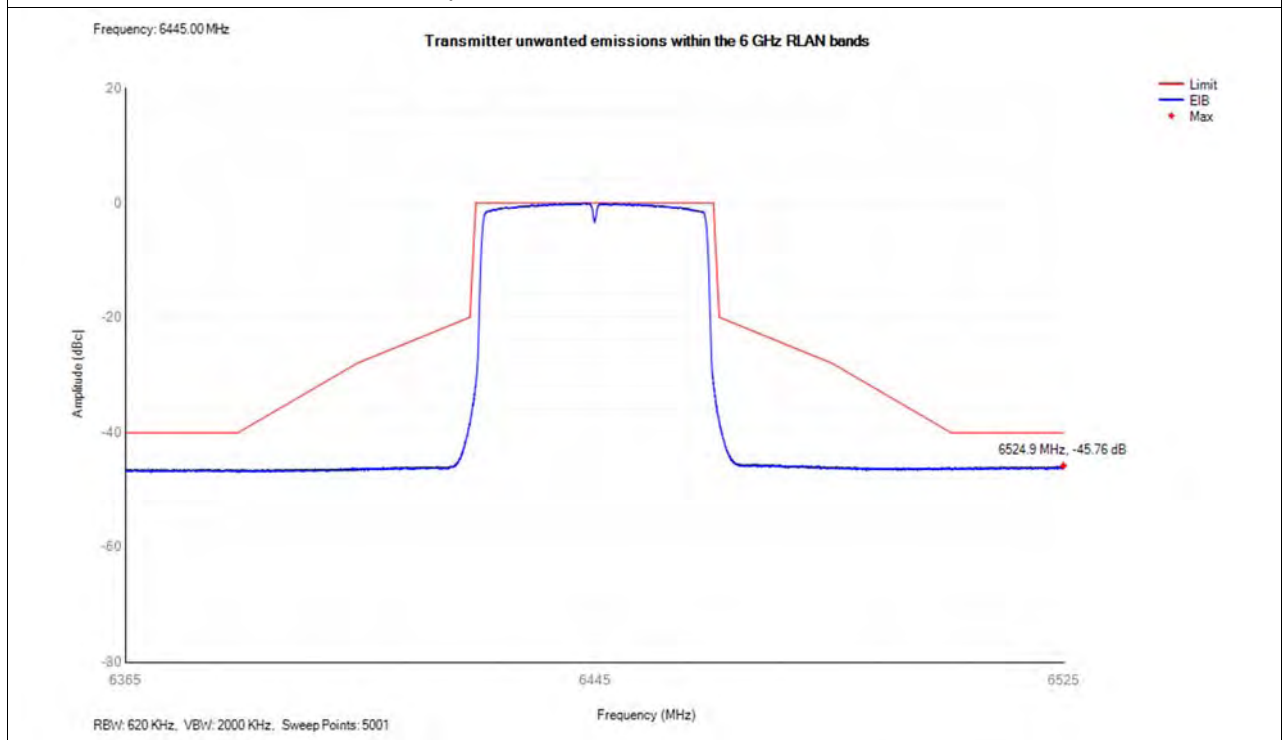


Power spectral mask NVNT ax40 6485MHz SISO

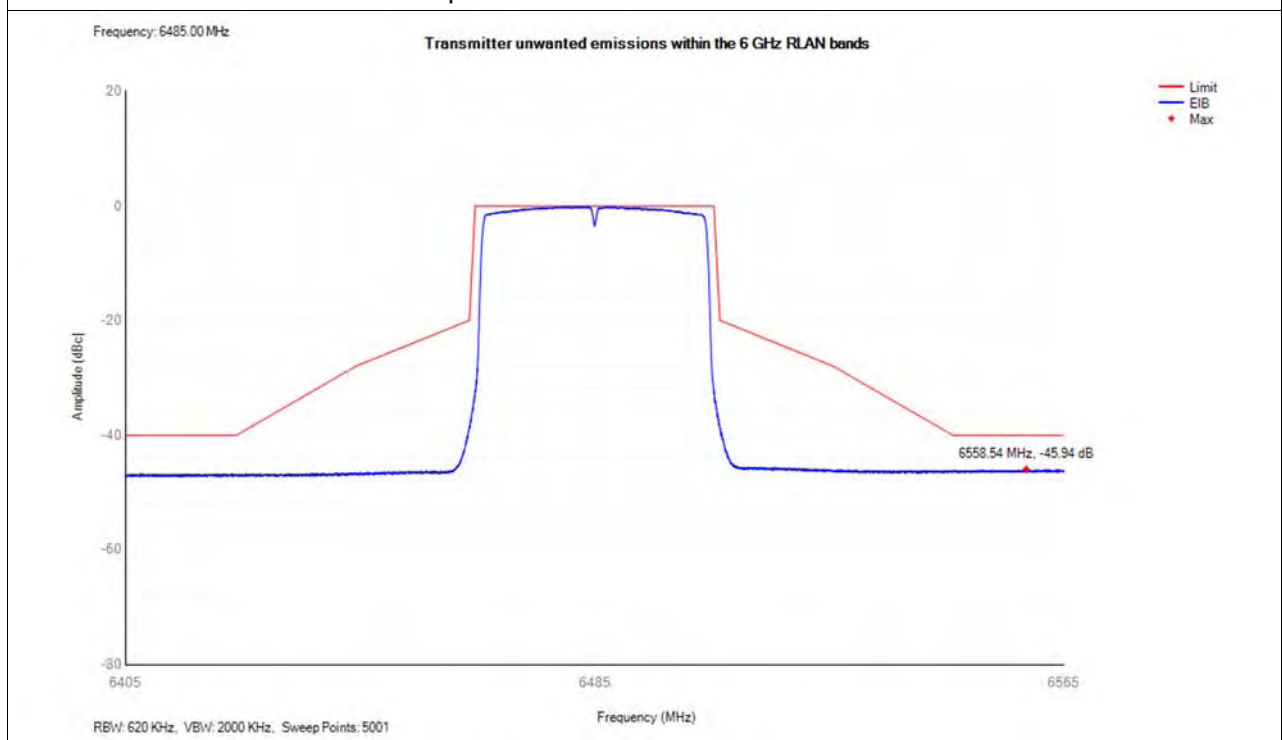


Power spectral mask NVNT ax40 6565MHz SISO

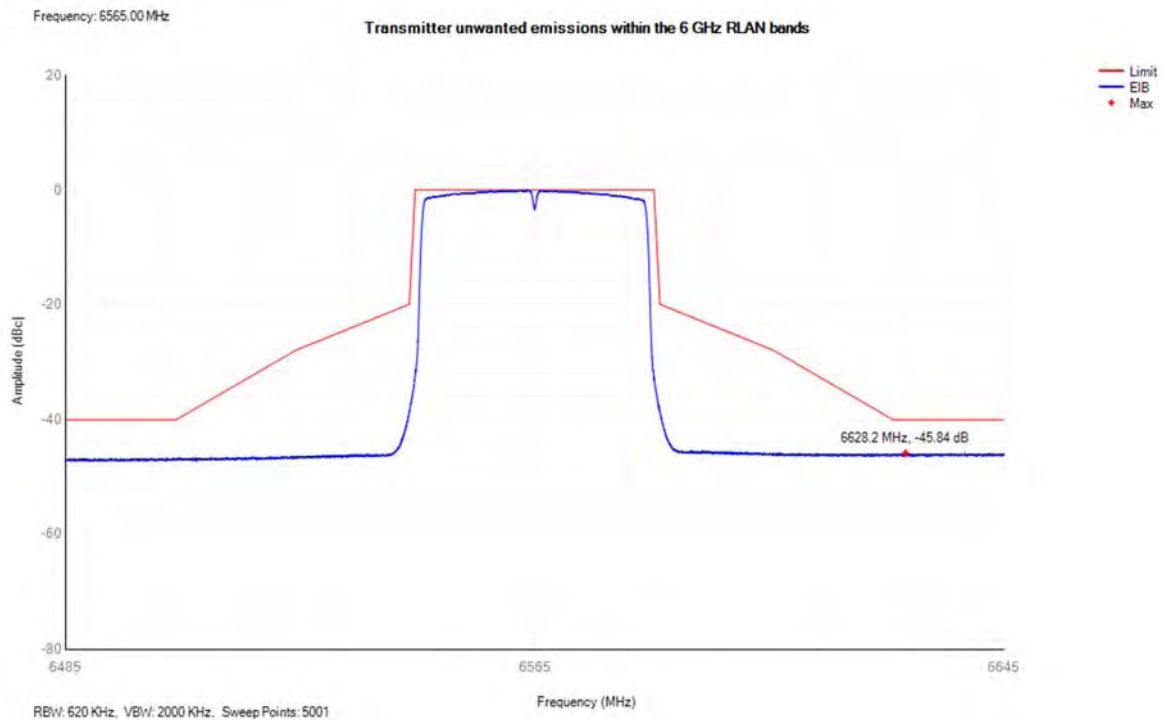


Power spectral mask NVNT ax40 6685MHz SISO

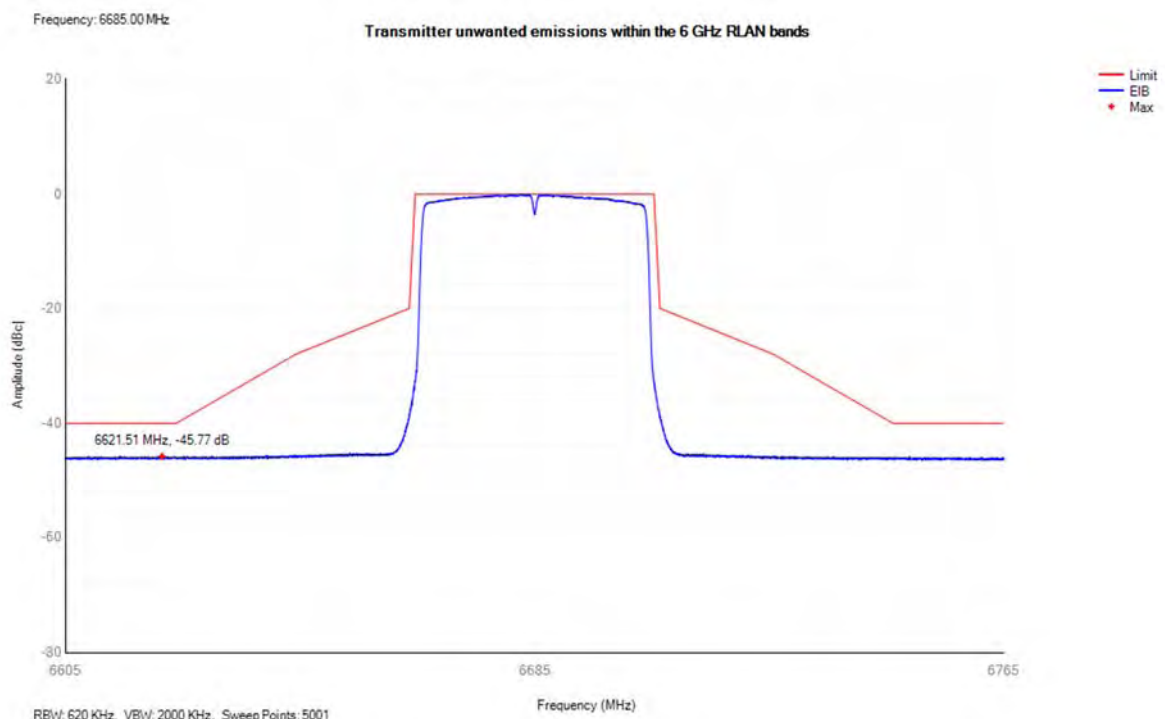


Power spectral mask NVNT ax40 6845MHz SISO

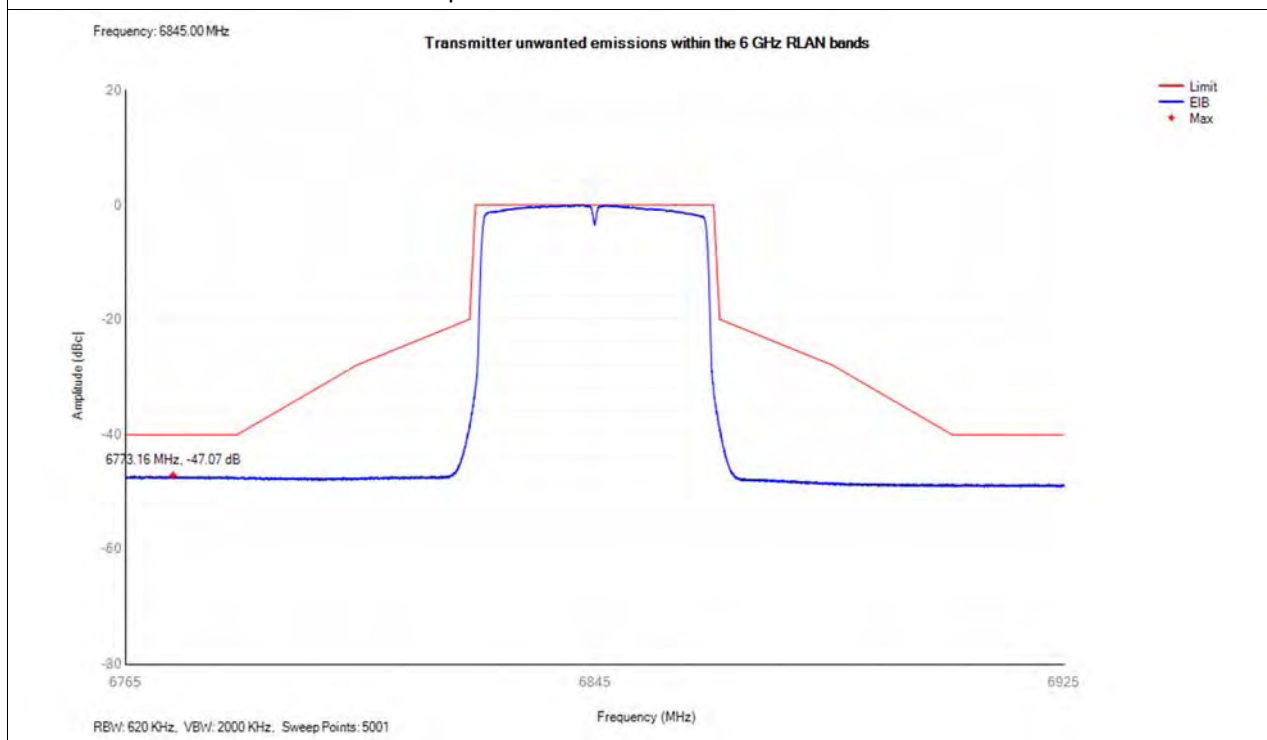


Power spectral mask NVNT ax40 6885MHz SISO

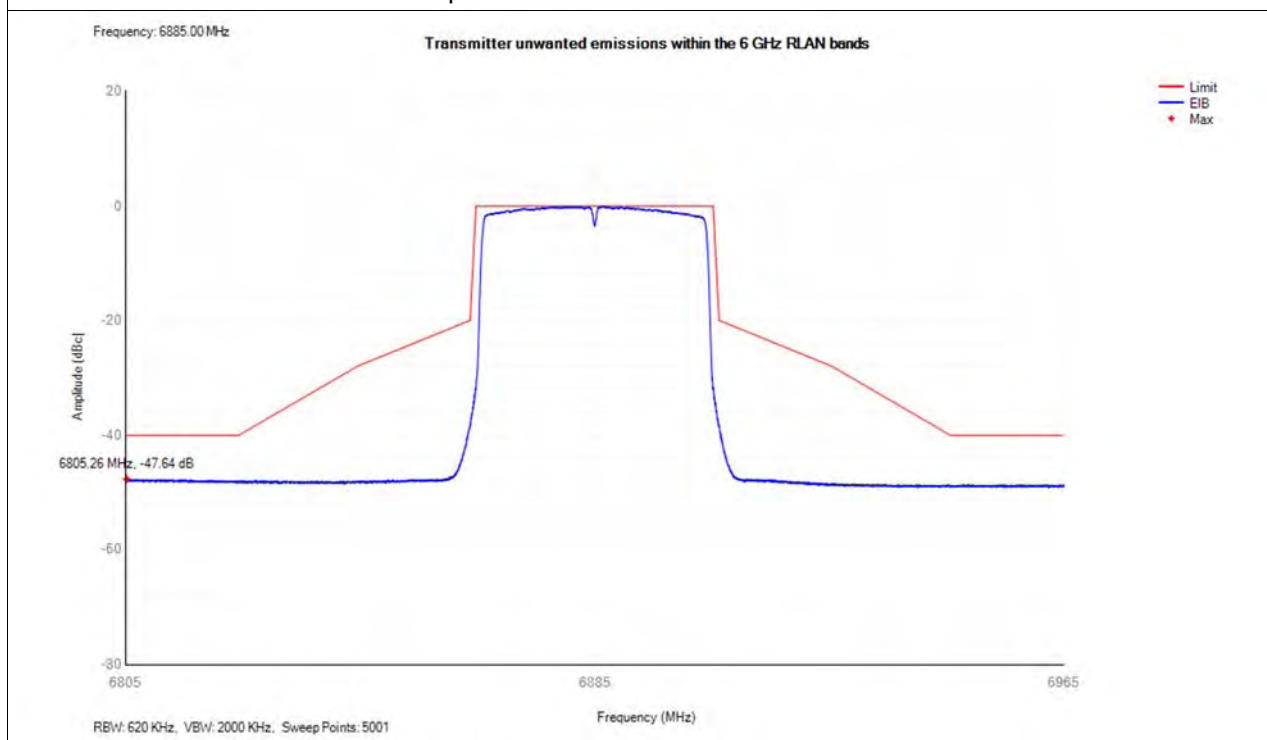


Power spectral mask NVNT ax40 6965MHz SISO

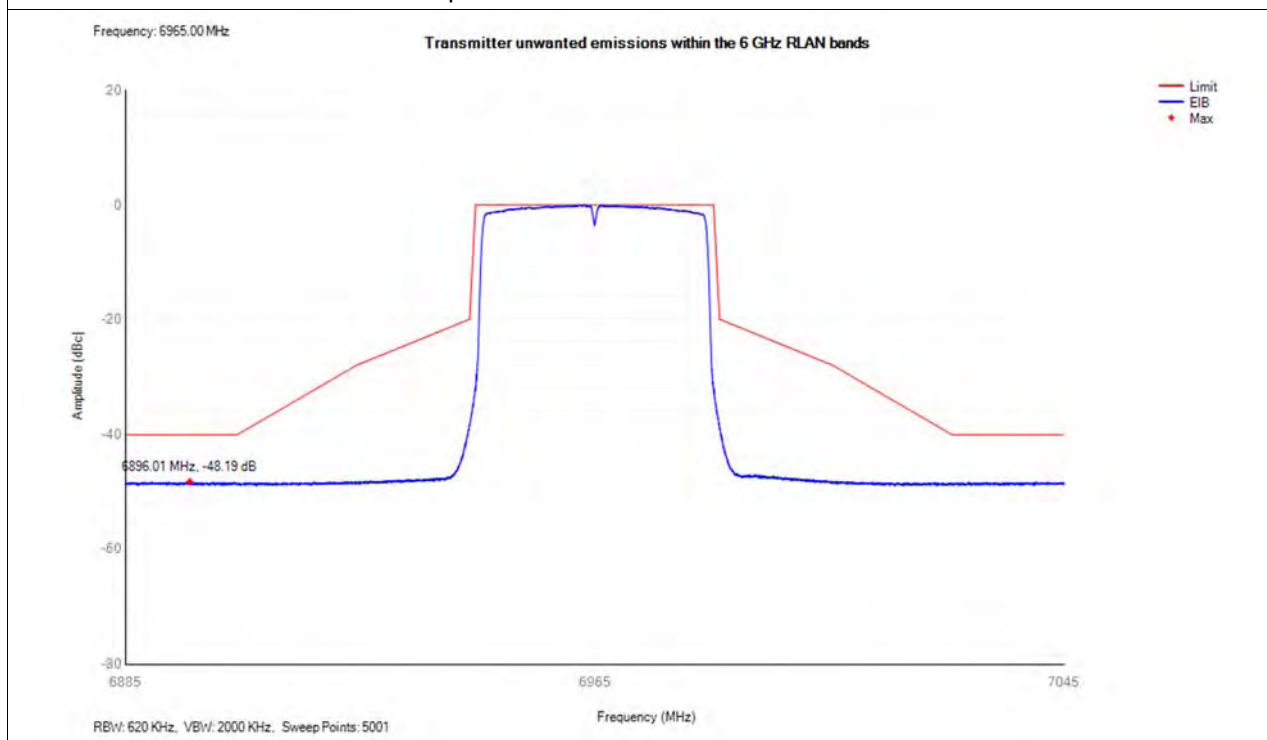


Power spectral mask NVNT ax40 7085MHz SISO

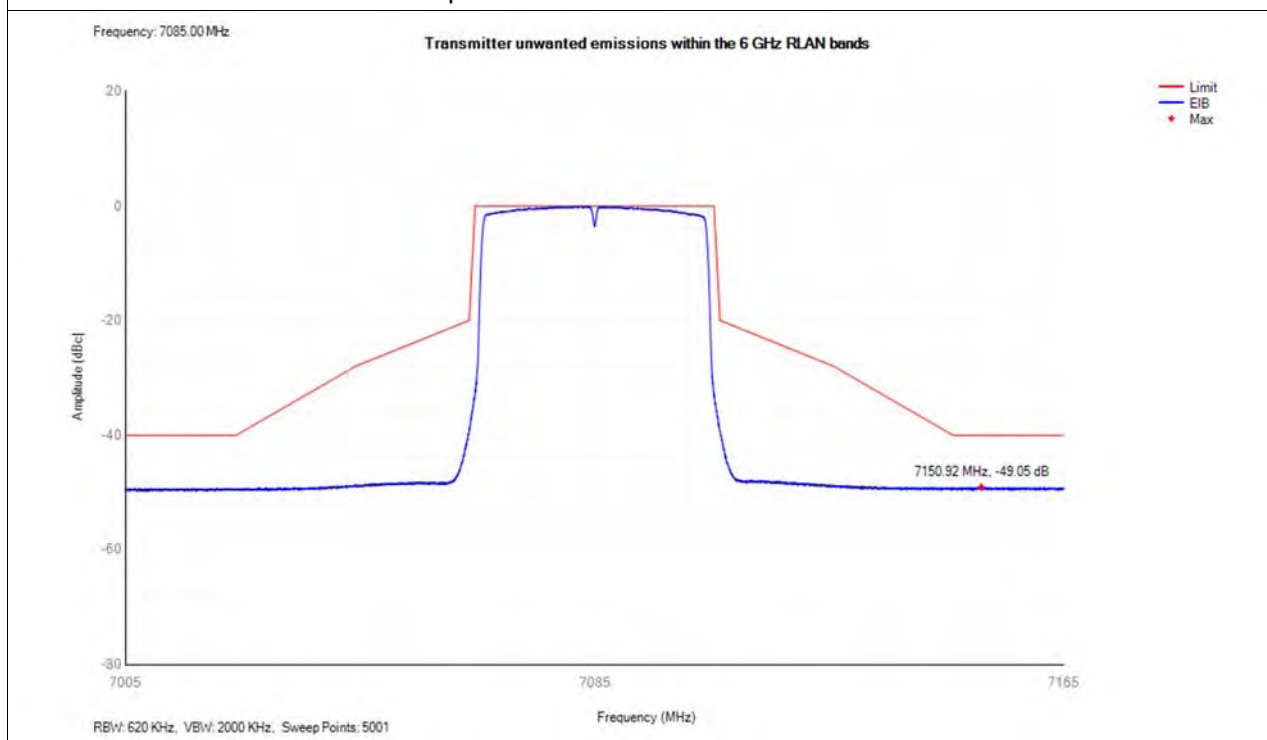


Power spectral mask NVNT ax80 5985MHz SISO

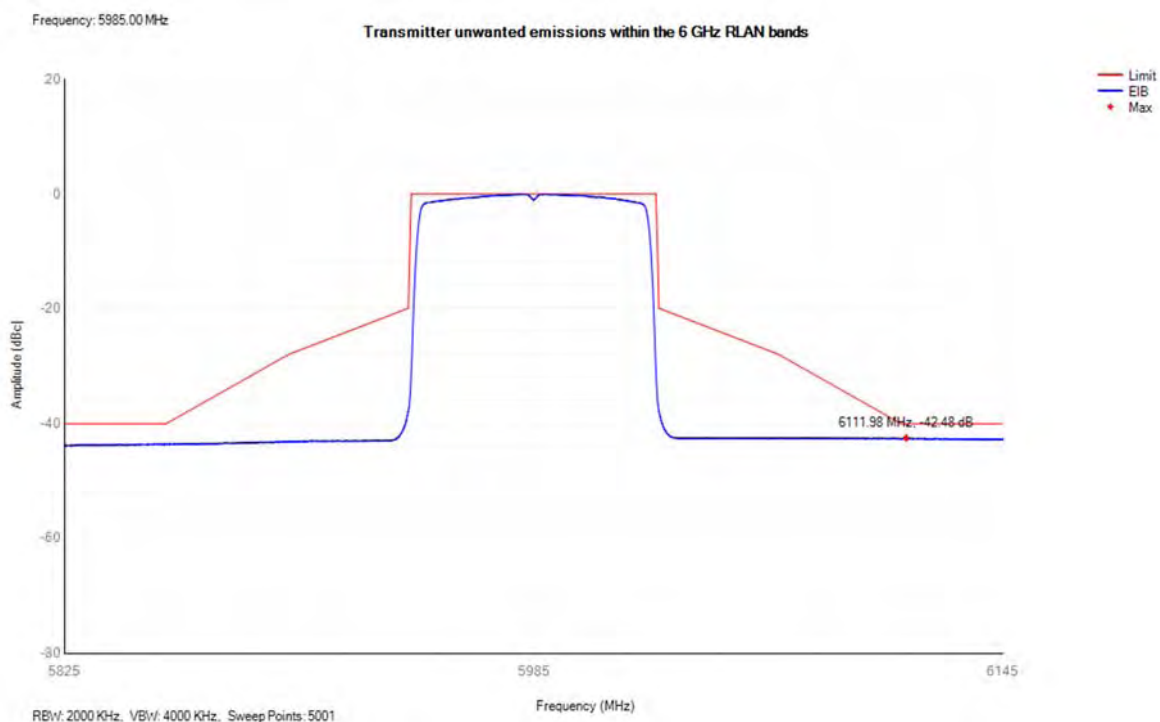


Power spectral mask NVNT ax80 6145MHz SISO

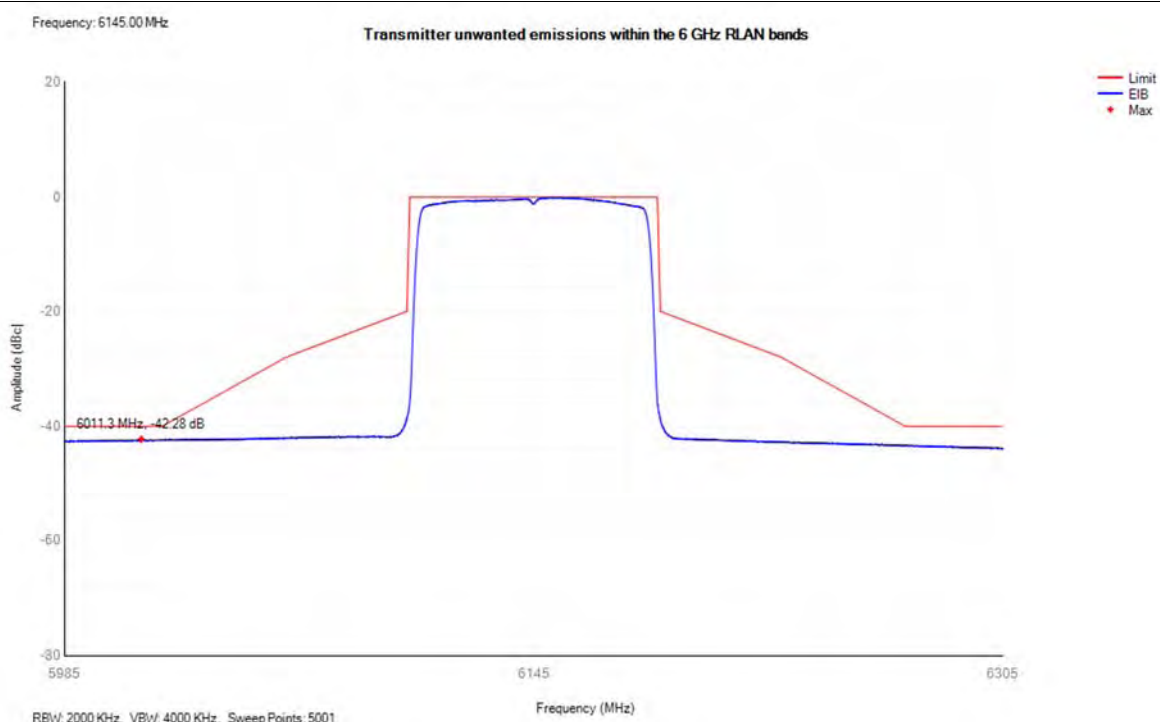


Power spectral mask NVNT ax80 6385MHz SISO

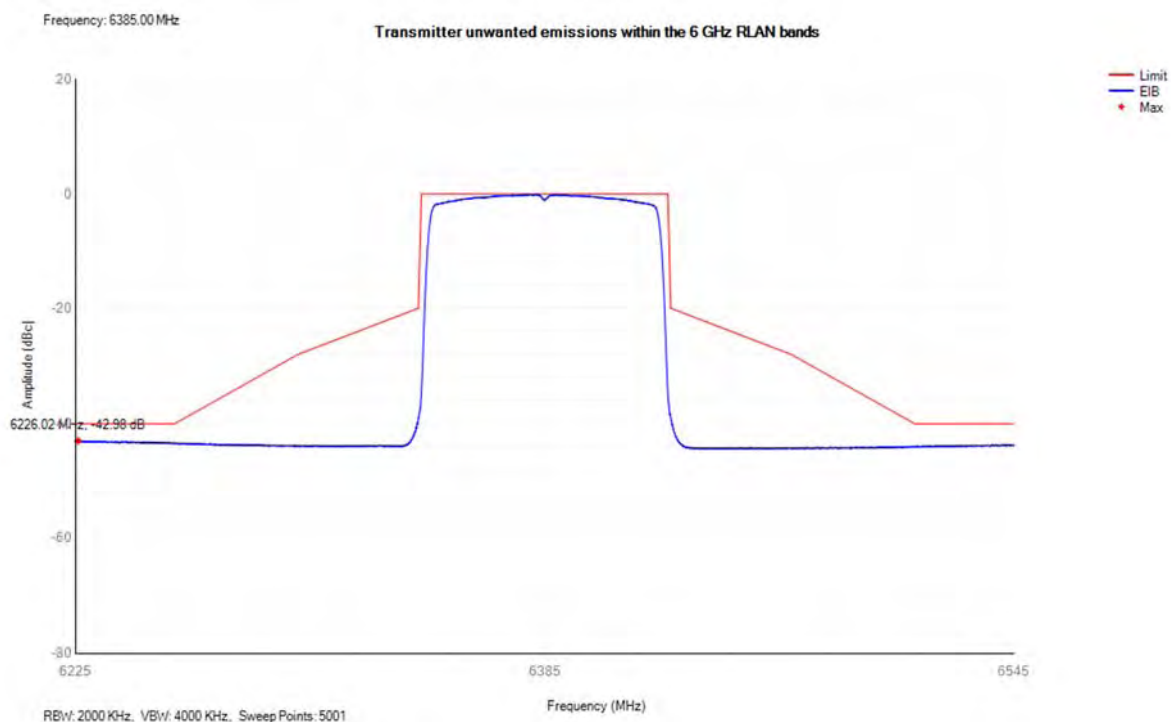


Power spectral mask NVNT ax80 6465MHz SISO

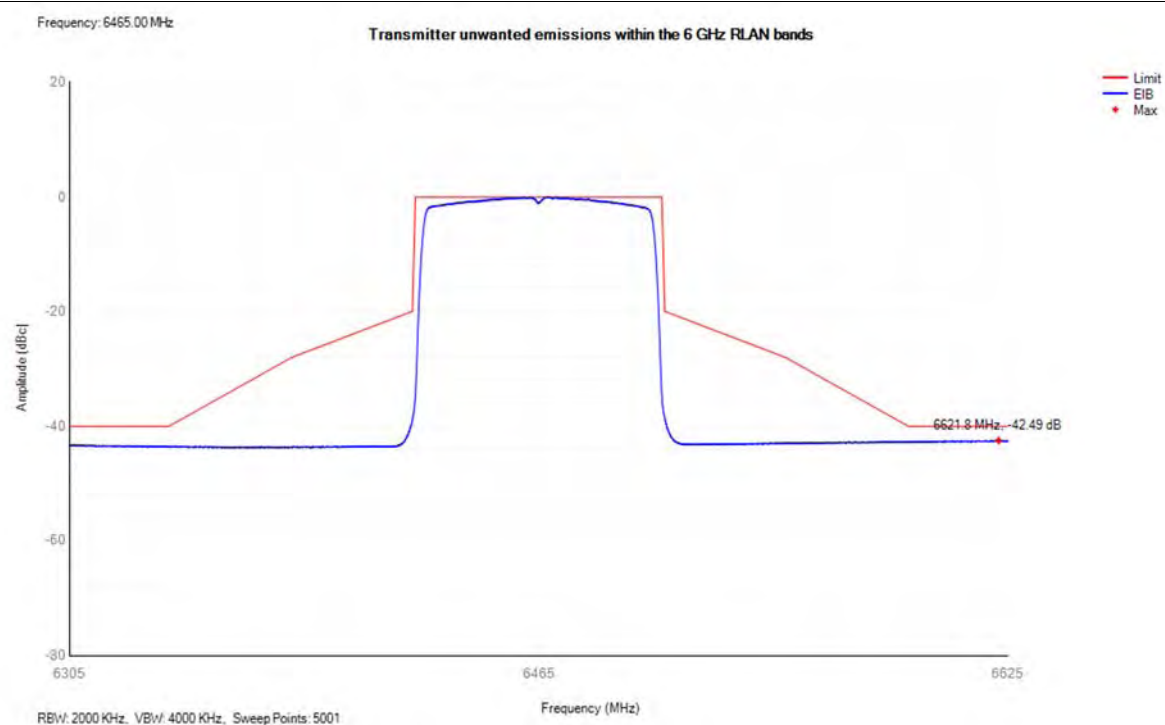


Power spectral mask NVNT ax80 6625MHz SISO

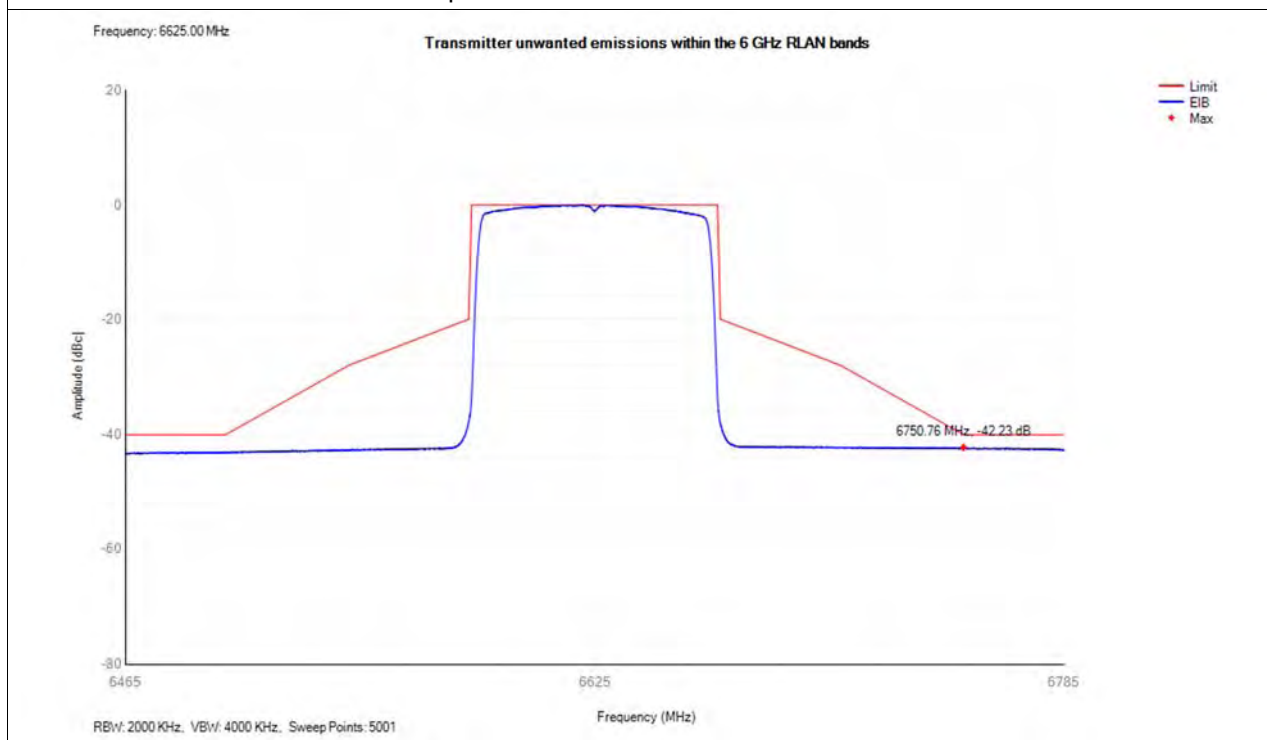


Power spectral mask NVNT ax80 6705MHz SISO

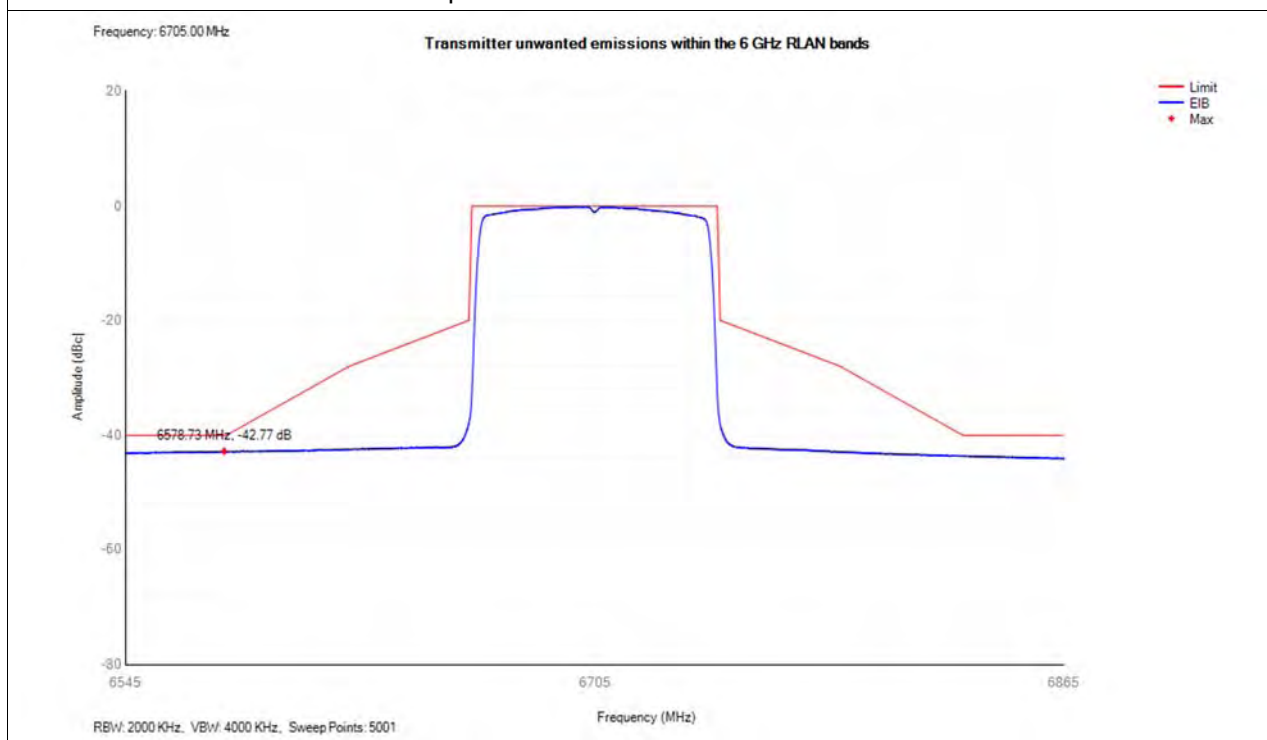


Power spectral mask NVNT ax80 6785MHz SISO

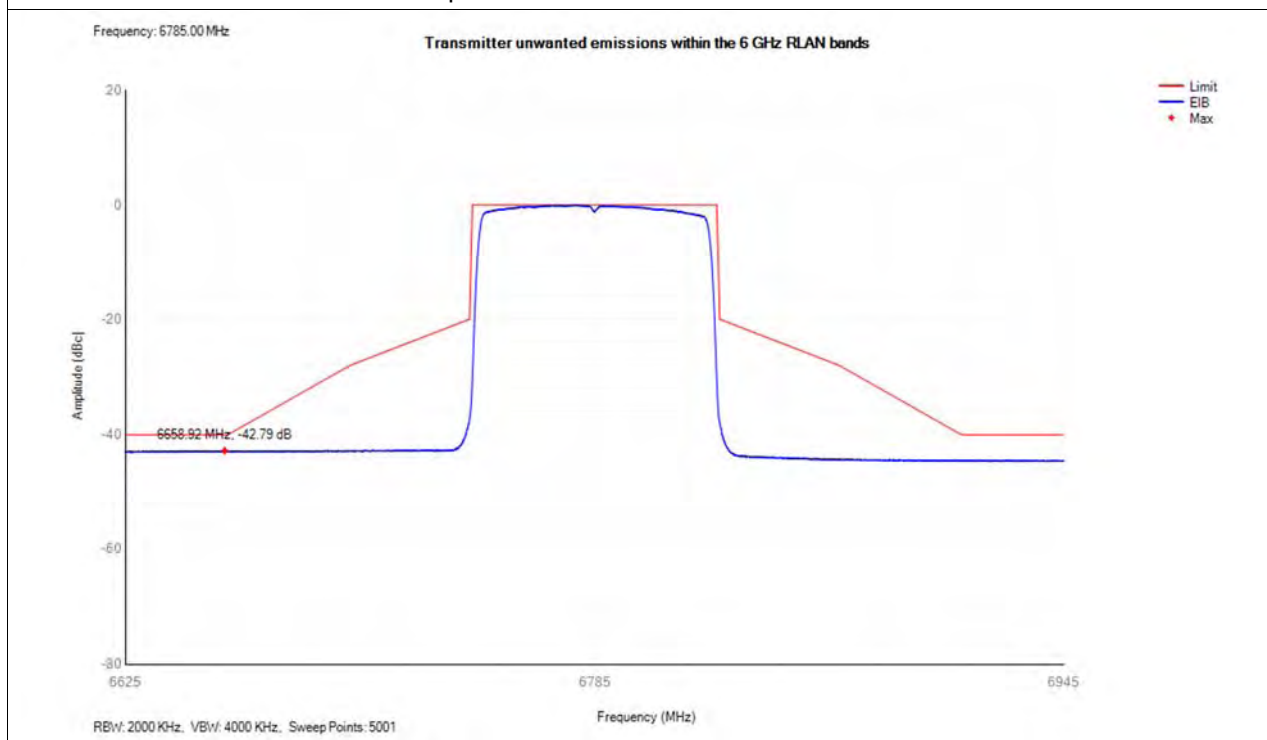


Power spectral mask NVNT ax80 6945MHz SISO

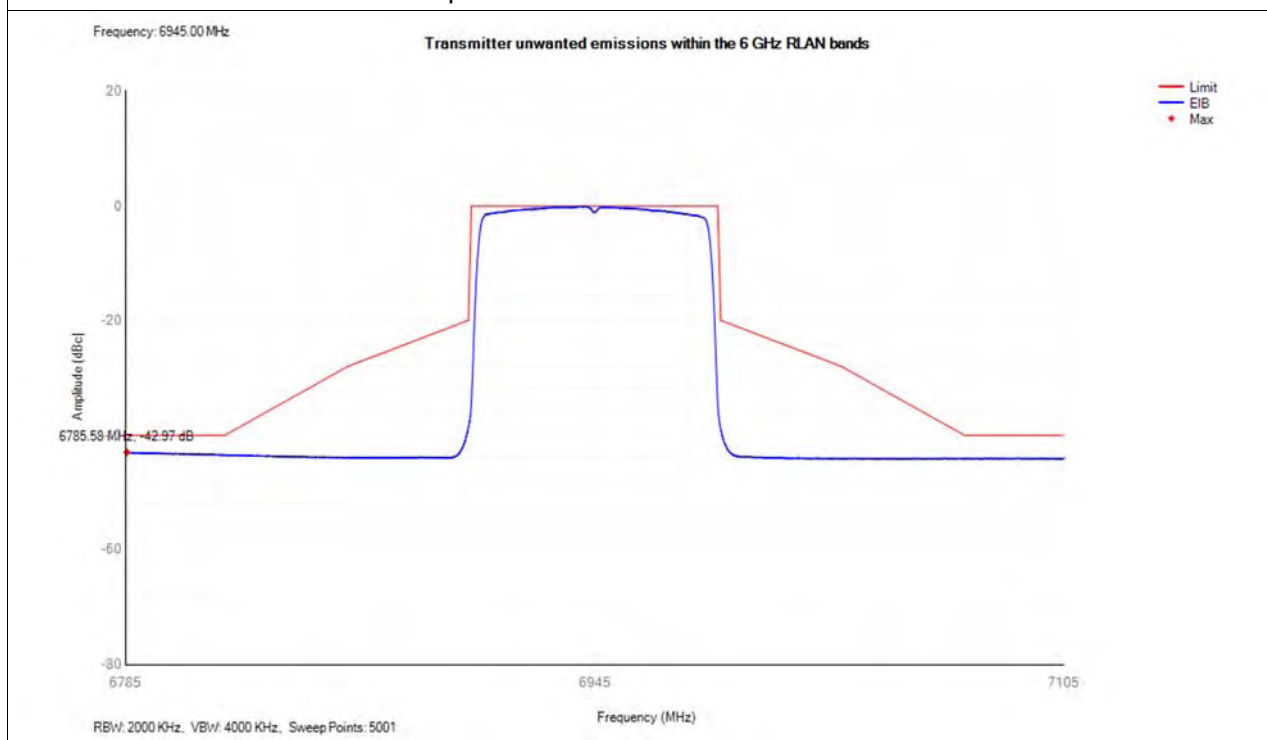


Power spectral mask NVNT ax80 7025MHz SISO

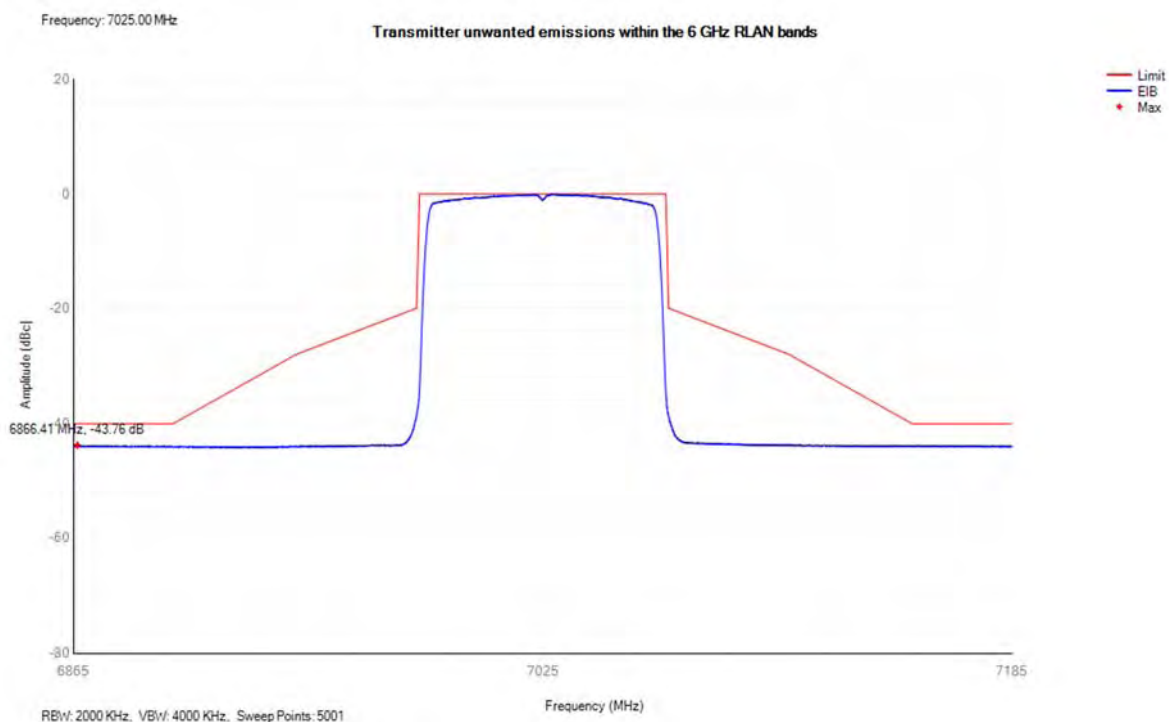


Power spectral mask NVNT ax80 5985MHz SISO

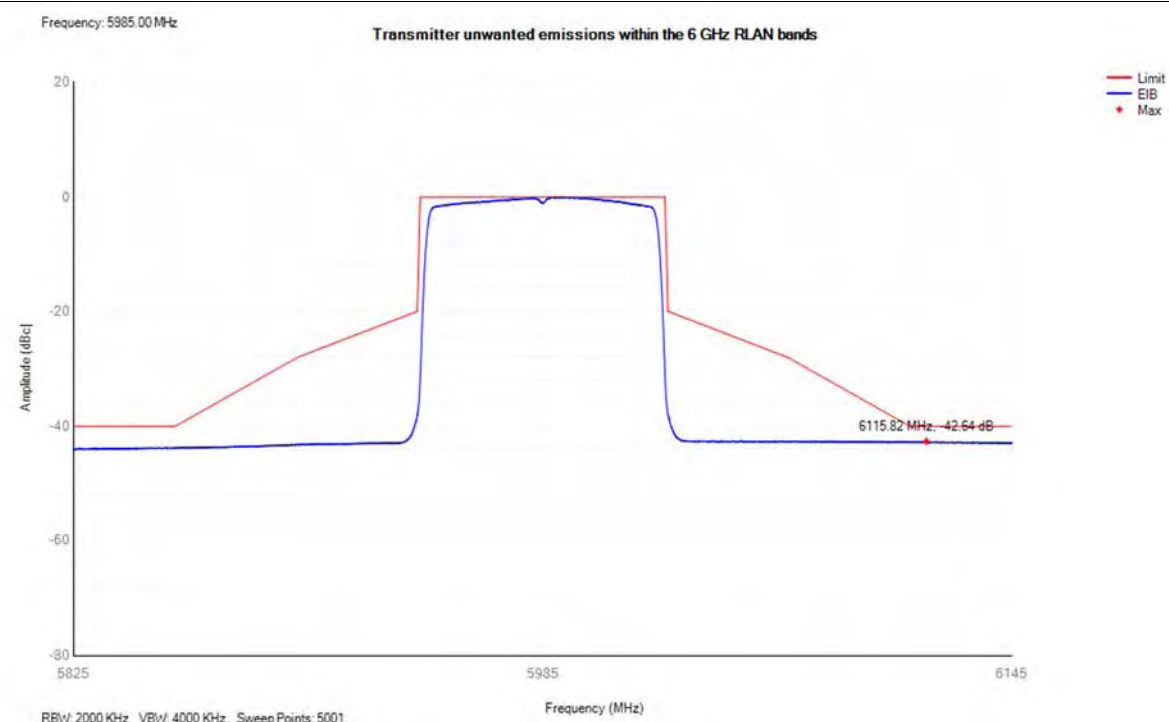


Power spectral mask NVNT ax80 6145MHz SISO

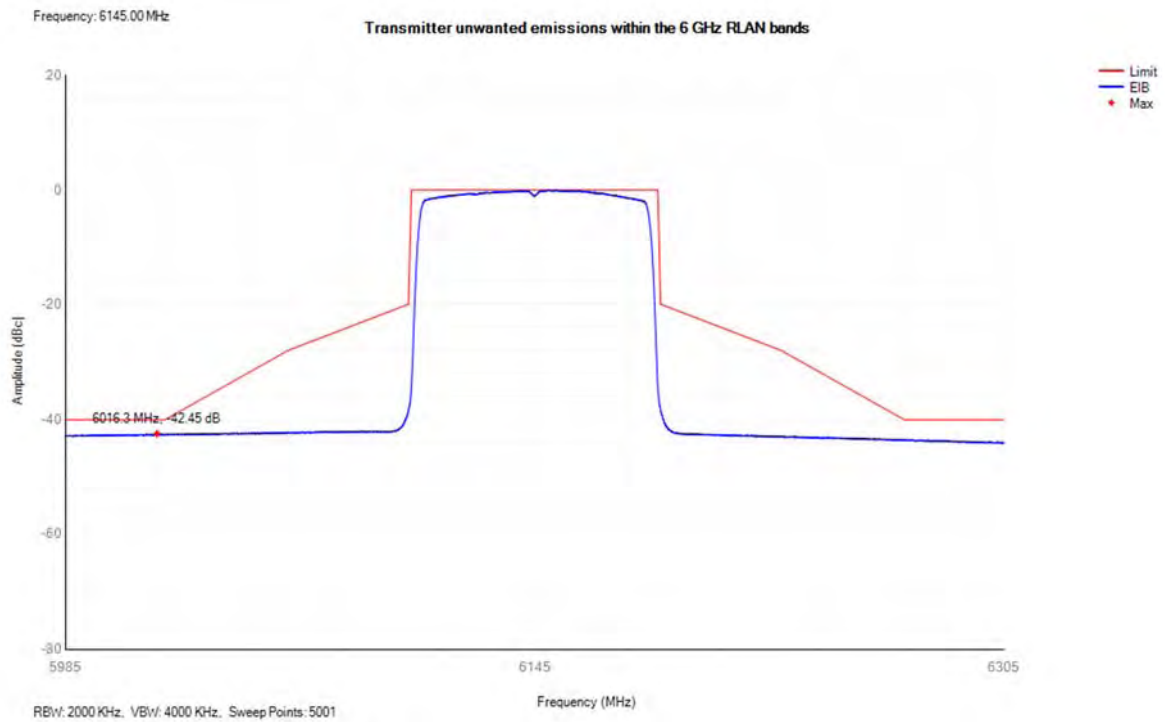


Power spectral mask NVNT ax80 6385MHz SISO

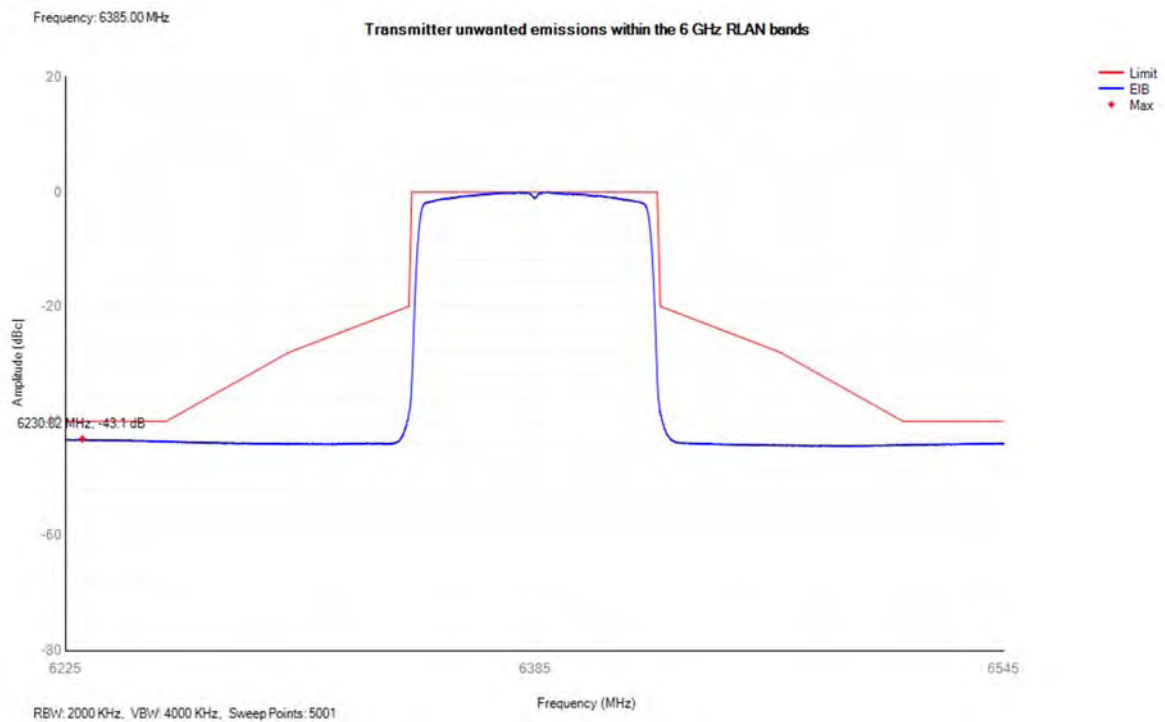


Power spectral mask NVNT ax80 6465MHz SISO

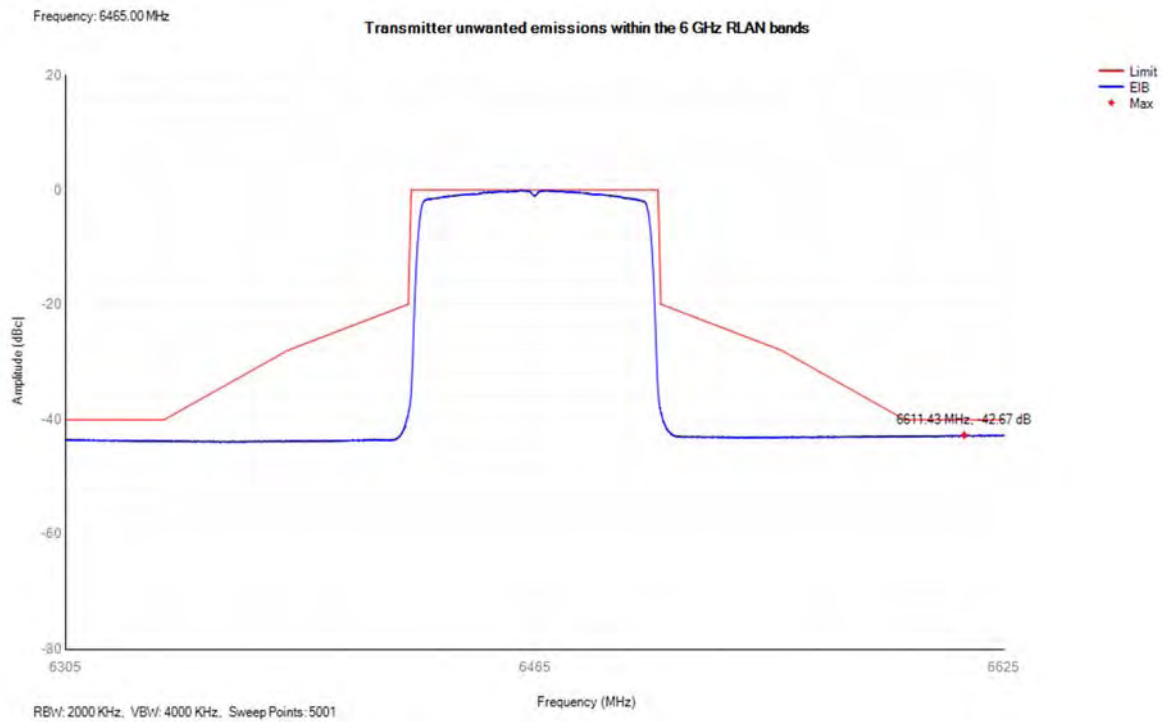


Power spectral mask NVNT ax80 6625MHz SISO

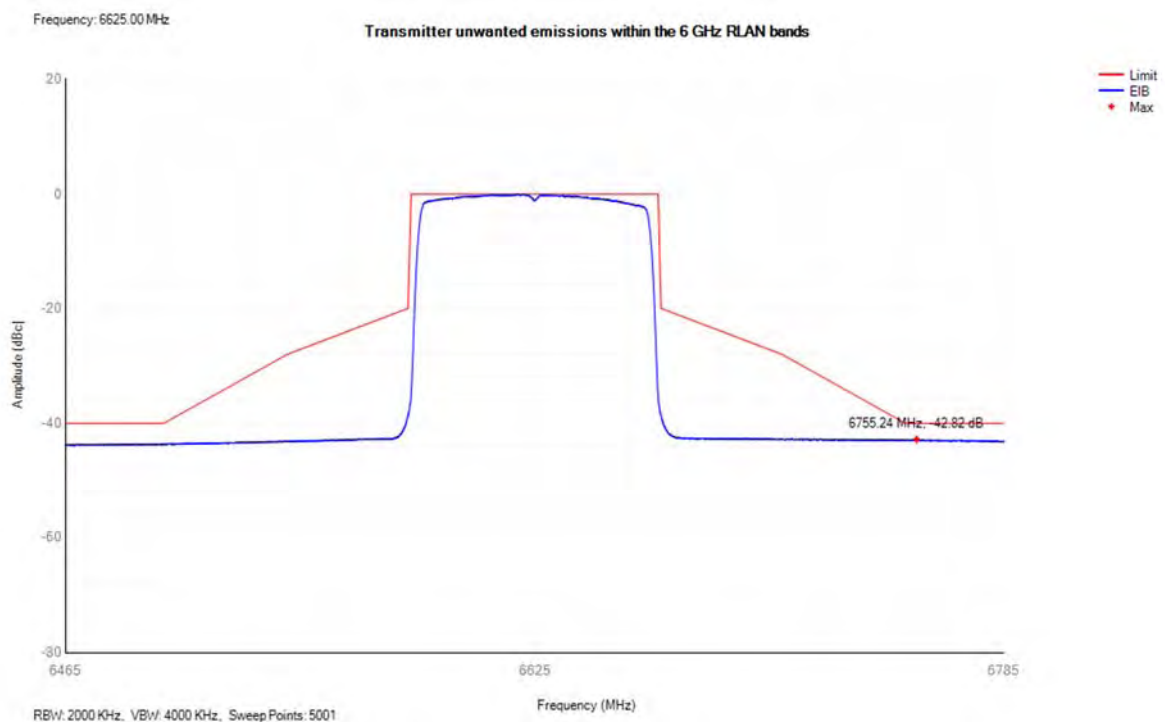


Power spectral mask NVNT ax80 6705MHz SISO

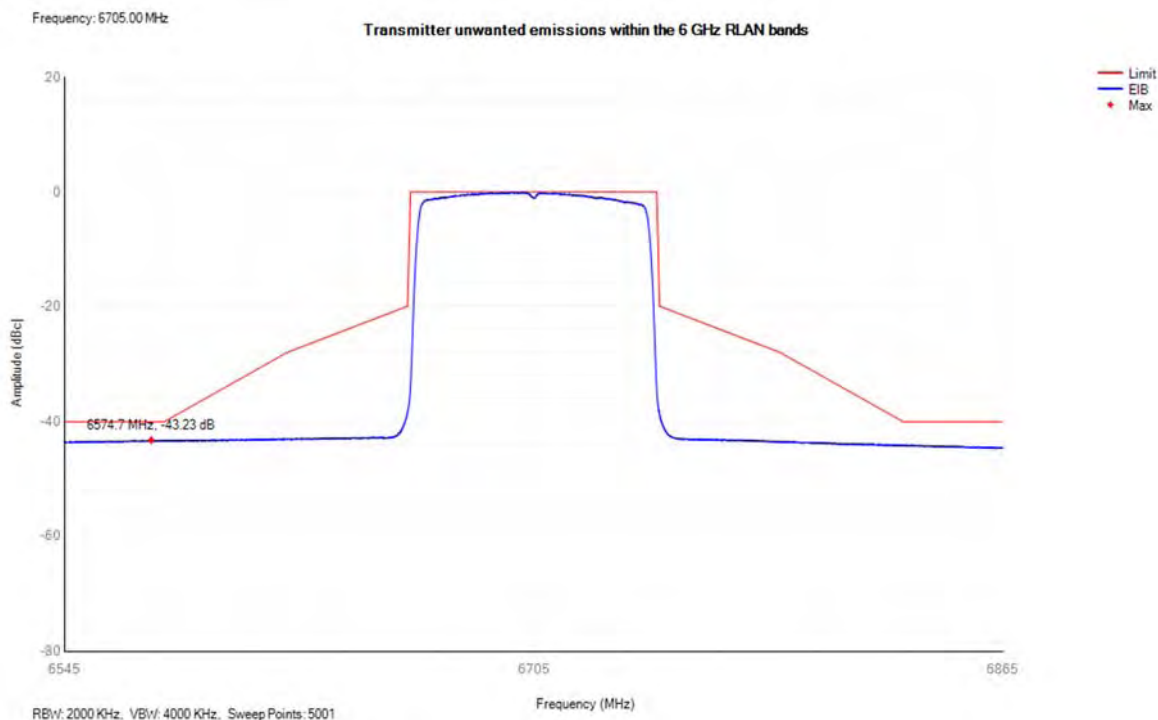


Power spectral mask NVNT ax80 6785MHz SISO

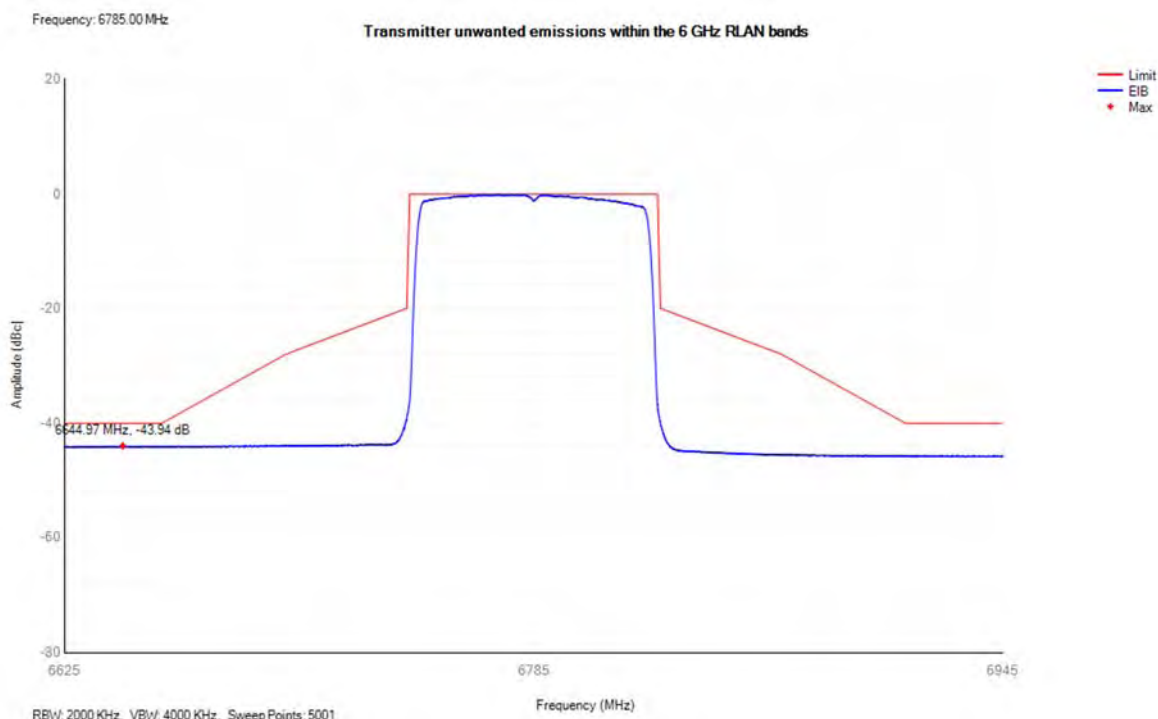


Power spectral mask NVNT ax80 6945MHz SISO

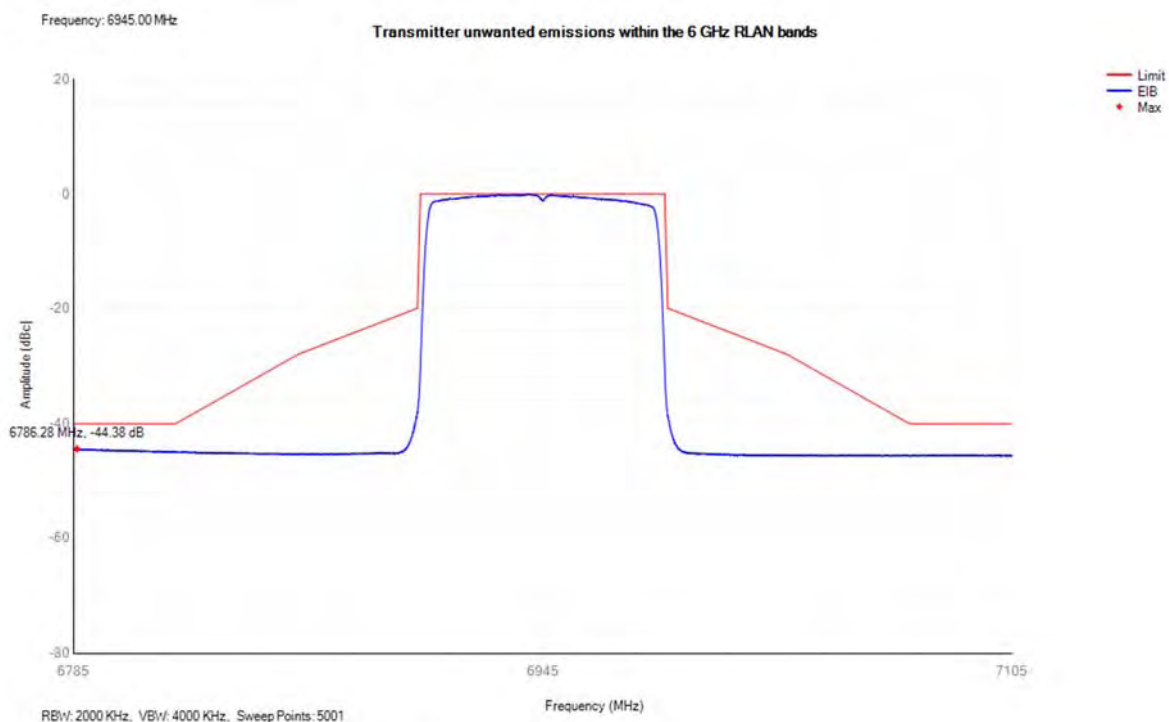


Power spectral mask NVNT ax80 7025MHz SISO

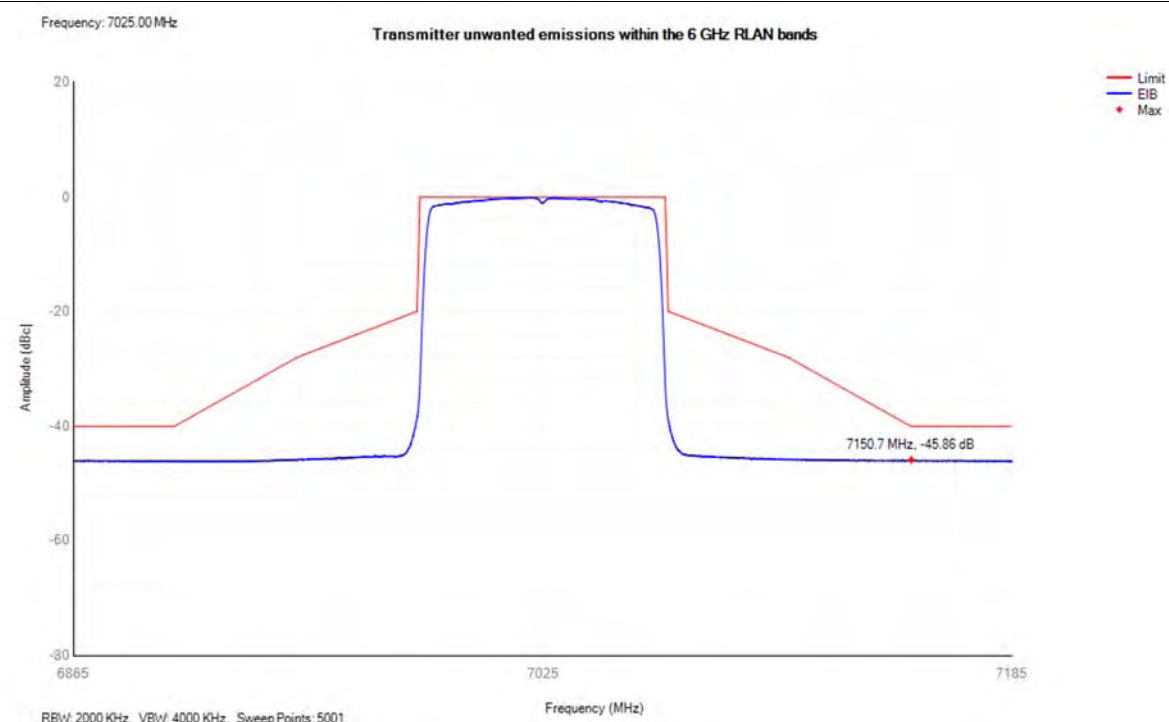


Power spectral mask NVNT ax160 6025MHz SISO

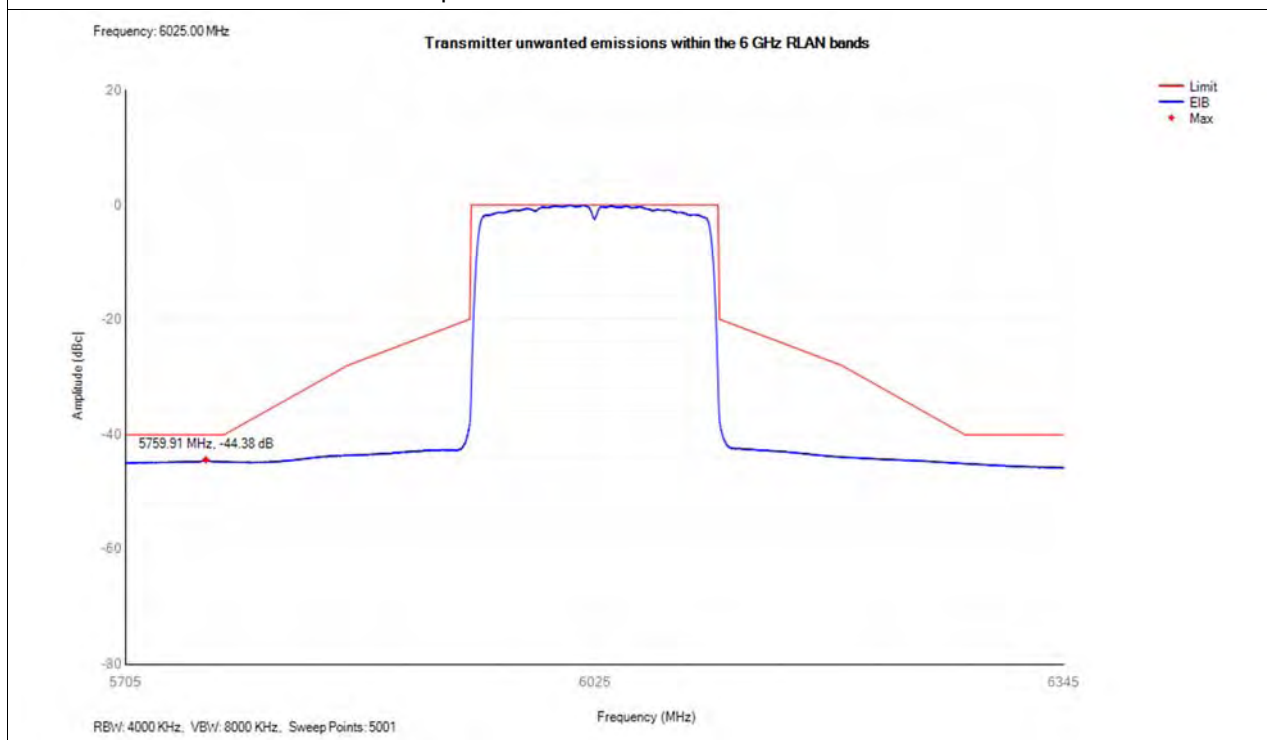


Power spectral mask NVNT ax160 6185MHz SISO

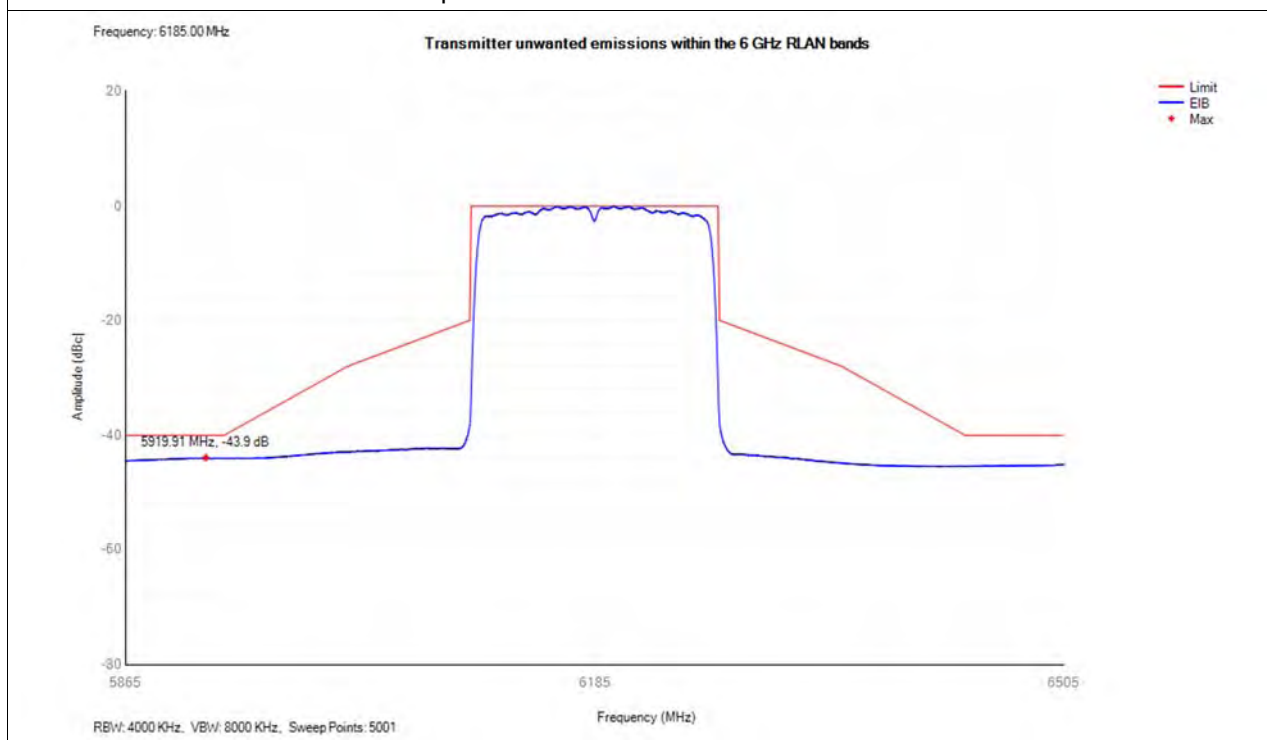


Power spectral mask NVNT ax160 6345MHz SISO

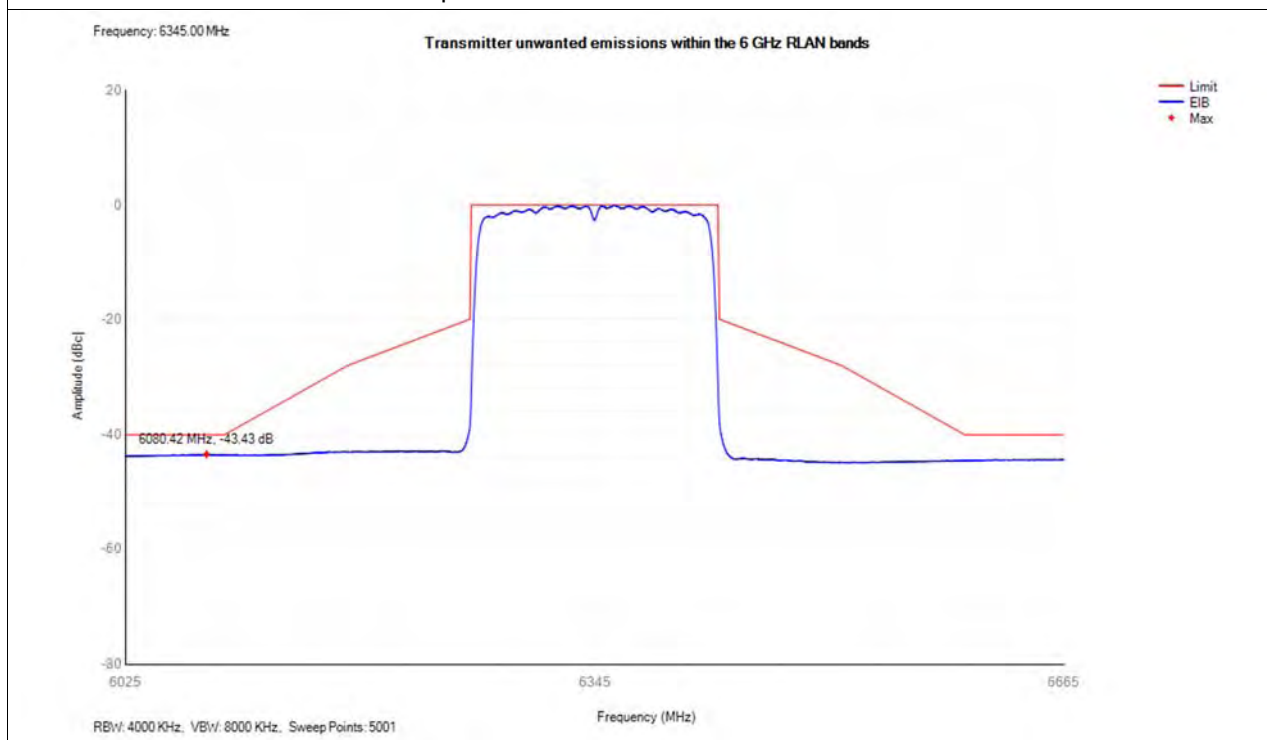


Power spectral mask NVNT ax160 6665MHz SISO

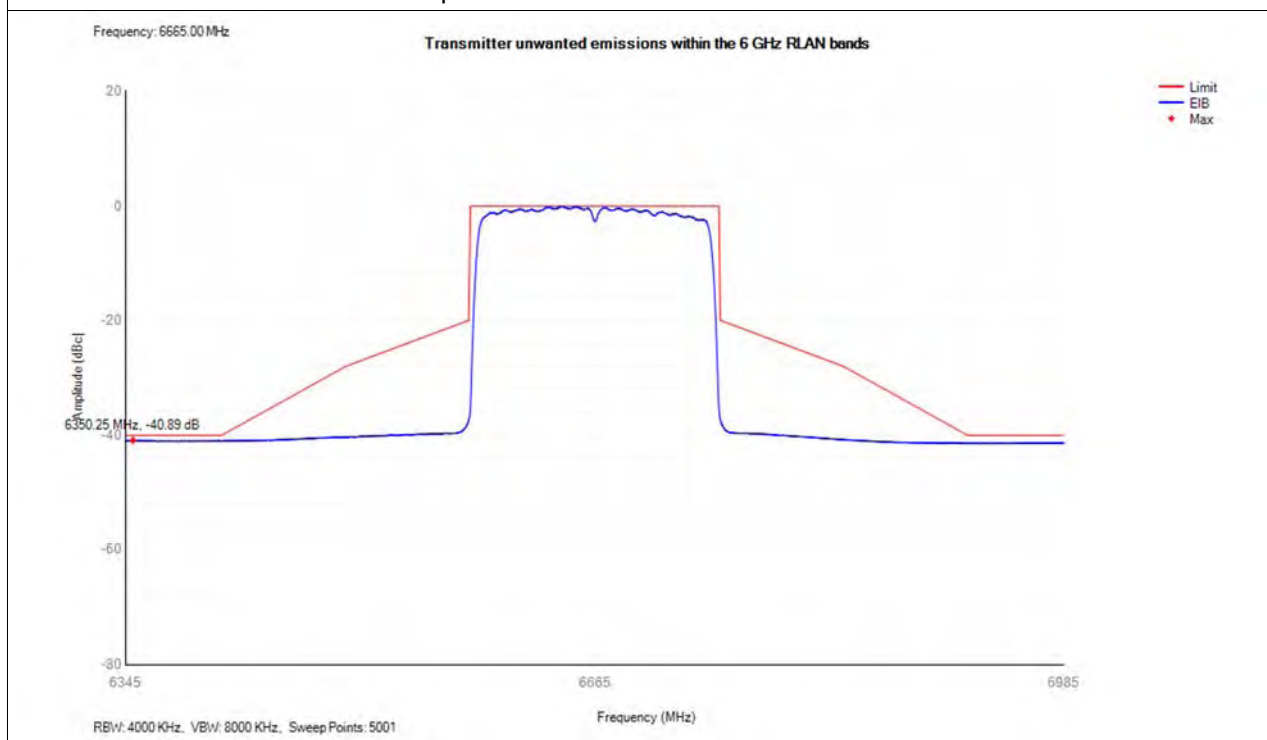


Power spectral mask NVNT ax160 6985MHz SISO

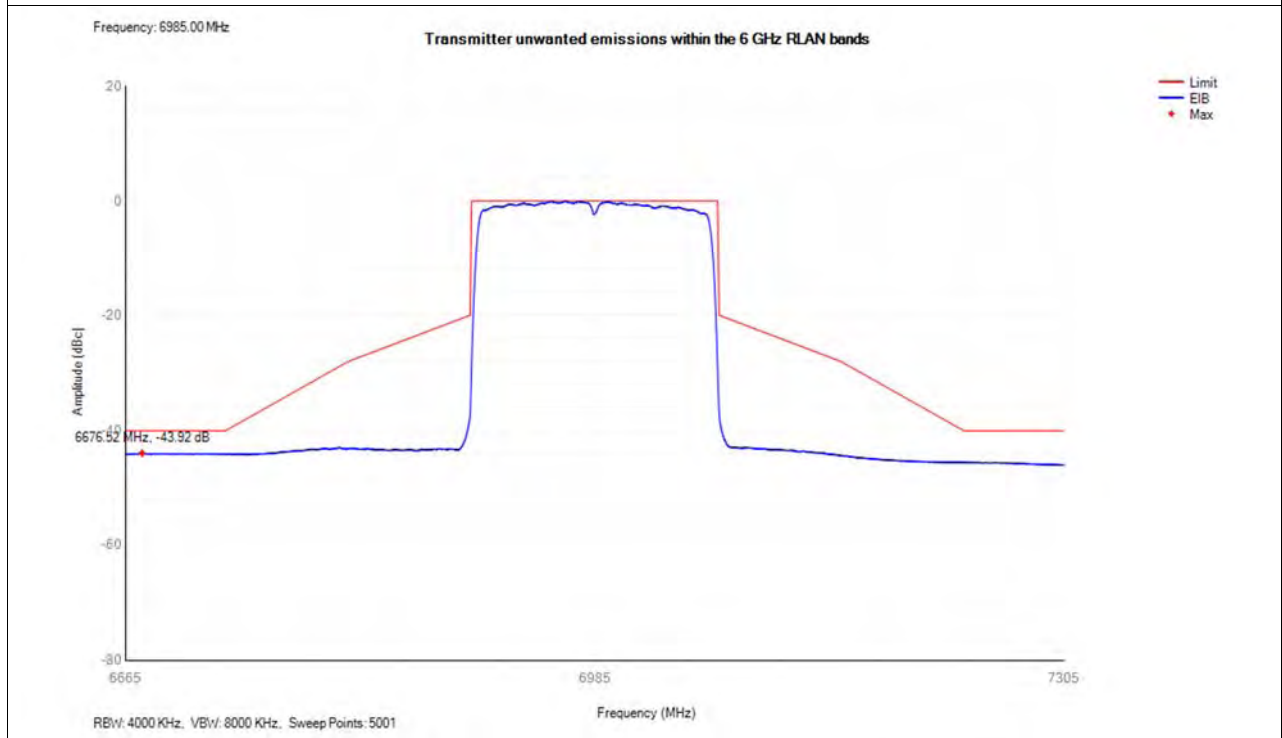


Power spectral mask NVNT ax160 6025MHz SISO

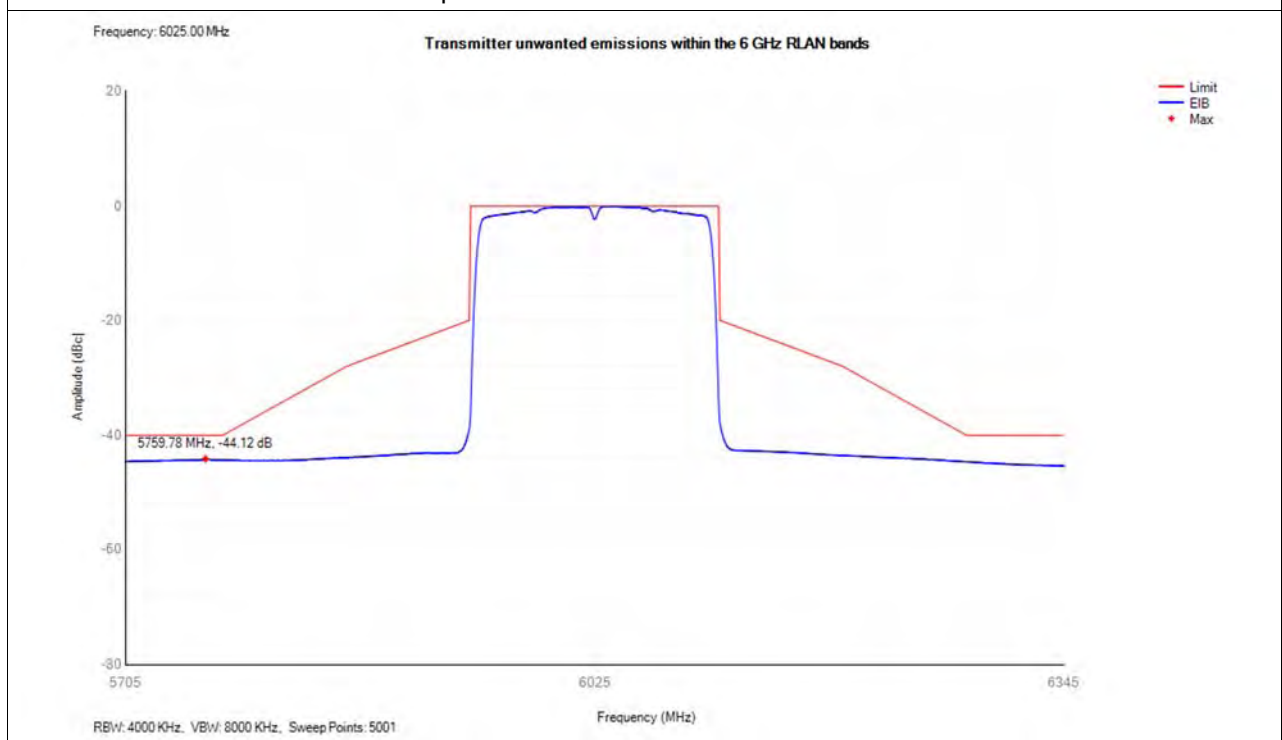


Power spectral mask NVNT ax160 6185MHz SISO

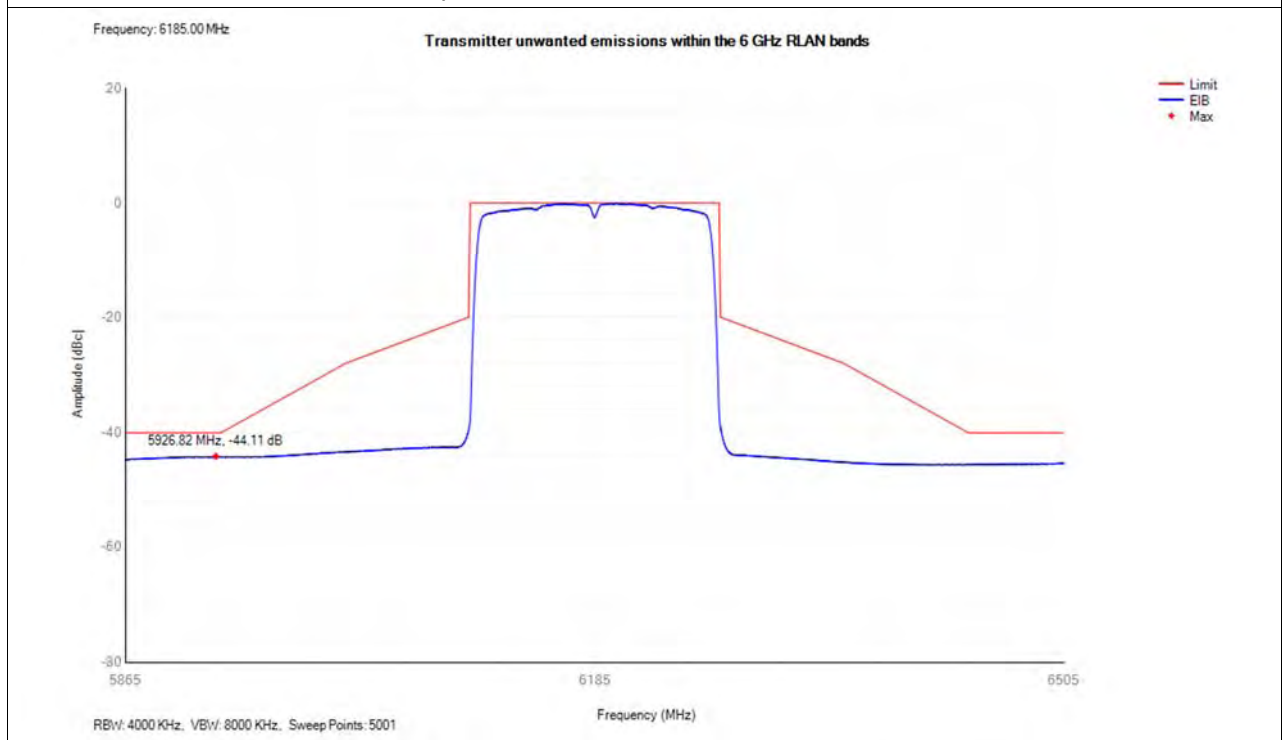


Power spectral mask NVNT ax160 6345MHz SISO

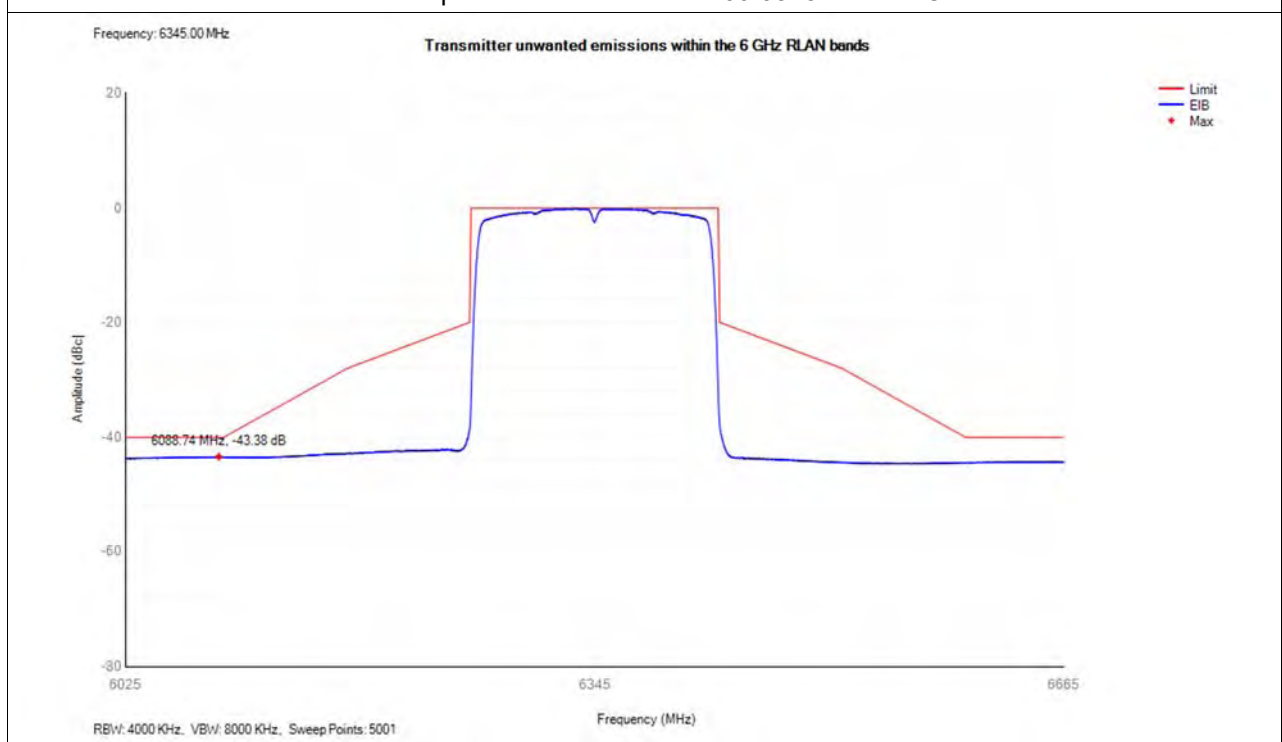

Power spectral mask NVNT ax160 6665MHz SISO

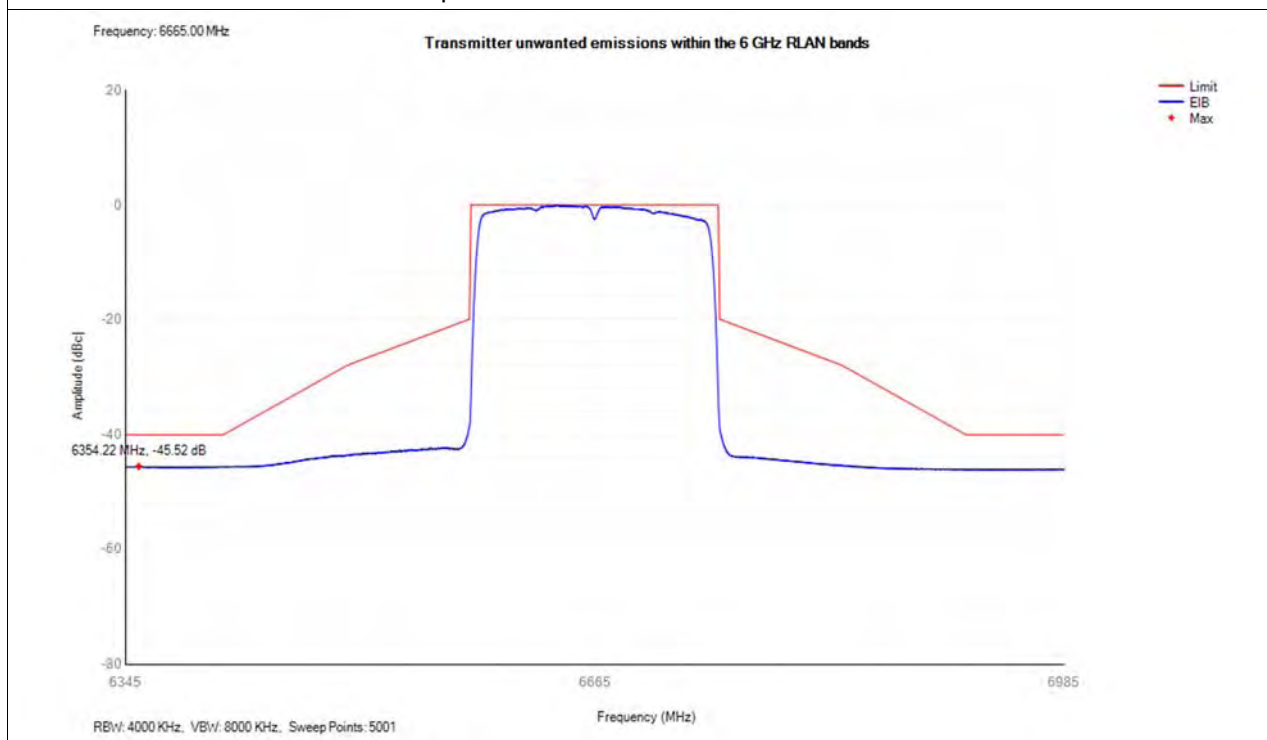

Power spectral mask NVNT ax160 6985MHz SISO

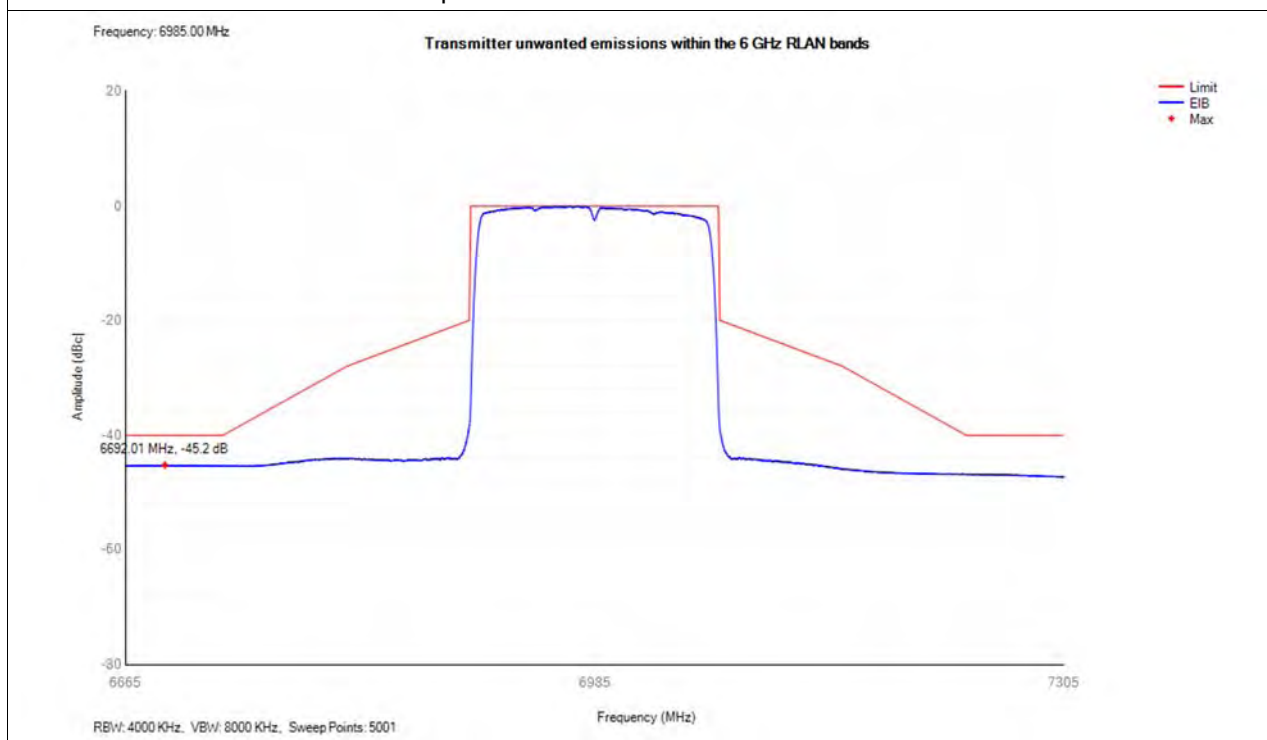


**A.6. Contention Based Protocol****a. Contention Based Protocol Calibration**

Mode	Freq. (MHz)	Ant.	AWGN Location	AWGN Frequency (MHz)	Gain (dBi)	Detected AWGN Power (dBm)	Margin (dB)	Detected Limit (dBm)
ax20	6135	Ant1	Center	6135	-2.55	-62.12	10	-62
ax20	6455	Ant1	Center	6455	-2.55	-62.26	9	-62
ax20	6535	Ant1	Center	6535	-2.55	-62.12	10	-62
ax20	6935	Ant1	Center	6935	-2.55	-62.48	7	-62
ax40	6125	Ant1	Low	6110	-2.55	-62.03	5	-62
ax40	6125	Ant1	High	6140	-2.55	-62.13	6	-62
ax40	6445	Ant1	Low	6430	-2.55	-62.28	8	-62
ax40	6445	Ant1	High	6460	-2.55	-62.42	11	-62
ax40	6605	Ant1	Low	6590	-2.55	-62.4	10	-62
ax40	6605	Ant1	High	6620	-2.55	-62.32	9	-62
ax40	6925	Ant1	Low	6910	-2.55	-62.01	6	-62
ax40	6925	Ant1	High	6940	-2.55	-62.47	11	-62
ax80	6145	Ant1	Low	6110	-2.55	-62.41	9	-62
ax80	6145	Ant1	Center	6145	-2.55	-62.23	12	-62
ax80	6145	Ant1	High	6180	-2.55	-62.3	9	-62
ax80	6465	Ant1	Low	6430	-2.55	-62.32	11	-62
ax80	6465	Ant1	Center	6465	-2.55	-62.35	6	-62
ax80	6465	Ant1	High	6500	-2.55	-62.06	10	-62
ax80	6625	Ant1	Low	6590	-2.55	-62.4	6	-62
ax80	6625	Ant1	Center	6625	-2.55	-62.47	6	-62
ax80	6625	Ant1	High	6660	-2.55	-62.07	9	-62
ax80	6945	Ant1	Low	6910	-2.55	-62.25	9	-62
ax80	6945	Ant1	Center	6945	-2.55	-62.21	10	-62
ax80	6945	Ant1	High	6980	-2.55	-62	8	-62
ax160	6185	Ant1	Low	6110	-2.55	-62.13	10	-62
ax160	6185	Ant1	Center	6185	-2.55	-62.21	5	-62
ax160	6185	Ant1	High	6260	-2.55	-62.27	11	-62
ax160	6665	Ant1	Low	6590	-2.55	-62.15	7	-62
ax160	6665	Ant1	Center	6665	-2.55	-62.38	6	-62
ax160	6665	Ant1	High	6740	-2.55	-62.03	11	-62
ax160	6985	Ant1	Low	6910	-2.55	-62.17	7	-62




ax160	6985	Ant1	Center	6985	-2.55	-62.49	8	-62
ax160	6985	Ant1	High	7060	-2.55	-62.32	11	-62

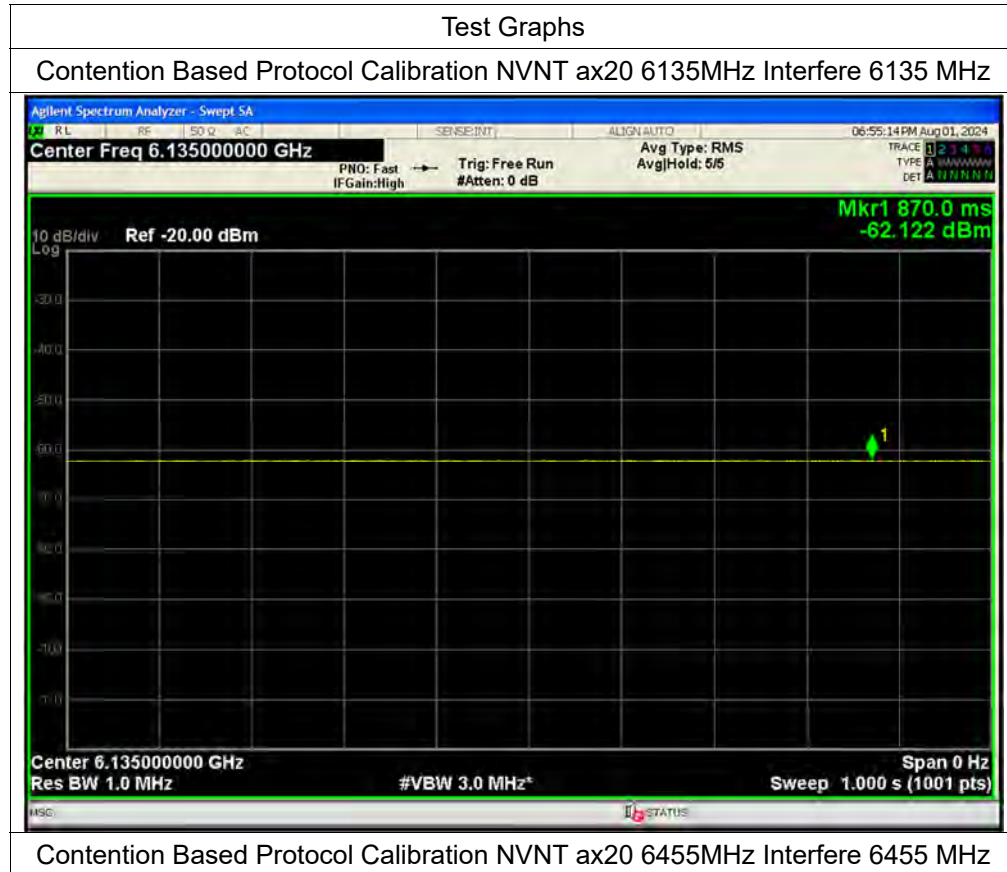



Contention Based Protocol Calibration NVNT ax20 6535MHz Interfere 6535 MHz

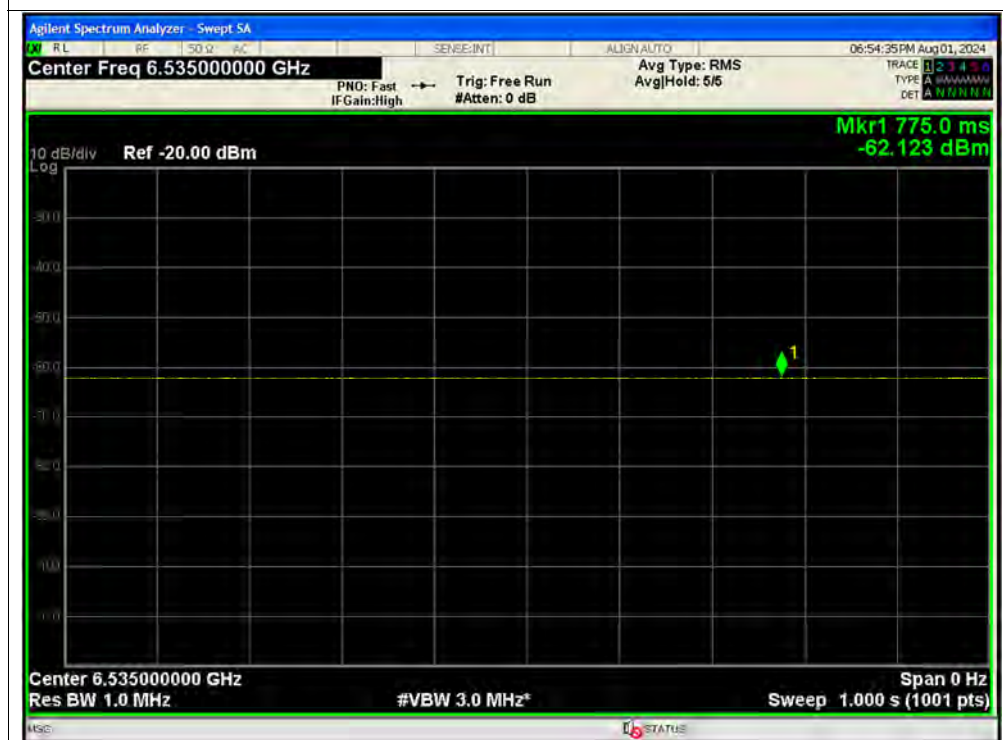

Contention Based Protocol Calibration NVNT ax20 6935MHz Interfere 6935 MHz





Contention Based Protocol Calibration NVNT ax40 6125MHz Interfere 6110 MHz



Contention Based Protocol Calibration NVNT ax40 6125MHz Interfere 6140 MHz





Contention Based Protocol Calibration NVNT ax40 6445MHz Interfere 6430 MHz



Contention Based Protocol Calibration NVNT ax40 6445MHz Interfere 6460 MHz





Contention Based Protocol Calibration NVNT ax40 6605MHz Interfere 6590 MHz



Contention Based Protocol Calibration NVNT ax40 6605MHz Interfere 6620 MHz





Contention Based Protocol Calibration NVNT ax40 6925MHz Interfere 6910 MHz



Contention Based Protocol Calibration NVNT ax40 6925MHz Interfere 6940 MHz






Contention Based Protocol Calibration NVNT ax80 6145MHz Interfere 6110 MHz



Contention Based Protocol Calibration NVNT ax80 6145MHz Interfere 6145 MHz

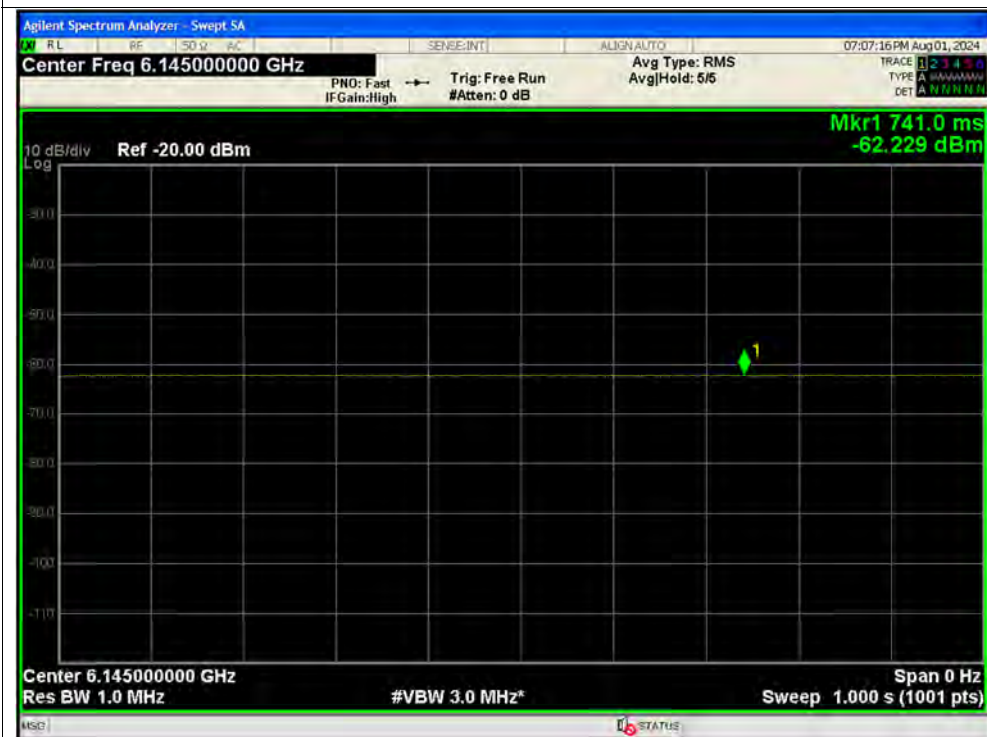



Contention Based Protocol Calibration NVNT ax80 6145MHz Interfere 6180 MHz



Contention Based Protocol Calibration NVNT ax80 6465MHz Interfere 6430 MHz





Contention Based Protocol Calibration NVNT ax80 6465MHz Interfere 6465 MHz



Contention Based Protocol Calibration NVNT ax80 6465MHz Interfere 6500 MHz



Contention Based Protocol Calibration NVNT ax80 6625MHz Interfere 6590 MHz



Contention Based Protocol Calibration NVNT ax80 6625MHz Interfere 6625 MHz





Contention Based Protocol Calibration NVNT ax80 6625MHz Interfere 6660 MHz



Contention Based Protocol Calibration NVNT ax80 6945MHz Interfere 6910 MHz





Contention Based Protocol Calibration NVNT ax80 6945MHz Interfere 6945 MHz




Contention Based Protocol Calibration NVNT ax80 6945MHz Interfere 6980 MHz





Contention Based Protocol Calibration NVNT ax160 6185MHz Interfere 6110 MHz

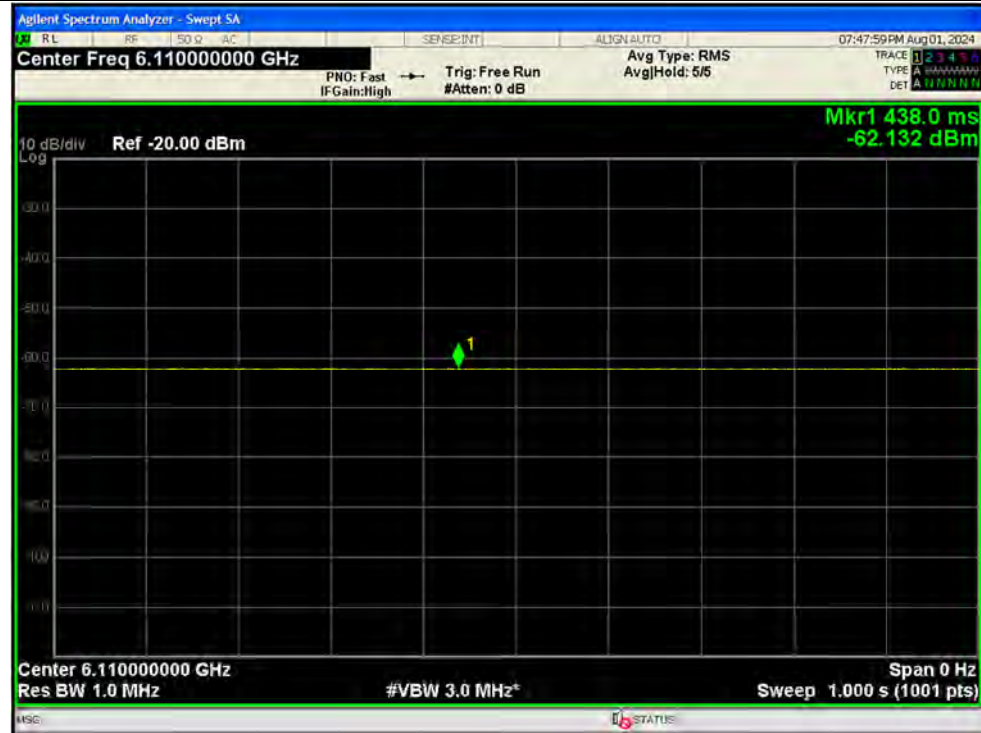

Contention Based Protocol Calibration NVNT ax160 6185MHz Interfere 6185 MHz





Contention Based Protocol Calibration NVNT ax160 6185MHz Interfere 6260 MHz



Contention Based Protocol Calibration NVNT ax160 6665MHz Interfere 6590 MHz





Contention Based Protocol Calibration NVNT ax160 6665MHz Interfere 6665 MHz



Contention Based Protocol Calibration NVNT ax160 6665MHz Interfere 6740 MHz





Contention Based Protocol Calibration NVNT ax160 6985MHz Interfere 6910 MHz



Contention Based Protocol Calibration NVNT ax160 6985MHz Interfere 6985 MHz



**b. Contention Based Protocol Mechanism**

Condition	Mode	Frequency (MHz)	Antenna	AWGN Location	AWGN Frequency (MHz)	Test Time	Is Detected	Verdict
NVNT	ax20	6135	Ant1	Center	6135	1	Yes	Pass
NVNT	ax20	6135	Ant1	Center	6135	2	Yes	Pass
NVNT	ax20	6135	Ant1	Center	6135	3	Yes	Pass
NVNT	ax20	6135	Ant1	Center	6135	4	Yes	Pass
NVNT	ax20	6135	Ant1	Center	6135	5	Yes	Pass
NVNT	ax20	6135	Ant1	Center	6135	6	Yes	Pass
NVNT	ax20	6135	Ant1	Center	6135	7	Yes	Pass
NVNT	ax20	6135	Ant1	Center	6135	8	Yes	Pass
NVNT	ax20	6135	Ant1	Center	6135	9	Yes	Pass
NVNT	ax20	6135	Ant1	Center	6135	10	Yes	Pass
NVNT	ax20	6455	Ant1	Center	6455	1	Yes	Pass
NVNT	ax20	6455	Ant1	Center	6455	2	Yes	Pass
NVNT	ax20	6455	Ant1	Center	6455	3	Yes	Pass
NVNT	ax20	6455	Ant1	Center	6455	4	Yes	Pass
NVNT	ax20	6455	Ant1	Center	6455	5	Yes	Pass
NVNT	ax20	6455	Ant1	Center	6455	6	Yes	Pass
NVNT	ax20	6455	Ant1	Center	6455	7	Yes	Pass
NVNT	ax20	6455	Ant1	Center	6455	8	Yes	Pass
NVNT	ax20	6455	Ant1	Center	6455	9	Yes	Pass
NVNT	ax20	6455	Ant1	Center	6455	10	Yes	Pass
NVNT	ax20	6535	Ant1	Center	6535	1	Yes	Pass
NVNT	ax20	6535	Ant1	Center	6535	2	Yes	Pass
NVNT	ax20	6535	Ant1	Center	6535	3	Yes	Pass
NVNT	ax20	6535	Ant1	Center	6535	4	Yes	Pass
NVNT	ax20	6535	Ant1	Center	6535	5	Yes	Pass
NVNT	ax20	6535	Ant1	Center	6535	6	Yes	Pass
NVNT	ax20	6535	Ant1	Center	6535	7	Yes	Pass
NVNT	ax20	6535	Ant1	Center	6535	8	Yes	Pass
NVNT	ax20	6535	Ant1	Center	6535	9	Yes	Pass
NVNT	ax20	6535	Ant1	Center	6535	10	Yes	Pass
NVNT	ax20	6935	Ant1	Center	6935	1	Yes	Pass
NVNT	ax20	6935	Ant1	Center	6935	2	Yes	Pass
NVNT	ax20	6935	Ant1	Center	6935	3	Yes	Pass
NVNT	ax20	6935	Ant1	Center	6935	4	Yes	Pass



NVNT	ax20	6935	Ant1	Center	6935	5	Yes	Pass
NVNT	ax20	6935	Ant1	Center	6935	6	Yes	Pass
NVNT	ax20	6935	Ant1	Center	6935	7	Yes	Pass
NVNT	ax20	6935	Ant1	Center	6935	8	Yes	Pass
NVNT	ax20	6935	Ant1	Center	6935	9	Yes	Pass
NVNT	ax20	6935	Ant1	Center	6935	10	Yes	Pass
NVNT	ax40	6125	Ant1	Low	6110	1	Yes	Pass
NVNT	ax40	6125	Ant1	Low	6110	2	Yes	Pass
NVNT	ax40	6125	Ant1	Low	6110	3	Yes	Pass
NVNT	ax40	6125	Ant1	Low	6110	4	Yes	Pass
NVNT	ax40	6125	Ant1	Low	6110	5	Yes	Pass
NVNT	ax40	6125	Ant1	Low	6110	6	Yes	Pass
NVNT	ax40	6125	Ant1	Low	6110	7	Yes	Pass
NVNT	ax40	6125	Ant1	Low	6110	8	Yes	Pass
NVNT	ax40	6125	Ant1	Low	6110	9	Yes	Pass
NVNT	ax40	6125	Ant1	Low	6110	10	Yes	Pass
NVNT	ax40	6125	Ant1	High	6140	1	Yes	Pass
NVNT	ax40	6125	Ant1	High	6140	2	Yes	Pass
NVNT	ax40	6125	Ant1	High	6140	3	Yes	Pass
NVNT	ax40	6125	Ant1	High	6140	4	Yes	Pass
NVNT	ax40	6125	Ant1	High	6140	5	Yes	Pass
NVNT	ax40	6125	Ant1	High	6140	6	Yes	Pass
NVNT	ax40	6125	Ant1	High	6140	7	Yes	Pass
NVNT	ax40	6125	Ant1	High	6140	8	Yes	Pass
NVNT	ax40	6125	Ant1	High	6140	9	Yes	Pass
NVNT	ax40	6125	Ant1	High	6140	10	Yes	Pass
NVNT	ax40	6445	Ant1	Low	6430	1	Yes	Pass
NVNT	ax40	6445	Ant1	Low	6430	2	Yes	Pass
NVNT	ax40	6445	Ant1	Low	6430	3	Yes	Pass
NVNT	ax40	6445	Ant1	Low	6430	4	Yes	Pass
NVNT	ax40	6445	Ant1	Low	6430	5	Yes	Pass
NVNT	ax40	6445	Ant1	Low	6430	6	Yes	Pass
NVNT	ax40	6445	Ant1	Low	6430	7	Yes	Pass
NVNT	ax40	6445	Ant1	Low	6430	8	Yes	Pass
NVNT	ax40	6445	Ant1	Low	6430	9	Yes	Pass
NVNT	ax40	6445	Ant1	Low	6430	10	Yes	Pass
NVNT	ax40	6445	Ant1	High	6460	1	Yes	Pass
NVNT	ax40	6445	Ant1	High	6460	2	Yes	Pass



NVNT	ax40	6445	Ant1	High	6460	3	Yes	Pass
NVNT	ax40	6445	Ant1	High	6460	4	Yes	Pass
NVNT	ax40	6445	Ant1	High	6460	5	Yes	Pass
NVNT	ax40	6445	Ant1	High	6460	6	Yes	Pass
NVNT	ax40	6445	Ant1	High	6460	7	Yes	Pass
NVNT	ax40	6445	Ant1	High	6460	8	Yes	Pass
NVNT	ax40	6445	Ant1	High	6460	9	Yes	Pass
NVNT	ax40	6445	Ant1	High	6460	10	Yes	Pass
NVNT	ax40	6605	Ant1	Low	6590	1	Yes	Pass
NVNT	ax40	6605	Ant1	Low	6590	2	Yes	Pass
NVNT	ax40	6605	Ant1	Low	6590	3	Yes	Pass
NVNT	ax40	6605	Ant1	Low	6590	4	Yes	Pass
NVNT	ax40	6605	Ant1	Low	6590	5	Yes	Pass
NVNT	ax40	6605	Ant1	Low	6590	6	Yes	Pass
NVNT	ax40	6605	Ant1	Low	6590	7	Yes	Pass
NVNT	ax40	6605	Ant1	Low	6590	8	Yes	Pass
NVNT	ax40	6605	Ant1	Low	6590	9	Yes	Pass
NVNT	ax40	6605	Ant1	Low	6590	10	Yes	Pass
NVNT	ax40	6605	Ant1	High	6620	1	Yes	Pass
NVNT	ax40	6605	Ant1	High	6620	2	Yes	Pass
NVNT	ax40	6605	Ant1	High	6620	3	Yes	Pass
NVNT	ax40	6605	Ant1	High	6620	4	Yes	Pass
NVNT	ax40	6605	Ant1	High	6620	5	Yes	Pass
NVNT	ax40	6605	Ant1	High	6620	6	Yes	Pass
NVNT	ax40	6605	Ant1	High	6620	7	Yes	Pass
NVNT	ax40	6605	Ant1	High	6620	8	Yes	Pass
NVNT	ax40	6605	Ant1	High	6620	9	Yes	Pass
NVNT	ax40	6605	Ant1	High	6620	10	Yes	Pass
NVNT	ax40	6925	Ant1	Low	6910	1	Yes	Pass
NVNT	ax40	6925	Ant1	Low	6910	2	Yes	Pass
NVNT	ax40	6925	Ant1	Low	6910	3	Yes	Pass
NVNT	ax40	6925	Ant1	Low	6910	4	Yes	Pass
NVNT	ax40	6925	Ant1	Low	6910	5	Yes	Pass
NVNT	ax40	6925	Ant1	Low	6910	6	Yes	Pass
NVNT	ax40	6925	Ant1	Low	6910	7	Yes	Pass
NVNT	ax40	6925	Ant1	Low	6910	8	Yes	Pass
NVNT	ax40	6925	Ant1	Low	6910	9	Yes	Pass
NVNT	ax40	6925	Ant1	Low	6910	10	Yes	Pass



NVNT	ax40	6925	Ant1	High	6940	1	Yes	Pass
NVNT	ax40	6925	Ant1	High	6940	2	Yes	Pass
NVNT	ax40	6925	Ant1	High	6940	3	Yes	Pass
NVNT	ax40	6925	Ant1	High	6940	4	Yes	Pass
NVNT	ax40	6925	Ant1	High	6940	5	Yes	Pass
NVNT	ax40	6925	Ant1	High	6940	6	Yes	Pass
NVNT	ax40	6925	Ant1	High	6940	7	Yes	Pass
NVNT	ax40	6925	Ant1	High	6940	8	Yes	Pass
NVNT	ax40	6925	Ant1	High	6940	9	Yes	Pass
NVNT	ax40	6925	Ant1	High	6940	10	Yes	Pass
NVNT	ax80	6145	Ant1	Low	6110	1	Yes	Pass
NVNT	ax80	6145	Ant1	Low	6110	2	Yes	Pass
NVNT	ax80	6145	Ant1	Low	6110	3	Yes	Pass
NVNT	ax80	6145	Ant1	Low	6110	4	Yes	Pass
NVNT	ax80	6145	Ant1	Low	6110	5	Yes	Pass
NVNT	ax80	6145	Ant1	Low	6110	6	Yes	Pass
NVNT	ax80	6145	Ant1	Low	6110	7	Yes	Pass
NVNT	ax80	6145	Ant1	Low	6110	8	Yes	Pass
NVNT	ax80	6145	Ant1	Low	6110	9	Yes	Pass
NVNT	ax80	6145	Ant1	Low	6110	10	Yes	Pass
NVNT	ax80	6145	Ant1	Center	6145	1	Yes	Pass
NVNT	ax80	6145	Ant1	Center	6145	2	Yes	Pass
NVNT	ax80	6145	Ant1	Center	6145	3	Yes	Pass
NVNT	ax80	6145	Ant1	Center	6145	4	Yes	Pass
NVNT	ax80	6145	Ant1	Center	6145	5	Yes	Pass
NVNT	ax80	6145	Ant1	Center	6145	6	Yes	Pass
NVNT	ax80	6145	Ant1	Center	6145	7	Yes	Pass
NVNT	ax80	6145	Ant1	Center	6145	8	Yes	Pass
NVNT	ax80	6145	Ant1	Center	6145	9	Yes	Pass
NVNT	ax80	6145	Ant1	Center	6145	10	Yes	Pass
NVNT	ax80	6145	Ant1	High	6180	1	Yes	Pass
NVNT	ax80	6145	Ant1	High	6180	2	Yes	Pass
NVNT	ax80	6145	Ant1	High	6180	3	Yes	Pass
NVNT	ax80	6145	Ant1	High	6180	4	Yes	Pass
NVNT	ax80	6145	Ant1	High	6180	5	Yes	Pass
NVNT	ax80	6145	Ant1	High	6180	6	Yes	Pass
NVNT	ax80	6145	Ant1	High	6180	7	Yes	Pass
NVNT	ax80	6145	Ant1	High	6180	8	Yes	Pass



NVNT	ax80	6145	Ant1	High	6180	9	Yes	Pass
NVNT	ax80	6145	Ant1	High	6180	10	Yes	Pass
NVNT	ax80	6465	Ant1	Low	6430	1	Yes	Pass
NVNT	ax80	6465	Ant1	Low	6430	2	Yes	Pass
NVNT	ax80	6465	Ant1	Low	6430	3	Yes	Pass
NVNT	ax80	6465	Ant1	Low	6430	4	Yes	Pass
NVNT	ax80	6465	Ant1	Low	6430	5	Yes	Pass
NVNT	ax80	6465	Ant1	Low	6430	6	Yes	Pass
NVNT	ax80	6465	Ant1	Low	6430	7	Yes	Pass
NVNT	ax80	6465	Ant1	Low	6430	8	Yes	Pass
NVNT	ax80	6465	Ant1	Low	6430	9	Yes	Pass
NVNT	ax80	6465	Ant1	Low	6430	10	Yes	Pass
NVNT	ax80	6465	Ant1	Center	6465	1	Yes	Pass
NVNT	ax80	6465	Ant1	Center	6465	2	Yes	Pass
NVNT	ax80	6465	Ant1	Center	6465	3	Yes	Pass
NVNT	ax80	6465	Ant1	Center	6465	4	Yes	Pass
NVNT	ax80	6465	Ant1	Center	6465	5	Yes	Pass
NVNT	ax80	6465	Ant1	Center	6465	6	Yes	Pass
NVNT	ax80	6465	Ant1	Center	6465	7	Yes	Pass
NVNT	ax80	6465	Ant1	Center	6465	8	Yes	Pass
NVNT	ax80	6465	Ant1	Center	6465	9	Yes	Pass
NVNT	ax80	6465	Ant1	Center	6465	10	Yes	Pass
NVNT	ax80	6465	Ant1	High	6500	1	Yes	Pass
NVNT	ax80	6465	Ant1	High	6500	2	Yes	Pass
NVNT	ax80	6465	Ant1	High	6500	3	Yes	Pass
NVNT	ax80	6465	Ant1	High	6500	4	Yes	Pass
NVNT	ax80	6465	Ant1	High	6500	5	Yes	Pass
NVNT	ax80	6465	Ant1	High	6500	6	Yes	Pass
NVNT	ax80	6465	Ant1	High	6500	7	Yes	Pass
NVNT	ax80	6465	Ant1	High	6500	8	Yes	Pass
NVNT	ax80	6465	Ant1	High	6500	9	Yes	Pass
NVNT	ax80	6465	Ant1	High	6500	10	Yes	Pass
NVNT	ax80	6625	Ant1	Low	6590	1	Yes	Pass
NVNT	ax80	6625	Ant1	Low	6590	2	Yes	Pass
NVNT	ax80	6625	Ant1	Low	6590	3	Yes	Pass
NVNT	ax80	6625	Ant1	Low	6590	4	Yes	Pass
NVNT	ax80	6625	Ant1	Low	6590	5	Yes	Pass
NVNT	ax80	6625	Ant1	Low	6590	6	Yes	Pass



NVNT	ax80	6625	Ant1	Low	6590	7	Yes	Pass
NVNT	ax80	6625	Ant1	Low	6590	8	Yes	Pass
NVNT	ax80	6625	Ant1	Low	6590	9	Yes	Pass
NVNT	ax80	6625	Ant1	Low	6590	10	Yes	Pass
NVNT	ax80	6625	Ant1	Center	6625	1	Yes	Pass
NVNT	ax80	6625	Ant1	Center	6625	2	Yes	Pass
NVNT	ax80	6625	Ant1	Center	6625	3	Yes	Pass
NVNT	ax80	6625	Ant1	Center	6625	4	Yes	Pass
NVNT	ax80	6625	Ant1	Center	6625	5	Yes	Pass
NVNT	ax80	6625	Ant1	Center	6625	6	Yes	Pass
NVNT	ax80	6625	Ant1	Center	6625	7	Yes	Pass
NVNT	ax80	6625	Ant1	Center	6625	8	Yes	Pass
NVNT	ax80	6625	Ant1	Center	6625	9	Yes	Pass
NVNT	ax80	6625	Ant1	Center	6625	10	Yes	Pass
NVNT	ax80	6625	Ant1	High	6660	1	Yes	Pass
NVNT	ax80	6625	Ant1	High	6660	2	Yes	Pass
NVNT	ax80	6625	Ant1	High	6660	3	Yes	Pass
NVNT	ax80	6625	Ant1	High	6660	4	Yes	Pass
NVNT	ax80	6625	Ant1	High	6660	5	Yes	Pass
NVNT	ax80	6625	Ant1	High	6660	6	Yes	Pass
NVNT	ax80	6625	Ant1	High	6660	7	Yes	Pass
NVNT	ax80	6625	Ant1	High	6660	8	Yes	Pass
NVNT	ax80	6625	Ant1	High	6660	9	Yes	Pass
NVNT	ax80	6625	Ant1	High	6660	10	Yes	Pass
NVNT	ax80	6945	Ant1	Low	6910	1	Yes	Pass
NVNT	ax80	6945	Ant1	Low	6910	2	Yes	Pass
NVNT	ax80	6945	Ant1	Low	6910	3	Yes	Pass
NVNT	ax80	6945	Ant1	Low	6910	4	Yes	Pass
NVNT	ax80	6945	Ant1	Low	6910	5	Yes	Pass
NVNT	ax80	6945	Ant1	Low	6910	6	Yes	Pass
NVNT	ax80	6945	Ant1	Low	6910	7	Yes	Pass
NVNT	ax80	6945	Ant1	Low	6910	8	Yes	Pass
NVNT	ax80	6945	Ant1	Low	6910	9	Yes	Pass
NVNT	ax80	6945	Ant1	Low	6910	10	Yes	Pass
NVNT	ax80	6945	Ant1	Center	6945	1	Yes	Pass
NVNT	ax80	6945	Ant1	Center	6945	2	Yes	Pass
NVNT	ax80	6945	Ant1	Center	6945	3	Yes	Pass
NVNT	ax80	6945	Ant1	Center	6945	4	Yes	Pass



NVNT	ax80	6945	Ant1	Center	6945	5	Yes	Pass
NVNT	ax80	6945	Ant1	Center	6945	6	Yes	Pass
NVNT	ax80	6945	Ant1	Center	6945	7	Yes	Pass
NVNT	ax80	6945	Ant1	Center	6945	8	Yes	Pass
NVNT	ax80	6945	Ant1	Center	6945	9	Yes	Pass
NVNT	ax80	6945	Ant1	Center	6945	10	Yes	Pass
NVNT	ax80	6945	Ant1	High	6980	1	Yes	Pass
NVNT	ax80	6945	Ant1	High	6980	2	Yes	Pass
NVNT	ax80	6945	Ant1	High	6980	3	Yes	Pass
NVNT	ax80	6945	Ant1	High	6980	4	Yes	Pass
NVNT	ax80	6945	Ant1	High	6980	5	Yes	Pass
NVNT	ax80	6945	Ant1	High	6980	6	Yes	Pass
NVNT	ax80	6945	Ant1	High	6980	7	Yes	Pass
NVNT	ax80	6945	Ant1	High	6980	8	Yes	Pass
NVNT	ax80	6945	Ant1	High	6980	9	Yes	Pass
NVNT	ax80	6945	Ant1	High	6980	10	Yes	Pass
NVNT	ax160	6185	Ant1	Low	6110	1	Yes	Pass
NVNT	ax160	6185	Ant1	Low	6110	2	Yes	Pass
NVNT	ax160	6185	Ant1	Low	6110	3	Yes	Pass
NVNT	ax160	6185	Ant1	Low	6110	4	Yes	Pass
NVNT	ax160	6185	Ant1	Low	6110	5	Yes	Pass
NVNT	ax160	6185	Ant1	Low	6110	6	Yes	Pass
NVNT	ax160	6185	Ant1	Low	6110	7	Yes	Pass
NVNT	ax160	6185	Ant1	Low	6110	8	Yes	Pass
NVNT	ax160	6185	Ant1	Low	6110	9	Yes	Pass
NVNT	ax160	6185	Ant1	Low	6110	10	Yes	Pass
NVNT	ax160	6185	Ant1	Center	6185	1	Yes	Pass
NVNT	ax160	6185	Ant1	Center	6185	2	Yes	Pass
NVNT	ax160	6185	Ant1	Center	6185	3	Yes	Pass
NVNT	ax160	6185	Ant1	Center	6185	4	Yes	Pass
NVNT	ax160	6185	Ant1	Center	6185	5	Yes	Pass
NVNT	ax160	6185	Ant1	Center	6185	6	Yes	Pass
NVNT	ax160	6185	Ant1	Center	6185	7	No	Fail
NVNT	ax160	6185	Ant1	Center	6185	8	Yes	Pass
NVNT	ax160	6185	Ant1	Center	6185	9	Yes	Pass
NVNT	ax160	6185	Ant1	Center	6185	10	Yes	Pass
NVNT	ax160	6185	Ant1	High	6260	1	Yes	Pass
NVNT	ax160	6185	Ant1	High	6260	2	Yes	Pass




NVNT	ax160	6185	Ant1	High	6260	3	Yes	Pass
NVNT	ax160	6185	Ant1	High	6260	4	Yes	Pass
NVNT	ax160	6185	Ant1	High	6260	5	Yes	Pass
NVNT	ax160	6185	Ant1	High	6260	6	Yes	Pass
NVNT	ax160	6185	Ant1	High	6260	7	Yes	Pass
NVNT	ax160	6185	Ant1	High	6260	8	Yes	Pass
NVNT	ax160	6185	Ant1	High	6260	9	Yes	Pass
NVNT	ax160	6185	Ant1	High	6260	10	Yes	Pass
NVNT	ax160	6665	Ant1	Low	6590	1	Yes	Pass
NVNT	ax160	6665	Ant1	Low	6590	2	Yes	Pass
NVNT	ax160	6665	Ant1	Low	6590	3	Yes	Pass
NVNT	ax160	6665	Ant1	Low	6590	4	Yes	Pass
NVNT	ax160	6665	Ant1	Low	6590	5	Yes	Pass
NVNT	ax160	6665	Ant1	Low	6590	6	Yes	Pass
NVNT	ax160	6665	Ant1	Low	6590	7	Yes	Pass
NVNT	ax160	6665	Ant1	Low	6590	8	Yes	Pass
NVNT	ax160	6665	Ant1	Low	6590	9	Yes	Pass
NVNT	ax160	6665	Ant1	Low	6590	10	Yes	Pass
NVNT	ax160	6665	Ant1	Center	6665	1	Yes	Pass
NVNT	ax160	6665	Ant1	Center	6665	2	Yes	Pass
NVNT	ax160	6665	Ant1	Center	6665	3	Yes	Pass
NVNT	ax160	6665	Ant1	Center	6665	4	Yes	Pass
NVNT	ax160	6665	Ant1	Center	6665	5	Yes	Pass
NVNT	ax160	6665	Ant1	Center	6665	6	Yes	Pass
NVNT	ax160	6665	Ant1	Center	6665	7	Yes	Pass
NVNT	ax160	6665	Ant1	Center	6665	8	Yes	Pass
NVNT	ax160	6665	Ant1	Center	6665	9	Yes	Pass
NVNT	ax160	6665	Ant1	Center	6665	10	Yes	Pass
NVNT	ax160	6665	Ant1	High	6740	1	Yes	Pass
NVNT	ax160	6665	Ant1	High	6740	2	Yes	Pass
NVNT	ax160	6665	Ant1	High	6740	3	Yes	Pass
NVNT	ax160	6665	Ant1	High	6740	4	Yes	Pass
NVNT	ax160	6665	Ant1	High	6740	5	Yes	Pass
NVNT	ax160	6665	Ant1	High	6740	6	Yes	Pass
NVNT	ax160	6665	Ant1	High	6740	7	Yes	Pass
NVNT	ax160	6665	Ant1	High	6740	8	Yes	Pass
NVNT	ax160	6665	Ant1	High	6740	9	Yes	Pass
NVNT	ax160	6665	Ant1	High	6740	10	Yes	Pass




NVNT	ax160	6985	Ant1	Low	6910	1	Yes	Pass
NVNT	ax160	6985	Ant1	Low	6910	2	Yes	Pass
NVNT	ax160	6985	Ant1	Low	6910	3	Yes	Pass
NVNT	ax160	6985	Ant1	Low	6910	4	Yes	Pass
NVNT	ax160	6985	Ant1	Low	6910	5	Yes	Pass
NVNT	ax160	6985	Ant1	Low	6910	6	Yes	Pass
NVNT	ax160	6985	Ant1	Low	6910	7	Yes	Pass
NVNT	ax160	6985	Ant1	Low	6910	8	Yes	Pass
NVNT	ax160	6985	Ant1	Low	6910	9	Yes	Pass
NVNT	ax160	6985	Ant1	Low	6910	10	Yes	Pass
NVNT	ax160	6985	Ant1	Center	6985	1	Yes	Pass
NVNT	ax160	6985	Ant1	Center	6985	2	Yes	Pass
NVNT	ax160	6985	Ant1	Center	6985	3	Yes	Pass
NVNT	ax160	6985	Ant1	Center	6985	4	Yes	Pass
NVNT	ax160	6985	Ant1	Center	6985	5	Yes	Pass
NVNT	ax160	6985	Ant1	Center	6985	6	Yes	Pass
NVNT	ax160	6985	Ant1	Center	6985	7	Yes	Pass
NVNT	ax160	6985	Ant1	Center	6985	8	Yes	Pass
NVNT	ax160	6985	Ant1	Center	6985	9	Yes	Pass
NVNT	ax160	6985	Ant1	Center	6985	10	Yes	Pass
NVNT	ax160	6985	Ant1	High	7060	1	Yes	Pass
NVNT	ax160	6985	Ant1	High	7060	2	Yes	Pass
NVNT	ax160	6985	Ant1	High	7060	3	Yes	Pass
NVNT	ax160	6985	Ant1	High	7060	4	Yes	Pass
NVNT	ax160	6985	Ant1	High	7060	5	Yes	Pass
NVNT	ax160	6985	Ant1	High	7060	6	Yes	Pass
NVNT	ax160	6985	Ant1	High	7060	7	Yes	Pass
NVNT	ax160	6985	Ant1	High	7060	8	Yes	Pass
NVNT	ax160	6985	Ant1	High	7060	9	Yes	Pass
NVNT	ax160	6985	Ant1	High	7060	10	Yes	Pass

Test Graphs

Contention Based Protocol NVNT ax20 6135MHz Interfere 6135 MHz_1

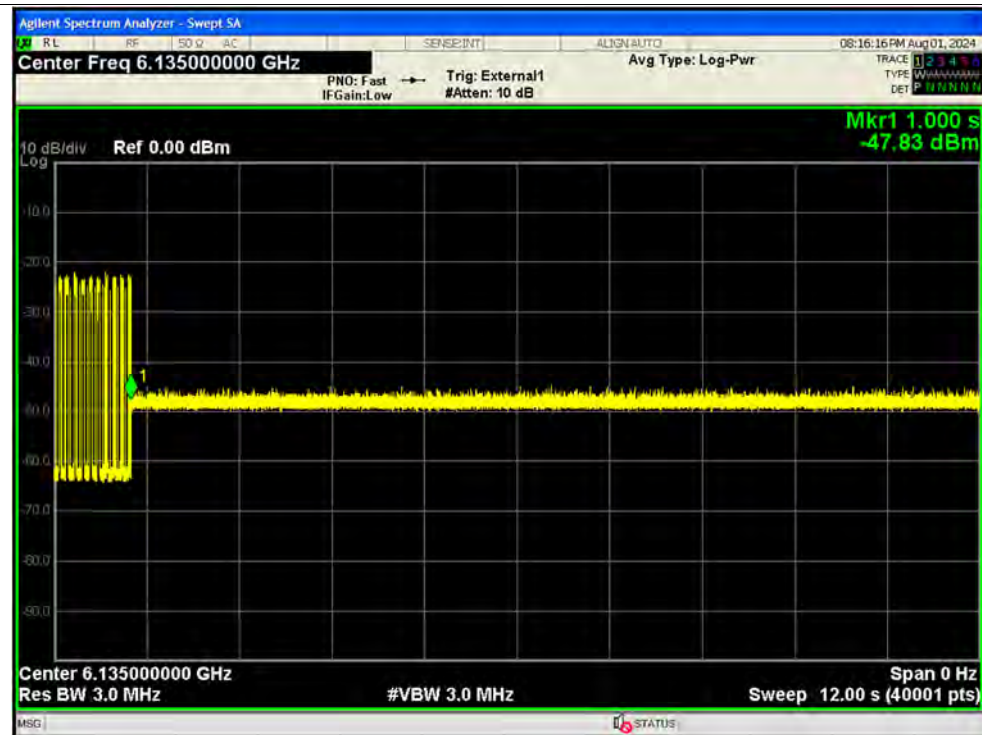


Contention Based Protocol NVNT ax20 6135MHz Interfere 6135 MHz_2

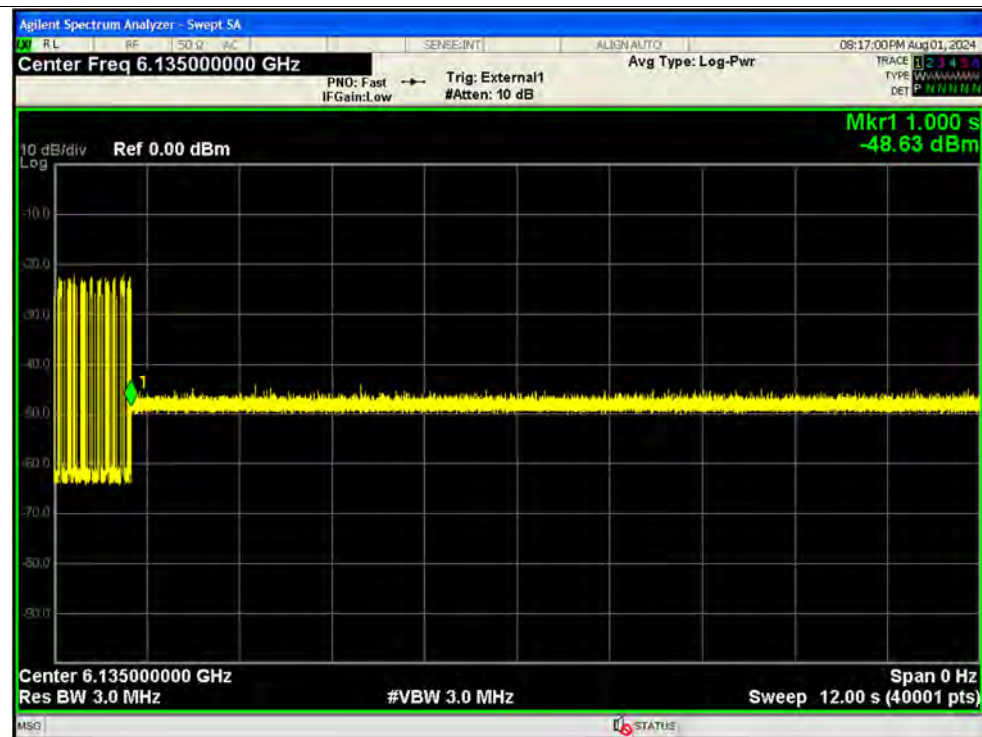




Contention Based Protocol NVNT ax20 6135MHz Interfere 6135 MHz_3

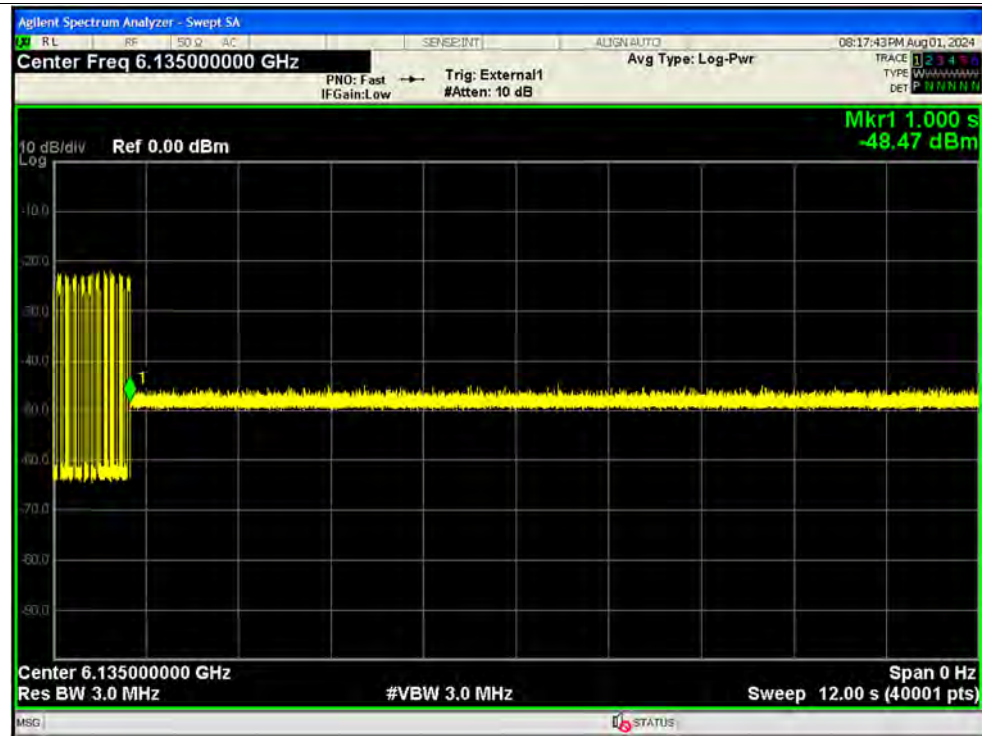


Contention Based Protocol NVNT ax20 6135MHz Interfere 6135 MHz_4

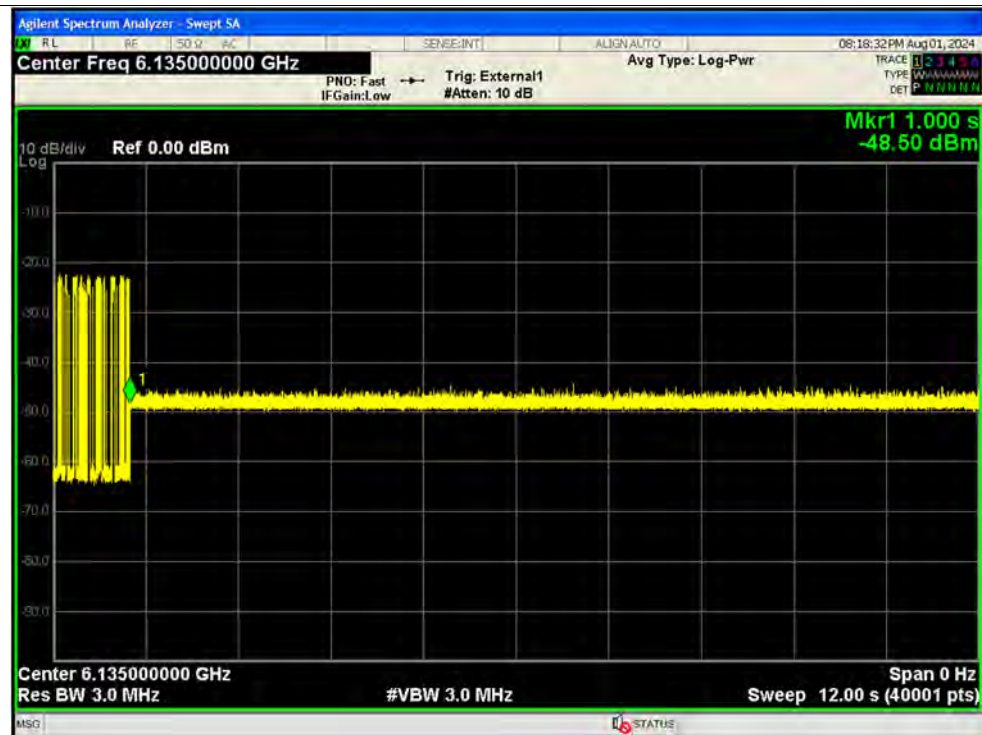





Contention Based Protocol NVNT ax20 6135MHz Interfere 6135 MHz_5

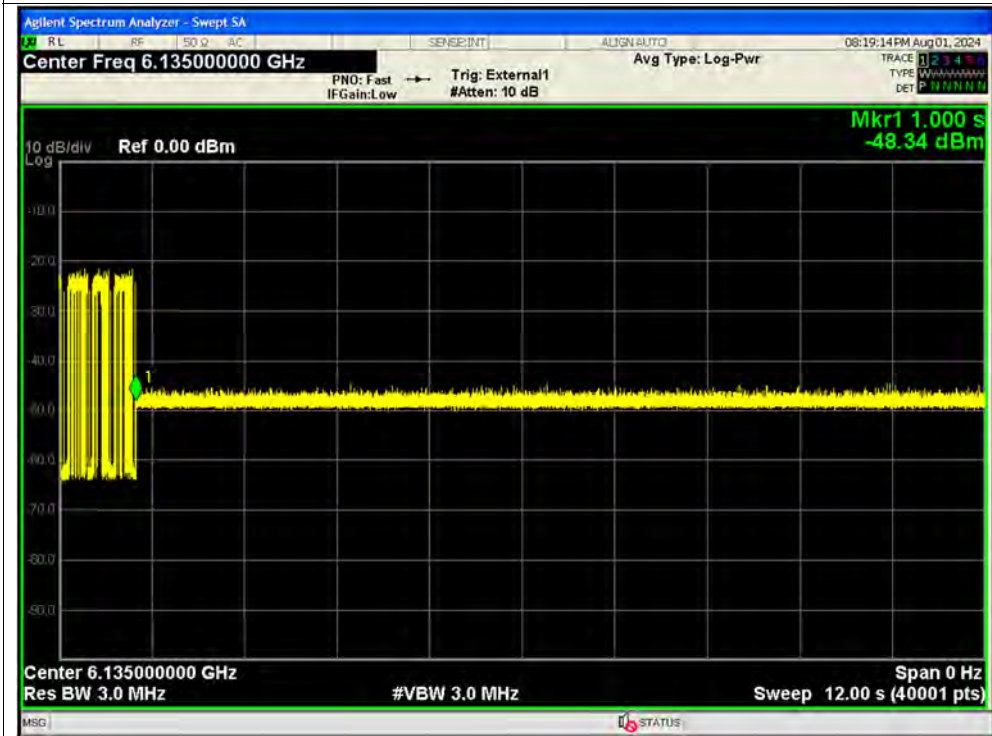


Contention Based Protocol NVNT ax20 6135MHz Interfere 6135 MHz_6

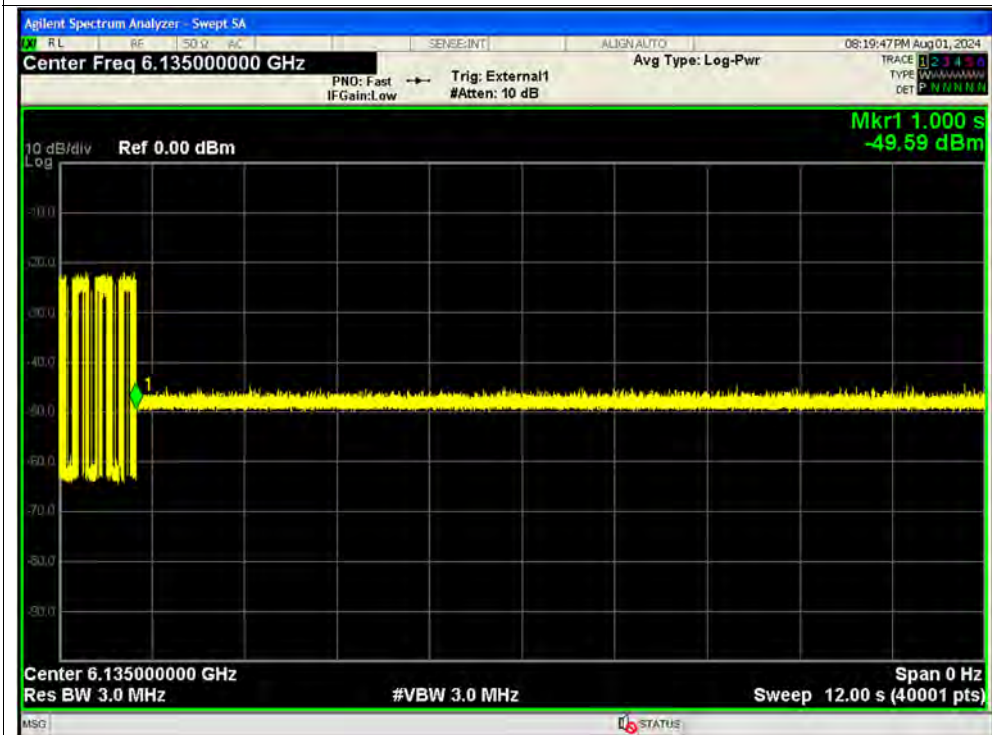


Contention Based Protocol NVNT ax20 6135MHz Interfere 6135 MHz_7

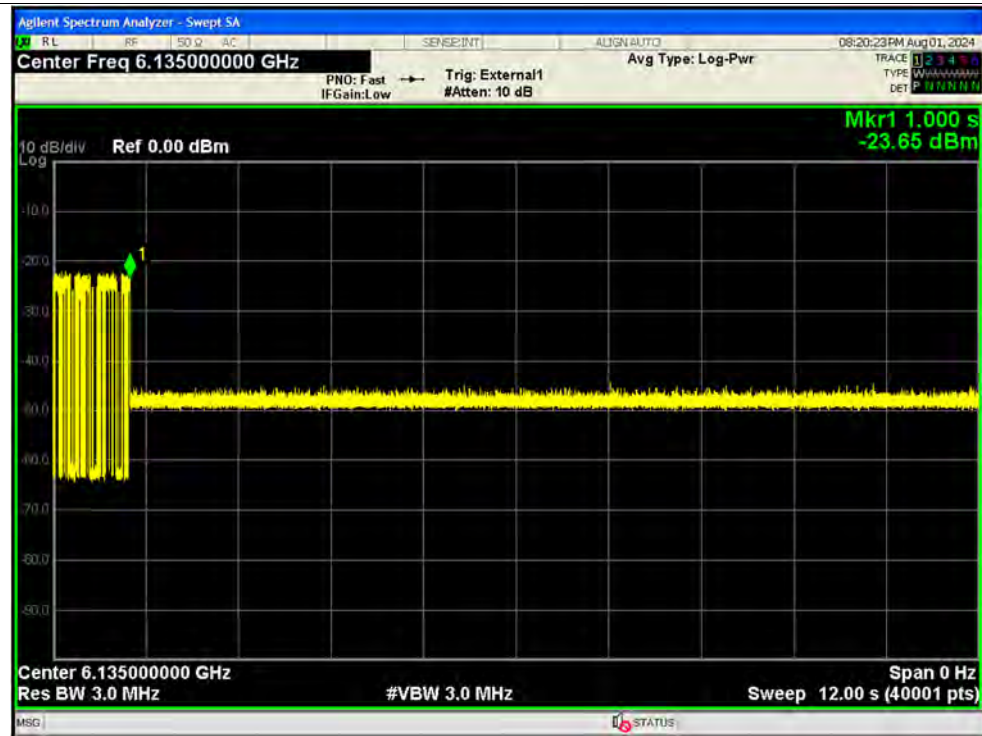


Contention Based Protocol NVNT ax20 6135MHz Interfere 6135 MHz_8

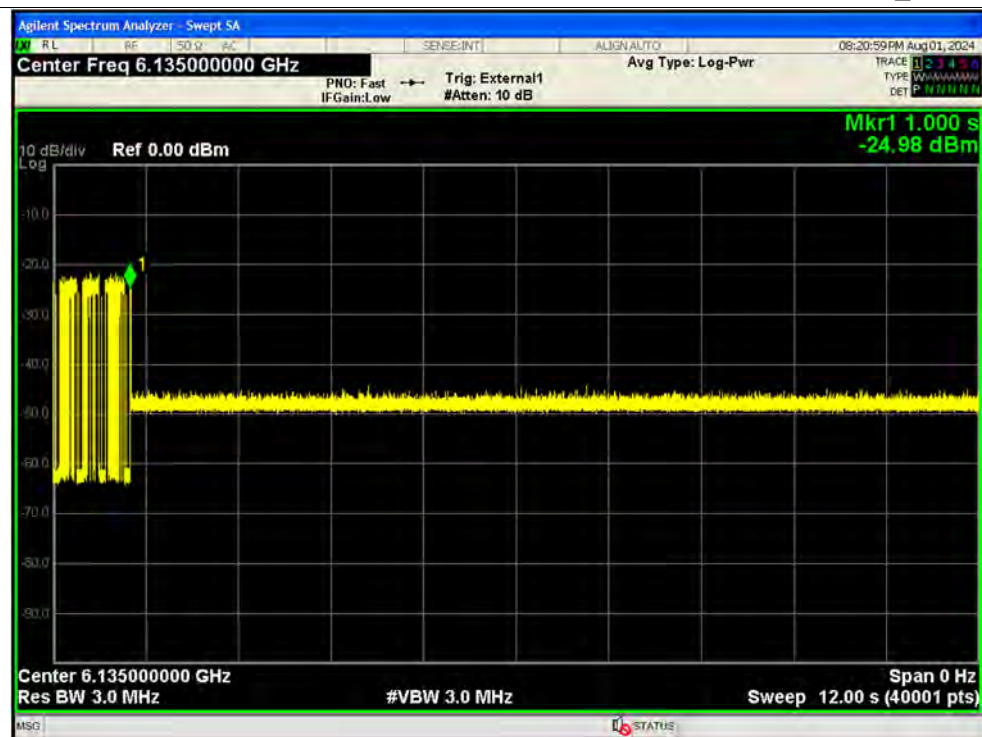

Contention Based Protocol NVNT ax20 6135MHz Interfere 6135 MHz_9

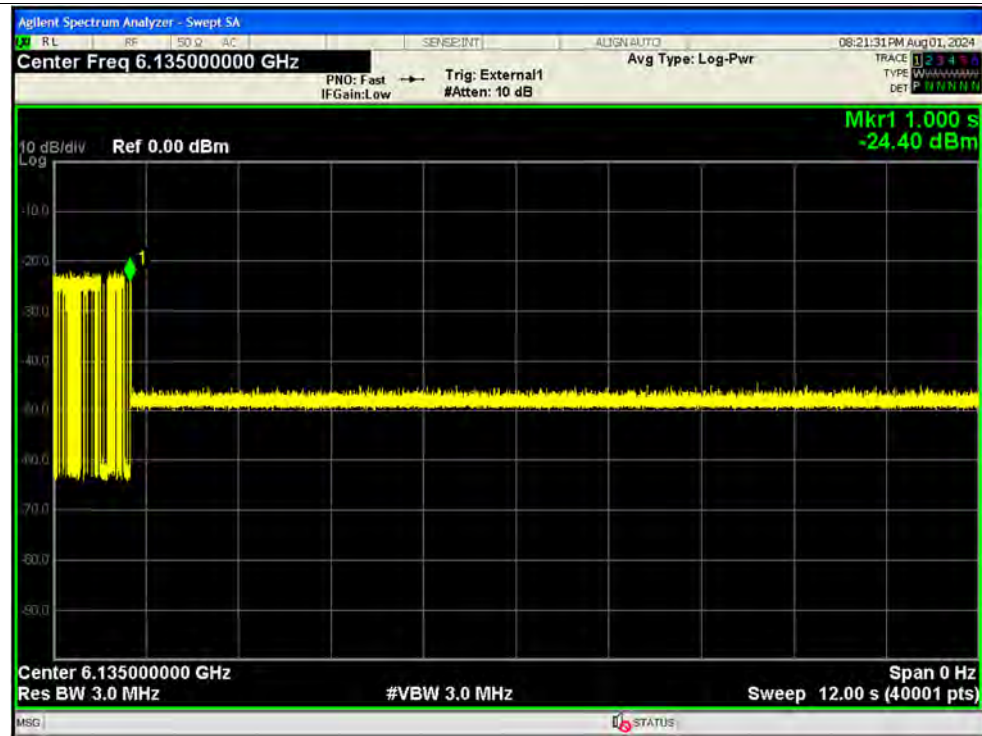


Contention Based Protocol NVNT ax20 6135MHz Interfere 6135 MHz_10

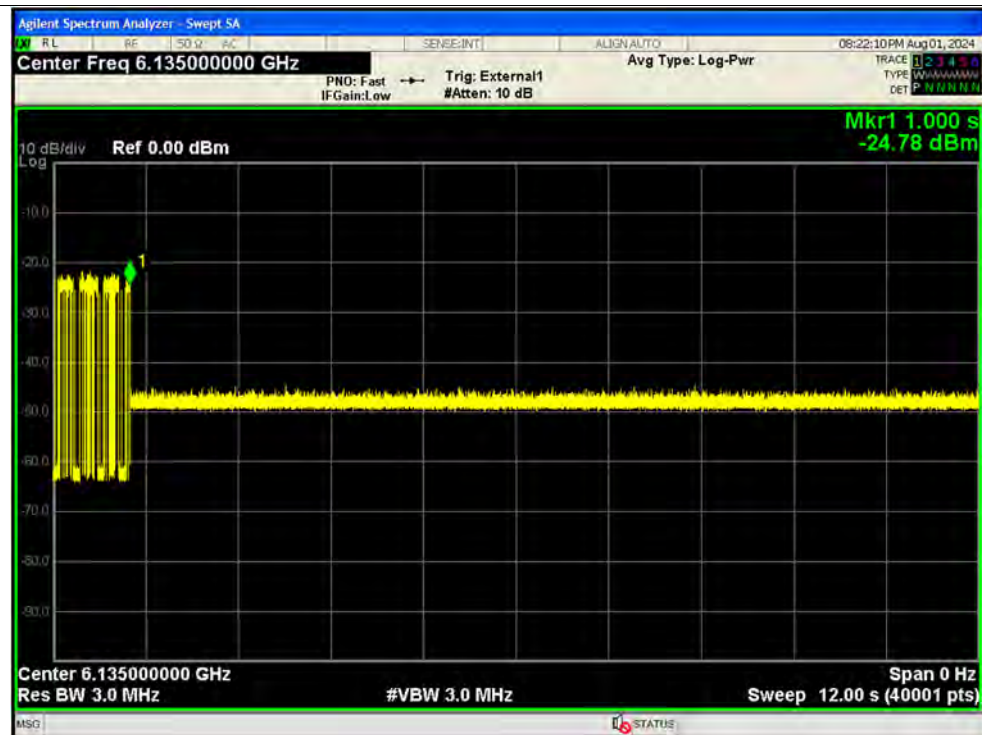



Contention Based Protocol NVNT ax20 6455MHz Interfere 6455 MHz_1

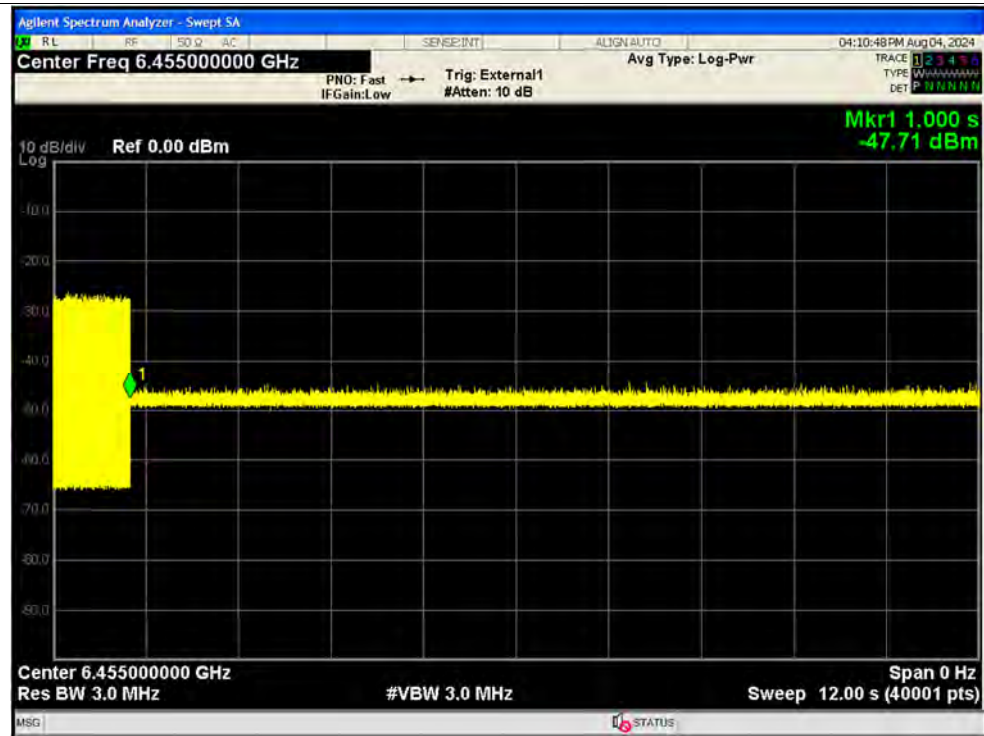

Contention Based Protocol NVNT ax20 6455MHz Interfere 6455 MHz_2






Contention Based Protocol NVNT ax20 6455MHz Interfere 6455 MHz_3



Contention Based Protocol NVNT ax20 6455MHz Interfere 6455 MHz_4

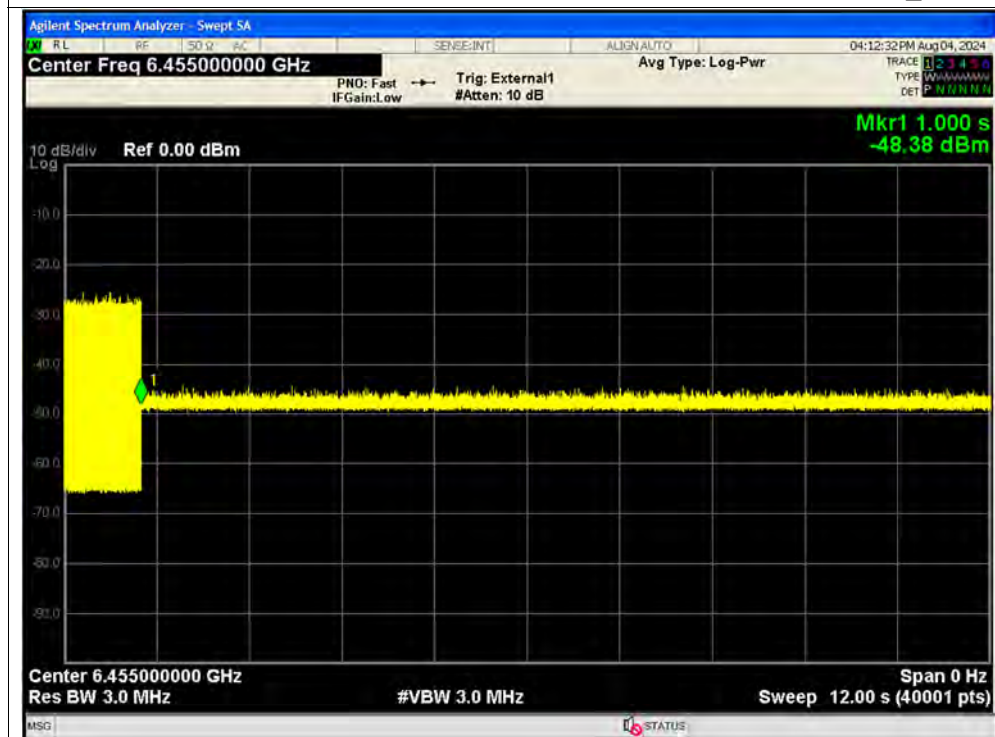



Contention Based Protocol NVNT ax20 6455MHz Interfere 6455 MHz_5



Contention Based Protocol NVNT ax20 6455MHz Interfere 6455 MHz_6






Contention Based Protocol NVNT ax20 6455MHz Interfere 6455 MHz_7




Contention Based Protocol NVNT ax20 6455MHz Interfere 6455 MHz_8

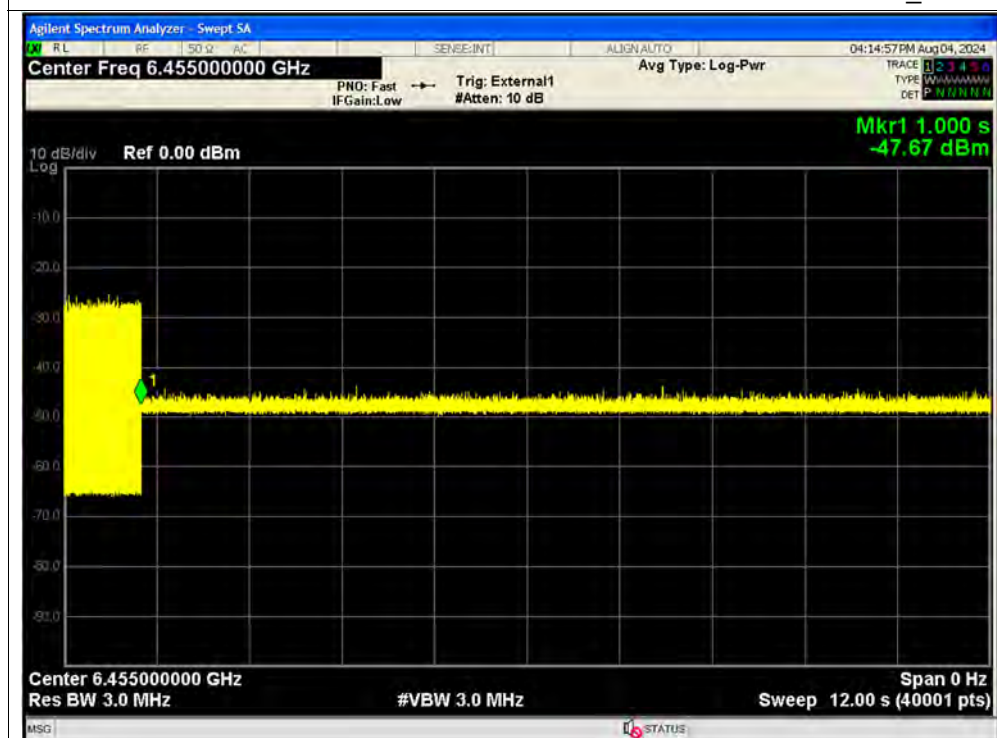




Contention Based Protocol NVNT ax20 6455MHz Interfere 6455 MHz_9

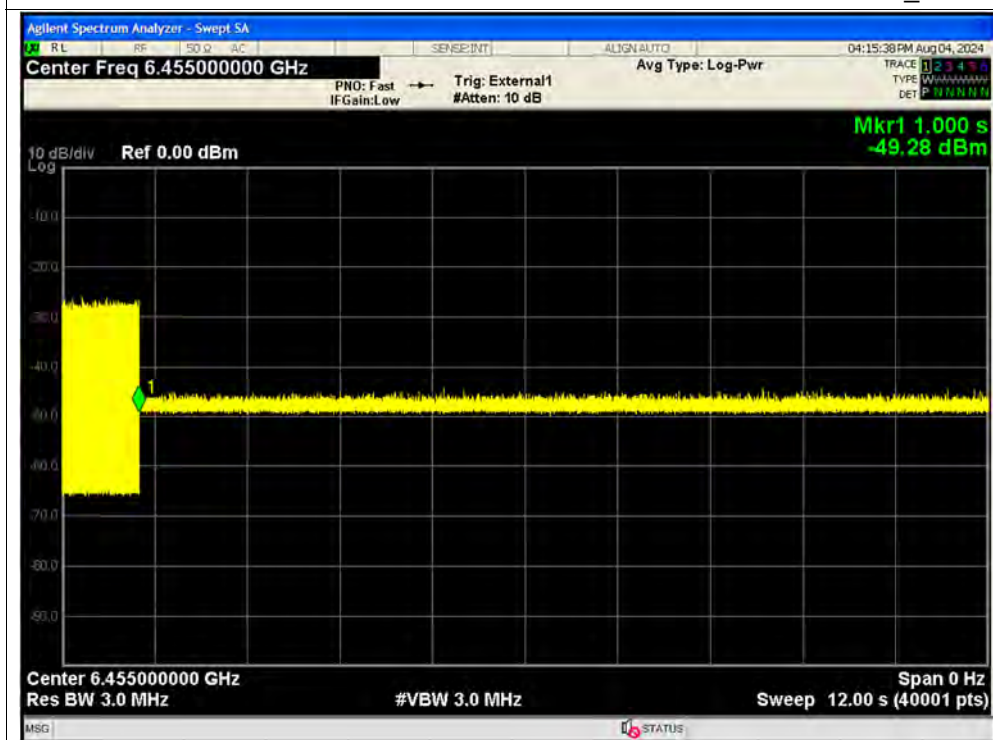


Contention Based Protocol NVNT ax20 6455MHz Interfere 6455 MHz_10

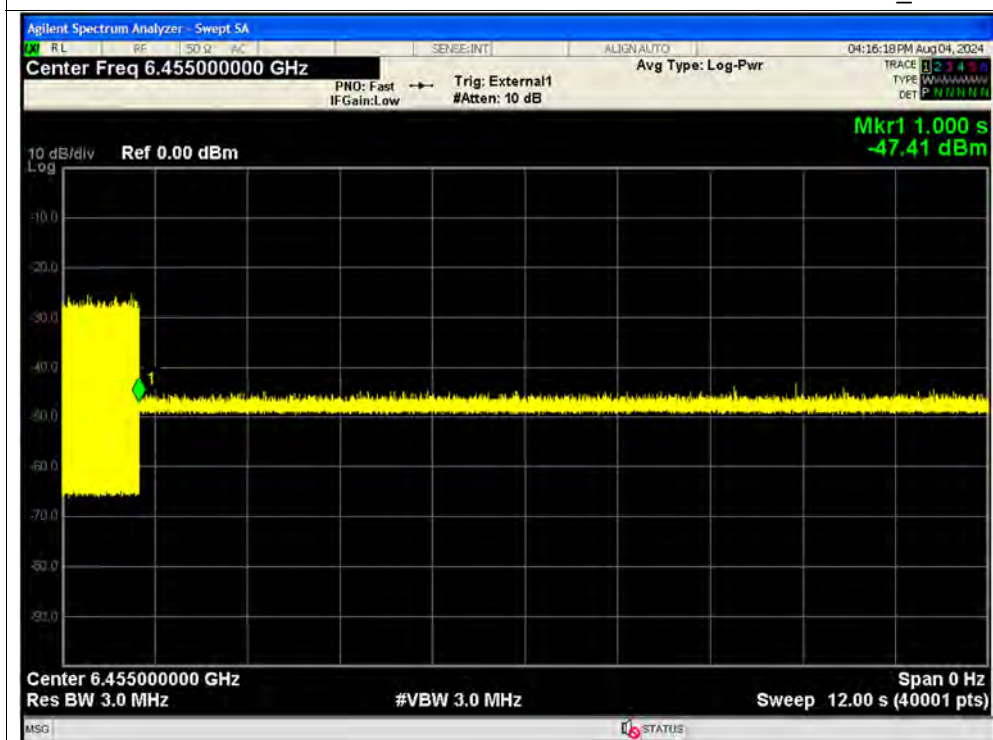




Contention Based Protocol NVNT ax20 6535MHz Interfere 6535 MHz_1

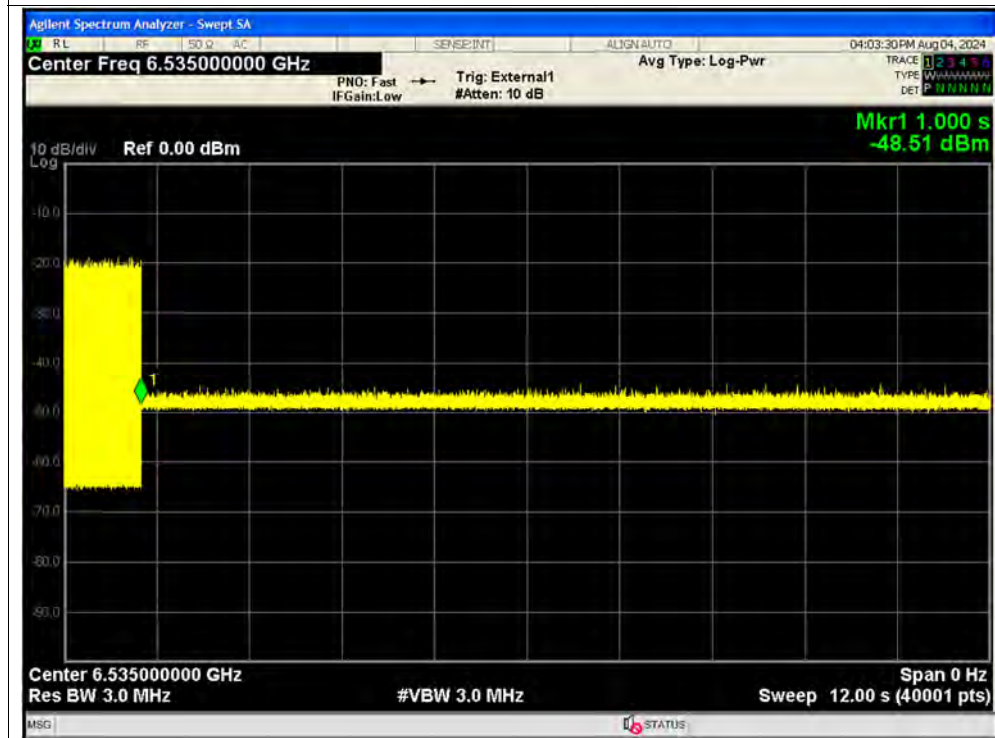

Contention Based Protocol NVNT ax20 6535MHz Interfere 6535 MHz_2

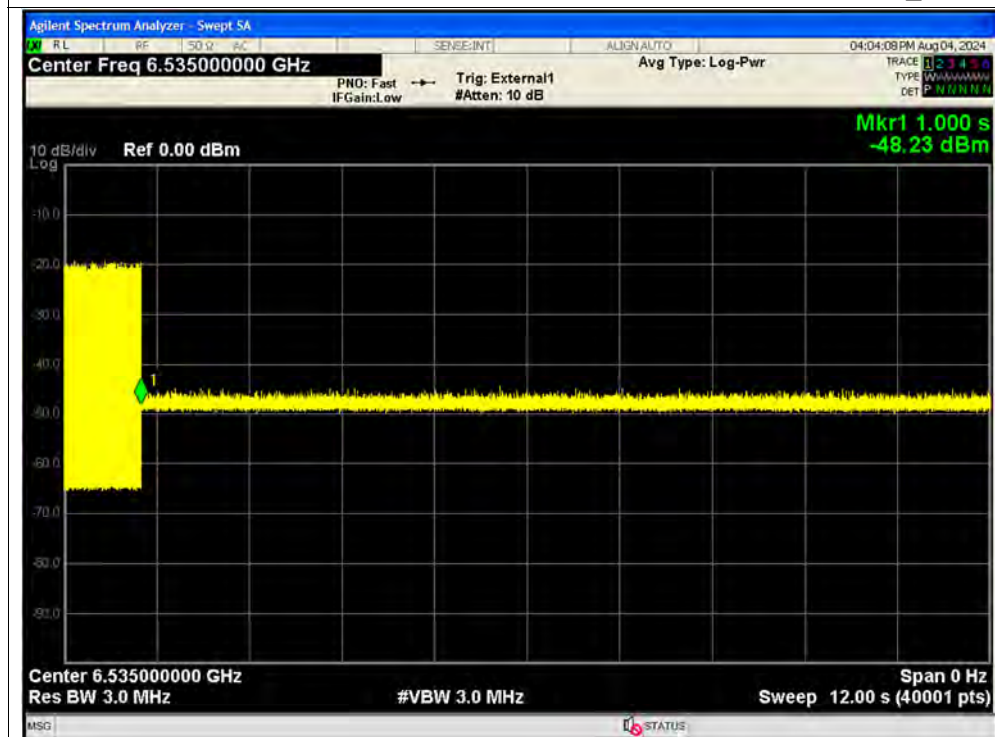




Contention Based Protocol NVNT ax20 6535MHz Interfere 6535 MHz_3



Contention Based Protocol NVNT ax20 6535MHz Interfere 6535 MHz_4

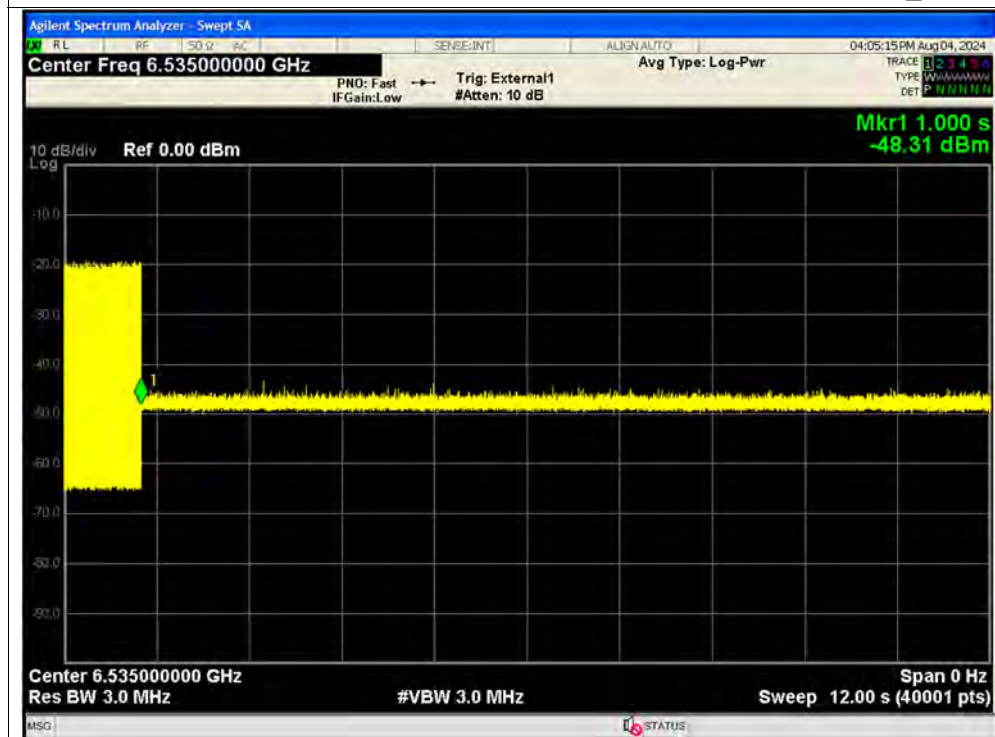




Contention Based Protocol NVNT ax20 6535MHz Interfere 6535 MHz_5



Contention Based Protocol NVNT ax20 6535MHz Interfere 6535 MHz_6

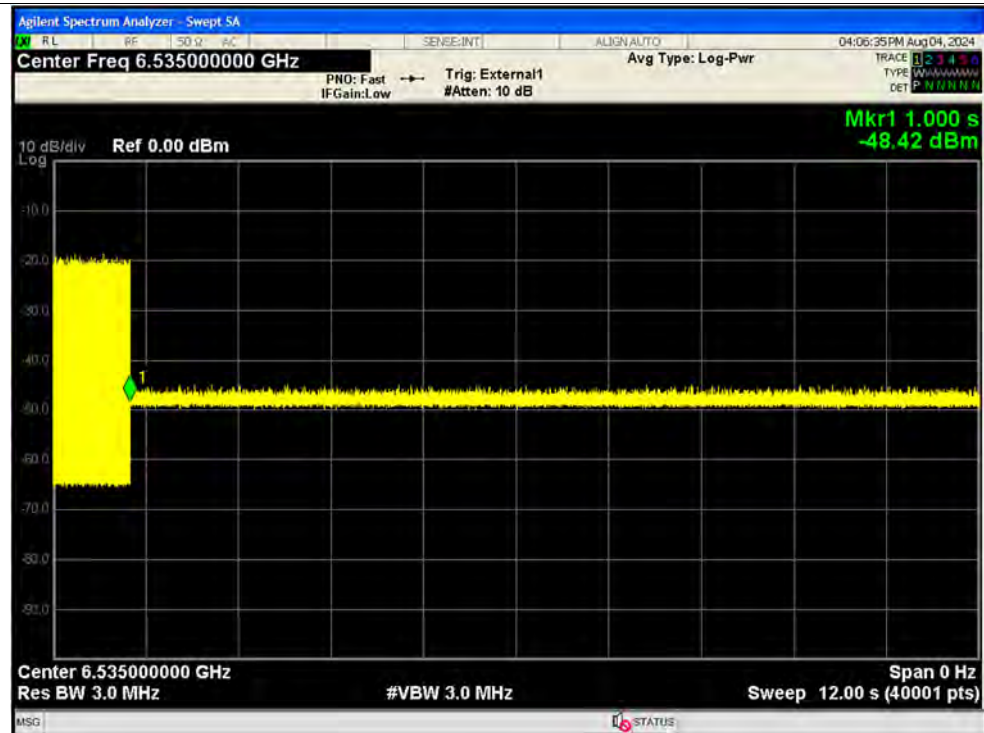




Contention Based Protocol NVNT ax20 6535MHz Interfere 6535 MHz_7




Contention Based Protocol NVNT ax20 6535MHz Interfere 6535 MHz_8

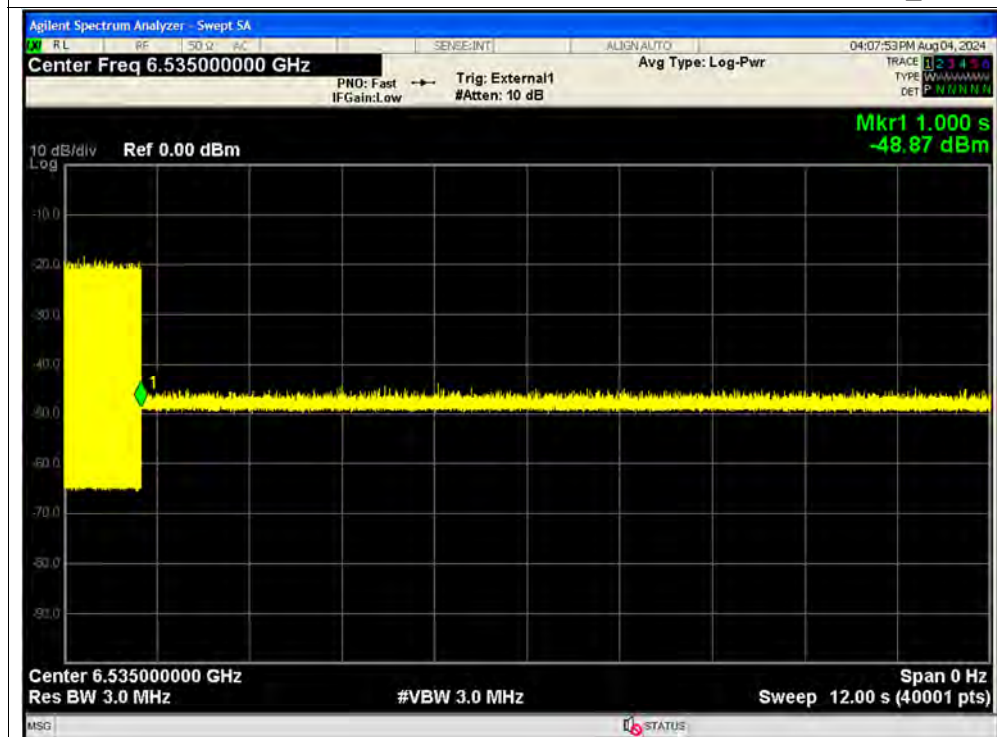




Contention Based Protocol NVNT ax20 6535MHz Interfere 6535 MHz_9

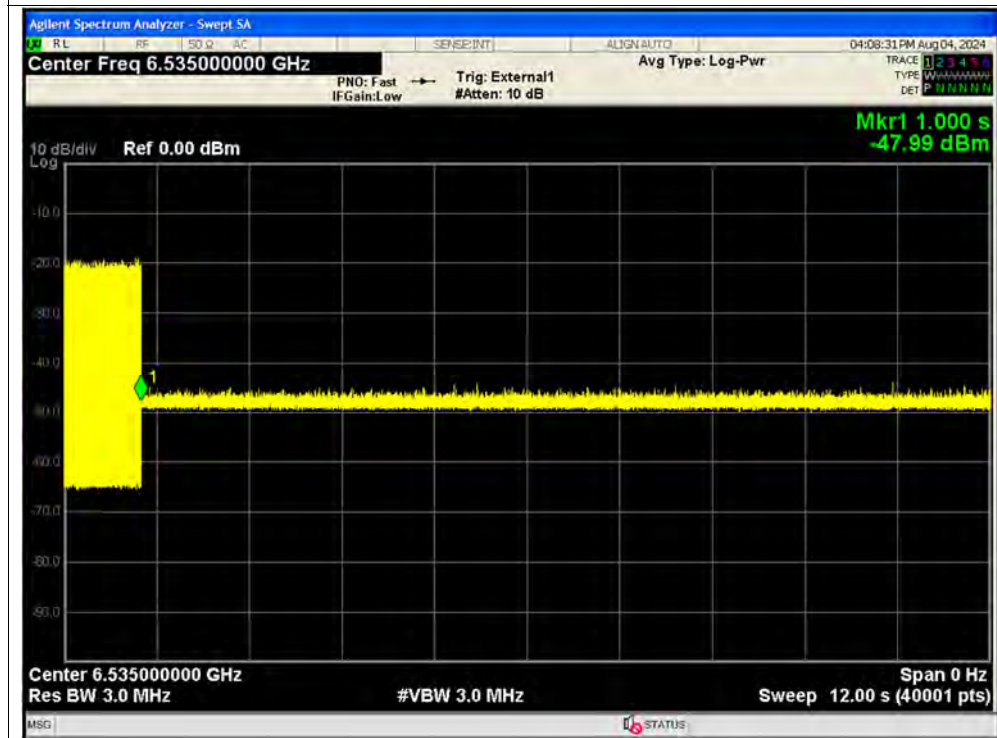


Contention Based Protocol NVNT ax20 6535MHz Interfere 6535 MHz_10

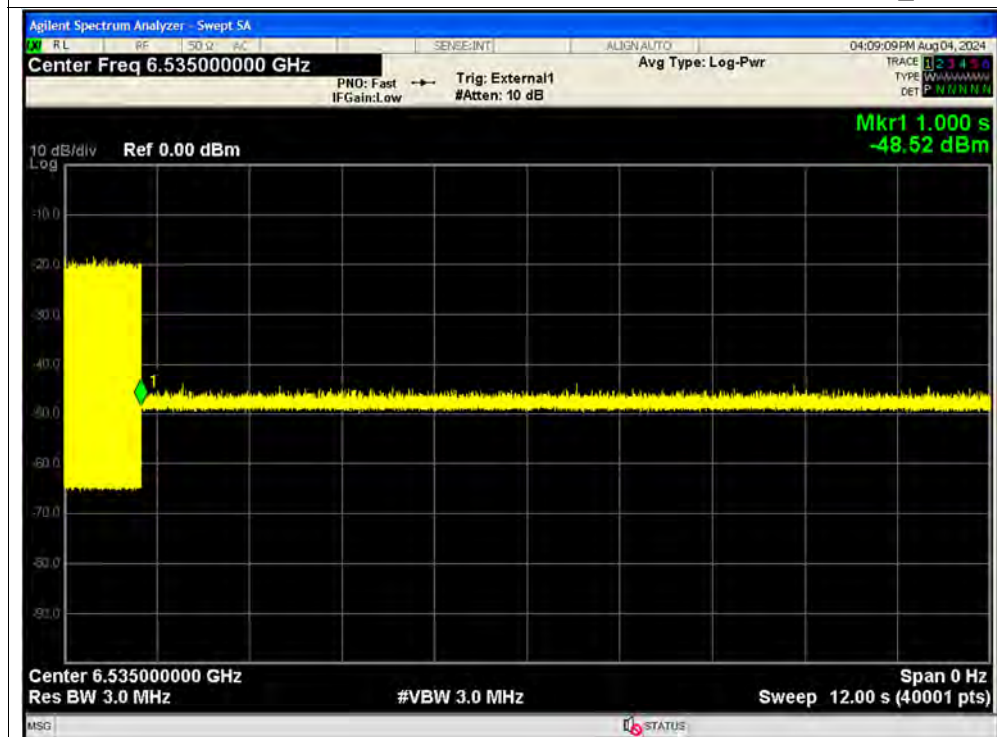



Contention Based Protocol NVNT ax20 6935MHz Interfere 6935 MHz_1

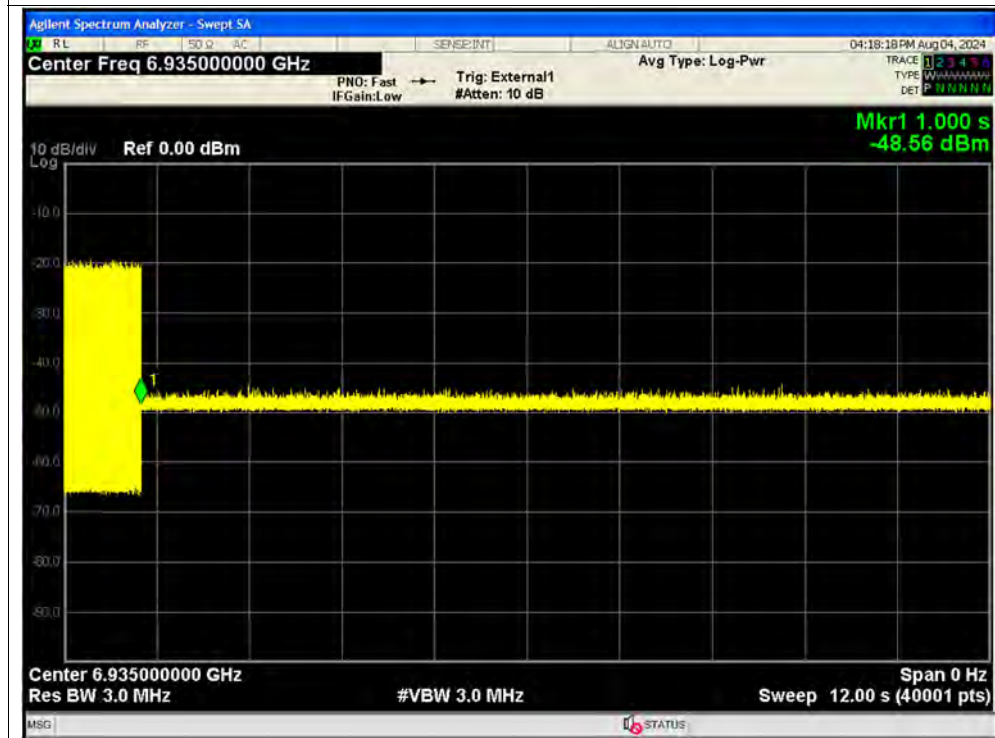


Contention Based Protocol NVNT ax20 6935MHz Interfere 6935 MHz_2






Contention Based Protocol NVNT ax20 6935MHz Interfere 6935 MHz_3

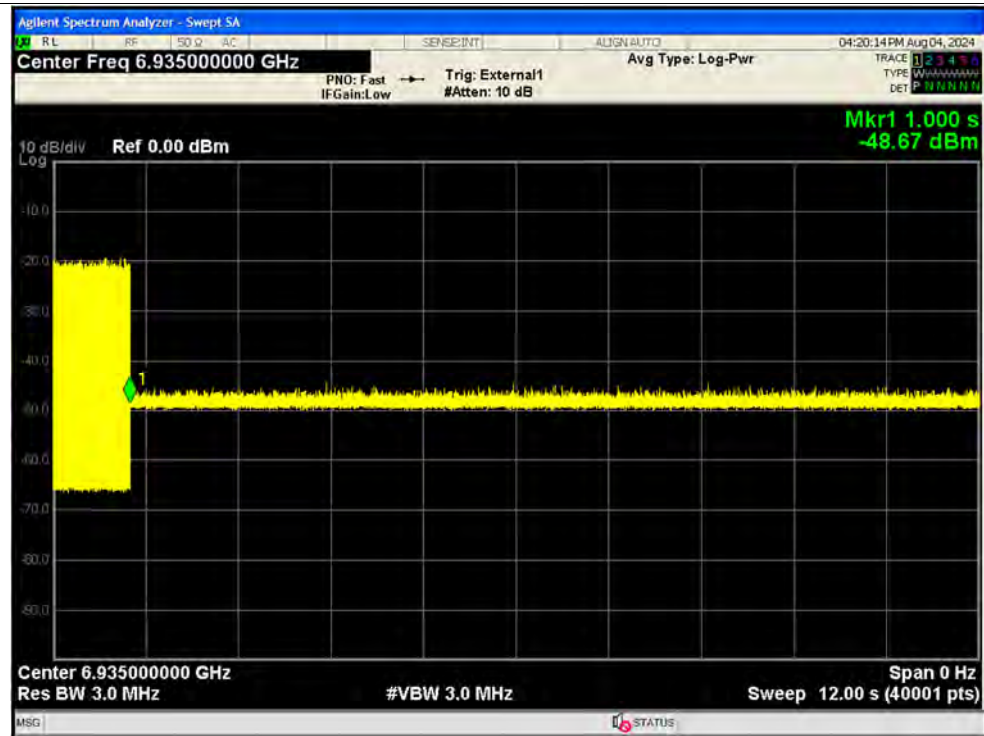


Contention Based Protocol NVNT ax20 6935MHz Interfere 6935 MHz_4

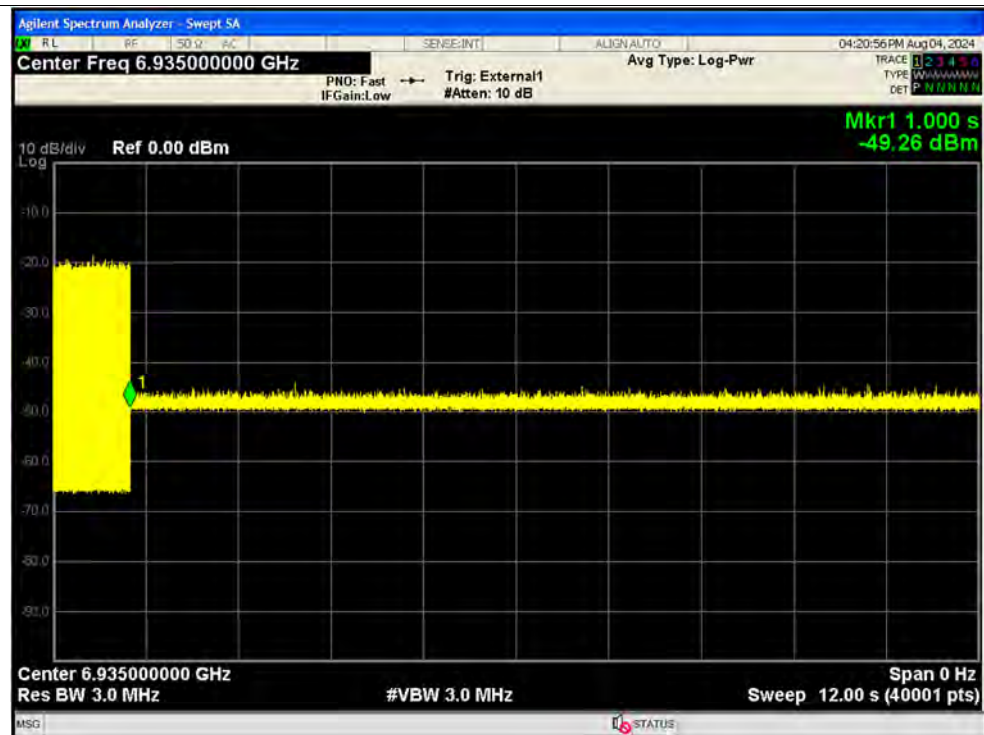




Contention Based Protocol NVNT ax20 6935MHz Interfere 6935 MHz_5

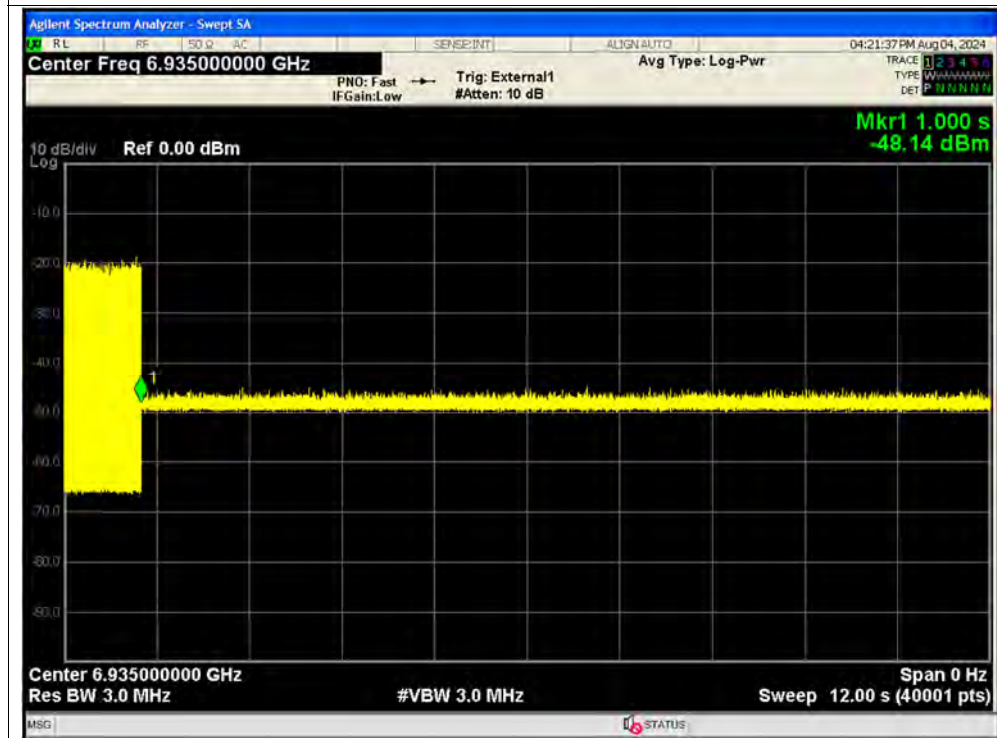

Contention Based Protocol NVNT ax20 6935MHz Interfere 6935 MHz_6

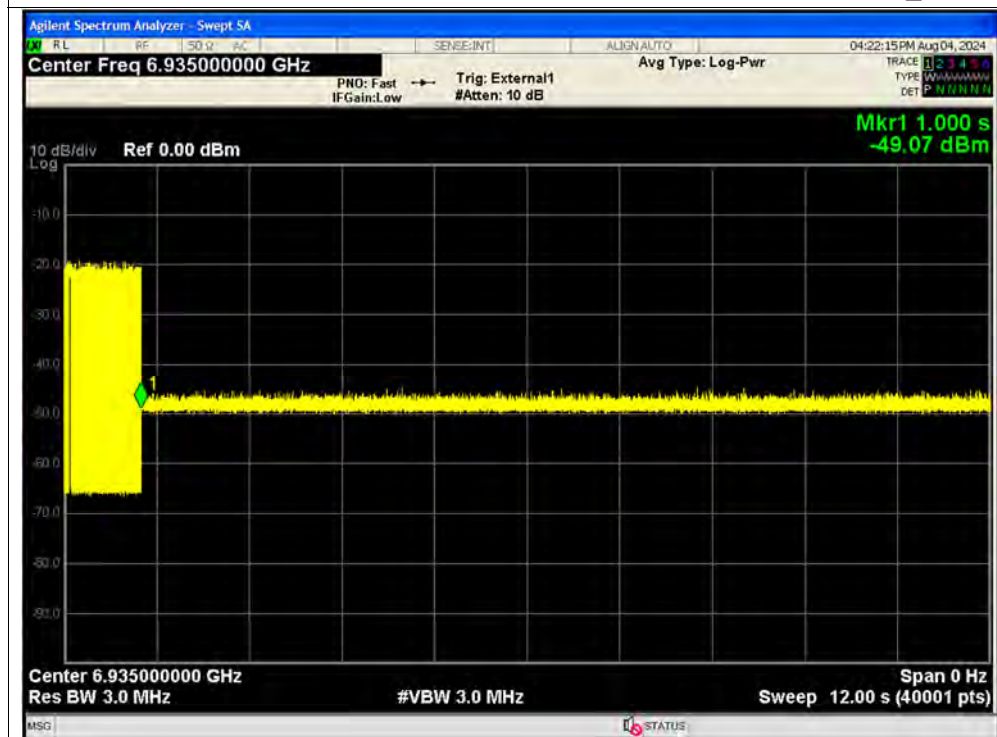



Contention Based Protocol NVNT ax20 6935MHz Interfere 6935 MHz_7




Contention Based Protocol NVNT ax20 6935MHz Interfere 6935 MHz_8






Contention Based Protocol NVNT ax20 6935MHz Interfere 6935 MHz_9

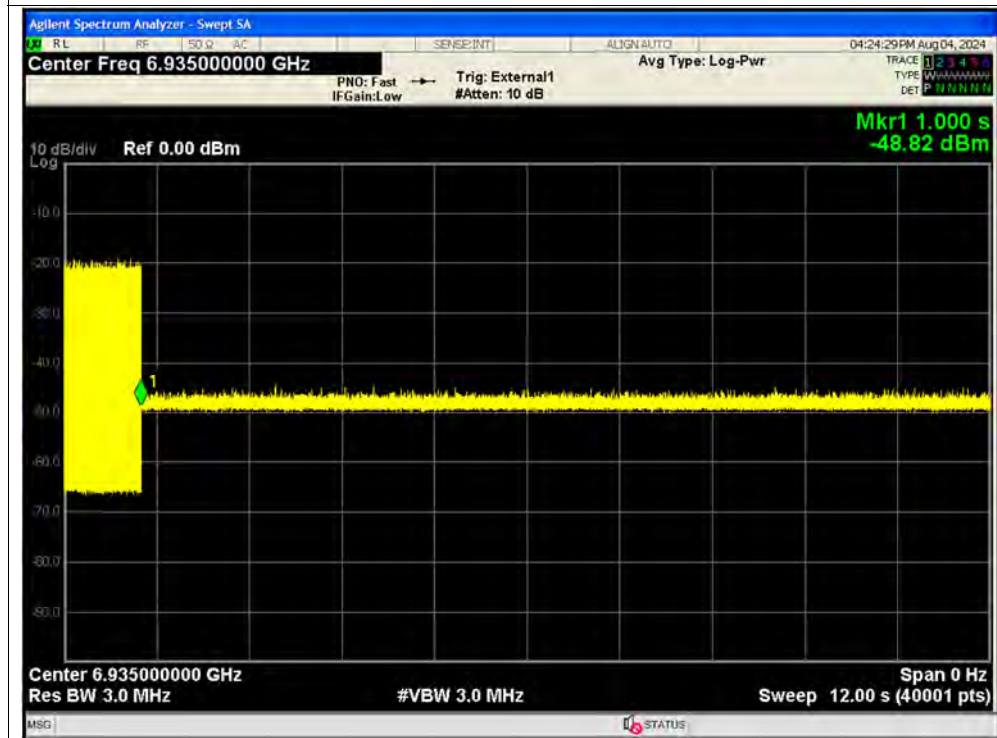


Contention Based Protocol NVNT ax20 6935MHz Interfere 6935 MHz_10

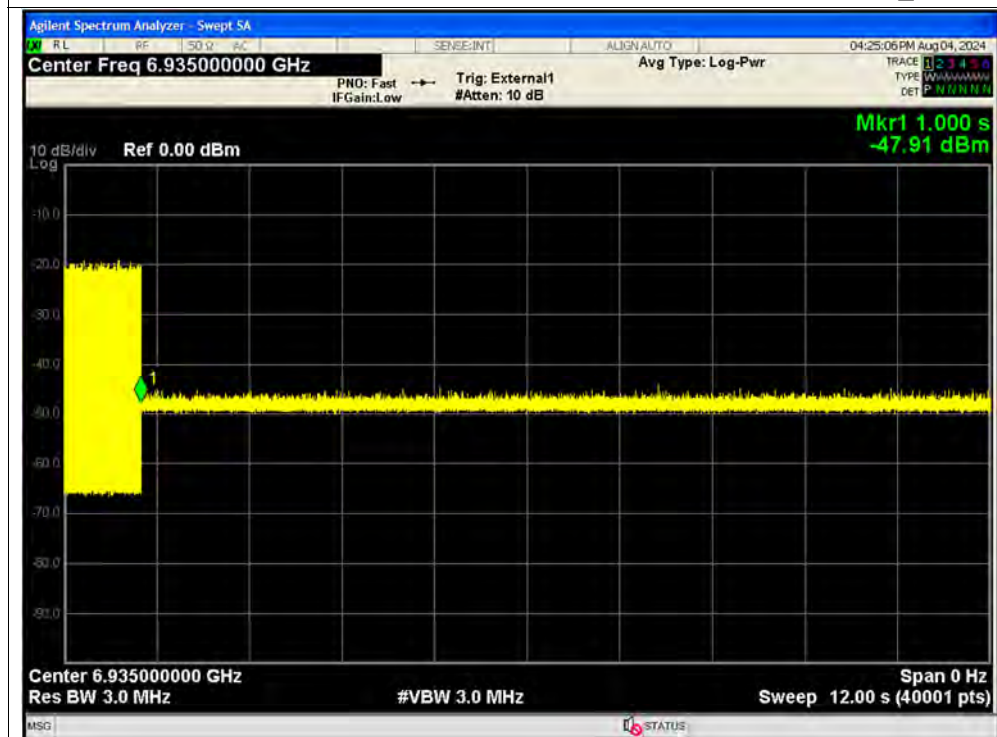





Contention Based Protocol NVNT ax40 6125MHz Interfere 6110 MHz_1

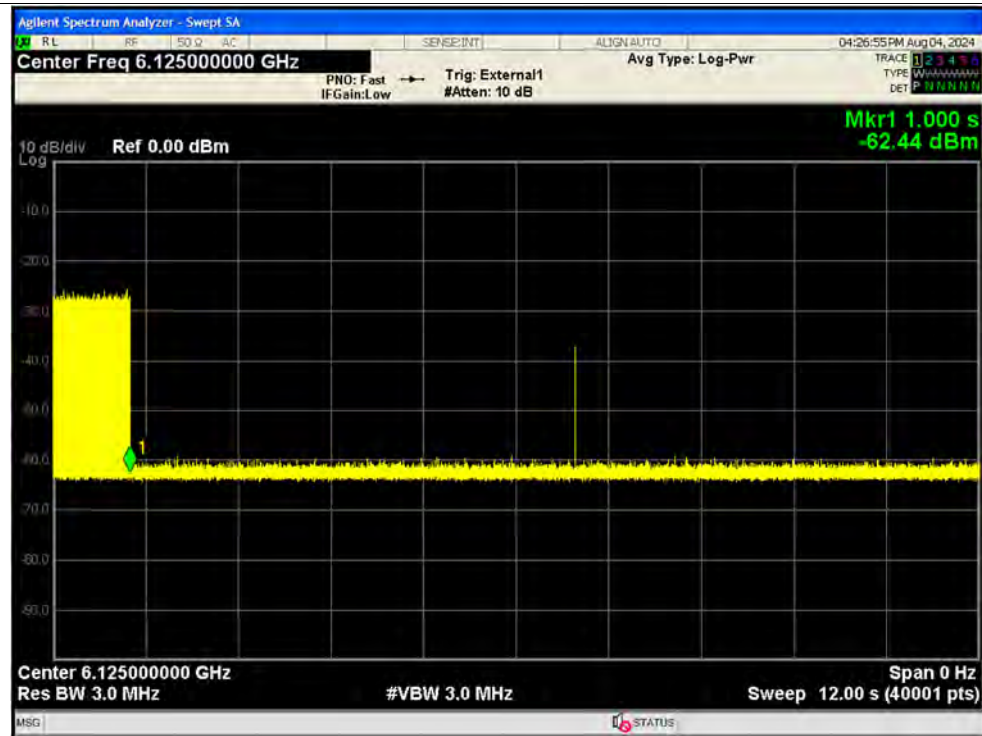


Contention Based Protocol NVNT ax40 6125MHz Interfere 6110 MHz_2

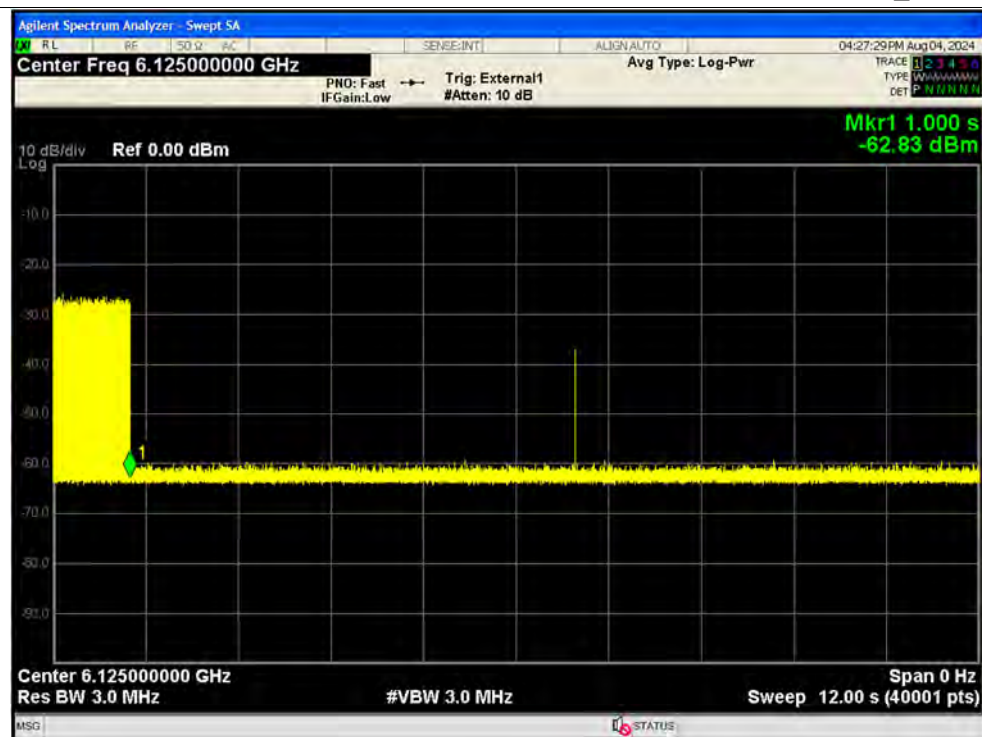

Contention Based Protocol NVNT ax40 6125MHz Interfere 6110 MHz_3

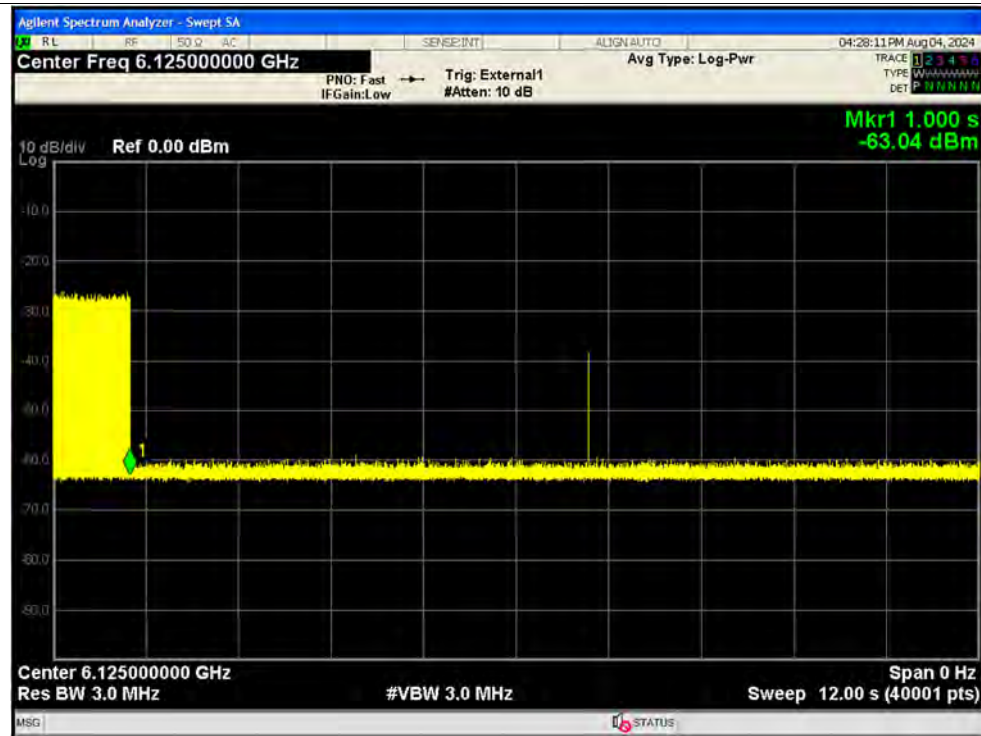


Contention Based Protocol NVNT ax40 6125MHz Interfere 6110 MHz_4

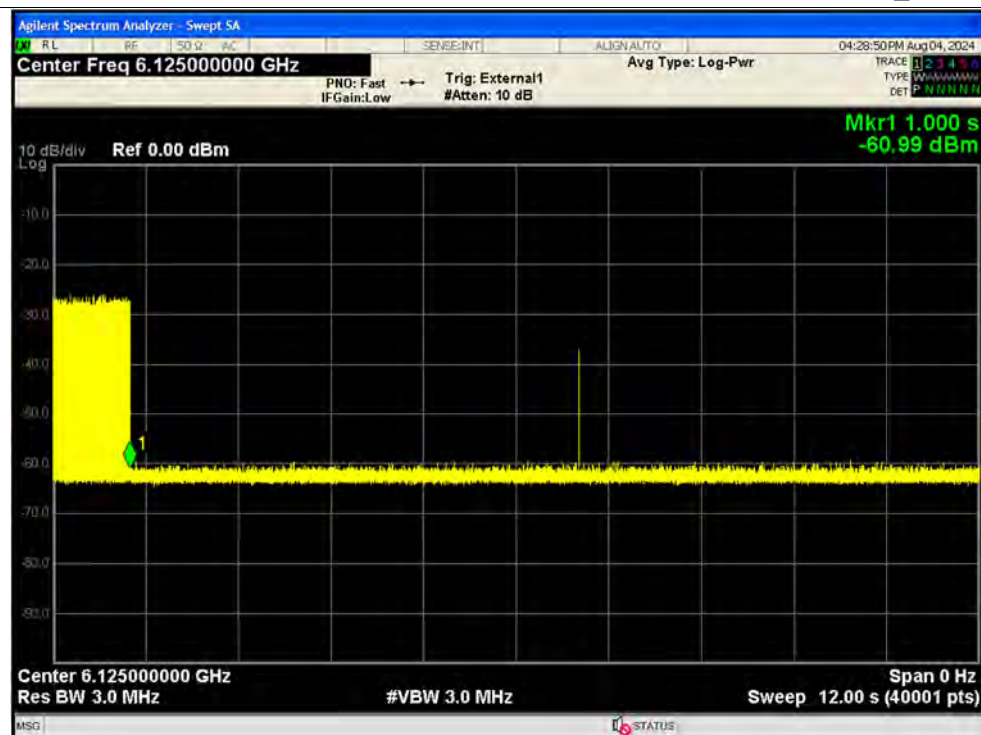




Contention Based Protocol NVNT ax40 6125MHz Interfere 6110 MHz_5

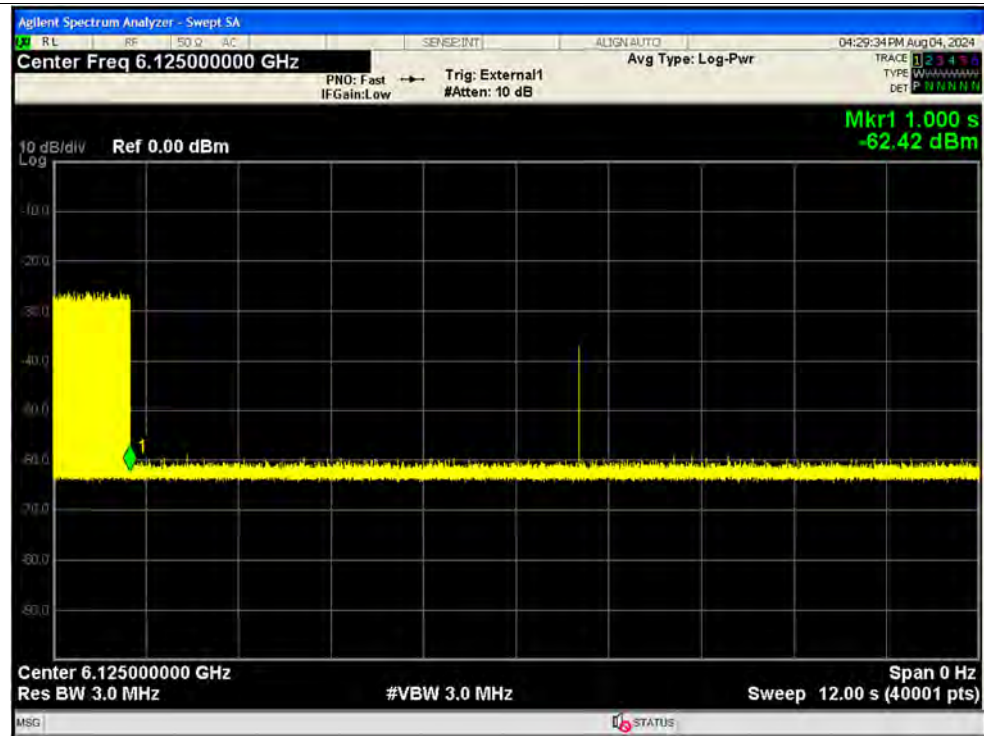


Contention Based Protocol NVNT ax40 6125MHz Interfere 6110 MHz_6

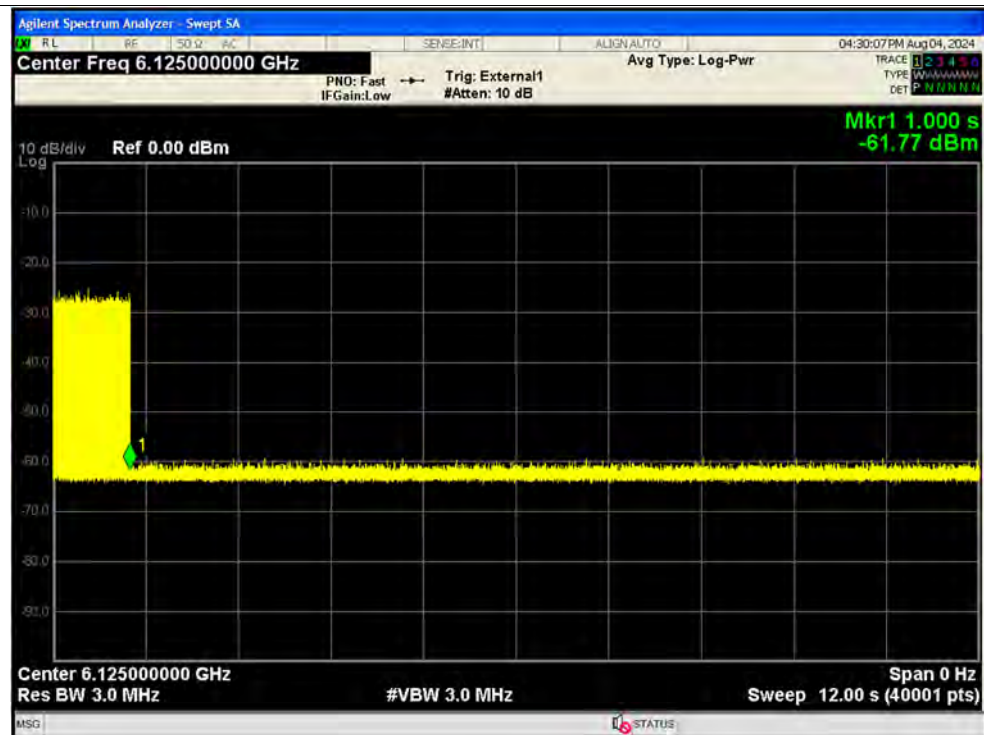





Contention Based Protocol NVNT ax40 6125MHz Interfere 6110 MHz_7

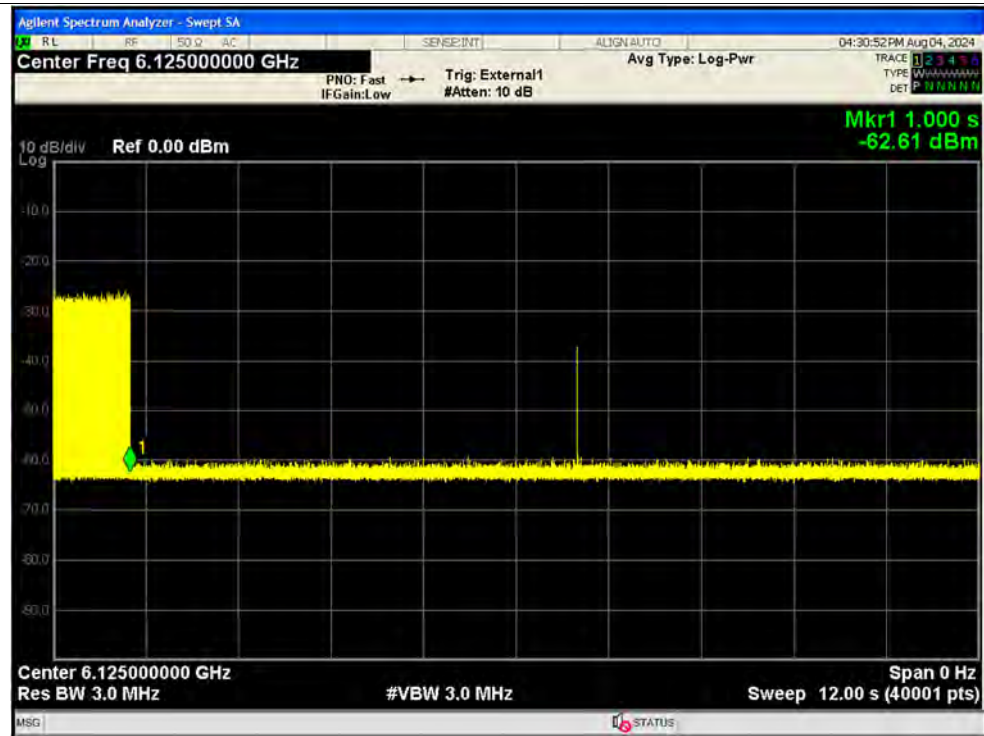


Contention Based Protocol NVNT ax40 6125MHz Interfere 6110 MHz_8

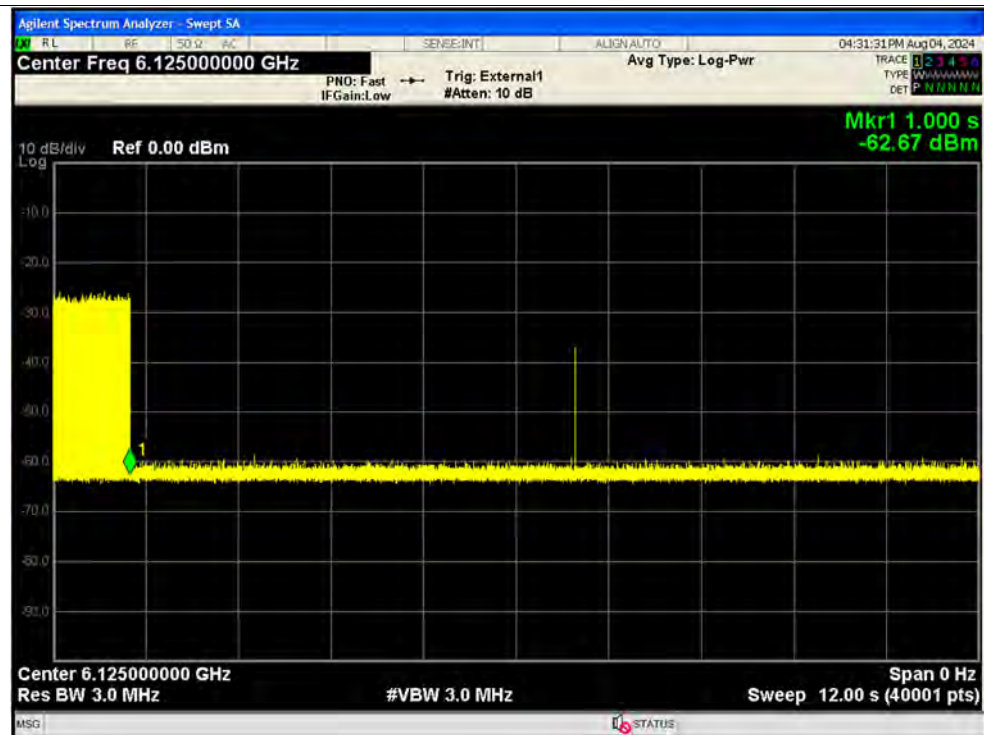

Contention Based Protocol NVNT ax40 6125MHz Interfere 6110 MHz_9

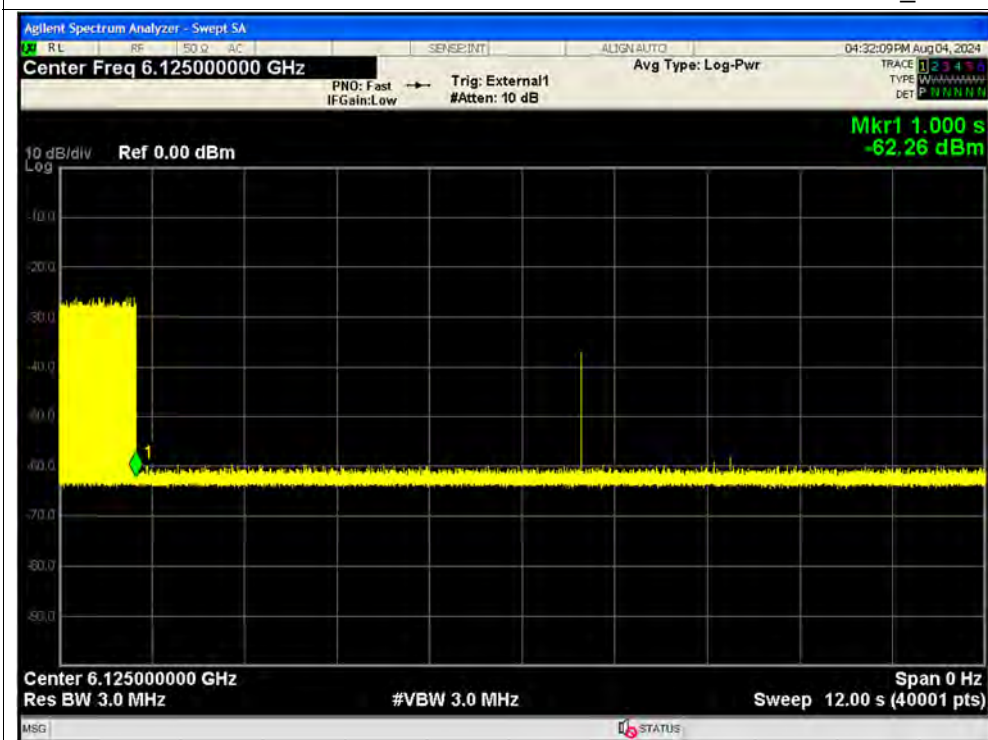


Contention Based Protocol NVNT ax40 6125MHz Interfere 6110 MHz_10

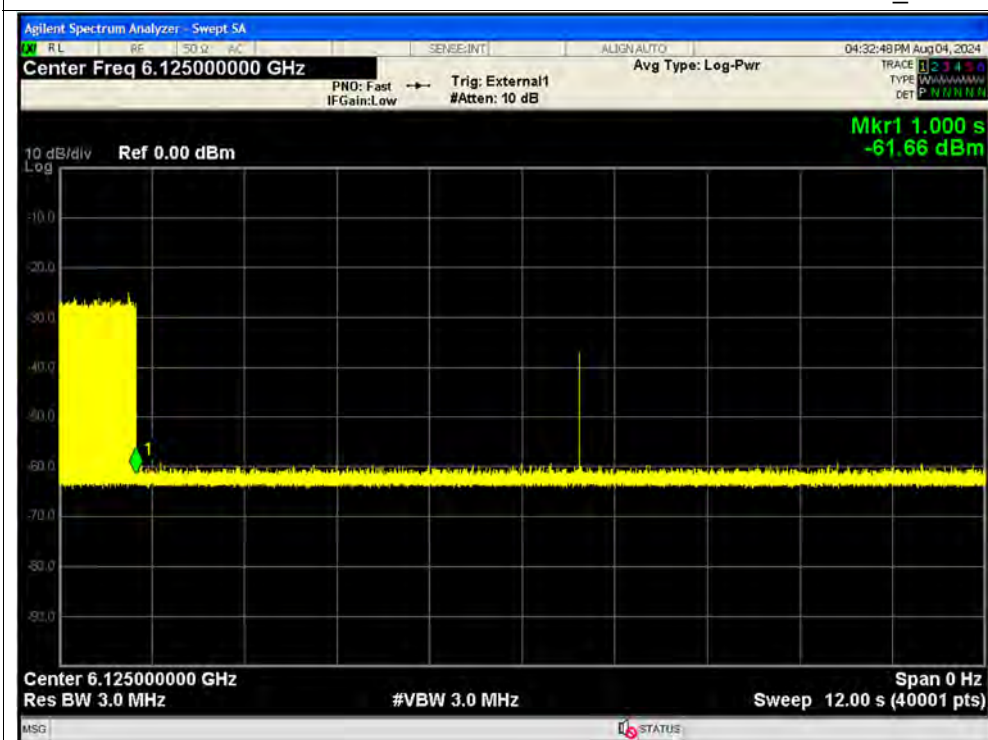




Contention Based Protocol NVNT ax40 6125MHz Interfere 6140 MHz_1

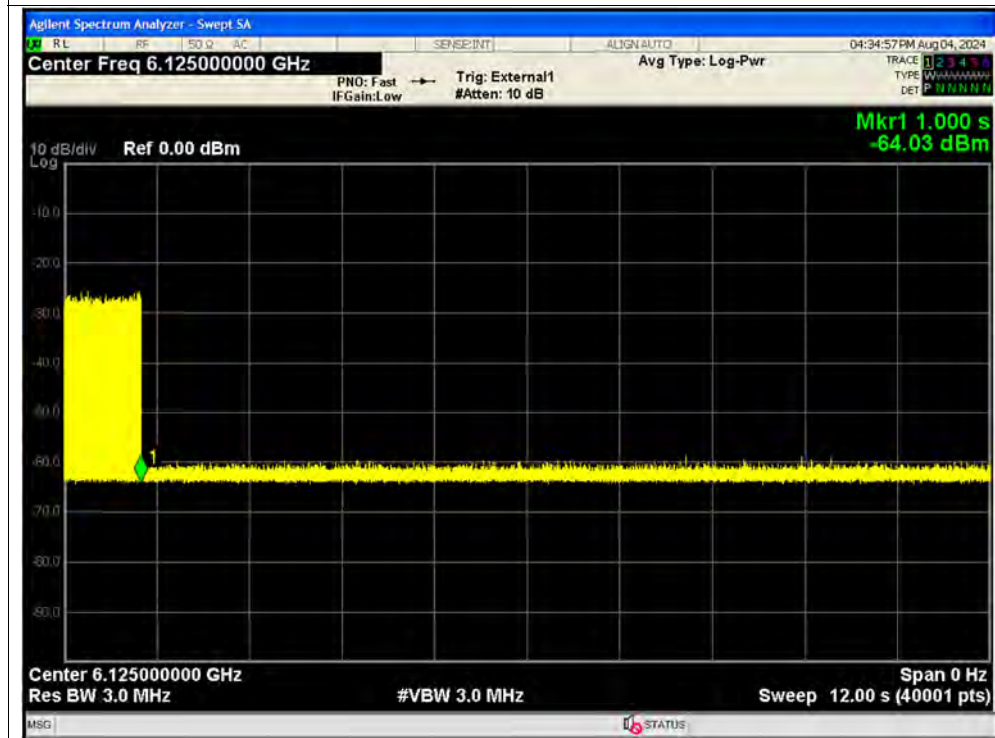


Contention Based Protocol NVNT ax40 6125MHz Interfere 6140 MHz_2

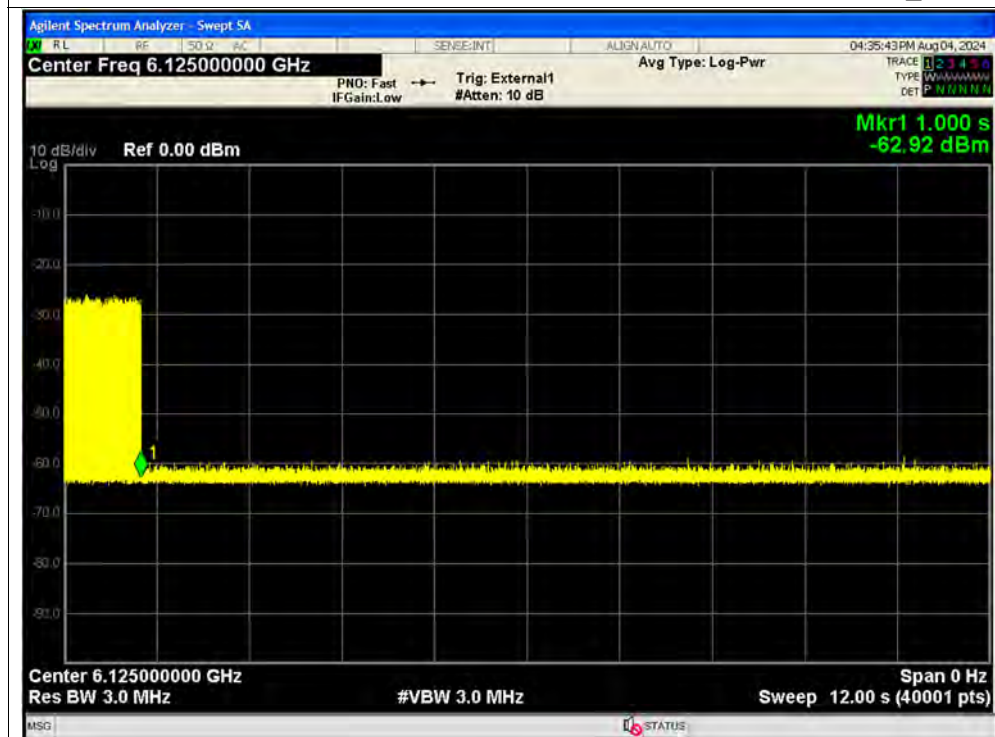




Contention Based Protocol NVNT ax40 6125MHz Interfere 6140 MHz_3

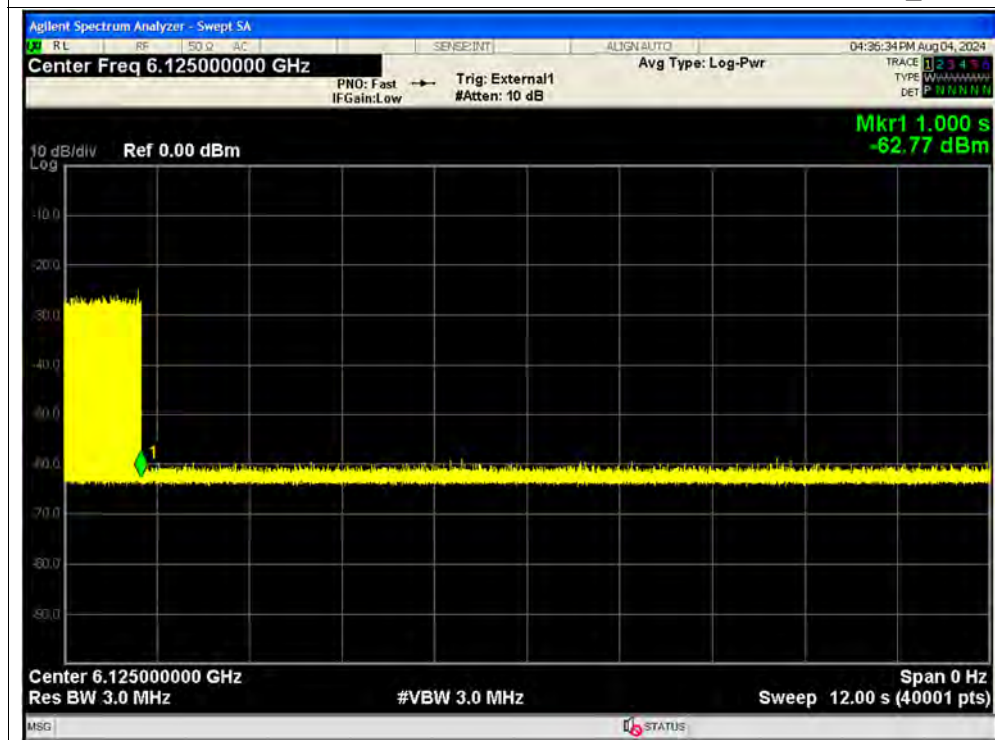


Contention Based Protocol NVNT ax40 6125MHz Interfere 6140 MHz_4

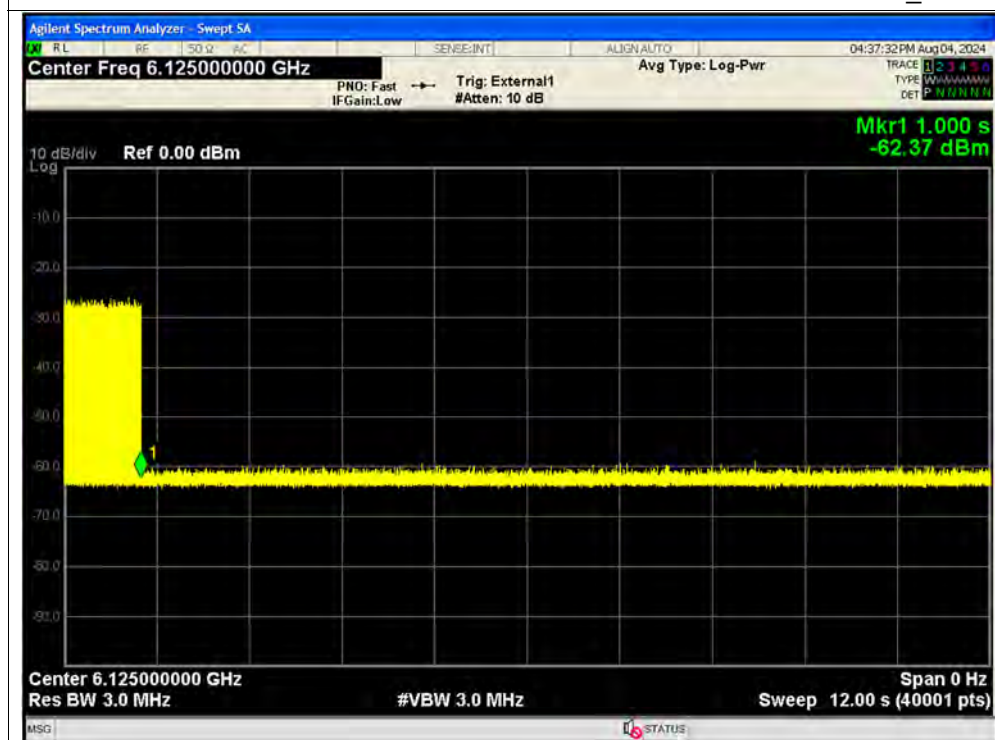




Contention Based Protocol NVNT ax40 6125MHz Interfere 6140 MHz_5

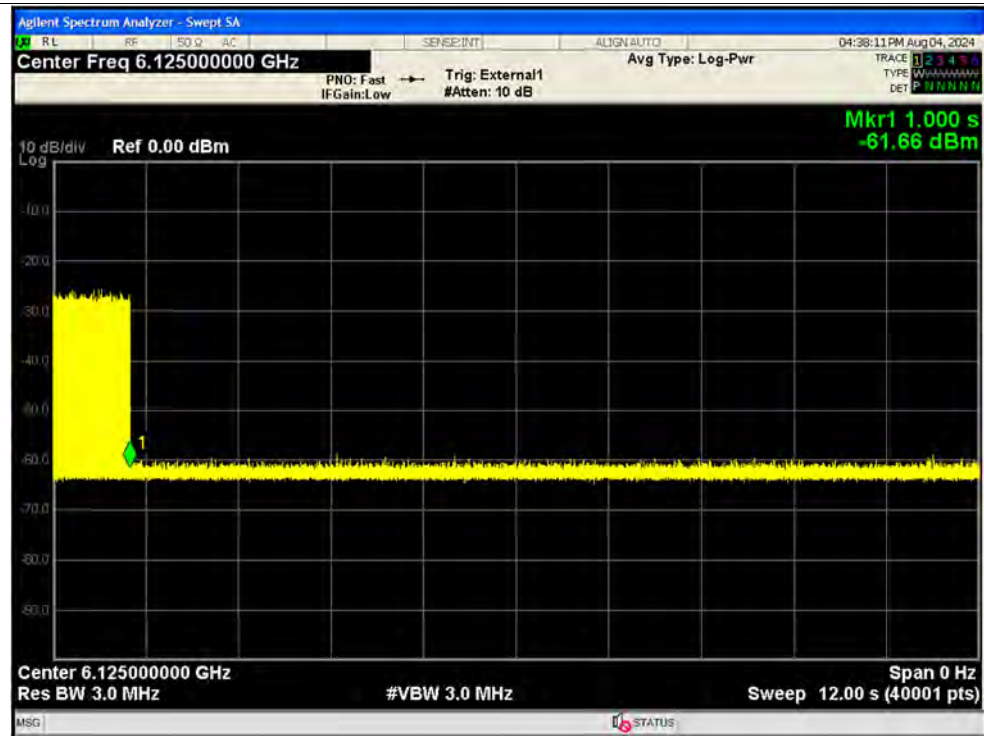


Contention Based Protocol NVNT ax40 6125MHz Interfere 6140 MHz_6

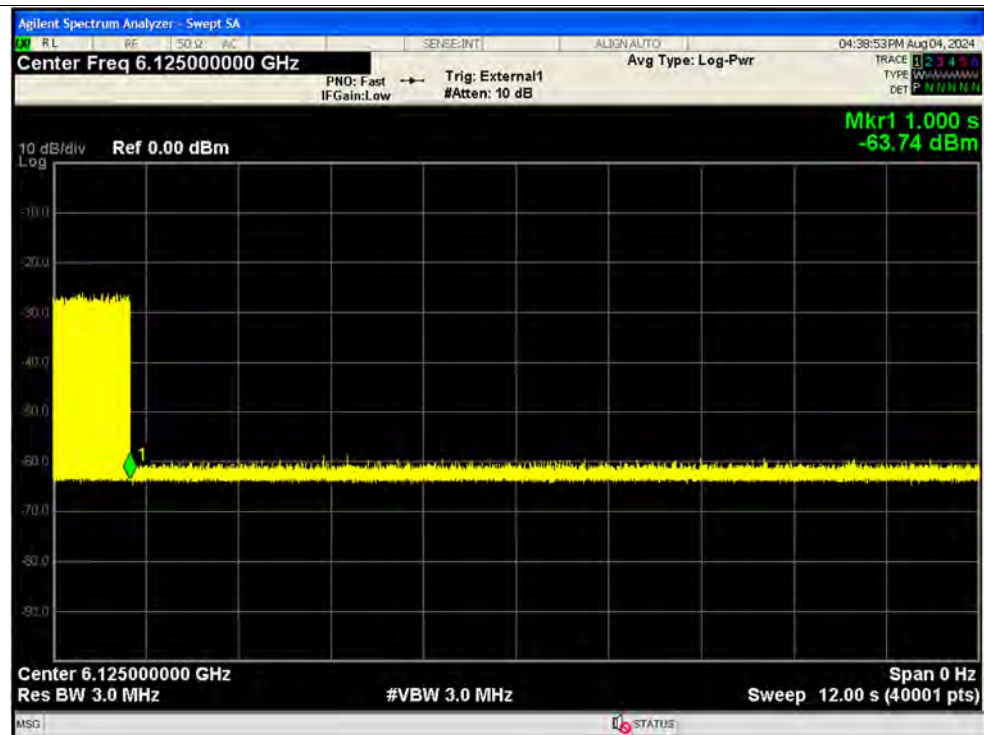




Contention Based Protocol NVNT ax40 6125MHz Interfere 6140 MHz_7

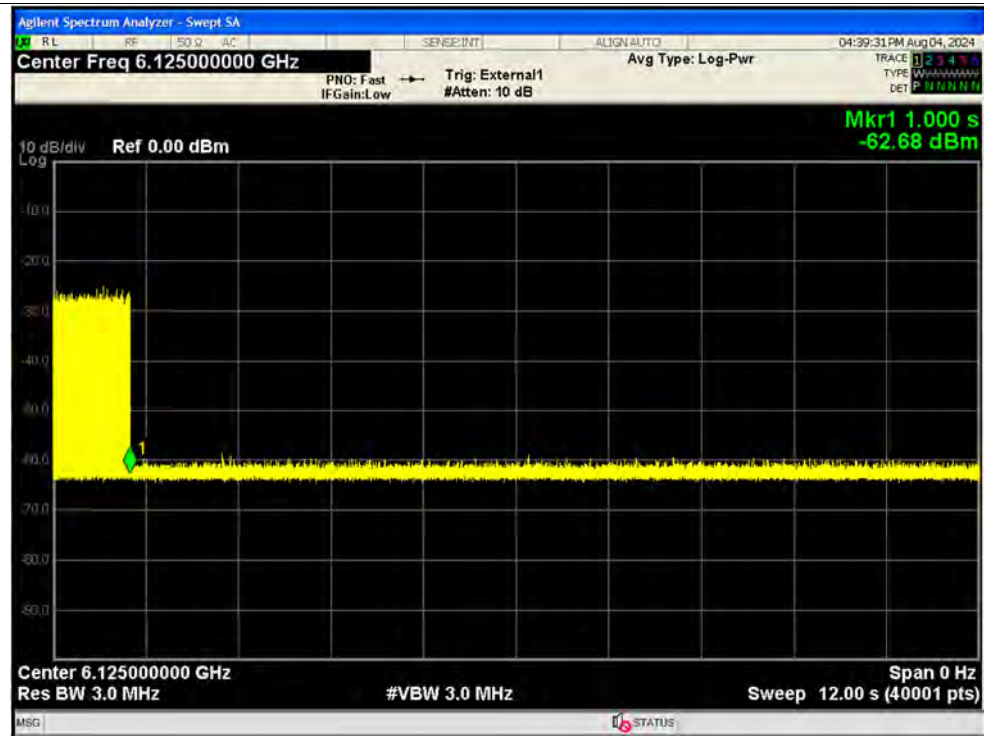


Contention Based Protocol NVNT ax40 6125MHz Interfere 6140 MHz_8

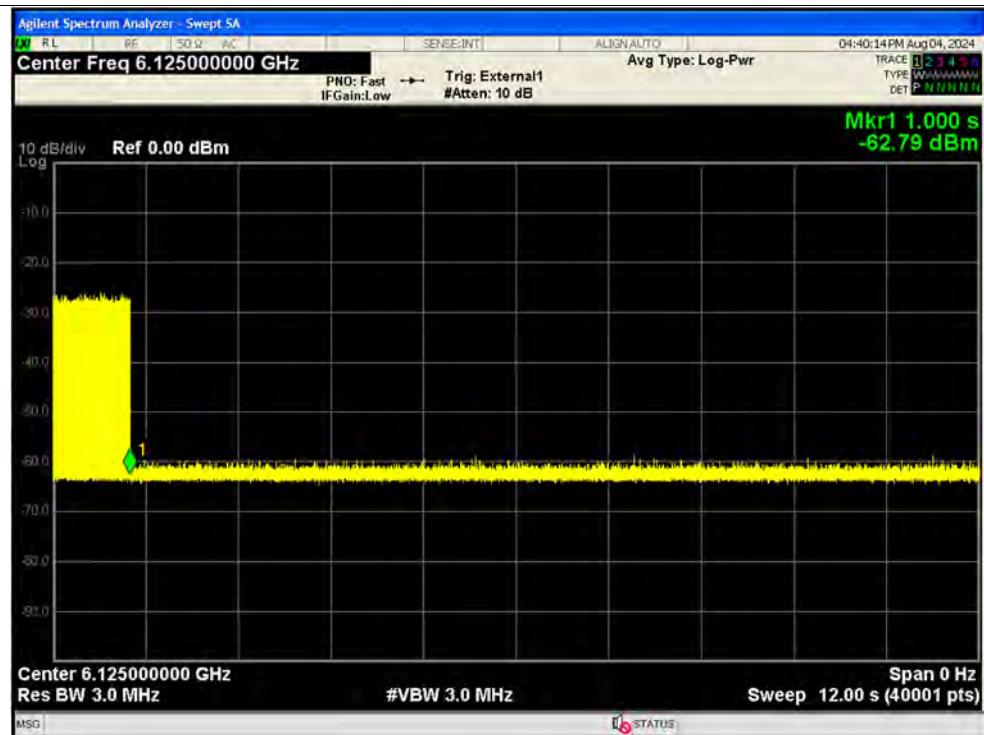




Contention Based Protocol NVNT ax40 6125MHz Interfere 6140 MHz_9

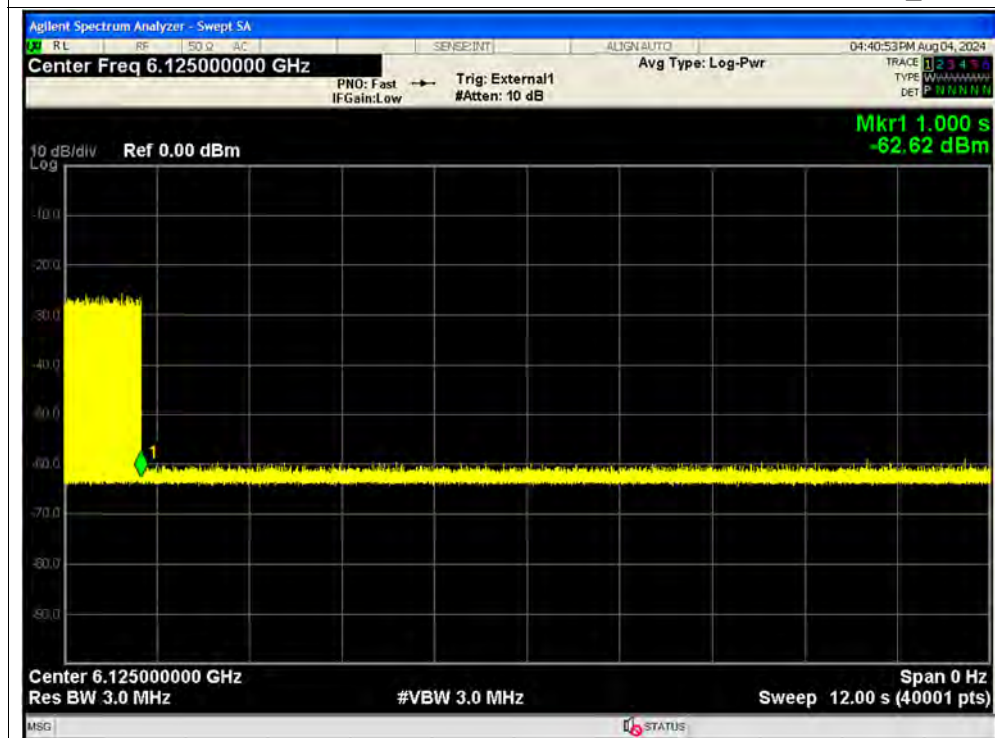


Contention Based Protocol NVNT ax40 6125MHz Interfere 6140 MHz_10

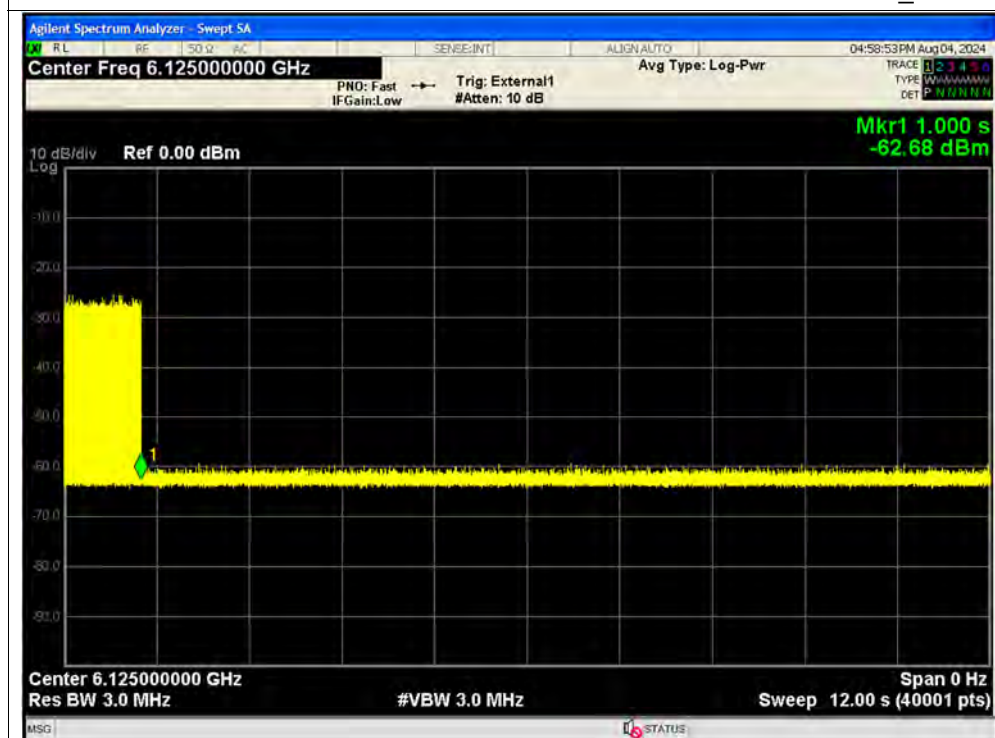




Contention Based Protocol NVNT ax40 6445MHz Interfere 6430 MHz_1

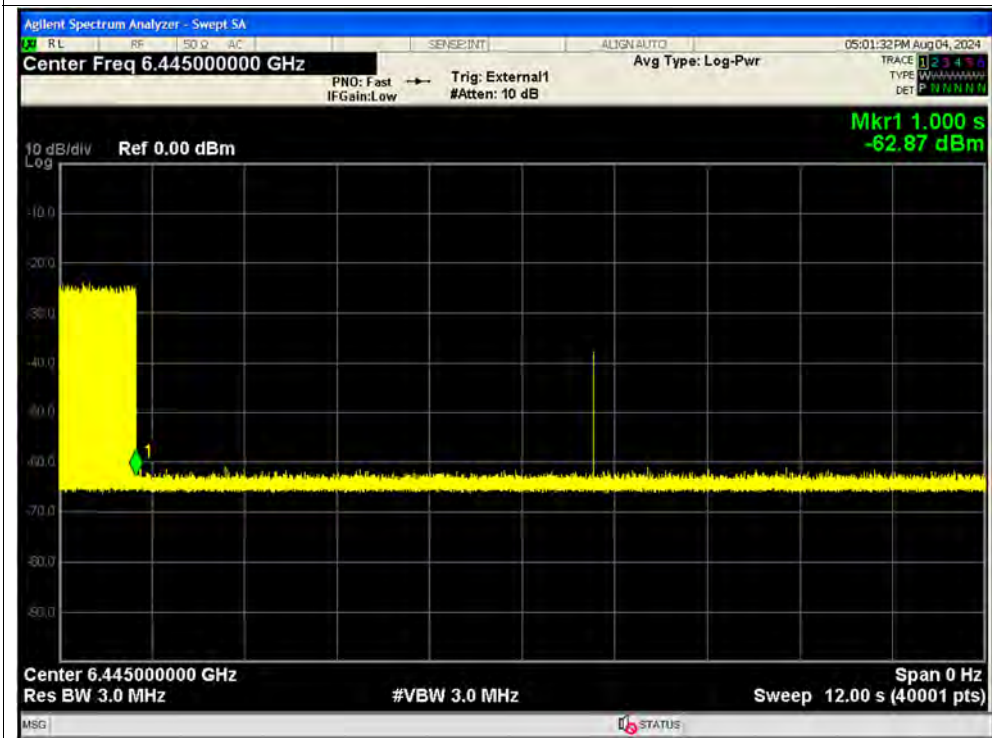


Contention Based Protocol NVNT ax40 6445MHz Interfere 6430 MHz_2

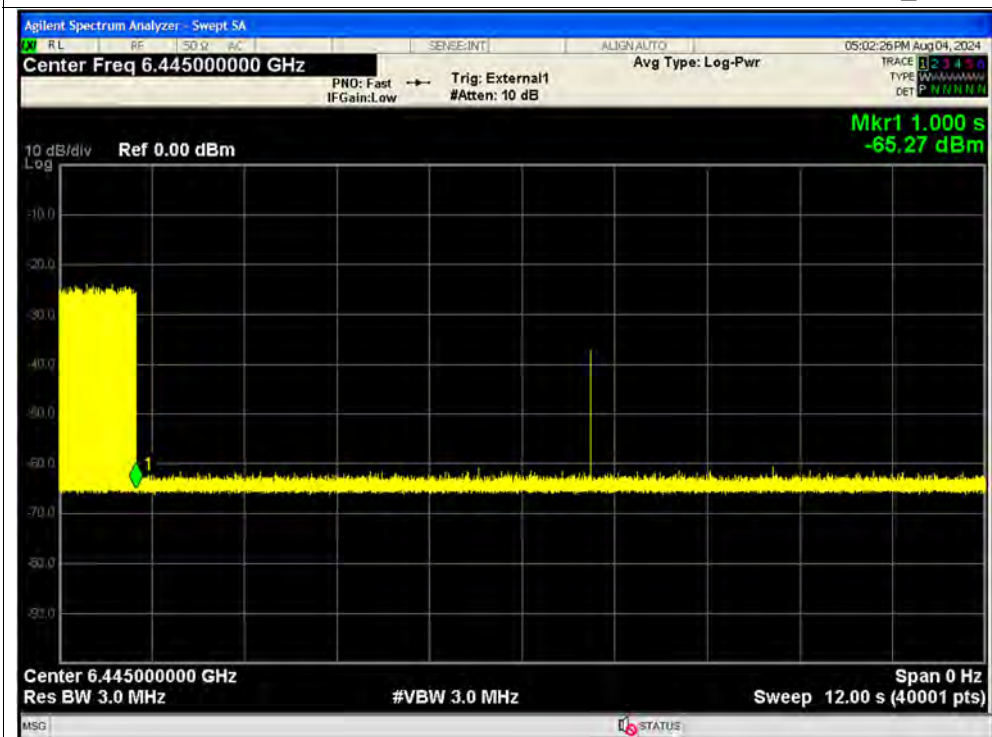




Contention Based Protocol NVNT ax40 6445MHz Interfere 6430 MHz_3

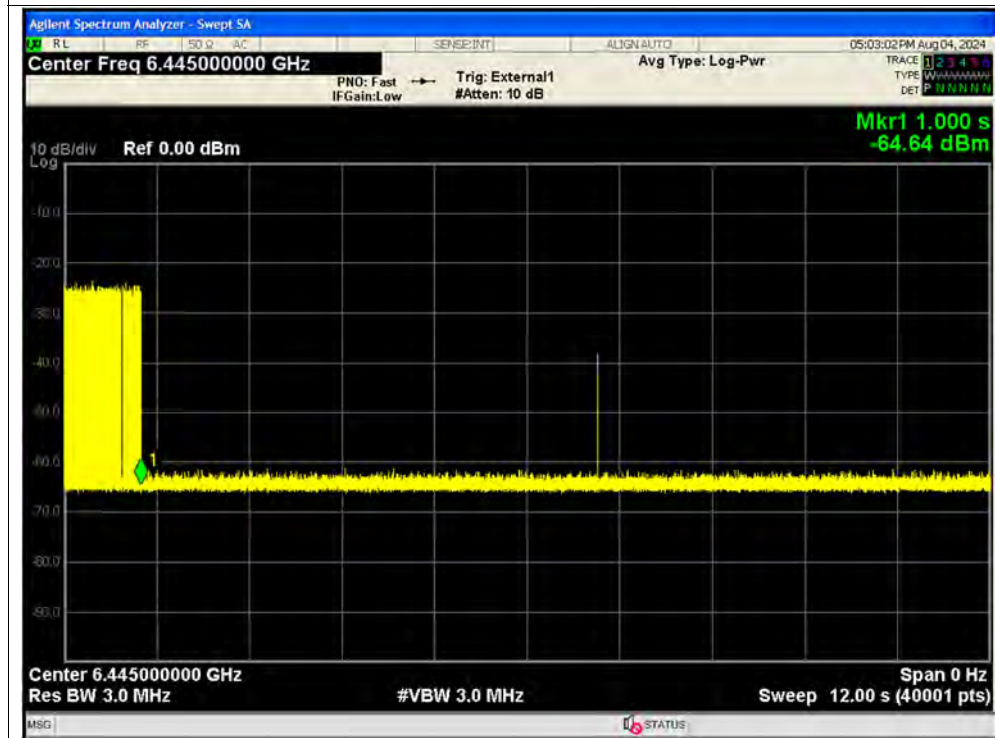


Contention Based Protocol NVNT ax40 6445MHz Interfere 6430 MHz_4

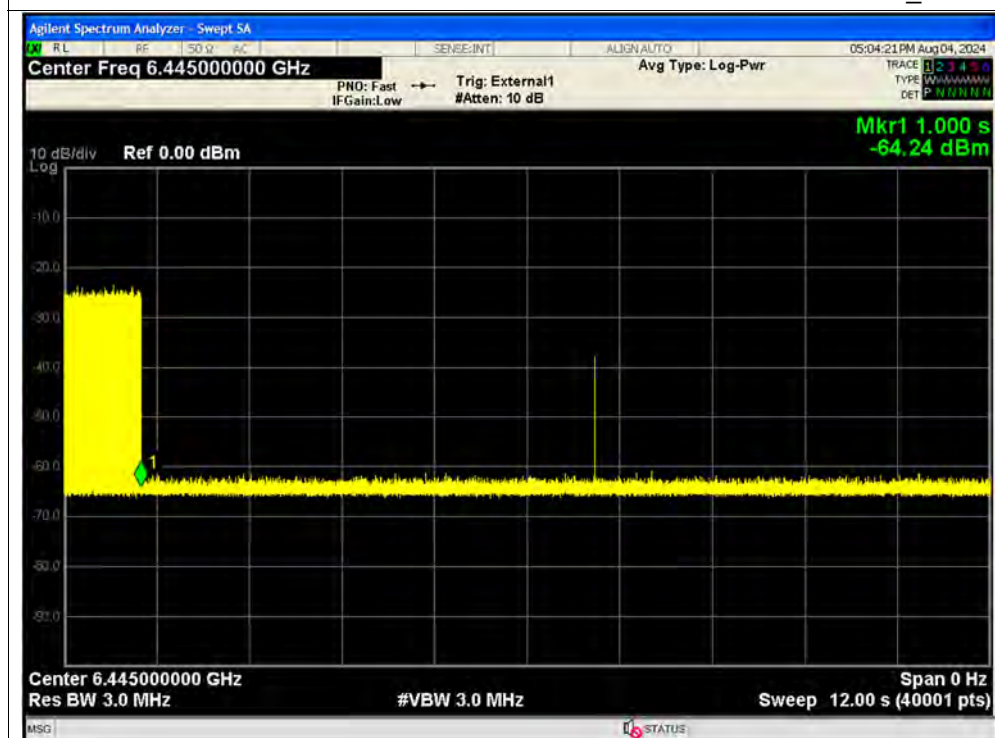



Contention Based Protocol NVNT ax40 6445MHz Interfere 6430 MHz_5

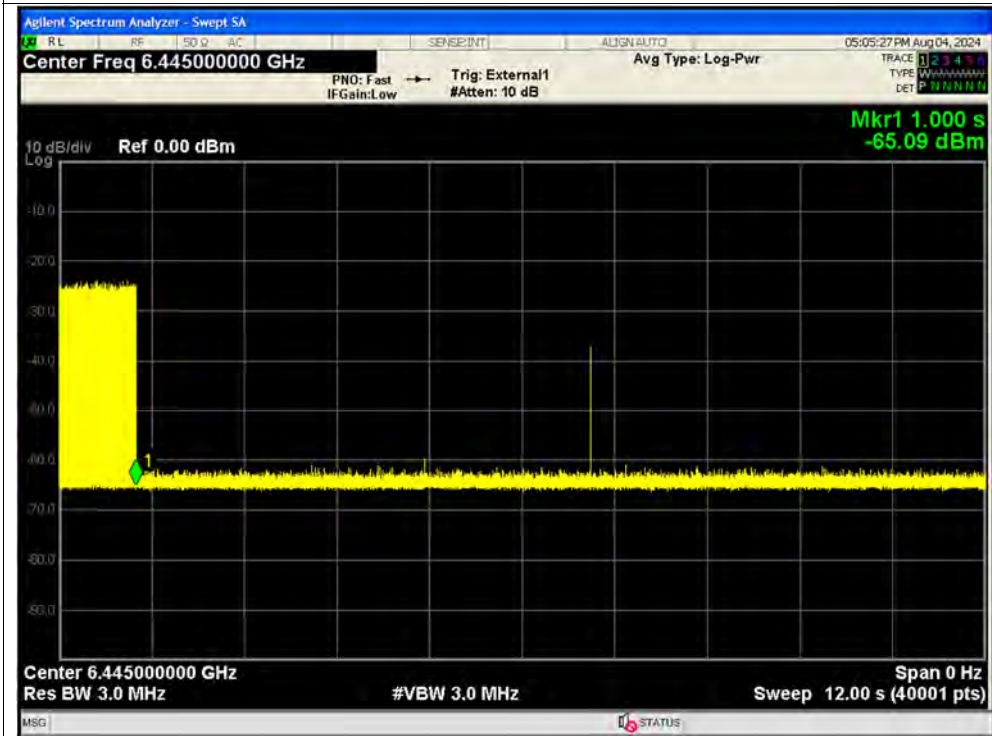

Contention Based Protocol NVNT ax40 6445MHz Interfere 6430 MHz_6

