+ %% ,QVWUXFWLRQ PDQXDO

AMPLIFY YOUR EXPERIENCE

Headphone Instruction manual GH2039BGB

Specification

Speaker: Ø50mm
Impedance: 32±15%Ω
Sensitivity: 111±3dB
Frequency response: 20Hz to 20kHz
Microphone: Ø6.0x5.0mm
Microphone sensitivity: -42±3dB
Wireless distance: 10m
Plug BT+3.5mm Audio cable
Ithium battery: 1550mAh
Charging time: about 3H
Charging method: (Type-C) USB 5V
Low latency: 258ms
Size: 92*190*205mm
product weight: 341g
Continuity Play: 2.4G: 35H(No backlight), 10H(brightest backlight); Wireless: 52H(No backlight), 11H(brightest backlight)

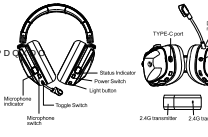

Special Features—DIY(Comes with an extra set of removable magnetic ear shells)

Operation Guide

Wired mode(3.5mm Audio cable)

1)Plug and play: Connecting the headphone to a music player with the provided dual 3.5mm audio cable, the headphone can be used as wired headphone without starting.
2)In this mode, you can't use any function of the headphone, including pause playback, volume adjustment, microphone and so on.

2.4G mode

1. Operating instructions

1) Connect the receiver to PC/PS4 or other devices, the indicator lights up and flashes.
2) Press the power button to turn on the headset, the headset power indicator blue light is always on for 1 second. (Headset power indicator flashes red/green alternately while waiting to connect After the connection is successful, the headset indicator blinks green once every 2 seconds.)
3) Toggle the toggle switch up and down to adjust the volume level, toggle up and down for 1.5 seconds to adjust the up and down song.
4) The microphone is on by default. To turn the microphone off, press the microphone key once (a beep will sound and the microphone indicator will turn off). To turn the microphone on, press the microphone key again (a beep will sound and the microphone indicator will turn red) **(See 2.4G UI below for specific operations)**

	Bottom/Function/Light	Function instruction	Operation	Mark
2.4G UI	Power switch	ON/OFF	ON: Long press 3s	Power indicator blue Steady on for 1 second (Voice prompt)
			OFF: Long press 3s	Power indicator Steady red for 1 second (Voice prompt)
		BT free switch	Double click	When waiting for connection(in Wireless mode, the headphone power indicator flashes red and blue alternately. After the connection is successful, the blue light of the headphone indicator blinks green once every 2 seconds (Voice prompt)
		3.5mm audio cable connection	In any mode, insert the 3.5mm audio cable into the headset, and the headset will shut down and switch to the wired mode.	
		Factory data reset	When the headset is turned off, long press the button for 8 seconds to restore factory Settings	
	Light button		1.Press and hold for 3 seconds to turn off the light. 2.Single-click switching of 9 light effects.	
	Toggle Switch	Volume+	Toggle it upward	
		Volume-	Toggle down	
		Previous	Toggle up for 1.5 seconds	The audio stream is automatically paused when the voice assistant is activated, and the audio stream is restored to the pre-activation state after the voice assistant is finished.
		Next song	Toggle down for 1.5 seconds	
		Play/Pause	Short click	
		Voice assistant	Center gear down and long press for 2 seconds to enter or exit the pairing mode(in Wireless mode)	

	Bottom/Function/Light	Function instruction	Operation	Mark
2.4G UI	Mic on/off	Mic on/off	Short click	Red light on when open, indicator light off when closed(Voice prompt)
	TYPE-C	Charging	Plug the USB-A Type-C Charging cable into the Type-C Charging jack on the right of the headset to charge.	Bright red light
		Finished charging	Unplug the USB-A to Type-C charging cable.	The indicator light is green
	Patterns of intelligence		When the voltage is lower than 3.3V, give a low power warning and turn off the headphone light (It can be turned on manually). The power indicator changes from blue and green to red and blinks every two seconds. When the voltage is lower than 3.1V, the earphone automatically shuts down	The power indicator changes from blue or green to red and blinks every 2 seconds
			The earphone will automatically shut down after 5 minutes without connecting to any device.	The power indicator is red for 1 second

Wireless mode

1) Turn on the headphone, double-click the power switch to Wireless mode, and you can hear the voice prompt "Wireless mode". When the headphone enter the pairing mode, the headphone power indicator flashes red and blue alternately.
2) This headphone is compatible with most of smart phones and other devices that support Wireless headphone protocol.
3) Turn on your phone and enter Wireless mode. Then search "**GH+2039BG**" for pairing.
4) Click " " + Note: pairing. After successful pairing, there will be a voice prompt and the blue light of the display light will flash once at an interval of 2 seconds. **(If the device have been paired before, the headphone will automatically connect with it under Wireless mode.)**

Key function

Answer an incoming call
Double click the MIC button to answer the incoming call.
Tip: As some mobile phones answer calls through their own receivers by default, please refer to your mobile phone instructions and set them on your mobile phone.

End current call
Double click the MIC button to end the current call.

Refuse to answer the phone
When there is an incoming call, press the MIC button for 1.5 seconds.

Three-way call answered call
Triple-tap the MIC button to hold the current call, answer a new call, and triple-tap again to rotate between the two calls.

Play music
1) Play/Pause: short press the toggle switch.
2) Volume+: Toggle the toggle up a bit
3) Volume-: Toggle the lever down a bit
4) Previous song: Toggle up for 1.5 seconds
5) Next song: Toggle down for 1.5 seconds **(See the Wireless UI below for details.)**

GEHA

www.geha-store.com

	Bottom/Function/Light	Function instruction	Operation	Mark
Wireless UI	Power switch	ON/OFF	ON: Long press 3s	Power indicator blue Steady on for 1 second (Voice prompt)
			OFF: Long press 3s	Power indicator Steady red for 1 second (Voice prompt)
		BT free switch	Double click	When waiting for connection(in Wireless mode, the headphone power indicator flashes red and blue alternately. After the connection is successful, the blue light of the headphone indicator blinks green once every 2 seconds (Voice prompt)
		3.5mm audio cable connection	In any mode, insert the 3.5mm audio cable into the headset, and the headset will shut down and switch to the wired mode.	
		Factory data reset	When the headset is turned off, long press the button for 8 seconds to restore factory Settings	
	Light button		1.Press and hold for 3 seconds to turn off the light. 2.Single-click switching of 9 light effects.	
	Toggle Switch	Volume+	Toggle it upward	
		Volume-	Toggle down	
		Previous	Toggle up for 1.5 seconds	The audio stream is automatically paused when the voice assistant is activated, and the audio stream is restored to the pre-activation state after the voice assistant is finished.
		Next song	Toggle down for 1.5 seconds	
		Play/Pause	Short click	
		Voice assistant	Center gear down and long press for 2 seconds to enter or exit the pairing mode(in Wireless mode)	

	Bottom/Function/Light	Function instruction	Operation	Mark
Wireless UI	Mic on/off	Mic on/off	Short click	
		Answer/ hang up phone	Double click	Red light on when open, indicator light off when closed(Voice prompt)
		Decline a call	Long press 1.5s	
		Three-way call answer/end call	Press three times	
	TYPE-C	Charging	Plug the USB-A Type-C Charging cable into the Type-C Charging jack on the right of the headset to charge.	Bright red light
		Finished charging	Unplug the USB-A to Type-C charging cable. (Device will be charging)	The indicator light is green
	Patterns of intelligence		When the voltage is lower than 3.3V, give a low power warning and turn off the headphone light (It can be turned on manually). The voice prompt will be reported once every 5 minutes. The power indicator changes from blue and green to red and blinks every two seconds. When the voltage is lower than 3.1V, the earphone automatically shuts down	The power indicator changes from blue or green to red and blinks every 2 seconds
			The earphone will automatically shut down after 5 minutes without connecting to any device.	The power indicator is red for 1 second

Warnings

1) Please follow the instruction to operate
2) PLS charge the headphone with input power below 3.3V, in order to protect the battery;
3) Please store or use the headphone in a normal temperature environment.
4) PLS keep the headphone from heat source, such as radiators, hot air regulators, stoves, or other heat generating instruments. As it is not anti-high temperature.
5) Don't jam the ports of the headphone, such as charger port, LED port and microphone etc.;
6) In order to protect your hearing and extend the headphone service life, it is not recommended to adjust the volume to the maximum level for a long time.
7) Whatever reasons damage the headphone, please feel free to contact our after-sales staff in time rather than repair by yourself. Otherwise, you will accept without after-sales service.

)&&&