



KUMI GT5 Pro+ SMART WATCH
OPERATING GUIDE

v1.1

Thank you for choosing KUMI smartwatch. This manual will give you a complete understanding of how to use the equipment. This device is mainly connected to the mobile phone through Bluetooth function, providing a variety of practical functions and services to facilitate your operation of the mobile phone, and has developed many functions for human sports and health.

This equipment is not a medical device, and the measurement data and results are only for reference, not for diagnosis and treatment.


Due to the continuous improvement, optimization and upgrade of the product, the actual operation may be slightly different from the description in this manual. Please refer to the actual operation.

Based on the principle of continuous improvement and continuous optimization, the company reserves the right to modify and improve any content and product information and functions described in the document without prior notice.

1. CHARGE AND ACTIVATE THE WATCH

Align the magnetic charging cable with the metal contact of the charging port until the charging instruction appears on the watchscreen. When the watch indicates that the battery is low, please charge it in time

The charging power input of the watch is 5V \equiv 1A, do not use a power adapter higher than 5V for charging. The device is an all-in-one machine, and the back shell and battery are not removable.

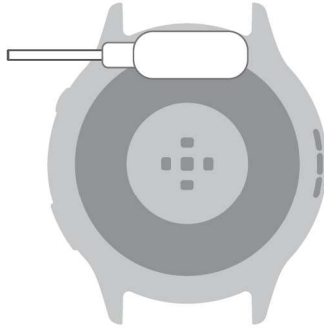

2. APP DOWNLOAD

Enter the mobile APP store and search for "KUMIWear" or scan the QR code below, follow the prompts to download and install



3.WATCH CONNECTION BINDING APP

1. APP binding:


Before binding the watch, make sure that the watch is not bound to other mobile phones. If so, please unbind the watch first

Method 1: Open APP> Device> Add Device>Start Search> Select "KUMI GT5 Pro+"

Method 2: Click the code scanning function in the upper right corner of the APP search device page to scan the QR code of the initialization interface on the watch, or slide down the dial interface, open the "Settings" interface in the control center, and enter the QR code page to complete the code scanning binding



2. Call audio & Media audio:

Slide down on the dial interface, click the icon  in the control center to open the "Call Audio and Media Audio" interface

Call audio: Used to answer and make calls (enabled by default after the watch is bound to the APP)

Media Audio: Used to play music and video sounds on the phone



4. TOUCH

Control Center



Swipe down



Shortcut keys



Swipe right




Movement data



Swipe left

Long press the screen to enter the dial selection interface, swipe left or right to switch the dial, and click once after con-firming the dial

Swipe up

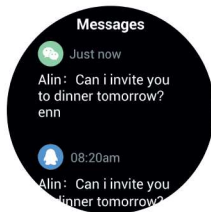

Message notification

5. FUNCTION INTRODUCTION




Dial switch

Long press for 2s on the home screen to enter the dial switch interface. Slide right and left to switch the dial for selection and click to select the dial



Control center

Function overview: brightness adjustment, settings, find phone, system information, flashlight, audio mode, do not disturb and power saving mode

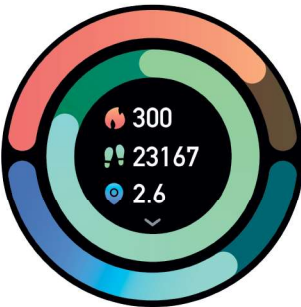

Movement data

It displays the step number, distance and calories on the same day. You can set a goal on the App, including step number distance and calories

Sports



Options for sport patterns walking, running, cycling, mountain climbing, rope skipping, football, badminton and basketball, etc. Click on the icon to start sport

* More sports modes can be added through the APP




Exercise record

The interface saves the recent 10 pieces of historical sport records. You can view the sport duration, heart rate and calories during the sport




Heart rate

Enter the interface for heart rate measurement. When the green light at the bottom is on, it will start measurement. The measurement will be completed within 40s and has a vibration reminder. If prompted for "Wear Watch Properly Please" wear the watch again

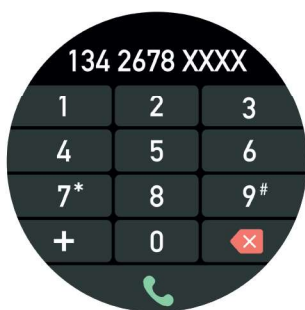

Call function

This function needs to be connected to audio Bluetooth. When entering the dial, you can enter the phone number as needed, and then dial; long press 7 and 9 on the keyboard for 2s to enter * and #

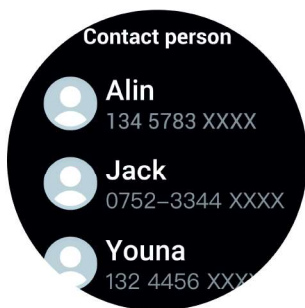

Frequent contacts

Frequent Contacts: You need to add them in the frequently used contacts column on the app side. The frequently set contacts will be automatically synced to the device, and up to 10 contacts can be added



Call records

This function can save the last 10 call records



Sleep


The interface displays the monitoring result of your sleep on the same day. The data is updated every day. Connect it to the APP and you can upload and save the data synchro-nously. The device will recalculate the data information for the new day



Blood pressure

Enter the interface for blood pressure measurement. When the green light at the bottom is on, it will start measurement. The measurement will be completed within 30~60s and has a vibration reminder


*The measurement is based on PPG technology

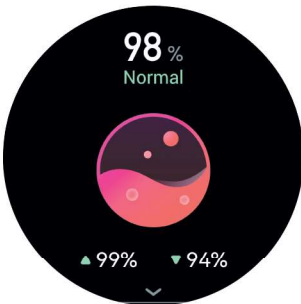

Blood oxygen

Enter the interface for blood oxygen measurement. When the green light at the bottom is on, it will start measurement. The measurement will be completed within 30~60s and has a vibration reminder


*The measurement is based on PPG technology

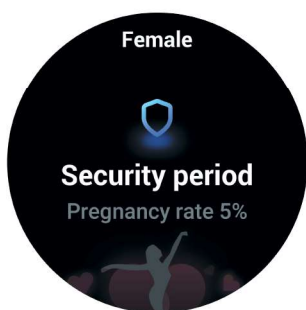

Female health

Keep the watch connected to the APP, you can open the female health reminder on the App, you can view the female health reminder information on the watch

*The measurement is based on PPG technology

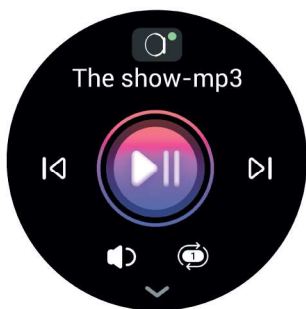

Music

Keep the watch connected to the APP, You can control the pause and start of the mobile phone music player, volume adjustment, and song switching




Weather

After you connect your watch with the APP and open the location permission, the weather interface will display the real-time temperature and weather type




Alarm clock

Keep the watch connected to the APP, you can set a single alarm clock or a cyclic alarm clock. You can set up to 5 alarm clocks

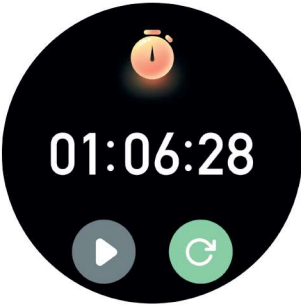


Stop watch

Click the Start button for the timing of the start. Click the pause button to timing the pause. Click the reset button to time to zero. It can save up to 99 pieces of data

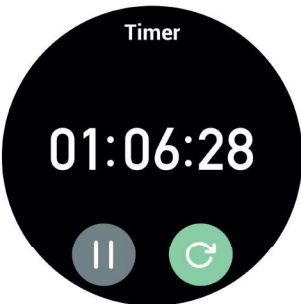

Timer

As for the timer function, the user may start quick timing through the system preset time or click the user-defined button to set the time. Click the Start button for the timing of the start. Click the pause button to timing the pause. Click the reset button to time to zero

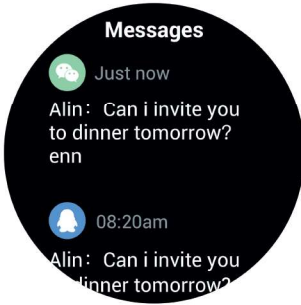

Messages

Open information push on the App and the watch can receive the corresponding message. It can save up to the last 15 pieces of messages



Find my phone

Keep the watch connected to the APP, and click "Find my phone". The bell rings on your mobile phone and the watch shows that you have successfully found your mobile phone; If the watch is not connected to the APP, the watch will indicate that it is not connected



Settings


Setting functions include screen display (dials watch, duration of screen brightening, brightness control, duration of screen brightening through palming), language, vibration strength, menu style, battery, QR code and system setting



Alipay

Scan the code with mobile Alipay binding, click "consent agreement and binding" after successful binding, double-click the Alipay payment code display after the home screen, can also unbinding

Note: This function is only available in Chinese

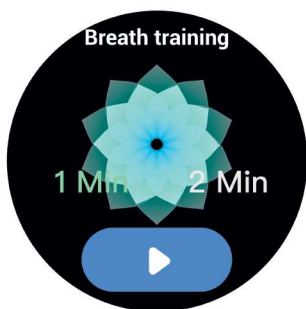

Breath training

During Breath training, there were 1 min and 2 min options. The user clicks on the corresponding duration for breathing training. After clicking to start, follow the icon to zoom in and inhale, shrink and exhale



Drinking reminder

You can open this function through [device > drinking reminder] on the App. After it is opened, you can set the start time, end time and reminder interval



Sedentary reminder


You can open this function through [device>sedentary reminder]on the App After it is opened,you can set the start time,end time and the period for Do Not Disturb

NFC

Use the watch as a smart access card.Enter the administrator mode of the smart door lock, and enter/delete the NFC sensing area on the watch screen near the door lock according to the instructions or the voice prompt of the door lock(Some door locks do not support third-party key cards);Community access control please go to the community management office for door card entry

**Currently, only the unencrypted 13.56MHz key card on the market is supported*



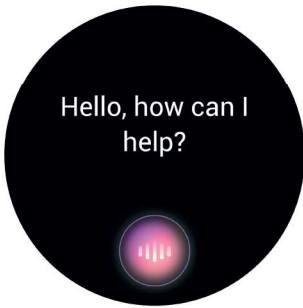

Voice assistant

After connect with voice bluetooth successfully,click the voice assistant in watch menu,input voice commands according to prompts.You can control your phone through the voice assistant.



Collection code

Save the collection codes of third-party payment tools such as QQ, WeChat, Alipay and Paypal to the watch through the mobile APP, and click the corresponding icon to display the corresponding collection code for collection



Business card



Save the QR code of QQ, WeChat, Facebook, WhatsApp, Twitter, Skype, Line and Instagram to your watch via mobile APP, and click the corresponding icon to display the corresponding QR code to add friends

6.FREQUENTLY ASKED QUESTIONS

The watch does not turn on

- 1) Check whether the power is sufficient, use the charging cable to charge the watch, and the charging voltage shall not be higher than 5V;
- 2) Check whether the watch screen is damaged by external forces, such as accidental drop;
- 3) Check whether the watch has water, damp caused by internal circuit short circuit can not be turned on.

Bluetooth not connected or unable to connect

- 1) Slide down the dial interface to enter the control center, and check whether the icon   is red and not connected;
- 2) Check whether the Bluetooth of the mobile phone is enabled normally and whether the APP has obtained the location location permission;
- 3) Try restarting the device or performing a factory reset.

Why Android phones are easy to disconnect

APP must be running in the background, Bluetooth will not be automatically disconnected, but the Android phone system memory management will force the APP to close, we need to manually close the phone system power saving mode or add the APP to the system management green background, APP will

not be forced to close, specific settings please refer to the phone manual or consult the official customer service.

For more frequently asked questions, please check the App [My>FAQ] or send an email to our customer service email service@kumi.top

7.SAFETY WARNING

Please read all safety information before using this product to ensure safe and proper use.

1. In case of equipment failure or factory reset, if you do not keep the backup file safely, you will not be able to recover the previous data. Be sure to back up all important data stored on the equipment and keep it in a safe place;
2. When using a power-intensive application or using an application on the device for a long time, the device feels hot to the touch, which is normal and does not affect the use or performance of the device;
3. If the touch screen is equipped with protective film or the hands are not clean, or the touch screen reacts slowly and may not work properly, if the touch screen is scratched or damaged, there may be a risk of water ingress and moisture;
4. This product is not suitable for children under the age of 14 to use alone;

5. All packaging materials (such as tape, plastic bags, plastic sheets, labels, binding lines, etc.) and small parts of the machine should not be touched by children under 3 years old to avoid suffocation risk.

Observe the following warnings to prevent personal injury or damage to equipment:

1. Do not allow children or animals to chew or swallow the equipment and accessories;
2. Do not poke eyes, ears or other body parts with the device or put the device in your mouth;
3. Do not store the equipment in an overheated or overcooled environment. It is recommended to use it in an environment with a temperature between -5°C and 40°C ;
4. Do not store equipment near or inside heaters, microwave ovens, cooking equipment, or pressure vessels;
5. Do not drop, squeeze, impact or scratch the equipment;
6. Do not use the equipment in thunderstorm weather;
7. Please keep the equipment dry and clean;
8. Please observe all safety warnings and regulations regarding the use of mobile devices while driving;
9. Do not wear or use this product while charging.

8.LEGAL STATEMENT

- Copyright © KUMI Technology Co., Ltd. 2023 All rights reserved.
- The company has the right to modify any information in this manual at any time without notifying any third party, and does not assume any responsibility to the third party for such modification;
- Without the written consent of the company, any unit or individual shall not extract, copy or use the contents of this manual in any other way, and shall not transmit it in any form;
- This guide is for reference only and does not constitute any form of commitment. Products (including but not limited to color, size screen display, etc.) shall be subject to the actual product;
- Due to the upgrade of software version, the contents introduced in this guide are for reference only. Please refer to the actual product;
- This equipment is not a medical device. The measurement data and results are for reference only and should not be used as the basis for medical diagnosis. If you feel uncomfortable, please consult a medical institution.

9.FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

FCC ID: 2A2L4-GT5PRO