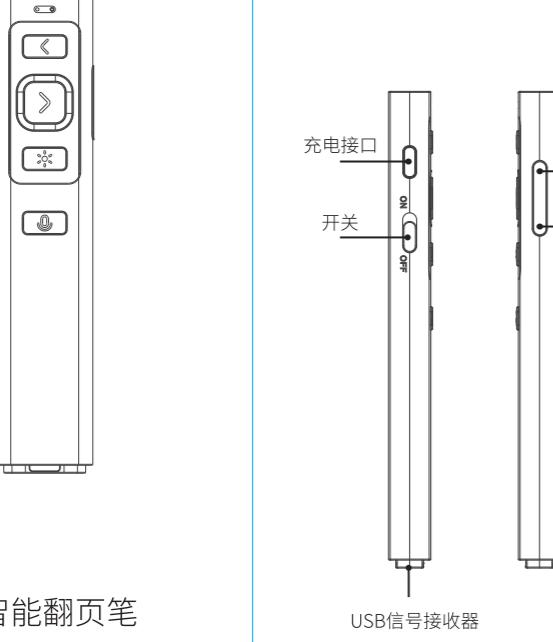
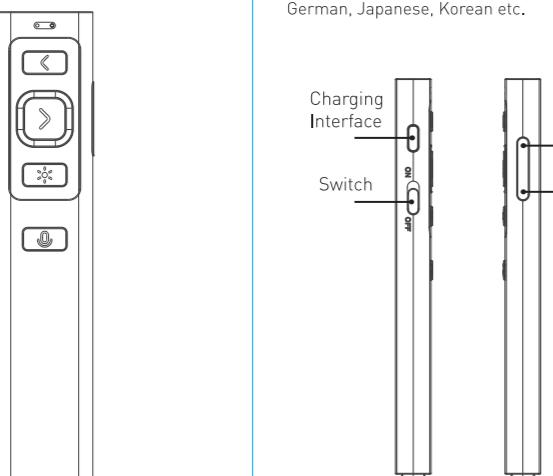
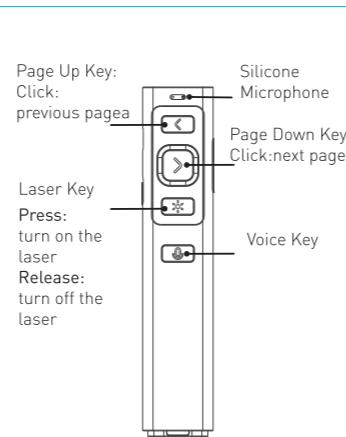
 <p>AI智能翻页笔</p>	<p>产品介绍 AI智能翻页笔是一款内置语音输入、语音翻译、同屏字幕、PPT翻页、激光的人工智能翻页笔。支持普通话、粤语、英语、法语、意大利语、德语、日语、韩语等112国语言翻译。</p>  <p>语音键： 单击：开启关闭同屏字幕 按住：可以控制电脑光标 松开：关闭控制电脑光标</p> <p>硅麦 翻页上键 翻页下键 激光键 语音键 翻页下键： 单击：上一页 激光键： 按住：开启激光 松开：关闭激光</p> <p>硬件安装 1、从翻页笔底部取出USB信号接收器，插入在设备（台式电脑 / 笔记本电脑）的USB接口。 2、打开翻页笔开关，上电绿灯亮2秒，USB信号接收器自动识别安装硬件驱动，安装完成后长按语音键同时移动翻页笔，可同步移动电脑光标。</p>	<p>3、翻页笔与USB信号接收器出厂时已默认匹配，如遇翻页笔未能识别，请重新匹配后再试：先将USB信号接收器插入设备，打开翻页笔的电源，靠近USB信号接收器10cm的距离内，同时按住翻页上键和翻页下键3秒钟进入配对模式，翻页笔和USB信号接收器将会重新自动匹配。</p> <p>【注意】 如遇翻页笔使用失灵，可能是电池没电导致，建议您充电。</p> <p>软件安装 1、在windows系统下同时按住语音键和翻页下键5秒以上将自动打开下载官网网址界面，选择对应系统的软件版本进行下载安装。 2、下载后按提示进行安装，完成安装即可正常运行。</p> <p>注意事项 1、目前翻页笔支持WIN7、WIN8、WIN10系统使用。【系统支持】 2、在同一电脑更换翻页笔时，硬件驱动安装好后，直接双击软件程序图标即可正常使用翻页笔。 3、翻页笔后端程序实时更新，如翻页笔使用过程中发生错误或其他情况，可卸载电脑软件程序，重新安装软件程序，即可使用。【软件更新】 4、翻页笔软件下载官网网址：【下载网址】https://www.aipen.dosmono.com</p>	<p>5、软件下载完成安装完成后请运行程序。当屏幕右下角翻页笔图标正常显示时，表示程序正常运行，当程序提示“请插入USB信号接收器”时 (1) 请检查USB接收器是否插好 (2) 请尝试重新运行应用程序</p> <p>6、目前语音输入、语音翻译支持：英语、繁体中文、日语、韩语、俄语、法语、西班牙语、阿拉伯语、葡萄牙语、保加利亚语、捷克语、丹麦语、德语、希腊语、爱沙尼亚语、芬兰语、匈牙利语、印尼语、意大利语、拉丁语、荷兰语、罗马尼亚语、斯洛伐尼亚语、波兰语、瑞典语、泰语、马来语、越南语等112种语言。【语音翻译】</p> <p>7、如安装程序被安全软件（360或者金山毒霸等）阻止安装或者误拦截，请关闭杀毒软件后重新安装，建议您将安装程序加入白名单。【安装问题】</p> <p>操作说明 AI智能翻页笔支持Windows系统电脑上使用。</p> <p>同屏字幕 打开应用，选择语音识别语言，单击翻页笔语音键，弹出同屏浮层，可以通过语音输入实现同屏字幕显示。</p> <p>PPT翻页 打开电脑上的PPT，在幻灯片模式下，可以通过翻页上键、翻页下键上下翻页PPT。</p>	<p>激光 按下激光键，翻页笔可以发出激光，松开激光键关闭激光。</p> <p>光标移动 长按语音键，然后移动翻页笔，可以实现控制电脑上光标移动。</p> <p>注： 本产品出货时不配电源适配器，消费者若使用电源适配器供电，则应购买配套使用获得CCC认证并满足标准要求的电源适配器。电池不得暴露在诸如日照、火烤或类似过热环境中。</p> <p>警告： 禁止拆解、撞击、挤压或投入火中。若出现严重鼓胀，请勿继续使用。请勿置于高温环境中，电池浸水后禁止使用。仅可使用专用充电器。</p>	<p>感谢您购买AI智能翻页笔！为了更好的向您提供快捷的服务，请您详细填写用户信息，感谢您的支持！</p> <table border="1" data-bbox="2922 436 3129 1245"> <tr> <td colspan="2">客户信息</td> </tr> <tr> <td>客户姓名</td> <td>购买日期</td> </tr> <tr> <td>产品型号</td> <td>联系电话</td> </tr> <tr> <td>联系地址</td> <td>经销商/代理商（章）</td> </tr> <tr> <td colspan="2">保修记录</td> </tr> <tr> <td>保修日期</td> <td>备注</td> </tr> </table> <p>合格证</p>	客户信息		客户姓名	购买日期	产品型号	联系电话	联系地址	经销商/代理商（章）	保修记录		保修日期	备注
客户信息																	
客户姓名	购买日期																
产品型号	联系电话																
联系地址	经销商/代理商（章）																
保修记录																	
保修日期	备注																

 <p>AI Laser Pointer</p>  <p>Product Introduction Dosmono's AI laser pointer has built-in voice input, voice translation, same-screen subtitles, and PPT page turning, laser. Support 112 languages translation including Mandarin, Cantonese, English, French, Italian, German, Japanese, Korean etc.</p> <p>Charging Interface Switch USB Signal Receiver</p> <p>*Voice key Click: turn on or off the same-screen subtitles. Press and hold: you can control the computer cursor. Release: turn off the control of the computer cursor.</p>	<p>Product Introduction Dosmono's AI laser pointer has built-in voice input, voice translation, same-screen subtitles, and PPT page turning, laser. Support 112 languages translation including Mandarin, Cantonese, English, French, Italian, German, Japanese, Korean etc.</p>  <p>Page Up Key: Click: previous page Page Down Key: Click: next page Laser Key: Press: turn on the laser Release: turn off the laser Voice Key</p> <p>Hardware Installation 1. Take out the USB signal receiver from the bottom of the laser pointer and insert it into the USB port of the device (desktop computer/notebook computer). 2. Turn on the page-turning pen switch, and the green light will be on for 2 seconds after power-on. The USB signal receiver automatically recognizes and installs the hardware driver. After the installation is complete, long press the voice button and move the laser pointer at the same time to move the computer cursor synchronously. 3. The page turning pen and the USB signal receiver are matched by default when they leave the factory. If the laser pointer fails to recognize, please re-match and try again: first plug the USB signal</p> <p>receiver into the device. Turn on the power of the laser pointer and be within 10cm of the USB signal receiver. Press and hold the page up button and page down button at the same time for 3 seconds to enter the pairing mode. The laser pointer and the USB signal receiver will automatically match again.</p> <p>ATTENTION If the laser pointer does not work properly, it may be caused by a dead battery. It is recommended that you charge it.</p> <p>Software Installation 1. Under Windows system, press and hold the voice button and the page down button at the same time for more than 5 seconds to automatically open the download website interface. Select the software version of the corresponding system to download and install; 2. Follow the prompts to install after downloading. After the installation is complete, it can run normally.</p> <p>Precautions 1.The current AI laser pointer supports WIN7, WIN8, and WIN10 systems. [System Support] 2.When replacing the laser pointer on the same computer, after the hardware driver is installed, directly double-click the software program icon to use the page turning pen normally. 3.The back-end program of the laser pointer is updated in real time. If an error or other performance occurs during the use of the laser pointer, you can uninstall the computer software program, reinstall the software program, then you can use it. [Software Update]</p> <p>Instructions AI laser pointer supports use on Windows system computers.</p> <p>On-screen Subtitles Open the application, select the voice recognition language, click the laser pointer voice button, the same screen</p>	<p>4.The official website of the AI laser pointer software download website: [Download URL] https://www.aipen.dosmono.com</p> <p>5.After the software download is complete, please run the program after the installation is complete. When the icon of laser pointer in the lower right corner of the screen is displayed normally, it's indicates that the program is running normally. When the program prompts "Please insert the USB signal receiver", [1] Please check whether the USB receiver is plugged in [2] Please try to run the application again</p> <p>6.Currently voice input and voice translation support 112 languages including: English, Traditional Chinese, Japanese, Korean, Russian, French, Spanish, Arabic, Portuguese, Bulgarian, Czech, Danish, German, Greek, Estonian, Finnish, Hungarian, Indonesian, Italian, Latin, Dutch, Romanian, Slovenian, Polish, Swedish, Thai, Malay, Vietnamese, etc. [Voice translation]</p> <p>7.If the installation program is blocked by security software (360 or Kingssoft Internet Security, etc.) or blocked by mistake, please close the antivirus software and install it again. It is recommended that you add the installer to the whitelist. [Installation Problem]</p> <p>Laser Press the laser button, the laser pointer can emit laser, release the laser button to turn off the laser.</p> <p>Cursor Movement Long press the voice button and then move the laser pointer to control the cursor movement on the computer</p> <p>Note: This product is shipped without a power adapter. If consumers use a power adapter to supply power, they should purchase a power adapter that has been certified [CCC certified] and meets the standard requirements. The battery must not be exposed to sunlight, fire or similar overheating environments.</p> <p>WARNING! It is forbidden to disassemble, hit, squeeze or throw into fire. If severe swelling occurs, do not continue to use it. Do not place it in a high temperature environment. Do not use the battery after it is immersed in water. Only dedicated chargers can be used.</p>	<p>floating layer will pop up, and the same screen subtitles can be displayed through voice input.</p> <p>PPT Page Turning Open the PPT on the computer, in the slideshow mode, you can turn the PPT page up and down through the page up key and the page down key</p> <p>Customer Information</p> <table border="1" data-bbox="2922 1477 3129 2286"> <tr> <td>Customer Name</td> <td>Date</td> </tr> <tr> <td>Product Model</td> <td>Contact Number</td> </tr> <tr> <td>Contact Address</td> <td>Distributors/Agents (Stamp, if have)</td> </tr> <tr> <td>Warranty Record</td> <td>Remarks</td> </tr> <tr> <td>Warranty Date</td> <td></td> </tr> </table> <p>WARRANTY CARD</p> <p>Thank you for purchasing Dosmono AI laser pointer! In order to better provide you with fast service, please fill user information in detail, thank you for your support!</p>	Customer Name	Date	Product Model	Contact Number	Contact Address	Distributors/Agents (Stamp, if have)	Warranty Record	Remarks	Warranty Date		<p>WARRANTY CARD</p> <p>感谢您购买AI激光笔！为了更好的向您提供快捷的服务，请您详细填写用户信息，感谢您的支持！</p> <table border="1" data-bbox="2922 1477 3129 2286"> <tr> <td>Customer Information</td> </tr> <tr> <td>Customer Name</td> <td>Date</td> </tr> <tr> <td>Product Model</td> <td>Contact Number</td> </tr> <tr> <td>Contact Address</td> <td>Distributors/Agents (Stamp, if have)</td> </tr> <tr> <td>Warranty Record</td> <td>Remarks</td> </tr> <tr> <td>Warranty Date</td> <td></td> </tr> </table> <p>合格证</p>	Customer Information	Customer Name	Date	Product Model	Contact Number	Contact Address	Distributors/Agents (Stamp, if have)	Warranty Record	Remarks	Warranty Date	
Customer Name	Date																								
Product Model	Contact Number																								
Contact Address	Distributors/Agents (Stamp, if have)																								
Warranty Record	Remarks																								
Warranty Date																									
Customer Information																									
Customer Name	Date																								
Product Model	Contact Number																								
Contact Address	Distributors/Agents (Stamp, if have)																								
Warranty Record	Remarks																								
Warranty Date																									

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

