

Instruction Manual

Folded Size: 6”H.x4.25”W. / 152mmH.x108mmW.
Sheet Size: 6”H.x8.5”W. / 152mmH.x216mmW.

Please read this manual before first usage. If you have any issues while using our product, feel free to contact us for after sale service. We will take care of your issue as seen as possible.

©2022 MiLife Health, LLC. 715 W. Park Ave., Unit 107 Oakhurst, NJ 07755
Phone: 732.720.0210 Option 3 for Customer Service
ALL RIGHTS RESERVED. All designs, logos and images are the exclusive property of MiLife Health. This image contains material protected under International and Federal Copyright Laws and Treaties. Any unauthorized reprint or use of this material is prohibited. No part of the image may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or by any information storage and retrieval system without express written permission from MiLife Health.
Products distributed by MiLife Health, LLC. As part of our commitment to excellence in our products, MiLife Health routinely improve the designs, materials or production methods of its existing products. Because it is impractical to publicize all changes in every product, we reserve the right to make such changes without notice.
U.S. AND FOREIGN PATENTS PENDING.
The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth® SIG, Inc. and any use of such marks is under license. Other trademarks and trade names are those of their respective owners.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Made in China



MLB-100-ORB

Bluetooth®
LED
COLOR CHANGING
ORB




INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE
PLEASE CHARGE SPEAKER 100% BEFORE USE

K

DieCut

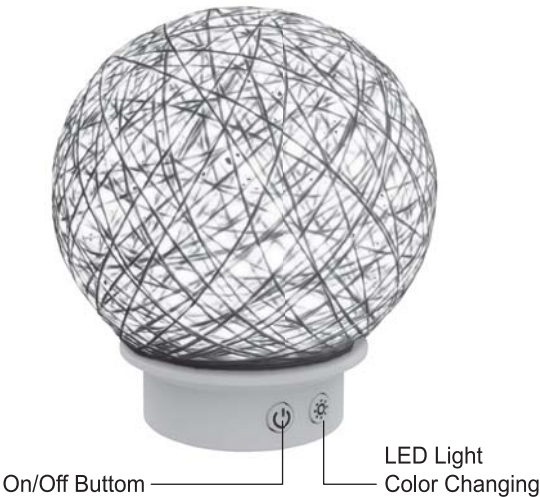

Functions Buttons:

Long press for Power ON/OFF, short press for Music Play / Pause
Click for the LED lights change the light status.

Bluetooth connection:

Enable Bluetooth search mode on your mobile device and search for pairing name “MLB-100-ORB” and select it on your mobile phone. After connected successfully, you can play the music in your Bluetooth device with this speaker.

LED light operation:

3 patterns: quick flash, gradual change, normal (7 colors changeable).
Press each time to change the LED effect.

TWS mode:

(Pair two ORB MLB-100-ORB Speakers together for Surround Sound)

True Wireless Stereo mode - Long press light button can go into TWS mode (you need a pair of same speakers for TWS mode).

Accessories:

USB cable x1, User manual x1, Speaker x1

Safety notice:

Read the following recommendations before using this Bluetooth speaker:

1. Do not place in direct sunlight or a place that it can overheat
2. Do not expose speaker to extreme cold environment
3. Dropping the speaker, may cause damage

Specifications:

Materials	Plastic
Bluetooth	JL 5.0
Transmission distance	32 feet
Speaker	3W/4Ω
Speaker size	2"
Amplifier	2", 3W/4Ω
Microphone	N
Media slots	Micro USB
Battery	3.7V/600mAh
Play time	Up to 6 hours (none max volume)
Product size	5" x 5" x 6"
Product weight	0.3LBS

K

DieCut

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.