Quick Start Guide



Introduction

Thank you for your choosing the new Tablet PC.

This guide serves to enable users to get to know and familiar with our product as soon as possible. Here we have made a brief introduction to the key layout and definitions in figures and words.


Contents

1.	Precautions before Use	03
Ш.	Key Layout and Definitions	04
III.	. Key Descriptions and Applications	05
IV.	. Introduction to Desktop	06
	1.Windows 10 Start Screen	06
	2.Apps introduction	08
	3.Start menu	10
	4.Multitasking operating interface	12
٧	. Basic Operations	12
	1. Sleep, Restart, and Shutdown	12

I Precautions before Use

- This production is suitable for use in non-tropic areas below 2,000 meters, and the mark in the nameplate indicates the product is suitable for use in non-tropic areas.
- 2. Prevent the Tablet PC from falling to the ground or being strongly impacted otherwise.
- Do not use it in the long term in any environment where the air is too cold, too hot (<35°C), too humid or with too much dust. Do not expose the Tablet PC to sunlight.
- 4. Avoid using it in the strong magnetic and strong static environment as much as possible.
- Once any water or other liquid splashes onto the Tablet PC, close it immediately and do not use it until it dries out
- 6. Do not clean the Tablet PC with any detergent containing chemical element or other liquid to avoid causing damage due to corrosion and becoming damp. If cleaning is really necessary, clean it with dry soft cloth tissue paper.
- 7. Our company shall not bear any and all responsibilities for loss or deletion of material inside the machine caused due to abnormal software and hardware operation, maintenance or any other accident.
- 8. Please back up your important material at any time to avoid loss.
- Please do not disassemble the Tablet PC by yourself; otherwise you will lose the right to warranty.
- Replacement with incorrect type batteries may cause explosion. Make sure to use original batteries.

II. Key Layout and Definitions

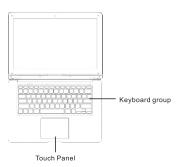



-Page4-

VI Introduction to Desktop

 Windows 10 start image: On the start screen, you can see many programs fixed in the image. These application programs are displayed in the form of "magnet". As long as you click them, you can easily visit them.

You need to log on your Microsoft account before the application program completely runs.



2. Introduction to app Interface

Besides the application programs already fixed on the start screen, you can also start other application programs in all application programs, such as other software application programs attached to the Tablet PC.





-Page7-

If you want to fix more application programs on the start interface or taskbar, see the operation in the figure below, (1) Click the properties icon(2) Right-Clicking the application (3) Click the Pin to start or pin to taskbar, as follow:



Conversely, if you want to cancel or delete a certain application in the start screen or taskbar, (1) Right-Clicking the application, (2) Click the "Unpin from Start" or "Unpin this program from taskbar"





-Page9-

3. Start Menu

Under PC mode, press Start ion, Start Menu will display, including: Start, Device, Setup, Share, and Search Program.



Usually: File Explorer, Settings, Power, and All apps



Can Sleep/Shut down/Restart the Tablet PC



Can let you search the files and application programs in the Tablet PC.



Can let you set up the Table PC.



Can scan more apps

Search menu



Action Center



SetupMenu



Action Center is a notification center also allows for quick settings like Tablet / PC mode, Wi-Fi, Bluetooth etc.

4. Multitasking operating interface


If you Click the Task View, the running applications will be display. We can enter the application, also can be deleted.



V Basic Operations

1. Sleep, Shut down and Restart



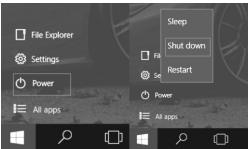

-Page13-

Guarantee

User File

Useer Name			Buying Date	
Address			Telephone	
Dealer Name			Model NO.	
Commodity name			Odd Numbers	

Guaranteeltem

- 1.7 days upon date of purchase if there is function ptobiem, we should offer theanme item subject to good and packing maintain perfect
- 2.1year upon date of purchase, we will guarantee to keep the goods in repair. (Not including fittings)
- 3. Guarantee service is subject to normally using.
- 4.All of damage by man-made(tear open the housing,tear off the sticker, unnormally using),or losing this card,we will not guarantee.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This Nbook meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: LAP001 (FCC ID: 2A8TT-LAP) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for when properly use on the body is 0.599W/kg. This device was tested for typical body-worn operations with the back of the Notebook kept 0mm from the body.