

Goji Play 2



User Guide
&
Information

Hardware Setup:

- Remove the controller from the baton
- Flip the controller over so the back is visible
- Remove the pull tab



Please note: Do not throw away the batons that came with your controllers. You can use these batons - with the controllers attached - when exercising with certain types of cardio equipment (e.g., treadmills)

Goji Play 2 Setup:



[Not a user? Create Account](#)


- Download Goji Play 2
(Apple App Store, Google Play Store, or Amazon Appstore)
- Open Goji Play 2 and create a new account (or skip this step)
- If you already have an account with Goji Play, just log in!

Controller Connection:

- Select Version 2.0 from the menu to start the connection process
- Press the Club on the Left Controller
- Press the Heart on the Right Controller



Mounted Forward

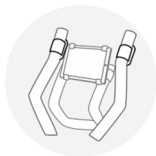

Mounted Reverse

Connected!



- Attach your controllers to the Machine or Batons
- Choose which method you will be using the controllers
- Note: This can be changed later in the preferences.

Light Indicators:


- The light off indicates the controller is currently off
- A slow flashing light indicates that the device is trying to connect



- A solid light indicates the controller has connected
- Once connected, the light will eventually turn off
- A fast flashing light indicates a low battery for the controller

Games!

Download any or even all of these great titles!

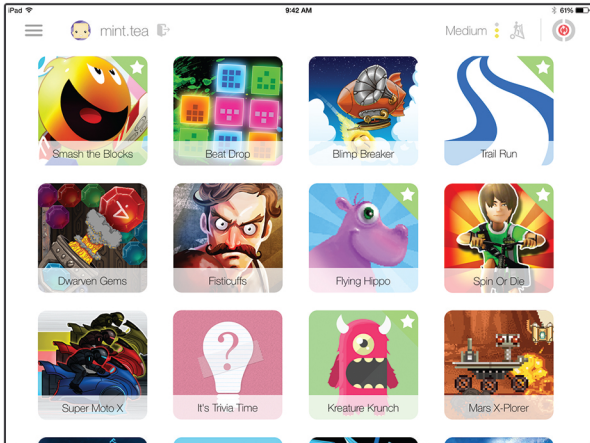

FCC Compliance Statement: This device complies with Part 15 of the FCC rules. Operation is subjected to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC Compliance Statement: This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux CNR exemptes de licence d'Industrie Canada . Son fonctionnement est soumis aux deux conditions suivantes :

- (1) Ce dispositif ne peut causer d'interférences ; et
- (2) Ce dispositif doit accepter toute interférence , y compris les interférences qui peuvent causer un mauvais fonctionnement de l'appareil.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Product operating temperature: -20 oC >and< 55 oC

C E 2280

This a class B product in a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

FCC ID: 2AADEMAB1507

IC: 10974A-MAB1507

Model No.: MAB1507