

UV sanitizing wand and wireless phone charger


HG-320 | USER'S MANUAL

Specifications

Rated Input: DC5V/1A MAX
Charging Output: 5V/1A MAX
Sterilization Power: Two 0.5W UVC Lights
Maximum Power: 2.5W
Aromatherapy Power: 0.3W
UV Wavelength: 270-280nm

Package Contents: UV Sanitizing Case, USB Cable, User's Manual with Warranty Information


A Quick Look

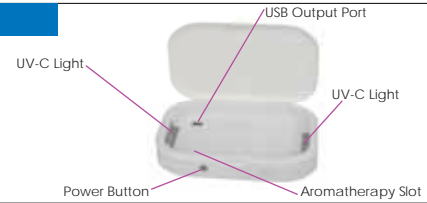

Power



1. Included with your device is a Micro USB cable. Insert the Micro USB end into the Micro USB Port on the back of your case.



2. Insert the charging cable's USB plug into the USB port of a computer or suitable USB charging adapter.

UV Sterilization



1. Place the device you wish to sterilize inside your case and close the cover so that it is securely shut.

2. Your case has two sterilization modes.

--Press and hold the power button for 3 SECONDS for a standard 3 minute sterilization. Your case will make a beeping noise when you press and hold the button for 3 seconds at which time you can let go of the power button.

The LED indicator light will turn blue to indicate that it has begun sterilizing its contents.

--Press and hold the power button for 5 SECONDS for a more thorough 5 minute sterilization.

You will hear a beeping sound after 3 seconds. Continue holding the power button until you hear a second beeping sound and then let go of the power button. The LED indicator light will turn blue to indicate that it has begun sterilizing its contents.

When the 3 minutes or 5 minute sterilization process is complete, you will hear a continuous beeping sound and the LED indicator light will turn off. Press the power button again for approximately 2-3 seconds to power off your case.

Additional Features



1. Plug your phone's charging cable into your case's USB Output port and you can charge your phone.



2. In the aroma therapy slot there is a small piece of foam. Add a few drops (no more than 3-4 recommended) of your favorite essential oil on to this foam, and your case will emit a fragrant odor.

Important Safety Precautions

When using your UV Sanitizing Case, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR CASE.
2. Do not use your case near water. Clean using a dry or slightly moist cloth.
3. Do not place your case on any wet surfaces.
4. Do not allow children or the infirm to play with your case without adult supervision.
5. Do not expose your case to excessive heat, flames or fire.
6. Always press all buttons carefully. Do not manhandle your case.
7. Make sure that your case is closed securely before sterilizing.
8. Do not expose your case to temperatures above 40°C. Keep out of direct sunlight.
9. Do not attempt to repair this product yourself. Contact a qualified service center if your case is in need of service.
10. Do not drop, puncture or expose your case to excessive trauma.
11. Your case is not intended for commercial use.
12. Please recycle or dispose of your case properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of for further information.
13. Unplug this device when not in use for long periods of time.

WARNING



By the way, don't put any small living pet or plant into the machine. This product emits ultra violet (UV) light. In order to avoid potential eye and skin injury, do not look directly at the light. In addition, make sure that your skin does not come in direct contact with the light's rays.

VIVITAR

©2020 Sakar International
 195 Carter Drive
 Edison, NJ 08817
 Support: 800 592 9541
www.vivitar.com

Vivitar One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 in the U.S. or 0-800-917-4831 in the UK or visit our website at www.vivitar.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaid.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.