

Sleepace Dot

Quick Setup Guide

FCC statements:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CE0700  

01 Device Description

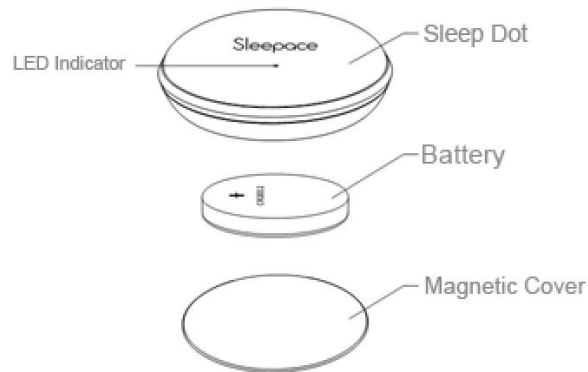


Contents:

- 1、 Sleep Dot
- 2、 Battery
- 3、 Manual
- 4、 Plectrum

02 Installation Guide

Please open the back cover with the help of the included plectrum (see reference picture), insert the battery with the positive pole facing up and close the device. If the LED is blinking green the battery is installed correctly; if the LED is blinking red, the battery is low and needs to be changed

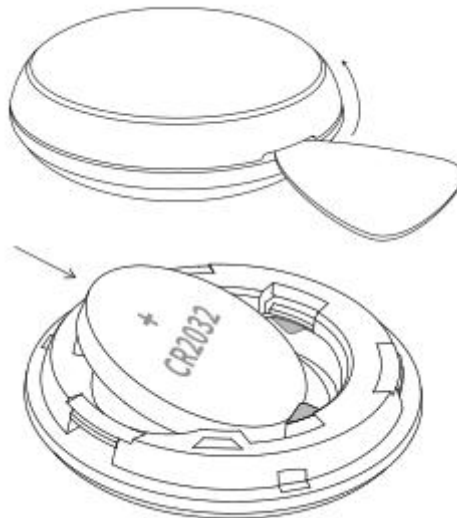

03: Instruction 使用说明

① Installation of APP

There are two ways to download the Sleepace APP:

- A、 Scan the QR Code



B. Search "Sleepace" in GooglePlay or iTunes store for download

You will need a smart phone with Bluetooth 4.0 that supports IOS7.1 or later or Android 4.3 or later.


※ Please connect Sleep Dot according to the reminders in App after downloaded

②Registration

Log into your Sleepace App and register your account following the prompts

③Position

Slide the magnetic cover off, clip your Sleep Dot to the corner of your pillowcase and snap the magnet back on

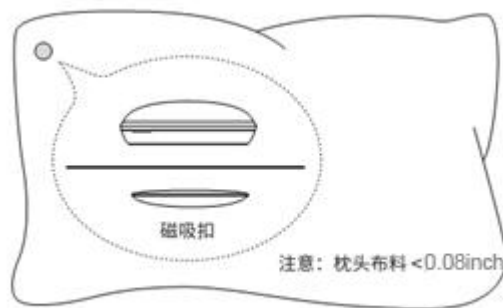

Note: The thickness of your pillowcase should be less than (0.08) inches

④Power On, Connecting and Monitoring

Tap the front or lightly shake your Sleep Dot twice to activate it. Once the green LED lights up and starts blinking, please connect your Dot via Bluetooth and set your automatic monitoring time from your Sleepace App. Please note: Do not try to connect to your Bluetooth through your phone, but do it through the App once it prompts you to do so

⑤Checking Your Daily Report

Login to your Sleepace App, tap the front or shake your Sleep Dot twice. Once the green LED starts blinking, click the "🔄" button in the top right corner of your App's monitoring page. The App will sync your data and you will be able to check your daily report

※The Sleep Dot only can store data for latest 7 days. Please make sure to sync your data at least every 6 to 7 days

04 LED Indicator

Status	Display
Power On	Green LED blinking
Connected to Bluetooth	Green LED On, will turn off once

	successfully connected
Low Battery	Red LED blinking

※The Sleepace App will alert you once the battery power is less than 10%.Please make sure to change the battery in time

05 Specifications

Model	B501
Size	1.3 x 1.3x 0.52 inches
Weight	0.53oz
Color	White
Wireless	Bluetooth 4.0
Wireless Range	33ft indoors
Battery	CR2032button battery
Battery Life	3 months
Operating System	Android4.3or later, iOS7or later

06 Safety Notice

- Do not attempt to disassemble, service or modify the product - there are no user-serviceable parts inside
- Do not place your Sleep Dot near a fan, speaker or other vibration source during monitoring, as it will affect the accuracy of your data

※This product is NOT a toy or a medical device

07 Warranty

For more information on the product, warranty or service questions, please go to www.sleepace.com

Shenzhen Medica Technology Development Co.,Ltd.

Tel:400-6910-998

Email:support@mysleepace.com

Web:www.sleepace.com

Fax:+86-755-26632411

Add: 2F Build A,Tongfang Information Harbor,No.11,

East Langshan Road,Nanshan District ,Shenzhen,R.P.China

Regulatory Conformance

Hereby, Shenzhen Medica Technology Development Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site

<http://www.mysleepace.com/>

CE 0700

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).