PETKIT

AIR MAGICUBE SMART ODOR ELIMINATOR INSTRUCTION MANUAL

English 1-24	日本語 121-144
Deutsch 25-48	繁体 145-165
En français 49 - 72	한국어 166-189
Português 73 - 96	Italiano 190-213
Español 97 - 120	

Please read the User Manual carefully before using the product and keep it properly.

CONTENT

User Notice 3
Safety Instructions 3
Packing List 4
Product Introduction 5-6
About Control Panel 7
Key Function 8
Mode Introduction 9
Quick Guide 10-13
App Access 14-16
Cleaning and Maintenance 17-18
Precautions for Use 19-20
Basic Parameter Information 21
FAQ 21-22

About Concentrated Air Purifying Refill - - - - - - - - 23-24

USER NOTICE

• Thank you for purchasing PETKIT AIR MAGICUBE SMART ODOR ELIMINATOR.

• Please read the User Manual carefully before using. Once the product is installed or used, it indicates that you have carefully read and accept the safety instructions below. Our company will neither assume any responsibility nor undertake any legal liabilities for any accidents and damages caused due to violations • The company reserves the right of explanation and revision for

SAFETY INSTRUCTIONS

*Failure to comply with the following clauses may lead to that the product cannot be normally used or occurrence of other accidental losses.


• Please use it indoors. • Please use original power adapter and PETKIT Concentrated Air Purifying Refill.

• In case of product use problems, please contact customer service timely.

• Please install and use device in strict accordance with the Manual.

PACKING LIST

* Please check the packing list before installation and use.

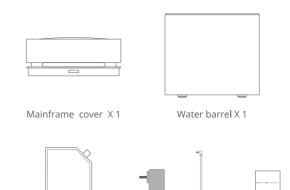

Silica gel pad ⊶ Exterior appearance

PRODUCT INTRODUCTION

• Mainframe


Water barrel

Display/touch screen ←

Air outlet

PRODUCT INTRODUCTION Filter screen in mainframe cover Mainframe cover (interior) ⊸ Water gauge MAX: Highest water le

ABOUT CONTROL PANEL

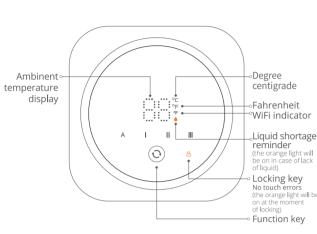


KEY FUNCTION

Functions

	•
On / Off	Press the Function Key for seconds under the state of unlocking
Switch mode	Click the function key under the state of unlocking
Enable locking	Automatic locking after double clicking the locking key or no operation for 5s
Unlock	Double click the locking key
Start network pairing, the WiFi indicator flickers and enable the bluetooth.	Press the function key + locking key at the same time for seconds under the state of unlocking.

MODE INTRODUCTION

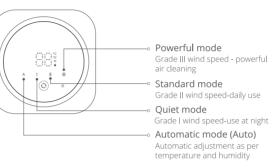


QUICK GUIDE

Purifying Refill X 1

I. Placed in the right position


1. To better exert the performance of AIR MAGICUBE, a certain distance (no less that 10CM) between air inlet and the shelter (such as wall) shall be kept in use. 2. Considering different pet habits, it shall be placed in the position where the pe CANNOT reach it.

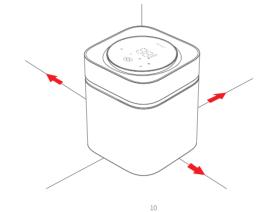

QUICK GUIDE

II. Add the Concentrated Air Purifying Refill

1. Add water to 2.7L water level mark (as shown in Figure A) 2. Pour the whole PETKIT Concentrated Air Purifying Refill attached (namely dilutio as per the proportion-1: 9) to the water barrel (as shown in Figure B).

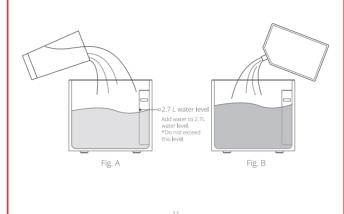

QUICK GUIDE

III. Complete the installation Align the mainframe cover with the water barrel then press down. The product is installed well.


Water barrel



QUICK GUIDE


Connect to the power adapter. After switching on for the first time, the device will

the first digit will be displayed. For example: 103F (Fahrenheit degree), the device displays 03F.

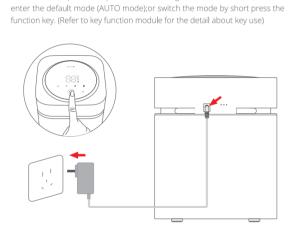

APP ACCESS

I. After powering on, observe the Wi-Fi indicator light state. It means device having entered the network pairing mode if the indicator

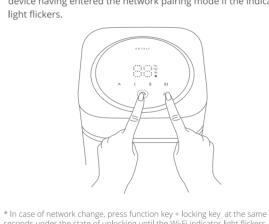

* In case of network change, press function key + locking key at the same time for seconds under the state of unlocking until the Wi-Fi indicator light flickers, and then

APP ACCESS

II. Download and open "PETKIT" App to enter the home page, click "+" at the upper right corner (refer to Figure C) and select the




APP ACCESS

III. And then conduct network pairing in line with App page tips or click "watch video" to carry out binding as per the steps.




CLEANING AND MAINTENANCE

*Before thorough cleaning of the product, please turn off the power supply and unplug the power adapter.

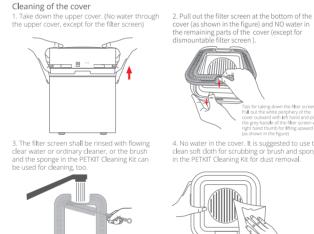

CLEANING AND MAINTENANCE

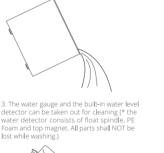





PRECAUTIONS FOR USE

- No water in the mainframe cover.
- The device can be washed and used only with cold water . • The PETKIT Concentrated Air Purifying Refill can be diluted only with normal temperature pure water. • The product shall be used together with PETKIT Concentrated Air
- Purifying Refill. The purification liquid is inedible. Guide pets NOT to lick the
- liquid in the device.
- DO NOT place the product in the place with direct sunlight, which shall be far away from combustion source.
- Keep horizontal placement of the product to avoid liquid outflow or device abnormality. • After use for a long time, the educt in the barrel is the educt of
- PETKIT Concentrated Air Purifying Refill, which is normal. DO NOT place any article on the device top. • DO NOT shield the inlet/outlet or avoid foreign matter entering
- inlet/outlet.

PRECAUTIONS FOR USE

- The device is under the low-voltage mode, but the electric leakage will happen if the pet bite the electric wire. Correct guidance for use shall be necessary.
- DO NOT drag the wire to avoid breakage when using, plugging and unplugging power lines. • DO NOT move the product when in use and cut off the power supply at the time of movement.
- DO NOT touch the power adapter or the socket with wet hand. • The product shall be properly stored after removing the liquid in the lower barrel and unplugging the power adapter in case of not use for a long time.
- If the device is used by kid, it shall be used under the guidance by
- Except for repair personnel, nobody is allowed to repair the product to avoid various accidental damages.

BASIC PARAMETER INFORMATION

Product name	AIR MAGICUBE SMART ODOR ELIMINATOR
Product model	P9201
Dimensions	180mm X 180mm X 213mm
Total weight	1.15kg (including adapter)
Rated voltage	6VDC

FAQ

I. Why does the device display the lack of liquid always while there is liquid in the barrel? successively: Whether the float spindle is stuck. Inspect whether the top magnet or th bottom pearl wool of the float spindle is lost. If the lack of liquid is still displayed afte

II. Why does the device display liquid remaining always while there is no liquid in the barrel? Pull out the water gauge in the lower barrel and inspect whether the internal part-float spindle is stuck.

FAQ

III. Why is the function key unusable?

Firstly, inspect whether the orange indicator light of the locking key is on: If the orange indicator light is on, it means the locking key is on. At this time, the function key cannot be used . You can unlock by double click of locking key. The orange indicator light will be off and the function key can be used anew after unlocking. In case of failure in unlocking or the indicator light being unresponsive after double click of locking key, cannot be used within 2s after unlocking.

IV. How long can a package of purification liquid be used approximately? The service time of the PETKIT Concentrated Air Purifying Refill is different due to difference in environment, use pattern and frequency. It can be used for about 1 month when it is working for 8 hours per day under the powerful mode (refer to reminder for lack of liquid). V. Why can't I switch between Fahrenheit degree and degree centigrade?

The switch between Fahrenheit degree and degree centigrade shall be conducted

VI. Is there any colloidal or crystalline solid in the barrel after a long period of use? The colloidal or crystalline solid in the barrel is educt of the PETKIT Concentrate Purifying Refill after a long period of use, which is normal.Just continue using

ABOUT PETKIT CONCENTRATED **AIR PURIFYING REFILL**

*The product shall be used together with PETKIT concentrated purification

- liquid whose filtering performance is different based on actual space. • The PETKIT concentrated purification liquid is a concentrated liquid which can be used after being diluted as per the proportion-1:9 as
- The following data comes from the third-party detection institution: • Under the experimental conditions, the product reaches the actual non-toxic grade after acute oral toxicity test according to Version 2002 standard of disinfection technology standard. It is of actual non-toxic grade after acute inhalation toxicity test;
- escherichia coli, staphylococcus aureus and candida albicans of the product is >99% pursuant to GB 15979-2002 standard;

ABOUT PETKIT CONCENTRATED

AIR PURIFYING REFILL • Under the experimental conditions, the inhibition ratio against common germs (such as aspergillus niger, malassezia fufur, salmonella

- typhimurium and klebsiella pneumoniae) of the product is >99% in line with QB/T 2738-2012 standard; • Under the experimental conditions, the bacteriostasis rate against
- staphylococcus albus of the product in the interior space reaches to 77% as per GB 21551.3-2010 standard; • Under the experimental conditions, the removal efficiency of the product against common indoor pollutants (including ammonia, hydrogen sulfide and formaldehyde) is >80% pursuant to
- QB/T 2761-2006 standard.

*Aroma concentration and duration are different on account of difference in space environment, use pattern and frequency.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party

responsible for compliance could void the user's authority to

operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the interference by one or

-Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver.

more of the following measures:

- -Connect the equipment into an outlet on a circuit different from that
- to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and

operated with minimum distance 20cm between the radiator & your body.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présentappareilestconforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitationestautorisée aux

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareildoit accepter tout brouillageradioélectriquesubi, mêmesi le brouillageest susceptible d'encompromettre le fonctionnement

• Under the experimental conditions, the inhibition ratio against