
Legend	
Bleed line	
Trim line	
Safety	
Fold	

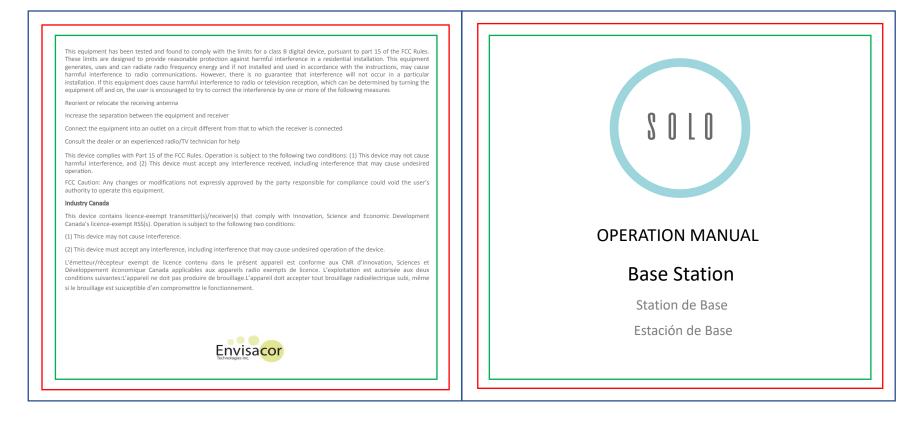

Page 4

Page 1

# Installation Guide

## 1. Program Registration

Before doing anything you must ensure that you have a valid **EyezOn** account. To set up your free EyezOn account go here www.eyezon.com select the **CREATE ACCOUNT** link at the top of the page and submit the form.

### 2. Log-In to EyezOn Account

Your EyezOn account is your management tool for your SOLO system. From www.eyezon.com select the **LOGIN** link and use the credentials sent you when you registered to proceed to your account.


#### 3. Install and Activate Device

Before powering on, record the 12 digit ID from the bottom of the device. From inside your EyezOn account select the **Add New Device** link and follow the instructions choosing SOLO as the product type use the 12 digit ID from the bottom of the unit.

## 4. Connect and Power On

See the diagram and instructions on the opposite page to complete the set up.

For a complete guide to SOLO and your EyezOn account please navigate to the **Help** page within your EyezOn account. There you can find the step-by-step guide to setting up and maintaining your system.

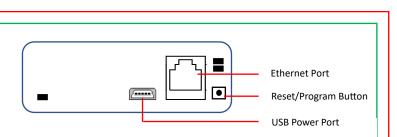

## To Connect

\*Note: Before proceeding to the next steps, record the 12 digit ID from the sticker on the bottom of the module. Make sure you have created an EyezOn account and have activated the device using the 12-digit code (see opposite page).

- 1. Plug in Solo base station to power source
- 2. Connect the ethernet cable to modem
- 3. Ensure you have the EyezOn App on your mobile device.

The EyezOn App is available at:







