



Share Vision Share Happiness

SHENZHEN SEE INTELLIGENCE SCIENCE & TECHNOLOGY CO.,LTD.

Address: A903, Skyworth Building, Gaoxin South No.1 road,
Nanshan District, Shenzhen, China

Post Code: 518057

Service Hotline: 400-642-0755

Service Email: service@weseeing.com

Website: www.weseeing.com

Warranty Term

1. The smart glasses made by See Intelligence Science & Technology Co., Ltd come with a full one-year warranty since the received date calculated.
2. In case of failure due to defective quality during warranty, See Intelligence will provide free repair or replacement. The shipping cost for returning the defective product to See Intelligence shall be carried by the customer and the shipping cost for sending repaired product or new product to the customer shall be carried by See Intelligence.
3. In case of failure due to incorrect use of product or accidents or nature damage during warranty, See Intelligence have the right not to provide free repair or replacement. See Intelligence will charge a reasonable maintenance fee and provide a failure analysis report and the round-trip shipping cost shall be carried by the customer if the customer request See Intelligence for repair or replacement.
4. The customer shall provide the product serial number or warranty card or transaction vouchers such as commercial invoice, contract and packing list, etc before repair or replacement. In case of failure confirmation for the purchase, See Intelligence have the right not to provide repair or replacement.
5. Shenzhen See Intelligence Science & Technology Co., Ltd. reserves the right to final interpretation of the above terms and conditions.

Buyer Name: _____ Company Name: _____

Telephone: _____ Selling Date: _____

Address: _____

Warm Reminded

Can not turn on

How to resolve:

- A An insufficient battery will cause failure turning on. Please make sure the battery is sufficient.
- B Please ask for our service if glasses still cannot turn on with sufficient battery.

Can not connect to Bluetooth

How to resolve:

- A Please make sure that the mobile phone Bluetooth is open
- B Please check the possibility of wrong connection to other mobile phones. Press and hold the multifunction button on glasses for three seconds to disconnect with other mobile phones.
- C Please check the possibility of wrong connection to other Bluetooth devices.

Can not charge


How to resolve:

- A Please make sure that the charging port is in good connection
- B In case of damaged charging data cable or charging wall adapter, please replace them. Make sure that you use the pointed battery charger by SeeU.
- C Please make sure that the working temperature of SeeU is from -20°C to +60°C, charging temperature from 0°C to +45°C



See U


SeeU User Manual

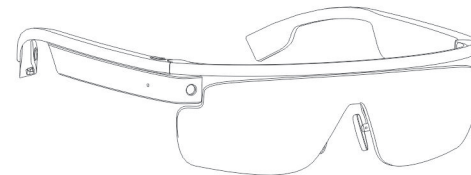


- Please read the user manual carefully before use.
- Please use it correctly after you make full sense of this user manual
- Please keep the user manual for possible future.

Package Instruction

Please check the full package as below : In case of missed accessories, please contact with your supplier.

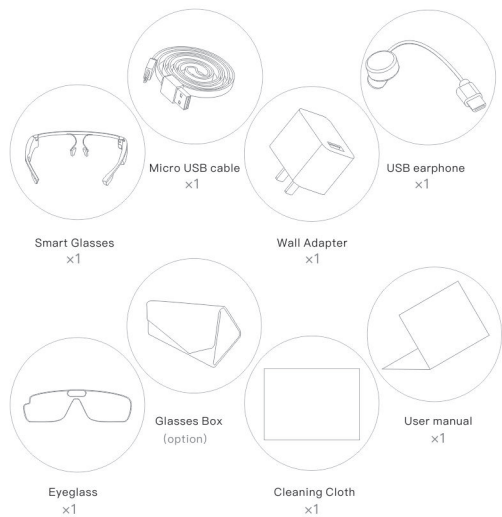

Component

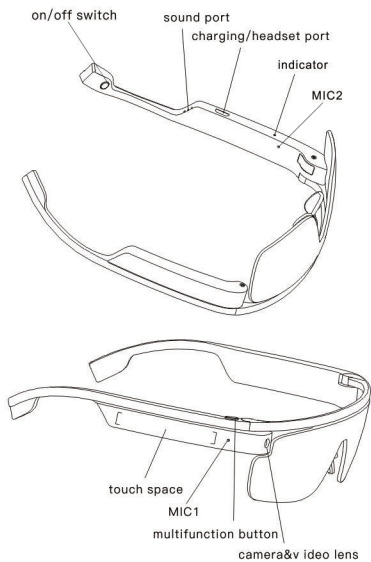


Notice: Pictures and contents from user manual are for reference only, please make the object as the standard.

Smart Glasses Quick Operating Instructions

Function		Unit	Operation
Charging		USB Port	Using Micro USB cable to charge (LED flicker slowly und-er charging, LED keep lighting after fully charged).
Power On		ON/OFF	Long press for 3 seconds(LED flicker fast)
Power Off		ON/OFF	Long press for 3 seconds(LED flicker fast)
Photograph		Voice Command	"Linsh","Linsh", power off
		Touch Control	Sliding forward a time
Video	Open Camera	Voice Command	"Linsh","Linsh", Photograph/Taking a picture/Photo/Qiezi
		Touch Control	Sliding forward twice continuously
		Voice Command	"Linsh","Linsh", Video/Recording a video
Video	Close Camera	Touch Control	Sliding backward one time or twice continuously
Bluetooth	Bluetooth Binding	Multi-Function Buttons	Long press for 3 seconds(Firstly open "App" to search bluetooth device "weseeing", for details see operatio-nal guidance)
	Bluetooth Unbinding	Multi-Function Buttons	Long press for 3 seconds(Calling/Music/Sharing etc., all operating based on bluetooth binding)
		Voice Command	"Linsh","Linsh", unbinding or cancel bluetooth pairing
Calling	Answering	Multi-Function Buttons	Short press one time
	Hanging Up	Multi-Function Buttons	Short press one time(If you want to refuse the call, si-ding backward one time in touch control area)
Music	Play Music	Touch Control	Double-click(Double-click when playing music to change next song, if play local music no need bluetooth bindin-g)
		Voice Command	"Linsh","Linsh",Listening to the music/Songs/Music/Playing Music
	Pause	Touch Control	Sliding backward one time or twice continuously
	Volume Increase	Touch Control	Sliding Upward
Sharing	Volume Increase	Touch Control	Sliding Downward
	Social sharing	Voice Command	"Linsh","Linsh", Sharing Photos/Photos Sharing/Sharing Videos/Videos Sharing
Status Inquiry		Voice Command	"Linsh","Linsh", Status Inquiry/Status(Query Wifi, Blueto-oth, System Version,SD card available capacity, Battery Capacity, Camera State)
Time		Voice Command	"Linsh","Linsh", Telling Time/Time
WIFI Connection		Cell Phone	Operating cell phone to connect WIFI
APP		Cell Phone	Scanning QR code besides the box to enter into public number, and downloading "weseeing" APP in the menu
Operating Guidance		Wechat Public Nmbur	Scanning QR code besides the box to enter into public number, and clicking "Product Operating Guidance" in the menu.

Notice: Voice command, please waiting for tones after calling "Linsh, Linsh", then you can call remaining command. For example, Taking photos: Firstly you say "Linsh, Linsh", after cueing sound, then you can say "Photographing"(This time you can say "Photo" or " Qiezi", each command in the same function effect, and by this analogy)

Eyeglass assemble

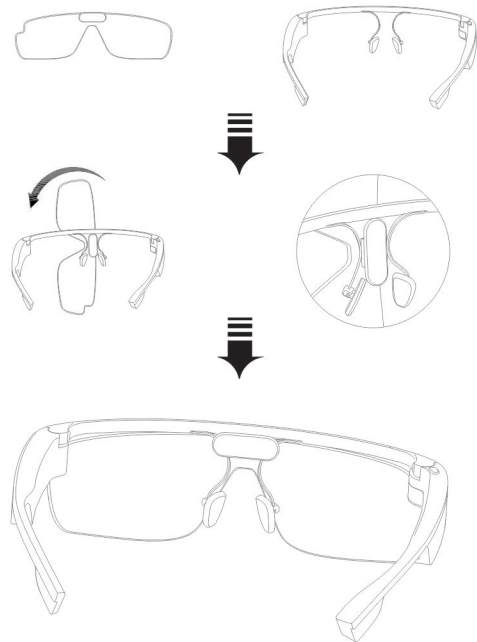

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.