

# HiMirror Remote Control



## 1. Microphone Sensor

This function will be enabled with specific software update on HiMirror.

## 2. Touch Pad

- Swipe Up Move Up
- Swipe Down Move Down
- Swipe Left Next Page/Select
- Swipe Right Previous Page
- Tap Toggle Play/Pause/Confirm
- Cursor Mode Press and hold >2s
- Slide Mode Release > 2s

## 3. Home

- <1s Return to home menu
- >5s Pairing to HiMirror

## 4. Microphone/Mute

Press and Hold for Voice command.  
This function will be enabled with specific software update on HiMirror.

## 5. Directional Button

- ▲ Move Up
- ▼ Move Down
- ▶ Next Page/Select
- ◀ Previous Page

## 6. Menu

- HiMirror Toggle Brightness/Volume
- HiMirror Plus Toggle Brightness/Volume/Themelight

## 7. Play/Pause/Confirm

<1s Toggle Play/Pause/Confirm

## 8. Color Picker

Press for color detection.  
This function will be enabled with specific software update on HiMirror.

## 9. Color Picker Sensor

Sensor to detect colors.  
This function will be enabled with specific software update on HiMirror.

## 10. Battery Cover

### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
  2. This device must accept any interference received, including interference that may cause undesired operation.
- You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

### IC Statement

This device complies with license-exempt RSS of Industry Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Avis d'industrie Canada

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et, (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.


### Specs

Model No.	BC720
Dimension (mm)	132*49*9.6
Weight (g)	45
Power Source	2x CR2032
Wireless transmission	Bluetooth BLE 5.0
Compatibility	BM608, BM618, BM619

**\*To begin using your remote you must complete setup and install the latest update on your HiMirror following the instructions in the Quick Start Guide.**

To pair please press for 5 sec. in Settings > General Settings > Supported Devices.

# HiMirror Accessories

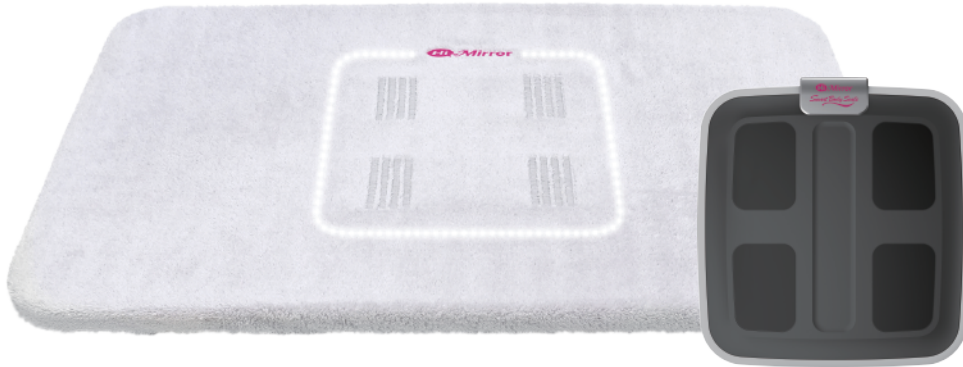

## Smart Body Scale

Understanding your body indexes

\$99.00\*



## HiMirror Remote Control

Interaction at its best.

\$49.00\*



## HiSkin

Know your skin better with HiSkin!

\$49.99\*



Smart Mat




Single Smart Mat



Smart Scale Metal Plate



Wi-Fi Extender

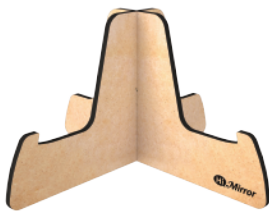

HiMirror Stand



HiMirror Hinge Mount



HiMirror microfiber cleaning cloth



Purchase @  
HiMirror eShop

[www.himirror.com/eshop](http://www.himirror.com/eshop)

\*actual price is based on latest price listed on our official website

**HiMirror**  
Smart Mirror, Smarter Beauty

Address: 20191 Windrow Dr., Lake Forest CA  
92630, USA  
Toll-free Number: +1-855-999-3348



HiMirror

[www.himirror.com](http://www.himirror.com)