

Quick Start Guide

PACKAGE CONTENTS



HiMirror Mini Premium X





Quick Start Guide



Warranty Card



Cleaning Cloth



Power Adap

OVERVIEW



 \cdot 13" mirror size with 10.1" TFT LCD touch panel (Rotatable)

Touch Key	Functions
< ∃ Back	Back to previous page
88 Menu	Bring up the menu
□ Mirror / Light	Switch between Mirror mode and ambient makeup light




Power Jack – Connect HiMirror Mini Premium X to a power outlet using the provided power adapter.






Slotted Screw – Rotate the slotted screw clockwise with a coin to fasten the hinge when it gets loose.

Retaining Ring — Rotate the retaining ring counterclockwise to unlock the rod and adjust the height of the panel, and rotate it clockwise to lock again.

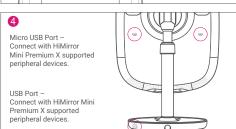



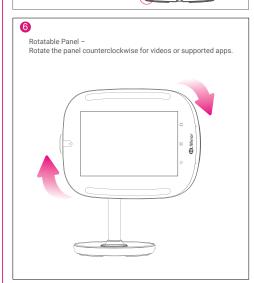



BEFORE YOU START

Note:

- 1. Children under the age 13 are not permitted to create a HiMirror account.
- 2. Please ensure HiMirror Mini Premium X is placed on a flat and even surface.

HiMirror Mini Premium X must be within range of your WiFi network

You must have a WiFi network available and have your HiMirror Mini Premium X installed within its range.



GETTING STARTED

- 1. Connect HiMirror Mini Premium X to a power outlet using the power adapter.*
- 2. Push the power button to turn on HiMirror Mini Premium X.
- 3. Push open the camera cover.
- 4. Follow the on-screen instructions to complete setup.

*Note: HiMirror Mini Premium X must be plugged into a power outlet at all times.

OPTIMAL ENVIRONMENT CONDITIONS

Light Source

For best results, make sure that the light sources around your HiMirror Mini Premium X are even and your face is not partially shadowed. Please refer to the following instructions when the light source is not adequate for HiMirror Mini Premium X.

A. Strong backlight, such as a large window. Suggestion: Close the blinds or curtains.



B. Uneven indoor lighting, such as a light source shining on one side of your face. Suggestion: Adjust the light's direction, or turn the light off.



C. Multiple light sources.

Suggestion: Leave only the light source in front of you and turn the other lights off.



Temperature / Humidity

Operation: 41°~95°F(5°~35°C); 30~80% RH

Storage & Transportation: -4°~140°F(-20°~60°C); 0~95% RH

Power Consumption

Power Input: 100-240V~50/60Hz, 1.0A

Power Adapter: 12V, 36W

MEMO



Address: 20191 Windrow Dr., Suite B, Lake Forest, CA 92630, USA Toll-free Number: +1-855-999-3348

