8-Inch Fully Ruggedized Tablet

SV-86

Quick Start Guide

Thank you for your choosing the new Tablet PC.

This guide serves to enable users to get to know and familiar with our product as soon as possible. Here we have made a brief introduction to the key layout and definitions in figures and words.

Attention:

- ➤ This user guide is based on Windows 10 home edition
- ➤ This user guide is an introduction for full function tablet. Your device may not have all functions.
- > The illustrations in this manual may differ from the actual product.


Contents

I . Use of the previous note4
II. Key Layout and Definitions5
VI. Introduction to Desktop6
1. Windows 10 start image6
2. Image slide applications
3. Introduction to app Interface
4. Charm menu column
5. Multitasking operating interface11
IV. Basic Operations12
1.Sleep, restart and power off
V.Windows operating instructions of special function module12
VI. Androidoperating instructions of special function module18

I . Use of the previous note

- 1. With the wrong type of battery replacement will be explosive danger, be sure to use the original battery.
- 2. The company shall not take any responsibility for the loss or removal of the information in the tablet, which is caused by the operation, maintenance or other accidents of the non-normal operation of the software and hardware.
- 3. Please backup your important information at any time.
- 4. Please do not disassemble the tablet; otherwise it will lose the right to guarantee.

II. Key Layout and Definitions

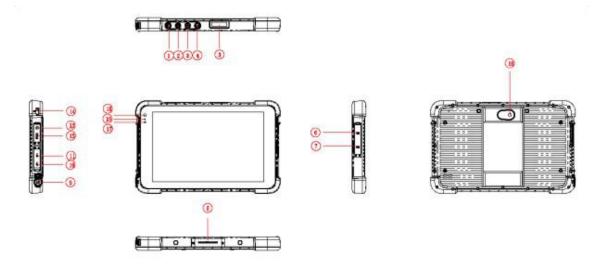

- ① Scanning:scanning button
- **②Power button:** to start or close touch screen panel. You can also let the computer to sleep or wake up from hibernation mode
- 3 4 voice sound -/ voice sound+: reduce / increase the volume
- **⑤** One-dimensional code scanner/ two-dimensional code scanner: to support one / two-dimensional code scanning
- **⑥ TF Card:** Support TF card
- **7** The docking interface: to support docking station
- **® Charging interface:** charging the tablet via DC adapter
- **9 USB drive :**Full Size USB
- **MICRO USB:**Micro USB
- **(iii) HDMI:** High-Definition Multimedia, Interface, high definition multimedia interface

②HEarphone Jack: the jack support outputs the audio signal to a loudspeaker or

(3 Lock hole: Lock device

Headset

14 Front Camera: camera, video

(3) Indicator light: used for starting and charging instructions

(6) Light sensor: Light sensor for automatic control of LCD brightness


(i) Rear camera: camera, video

VI. Introduction to Desktop

1. Windows 10 start image

Windows 10 start image: On the start screen, you can see many programs fixed in the image. These application programs are displayed in the form of "magnet". As long as you click them, you can easily visit them.

You need to log on your Microsoft account before the application program completely runs.

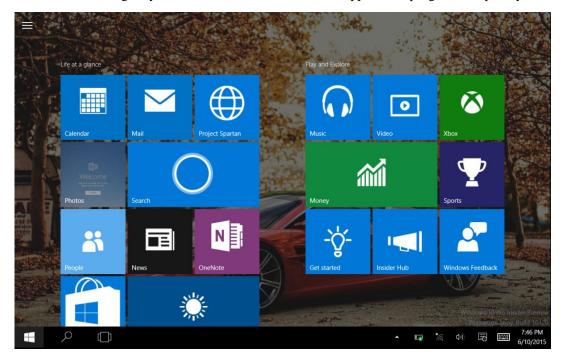

2. Image slide applications

Slide to right



Slide to the right from the left side of the screen to scan the application program in running.

Slide to the left from the right side of the screen to setting Charm menu column.

Slide to left

Slide downward



In start screen, slide from the top of the screento view application programs

Slide with finger




In start screen, slide finger up and downto move the image.

3. Introduction to app Interface


Besides the application programs already fixed on the start screen, you can also start other application programs in all application programs, such as other software application programs attached to the Tablet PC.



If you want to fix more application programs on the start interface, see the operation in the figure below, (1) Click the properties icon(2) press and hold the application program magnet for about one second and then let go (3) Click the Pin to start

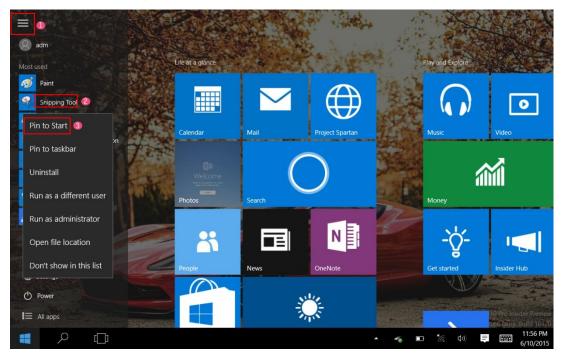

Conversely, if you want to cancel or delete a certain application in the start screen, (1) lightly touch, press and hold the application program magnet for about one second and then let it go and run, and select

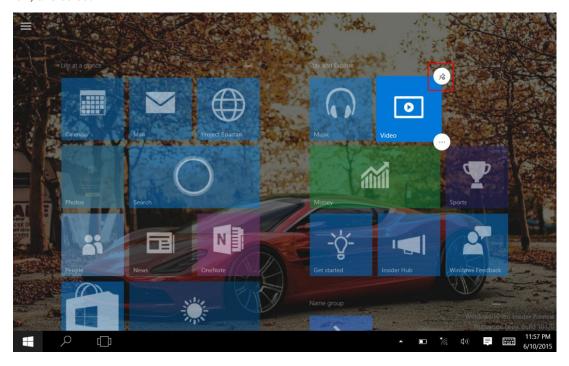

4. Charm menu column


Slide it to the left from the right side of the screen to start Charm menu column, including: Start, Device, Setup, Share, and Search Program.



Slide it to the left from the right side of the screen to start Charm menu column, Usually: File Explorer, Settings, Power, and All apps




Can Sleep/Shut down/Restart the Tablet PC



Can let you search the files and application programs in the Tablet PC.



Can let you set up the Table PC.



Can scan more apps

Search menu




Device Menu Set up Menu




5. Multitasking operating interface

slide it right from the left side of the screen, Let go when Can see the running applications. We can enter the application, also can be deleted.

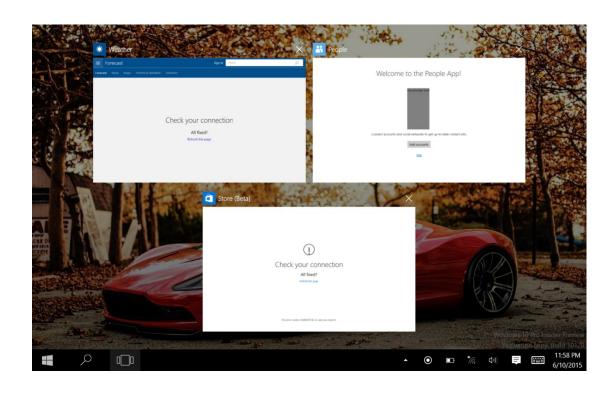

IV. Basic Operations

1. Sleep, restart and power off

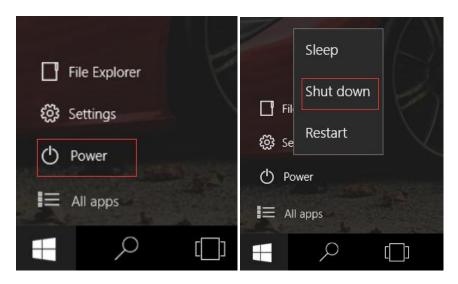


V. Windows operating instructions of special function module

1. U-blox GPS:


(1).Copy u-blox test tool to desktop.




- (2). Open the software, chose receiver, and chose port again, click COM1.
- (3).In the same way for receiver, chose Baudrate, click 9600.

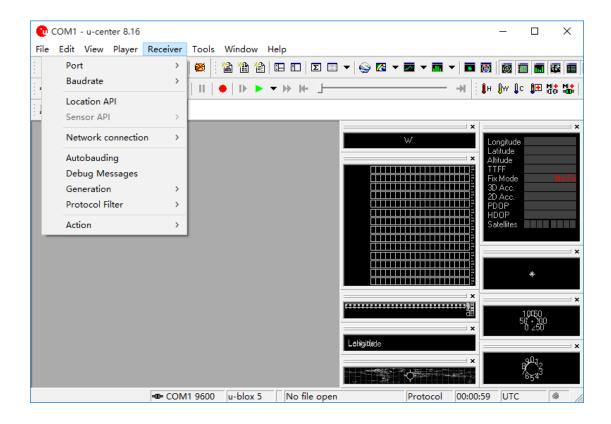

(4). As below picture, double click the satellites model picture to enlarge.

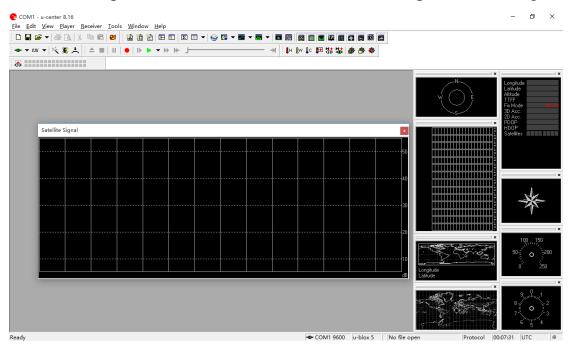

(5). The blue colors are the satellites that searched, green color are effective satellites. The numbers in the right are signal value.

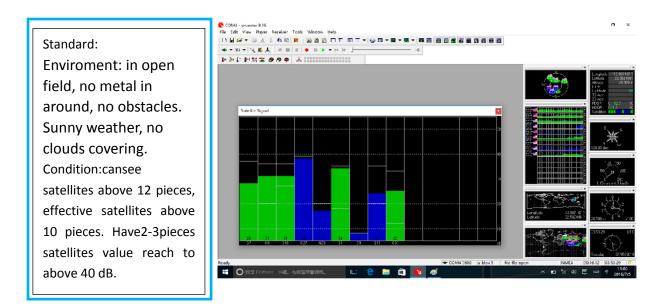

VI. Android operating instructions of special function module


note: please allow installation of unknow source before software installation



check: setting—security- unknown source

1. GPS Module operation


- (1) . Copy GPS testing software on the local
- (2) . Click install, and open
- (3) .See the GPS status shows off on the top left corner. Click off and enter into set interface

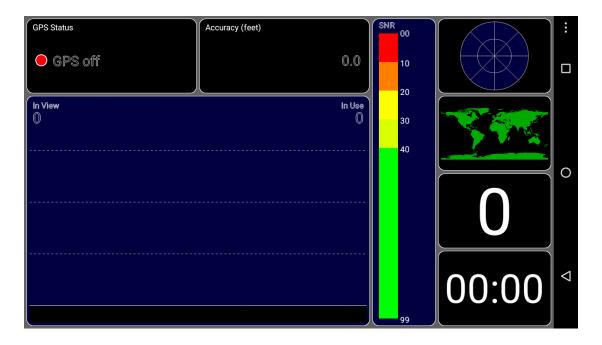


(4) . open the switch on the top right corner, and chose agree again



(5) . Chose mode, click device only

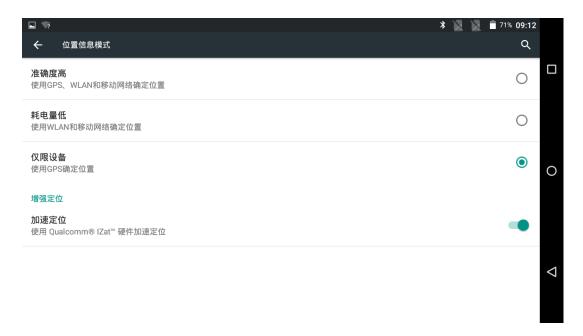


- (6). Finally return GPS main interface. Can see GPS Status shows on
- (7). In open field and waiting for 1min and check if there is a satellite

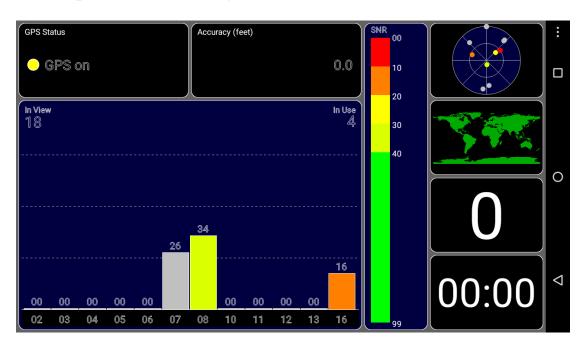

(8).OK! wait for 3 mins and check if satellites value, quantity meet standard

Standard:

Enviroment: in open field, no metal in around, no obstacles. Sunny weather, no clouds covering Condition: can see satellites above 12 pieces, effective satellites above 10 pieces. Have2-3pieces satellites value reach to above 40 dB

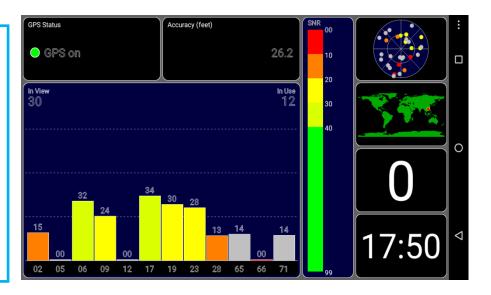

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be u sed in portable exposure condition without restriction.

FCC ID: 2ALPC-SV-86