

STANDALONE MODE

-5-

In this mode, Muzo can work independently, you can change different modes by pressing the Center Wist Switch. Muzo provides three modes to generate dynamic realistic sound, and set the scene. Sleep Mode (12 built-in sound tracks); Secret Mode (4 built-in sound tracks); Serenity Mode.

BLUETOOTH MODE

Turn on Muzo, press the BT button, after pairing with Muzo applicaiton, you can fully control Muzo by using the mobile app. Muzo can also operate as a Bluetooth speaker, hence you can stream new sounds/musics to Muzo.

3.5MM INTERFACE MODE

Insert an optional audio cable to a 3.5mm interface, you can play music from an external device (e.g. iPhone, iPod, MP3 player) through the Muzo's vibrational speaker system.

MUZO MOBILE APP


-6-



Scan the QR code to download the app.

Bluetooth Connect

1. Make sure Muzo is turned on
2. Turn on Muzo Bluetooth by pressing the Bluetooth button.
3. Connect Muzo Bluetooth via "Setting" of your phone.
4. Open the Muzo app and tap the "continue" button.

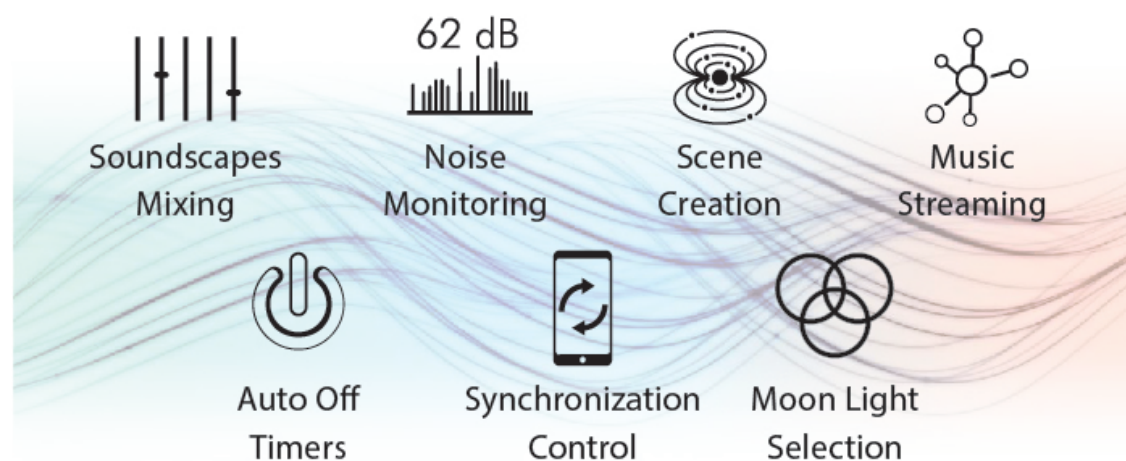

MUZO'S ACOUSTIC SLEEP THERAPY SYSTEM

-7-

Muzo sleep therapy system includes 14 realistic sound tracks to help you sleep better. All sound tracks can slip into your mind unconsciously and make you fall into a deep sleep.

Each sound track can be played independently; or you can play a specific mixing sound by picking up couple of sound tracks at the same time. The 14 sound tracks included in the Muzo app are as below:



BUTTONS OF MUZO

-4-



1. Long press Center Wist Switch to turn Muzo on/off.
2. Clockwise rotation to increase the volume, and vice versa.
3. Short press to change modes. (Invalid in BT Mode)
4. Sleep Mode: green light; Secret Mode: blue light; Serenity Mode: white light.



Press to play a previous sound.



Press to pause and play a sound.



Press to skip to a new sound



When BT is discoverable, the blue indicator will flash continuously, and the indicator will be constant on after BT connected.



Insert Micro-USB charging cable to charge.




3.5mm interface allows external audio input.

QUICK START YOUR MUZO

-3-


1. Stick towards a smooth and flat surface. (Please make sure the surface is clean)

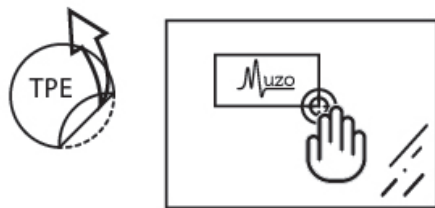

2. Long press to turn Muzo on & short press to select the mode. (It will default to the Sleep Mode)



3. Rotate to adjust the volume of sound tracks.

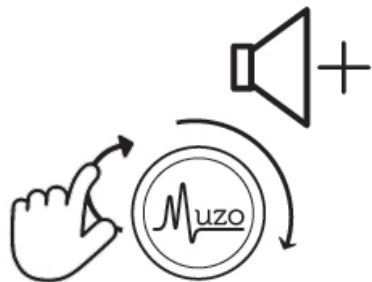

Sleep mode: Achieve better sleep quality



Secret mode: Protect speech privacy




Serenity mode: Increase concentration on work

EXCITER - THE SOUL OF MUZO


-8-

Whenever you attach an Exciter to a solid resonant surface, you can get a high quality resonance speaker. The material type can affect the Sound Properties of a surface. In our experience, to get a high quality sound output, Fiberglass, Aluminum, Foam Board, etc. are recommended.


Try to use Muzo in different objects which are common in your daily life!

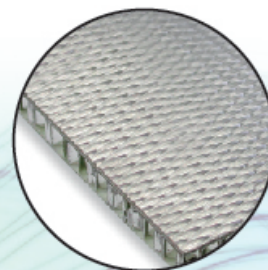

Fiberglass

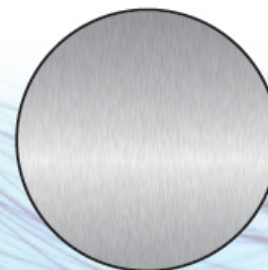

Aluminum

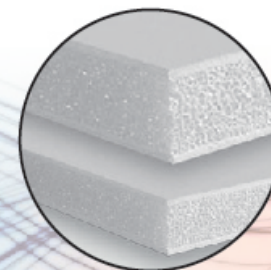

Foam Board