





PWHH-RXFG – User Guide

The following information is to be included on the PEEX Website in support of the PWHH-RXFG User Guide, which will accompany the product on a printed insert as per the design example in Fig.1. To reduce the risk of confusion, the guide has been deliberately designed to make maximum use of graphics and with a minimal use of text. Where more information on the use of the product is sought, the user is directed to additional content on the www.peex.live website. For readability, the product is described as the PEEX rX Receiver and PEEX rX in this guide.

The user guide document, included with the physical product, will be a folding insert with images and words to clearly describe features and functions available to the user; similar to this example:

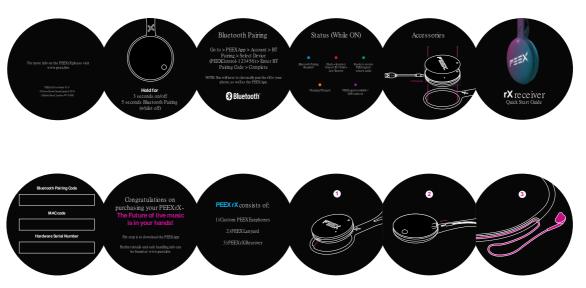


Figure 1. The proposed circular, concertina style PWHH-RXFG User Guide

For the more detailed information to be included on the PEEX website, the following information will be included. Details may be further enhanced with simple animations or videos of the product in use.

There will be four main elements covered, Assembly; Use; Status and Care.

Assembly:

- 1) Take the three pieces from the packaging and find the small plug at the bottom of the lanyard ring.
- **2)** This will fit into the USB C connector at the bottom of the rX receiver and help when fitting the lanyard to the rX. It also seals it.
- **3)** Make sure the lanyard is the correct way around (X logo facing front) and place the rX receiver in the loop. A little effort will allow the lanyard loop to locate in the groove around the outside of the rX and hold it securely.





- 4) Next the earphones can be connected to the rX receiver and fitted to the lanyard.
- **5)** Start by inserting the 3.5mm audio jack in the socket at the top of the rX receiver.
- **6)** Next orientate the cables to ensure that the left and right earpieces are correctly positioned. The cables can be retained in the special grooves on the rear of the lanyard.
- **7)** Finally, try the lanyard on for comfort. The magnetic clasp is easily pulled open and snaps back together.

Use:

- **8)** On the rear of your rX is the power button. To power the device on and off hold for approximately 3 seconds until the LED on the front goes green followed by flashing red. See LED status information later in this guide.
- **9)** To enter Bluetooth pairing mode, first make sure the device is switched off. Then press and hold the power button for approximately 5 seconds until the LED on the front flashes blue
- **10)** You can now discover and pair your device using the ID pairing code found under the front cover and in the packaging.
- **11)** In the PEEX App go to your Account page and select BT Pairing and select the device PEEXControl-xxxxxx, where the x's represent the unique device ID.
- **12)** Follow the dialogue to enter your unique BT Pairing code and wait for confirmation that this has been successful.
- **13)** BT Classic pairing is also necessary using the normal BT pairing procedure for your phone. Select PEEXPlayer--xxxxxx, where the x's represent the unique device ID.

Status:

14) The PEEX rX provides status information via the LED at the top of the front cover. Different colours and flash speeds indicate different operating modes:

BLUE: BT Pairing Required. Fast flash = both modes need pairing, slow flash = only one mode needs pairing.

RED: Slow flash = incorrect Concert ID (see app for details) and solid = low battery power.

ORANGE: Slow flash = charging and solid = fully charged.

Green: no PEEX signal available.

PURPLE: Slow flash = PEEX signal available and solid = live audio on.

This information may be supported by an animation or video to better demonstrate the different LED flash speeds, colours and modes.

Care:

- **16)** To charge your PEEX rX, remove the lanyard and insert the USB cable supplied. This can then be connected to a standard USB charger or USB port on a computer.
- **17)** To remove or replace the front cover, use either your finger nail or one of the guitar picks include with your PEEX rX. You will find three small recesses at 11, 3 and 7 o'clock to help with removal.
- **18)** To keep your rX clean, use a damp cloth to remove any marks and then dry thoroughly. Do not immerse in water.