



A faint, light gray background image of a portable electronic device, likely a portable power bank or a small tablet, oriented diagonally. The device has rounded corners and a visible hinge mechanism. The brand name "ORII" is faintly visible on the top surface of the device.

O R I I

QUICKSTART GUIDE

IN THE PACKAGE

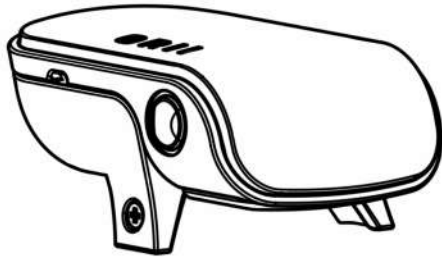


ORII + 10 Ring Sizes

(number of rings and sizes depend on package)



Portable Charger

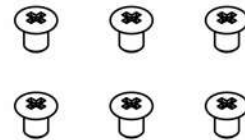

Miniscrews X 6



Screwdriver



Charging USB Cable



Quickstart Guide

PAIR YOUR PHONE


1



Download ORII App


Search "ORII Ring" in iOS App Store / Android Google Play

2

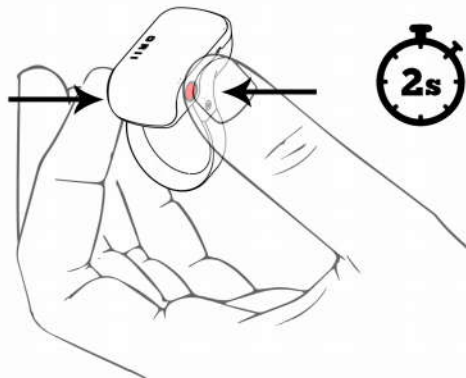

Power on ORII by pressing both buttons for 2 seconds.


3

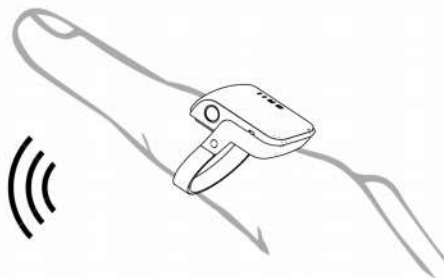

Follow app step by step instructions to pair ORII to your phone

SELECT RING SIZE

1

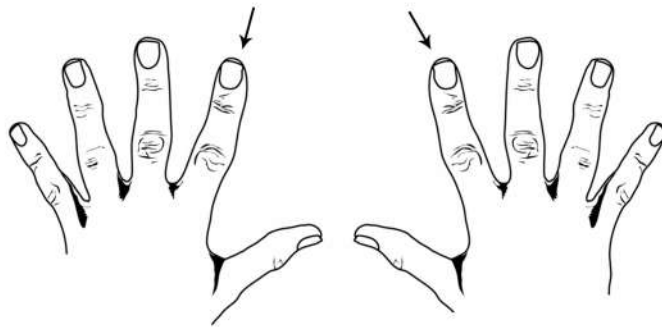

ORII is best wore on your index finger

2

FIT!



TOO SMALL!



TOO BIG!



Find a size that fits!

3




CLICK



Put the ring and the body together to test the fit.

4

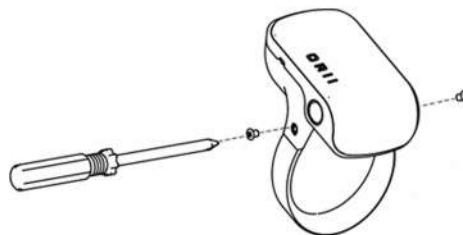


When you find a good fit, attach ORII and the ring with 2 screws.


PLACING YOUR FINGER




Outside of Ear

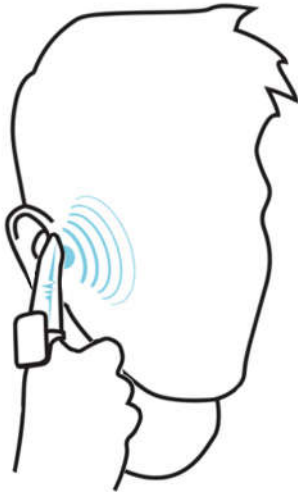


Into Your Ear

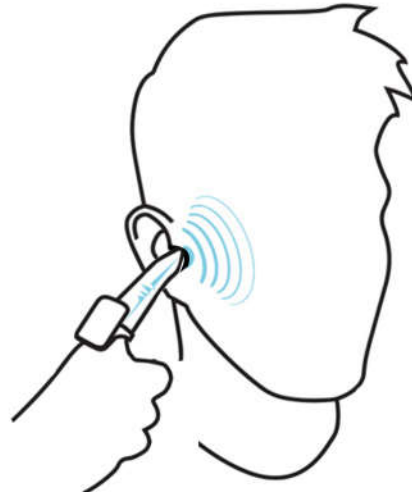

Front

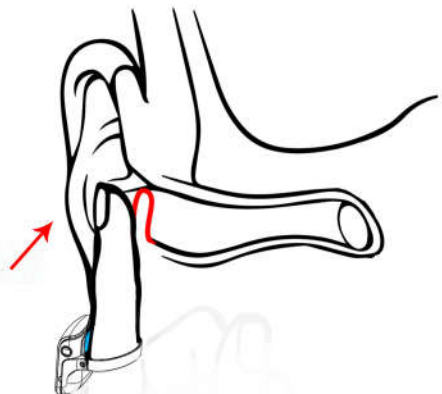

Side

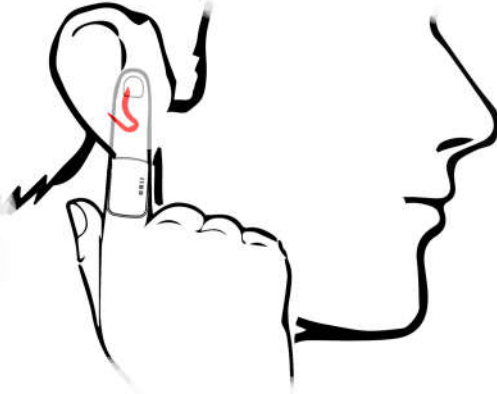

Use your finger to cover your ear hole

Check out <https://www.youtube.com/oriiofficial> for more tips on
how to find your ORII sweetspot!

INCOMING CALL

1



LED light notification and virbration.

2



Accept Call - Single Press
Reject Call - Double Press

Touch ear to hear caller ID

3




Volume Up - Single Press
Volume Down - Long Press
Hang Up - Double Press

During the call


USING VOICE ASSISTANT

1

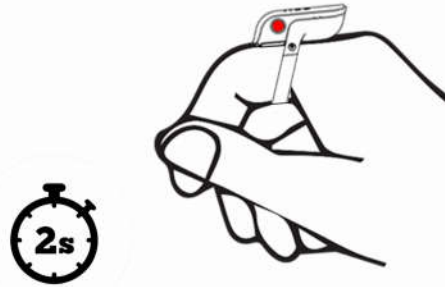

Long press (2 sec) and release

2

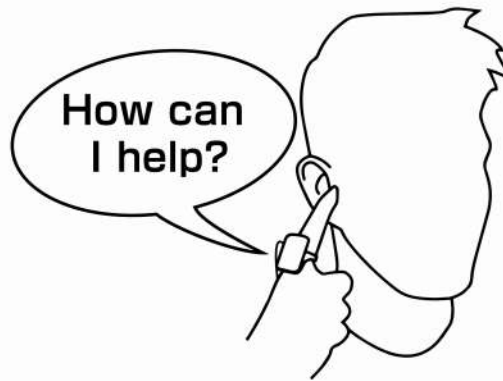

Voice Assistant asks for commands.

3



Speak Commands

Example



" Send a message to John "



" Set an alarm at 8:00 am "



" Call Mum "

SPECS

COMPATIBILITY

ANDROID 4.4 OR ABOVE

iOS 9 or ABOVE

BATTERY

~1.5 HOUR TALK TIME

~48 HOURS STAND-BY

50 mAh LITHIUM-ION BATTERY

CHARGING TIME

~1 HOUR

WATER RESISTANCE

IPX7 (SPLASH PROOF)

CHARGER

USB CHARGER

FCC ID: 2A0JQ1001

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warranty:

Limited One (1) Year Warranty with proof of purchase. Exempt from warranty are components subject to normal wear and tear, such as metal rings, batteries and other accessories. For warranty service go to orii.io/warranty

orii.io

community@origami-labs.com

@ORIIringofficial

