This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause underived expertise.

FCC Caution: Any changes or medifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

低功率電波輻性電機管理辦法 第十二條經型式認證合格之低功率射頻電機,非經許可,公司、商號或使用者 均不得擅自變更頻率、加大功率或變更原認計之特性及功能。 第十四條低功率射頻電機之使用不得影響飛航安全及干擾合法通信;經發現有 干擾現象時,應立即停用,並改善至無干擾時方得繼續使用。前項合法通信, 指依電信規定作業之無線電信。低功率射頻電機須忍受合法通信或工業、科學 及醫療用電波輻射性電機設 備之干擾。

R XXX-XXXXXX CMIIT ID: XXXXXXXXXX

嬰幼兒使用安全警語:
1. 窒息危險:本產品含有可能導致窒息的小物件・保持小物件遠離兒童。
2. 本產品及隨附配件不屬於玩具・勿讓孩童遊戲。
3. 本產品並非旨在取代對兒童適當的監督・您必須定期注意您孩子的活動。
Infants and children use safety warnings:
1. Choking Hazard: This product contains small parts which may cause choking. Keep small parts away from children.
2. This product and accompanying accessories are not toys. Do not allow children to play with them.
3. This product is not intended to replace proper supervision of children. You must check your child's activity regularly.

ADDWII

產品名稱: 隨身空污鼻

公司網頁: http://www.addwii.com 服務信箱: service@addwii.com

聯絡地址: 236 新北市土城區中央路四段51號8樓

ADDWII

Product Name: Mobile Nose

Website: http://www.addwii.com

Customers Service Email: service@addwii.com

Contact Address: 8F., No.51, Sec. 4, Zhongyang Rd., Tucheng Dist., New Taipei City 23675,

Taiwan (R.O.C.)

Made in Taiwan

充電指示燈 Charge LED

充電中	橘燈恆亮	1	Charging	Orange Indicator On
	無	1	Charged	No

LED指示燈 LED

OR code

LLD]H/N/A LLD		
顯示狀態	藍芽未連線	藍芽連線
系統準備中	白燈閃爍	白燈恆亮
弱電提示	紅燈閃爍	紅燈閃爍
藍芽連線狀態	藍燈閃爍	無
空氣品質普通 TVOC<220 ppb且 PM2.5<15 µg/m³ PM10<54 µg/m³	每30秒 亮三秒 綠燈	綠色恆亮
空氣品質中等 TVOC >=220 (<660) ppb 或 PM2.5>=15(<35) µg/m ³ PM10>=54(<125) µg/m ³	每30秒 亮三秒 黃燈	黃色恆亮
空氣品質不良 TVOC >=660 ppb或 PM2.5>=35μg/m ³ PM10>=125μg/m ³	每30秒 亮三秒 紅燈	紅色恆亮
Status	Bluetooth Disconnect	Bluetooth Connect
System in Preparation	White Indicator Flashing	White Indicator On
Low Battery Warning	Red Indicator Flashing	Red Indicator Flashing
Bluetooth Connecting	Blue Indicator Flashing	NO
Normal Air Quality TVOC < 220 ppb or PM2.5<15 µg/m³ PM10<54 µg/m³	Green Indicator Will On Every 30 Seconds	Green Indicator On
Poor Air Quality TVOC >=220 (<660) ppb or PM2.5>=15(<35) μg/m ³ PM10>=54(<125) μg/m ³	Yellow Indicator Will On Every 30 Seconds	Yellow Indicator On
Bad Air Quality TVOC >=660 ppb or PM2.5>=35 μg/m ³ PM10>=125 μg/m ³	Red Indicator Will On Every 30 Seconds	Red Indicator On

產品規格 Specifications

產品名稱	Mobile Nose			寸 96.5 x 50.4 x		x 21.3 mm	
產品型號	AQ0101				83.5g		
額定輸入	DC 5V 1A			藍芽有效距離 3~5m			
輸入介面	Micro USB			作時間	15 hr		
電池容量	1400 mAh			充電時間 2.5 hr			
通訊介面	Bluetooth Low-Energy			品顏色	金色/銀色		
操作系統需求	iOS 10.0 / Android 5.0以上		I,	作温度	0~40°C/32~104°F		
			_				
Product Name		Mobile Nose		Weight		83.5g	

Pr	oduct Name	Mobile Nose	Weight	83.5g
Pro	oduct Mode l	AQ0101	Battery Capacity	1400mAh
Di	mension	96.5 x 50.4 x 21.3 mm	Discover Range	3~5m
In	put	DC 5V1A	Product Working Time	15 hr
Int	terface	Micro USB	Normal Charging Time	2.5 hr
Co	ommutation Network	Bluetooth Low-Energy	Product Color	Gold/Silver
Sy	stem Requirements	iOS 10.0 / Android 5.0 And Higher	Operating Temperature	0~40°C 32~104°F

感測範圍 Sensing Range

感測器		檢測範圍		精度	
温度		-10~50°C/14~122°F		0.1°C/0.1°F	
濕度		0~100% 0~60000 ppb 400~60000 ppm 0~500μg/m³ 0~604μg/m³		1%RH	
總揮發性有機化合物	物(TVOC)			1 ppb	
eCO2				1 ppm	
PM2.5				1 μg/m³	
PM10				1 μg/m³	
Sensor	Sensing	Range		recision	
Temperature	-10~50)°C / 14~122°F (0.1°C / 0.1°F	
Humidity	0 ~ 100	%		1%RH	
TVOC	0 ~ 600	00 ppb		1 ppb	
eCO2	400 ~ 6	0000 ppm		1 ppm	
PM2.5	0 ~ 500	μg/m³		1 μg/m³	
PM10	0 ~ 604	μg/m³	1	μg/m³	

按鍵 Button


				8
開機 / 關機	長壓三秒	ON/ OFF	Hold Button for 3 Seconds	
斷開藍芽連線	短壓兩次	Disconnect Bluetooth	Press Button 2 Times	

ADDWII


Mobile Nose

Quick Operation Guides 隨身空污鼻快速指南

外觀介紹 Component and Features

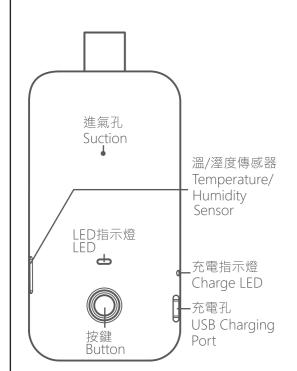

*使用期間,請保持進氣孔暢通 Please keep the suction unblocked during use.

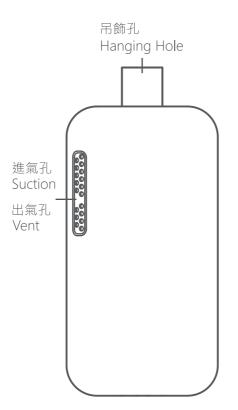

操作說明 Instruction

- 第一次使用時請先使用附贈之充電線充電2.5hr。
- 2. 開/關機 長按3秒按鍵:開/關機。

3.下載APP 本產品需搭配App應用程式·請於App Store / Google Play 搜尋[ADDWII]。



- 4. 開啟手機App 開啟側拉選單·選擇新增裝置並開啟手機藍芽功能進
- 5. 註冊帳號

開啟側拉選單、選擇設定、選擇帳號設定、選擇創建帳號並輸入您的email信箱若信箱正確且能使用,幾分鐘後您的email信箱 將會收到臨時性密碼·請用臨時密碼登入您的空污鼻帳號· 登入後即可修改臨時密碼。

1. Charging

Please use the adaptor in the box to charge the Mobile Nose 2.5 hours at the first time.

- 2. Power On/Off
- Press and hold the Power button for 3 second to turn the power on.
 Press toward and hold the Power button for 3
- second to turn the power off.

 3. Download the App
- Please download ADDWII on App Store/ Google Play and search ADDWII.

4. Open App



- (1) Open the bar on the left side and select "add device". (2) Open Bluetooth in the cell phone.
- (3) Pair the device. 5. Create Account

Open the menu in the left side, choose "Setting" > "Account setting" >"Create Account" and enter your email, if the email you've entered is correct and legal, you will receive the mail with the temporary password in a few minutes. You can change your password anytime after successfully sign in.

產品保固條款 Product Warranty Term

- 1.保固方式: ADDWII 保證所有產品在保固期間內·若出現材料或功能上的瑕疵與故障· ADDWII 將以維修或更換同等級產品的方式來服務 消費者。
- 消費者。
 2.有限保固:
 本保固條款之適用範圍 · 不包括產品因非自然或外在因素所造成的 損壞 · 如有下列狀況發生 · 則產品皆不適用於ADDWII產品保固條款:
 (1) 因天災、人為不當操作等非產品本身之因素故障時。
 (2) 產品經過非本公司授權之技術人員維修或拆裝時。
 (3) 保固標籤或防拆標籤被更改 · 破損或遺失時。
 (4) 產品序號不符或序號破損、不清楚時。
 (5) 透過非ADDWII授權之經銷管道所購買之產品。
 3. 保周條數適用的對象

- 3. 保固條款適用的對象
- ADDWⅡ保固服務條款·僅適用於透過合法銷售通路購得本公司產品
- 隨身空污鼻: 隨身空污鼻皆享有一年保固。保固期內產品若因自然因素 損壞,皆享有免費維修服務。
- Nwarranty policy: ADDWII provides replacement or repair services to our customers for defective products within the
- applicable warranty period.

 2. Limitation of warranty: Please note that ADDWII is not responsible for providing free repairs if the product defect is caused by any of the following factors:
- (1)Damage caused by natural calamity or any inappropriate
- usage.
 (2)Product has been repaired or taken apart by unauthorized
- technicians.

 (3) The warranty label is altered, damaged or missing
- (4) Product serial number does not conform to our original system or the label has been damaged.
 (5) Products purchased from unauthorized agents.
- 3. Warranty Terms
 ADDWII warranty policy applies to all customers who purchased ADDWII products through authorized agents.
 4. Duration of Warranty
- Mobile Nose: Mobile Nose series product are covered by one-year warranty. During the warranty period, if the products are damaged by
- natural factors, they are entitled to free maintenance services

