
## User Manual for Wireless Charging LED table lamp

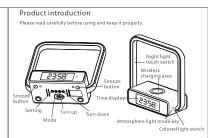

# Instruction

1.Power connection Insert the DC head of the power adapter into the power jack behind the base.



- TIP.

  At first start, there will be no "Did" sound after memory.

  Please use the original power cord, do not use extension cord or splitter, otherwise the product

  Please use the original power cord, do not use extension cord or splitter, otherwise the product

  Do not use an adapter hat can not output 174 directly by default.

  If the lights fileder or noise, please replace the power supply equipment in time.

  If the lights fileder or noise, please replace the power supply equipment in time.

  If the original supplement of the product or other header discussion, at this may cause damage to the product or other headerds.

  The original adapter is a special part for this product and does not support power supply for other devices.

## 2.Lighting control

Touch the metal sheet inside the product with a single touch and the night light can be adjusted to the high light medium light -- low light -- off



Ambient light adjustment Monochromatic gradient: Long press to turn off. Tap the \* button to switch to monochrome mode: red -

orange - yellow - green - cyan - blue - purple;Long press to turn off.

## 3.Settings

Time setting
Short press "5" to switch 12/24 hours, press 2 seconds to
enter set time mode, the sequence is: hour/ minute, the
set item blinks, press "A" or "V" to turn up/down to set
time.Long press for two seconds to quickly adjust, no
operation 5 seconds automatically exit



Long press "M" for 2 seconds to enter the alarm set mode. Press "M" to switch to hour, minute, press "A" or "V" to turn up or turn down to set time.





When the alarm goes off, press any snooze button(2 front foot pads) to enter the snooze state. In snooze mode, press any snooze button to cancel snooze. If no operation is performed for 10 minutes after the alarm rings, the alarm automatically stops

## 5.Wireless charging

which support OI wireless charging function in the middle of



Tips: Charging when indicator turns red full charged when it turns green charging abnormally

## Specification

Model:B18D Product name:Wireless charging beside lamp

Operating temperature:-20-50°C Rated voltage:12V/1.5A Color temperature range:3000±280K Wireless power:5W Rated power:18W Lamp size:230\*235\*95mm

### Cautions

- Please wipe it by soft cotton fabric for surface cleaning, and do not use any
- rease where it synt continuous in a surface tearing, and do not use any corrosive solvents.
   The light source is irreplaceable. Please stop use when actually wear outif a failover occurs, please do not disassemble by yourself to avoid any damage on the product. You can contact the manufacture for maintenance.

## Package List











Tips: The product, accessories, user interface and other illustrations in the manual are schematic diagrams for reference only. Due to the update and upgrade of the product, the actual product and the diagram may be slightly different, please refer to the actual product. The button battery is on the bottom of the product. The battery model is Cr2032

## Harmful matter content

Materia	hazardous substance					
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
Metal	Х	0	0	0	0	0
Plastic	0	0	0	0	0	0
Wire	0	0	0	0	0	0
				0	0	0



FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates in the instructions, may cause harmful interference to resident and the contraction of the contraction of

connected.

- Consult the dealer or an experienced radioTV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two
conditions (19ths device may not cause harmful interference, and (2) this device must accept
any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits as of finish for an uncomment. This equipment complies with FCC radiation exposure limits as of finish for an uncomment. The equipment should be installed and operated with minimum distance 20cm
between the radiation 4 your body.



Bedside lamp













