



Professional Photographic Equipment


# INSTRUCTIONS

## BALLPOD

### BP360-01



SIRUI Website

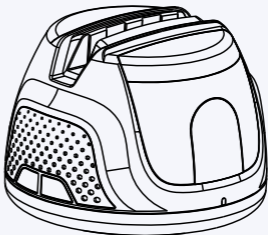

**Guangdong SIRUI Optical Co.,Ltd.**

Address: The Third Industrial District, Wuguishan Town, Zhongshan City, Guangdong, China

Tel: 0086-760-88897373 Fax: 0086-760-88207062 Service Hotline: 0086-400-8302299

E-mail: [info@sirui-photo.com](mailto:info@sirui-photo.com)

<http://www.sirui.com>

P.C: 528458

## BP360-01 Data Chart

Specifications	87x87x65mm/3.4x3.4x2.6 inches
Loading	260g/0.6lb
Net Weight of Ballpod Body	225g/0.5lb
Net Weight of Remote Control	37g/0.08lb
Panning Range	360°
Tilting Range	±15°
Operation/Storage Temperature	0°C-50°C
Bluetooth Version	4.0
Bluetooth Distance	Approx. 10m (32.8 ft)
Optical Flow Sensor Tracking Range	90°
Optical Flow Sensor Tracking Distance	Approx. 3m (9.85ft)
Battery of Ballpod	450mAh * 2 Polymer Lithium-ion Battery
Battery of Remote Control	450mAh Polymer Lithium-ion Battery
Charging	5V/1A, 2 hours
Charging Port	micro USB
Applicable Thickness of Mobile Phone	6.5mm-9.0mm
UI Language	Simple Chinese, English
System Request	Android 4.0 or above / IOS9.0 or above




### Main Functions:

1. 360° VR Image
2. Automatic Face Following
3. Feature Following
4. Auto Light Fill
5. Manual Light Fill
6. Manual Control
7. Beauty Function
8. Optical Follow
9. Time Lapse Shooting
10. Photo/Video Share
11. Wireless Remote Control

(Notes: Some functions above should be controlled via SIRUI App.)

## Know the BP360-01 Ballpod

BP360-01 Ballpod is the perfect Mobile Phone accessory. The Ballpod and Mobile Camera can be controlled via the SIRUI SMART App on your Mobile Phone or the supplied Remote Control. The Ballpod can help you create professional quality images with its various functions: Auto Face Following, Optical Flow, Feature Following, 360° VR Image, Photo and Video Share, etc.

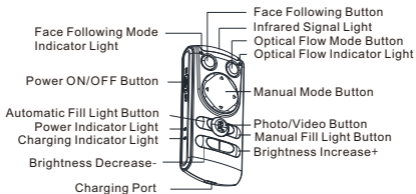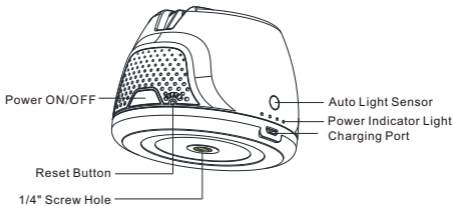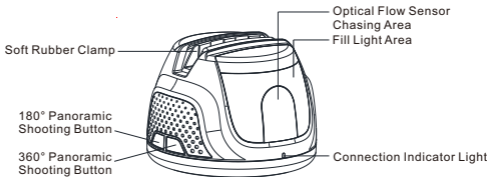

## Download and Install the SIRUI SMART APP

Scan the QR Code below,  
or click into the website <https://device.sirui.com/app/download.html>  
to download the SIRUI SMART APP.




System required for the SIRUI SMART APP:  
IOS 9.0 or above / Android 4.4 or above.

## Charging Instructions

### 1. Charging the BP360-01 Intelligent Ballpod


Prior to using the product for the first time, please charged the products battery 100%.

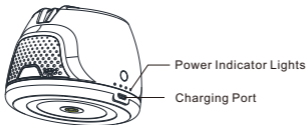

- Please use the included SIRUI standard charging cable to connect the USB port for charging for the Ballpod.
- Power Indicator Lights Status:
  - a. Power Insufficient: the red and yellow lights will flash. Please charge the battery.
  - b. Charging: the indicator lights will flash.
  - c. Fully Charged: the 4 lights will be on and stop flashing.
- Fully Charging Time: approx. 2 hours. (Charging Current: approx. 1A)
- Max Charging Current allowed: 1A.

### 2. Charging for Remote Control

- Please use the included SIRUI standard charging cable to connect to the USB port to charge for the Remote Control.
- Power Indicator Light Status:
  - a. Power Insufficient: the power indicator light will flash when the power is insufficient (less than 25%), please charge the remote.
  - b. Charging: the indicator light will be brightly lit.
  - c. Fully Charged: the indicator light will turn off.
- Fully Charging Time: approx. 1 hour. (Charging Current: approx. 1A)
- Max Charging Current allowed: 1A.

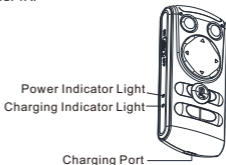


## Install the Mobile Phone

Install the Mobile Phone onto the Soft Rubber Clamp on top of the Ballpod BP360-01 when the Ballpod power is off.


Compatible Thickness of Mobile Phone: 6.5~9mm.

For best results attach the phone without a protective case.

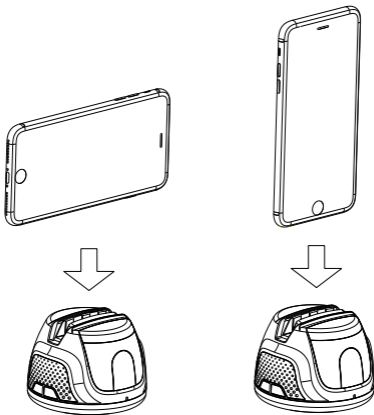



① Turn on the Bluetooth of the Mobile Phone

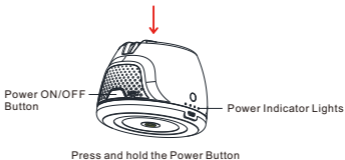

② Push the Power ON/OFF Button



- ↑ Power ON: Push up the Power Button to turn on the Remote Control
- ↓ Power OFF: Push down the Power Button to turn off the Remote Control

③ Operate the SIRUI SMART APP and connect the SIRUI Ballpod as instructed




Notes: When the devices are connected successfully, the APP will switch to the shooting interface automatically. If the devices can not be connected in a long time, please reset the devices and connect again.

## Operation of Remote Control

Face Following  
Mode Indicator Light


Face Following  
Button

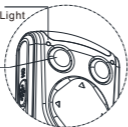

Remote control the system to turn on or off the Face Following Mode

Optical Flow  
Mode Button

Optical Flow  
Following  
Indicator Light

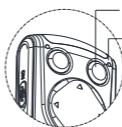

Remote Control the system to turn on or off the Optical Flow Following Mode



Manual Mode Button

Remote control the system to adjust the panning or tilting angle of the Mobile Phone.



Photo/Video Button

1. Press the button for Photo shooting.
2. Press and hold the button for Video shooting.
3. Press the button twice for time-lapse shooting.

Automatic Fill  
Light Button



Manual Fill Light  
Button



Brightness  
Decrease -



Brightness  
Increase +

Remote control the system to turn on/off or switch the Fill Light Mode

Increase or decrease the brightness of the Fill Light with Manual Fill Light Mode



1. Download the SIRUI App.
2. Install the mobile phone onto the ballpod with the ballpod power turned off. (Please refer to page 6 for details.)
3. Operation: Turn on your mobile phone and open the SIRUI App to connect the ballpod via bluetooth. (Please refer to page 7 for details.)
4. Operation of the Remote Control: Use the Remote Control to operate the Ballpod as detailed on page 8.
5. Recharging: Please use only the included SIRUI standard cable to recharge the ballpod BP360-01 and its Remote Control as details on page 5.
6. Operation of Tripod: Two adjustable angles for your convenience. (please refer to details on page 10.)

### SIRUI SMART Advanced Shooting Functions:



**Panaramic Shooting:** Click the icon in the APP to control the Ballpod and Mobile Camera to shoot images from different angles and combine them to create a 180 degree or 360 degree VR Panaramic images.




**Face Following Shooting:** Click the icon in the APP to control the Ballpod and Mobile Camera to follow the human face for shooting.



**Feature Following Shooting:** Select a desired shooting area via the SIRUI App on your mobile phone. The ballpod will follow the moving object on the mobile screen area.

## Operation of Tripod

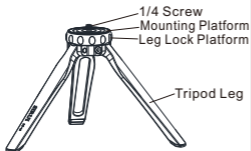


**Know the Tripod**




**Open the tripod legs as shown**



**Angle 1 of 2 for the tripod legs**



**Close the legs by folding down as shown.**



As shown above, turn the Leg Locking Platform clockwise to open the legs to the second low angle position. Once the legs are in the desired position turn counter clockwise to lock them in place.



The Table-top Tripod can be connected with camera, mobile phone holder, or ball head with a 1/4 screw. The tightness of the legs can be adjusted with the included allen key.

## DISCLAIMER AND WARNING

Thank you for buying SIRUI BP360-01 . The contents of this instruction manual covers your security, legal rights and responsibilities with regard to this product. Before using this product, please read the entire instruction manual and all warnings carefully to ensure that the product is properly set up according to the specific instructions. Not following the instructions and warnings in this instruction manual may cause injury to you or the people/ objects around you, or damage the BP360-01. This instruction manual and warning statement or any relevant documents of the BP360-01 are issued by Guangdong SIRUI Optical Co., Ltd. The details may be changed without notice. Please click into the SIRUI official website [www.sirui.com](http://www.sirui.com) for the up-to-date product information.

Upon using this product, it is understood and required that you have carefully read the instructions, disclaimer and warning, and understand and accepted all of the terms and contents of this statement. You are committed to taking full responsibility for the use of this product and the possible consequences. You will use this product only for legitimate purposes, and agree to the terms in this statement and the relevant regulations, policies and guidelines formulated by SIRUI.

SIRUI is not responsible for the loss, damage or any legal liability of direct or indirect use of the product. Users should follow all the safety instructions and guidelines including but not limited to this manual.

### GLOSSARY

**WARNING:** Failure to properly follow the procedures may result in property damage, accident or serious injury.

**CAUTION:** Failure to properly follow the procedures may result in property damage or serious injury.

**ATTENTION:** Failure to properly follow procedures may result in property damage or injury.

#### **WARNING**

The SIRUI BP360-01 is a complex product, users should have basic practical ability and safety knowledge, and use it carefully. Please read the user manual of SIRUI BP360-01 first, and then use it only after you are familiar with the functions of the product. Incorrect operation will lead to product damage, property damage, or personal injury. This product is not recommended for use by children.

## **SAFETY OPERATION GUIDELINES:**

1. The SIRUI BP360-01 is a high technology precision device, dropping or being struck by an external force may cause damage to the product.
2. When the power of the BP360-01 is on, make sure the clamp is not blocked by any external force.
3. Do not allow the SIRUI BP360-01 to contact liquid or use any liquid cleaning products on this unit. For best results use only a soft and dry cloth to clean the BP360-01.
4. Prevent dust or sand getting into the product during use of the BP360-01.

## BATTERY SAFETY GUIDELINES

The battery included with this product should be protected. The user should have basic practical ability and safety knowledge, and use it carefully. Please read the user manual prior to using the product for the first time. Incorrect use will lead to battery damage, property damage, or even personal injury.

Do not allow children to touch the battery. Do not use the battery in any other product other than noted by SIRUI.

This instruction manual contains safety guidelines, proper operation, and maintenance details. In order to ensure that you can safely use the battery and device, read the user manual completely and all instructions and warnings in the battery safety guidelines prior to using of the product.

### **WARNING**

In order to avoid fire, property loss or personal injury, follow the Safety Guidelines below to use, charge and store the battery.

#### **Battery Use**

1. Keep the battery dry at all times. Never submerge the battery in water or other liquids. Do not leave the battery out in the rain or near a source of moisture. If water gets in the battery, chemical decomposition may occur, and potentially resulting in the battery catching fire, or even explosion.
2. If the battery falls into water, place it in a safe and open area immediately. Keep a safe distance from the battery until it is completely dry. DO NOT use the battery again, and dispose the battery properly as recommended by local laws and regulations.
3. If the battery catches fire, use water, water spray, sand, fire blanket, dry powder, carbon dioxide fire extinguisher to extinguish the fire. Explosion may occur. NEVER dispose of the battery in fire.
4. Use only the SIRUI supplied battery. Using a battery not specified by SIRUI voids any warranty on the product and may cause damage to the unit or personal injury and property damage. If a replacement battery is needed, please purchase from a SIRUI official website or authorized dealer. SIRUI will not be responsible for any battery accident or damage to the device caused by using non SIRUI battery.
5. Never use or charge swollen, leaky or damaged battery. If the battery has an abnormal smell, is heated at or above (71°C/159.8°F), is distorted in shape, discolored or shows any other abnormality, discontinue use immediately. If your battery is exhibiting any abnormal characteristics, please connect SIRUI or a SIRUI authorized dealer for further assistance.
6. The battery should be used in temperature between -10°C/14°F and 45°C/113°F. Use the battery in an environment above 45°C/113°F may lead to a fire or explosion. Use the battery below -10°C/14°F may lead to seriously damage the battery.
7. Do not use the battery in strong electrostatic or electromagnetic environments. Otherwise, the battery protection board may malfunction.
8. Never disassemble or pierce the battery in any way, the battery may leak, catch fire or explode.

9. Do not strike, crush or drop battery. Do not place heavy object on the battery or charger.
10. Electrolytes in the battery are highly corrosive. If this comes in contact with your skin or eyes, seek a doctor and treatment immediately.
11. Do not use the battery if it is damaged from a fall or other accidents.
12. Do not heat the battery. Do not put the battery in a microwave oven or in a pressurized container.
13. Do not place the battery cell on any conductive surface.
14. Do not manually short-circuit the battery.
15. Clean the battery terminal with a clean and dry cloth. Never use any type of liquid to clean.

### **Battery Charging**

1. Always use the included SIRUI standard cable and charger for charging. SIRUI will not be responsible for any damage caused by charging with non SIRUI officially supplied cable or charger.
2. Do not charge the battery near flammable materials or on flammable surfaces such as carpet or wood. Do not leave the battery unattended during charging.
3. Do not charge the battery immediately after use, as the battery temperature may be too high. It is highly recommended to allow the battery to cool down to room temperature prior to recharging. Charging the battery in a temperature higher than 45°C/113°F or lower than 0°C/32°F may lead to leakage, overheating, or battery damage.
4. Examine the charger regularly for damage to the shell, cord, plug or other parts before charging. Do not clean the charger with any liquids and especially not alcohol or other flammable solvents. Disconnect the charger when not in use.

### **Battery Storage**

1. Keep the battery out of the reach of children and pets.
2. Do not leave the battery near heat sources. Do not leave the battery inside of a vehicle on hot days. The ideal storage temperature is 22°C-28°C / 71.6°F- 82.4°F.
3. Always keep the battery in a dry place.
4. Do not store the battery fully discharged for long period, this may lead to permanent damage.

### **Battery Maintenance**

1. Never use the battery when the temperature is too high or too low. (-10°C/14°F and 45°C/113°F.)
2. Never store the battery in an environment with temperature higher than 60°C.

### **Transportation**

1. Before carrying the battery onto the airplane, it must be discharged lower than 5%. Store the battery in a ventilated and dry location. Please check your airline for specific rules regarding batteries and transportation.
2. Do not store or transport the battery with any metal objects such as glasses, watch, jewelry. The batteries contact points should always be covered or stored in a separate bag when being transported to avoid contact with other metal.

3. Do not transport a broken battery. Discharge the battery to be with power lower than 50% for transportation.

### **Battery Disposal**

Please follow local laws and regulations for the battery recycle and disposal in local to dispose the battery. Batteries should never be disposed with normal trash or incinerated for any reason.

## **ATTENTION**

### **Battery Use**

Make sure the battery is fully charged before every use.

### **Battery Charging**

The battery is designed to stop charging automatically when it is full. Please disconnect the battery and charger when it is fully charged.

### **Battery Storage**

1. Discharge the battery to 40%-65% if it will not be used for 10 days or more. This can help to extend the battery life.
2. The battery will go into low power consumption mode when its voltage is too low. Recharge the battery to bring it out of the low power consumption mode.
3. Battery should be removed from the product for storage in the dedicated battery case.

### **Battery Maintenance**

1. Never over charge or over discharge the battery, otherwise it may cause damage to the battery cell.
2. Battery life may be reduced if not used for a long time.
3. Charge and discharge the battery completely once every three months to keep it in good condition.

### **Battery Disposal**

Please follow all local laws and regulations when disposing of batteries. Please be sure to completely discharge the battery before disposal. Please contact local authorities or a recycling center for more details.

## WARRANTY CARD / INFORMATION

Dear SIRUI Customer:

Thank you for your purchase of SIRUI Professional Products! SIRUI warrants that your purchase is free from defects in materials and workmanship under normal use during the Limited Warranty Period. The Warranty begins on the original date of purchase on your sales receipt and is not transferrable. If service is required, a copy of the sales receipt must be included with an explanation of the problem.

Product	Warranty Length
Ballpod	1 year

Model: \_\_\_\_\_ Date: \_\_\_\_\_

Store: \_\_\_\_\_ Serial Number: \_\_\_\_\_

**Warranty coverage can differ from region to region.**

**Please see the contact information below for product registration, information and service for the region the product was purchased in.** \_\_\_\_\_

SIRUI 1 Year Limited Warranty of the product. This warranty shall be limited to repair, adjustment and/or replacement at SIRUI or its authorized distributors option, of defective parts, free of charge (except the cost of transportation to the distributor/service center). Responsibility is limited to the actual cost of the item. Call or Email with questions and service before sending any product to the center in your region. Below is a listing of contact information for Product Registration, Service Inquiries and Questions. SIRUI will not be responsible for expenses or inconveniences, or consequential damages to equipment, or by breach of any expressed or implied warranties.

### Limitations:

Warranty is not transferable.

This warranty covers all defects encountered in normal use of the equipment and does not apply in the following cases:

1. If the equipment has been serviced by other than an authorized SIRUI Service Center
2. Damage to the equipment is due to modification (including but not limited to, the removal of ballhead clamps), overloading, mishandling, abuse, accident, sand\*, corrosives, water damage\* or not following operating instructions.
3. No valid proof of purchase is provided.
4. Damage caused by acts of nature (including, but not limited to fires, floods or earthquakes).

\* Warranty coverage can differ from region to region. Please see contact information below for product registration, information and service for the region the product was purchased in.



## Warranty Address and Contact Information:

(Please contact the seller or the local distributor where the product was purchased for warranty issues or questions and before any product is sent.)

### 1. Guangdong SIRUI Optical Co., Ltd.

The Third Industrial District, WuguishanTown, ZhongshanCity, Guangdong, China

Tel:0086-760-88897373 Fax:0086-760-88207062

Service Hotline: 0086-400 830 2299

Http://www.sirui.com E-mail: info@sirui-photo.com

### 2. SIRUI USA, LLC

29 Commerce Court Verona, NJ 07044

www.sirui.com

Service: Toll Free 866-373-0892 E-mail: info@sirui.com

FOR PRODUCTS PURCHASED IN THE USA PLEASE SEE:

For full details on USA Warranty Terms and Limitations: [www.sirui.com/warranty.html](http://www.sirui.com/warranty.html)

To register products: [www.sirui.com/product-registration.html](http://www.sirui.com/product-registration.html)

### 3. Focus Nordic AB

For technical support, service or repairs, please contact:

Sweden: info@focusnordic.se [www.focusnordic.se](http://www.focusnordic.se)

Norway: service@focusnordic.no [www.focusnordic.no](http://www.focusnordic.no)

Denmark: info@focusnordic.dk [www.focusnordic.dk](http://www.focusnordic.dk)

Finland: info@focusnordic.fi [www.focusnordic.fi](http://www.focusnordic.fi)

Iceland: info@focusnordic.is [www.focusnordic.is](http://www.focusnordic.is)

Baltics: info@focusnordic.lv [www.focusnordic.lv](http://www.focusnordic.lv)

### 4. SIRUI Europe GmbH (European Service Center)

Add: Fredericiastr.2. 14059 Berlin. Germany

Phone: +49 30 616713130 E-mail: info@sirui.eu

(Please contact the seller or your local distributor for warranty issues.)

### 5. TSE imaging BV

Add: Televisieweg 60 1322 AM Almere Nederland

Telefoon: +31 (0)36 8450348 E-mail: service@tse-imaging.nl

(Exclusive Distributor for Netherlands, Belgium, Luxemburg)

[www.sirui-photo.nl](http://www.sirui-photo.nl)

### 6. 한국총판 : 대광엔터프라이즈

Add: 기술지원 및 서비스, 수리 요청 : 대광엔터프라이즈 | 서울특별시 중구 남대문로 10 1층

Phone: 02-752-3304 Fax: 02-774-9903

[www.sirui.kr](http://www.sirui.kr) E-mail: loweprokr@gmail.com

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.