


Multiple-Function Mobile Phone Sterilizer Manual

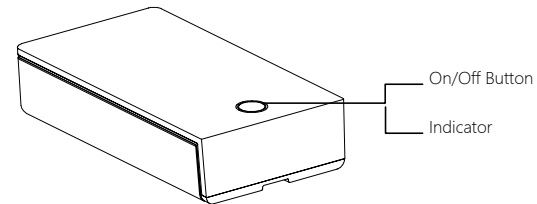

Function

The product is a multiple-function sterilizer ,provided with the funtion of sterilization, aromatherapy and charging mobile phone, etc. Adoption of Ultraviolet (UV) ray serilization kills bacteria on articles. Through inspection of authority, irradiation for six minutes can kill escherichia col, tritirachium album,staphylococcus aureus and other common bacteria. The sterilization efficiency reaches more than 99%.

There are two Ultraviolet (UV) lamps on the two side of the chamber, therefore, the UV ray can cover all of the surface of the mobile phone.

Ultraviolet ray is healthy and powerful sterilization way and is widely used in medical treatment, foods, health care, electronics, chemmical engineering and other fields.


Operation Method

Please provide DC 5V/2A power when use the device

Sterilization: Press the On/Off button and the indicator glitter with red light and the buzzer gives out the sound“Click” to start Ultraviolet (UV) ray sterilization.When the sterilization reach 30%, the Indicator glitter blue light and the buzzer gives out the sound“Click”. When the sterilizaiton reach 60%, Indicator glitter with green light and the buzzer gives out the sound“Click”.The indicator turn off and the buzzer gives the sound“Click” three times and the sterilization ends .The total time is 6 minutes. Press the On/Off button can stop the sterilization anytime .

Aromatherapy: Put 3-6 drops aromatherapy oil into the Aromatherapy Oil Chamber

Charging: Use the USB cable to charging the mobile phone with the USB Charger Port

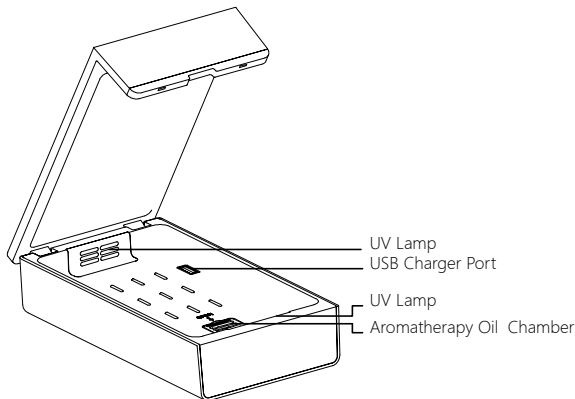

Attention

- 1.Sterilizaiton, aromatherapy and charging function can be used at the same time
- 2.if the quality fo the external USB supply cord of the sterilizer is low, the sterilizer may not work normally.
- 3.You may select the external power adaptor. The input current of the adaptor is not less than 1A, otherwise , the sterilizer may not work normally
- 4.The amount of the aromatherapy oil added to Aromatherapy Oil Chamber should not exceed 6 drops.
- 5.During the sterilization, lift the lid of the device ,the device will stop operation to avoid the Ultraviolet (UV) ray lead to any injury.

Specification

Rated Input : DC 5V/2A
Rated Charing Current: 1A
Ultraviolet Wave Length:253.7 nm

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user’ s authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.