
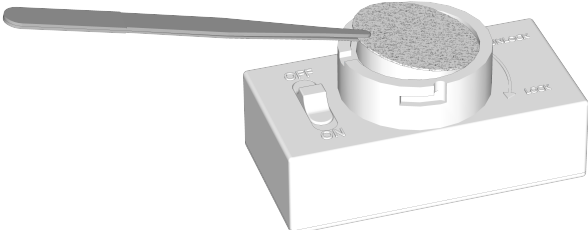
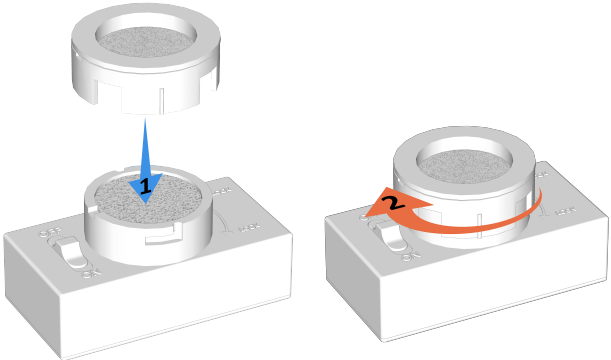
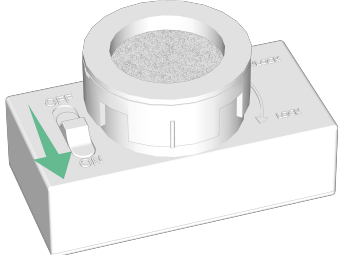


<p>3</p>	<p>Open the package [6] and take the sample with the clamp [4]</p>	
<p>4</p>	<p>With the clamp [4], take a sampling sample [6] and insert it into the sampling device [2], positioning the pin in the slot provided for this purpose.</p>	
<p>5</p>	<p>Close the cover of the sampling device [2] by turning it clockwise until it clips</p>	
<p>6</p>	<p>Place the device where you want to make the sampling and switch the "ON / OFF" button to ON of the sampling device [2] and <b>Remember to note the time for choosing the duration of exposure</b></p>	
<p>7</p>	<p>Toggle the "ON / OFF" button to OFF when the desired exposure time is reached. <b>Remember to note the end time of the exposure</b></p>	