

# User Manual

FCC ID: 2ASIH-OSSIISOUND-C

Model Name: CONNECTOR

# OSSI SOUND

## CONNECTOR

Truly Wireless-Bone Conduction-Eyewear

### Getting Started


### Specifications

|                         |                                   |
|-------------------------|-----------------------------------|
| Model Name              | Wireless Bone Conduction Eyewear  |
| Part Number             | CONNECTOR G1                      |
| Wireless Version        | BT5.0 + EDR                       |
| Wireless Distance       | Up to 15 meters                   |
| Speaker Type            | Bone conduction transducer        |
| Frequency Response      | 20Hz - 20KHz                      |
| MIC on Right Earsset    | -42dB±3dB                         |
| Battery                 | 3.7v 110-120mAh x 2pcs            |
| Battery Safety Standard | IEC62113:2012                     |
| Talk & Play Time        | >5hrs, @ default volume level 60% |
| Charge Time             | 1.5 ~ 2 hrs                       |
| Warranty                | 1 yr                              |


## CONNECTOR

Truly Wireless-Bone Conduction-Eyewear


### Package Contents

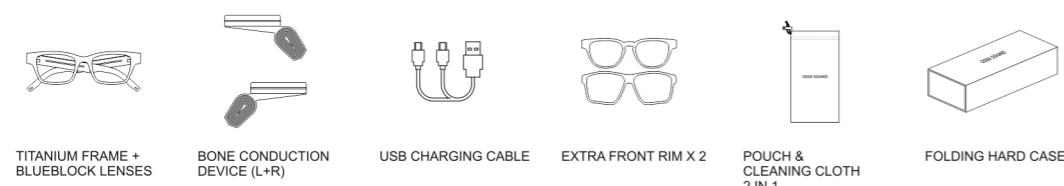


### Assembly

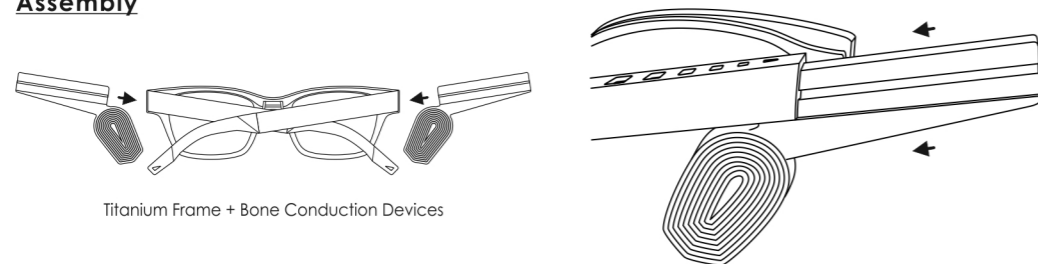

### Simple customization of your glasses.

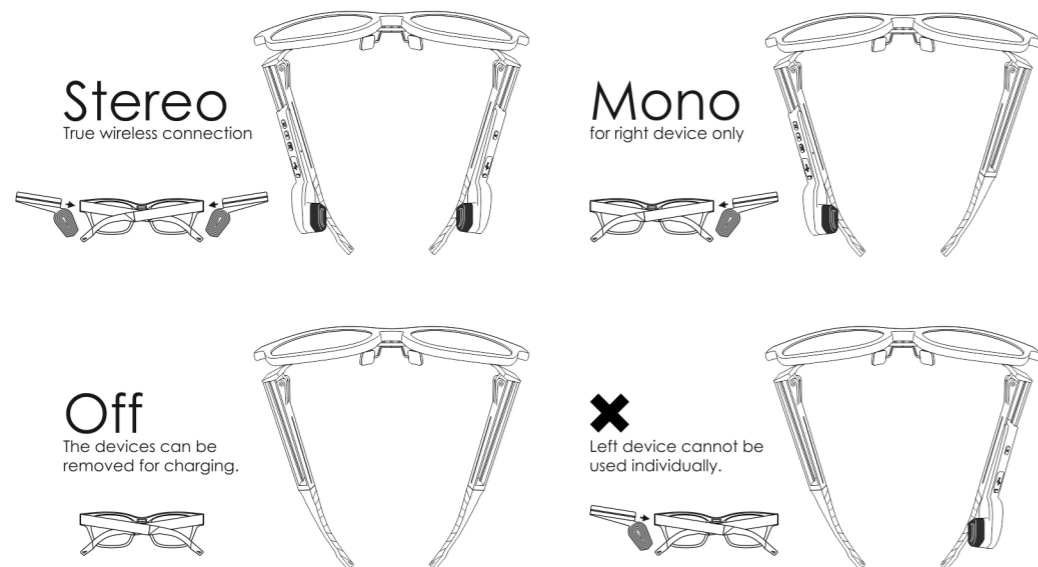


### Interchangeable Front Rim

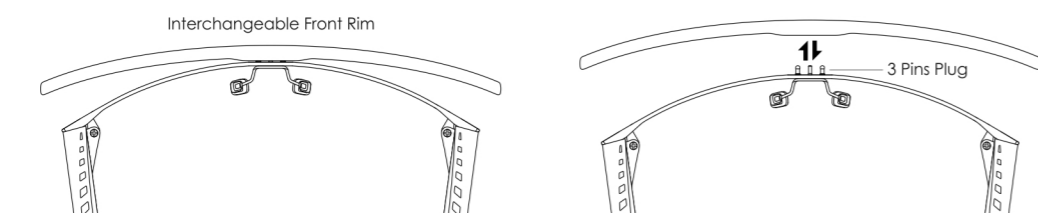

### "Boom Box" for amplifying the sound!

How to turn the foldable hard case into a Boombox:  
1) Slide the bone conduction devices forward along the temple.  
2) Place the storage box on a flat surface (smallest side panel on top).  
3) Place the OSSI SOUND on the top of the box.  
4) Make sure the bone conductors are located at the center of the side panels.

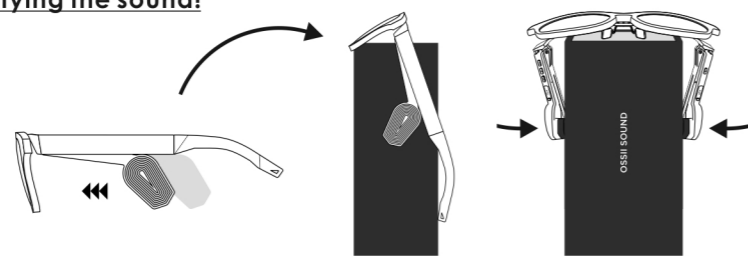

### 1 MULTI-FUNCTION BUTTON (RIGHT DEVICE)

| Function                 | Action                             |
|--------------------------|------------------------------------|
| Power on                 | Press & hold the button for 2 sec. |
| Power off                | Press & hold the button for 2 sec. |
| Answer/end call          | One click                          |
| Dismiss the call         | Press & hold the button for 2 sec. |
| Play/Pause               | One click                          |
| Play/Pause               | One click                          |
| Voice Searches & Actions | Double Click                       |

### 2A & 2B VOLUME & NEXT/PREV BUTTONS


| Function              | Action                                |
|-----------------------|---------------------------------------|
| Volume up             | One click the button 2A               |
| Volume down           | One click the button 2B               |
| Skip to next song     | Press & hold the button 2A for 2 sec. |
| Back to previous song | Press & hold the button 2B for 2 sec. |

### 3 MULTI-FUNCTION BUTTON (LEFT DEVICE)

| Function   | Action                             |
|------------|------------------------------------|
| Power on   | Press & hold the button for 2 sec. |
| Power off  | Press & hold the button for 2 sec. |
| Play/Pause | One click                          |


### 4A & 4B LED INDICATOR

| Signal                      | Status                                |
|-----------------------------|---------------------------------------|
| Flash red & blue (4A)       | Searching for the wireless connection |
| Flash red & blue (4B)       | Searching for the right device        |
| Solid red light             | Charging                              |
| Solid blue light            | Charging complete                     |
| Flash red light per 10 sec. | Low battery                           |

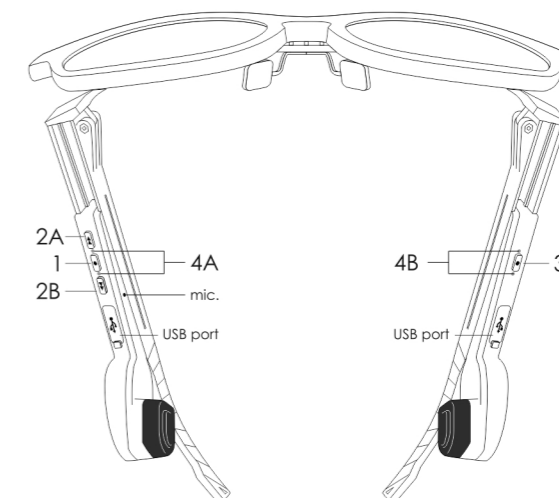

### Adjustment for the hearing spot


For a smaller head, slide the bone conduction devices forward along the temples.

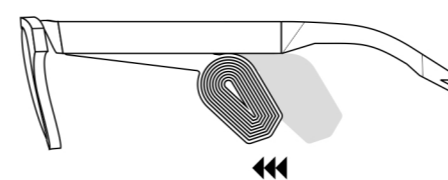

For smaller head



For a bigger head, slide the bone conduction devices backward along the temples.

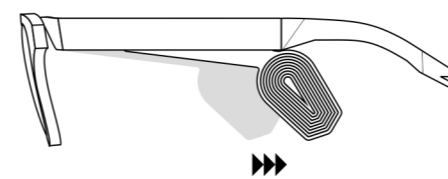


For bigger head



### Sync connection of the L&R devices\*

| Left Device                             | Right Device                             |
|---|--|
| 1) Power off.                           | 4) Power on.                             |
| 2) Press & hold the button 3 for 5 sec. | 5) Disconnect all the wireless network.  |
| 3) Flash red & blue led light (4B)      | 6) Press & hold the button 2A for 5 sec. |
|   | 7) Flash red & blue led light (4A)       |
|   | 8) The devices will be auto connect.     |
|   | 9) Flash red & blue led light (4A)       |
|   | 10) Connect to your own digital device   |

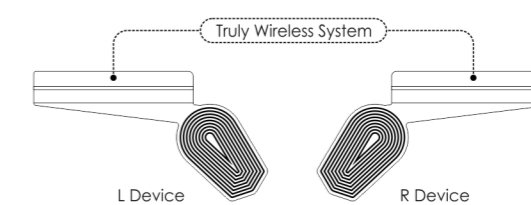

\*OSSI SOUND has completed device connection stage in production.

ossiisound.com

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.