

智能手环使用说明书



请在使用之前查阅说明书

版本 V8.0

目录

CONTENTS

外观介绍 ----- 1

充电和开机 ----- 2

APP 下载 ----- 3

绑定 ----- 4

功能介绍 ----- 5

常见问题 ----- 6


维护与保养 ----- 7

保修卡 ----- 8

01



高清屏

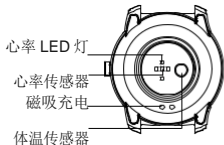


按钮
长按开/关机
短按返回

◎ 手环采用健康材质，您可放心佩戴。

◎ 因个体差异原因，如果佩戴时感到皮肤不适，请停止佩戴并咨询医生。

02

充电和开机

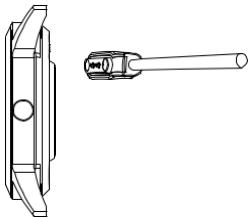

产品在使用前请先充电超过两小时。将充电口对准、贴合充电底座的金属触点，直到手环屏幕出现充电电量指示。

◎ 请使用包装内自带专用充电线充电，充电前请擦干充电口。

◎ 注意请勿使用输出超过 **5V 1A** 的电源适配器充电，否则可能会烧坏电路，导致不充电。



① 用手机扫描右侧的 QR 码，或前往 APP Store 下载并安装 GloryFit，请授予此软件相应的权限，以确保蓝牙连接正常。



04

绑定

- ①打开 APP，在 APP 添加您要连接的手环设备。绑定时请确认 APP 和手环上显示的蓝牙地址一致。（可在手环设置内查看手环蓝牙地址）
- ②配对时，确保手机蓝牙处于开启状态，手环需靠近手机进行连接。配对成功后，可在手环下拉通知栏查看连接状态。

05

功能介绍

手环支持全屏触摸、上滑、下滑、左滑、右滑、长按等操作，滑动屏幕切换查看各项功能；也可点击、长按屏幕进行相关操作。

手环支持运动监测、心率监测、消息提醒，来电提醒，睡眠监测等功能。

06

常见问题

① APP 搜索不到设备

答：请先尝试按压设备按键，如果屏幕未点亮，可将设备接上充电器进行充电，以确保有电。

②设备反复连接和断开

答：设备和手机之间是否有遮挡物。佩戴的金属首饰会干扰蓝牙的连接稳定性。

③ 设备无法充电

答：充电处是否有脏污锈蚀等情况，USB 接口和充电头的充分接触才能充电成功。



- ① 请勿佩戴手环洗澡、游泳或进行其他水上活动。
- ② 不要把手环长时间暴露在水分较高、温度较高或较低的地方。
- ③ 可防如起居室、办公室、实验室、轻工业工作室、仓储室等的灰尘条件，不适合特殊的扬尘环境。
- ④ 手环出现死机重启现象，请注意检查手机内存信息清除再试，或退出 APP 重新打开。

本公司保留不作任何通知的情况下，对本说明书做内容修改的权利，恕不另行通知。
部分功能在特定的软件版本中有不同，为正常情况。



客户资料


保修卡			
型号		销售单位	(签章)
客户姓名		联系电话	
销售电话		购买日期	
客户地址			
销售地址			
摘要			
日期	故障现象	检修	备注

Smart Watch User Instructions



Please check the manual before using
Version 8.0

CONTENTS




Appearance introduction	9
Charging and start up	10
APP download	11
Binding	12
Functions introduction	13
Common problem	14
Maintenance	15

01

Appearance
introduction

HD Screen

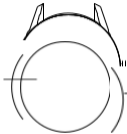


Heart rate LED light

Heart rate sensor

Magnetic charging

Body temp sensor

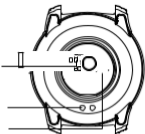

Button

Long press to start up
/shut down,
Short press return




©The bracelet is made of healthy materials, please be assured to use.

©Due to individual differences, if skin feels uncomfortable while wearing, please stop wearing and consult the doctor

02

Charging
and start up

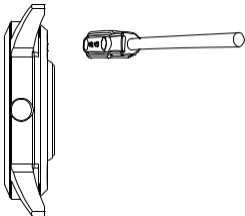

Please charge the product for more than two hours before use. Align the charging port with the metal contacts on the charging base until the charging indicator appears on the bracelet screen.

- Please use the special charging cable that comes with the package, Keep charging port clear and dry.
- Note: Do not use a power adapter with an output of more than 5V 1A to charge, otherwise the circuit may be burned, resulting in no charging.

① Scan the QR code on the right with your mobile phone Or Go to APP Store to download and install GloryFit,Please give this software the corresponding permissions,to ensure that the Bluetooth connection is normal.





04

Binding

- ① Open the APP and add the bracelet device you want to connect in the APP. When binding, please confirm that the Bluetooth addresses displayed on the APP and the bracelet are the same. (You can check the Bluetooth address of the bracelet in the bracelet settings)
- ② When pairing, make sure that the Bluetooth of the mobile phone is turned on, and the bracelet needs to be close to the mobile phone to connect. After the pairing is successful, you can check the connection status in the pull-down notification bar of the bracelet.



The bracelet supports full-screen touch, slide up, slide down, slide left, slide right, long press and other operations, slide the screen to switch to view various functions; you can also click and long press the screen for related operations.

The bracelet supports functions such as exercise monitoring, heart rate monitoring, and message reminder etc.



①1.App can't search the device

Answer: Please try to press the device button first, if the screen is not lit, you can connect the device to the charger to charge, to ensure that there is power.

②The device is repeatedly connected and disconnected

Answer: Mobile phones of different brands will automatically clean up the mobile phone background program. You need to add the APP to the mobile phone white list or self-start management.

③The device cannot be charged

Answer: Is there any dirt, corrosion, etc. in the charging place?

Only the full contact between the USB interface and the charging head can charge successfully.



- ① Do not wear bracelets for bathing, swimming or other water activities
- ② Do not expose the bracelet to a place with high moisture, high temperature or low temperature for long time
- ③ Can prevent such as living room, office, laboratory, light industry studio, storage room dust conditions, not suitable for special dust environment.
- ④ The bracelet has crashed and restarted. Please check the phone's memory information to clear and try again, or quit the APP and open it again.

The company reserves the right to modify the contents of this manual without any notice. Some functions are different in specific software versions, which is normal.



Warranty card			
Client information			
Model		Vendor	(stamp)
Client name		Phone	
Supplier Tel		Purchase date	
Client address			
Supplier address			
Description			
Date	Problems	Diagnosis	Note

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ -Reorient or relocate the receiving antenna.
- ▶ -Increase the separation between the equipment and receiver.
- ▶ -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.